A Word to Mazda Owners

Thank you for choosing a Mazda product. We at Mazda design and build vehicles with complete customer satisfaction in mind.

To help ensure enjoyable and trouble-free operation of your Mazda vehicle, read this manual carefully and follow its recommendations.

Regular servicing of your vehicle by an expert technician helps maintain both its roadworthiness and its resale value. A world-wide network of Authorised Mazda Repairer can help you with their professional servicing expertise.

Their specially trained personnel are best qualified to service your Mazda vehicle properly and precisely to original specifications. Also, they are supported by a wide range of highly specialized tools and equipment specially developed for servicing Mazda vehicles. When maintenance or service is necessary, consult an expert repairer (we recommend an Authorised Mazda Repairer).

We assure you that all of us at Mazda have an ongoing interest in your motoring pleasure and in your full satisfaction with your Mazda product.

Mazda Motor Corporation HIROSHIMA, JAPAN

Important Notes About This Manual

Keep this manual in the glove compartment as a handy reference for the safe and enjoyable use of your Mazda vehicle. Should you resell the vehicle, leave this manual with it for the next owner.

All specifications and descriptions are accurate at the time of printing. Because improvement is a constant goal at Mazda, we reserve the right to make changes in specifications at any time without notice and without obligation.

Please be aware that this manual applies to all models, equipment and options. As a result, you may find some explanations for equipment not installed on your vehicle.

©2023 Mazda Motor Corporation March 2023(Print1)

How to Use This Manual

We want to help you get the most driving pleasure from your vehicle. Your owner's manual, when read from beginning to end, can do that in many ways.

Illustrations complement the words of the manual to best explain how to enjoy your Mazda. By reading your manual, you can find out about the features, important safety information, and driving under various road conditions.

You'll find several WARNINGs, CAUTIONs, and NOTEs in the manual.

MARNING

A WARNING indicates a situation in which serious injury or death could result if the warning is ignored.



A CAUTION indicates a situation in which bodily injury or damage to your vehicle, or both, could result if the caution is ignored.

NOTE

A NOTE provides information and sometimes suggests how to make better use of your vehicle.

The symbol below in this manual means "Do not do this" or "Do not let this happen".



The following symbol indicates the operation, such as a push or a turn.



The following symbol indicates the order of the operation, such as a push or a turn.





The following symbol indicates the location of parts.



The following symbol indicates a change of status.



The following symbol, located on some parts of the vehicle, indicates that this manual contains information related to the part.

Please refer to the manual for a detailed explanation.



References to left hand and right hand are made as if facing in the same direction the vehicle faces. Although this manual explains a left-hand-drive model, it also applies to right-hand-drive models.

Index: A good place to start is the Index, an alphabetical listing of all information in your manual.

MEMO

Table of Contents


Name of Each Part	1
Read This First	2
Equipment to Protect Occupants/Pedestrians	3
Opening/closing	4
Driving	5
Equipment to Make Cabin More Comfortable	6
Other Equipment	7
What to Do in Case of Emergency	8
Inspection and Servicing/Cleaning	9
Specifications/Customer Information	10
Index	1.1

Name of Each Part

Steering Wheel Area
Overview 1-2
Steering Wheel Area Overview
(Left-Hand Drive Model) 1-2
Steering Wheel Area Overview
(Right-Hand Drive Model)
1-3
Driver's Seat Area Overview 1-4
Driver's Seat Area Overview (Left-
Hand Drive Model)1-4
Driver's Seat Area Overview
(Right-Hand Drive Model)
1-5
Instrument Panel Area
Overview1-6
Instrument Panel Area Overview
(Left-Hand Drive Model) 1-6
Instrument Panel Area Overview
(Right-Hand Drive Model)
1-7


Front Cabin Overview1-8
Front Cabin Overview (Left-Hand
Drive Model)1-8
Front Cabin Overview (Right-
Hand Drive Model)1-9
Rear Cabin Overview1-10
Rear Cabin Overview (Left-Hand
Drive Model)1-10
Rear Cabin Overview (Right-
Hand Drive Model)1-11
Luggage Compartment
Overview1-12
Luggage Compartment
Overview 1-12
Front Exterior Overview 1-13
Front Exterior Overview 1-13
Rear Exterior Overview 1-14

Steering Wheel Area Overview (Left-Hand Drive Model)

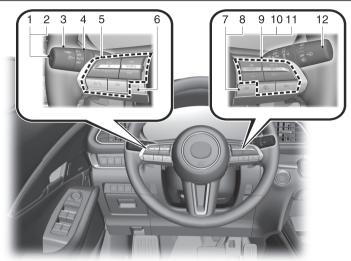


① High Beam Control System (HBC) switch	page 5-131
② Adaptive LED Headlights (ALH) switch	page 5-134
③ Lighting control	page 5-71
④ Turn and lane-change signals	page 5-75
Audio remote control switches	page 7-8
6 INFO switch	page 5-29
② Adjustable Speed Limiter (ASL) LIM switch	page 5-185
Intelligent Speed Assistance (ISA) LIM switch	page 5-188
Mazda Radar Cruise Control (MRCC) switches	page 5-160
(10) Cruising & Traffic Support (CTS) switches	page 5-170
① Cruise control switches	page 5-214
Wiper and washer lever	page 5-77

Steering Wheel Area Overview (Right-Hand Drive Model)

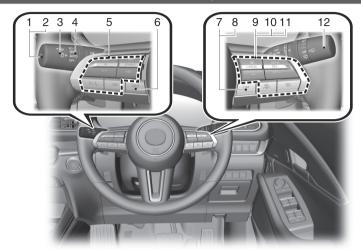


① High Beam Control System (HBC) switch	page 5-131
② Adaptive LED Headlights (ALH) switch	page 5-134
③ Lighting control	page 5-71
④ Turn and lane-change signals	page 5-75
Audio remote control switches	page 7-8
⑥ INFO switch	page 5-29
② Adjustable Speed Limiter (ASL) LIM switch	page 5-185
Intelligent Speed Assistance (ISA) LIM switch	page 5-188
Mazda Radar Cruise Control (MRCC) switches	page 5-160
① Cruising & Traffic Support (CTS) switches	page 5-170
① Cruise control switches	page 5-214
12) Wiper and washer lever	page 5-77

Driver's Seat Area Overview (Left-Hand Drive Model)

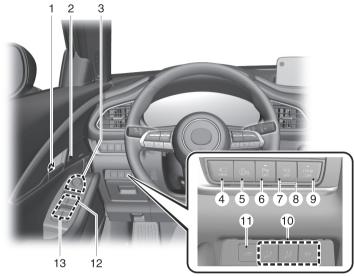


① Door-lock knob	page 4-12
② Door-lock switch	
③ Outside mirror switches	
4 360° View Monitor switch	
⑤ i-ACTIVSENSE mute switch	
6 Parking sensor OFF switch	page 5-223
⑦ TCS OFF switch	
Off-Road Traction Assist switch	
9 i-stop OFF switch	
Position memory buttons	
1 Power liftgate switch	
Power window switches	
Power window lock switch	

Driver's Seat Area Overview (Right-Hand Drive Model)

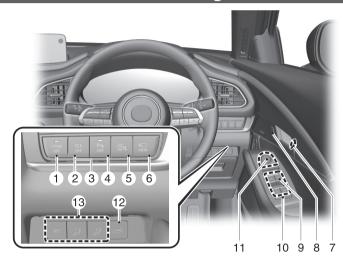


① i-stop OFF switch	page 5-22
② TCS OFF switch	page 5-89
③ Off-Road Traction Assist switch	page 5-93
4 Parking sensor OFF switch	page 5-223
5 360° View Monitor switch	page 5-202
6 i-ACTIVSENSE mute switch	
⑦ Door-lock knob	
8 Door-lock switch	page 4-12
Power window switches	
10 Power window lock switch	
① Outside mirror switches	
Power liftgate switch	
Position memory buttons	

Instrument Panel Area Overview (Left-Hand Drive Model)

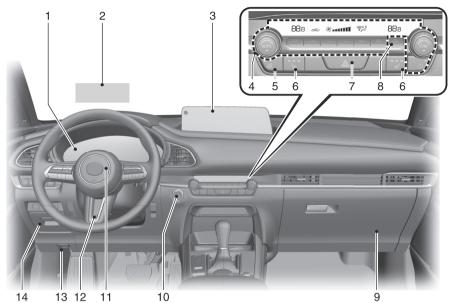


① Instrument cluster	page 5-26
② Active driving display	
③ Mazda Connect	page 7-8
4 Air-conditioning system	
5 Heated steering wheel switch	
6 Seat warmer switches	
② Hazard warning flasher switch	
8 Rear window defogger switch	page 5-82
Glove compartment	
® Push button start	
① Horn	
12 Lock release lever	
③ Bonnet release handle	
(4) Coin Box	

Instrument Panel Area Overview (Right-Hand Drive Model)

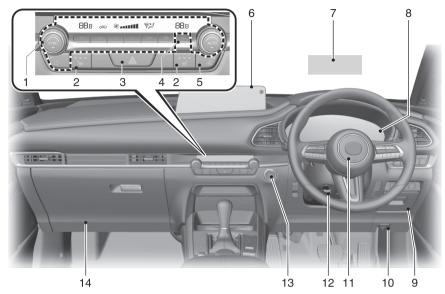


① Air-conditioning system	page 6-6
② Seat warmer switches	
③ Hazard warning flasher switch	page 5-85
4 Rear window defogger switch	page 5-82
⑤ Heated steering wheel switch	page 6-24
Mazda Connect	page 7-8
② Active driving display	page 5-39
8 Instrument cluster	page 5-26
9 Coin Box	page 7-47
10 Bonnet release handle	page 4-24
① Horn	page 5-86
② Lock release lever	page 3-36
(3) Push button start	page 5-15
(4) Glove compartment	page 7-46

Front Cabin Overview (Left-Hand Drive Model)

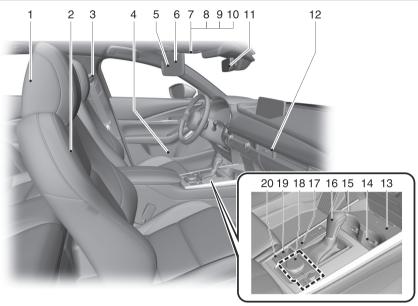


1	Head restraint	page	3-34
	Front seat		
	Seat belt		
	Bottle holder		
	Vanity mirror		
	Sunvisor		
	Overhead light (front)		
	Map lights		
	Overhead console		
	Sunroof switch		
11)	Rearview mirror	page	5-12
	Vent		
	Wireless Charger (Qi)		
14)	Cup holder	page	7-44
(15)	Shift lever	page	5-42
16)	Selector lever	page	5-46
	Drive selection switch		
18)	Commander switch	.page	e 7-8
	Electric Parking Brake (EPB) switch		
20	AUTOHOLD switch	page	5-66

Front Cabin Overview (Right-Hand Drive Model)

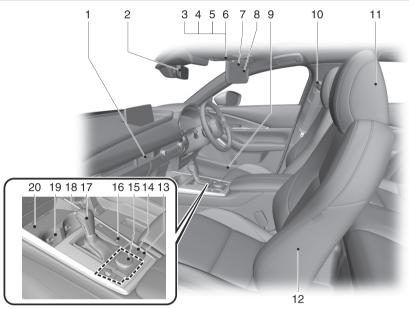


① Vent	page 6-2
2 Rearview mirror	
③ Overhead light (front)	
4 Map lights	
5 Overhead console	page 7-49
6 Sunroof switch	
7 Sunvisor	
8 Vanity mirror	
9 Bottle holder	
10 Seat belt	
① Head restraint	
② Front seat	
③ AUTOHOLD switch	page 5-66
(4) Electric Parking Brake (EPB) switch	
(5) Commander switch	page 7-8
16 Drive selection switch	
① Shift lever	
® Selector lever	
© Cup holder	
⁽²⁾ Wireless Charger (Qi)	

Rear Cabin Overview (Left-Hand Drive Model)

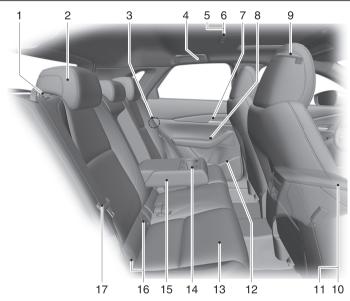


page 3-30
page 3-34
page 4-12
page 7-50
page 7-55
page 7-56
page 4-12
page 4-27
page 7-64
page 7-48
page 7-59
page 7-45
page 3-30
page 7-44
page 3-32
page 3-45
page 3-21

Rear Cabin Overview (Right-Hand Drive Model)

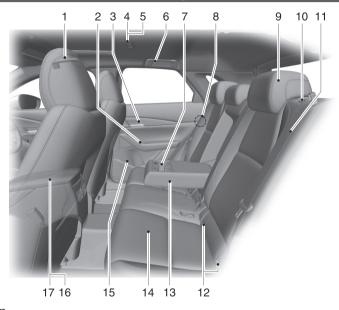

1) A	Assist grip	page	7-64
	Power window switch		
	Door-lock knob		
	Overhead light (rear)		
	Map lights		
	Rear coat hook		
	Cup holder		
	Child safety lock		
	Head restraint		
	ever		
	Seat belt		
	SOFIX lower anchors		
	Armrest		
_	Rear seat		
	Bottle holder		
	Accessory socket		
	Centre console		
		. 0	

Luggage Compartment Overview

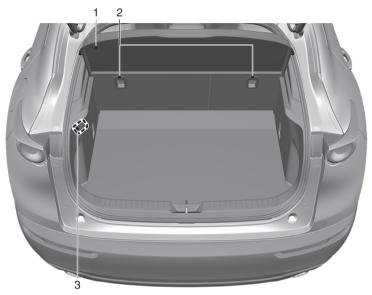

1 Luggage compartment cover	page 7-66
2 Anchor bracket	
(3) Luggage compartment lights	nage 7-57

Front Exterior Overview



① Windscreen wiper blades	page 9-49
② Sunroof	
③ Door	
④ Window	
⑤ Touch sensor	
6 Fuel filler flan	nago 5 104

Rear Exterior Overview



① Rear window wiper blade	page 9-49
2 Electric liftgate opener	
③ Liftgate	
4 Outside mirror	

2 Read This First

Things to Be Observed2-2	-
Things to Be Observed While	
Driving2-2	_
Things to Be Observed When	
Parking or Stopping2-3	ò
The Data Stored in The	
Vehicle 2-4	ŀ
A computer that records vehicle	
data2-4	ŀ

Data handling	2-4
Open Source Software	
nformation	2-5
Active Driving Display	2-5
Driver Monitoring Camera	
Cruising & Traffic Support	
(CTS)	2-6
Centre Display	

Things to Be Observed While Driving

⚠ WARNING

Never stop the engine when going down a hill.

Stopping the engine when going down a hill is dangerous. This causes the loss of power steering and power brake control, and may cause damage to the drivetrain. Any loss of steering or braking control could cause an accident.

Be extremely careful if it is necessary to downshift on slippery surfaces.

Downshifting into lower gear while driving on slippery surfaces is dangerous. The sudden change in tyre speed could cause the tyres to skid. This could lead to loss of vehicle control and an accident.

Avoid sharp turns, excessive speed and abrupt manoeuvres when driving this vehicle.

Sharp turns, excessive speed and abrupt manoeuvring of this vehicle are dangerous as it could result in the increased risk of loss of vehicle control, vehicle roll-over, personal injury or death.

This vehicle has a higher centre of gravity. Vehicles with a higher centre of gravity such as utility vehicles handle differently than vehicles with a lower centre of gravity.

Utility vehicles are not designed for cornering at high speeds any more than low profile sports cars are designed to perform satisfactorily under off-road conditions.

In addition, utility vehicles have a significantly higher rollover rate than other types of vehicles.

In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt.

Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal. Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected



Do not drive the vehicle on flooded roads as it could cause short circuiting of electrical/electronic parts, or engine damage or stalling from water absorption. If the vehicle has been immersed in water, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Things to Be Observed When Parking or Stopping



Never leave a child alone in the vehicle.

The temperature inside the cabin could become extremely hot which could be life-threatening.

An unattended child could operate equipment or accelerate the vehicle resulting in an accident.

A CAUTION

- Do not leave any items in the vehicle that could cause a vehicle fire if they become hot.
 - The temperature inside the cabin could become extremely hot.
- ➤ Stop the vehicle in a place where there are no flammable objects.
- ➤ Do not leave the engine running in a poorly ventilated area, such as in a garage or in a snow-covered area. If there is a malfunction in the exhaust pipe or exhaust noise, have the vehicle inspected.

 There is a risk of carbon monoxide poisoning.
- Do not sleep in the vehicle with the engine running.
 - There is a risk that the vehicle may move unintentionally.

A computer that records vehicle data

A computer is equipped that records data related to the vehicle control, operation, and the driving environment.

This computer records information such as the following.

- Vehicle conditions such as engine speed and vehicle speed
- Driving operation conditions such as accelerator and brake pedals, and information related to the environmental circumstances while driving the vehicle
- · Malfunction diagnosis information from on-vehicle computer
- Information related to controls of other on-vehicle computers

The recorded information differs depending on the vehicle grade and the equipment.

Personal information (name, sex, age, and collision location) is not recorded.

Data handling

Mazda and its contractors may obtain and use data recorded in EDRs and computers that record vehicle data for the purpose of vehicle malfunction diagnosis, research and development, and quality improvement.

Mazda will not disclose or provide any

Mazda will not disclose or provide any of the obtained data to a third party unless:

- An agreement from the vehicle owner (agreements from lessor and lessee for leased vehicle) is obtained
- Officially requested by the police or other law enforcement authorities
- For statistical processing by a research institution after processing the data so that identification of the owner or the vehicle is impossible

Active Driving Display

This product includes free/open sources. Information about the licensing and source code is available at the following URL. https://www.nippon-seiki.co.jp/business ic meter/

Driver Monitoring Camera

Free/Open Source Software Information

This product includes free/open source software. Information about licenses and source codes can be found at the following website.

http://

www.embedded-carmultimedia.jp/RTOS/License/oss/DMS_0201/

Cruising & Traffic Support (CTS)

Free/Open Source Software Information

This product includes software created from free/open sources. Information about free/open source licenses can be found at the following website. http://acado.github.io/licensing

Centre Display

This product includes free/open sources. Information about the licensing and source code is available at the following URL. https://www.alpine.com/m/e/oss/download/

Equipment to Protect Occupants/ Pedestrians

SRS Air Bags	3-4
SRS Air Bags	3-4
Warnings and Cautions for U	Jsing
the SRS Air Bags	
Deployment of SRS air	
bags	.3-10
Front Passenger Air Bag	
Deactivation Switch*	3-15
Warnings and Cautions for U	
the Front Passenger Air Bag	
Deactivation Switch	. 3-15
How to Use the Front Passen	ger
Air Bag Deactivation	
Switch	.3-16
Seat Belts	3-18
Seat Belts	
Warnings and Cautions for U	Jsing
the Seat Belts	
How to Use the Seat Belts	3-21
Front Seats	3-23
Warnings and Cautions for U	
the Front Seats	.3-23
How to Use the Front Seats	
Driving Position Memory*	
Warnings and Cautions for U	
the Driving Position	. 0
Memory	. 3-27
How to Use the Driving Posit	
Memory	
,	

Rear Seats 3-29
Warnings and Cautions for Using
the Rear Seats3-29
How to Use the Rear Seats
3-30
Warnings and Cautions for Using
the Armrests3-31
How to Use the Armrests*3-32
riow to ose the /timests3-32
Head Restraints 3-33
Head Restraints 3-33
Warnings and Cautions for Using
the Head Restraints3-33
How to Use the Head
Restraints 3-34
Steering Wheel3-36
Warnings and Cautions for Using
the Steering Wheel3-36
How to Use the Steering
Wheel3-36
Child-restraint Systems 3-37
Child-restraint Systems3-37
Warnings and Cautions For Child-
restraint Systems3-38
Types of Child-restraint
Systems3-42
Child-restraint System
Installation3-45
Child-Restraint System Suitability
for Various Seat Positions
Table3-48
Anchor Bracket Overview 3-54

Warnings and Cautions for U	sing
the Anchor Bracket	3-54
How to Use the Seat Belt	3-55
Warnings and Cautions for U.	sing
the ISOFIX Anchor	3-56

How to Use the ISOFIX	
Anchor3	3-57

MEMO

SRS Air Bags

If the vehicle receives a strong impact from the front or side of the vehicle when the vehicle power is switched ON, the air bags inflate instantaneously and lessen the impact on the head or chest of the driver or passenger.

The SRS air bag system protects occupants together with the seat belts and they are not a substitute for the seat belts.

There are 5 types of air bags. Some vehicles have a sensor which detects an impending roll-over accident.

The air bag supplementary restraint systems are designed to provide supplementary protection in certain situations so seat belts are always important.

Without seat belt usage, the air bags cannot provide adequate protection during an accident. Seat belt usage is necessary to:


- · Keep the occupant from being thrown into an inflating air bag.
- Reduce the possibility of injuries during an accident that is not designed for air bag inflation, such as rear impact.
- Reduce the possibility of injuries in frontal, near frontal or side collisions or roll-over accidents that are not severe enough to activate the air bags.
- · Reduce the possibility of being thrown from your vehicle.
- Reduce the possibility of injuries to lower body and legs during an accident because the air bags provide no protection to these parts of the body.

Driver's front air bag

The driver's front air bag is stored in the centre of the steering wheel. When air bag crash sensors detect a frontal impact of greater than moderate force, the driver's air bag inflates quickly helping to reduce injury mainly to the driver's head or chest caused by directly hitting the steering wheel.

(With Front Passenger Air Bag Deactivation Switch)

The inflation of the driver's dual-stage air bag is controlled in two energy stages depending on the driver's seat position. The driver's seat slide position sensor is located under the driver's seat. The sensor determines whether the driver's seat is forward of or behind a reference position and sends the seat position to the diagnostic module (SAS unit). The SAS unit is designed to control the deployment of the driver's air bag depending on how close the driver's seat is to the steering wheel. During an impact of moderate severity, the driver's air bag deploys with lesser energy, whereas during more severe impacts and when the driver's seat is behind the reference position, it deploys with more energy.

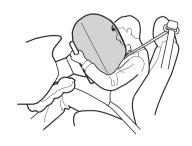

Front passenger's air bag


The front passenger's front air bag is stored in the instrument panel. The inflation mechanism for the front passenger air bag is the same as the driver's air bag.



Driver's Knee Air Bag

The knee air bag is stored under the instrument panel.

If the air bag crash sensors receive a frontal impact of greater than moderate force, the knee air bag deploys immediately to reduce impact to the driver's legs.

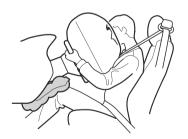

Side air bags

The side air bags are installed in the outboard sides of the driver and front passenger's seatbacks.

When the air bag crash sensors detect a side impact of greater than moderate force, the system inflates the side air bag only on the side in which the vehicle was hit. The side air bag inflates quickly to reduce injury to the driver or front passenger's chest caused by directly hitting interior parts such as a door or window.



Curtain air bags

The curtain air bags are stored in the front pillars, side edges of the roof, and the rear pillars. The curtain air bag on the side where the vehicle is hit deploys regardless of whether or not an occupant is seated.

When the air bag crash sensors detect a side impact of greater than moderate force, the curtain air bag inflates quickly and helps to reduce injury mainly to the driver and front and rear outboard passengers' heads caused by directly hitting interior parts such as a door or window.

In a side impact:

Greater than moderate impact to one side of the vehicle will cause the curtain air bag on that side only to inflate.



Only one side curtain air bag will deploy on the side of the vehicle that receives the force of an impact.

SRS Air Bags

(With roll-over sensor) In a roll-over:

In response to a vehicle roll-over, both curtain air bags inflate.



Both curtain air bags will deploy after the roll-over accident is detected.

Constant Monitoring

The following components of the air bag systems are monitored by a diagnostic system:

- · Front air bag sensors
- · Crash sensors, and diagnostic module (SAS unit)
- · Side crash sensors
- · Air bag modules
- · Seat belt pretensioners
- Air bag/Seat belt pretensioner system warning light
- Related wiring
 (With Front Passenger Air Bag Deactivation Switch)
- $\cdot \ \mathsf{Driver} \ \mathsf{seat} \ \mathsf{slide} \ \mathsf{position} \ \mathsf{sensor}$
- Front passenger air bag deactivation switch
- Front passenger air bag deactivation indicator light

The diagnostic module continuously monitors the system's readiness. This begins when the vehicle power is switched ON and continues while the vehicle is being driven.

Warnings and Cautions for Using the SRS Air Bags



Seat belts must be worn in air bag equipped vehicles.

Depending only on the air bags for protection during an accident is dangerous. Alone, air bags may not prevent serious injuries. The appropriate air bags can be expected to inflate only in the first accident, such as frontal, near frontal or side collisions or roll-over accidents that are at least moderate. Vehicle occupants should always wear seat belts.

Children should not ride in the front passenger seat.

Placing a child, 12 years or under, in the front seat is dangerous. The child could be hit by a deploying air bag and be seriously injured or even killed. A sleeping child is more likely to lean against the door and be hit by the side air bag in moderate collision to the front-passenger side of the vehicle. Whenever possible, always secure a child 12 years and under on the rear seats with an appropriate child-restraint system for the child's age and size.

Extreme Hazard! Never use a rear-facing child-restraint system on the front passenger seat with an air bag that could deploy.

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Even in a moderate collision, the child-restraint system can be hit by a deploying air bag and moved violently backward resulting in serious injury or death to the child. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position when installing a rear-facing child-restraint system on the front passenger seat.



Do not sit too close to the driver and front passenger air bags.

Sitting too close to the driver and front passenger air bag modules or placing hands or feet on them is extremely dangerous. The driver and front passenger air bags inflate with great force and speed. Serious injuries could occur if someone is too close. The driver should always hold onto only the rim of the steering wheel. The front seat passenger should keep both feet on the floor. Front seat occupants should adjust their seats as far back as possible and always sit upright against the seatbacks with seat belts worn properly.

Sit in the centre of the seat and wear seat belts properly.

Sitting too close to the side air bag modules or placing hands on them, or sleeping up against the door or hanging out the windows is extremely dangerous. The side and curtain air bags inflate with great force and speed directly expanding along the door on the side the car is hit. Serious injury could occur if someone is sitting too close to the door or leaning against a window, or if rear seat occupants grab the sides of the front seatbacks. Give the side and curtain air bags room to work by sitting in the centre of the seat while the vehicle is moving with seat belts worn properly.

Do not attach objects on or around the area where air bags deploy.

Attaching objects to the air bags or placing something in the area where the air bags deploy is dangerous. In an accident, an object could interfere with air bag inflation and injure the occupants. Furthermore, the bag could be damaged causing gases to release. Always keep the deployment area of the air bag modules free of any obstructions.

For example, you should not do any of the following as it may interfere with air bag deployment.

- ➤ Do not put a covering on or lean anything against areas such as the instrument panel and lower portion of the instrument panel that blocks the passenger front air bag and knee air bags.
- Do not use seat covers on the front seats.
- Do not hang any backpacks, bags or pouches that cover the sides of the seats that block the side air bags.
- Do not place any objects on the assist grips. Only hang clothes directly on the coat hooks.

SRS Air Bags

Do not touch the components of the supplementary restraint system after the air bags have inflated.

Touching the components of the supplementary restraint system after the air bags have inflated is dangerous. Immediately after inflation, they are very hot. You could get burned.

Never install any front-end equipment to your vehicle.

Installation of front-end equipment, such as frontal protection bar (kangaroo bar, bull bar, push bar, or other similar devices), snowplough, or winches, is dangerous. The air bag crash sensor system could be affected. This could cause air bags to inflate unexpectedly, or it could prevent the air bags from inflating during an accident. Front occupants could be seriously injured.

Do not modify the suspension.

Modifying the vehicle suspension is dangerous. If the vehicle's height or the suspension is modified, the vehicle will be unable to accurately detect a collision or roll-over accident resulting in incorrect or unexpected air bag deployment and the possibility of serious injuries.

Do not modify a front door or leave any damage unrepaired. Always have an expert repairer (we recommend an Authorised Mazda Repairer) inspect a damaged front door. Modifying a front door or leaving any damage unrepaired is dangerous. Each front door has a side crash sensor as a component of the supplementary restraint system. If holes are drilled in a front door, a door speaker is left removed, or a damaged door is left unrepaired, the sensor could be adversely affected causing it to not detect the pressure of an impact correctly during a side collision. If a sensor does not detect a side impact correctly, the side and curtain air bags and the front seat belt pretensioner may not operate normally which could result in serious injury to occupants.

Do not modify the supplementary restraint system.

Modifying the components or wiring of the supplementary restraint system is dangerous. You could accidentally activate it or make it inoperable. Do not make any modifications to the supplementary restraint system. This includes installing trim, badges, or anything else over the air bag modules. It also includes installing extra electrical equipment on or near system components or wiring. An expert repairer (we recommend an Authorised Mazda Repairer) can provide the special care needed in the removal and installation of front seats. It is important to protect the air bag wiring and connections to assure that the bags do not accidentally deploy, and that the driver seat slide position sensor is not damaged and the seats retain an undamaged air bag connection.

Do not place luggage or other objects under the front seats.

Placing luggage or other objects under the front seats is dangerous. The components essential to the supplementary restraint system could be damaged, and in the event of a side collision, the appropriate air bags may not deploy, which could result in death or serious injury. To prevent damage to the components essential to the supplementary restraint system, do not place luggage or other objects under the front seats.

Do not operate a vehicle with damaged air bag/seat belt pretensioner system components.

Expended or damaged air bag/seat belt pretensioner system components must be replaced after any collision which caused them to deploy or damage them. Only a trained expert repairer (we recommend an Authorised Mazda Repairer) can fully evaluate these systems to see that they will work in any subsequent accident. Driving with an expended or damaged air bag or pretensioner unit will not afford you the necessary protection in the event of any subsequent accident which could result in serious injury or death.

Do not remove interior air bag parts.

Removing any components such as the front seats, front instrument panel, the steering wheel or parts on the front and rear window pillars and along the roof edge, containing air bag parts or sensors is dangerous. These parts contain essential air bag components. The air bag could accidentally activate and cause serious injuries. Always have an expert repairer (we recommend an Authorised Mazda Repairer) remove these parts.

Properly dispose of the air bag system.

Improper disposal of an air bag or a vehicle with live air bags in it can be extremely dangerous. Unless all safety procedures are followed, injury could result. Have an expert repairer (we recommend an Authorised Mazda Repairer) safely dispose of the air bag system or scrap an air bag equipped vehicle

Deployment of SRS air bags

Deployment of SRS air bags

The driver's and front passenger's front air bags, and the driver's knee air bag deploy when a strong impact is applied to the vehicle in a frontal collision, and the side and curtain air bags deploy in side collisions.

The air bags do not always deploy even if the vehicle receives an impact.

Conditions in which air bags may not deploy

The air bags may not deploy under the following conditions depending on the level of the impact.

Driver's and front passenger's air bags, driver's knee air bag

(Impacts involving trees or poles)



(Rear-ending or running under a truck's tail gate)



(Frontal offset impact to the vehicle)



Side and curtain air bags

(Frontal offset impact to the vehicle)



(Pitch end over end)



(Side impacts involving trees or poles from the vehicle side (around driver or front passenger))



(Side impacts with two-wheeled vehicles)



Conditions in which air bags do not deploy

The air bags do not deploy under the following conditions.

Driver's and front passenger's air bags, driver's knee air bag (Rear impact)



(Roll-over)



(Pitch end over end)



(Lateral direction side impact)



Side air bags (Roll-over)



Curtain air bags (Roll-over (Without roll-over sensor))



Side and curtain air bags (Rear impact)



(Frontal impact)



NOTE

- When an air bag deploys, a loud inflation noise can be heard and some smoke will be released. Neither is likely to cause injury, however, the texture of the air bags may cause light skin injuries on body parts not covered with clothing through friction.
- Should you sell your Mazda, we urge you to tell the new owner of its air bag systems and that familiarization with all instructions about them, from the Owner's Manual, is important.
- This highly-visible label warns against the use of a rear-facing child-restraint system on the front passenger seat.

(Europe and other countries (Except Taiwan))



(Taiwan Only)




依規定前排座椅禁止乘載嬰兒、幼童及兒童。

(Taiwan, except front passenger seat, if equipped with the following label) The highly-visible labels warn against the use of a rear-facing child-restraint system on the seat protected by an air bag.



Air bag structural view

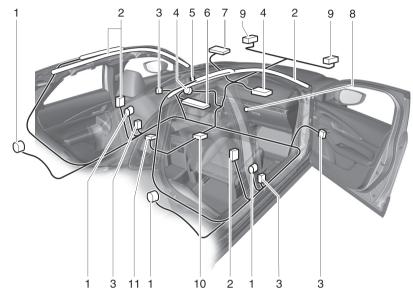

- 1. Seat belt pretensioners
- 2. Side and curtain inflators and air bags*
- 3. Side crash sensors*
- 4. Driver/Front passenger inflators and air bags5. Air bag/seat belt pretensioner system warning indication/warning light
- 6. Driver knee inflator and air bag
- 7. Front passenger air bag deactivation indicator light
- 8. Front passenger air bag deactivation switch*
- 9. Front air bag sensor
- 10.Roll-over sensor*, crash sensors, and diagnostic module (SAS unit) 11.Driver seat slide position sensor*

Front Passenger Air Bag Deactivation Switch*

The front passenger air bag deactivation switch should be used to deactivate the front passenger front and side air bags and also the front passenger seat belt pretensioner system if installing a child-restraint system on the front passenger seat.

Warnings and Cautions for Using the Front Passenger Air Bag Deactivation Switch



Do not deactivate the front passenger air bag unnecessarily.


Unnecessary deactivation of the front passenger air bag is dangerous. If turned off unnecessarily, the front passenger will not receive the added protection of the air bag. Serious injuries or even death could occur. With the exception of installing a child-restraint system on the front passenger seat, do not turn the air bag deactivation switch to the OFF position.

Do not leave the key in the front passenger air bag deactivation switch. Unintentional deactivation of the front passenger air bag is dangerous. In an accident, the front passenger will not be properly protected. Serious injuries or even death could occur. To avoid unintentional deactivation, always use the auxiliary key stored in the transmitter body currently being used to operate the front passenger air bag deactivation switch. After deactivating the air bag, put the auxiliary key back into the transmitter body. That way you will not leave the key in the front passenger air bag deactivation switch.

SRS Air Bags

How to Use the Front Passenger Air Bag Deactivation Switch

The front passenger air bag deactivation indicator light indicates whether or not the front passenger's air bag can be deployed.
Switch the vehicle power ON.
The indicator light turns on and a system check is performed.

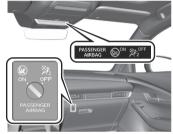

After the system check is performed, the indicator light turns off. The indicator light turns on or off under the following conditions.

Front Passen- ger Air Bag Deactivation Switch	Front Passen- ger Seat/Side Air Bag, Front Passenger Seat Belt Preten- sioner Opera- tion Condi- tion	Front Passen- ger Air Bag Deactivation Indicator Light
OFF position OFF OFF PASSENGER AIRBAG	Deactivate	⊗ OFF

Front Passen- ger Air Bag Deactivation Switch	Front Passen- ger Seat/Side Air Bag, Front Passenger Seat Belt Preten- sioner Opera- tion Condi- tion	Front Passen- ger Air Bag Deactivation Indicator Light
ON position OF PASSENGER AIRBAG	Ready	Turns off after a short period of time.

NOTE

Have the front passenger air bag deactivation switch inspected by an expert repairer (we recommend an Authorised Mazda Repairer) if any of these conditions occur:

- The front passenger air bag deactivation indicator light does not illuminate for a specified period of time when the vehicle power is switched ON.
- The front passenger air bag deactivation indicator light does not turn off after a short period of time when the vehicle power is switched ON (front passenger air bag deactivation switch is in ON position).

Before driving, always confirm that the front passenger air bag deactivation switch is in the appropriate position using the auxiliary key according to your requirements.

NOTE

After operating the front passenger air bag deactivation switch, put the auxiliary key back into the transmitter body.

OFF

Front passenger front air bag, side air bag and front passenger seat belt pretensioners do not operate.

Switching to OFF position

- Insert the key into the front passenger air bag deactivation switch and turn the key clockwise until the key points to OFF.
- 2. Remove the key.
- Make sure the air bag deactivation indicator light remains illuminated when the vehicle power is switched ON.

The front passenger front and side air bags and also the seat belt pretensioner system will remain deactivated until the front passenger air bag deactivation switch is turned to the ON position.

ON

Front passenger front air bag, side air bag and front passenger seat belt pretensioners operate. Activate the system only when a child-restraint system is not installed on the front passenger seat.

Switching to ON position

- Insert the key into the front passenger air bag deactivation switch and turn the key anticlockwise until the key points to ON.
- 2. Remove the key.

3. Make sure the air bag deactivation indicator light remains illuminated when the vehicle power is switched ON. The air bag deactivation indicator light turns off after a short period of time.

Seat belts help to decrease the possibility of severe injury during accidents and sudden stops. Mazda recommends that the driver and all passengers always wear seat belts. All the seats have lap/shoulder belts. These belts also have retractors with inertia locks that keep them out of the way when not in use. The locks allow the belts to remain comfortable on users, but they will lock in position during a collision.

Seat belts have 3 mechanisms.

Emergency Locking Mode

When the seat belt is fastened, it will always be in the emergency locking mode.

In the emergency locking mode, the belt remains comfortable on the occupant and the retractor will lock in position during a collision.

If the belt is locked and cannot be pulled out, retract the belt once, and then try pulling it out slowly. If this fails, pull the belt strongly 1 time and loosen, then pull it out again slowly.

Pretensioner system

If the vehicle receives a strong impact from the front or side of the vehicle, the system retracts the seat belts to increase their effect.

When a collision is detected, the pretensioners deploy simultaneously with the air bags.

The seat belt retractor quickly removes slack when an air bag is inflated.

(With roll-over sensor)

The pretensioners deploy simultaneously with the air bags when a roll-over is also detected.

(With front passenger air bag deactivation switch)

In addition, the pretensioner system for the front passenger, like the front and side passenger air bag, is designed to only deploy when the front passenger air bag deactivation switch is turned to the ON position. For details, refer to How to Use the Front Passenger Air Bag Deactivation Switch (page 3-16).

Load limiting system

If the vehicle receives a strong impact from the front of the vehicle, the load limiting system operates to prevent the seat belts from applying an excessive load. By maintaining the load applied to the seat belt to a specified level, the system reduces impact to an occupant's chest.

Even if the pretensioners have not fired, the load limiting function must be checked by an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

- The pretensioner system operates if the vehicle receives a strong impact from the vehicle front or side direction. The system may not operate if the impact is weak.
- Some smoke might be released when the pretensioner system operates, but this does not mean there is a fire. This gas normally has no effect on occupants. However, those with sensitive skin may experience light skin irritation. If residue from the operation of the pretensioner system gets on the skin or in the eyes, wash it off as soon as possible.

Warnings and Cautions for Using the Seat Belts

♠ WARNING

Always wear your seat belt and make sure all occupants are properly restrained.

Not wearing a seat belt is extremely dangerous. During a collision, occupants not wearing seat belts could hit someone or things inside the vehicle or even be thrown out of the vehicle. They could be seriously injured or even killed. In the same collision, occupants wearing seat belts would be much safer.

Do not wear twisted seat belts.

Twisted seat belts are dangerous. In a collision, the full width of the belt is not available to absorb the impact. This puts more force on the bones beneath the belt, which could cause serious injury or death. So, if your seat belt is twisted, you must straighten the seat belt to remove any twists and to allow the full width of the belt to be used.

Never use one seat belt on more than one person at a time.

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way cannot spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time and always operate the vehicle with each occupant properly restrained.

Do not operate a vehicle with a damaged seat belt.

Using a damaged seat belt is dangerous. An accident could damage the belt webbing of the seat belt in use. A damaged seat belt cannot provide adequate protection in a collision. Have an expert repairer (we recommend an Authorised Mazda Repairer) inspect all seat belt systems in use during an accident before they are used again.

Have your seat belts changed immediately if the pretensioner or load limiter has been expended.

Always have an expert repairer (we recommend an Authorised Mazda Repairer) immediately inspect the seat belt pretensioners and air bags after any collision. Like the air bags, the seat belt pretensioners and load limiters will only function once and must be replaced after any collision that caused them to deploy. If the seat belt pretensioners and load limiters are not replaced, the risk of injury in a collision will increase.

Positioning the Shoulder Portion of the Seat Belt.

Improper positioning of the shoulder portion of the seat belt is dangerous. Always make sure the shoulder portion of the seat belt is positioned across your shoulder and near your neck, but never under your arm, on your neck, or on your upper arm.

Positioning the Lap Portion of the Seat Belt.

The lap portion of the seat belt worn too high is dangerous. In a collision, this would concentrate the impact force directly on the abdominal area, causing serious injury. Wear the lap portion of the belt snugly and as low as possible.

Instructions for Use of Seat Belt Assemblies.

Seatbelts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided. Seatbelts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged. It is essential to replace the entire

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap. No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

Pregnant women and persons with a medical condition should always wear seat belts.

However, ask your doctor about precautions in using a seat belt because a strong impact might be applied locally during sudden braking or a collision. The lap portion of the belt should fit the pelvis as low as possible avoiding abdominal area. In addition, the shoulder portion should be positioned on the shoulder and fitted to the chest avoiding the abdominal area.



Wear seat belts only as recommended in this owner's manual.

Incorrect positioning of the seat belts is dangerous. Without proper positioning, the pretensioner and load limiting systems cannot provide adequate protection in an accident and this could result in serious injury. For more details about wearing seat belts, refer to "How to Use the Seat Belts" (page 3-21).

Do not modify the components or wiring, or use electronic testing devices on the pretensioner system.

Modifying the components or wiring of the pretensioner system, including the use of electronic testing devices is dangerous. You could accidentally activate it or make it inoperable which would prevent it from activating in an accident. The occupants or person making the modification could be seriously injured.

Properly dispose of the pretensioner system.

Improper disposal of the pretensioner system or a vehicle with non-deactivated pretensioners is dangerous. Unless all safety procedures are followed, injury could result. Have an expert repairer (we recommend an Authorised Mazda Repairer) safely dispose of the pretensioner system or scrap a pretensioner system equipped vehicle.

A CAUTION

Belt retraction may become difficult if the belts and rings are soiled, For more details about cleaning the seat belts, refer to "Seat Belt Maintenance" (page 9-69).



1. Ring

How to Use the Seat Belts

Fastening a Seat Belt

Before fastening a rear seat belt, make sure that the seat belt passes through the seat belt guide correctly and it is not twisted.



- 1. Sit back in the seat with your back upright.
- 2. Hold the plate and slowly pull out the seat belt.



NOTE

If the belt is locked and cannot be pulled out, retract the belt once, and then try pulling it out slowly. If this fails, pull the seat belt strongly one time and loosen it, then pull it out again slowly.

3. Make sure that the belt is not twisted.

4. Insert the plate into the buckle until it clicks.



5. The belt should fit the pelvis as low as possible.




6. The belt should not touch the neck, jaw, or face and it should pass over the shoulder.

Seat belt indicator light (rear seat) (green)



The light turns on when the rear seat belt is fastened while the vehicle power is switched ON, and it turns off after a certain period.

Unfastening a Seat Belt

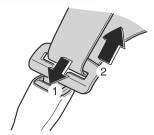

Make sure that the seat belt is not twisted, then let the seat belt retract slowly.

Adjusting the Seat Belt Height

If the seat belt contacts your neck or it slips off the shoulder, adjust the seat belt height.

To raise the seat belt



To lower the seat belt

1. Hold the seat belt anchor adjuster and press the knob down.



2. Make sure that the seat belt anchor adjuster is securely locked.

Warnings and Cautions for Using the Front Seats

! WARNING

Never allow children to adjust a seat. Allowing children to adjust a seat is dangerous as it could result in serious injury if a child's hands or feet become caught in the seat.

Do not drive with the seatback unlocked.

All of the seatbacks play an important role in your protection in a vehicle. Leaving the seatback unlocked is dangerous as it can allow passengers to be ejected or thrown around and baggage to strike occupants in a sudden stop or collision, resulting in severe injury. After adjusting the seatback at any time, even when there are no other passengers, rock the seatback to make sure it is locked in place.

Do not modify or replace the front seats.

Modifying or replacing the front seats such as replacing the upholstery or loosening any bolts is dangerous. The front seats contain air bag components essential to the supplementary restraint system. Such modifications could damage the supplementary restraint system and result in serious injury. Consult an expert repairer (we recommend an Authorised Mazda Repairer) if there is any need to remove or reinstall the front seats.

Adjust a seat only when the vehicle is stopped.

If the seat is adjusted while the vehicle is being driven, the seating posture may become unstable and the seat could move unexpectedly resulting in injury.

Do not drive with damaged front seats.

Driving with damaged front seats, such as seat cushions torn or damaged down to the urethane, is dangerous. A collision, even one not strong enough to inflate the air bags, could damage the front seats which contain essential air bag components. If there was a subsequent collision, an air bag may not deploy which could lead to injuries. Always have an expert repairer (we recommend an Authorised Mazda Repairer) inspect the front seats, front seat belt pretensioners and air bags after a collision.

Do not drive with either front seats reclined.

Sitting in a reclined position while the vehicle is moving is dangerous because you do not get the full protection from seat belts. During sudden braking or a collision, you can slide under the lap belt and suffer serious internal injuries. For maximum protection, sit well back and upright.

Do not place an object such as a cushion between the seatback and your back.

Putting an object such as a cushion between the seatback and your back is dangerous because you will be unable to maintain a safe driving posture and the seat belt cannot function at its full capacity in a collision, which could result in a serious accident, injury or death.

Front Seats

Do not place objects under the seat.

The object could get stuck and cause the seat to not be fixed securely, and result in an accident.

Do not stack cargo higher than the seatbacks.

Stacking luggage or other cargo higher than the seatbacks is dangerous. During sudden braking or a collision, objects can fly around and become projectiles that may hit and injure passengers.

Make sure the adjustable components of a seat are locked in place.

Adjustable seats and seatbacks that are not securely locked are dangerous. In a sudden stop or collision, the seat or seatback could move, causing injury. Make sure the adjustable components of the seat are locked in place by attempting to slide the seat forward and backward and rocking the seatback.

Make sure luggage and cargo is secured before driving.

Not securing cargo while driving is dangerous as it could move or be crushed during sudden braking or a collision and cause injury.

Additionally, if the air bags deploy, the cargo may scatter which could result in serious injury or death.

Never allow a passenger to sit or stand on the folded seatback while the vehicle is moving. Driving with a passenger on the folded seatback is dangerous. Allowing a child to sit up on the folded seatback while the vehicle is moving is particularly dangerous. In a sudden stop or even a minor collision, a child not in a proper seat or child-restraint system and seat belt could be thrown forward, back or even out of the vehicle resulting in serious injuries or death. The child in the baggage area could be thrown into other occupants and cause serious injury.

A CAUTION

- When operating a seat, be careful not to put your hands or fingers near the moving parts of the seat or on the side trim to prevent injury.
- ➤ When moving the seats, make sure there is no cargo in the surrounding area. If the cargo gets caught it could damage the cargo.

➤ (Manual Seat)

- When moving the seats forward and rearward or returning a rear-reclined seatback to its upright position, make sure you hold onto the seatback with your hand while operating. If the seatback is not held, the seat will move suddenly and could cause injury.
- ➤ When inserting your hand under the seat to clean the cabin or pick up something you dropped under the seat, be careful not to hurt yourself. If you contact the moving parts and surrounding parts around the seat rail, seat frame, and the bottom of the seat, it could result in injury.

How to Use the Front Seats

Driver's Seat

Manual seat



- 1. Seat Slide
- Height Adjustment
 Height Adjustment for Front Edge of Seat Bottom
- 4. Seat Recline

Power seat



- 1. Seat Slide
- Height Adjustment
 Height Adjustment for Front Edge of Seat Bottom
- 4. Seat Recline
- 5. Lumbar Support Adjustment

Front Seats

Passenger's seat



- 1. Seat Recline
- 2. Height Adjustment*
- 3. Seat Slide

NOTE

(Power Seat)

The seat-bottom power adjustment is operated by motors. Avoid extended operation because excessive use can damage the motors.

- To prevent the battery from running down, avoid using the power adjustment when the engine is stopped. The adjuster uses a large amount of electrical power.
- Do not use the switch to make more than one adjustment at a time.

Driving Position Memory

The desired driving position can be called up after programming the position.

- Driver's seat position (Seat slide, height adjustment, front edge of seat bottom, seat recline)
- Active driving display (Display position, brightness level, display information)
- · Outside mirror angle

Warnings and Cautions for Using the Driving Position Memory



Do not place hand, fingers, or feet around the bottom of the seat while the seat memory function is operating. The seat moves automatically while the seat memory function is operating and hand, fingers, or feet could get pinched and injured.

How to Use the Driving Position Memory

A driving position can be programmed to the position memory switch and the key.

Programming

- 1. Switch the vehicle power ON.
- 2. Adjust the following driving positions to the desired positions.
 - · Driver's seat
 - · Active driving display
 - Outside mirrors
- 3. Continue pressing the SET switch until a sound is activated.



- 4. Do the following operation within 5 seconds after the sound is activated to programme the driving position.
 - Programming to a position memory button
 Press the button you want to

Press the button you want to programme, either 1 or 2 button.



Front Seats

Programming to the transmitter
 Press the unlock button on the transmitter.

A sound is activated when the operation is completed correctly.

Adjusting to the Programmed Driving Position

Operation Using the Position Memory Switch

Press either switch 1 or 2 that you programmed to activate the seat adjustment to your position.
A sound is activated when the adjustment to the programmed driving position is completed.

Operation Using the Key

- 1. Unlock the driver's door using one of the following methods.
 - Touch the sensing area of the door release touch sensor.
 - · Press the key unlock button.
- 2. If the driver's door is opened within a certain period of time after unlocking, adjustment of the next driving position starts.
 - Driver's seat
 - · Active driving display
 - · Outside mirrors

A sound is activated when the adjustment to the programmed driving position is completed.

Deleting a Programmed Position

Erasing the Position Stored in the Position Memory Switch

Programme a new driving position.

Deleting a Position Programmed to the Key

1. Switch the vehicle power OFF.

- 2. Continue pressing the SET switch until a sound is activated.
- 3. Press the key lock button within 5 seconds after the sound is activated.

NOTE

- If the angle of the outer mirror is adjusted close to the limits of its range of motion, the angle of the outer mirrors may not be programmed correctly.
- When the adjustment to the programmed driving position has been completed, a sound is not activated.
- Under the following conditions, the driving position adjustment is cancelled.
 - The seat adjustment switch/SET switch/outer mirrors/active driving display for the driver's seat is operated to adjust the position.
 - The key lock button or unlock button is operated.
 - · The vehicle moves.
 - (Manual transmission)
 The parking brake is released.
 - (Automatic transmission)
 The selector lever is shifted to a position other than P.

Warnings and Cautions for Using the Rear Seats

MARNING

Do not drive the vehicle with occupants on folded down seatbacks or in the luggage compartment.

Putting occupants in the luggage compartment is dangerous because seat belts cannot be fastened which could lead to serious injury or death during sudden braking or a collision.

Do not allow children to play inside the vehicle with the seatbacks lowered.

Allowing children to play in the vehicle with the seatbacks folded down is dangerous. If a child enters the luggage compartment and the seatbacks were raised back up, the child may become trapped in the luggage compartment which could lead to an accident.

Tightly secure cargo in the luggage compartment when it is transported with the seatbacks folded down.

Driving without tightly securing cargo and luggage is dangerous as it could move and become an obstruction to driving during emergency braking or a collision resulting in an unexpected accident.

When transporting cargo, do not allow the cargo to exceed the height of the seatbacks.

Transporting cargo stacked higher than the seatbacks is dangerous as visibility to the rear and sides of the vehicle is reduced which could interfere with driving operations and lead to an accident. When returning a seatback to its upright position, make sure the 3-point seat belt is not caught in the seatback and the 3-point seat belt is not twisted.

If the seat belt is used while it is twisted and caught in the seatback, the seat belt cannot function at its full capacity, which could cause serious injury or death.

When returning a seatback to its upright position, make sure that it is firmly locked and the red indication is not visible.

If the red indication is visible, it means the seatback is not locked. If the vehicle is driven without the seatback locked, it could fold down suddenly and cause an accident.



- 1. Locked position
- 2. Unlocked position
- 3. Red indication



➤ When folding the seatback forward, always support the seatback with your hand. If it is not supported by a hand, the seatback will move suddenly and a person could be injured.

Rear Seats

Check the position of a front seat before folding a rear seatback. Depending on the position of a front seat, it may not be possible to fold a rear seatback all the way down because it may hit the seatback of the front seat which could scratch or damage the front seat or its pocket. Lower or remove the head restraint on the rear outboard seat if necessary.

How to Use the Rear Seats


Folding the seatbacks



Raising the seatbacks

- Make sure that the seat belt passes through the seat belt guide correctly and it is not twisted.
- 2. Raise the seatback while preventing the seat belt from being caught in the seatback.



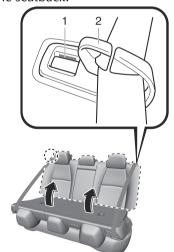

- 1. Red indication
- 2. Seat belt guide
- 4. Push the seatback rearward until it locks.

5. Make sure it is securely locked.

Warnings and Cautions for Using the Armrests



Never put your hands and fingers around the moving parts of the seat and armrest.

Putting your hands and fingers around the moving parts of the seat and armrest is dangerous as they could get injured.

How to Use the Armrests*



Head Restraints

Your vehicle is equipped with head restraints on all outboard seats and the rear centre seat.

The head restraints are intended to help protect you and the passengers from neck injury.

Warnings and Cautions for Using the Head Restraints

MARNING

Always drive with the head restraints installed when seats are being used and make sure they are properly adjusted.

Driving with the head restraints adjusted too low or removed is dangerous. With no support behind your head, your neck could be seriously injured in a collision.

Always drive with the head restraints installed when seats are being used and make sure they are properly installed.

Driving with the head restraints not installed is dangerous. With no support behind your head, your neck could be seriously injured in a collision.

After installing a head restraint, try lifting it to make sure that it does not pull out.

Driving with an unsecured head restraint is dangerous as the effectiveness of the head restraint will be compromised which could cause it to unexpectedly detach from the seat.



➤ When installing a head restraint, make sure that it is installed correctly with the front of the head restraint facing forward. If the head restraint is installed incorrectly, it could detach from the seat during a collision and result in injury.


Head Restraints

The head restraints on each of the front and rear seats are specialized to each seat. Do not switch around the head restraint positions. If a head restraint is not installed to its correct seat position, the effectiveness of the head restraint during a collision will be compromised which could cause injury.

How to Use the Head Restraints

Adjusting the Head Restraints

Adjust the head restraint so that the centre is even with the top of the passenger's ears.

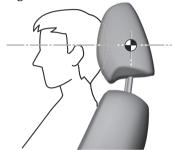


To Raise a Head Restraint

Pull up a head restraint.

To Lower a Head Restraint

Lower a head restraint while pressing the lock knob.

Front seats

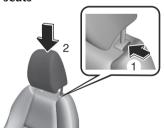

Rear seats (Centre/Left/Right seats)



Removing or Installing a Head Restraint

To Remove a Head Restraint

Pull up a head restraint while pressing the lock knob.

To Install a Head Restraint

Insert a head restraint while pressing the lock knob.

Warnings and Cautions for Using the Steering Wheel

MARNING

Never adjust the steering wheel while the vehicle is moving.

Adjusting the steering wheel while the vehicle is moving is dangerous. Moving it can very easily cause the driver to abruptly turn to the left or right. This can lead to loss of control or an accident.

After adjusting the steering wheel position, make sure it is securely locked by trying to move it up and down.

Driving with the steering wheel not securely locked in position is dangerous. If the steering wheel moves unexpectedly while driving, you could lose control of the steering resulting in an accident.

How to Use the Steering Wheel

1.



2. Adjust the steering wheel to the appropriate position.



3. Pull up the lever to securely lock the steering wheel.

Child-restraint Systems

Mazda strongly urges the use of child-restraint systems for children small enough to use them. Mazda recommends use of a Mazda genuine child-restraint system or one that complies with the UN-R *1 44 or UN-R 129 regulation. If you would like to purchase a Mazda genuine child-restraint system, please contact an expert repairer (we recommend an Authorised Mazda Repairer). Check your local and state or provincial laws for specific requirements regarding the safety of children riding in your vehicle. *1 UN-R stands for United Nations Regulation.

Whatever child-restraint system you consider, please pick the appropriate one for the age and size of the child,

obey the law and follow the instructions that come with the individual child-restraint system.

A child who has outgrown child-restraint systems should sit in the rear and use seat belts.

The child-restraint system should be installed on the rear seat.
Statistics confirm that the rear seat is the best place for all children up to 12 years of age-the more so with a supplementary restraint system (air bags).

A rear-facing child-restraint system should **NEVER** be used in the front passenger seat with the air bag system activated. The front passenger's seat is

also the least preferred seat for other child-restraint systems.

For some models, we have provided a deactivation switch that will disable front passenger air bag inflation. Do not switch off the front passenger air bag without reading the "Front Passenger Air Bag Deactivation Switch" (page 3-15).

Warnings and Cautions For Child-restraint Systems



Use the correct size child-restraint system.

For effective protection in vehicle accidents and sudden stops, a child must be properly restrained using a seat belt or child-restraint system depending on age and size. If not, the child could be seriously injured or even killed in an accident.

Follow the manufacturer's instructions and always keep the child-restraint system buckled down.

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure any child-restraint system is properly secured in place according to the child-restraint system manufacturer's instructions. When not in use, remove it from the vehicle or fasten it with a seat belt, or latch it down to BOTH ISOFIX anchors, and attach the corresponding tether anchor.

Always secure a child in a proper child-restraint system.

Holding a child in your arms while the vehicle is moving is extremely dangerous. No matter how strong the person may be, he or she cannot hold onto a child in a sudden stop or collision and it could result in serious injury or death to the child or other occupants. Even in a moderate accident, the child may be exposed to air bag forces that could result in serious injury or death to the child, or the child may be slammed into an adult, causing injury to both child and adult.

Extreme Hazard! Never use a rear-facing child-restraint system on the front passenger seat with an air bag that could deploy.

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Vehicles with a front passenger air bag have the following warning label. The warning label reminds you not to put a rear-facing child-restraint system on the front passenger seat at any time. (Europe and other countries (Except Taiwan))

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



(Taiwan Only)



依規定前排座椅禁止乘載嬰兒、幼童及兒童。

Even in a moderate collision, the child-restraint system can be hit by a deploying air bag and moved violently backward resulting in serious injury or death to the child. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position when installing a rear-facing child-restraint system on the front passenger seat.



(Taiwan, except front passenger seat, if equipped with the following label) NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable.

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.

Make sure that the front passenger air bag deactivation switch is in the OFF position. Refer to How to Use the Front Passenger Air Bag Deactivation Switch (page 3-16).



Do not allow a child or anyone to lean over to or against the side window of a vehicle with side and curtain air bags.

It is dangerous to allow anyone to lean over to or against the side window, the area of the front passenger seat, the front and rear window pillars and the roof edge along both sides from which the side and curtain air bags deploy, even if a child-restraint system is used. The impact of inflation from a side or curtain air bag could cause serious injury or death to an out of position child. Furthermore, leaning over to or against the door could block the side and curtain air bags and eliminate the advantages of supplementary protection. Because the front seats are equipped with front air bags, the rear seat is always a better location for children. Take special care not to allow a child to lean over to or against the side window, even if the child is seated in a child-restraint system.

Never use one seat belt on more than one person at a time.

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way cannot spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time and always operate the vehicle with each occupant properly restrained.

Use the tether and tether anchor only for a child-restraint system.


Child-restraint system anchorages are designed to withstand only those loads imposed by correctly installed child-restraint systems. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Always attach the tether strap to the correct tether anchor position.

Attaching the tether strap to the incorrect tether anchor position is dangerous. In a collision, the tether strap could come off and loosen the child-restraint system. If the child-restraint system moves it could result in death or injury to the child.

Always remove the head restraint and set the tether strap (except when installing a booster seat).

Routing the tether strap on top of the head restraint is dangerous. In a collision the tether strap could slide off the head restraint and loosen the child-restraint system. The child-restraint system could move which may result in death or injury to the child.

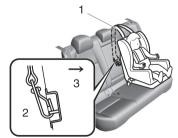

- 1. Tether strap
- Anchor bracket
- 3. Forward

Follow the manufacturer's instructions for the use of the child-restraint system.

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure any child-restraint system is properly secured in place according to the manufacturer's instructions.

Make sure the child-restraint system is properly secured.

A child-restraint system that is not secured is dangerous. In a sudden stop or collision, it can become a projectile and hit someone, causing serious injury. When not in use, remove it from the vehicle, put it in the luggage compartment or at least make sure it is securely fastened to the ISOFIX anchors.

Make sure there are no seat belts or foreign objects near or around the ISOFIX anchor-secured child-restraint system.

Not following the child-restraint system manufacturer's instructions when installing the child-restraint system is dangerous. If seat belts or a foreign object prevent the child-restraint system from being securely attached to the ISOFIX anchors and the child-restraint system is installed improperly, the child-restraint system could move in a sudden stop or collision causing serious injury or death to the child or other occupants. When installing the child-restraint system, make sure there are no seat belts or foreign objects near or around the ISOFIX anchors. Always follow the child-restraint system manufacturer's instructions.

Always remove the head restraint and install child-restraint system (except when installing a booster seat).

Installing a child-restraint system without removing the head restraint is dangerous. The child-restraint system cannot be installed correctly which may result in death or injury to the child in a collision.

Always install the head restraint and adjust it to the appropriate position after removing the child-restraint system.

Driving with the head restraint removed is dangerous as impact to the occupant's head cannot be prevented during emergency braking or in a collision, which could result in a serious accident, injury or death.

To avoid burning yourself or a child, check them before you or your child touches them.

A seat belt or child-restraint system can become very hot in a closed vehicle during warm weather.

Types of Child-restraint Systems

Categories of Child-Restraint Systems

NOTE

When purchasing, ask the manufacturer of the child-restraint system which type of child-restraint system is appropriate for your child and vehicle.

(Europe and countries conforming to the UN-R 44 and UN-R 129 regulation) Child-restraint systems are classified into the following 5 groups according to the UN-R 44 and UN-R 129 regulation.

Group	Age	Weight	Size Classification/ Fixture (CRF)
0		Up to 10 kg (up to 22 lb)	ISO/L1
	Up to about 9 months old		ISO/L2
			ISO/R1
0+		Up to 13 kg (up to 29 lb)	ISO/R1
	Up to about 2 years old		ISO/R2
			ISO/R3
1		9 kg — 18 kg (20 lb — 40 lb)	ISO/R2
			ISO/R3
	About 8 months to 4 years old		ISO/F2
			ISO/F2X
			ISO/F3
2	About 3 to 7 years old	15 kg — 25 kg (33 lb — 55 lb)	_
3	About 6 to 12 years old	22 kg — 36 kg (48 lb — 79 lb)	_

(Other countries)

Please comply with the legal regulations concerning the use of child-restraint systems in your country.

Child-Restraint System Types

(Europe and countries conforming to the UN-R 44 and UN-R 129 regulation) In this owner's manual, explanation of child-restraint systems secured with seat belts is provided for the following 3 types of popular child-restraint systems: baby seat, child seat, junior seat.

NOTE


• Installation position is determined by the type of child-restraint system. Always read the manufacturer's instructions and this owner's manual carefully.

· Due to variations in the design of child-restraint systems, vehicle seats and seat belts, all child-restraint systems may not fit all seating positions. Before purchasing a child-restraint system, it should be tested in the specific vehicle seating position (or positions) where it is intended to be used. If a previously purchased child-restraint system does not fit, you may need to purchase a different one that will.

Baby seat

Equal to Group 0 and 0+ of the UN-R 44 and UN-R 129 regulation. (Europe)

Recommended child-restraint system: Britax BABY-SAFE 3 i-SIZE and FLEX BASE **ISENSE**

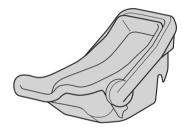

Child seat

Equal to Group 1 of the UN-R 44 and UN-R 129 regulation.

(Europe)

Recommended child-restraint system: Britax TRIFIX 2 i-SIZE



Junior seat

Equal to Group 2 and 3 of the UN-R 44 and UN-R 129 regulation.

(Europe) Recommended child-restraint system: Britax KIDFIX i-SIZE



When using the KIDFIX i-SIZE, make sure that the shoulder belt passes through the shoulder belt pad (XP-PAD), and the lap belt passes through the lap belt guide (SecureGuard).


For details on use, refer to the user manual accompanying the KIDFIX i-SIZE. (Other countries)

Please comply with the legal regulations concerning the use of child-restraint systems in your country.

Child-restraint System Installation

Baby Seat Installation Position

A baby seat is used in the rear-facing position only.

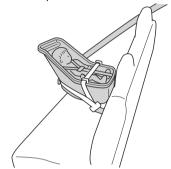

Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for baby seat installation position (Page 3-48).

▲ WARNING

Always install a baby seat in the correct seat position.

Installing a baby seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A baby seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Never use a rear-facing child-restraint system on the front passenger seat protected by an air bag.

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

The child-restraint system can be hit by the deploying air bag and knocked out of position. A child in the child-restraint system could be seriously injured or killed. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position if installing a rear-facing child-restraint system on the front passenger seat is unavoidable. When installing a rear-facing child-restraint system, make sure that the air bag system is turned off.



Child Seat Installation Position

position (Page 3-48).

A child seat is used in front-facing and rear-facing positions depending on the age and size of the child. When installing, follow the manufacturer's instructions in accordance with the appropriate age and size of the child as well as the directions for installing the child-restraint system.

Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for child seat installation

Rear-facing type

M WARNING

Always install a baby seat in the correct seat position.

Installing a baby seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A baby seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Never use a rear-facing child-restraint system on the front passenger seat protected by an air bag.

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

The child-restraint system can be hit by the deploying air bag and knocked out of position. A child in the child-restraint system could be seriously injured or killed. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position if installing a rear-facing child-restraint system on the front passenger seat is unavoidable. When installing a rear-facing child-restraint system, make sure that the air bag system is turned off.



Front-facing type

M WARNING

Never install a front-facing child seat in the wrong seat position.

Installing a front-facing child seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A front-facing child seat installed in the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable.

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.

Make sure that the front passenger air bag deactivation switch is in the OFF position.



Junior Seat Installation Position

A junior seat is used in the front-facing position only.

We recommend the use of the junior seat with backrest to allow simple adjustment of the shoulder belt position and to give your child the best protection.

When using a junior seat, always install the vehicle head restraint to the seat where the junior seat is installed.



Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for junior seat installation position (Page 3-48).

▲ WARNING

Always install a junior seat in the correct seat position.

Installing a junior seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A junior seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable.

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.

Make sure that the front passenger air bag deactivation switch is in the OFF position.

3 - 47

Child-Restraint System Suitability for Various Seat Positions Table

(Europe and countries conforming to the UN-R 16 regulation)

Provided information in the table shows your child-restraint system suitability for various seating position. For installation suitability of other manufacturer child-restraint system, carefully consult the manufacturer's instructions which accompany the child-restraint system.

When installing a child-restraint system, the following points must be observed:

- · Always remove the head restraint before installing a child-restraint system. However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed. In addition, always use a tether strap and attach it securely. Refer to How to Use the Head Restraints on page 3-34.
- · When installing a child-restraint system to the front passenger seat, adjust the seat slide position as far back as possible. Adjust the seat bottom (height adjustable seat bottom) to the highest position so that the seat belt can securely fasten the child-restraint system.

Refer to How to Use the Front Seats on page 3-25.

- · When it is difficult to install a child-restraint system to the front passenger seat, or the seat belt cannot be secured to the child-restraint system, perform the following operations to adjust the seat holding the child-restraint system so that the seat belt can be secured completely to it.
 - · Move the seat forward or back.
 - Move the seatback forward or back.
 - · Move the seat upward or downward. (Vehicles with height adjustment function)
- When installing a child-restraint system to the rear seat, adjust the front seat position so that the front seat does not contact the child-restraint system. Refer to How to Use the Front Seats on page 3-25.
- · A child-restraint system with a support leg cannot be installed on the rear centre seat position.
- · When installing a child-restraint system equipped with a tether, remove the head restraint.
- Refer to How to Use the Head Restraints on page 3-34.
- An i-Size child-restraint system refers to a child-restraint system which has acquired i-Size category certification for the UN-R 129 regulation.

When installing a child-restraint system to the rear seat, refer to the child-restraint system manufacturer's instructions and the Using ISOFIX Anchor on page 3-57.

Europe and other countries (Except Taiwan)

C 1	Passe	enger				
Seating posi- tion	Airbag activat- ed	Airbag de-acti- vated	Rear (Left)	Rear (Centre)	Rear (Right)	
Seating position suitable for uni- versal belted (Yes/No)	Yes (UF)	Yes (U)	Yes (U)	Yes (U)	Yes (U)	
i-Size seating position (Yes/No)	No	No	Yes (i-U)	No	Yes (i-U)	
Largest suitable rearward facing fixture (R1)	No	No	Yes (IL)	No	Yes (IL)	
Largest suitable rearward facing fixture (R2)	No	No	Yes (IL)	No	Yes (IL)	
Largest suitable rearward facing fixture (R2X)	No	No	Yes (IL)	No	Yes (IL)	
Largest suitable rearward facing fixture (R3)	No	No	Yes (IL)	No	Yes (IL)	
Largest suitable forward facing fixture (F2)	No	No	Yes (IUF)	No	Yes (IUF)	
Largest suitable forward facing fixture (F2X)	No	No	Yes (IUF)	No	Yes (IUF)	
Largest suitable forward facing fixture (F3)	No	No	Yes (IUF)	No	Yes (IUF)	
Largest suitable lateral facing fixture (L1)	No	No	No	No	No	
Largest suitable lateral facing fixture (L2)	No	No	No	No	No	
Largest suitable booster fixture (B2)	No	No	Yes (IUF)	No	Yes (IUF)	

Child-restraint Systems

Seating posi-	Passe	enger			Rear (Right)	
tion	Airbag activat- ed	Airbag de-acti- vated	Rear (Left)	Rear (Centre)		
Largest suitable booster fixture (B3)	No	No	Yes (IUF)	No	Yes (IUF)	
Non i-size compatible with a support leg (Yes/No)	Yes ^{*1}	Yes	Yes	No	Yes	
Lower ISOFIX anchorages but without Top Tether (Yes/No)	No	No	No	No	No	

U = Suitable for "universal" category restraints approved for use in all mass groups.

UF = Suitable for forward-facing "universal" category restraints approved for use in all mass groups.

IUF = Suitable for ISOFIX forward child restraints systems of universal category approved for use in the mass group.

L = Suitable for particular child restraints given on attached list. These restraints may be of the "specific vehicle", "restricted" or "semi-universal" categories. *2

IL = Suitable for particular ISOFIX child restraint systems (CRS) given in the attached list. These ISOFIX CRS are those of the "specific vehicle", "restricted" or "semi-universal" categories. *2

i-U = Suitable for i-Size "universal" Child Restraint Systems forward and rearward facing.

i-UF = Suitable for forward-facing i-Size "universal" Child Restraint Systems only.

Yes = Child-restraint system can be secured on the seat.

No = Child-restraint system cannot be secured on the seat, or there is no fixture.

X = Child-restraint system cannot be installed.

- ^{*}1 Child restraint system can only be installed in the forward-facing position.
- ^{*}2 A Mazda genuine child-restraint system can be installed. Regarding child-restraint systems which can be installed, refer to Types of Child-restraint Systems on page 3-42 or the accessories catalog.

The manufacturer will also recommend a suitable ISOFIX child restraint system.

For this, your vehicle and the seat must be listed on the child restraint system manufacturer's model list. For more information, contact the child restraint system manufacturer or visit the manufacturer's website.

Taiwan Only ISOFIX anchor-secured child-restraint systems

			Seat Positions				
Mass group	Size Class	Fixture	Vehicle ISOFIX po- sitions Rear seat (out- board)	Rear seat (centre)	Front passenger seat (outboard)		
	F	ISO/L1	X	X	X		
Carrycot	G	ISO/L2	X	X	X		
Currycot		(1)	X	X	X		
GROUP 0 Up to 10	E	ISO/R1	IL	X	X		
kg (up to 22 lb)		(1)	X	X	X		
	E	ISO/R1	IL	X	X		
GROUP 0+ Up to	D	ISO/R2	IL	Х	X		
13 kg (up to 29 lb)	С	ISO/R3	IL	X	X		
		(1)	X	X	X		
	D	ISO/R2	IL	Х	Х		
	С	ISO/R3	IL	Х	X		
GROUP 1 9 kg —	В	ISO/F2	IUF	Х	Х		
18 kg (20 lb — 40 lb)	B1	ISO/F2X	IUF	Х	Х		
,	А	ISO/F3	IUF	Х	X		
		(1)	X	X	X		
GROUP 2 15 kg — 25 kg (33 lb — 55 lb)		(1)	X	Х	Х		
GROUP 3 22 kg — 36 kg (48 lb — 79 lb)		(1)	Х	Х	Х		

⁽¹⁾ For the CRS which do not carry the ISO/XX size class identification (A to G), for the applicable mass group, the car manufacturer shall indicate the vehicle specific ISOFIX child-restraint system(s) recommended for each position.

Key of letters to be inserted in the above table:

IUF = suitable for ISOFIX forward child-restraints systems of universal category approved for use in this mass group.

IL = suitable for particular ISOFIX child-restraint systems (CRS).

These ISOFIX CRS are those of the "specific vehicle", "restricted" or "semi-universal" categories.

A Mazda genuine child-restraint system can be installed. Regarding child-restraint systems which can be installed, refer to the accessories catalog.


Child-restraint Systems

X = ISOFIX position not suitable for ISOFIX child-restraint systems in this mass group and/or this size class.

i-Size child-restraint systems

Vehicles with the mark indicated on the front surface of a rear seatback are i-Size child-restraint certified.

Marking location

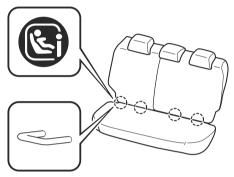

An i-Size child-restraint system can be installed to the specified seat as follows:

	Front passenger seat	Rear seat (outboard)	Rear seat (centre)
i-Size child-restraint sys- tems	X	X	Х

Key of letters to be inserted in the above table:

X = Seating position not suitable for i-Size "universal" child-restraint systems.

NOTE

Vehicles with the mark indicated on the front surface of a rear seatback are not i-Size child-restraint certified.

Seat belt-secured child-restraint systems

System group	Age group	Weight group	Child-restraint system type	Front pas- senger seat	Rear seat (out- board)	Rear seat (centre)
GROUP 0	Up to about 9 months old	Up to 10 kg (up to 22 lb)	Baby seat	Х	U	C
GROUP 0+	Up to about 2 years old	Up to 13 kg (up to 29 lb)	Baby seat	Х	U	U
GROUP 1	About 8 months to 4 years old	9 kg— 18 kg (20 lb— 40 lb)	Child seat	Х	U	U

System group	Age group	Weight group	Child-restraint system type	Front pas- senger seat	Rear seat (out- board)	Rear seat (centre)
GROUP 2	About 3 to 7 years old	15 kg— 25 kg (33 lb— 55 lb)	Junior seat	Х	U	U
GROUP 3	About 6 to 12 years old	22 kg— 36 kg (48 lb— 79 lb)	Junior seat	Х	U	U

Key of letters to be inserted in the above table:

U = Suitable for "universal" category restraints approved for use in this mass group.

UF = Suitable for forward-facing "universal" category restraints approved for use in this mass group.

X = Seat position not suitable for children in this mass group.

(Other countries)


- · Regarding child-restraint systems which can be installed to your Mazda, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- · A child-restraint system with a support leg cannot be installed on the rear centre seat position.
- · Please comply with the legal regulations concerning the use of child-restraint systems in your country.
- For the CRS which do not carry the ISO/XX size class identification (A to G), for the applicable mass group, the child seat manufacturer shall indicate the vehicle specific ISOFIX child-restraint systems recommended for each position.

Anchor Bracket Overview

Anchor brackets for securing child-restraint systems are equipped in the vehicle. Locate each anchor position using the illustration. To install a child-restraint system, if the seat is equipped with a head restraint, remove it. Always follow the instruction manual accompanying the child-restraint system.

Anchor bracket location

Use the indicated anchor bracket locations when installing a child-restraint system equipped with a tether.

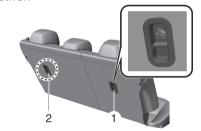

- 1. For right
- 2. For left

Warnings and Cautions for Using the Anchor Bracket


M WARNING

Always attach the tether strap to the correct tether anchor position. Attaching the tether strap to the incorrect tether anchor position is dangerous. In a collision, the tether strap could come off and loosen the child-restraint system. If the child-restraint system moves it could result in death or injury to the child.

Always remove the head restraint and install child-restraint system (except when installing a booster seat).

Installing a child-restraint system without removing the head restraint is dangerous. The child-restraint system cannot be installed correctly which may result in death or injury to the child in a collision.

If the top tether strap does not reach the anchor bracket, purchase and use an extension strap provided by the CRS manufacturer.

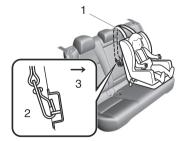

- 1. Tether strap
- 2. Anchor bracket
- 3. Forward

Always install the head restraint and adjust it to the appropriate position after removing the child-restraint system (except when installing a booster seat).

Driving with the head restraint removed is dangerous as impact to the occupant's head cannot be prevented during emergency braking or in a collision, which could result in a serious accident, injury or death. Refer to How to Use the Head Restraints on page 3-34.

How to Use the Seat Belt

When installing a child-restraint system, follow the installation instructions included with the product. In addition, remove the head restraint. However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed.

Warnings and Cautions for Using the ISOFIX Anchor

MARNING

Follow the manufacturer's instructions for the use of the child-restraint system.

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure the child-restraint system is properly secured in place according to the child-restraint system manufacturer's instructions.

Make sure the child-restraint system is properly secured.

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Follow the child-restraint system manufacturer's instructions on belt routing to secure the seat just as you would with a child in it so that nobody is tempted to put a child in an improperly secured seat later on. When not in use, remove it from the vehicle or fasten it with a seat belt, or attach it to BOTH ISOFIX anchors for ISOFIX child-restraint systems.

Make sure there are no seat belts or foreign objects near or around the ISOFIX child-restraint system.

Not following the child-restraint system manufacturer's instructions when installing the child-restraint system is dangerous. If seat belts or a foreign object prevent the child-restraint system from being securely attached to the ISOFIX anchors and the child-restraint system is installed improperly, the child-restraint system could move in a sudden stop or collision causing serious injury or death to the child or other occupants. When installing the child-restraint system, make sure there are no seat belts or foreign objects near or around the ISOFIX anchors. Always follow the child-restraint system manufacturer's instructions.

How to Use the ISOFIX Anchor

Installation on rear seat

- First, adjust the front seat to allow clearance between the child-restraint system and the front seat.
 - Refer to How to Use the Front Seats on page 3-25.
- Make sure the seatback is securely latched by pushing it back until it is fully locked.
- Remove the cover of the child-restraint system's ISOFIX anchors to verify the locations of the ISOFIX anchors.



1. ISOFIX anchor

NOTE

- The ISOFIX anchors marking on the cover indicates the position of the ISOFIX anchors for the attachment of a child-restraint system.
- 4. Remove the head restraint.
 However, when installing a backless booster seat, always install the vehicle head restraint to the seat where the backless booster seat is installed.

Refer to How to Use the Head Restraints on page 3-34.

- Secure the child-restraint system using BOTH ISOFIX anchors, following the child-restraint system manufacturer's instruction. Pull on the child-restraint to be sure both anchors are engaged.
- 6. If your child-restraint system came equipped with a tether, that means it is very important to properly secure the tether for child safety. Please carefully follow the child-restraint system manufacturer's instructions when installing tethers.

MEMO

4 Opening/closing

Key	4-4
K	Key 4-4
V	Varnings and Cautions for Using
	he Key 4-4
F	How to Use the Key4-5
	Convenient Ways to Use the
	Key4-8
IN.	4-0
Adva	nced Keyless Entry
	m4-9
A	Advanced Keyless Entry
S	ystem* 4-9
V	Varnings and Cautions for Using
	he Advanced Keyless Entry
	ystem4-9
	low to Use the Advanced Keyless
	ntry System 4-10
	Titry System 4-10
Dooi	rs4-11
	Varnings and Cautions When
	Jsing the Doors4-11
	low to Use the Door Lock
	4-12
	Convenient Ways to Use the
L	Doors 4-16
Lifter	ate 4-17
	Varnings and Cautions for Using
tl	he Liftgate 4-17
	How to Use the Liftgate 4-18
H	
F P	ower Liftgate*4-19
F P	
⊢ P V	ower Liftgate*4-19
H P V tl	ower Liftgate*4-19 Varnings and Cautions for Using

Convenient Ways to Use the Power Liftgate4-2
Bonnet 4-2-
Warnings and Cautions for Using
the Bonnet4-2
How to Use the Bonnet 4-2-
Windows 4-2
Power Windows4-2
Warnings and Cautions for Using
the Power Windows4-2
How to Use the Power
Windows4-2
Convenient Ways to Use the
Power Windows4-2
Sunroof 4-2
Sunroof
Sunroof*4-2 Warnings and Cautions for Using
Sunroof4-2 Warnings and Cautions for Using the Sunroof4-3
Sunroof*4-2 Warnings and Cautions for Using
Sunroof*
Sunroof
Sunroof*
Sunroof*
Sunroof*
Sunroof
Sunroof*
Sunroof*
Sunroof*

Warnings and Cautions for Using	How to Use the Theft-Deterrent
the Theft-Deterrent System	System 4-36
4-35	

MEMO

Key

All doors, fuel-filler flap, and the liftgate can be locked/unlocked by pressing the key button.
The key must be carried by the driver.

Key Code Number Plate

An auxiliary key can be ordered based on the key code number printed on the key code number plate at an expert repairer (we recommend an Authorised Mazda Repairer).

- Store the key code number plate in a safe place (not in the vehicle).
- · Do not divulge the key number to others.



Warnings and Cautions for Using the Key

♠ WARNING

Do not leave the key in your vehicle with children and keep them in a place where your children will not find or play with them.

Leaving children in a vehicle with the key is dangerous. This could result in someone being badly injured or even killed. Children may find these keys to be an interesting toy to play with and could cause the power windows or other controls to operate, or even make the vehicle move.




- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- ➤ Because the key (transmitter) uses low-intensity radio waves, it may not function correctly under the following conditions:
 - The key (transmitter) is carried with communication devices such as cellular phones.
 - ➤ The key (transmitter) contacts or is covered by a metal object.
 - ➤ The key (transmitter) is near electronic devices such as personal computers.
 - Non-Mazda genuine electronic equipment is installed in the vehicle.
 - There is equipment which discharges radio waves near the vehicle.

- ➤ The key (transmitter) may consume battery power excessively if it receives high-intensity radio waves. Do not place the key (transmitter) near electronic devices such as televisions or personal computers.
- ➤ To avoid damage to the key (transmitter), DO NOT:
 - > Drop the key (transmitter).
 - > Get the key (transmitter) wet.
 - Disassemble the key (transmitter).
 - Expose the key (transmitter) to high temperatures on places such as the instrument panel, under direct sunlight.
 - Expose the key (transmitter) to any kind of magnetic field.
 - ➤ Place heavy objects on the key (transmitter).
 - ➤ Put the key (transmitter) in an ultrasonic cleaner.
 - ➤ Put any magnetized objects close to the key (transmitter).

How to Use the Key

When pressing the button, the operation indicator light turns on.

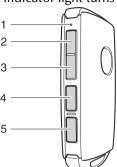

- 1. Operation indicator light
- 2. Lock button (□)
- 3. Unlock button (☐)
- 4. Power liftgate button (♥ or ♥)*
- 5. Intrusion sensor cancel button $\binom{\triangleright}{OFF}^*$

Lock button ☐

Press the lock button with all of the following conditions met.

- · The vehicle power is switched OFF.
- · (Except European models)
 All the doors are closed.

The doors, liftgate, fuel-filler flap are locked, the hazard warning lights operate 1 time.

(With the advanced keyless function (Except European models))

À beep sound will be heard once.

NOTE

 The headlights turn on/off by operating the transmitter. Refer to Convenient Ways to Use the Light Switch on page 5-73

· (European models)

When any door or the liftgate is open and the lock button is pressed, the closed doors can be locked. After that, any other open door or the liftgate can be locked by closing them.

- To prevent the transmitter from being left in the vehicle, make sure that the driver carries the transmitter when locking the doors with any door open.
- (With theft-deterrent system)
 If the lock button is pressed with all the doors and liftgate closed, the hazard warning lights will flash and the theft-deterrent system is armed.

(Vehicles with double locking system) How to Activate the system

Press the lock button, and then press the lock button again within 3 seconds.

The doors and liftgate cannot be opened from the inside the vehicle, and the hazard warning lights operate 1 time

The indicator light illuminates for about 3 seconds to indicate that the system has been activated.

How to Deactivate the System Unlock the driver's door or start the engine.

MARNING

Never activate the double locking system with passengers, especially children, still inside the vehicle.

Activating the system with passengers, especially children, still inside the vehicle is dangerous. The passengers cannot open the doors from inside. They would be trapped and subjected to extreme temperatures. This could result in serious injuries or even death.

Unlock button 🗖

Press the unlock button while the vehicle power is switched OFF.

(Without 2-step unlocking function) The doors, liftgate, fuel-filler flap are unlocked, the hazard warning lights

operate 2 times. (With 2-step unlocking function)

The driver's door and the fuel-filler flap are unlocked, the hazard warning lights operate 2 times, and then a warning sound is activated 2 times.

Press the unlock button again within 5 seconds to unlock the other doors.

(With the advanced keyless function)

The hazard warning lights operate and a sound is activated 2 times at the same time. The initial setting is off depending on the market.

NOTE

(With the advanced keyless function)

The sound can be switched on/off using the Mazda Connect.
Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

(With 2-step unlocking function)
 The 2-step unlocking function can be set to on/off using Mazda Connect.

 Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

Power liftgate button $\stackrel{\sim}{\supset}$ or $\stackrel{\stackrel{\sim}{\supset}_*}{\bowtie}$

Opening the liftgate

Press the power liftgate button on the key for about 1 second or longer when all of the following conditions are met.

· The vehicle power is switched OFF.

After the hazard warning lights flash 2 times is activated, the liftgate fully opens.

Closing the liftgate

Press the power liftgate button for about 1 second or longer when the vehicle power is switched OFF. After the hazard warning lights flash 2 times is activated, the liftgate fully closes.

If the power liftgate button is pressed while the liftgate is opening/closing automatically, a warning sound is activated and the liftgate stops. When pressing the power liftgate button again, the liftgate moves in the reverse direction.

Intrusion sensor cancel button off

Press the intrusion sensor cancel button within 20 seconds after pressing the LOCK button.
The hazard warning lights flash 3 times and the intrusion sensor (part of the theft-prevention system) is deactivated.
Switch the vehicle power from ON to OFF to reset.

Operational Range

The system operates only when the driver is in the vehicle or within operational range while the key is being carried.


Starting the engine

NOTE

 Starting the engine may be possible even if the key is outside of the vehicle and extremely close to a door and window, however, always start the engine from the driver's seat. If the vehicle is started and the key is not in the vehicle, the vehicle will not restart after it is shut off and the vehicle power is switched off.


The luggage compartment is out of the assured operational range, however, if the key (transmitter) is operable the engine will start.

With the advanced keyless function

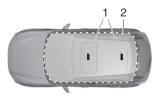

- 1. Interior aerial
- 2. Operational range

Without the advanced keyless function

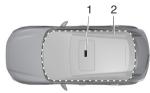

- 1. Interior aerial
- 2. Operational range

NOTE

The engine may not start if the key is placed in the following areas:

- · Around the instrument panel
- In the storage compartments such as the glove compartment or the centre console

Convenient Ways to Use the Key

Sound function

The function that the sound notifies you of unlocking/locking can be turned on or off by changing the setting in Mazda Connect. The volume of the warning sound can also be changed.

Auto re-lock function

All doors, the liftgate, and the fuel-filler flap are locked automatically if any of the following operations are not performed within about 30 seconds after they are unlocked by pressing the unlock button.

- · Open any door or liftgate.
- The vehicle power is switched to any position other than off.

NOTE

The time until the door is automatically locked can be changed.
Refer to the Settings section in the Mazda Connect Owner's Manual.

Power Saving Function

By turning on the power saving function of the key, the advanced keyless entry and the function to start the engine without removing the key from a pocket or purse/case are turned off, and the battery power consumption of the key can be reduced.

The remote control function is still operational by pressing a button on the key even while the power saving function is turned on. However, the remote operation indicator light does not turn on or flash.

Turning on the power saving function

- Press the lock button on the key 4 times within 3 seconds.
 The key operation indicator light turns on.
- Press the lock button for 2 seconds or longer while the key operation indicator light is turned on.
 The hazard warning lights and a warning sound operate 1 time, and the power saving function is turned on.

Turning off the power saving function

- Press the lock button on the key 4 times within 3 seconds.
 The key operation indicator light turns on.
- Press the lock button for 2 seconds or longer while the key operation indicator light is turned on. The hazard warning lights and a warning sound operate 1 time, and the power saving function is turned off.

Advanced Keyless Entry System*

The advanced keyless function allows you to lock/unlock the doors, liftgate, and fuel-filler flap, open the liftgate, and starting the engine while carrying the key.

Warnings and Cautions for Using the Advanced Keyless Entry System

MARNING

Radio waves from the key may affect medical devices such as pacemakers. Before using the key near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the key will affect the device.


How to Use the Advanced Keyless Entry System

The system operates only when the driver is in the vehicle or within operational range while the key is being carried.

NOTE

- · The advanced keyless entry system functions can be deactivated to prevent any possible adverse effect on a user wearing a pacemaker or other medical device. If the system is deactivated, you will be unable to start the engine by carrying the key. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details. If the advanced keyless entry system has been deactivated, you can start the engine by following the procedure indicated when the key battery goes dead. Refer to Starting the engine with a dead key battery on page 8-10.
- The advanced keyless entry system does not operate while the power saving function is operating.
- When the battery power is low, or in places where there are high-intensity radio waves or noise, the operational range may become narrower or the system may not operate.

Locking/Unlocking Using Touch Sensor

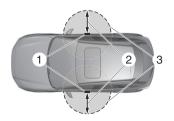

- 1. Exterior aerial
- 2. 80 cm (31 in)
- 3. Operational range

NOTE

- The system may not operate if you are too close to the windows or door handles, or liftgate.
- If the key is left in the following areas and you leave the vehicle, the doors may be locked depending on the radio wave conditions even if the key is left in the vehicle.
 - · Around the instrument panel
 - In the storage compartments such as the glove compartment or the centre console
 - Next to a communication device such as a mobile phone

Locking Using Door-Lock Switch/ Unlocking Using Electric Liftgate Opener



- 1. Exterior aerial
- 2. 80 cm (31 in)
- 3. Operational range

Warnings and Cautions When Using the Doors

MARNING

Opening/closing of the doors must be done by an adult.

If a person's hand, foot, or neck is pinched in a door, it could result in serious injury.

Do not drive the vehicle with the door-ajar warning light/indication turned on/displayed.

Otherwise, the door may open unexpectedly and result in an accident.

Always take all children and pets with you or leave a responsible person with them.

Leaving a child or a pet unattended in a parked vehicle is dangerous. In hot weather, temperatures inside a vehicle can become high enough to cause brain damage or even death.

Do not leave the key in your vehicle with children and keep them in a place where your children will not find or play with them.

Leaving children in a vehicle with the key is dangerous. This could result in someone being badly injured or even killed.

Always close all the windows and sunroof, lock the doors, fuel-filler flap, and liftgate and take the key with you when leaving your vehicle unattended.

Leaving your vehicle unlocked is dangerous as children could lock themselves in a hot vehicle, which could result in death. Also, a vehicle left unlocked becomes an easy target for thieves and intruders.

After closing the doors and the liftgate, always verify that they are securely closed.

Doors and the liftgate not securely closed are dangerous, if the vehicle is driven with a door and the liftgate not securely closed, the door and the liftgate could open unexpectedly resulting in an accident.

Always confirm the safety around the vehicle before opening a door and the liftgate.

Suddenly opening a door and the liftgate is dangerous. A passing vehicle or a pedestrian could be hit and cause an accident.

A CAUTION

Always confirm the conditions around the vehicle during strong winds or when parked on an incline before opening/closing the doors. Neglecting to check the conditions around the vehicle could result in fingers getting caught in the door or a passing pedestrian being hit, resulting in an unexpected accident or injury.

Doors

How to Use the Door Lock

To prevent the key from being left in the vehicle, make sure that you carry the key before locking.

Locking/Unlocking Using the Key


Refer to How to Use the Key on page 4-5.

Locking/Unlocking Using the Touch Sensor (Vehicles with Advanced Keyless Function)

Locking

Touch the sensing area of the door lock touch sensor when all of the following conditions are met.

- · The vehicle power is switched OFF.
- · All the doors are closed.
- The key is on the sensing area of the touch sensor

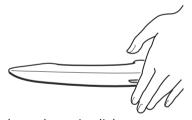

The hazard warning lights operate once, and all the doors, liftgate, fuel-filler flap are locked.

(Except European models)
A beep sound operates one time.

Unlocking

When all of the following conditions are met, touch the sensing area of the door release touch sensor.

- · The vehicle power is switched OFF.
- · The driver's door is locked.
- Three seconds or longer have passed since the doors were locked.

• The key is on the sensing area of the touch sensor.



Type A

(Unlocking from the driver's door)
The following locations are unlocked by touching the sensing area of the door release touch sensor of the driver's door.

- · Driver's door
- · Fuel-filler flap

When unlocking, the hazard warning lights operate two times.

(Except European models)

A beep sound operates two times. (Unlocking from the front passenger's door)

The following locations are unlocked by touching the sensing area of the door release touch sensor of the front passenger's door.

- · All doors
- · Fuel-filler flap
- Liftgate

When unlocking, the hazard warning lights operate two times.

(Except European models)

A beep sound operates two times.

Type B

The following locations are unlocked by touching the sensing area of the door release touch sensor.

- · All doors
- · Fuel-filler flap

· Liftgate

When unlocking, the hazard warning lights operate two times.

(Except European models)

A beep sound operates two times.

NOTE

- (With 2-step unlocking function)
 The location to be unlocked can be changed.
 - Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The beep sound can be turned on/off using Mazda Connect.
 Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The system may not operate normally under the following conditions.
 - You touch the sensing area of the door lock touch sensor and the sensing area of the door release touch sensor at the same time.



- · You touch the sensing area of the touch sensor while wearing gloves.
- Foreign matter such as water, ice, snow, or dirt is on the detection area of the touch sensor.
- The system may operate if the outer side door handle of a front door is splashed with water by a car wash or rain while the key is in the operation range.

Locking/Unlocking Using the Door-Lock Switch

Door-lock switch on driver's door The following locations are locked/unlocked.

- · All doors
- · Liftgate
- · Fuel-filler flap



- 1. Unlocking
- 2. Locking

(Except European models)

To lock, press the lock side of the door-lock switch with all the doors closed. If any door is open, the door-lock switch will not function even if it is pressed to the lock side.

Locking the doors from the outside using the door-lock switch (European models)

Doors can be locked from the outside of the vehicle without using the transmitter.

You can lock the doors by pressing the lock side of the door-lock switch with all of the following conditions met, and then closing all the doors.

- · The vehicle power is switched OFF.
- · Any door is open.
- · The key is not in the vehicle.

Doors

After locking by pressing the door-lock switch, closing all the doors with the transmitter left in the vehicle unlocks all doors, the liftgate, and the fuel-filler flap.

Door-lock switch on the liftgate (With the advanced keyless function)

With power liftgate

Refer to How to Use the Power Liftgate on page 4-21.

Without power liftgate

When all of the following conditions are met, press the door-lock switch and then close the liftgate.

- · You are carrying the transmitter.
- · The vehicle power is switched OFF.
- · All the doors are closed.



All the doors, liftgate, fuel-filler flap, and the fuel-filler flap are locked. (With theft-deterrent system

When the liftgate closes, the hazard warning lights operate 1 time.

(European models))

(With theft-deterrent system (Except European models))

When locking, a beep sound operates 1 time.

When the liftgate closes, the hazard warning lights operate 1 time.

(Without theft-deterrent system (European models))

When locking, the hazard warning lights operate 1 time.

(Without theft-deterrent system (Except European models))


When locking, the hazard warning lights and a beep sound operate 1 time.

NOTE

- To prevent the transmitter from being left in the vehicle, make sure that the driver carries the transmitter when locking the doors with any door open.
- After locking by pressing the door-lock switch and if the liftgate is closed last with the transmitter left in the vehicle, the liftgate will not be locked.

Locking/Unlocking Using the Door-Lock Knob

Locking/unlocking only the door where the door-lock knob is operated.

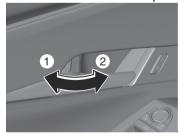

- 1. Unlocking
- 2. Locking

Locking the doors from the outside using the door-lock knob

A door can be locked by turning the inside lock knob to the lock side and closing the door.

NOTE

- After locking by pressing the door-lock switch, if the liftgate is closed last with the transmitter left in the vehicle, the liftgate will not be locked.
- In the following cases, the doors are unlocked to prevent the key from being left in the vehicle.
 - When the vehicle power is switched to ACC or ON, and the lock knob on the driver's door is turned to the lock side while either a door or the liftgate is open.
 - · The key is left in the vehicle.

Locking Using the Vehicle Speed Sensing Auto Door Lock Function

- All the doors, the liftgate, the fuel-filler flap are locked when the vehicle speed exceeds 20 km/h (12 mph).
- All the doors, the fuel flap, and the liftgate are unlocked when the vehicle power is switched OFF.

Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).


Using the Child Safety Lock

This will prevent the doors from being opened by a child while seated in the rear seat.

- 1. Open the rear door.
- 2. Remove the auxiliary key.
- 3. Turn the child safety lock to the lock side.

When the rear door is closed, it cannot be opened using the interior door handle.

When not using the child safety lock, turn the child safety lock to the unlock side.

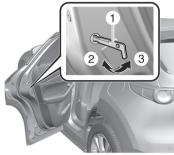

- 1. Auxiliary key
- 2. Locking
- 3. Unlocking

Impact detection door-lock unlock system

This system automatically unlocks all the doors and the liftgate (vehicles without power liftgate) if the vehicle receives a strong impact such as from an accident. By unlocking automatically, occupants can be rescued from outside the vehicle. If the vehicle receives a strong impact while the vehicle power is switched ON, all the doors and the liftgate (vehicles without power liftgate) will be unlocked automatically after about 6 seconds.

The doors and liftgate may not unlock depending on how an impact is applied, the force of the impact, and other conditions of the accident.

Convenient Ways to Use the Doors

Proximity Type Auto Lock Function (With the Advanced Keyless Function)

You can set the vehicle to lock automatically when you leave the detection area of the touch sensor. Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

A sound is activated one time when closing all the doors and the liftgate while the key is being carried. If you proceed to leave the operation range, the vehicle is locked automatically (it is locked automatically after about 30 seconds even if you do not leave the operation range).

NOTE

However, they are not locked under the following conditions.

- · Another key is left inside the vehicle.
- · The driver's door is already locked.

Auto re-lock function

The vehicle is locked automatically by the auto re-lock function if you do not perform any of the following operations within about 30 seconds after touching the detection area of the touch sensor or unlocking with the key.

- · Open any door or liftgate.
- · Switch the vehicle power to a position other than OFF.

The time required until automatic locking occurs can be changed. Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

Warnings and Cautions for Using the Liftgate

♠ WARNING

Do not allow people to ride in the luggage compartment.

During sudden braking or a collision, the person in the luggage compartment could be seriously injured or killed.

Always drive the vehicle with the liftgate closed.

If the liftgate opens while driving the vehicle, the luggage may fall out and lead to an accident. In addition, If the vehicle is driven with the liftgate open, the exhaust gas may penetrate the cabin and it could cause carbon monoxide poisoning.

Do not stack or leave loaded luggage unsecured in the luggage compartment.

Otherwise, the luggage may move or collapse, resulting in injury or an accident. In addition, do not load luggage higher than the seatbacks. It may affect the side or rear field of view. If the air bags deploy, the cargo may scatter which could result in serious injury or death.

After closing the liftgate, make sure that it is securely closed.

Driving the vehicle with the liftgate not fully closed is dangerous as a person or an object could fall out of the vehicle resulting in a serious accident, injury, or death.

Do not drive the vehicle with the liftgate-ajar warning indication displayed.

Otherwise, the liftgate may open unexpectedly and result in an accident.

A CAUTION

- ➤ Remove snow or ice on the liftgate before opening the liftgate. When opening the liftgate, it could slam shut by the weight of snow or ice, resulting in injury.
- ➤ Be careful when opening/closing the liftgate during strong winds. Otherwise, it could close suddenly resulting in injury.
- ➤ When opening the liftgate, fully open it and make sure that it stays open. If the liftgate is only opened partially, it could slam shut by vibration or wind gusts resulting in injury.
- Stop the engine when loading or unloading cargo in the luggage compartment. Otherwise, you could get burned by the heat of the exhaust gas.
- ➤ Be careful not to pinch your hand when closing the liftgate. It may result in an injury if your hand is caught.
- ➤ Be careful not to apply excessive force to the damper stay on the liftgate such as by putting your hand on the stay. Otherwise, the damper stay may bend and affect the liftgate operation.




- 1. Damper stay
- ➤ Do not modify or replace the liftgate damper stay. Consult an Authorised Mazda Dealer if a liftgate damper stay is deformed or damaged for reasons such as a collision or if there is some other problem.

How to Use the Liftgate

Opening the Liftgate

Using the electric liftgate opener

- 1. Stop the vehicle.
- 2. Unlock the door.
- 3. Press the electric liftgate opener.

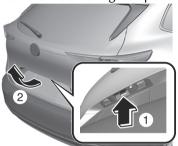

4. Lift the liftgate.

NOTE

(Vehicles with advanced keyless function)

The liftgate can be opened even while the doors and the liftgate are locked by pressing the electric liftgate opener while carrying the key.

Closing the Liftgate

- 1. Lower the liftgate slowly using the liftgate recess.
- 2. Press down the liftgate to close.



Power Liftgate

The liftgate opens and closes automatically by operating the key switch or various switches for the vehicle.

Liftgate easy closure

The easy closure assists in closing the liftgate.

When you close the liftgate to the position where it is slightly ajar, it will finish closing automatically to the fully-closed position.

NOTE

If the liftgate is opened/closed repeatedly in a short period of time, the easy closure function may not operate. Wait for about 2 seconds and then try again.

Jam-safe function

The jam-safe function detects a person or obstruction to prevent the person or object from getting caught in the liftgate.

When the jam-safe function detects that a person or object is caught in the liftgate while it is opening/closing automatically, a warning sound is activated and the liftgate moves in the reverse direction, and then stops.

NOTE

The jam-safe function does not operate while the easy closure is operating (from ajar position to fully closed position).

Warnings and Cautions for Using the Power Liftgate

▲ WARNING

Always check the safety of the area around the liftgate before operating/closing it automatically.

Not checking the safety of the area around the liftgate for people before opening/closing the liftgate automatically is dangerous. A person could become caught between the liftgate and an obstruction while it is opening automatically or between the liftgate and vehicle while it is closing automatically, resulting in an accident and serious injury.

Keep your eyes on the liftgate when opening/closing the liftgate automatically.

If there is an obstruction, the liftgate may not fully close due to the jam-safe function. Driving the vehicle with the liftgate not fully closed is dangerous as a person or an object could fall out of the vehicle resulting in a serious accident, injury, or death.

Do not let a child operate the switches.

If the liftgate is opened/closed unexpectedly by a child operating the switches mistakenly, the child or another occupant's head or hands could get caught, resulting in an accident and serious injury.

Always make sure that there is no person or obstruction around the liftgate before closing the liftgate.

The jam-safe function detects a person or obstruction to prevent the person or object from getting caught. The system may not detect certain objects obstructing the liftgate depending on the way they are positioned and their shape. Be especially careful with children. It may result in an injury if a finger gets pinched.

When closing a liftgate, always keep hands and fingers away from the liftgate.

Placing hands or fingers around a liftgate is dangerous because the liftgate closes automatically from the near-shut position, which could cause hands and fingers to be pinched and injured.


A CAUTION

➤ When closing the liftgate, make sure that there is no foreign matter around the striker. If foreign matter is obstructing the striker, the liftgate may not close properly.



- 1. Striker
- ➤ Do not install accessories to the liftgate other than those specified. Otherwise, the liftgate may not open/close automatically resulting in a malfunction.

- ➤ When the liftgate is switched from automatic to manual operation, the liftgate may open/close unexpectedly depending on its position, resulting in injury.
- ➤ Be careful that your fingers do not get pinched in a closing liftgate. The liftgate finishes closing to the fully-closed position automatically after you close it to where it is slightly ajar. If your fingers get pinched, it may result in an injury.
- Do not apply excessive force to the liftgate when closing it. Otherwise, it could cause a system malfunction.
- Sensors are installed on both ends of the liftgate. Be careful not to allow the sensors to be scratched or damaged by sharp objects.
 Otherwise, the liftgate may no longer open/close automatically. In addition, if the sensor is damaged while the liftgate is closing automatically, the liftgate stops.

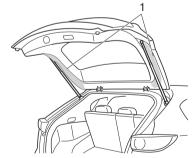

1. Sensor

How to Use the Power Liftgate

NOTE

- In the following cases, the liftgate may not open/close automatically.
 - · The vehicle is parked on an incline.
 - · There are strong winds.
 - · There is snow on the liftgate.
- If the lead-acid battery is disconnected with the liftgate open, the liftgate cannot be opened/ closed automatically. To restore the automatic open/close function, fully close the liftgate manually.
- If the system detects weight such as that caused by a snow-laden liftgate when it is opened automatically, a warning sound is activated, the liftgate moves in the reverse direction, and then stops.
- If the shift lever/selector lever is shifted to another position and the vehicle is moved while the liftgate is opening/closing automatically, a warning sound is activated and the liftgate closes.
- The liftgate may close unexpectedly after opening it on slopes. Always make sure that the liftgate is stationary.

When the following operations are performed, the hazard warning lights flash 2 times, a warning sound is activated, and the liftgate automatically opens/closes fully.

Opening/closing using the power liftgate button (or or on the key

Press the power liftgate button on the key for 1 second or longer when all of the following conditions are met.

· The vehicle power is switched OFF.

· The vehicle is stopped.

Opening/closing the liftgate using the power liftgate switch

Press the power liftgate switch for 1 second or longer when all of the following conditions are met.

- · The vehicle is stopped.
- (Automatic transmission vehicle)
 The vehicle power is switched to a position other than ON, or the selector lever is in the P position with the vehicle power switched ON
- · (Manual transmission vehicle)
 The vehicle power is switched to a position other than ON, or the shift lever is in the N position with the vehicle power switched ON and the parking brake applied.
- All the doors are unlocked (when opening)



Opening the liftgate using the electric liftgate opener

Press the electric liftgate opener when all of the following conditions are met.

- · (Automatic transmission vehicle)
 The vehicle power is switched to a position other than ON, or the selector lever is in the P position with the vehicle power switched ON
- · (Manual transmission vehicle)
 The vehicle power is switched to a position other than ON, or the shift lever is in the N position with the

vehicle power switched ON and the parking brake applied.

· All the doors are unlocked.

NOTE

The liftgate can be opened even while the doors are locked by pressing the electric liftgate opener while carrying the key.

Closing the liftgate using the power liftgate close switch

Press the power liftgate close switch when all of the following conditions are met.

- (Automatic transmission vehicle)
 The vehicle power is switched to a position other than ON, or the selector lever is in the P position with the vehicle power switched ON
- · (Manual transmission vehicle)
 The vehicle power is switched to a position other than ON, or the shift lever is in the N position with the vehicle power switched ON and the parking brake applied.

(With the advanced keyless function)



(Without the advanced keyless function)



NOTE

To prevent the transmitter from being left in the vehicle, make sure that the driver carries the transmitter when operating the power liftgate close switch.

Closing using the door-lock switch on the liftgate (With the advanced keyless function)

Press the door-lock switch on the liftgate when all of the following conditions are met.

- · You are carrying the key.
- · The vehicle power is switched OFF.
- · All the doors are closed.
- The liftgate is not automatically opening/closing.



The doors, liftgate, and the fuel-filler flap are locked, the hazard warning lights operate 1 time.

Then, the liftgate fully closes automatically.

Stopping the liftgate

If any of the following operations is done, the automatic opening and closing of the liftgate stops.

- The liftgate open/close switch on the key is pressed.
- · The power liftgate switch is pressed.
- The electric liftgate opener is pressed.
- The power liftgate close switch is pressed.
- · (With the advanced keyless function)

The door-lock switch on the liftgate is pressed.

NOTE

The liftgate cannot be stopped when it is half open or lower. It moves in the close direction by the load weight of the liftgate itself.

Moving the liftgate again

If any of the following operations is done, the liftgate moves in the direction opposite to the direction it was moving before it stopped.

- The liftgate open/close switch on the key is pressed for 1 second or longer.
- The power liftgate switch is pressed for about 1 second or longer.
- The electric liftgate opener is pressed.
- The power liftgate close switch is pressed.

(With the advanced keyless function) When the door-lock switch on the liftgate is pressed, the liftgate automatically fully closes.

Convenient Ways to Use the Power Liftgate

The liftgate fully-open position can be changed according to the height of a garage.

Set the desired fully-open position of the liftgate at the position where it is open more than halfway. The liftgate fully-open position cannot be changed to a position that is less than half open.

Changing the fully-open position

- 1. Stop the liftgate at the desired position.
- Press and hold the power liftgate close switch for 3 seconds or longer.

A warning sound is activated 2 times to indicate that the position change has been completed.

Resetting the set fully-open position

- 1. Open the liftgate.
- Press and hold the power liftgate close switch for 7 seconds or longer.

A warning sound is activated 3 times to indicate that the reset has been completed.

NOTE

After 3 seconds have passed since the switch was pressed, a warning sound is activated 2 times to indicate that the liftgate fully-open position has changed. Continuously press the switch for 7 seconds to complete the reset.

Bonnet

Warnings and Cautions for Using the Bonnet

♠ WARNING

Always check that the bonnet is closed and securely locked

A bonnet that is not closed and securely locked is dangerous as it could fly open while the vehicle is moving and block the driver's vision which could result in a serious accident.

Do not drive the vehicle with the Bonnet-Ajar warning indication displayed

Otherwise, the Bonnet may open unexpectedly and result in an accident.

A CAUTION

- ➤ When closing the bonnet, do not push it excessively such as by applying your weight. Otherwise, the bonnet could be deformed.
- ➤ Be careful not to pinch your hand when closing the bonnet. It may result in an injury if your hand is caught.
- ➤ When inspecting the engine compartment, do not misplace any tools or cloth. Misplacing any tools or cloth may result in engine damage, cause a fire, or cause an unexpected accident.


How to Use the Bonnet

Opening the Bonnet

 With the vehicle parked, pull the release handle to unlock the bonnet.



Insert your hand into the bonnet opening, slide the latch lever in the direction of the arrow as shown in the illustration, and lift up the bonnet.

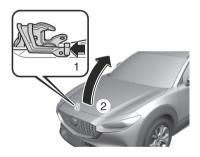

3. Grasp the support rod in the padded area and secure it in the support rod hole indicated by the arrow to hold the bonnet open.



Closing the Bonnet



(e-SKYACTIV X)

Do not close the bonnet with the engine cover open. Otherwise, the engine cover may fall and cause injury. For the opening/closing of the engine cover, refer to the "Checking the Inspection Locations and Inspection Items" 9-25.

 Check under the bonnet area to make certain all filler caps are in place and all loose items (e.g. tools, oil containers, etc.) have been removed. 2. Lift the bonnet, grasp the padded area on the support rod, and secure the support rod in the clip. Verify that the support rod is secured in the clip before closing the bonnet.



3. Lower the bonnet slowly to a height of about 20 cm (7.9 in) above its closed position and then let it drop.

Power Windows

The power window has two functions.

Auto-opening/Closing Function

The windows can be fully opened and closed without having to continue operating the power window switch.

Jam-Safe Function

If a foreign object is detected between the window and the window frame while the window is closing, the window stops closing and opens slightly.

NOTE

- The power windows cannot be opened from the outside of the vehicle if the power window initialization has not been completed.
 - Refer to Initializing the Power Window on page 8-36.
- · (A window cannot be closed)

 If the jam-safe function has operated and the window cannot be closed, check around the window frame for a foreign object.

If there is no foreign object around the window frame, forcibly close a window using the following procedure.

- After switching the vehicle power OFF, wait for 45 seconds or longer.
- 2. Switch the vehicle power ON.
- Operate the switch in the direction to close the window until the jam-safe function operates and the window stops. Repeat this operation a total of 5 times.
- 4. Continue pulling up the switch to fully close the window.

Warnings and Cautions for Using the Power Windows

MARNING

When closing the windows, be careful that a passenger's hand or head does not get pinched.

Be especially careful with children. If a hand or head becomes pinched, it could cause serious injury.

Do not let a child operate the power window switches.

If a hand or head becomes pinched, it could cause serious injury.

Keep the power window lock switch in the lock position when carrying a child.

If the child operates the power window switch incorrectly and a hand or head becomes pinched, it could cause serious injury.

Make sure that there is nothing blocking the window just before it closes completely or while the power window switch is being pulled.

The jam-safe function may not be able to prevent the window from closing completely. If a finger gets pinched, it could cause serious injury.

Do not let a child put a hand or head out of the window.

Be careful not to let a child put a hand or head out of the window while driving the vehicle. If the child's hand or head hits something outside the vehicle or sudden braking is applied, it could result in serious injury or death.


How to Use the Power Windows

Opening/Closing the Windows


- 1. Switch the vehicle power ON.
- 2. Operate the power window switch. To fully open the window automatically, press the power window switch all the way down and then release it.

 To fully close the window automatically, pull the power window switch all the way up and then release it.

Driver's Seat

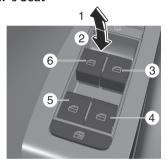

Front passenger/rear passenger seat

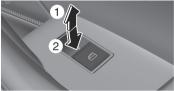


- 1. Close
- 2. Open
- 3. Front passenger's window
- 4. Right rear window
- 5. Left rear window
- 6. Driver's window

Locking the Front Passenger/Rear Seat Windows

Switch the power window lock switch on the driver's door to the lock position.

The driver's switch can be operated, however, the front passenger/rear passenger switches are no longer operable.

The passenger windows may be opened or closed using the master control switches on the driver's door. Press the power window lock switch again to the unlock position to cancel it.

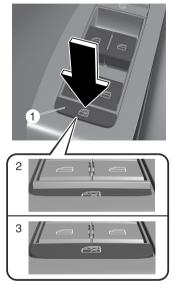

- 1. Power window lock switch
- 2. Lock position
- 3. Unlock position


Convenient Ways to Use the Power Windows

Operation Function After Vehicle power is Switched OFF

All the windows can be opened and closed for approximately 40 seconds after the vehicle power is switched to ACC or OFF with all doors closed. If any door is opened, the power window will stop operating.

Sunroof*

The sunroof can be opened or closed when operating the overhead tilt/slide switch at the front seats.

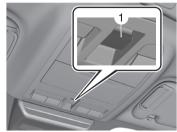

1. Tilt/slide switch

Jam-safe function

If foreign matter caught between the sunroof and the window frame is detected while it is closing automatically, the sunroof stops and opens partway.

NOTE

- Before leaving the vehicle or washing your Mazda, make sure the sunroof is completely closed so that water does not get inside the cabin area.
- After washing your Mazda or after it rains, wipe the water off the sunroof before operating it to avoid water penetration which could cause rust and water damage to your headliner.
- The jam-safe function may operate under the following conditions.
 - A strong impact is detected while the sunroof is closing automatically.
 - The sunroof is closing automatically during very low temperatures.

- In the event the jam-safe function activates and the sunroof cannot be closed automatically, press the tilt/ slide switch and the sunroof will close.
- When the jam-safe function is inoperable, the sunroof initial setting is not performed.
 Refer to Initializing the sunroof on page 8-37.

Warnings and Cautions for Using the Sunroof

♠ WARNING

Do not let passengers stand up or extend part of the body through the open sunroof while the vehicle is moving.

Extending the head, arms, or other parts of the body through the sunroof is dangerous. The head or arms could hit something while the vehicle is moving. This could cause serious injury or death.

Never allow children to play with the tilt/slide switch.

The tilt/slide switch would allow children to operate the sunroof unintentionally, which could result in serious injury if a child's hands, head or neck becomes caught by the sunroof.

Make sure the opening is clear before closing the sunroof.

A closing sunroof is dangerous. The hands, head, or even neck of a person, especially a child, could be caught in it as it closes, causing serious injury or even death.

Make sure nothing blocks the sunroof just before it reaches the fully closed position.

Blocking the sunroof just before it reaches the closed position is dangerous.

In this case, the jam-safe function cannot prevent the sunroof from closing. If fingers are caught, serious injuries could occur.

A CAUTION

- > Do not sit on or put heavy items on the area where the sunroof opens and closes. Otherwise, the sunroof could be damaged.
- Do not open or close the sunroof forcefully during freezing temperatures or snowfall. Otherwise, the sunroof could be damaged.
- The sunshade does not tilt. To avoid damaging the sunshade, do not push it up.
- Do not close the sunshade while the sunroof is opening. Trying to force the sunshade closed could damage it

How to Use the Sunroof

Operating the Sunshade

The sunshade can be opened and closed by hand.

The sunshade opens at the same time as the sunroof slides open, but it must be closed by hand.



Tilt Operation

The rear of the sunroof can be tilted open to provide more ventilation. When the sunroof is already slid open and you want to tilt it open, first close the sunroof and then do a tilt operation.

- 1. Switch the vehicle power ON.
- Press the tilt/slide switch.
 The rear side of the front glass panel of the sunroof opens upwards.



3. Press the tilt/slide switch forward. The sunroof closes.



To stop it partway, press the tilt/slide switch.

Slide Operation

When the sunroof is already tilted open and you want to slide it open, first close the sunroof and then do a slide operation.

- 1. Switch the vehicle power ON.
- 2. Press the tilt/slide switch rearward. The sunroof opens.



3. Press the tilt/slide switch forward. The sunroof closes.



To stop it partway, press the tilt/slide switch.

Security System

Mazda cannot guarantee the immobilizer and the theft-deterrent system's operation if the system has been modified or if any add-on equipment has been installed.

Warnings and Cautions for Using the Security System



To avoid damage to the vehicle, do not modify the system or install any add-on equipment to the immobilizer and the theft-deterrent systems or the vehicle.

Immobilizer System

The immobilizer system allows the engine to start only with a key the system recognises.

NOTE

- The keys carry a unique electronic code. For this reason, and to assure your safety, obtaining a replacement key requires security validation, this will add some delays in supplying a replacement key. They are only available through an expert repairer (we recommend an Authorised Mazda Repairer).
- Always keep a spare key in case one is lost. If a key is lost, consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
- If you lose a key, an expert repairer (we recommend an Authorised Mazda Repairer) will reset the electronic codes of your remaining keys and immobilizer system. Bring all the remaining keys to an expert repairer (we recommend an Authorised Mazda Repairer) to reset.

Warnings and Cautions for Using the Immobilizer System

A CAUTION

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- To avoid damage to the key, do not:
 - ➤ Drop the key.
 - Get the key wet.
 - Expose the key to any kind of magnetic field.
 - Expose the key to high temperatures on places such as the instrument panel, under direct sunlight.
- ➤ If the engine does not start with the correct key, and the security indicator light keeps illuminating or flashing, the system may have a malfunction. Consult an expert repairer (we recommend an Authorised Mazda Repairer).

How to Use the Immobilizer System

NOTE

- The engine may not start and security indicator light may illuminate or flash if the key is placed in an area where it is difficult for the system to detect the signal, such as on the instrument panel or in the glove compartment. Move the key to a location within the signal range, switch the vehicle power off, and then restart the engine.
- · Signals from a TV or radio station, or from a transceiver or mobile telephone could interfere with your immobilizer system. If you are using the proper key and the engine fails to start, check the security indicator light.

Arming

The system is armed when the vehicle power is switched from ON to off.

The security indicator light in the instrument cluster flashes every 2 seconds until the system is disarmed.

Disarming

The system is disarmed when the vehicle power is switched ON with the correct programmed key. The security

indicator light illuminates for about 3 seconds and then turns off. If the engine does not start with the correct key, and the security indicator light remains illuminated or flashing, try the following:

Make sure the key is within the operational range for signal transmission. Switch the vehicle power off, and then restart the engine. If the engine does not start after 3 or more

tries, contact an expert repairer (we recommend an Authorised Mazda Repairer).

Theft-Deterrent System*

If the theft-deterrent system detects an inappropriate entry into the vehicle or the intrusion sensor detects movement in the vehicle which could result in the vehicle (with the intrusion sensor) or its contents being stolen, the alarm alerts the surrounding area of an abnormality by sounding the siren/horn and flashing the hazard warning lights.

The system will not function unless it's properly armed. So when you leave the vehicle, follow the arming procedure correctly.

Intrusion sensor*

The intrusion sensor uses ultrasonic waves to detect movement inside the vehicle and to raise an alert of an intrusion into the vehicle.

The intrusion sensor detects certain kinds of movement inside the vehicle, however, it may also respond to phenomenon outside the vehicle such as vibrations, loud noise, wind, and air currents.

Warnings and Cautions for Using the Theft-Deterrent System

A CAUTION

In order for the intrusion sensor to operate appropriately, be aware of the following:

- Do not hang clothing or objects from a head restraint or a coat hook.
- Return the extension sunvisors to their original positions.
- ➤ Do not blind the intrusion sensor by covering it or placing objects over it.
- ➤ Do not allow the intrusion sensor to get soiled or wipe it with a liquid.
- Do not shock or cause an impact to the intrusion sensor or the intrusion sensor bezel.
- ➤ Do not install seats that are not Mazda genuine products.
- ➤ To prevent obstruction of intrusion sensor, do not place objects or cargo near the intrusion sensor that are higher than the head restraints.



1. Intrusion sensor and intrusion sensor bezel

How to Use the Theft-Deterrent System

How to Arm the System

 Close the windows and the sunroof securely.

NOTE

(With the intrusion sensor)

Even with a window or the sunroof* open, the system can be armed, however, leaving the windows or the sunroof* even partially open can invite theft, and wind blowing into the vehicle could trigger the alarm. The intrusion sensor function can also be cancelled.

Refer to Cancelling the Intrusion Sensor (With the Intrusion Sensor).

- 2. Switch the vehicle power OFF.
- 3. Make sure the bonnet, the doors, and the liftgate are closed.
- 4. Press the lock button on the transmitter. The hazard warning lights will flash once. The following method will also arm the theft-deterrent system:

(European models)

Press the door-lock switch while any door is open and then close all of the doors.

(With the advanced keyless function)

Touch the sensing area of the door lock touch sensor.

The security indicator light 🖼 in the instrument cluster flashes twice per second for 20 seconds.

5. After 20 seconds, the system is fully armed.

NOTE

- · The theft-deterrent system can also be armed by activating the auto relock function with all the doors. the liftgate and the bonnet closed. Refer to Transmitter on page 4-5.
- · The system will disarm if one of the following operations takes place within 20 seconds after pressing the lock button:
 - Unlocking any door.
 - Opening any door.
 - · Opening the bonnet.
 - · Switching the vehicle power ON. To rearm the system, do the arming procedure again.
- · When the doors are locked by pressing the lock button on the transmitter while the theft-deterrent system is armed, the hazard warning lights will flash once to indicate that the system is armed.

Operation

Siren/Horn triggering conditions

The siren/horn sounds intermittently and the hazard warning lights flash for about 30 seconds when the system is triggered by any one of the following:

With the intrusion sensor

- Unlocking a door with the auxiliary key, door lock switch, or an inside door-lock knob.
- · Forcing open a door, the bonnet or the liftgate.
- · Opening the bonnet by operating the bonnet release handle.
- · Switching the vehicle power ON without using the push button start.
- · The intrusion sensor detects a movement in the vehicle.

The system will be triggered again (up to 10 times) if one of the above conditions remains

 Disconnecting the lead-acid battery terminal (the hazard warning lights do not flash).

The system will be triggered about 10 times.

Without the intrusion sensor

- Unlocking a door with the auxiliary key, door lock switch, or an inside door-lock knob.
- · Forcing open a door, the bonnet or the liftgate.
- Opening the bonnet by operating the bonnet release handle.
- · Switching the vehicle power ON without using the push button start.

If the system is triggered again, the lights and horn will activate until the driver's door or the liftgate is unlocked with the transmitter.

NOTE

- The liftgate does not open while the theft-deterrent system is operating.
- If the lead-acid battery goes dead while the theft-deterrent system is armed, the siren/horn will activate and the hazard warning lights will flash when the lead-acid battery is charged or replaced.

Cancelling the Intrusion Sensor (With the Intrusion Sensor)

If the theft deterrent system has been armed while any of the following conditions are present, cancel the intrusion sensor to prevent the alarm from triggering unnecessarily.

- Leaving the vehicle with a movable object, passengers or pets remaining inside.
- Leaving an object inside the vehicle that can roll around, such as when the vehicle is placed on a tilting,

- unstable surface when being shipped.
- Hanging small objects/accessories in the vehicle, hanging clothing on a coat hook, or placing other items which can move easily inside the vehicle.
- · Parking in an area where there is strong vibration or loud noise.
- · When using a high pressure or automatic car wash.
- Continuous shock and vibration from hail or thunder and lightning is transmitted to the vehicle.
- Doors are locked with a window or the sunroof* left open.
- An accessory heater or device that produces moving air and vibration operates while the theft deterrent system is armed.

NOTE

If any door or the liftgate remains closed for 30 seconds, all the doors and the liftgate automatically re-lock and the theft deterrent system arms even if a window and the sunroof* is left open.

To cancel the intrusion sensor, press the intrusion sensor cancel button on the transmitter within 20 seconds after pressing the lock button.

The hazard warning lights will flash 3 times.

NOTE

To reactivate the intrusion sensor, turn off the armed theft-deterrent system and then rearm it.

The intrusion sensor is operational when the theft-deterrent system is armed. To cancel the intrusion sensor, press the intrusion sensor cancel button each time the theft-deterrent system is armed.

To Stop the Alarm

A triggered alarm can be turned off using any one of the following methods:

- Pressing the unlock button on the transmitter.
- Starting the engine with the push button start.
- · (With the advanced keyless function)
 - Touching the sensing area of the door release touch sensor.
 - · Pressing the electric liftgate opener while the key is being carried.

The hazard warning lights will flash twice.

To Turn Off an Armed System

An armed system can be turned off using any one of the following methods:

- Pressing the unlock button on the transmitter.
- · Starting the engine with the push button start.
- · (With the advanced keyless function)

Touching the sensing area of the door release touch sensor.

The hazard warning lights will flash twice.

NOTE

When the doors are unlocked by pressing the unlock button on the transmitter while the theft-deterrent system is turned off, the hazard warning lights will flash twice to indicate that the system is turned off.

5 Driving

Mirrors 5-8
Mirrors5-8
Warnings and Cautions for Using
the Mirrors5-8
How to Use the Outside
Mirrors5-9
Convenient Ways to Use the
Outside Mirrors 5-10
Warnings and Cautions for the
Rearview Mirror5-12
How to Use the Rearview
Mirror5-12
Convenient Ways to Use the
Rearview Mirror5-13
Push Button Start 5-14
Push Button Start 5-14
Warning and Cautions for Using
the Push Button Start5-14
How to Use the Push Button
Start5-15
Mazda M Hybrid5-17
Mazda M Hybrid (e-SKYACTIV G,
e-SKYACTIV X)5-17
Warning and Cautions for Using
the Mazda M Hybrid5-18
How to Use the Mazda M
Hybrid 5-21
i stan
i-stop
i-stop*5-22
How to Use the i-stop5-22

Cylinder Deactivation5-2	25
Cylinder Deactivation*5-2	
How to Use the Cylinder	
Deactivation5-2	25
Instrument Cluster 5-2	26
Instrument Cluster 5-2	26
Speedometer5-2	26
Tachometer5-2	
Multi-information Display 5-2	28
How to Use the Multi-	
information Display 5-2	29
Convenient Ways to Use the	
Multi-information Display 5-3	30
Odometer/Trip Meter5-3	30
How to Use the Odometer/Trip	
Meter 5-3	31
Engine Coolant Temperature	
Gauge5-3	31
Fuel Gauge5-3	32
Instrument Panel	
Illumination5-3	
How to Use the Instrument Pane	اد
Illumination5-3	33
Outside Temperature	
Display5-3	34
Maximum Driving Distance	
Display5-3	34
Average Fuel Economy	
Display5-3	35
How to Use the Average Fuel	
Economy Display 5-3	35
Instantaneous Fuel Economy	
Display5-3	36

Deceleration Regeneration Charge Display (e-SKYACTIV G, e-SKYACTIV X)
Active Driving Display 5-39
Active Driving Display* 5-39 Warnings and Cautions for Using the Active Driving Display5-40 Convenient Ways to Use the Active Driving Display 5-41
Shift Lever 5-42
Warning and Cautions for Using the Shift Lever5-42 How to Use the Shift Lever (Manual Transmission) 5-42
Selector Lever5-44
Warning and Cautions for Using the Selector Lever
Steering Shift Switches5-51
Warnings and Cautions for Using the Steering Shift Switches
How to Use the Steering Shift Switches (Automatic
Transmission)5-52
Gear Shift Indicator (GSI) 5-56 Gear Shift Indicator (GSI)* 5-56 Warning and Cautions for Using the Gear Shift Indicator

Foot Brake5-57
Warning and Cautions for Using
the Foot Brake 5-57
Electric Parking Brake (EPB) 5-58
Electric Parking Brake (EPB)
5-58
Warning and Cautions for Using the Electric Parking Brake
(EPB) 5-58
How to Use the Electric Parking Brake (EPB)5-59
Convenient Ways to Use the
Electric Parking Brake (EPB)
5-61
Brake Override System5-63
Brake Override System 5-63
Warning and Cautions for Using
the Brake Override System
5-63
How to Use the Brake Override System5-64
System 5-64
AUTOHOLD
AUTOHOLD 5-65 AUTOHOLD 5-65
Warning and Cautions for Using
the AUTOHOLD 5-65
How to Use the
AUTOHOLD 5-66
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
Hill Launch Assist (HLA) 5-68
Hill Launch Assist (HLA)5-68
Warning and Cautions for Using
the Hill Launch Assist
(HLA)5-68

Emergency Signal System	
(ESS)5-69	
Emergency Signal System	
(ESS)5-69	
Light Switch5-70	
Light Switch5-70	
Warnings and Cautions for Using	
the Light Switch 5-70	
How to Use the Light	
Switch5-71	
Convenient Ways to Use the Light	
Switch5-73	
How to Use the Fog Light	
Switch*5-74	
Direction Indicator Lever5-75	
How to Use the Direction	
Indicator Lever5-75	
Windscreen Wiper/Washer	
Switch 5-76	
Windscreen Wiper/Washer	
Switch5-76	
Warning and Cautions for Using	
the Windscreen Wiper/Washer	
Switch5-76	
How to Use the Windscreen	
Wiper/Washer Switch5-77	
How to Use the Rear Wiper/	
Washer Switch5-80	
Rear Window Defogger	
Switch 5-81	
Rear Window Defogger	
	- 1
Switch5-81	
Switch5-81 Warnings and Cautions for Using	
Switch5-81 Warnings and Cautions for Using the Rear Window Defogger	

] H [V	How to Use the Rear Window Defogger Switch Mirror Defogger* How to Use the Mirror Defogger Windscreen Wiper De-icer*	5-8 .5-8 .5-8	33
ŀ	How to Use the Windscreen Wiper De-icer		
ŀ	ard Warning Lights Hazard Warning Lights How to Use the Hazard Warr Lights	5-8 ning	35 5
	1 How to Use the Horn		
/ (\ t	lock Brake System (ABS) Antilock Brake System (ABS)	5-8 ing	37
Tract	tion Control System (TCS)		• • •
1 (\ t (Traction Control System (TCS)	5-8 ing 5-8 itrol	38 8
(DSC	amic Stability Control C) Dynamic Stability Control DSC)	5-9	

Warning and Cautions for Using the Dynamic Stability Control (DSC)
Off-Road Traction Assist5-92 Off-Road Traction Assist* 5-92
Warning and Cautions for Using the Off-Road
Traction Assist5-92 How to Use the Off-Road
Traction Assist5-93
Drive Selection 5-94
Drive Selection*5-94
Warning and Cautions for Using
the Drive Selection5-94
How to Use the Drive Selection5-95
i-ACTIV AWD5-96
i-ACTIV AWD5-96
Warnings and Cautions for Using the i-ACTIV AWD 5-96
Power Steering
Tyre Pressure Monitoring System (TPMS) 5-98
Tyre Pressure Monitoring System
(TPMS)*5-98
Warning and Cautions for Using
the Tyre Pressure Monitoring
System (TPMS)5-98
How to Use the Tyre Pressure
Monitoring System (TPMS)
5-100

Petrol Particulate Filter 5-102
Petrol Particulate Filter (e-
SKYACTIV X) 5-102
Refuelling 5-103
Warnings and Cautions for When
the Refuelling 5-103
Refuelling5-104
Fuel Requirements 5-106
Warnings and Cautions for Using
the Fuel Requirements 5-107
Deposit Cleaner 5-107
Warnings and Cautions for Using
the Deposit Cleaner5-108
How to Use the Deposit
Cleaner5-108
Emission Control System 5-109
Warnings and Cautions for Using
the Emission Control
System 5-109
Warnings and Cautions for Engine
Exhaust (Carbon
monoxide) 5-110
i-ACTIVSENSE5-111
i-ACTIVSENSE5-111
Warnings and Cautions for Using
the i-ACTIVSENSE5-111
Active Safety Technology 5-112
Pre-crash Safety
Technology5-113
i-ACTIVSENSE Status Symbol
(Warning/Risk Avoidance
Support System) 5-113
How to Use the i-ACTIVSENSE
mute switch* 5-114

Forward Sensing Camera	Adaptive LED Headlights
(FSC) 5-115	(ALH)5-132
Forward Sensing Camera	Adaptive LED Headlights
(FSC)* 5-115	(ALH)*5-132
	Warnings and Cautions for Using
Radar Sensors5-119	the Adaptive LED Headlights
Radar Sensors*5-119	(ALH)5-133
Radai Selisois	How to Use the Adaptive LED
	Headlights (ALH)5-134
Ultrasonic Sensors5-123	
Ultrasonic Sensors* 5-123	Lane Departure Warning System
	(LDWS)5-135
Cameras 5-125	Lane Departure Warning System
Cameras* 5-125	(LDWS)*5-135
	Warnings and Cautions for Using
Driver Monitoring Camera 5-127	the Lane Departure Warning
Driver Monitoring Camera*	System (LDWS)5-135
5-127	How to Use the Lane Departure
	Warning System (LDWS)5-136
Adaptive Front Lighting System	
(AFS) 5-128	Blind Spot Monitoring (BSM) 5-137
Adaptive Front Lighting System	Blind Spot Monitoring (BSM)*
(AFS)*5-128	5-137
How to Use the High Adaptive	Warnings and Cautions for Using
Front Lighting System (AFS)	the Blind Spot Monitoring
5-128	(BSM)5-137
	How to Use the Blind Spot
High Poom Control System	Monitoring (BSM)5-138
High Beam Control System (HBC)5-129	
High Beam Control System	Traffic Sign Recognition System
(HBC)*5-129	(TSR) 5-140
Warnings and Cautions for Using	Traffic Sign Recognition System
the High Beam Control System	(TSR)*5-140
(HBC)5-130	Warnings and Cautions for Using
How to Use the High Beam	the Traffic Sign Recognition
Control System (HBC)5-131	System (TSR) 5-140
2331 3/312 (1122)	How to Use the Traffic Sign
	Recognition System (TSR) 5-141
	, , , , ,

Distance & Speed Alert (DSA)	Rear Cross Traffic Alert (RCTA)
Distance & Speed Alert (DSA)*	Rear Cross Traffic Alert (RCTA)* 5-156 Warnings and Cautions for Using the Rear Cross Traffic Alert (RCTA) 5-156 How to Use the Rear Cross Traffic Alert (RCTA)5-157
Driver Attention Alert (DAA)5-146 Driver Attention Alert (DAA)*	Mazda Radar Cruise Control (MRCC)
Driver Monitoring (DM)5-149 Driver Monitoring (DM)*5-149 Warnings and Cautions for Using the Driver Monitoring (DM)5-150 How to Use the Driver Monitoring (DM)5-150 Front Cross Traffic Alert (FCTA)	Cruising & Traffic Support (CTS)
Front Cross Traffic Alert (FCTA)*	Lane-keep Assist System (LAS)

Adjustable Speed Limiter	Secondary Collision
(ASL) 5-184	Reduction
Adjustable Speed Limiter	Secondary Col
(ASL)*5-184	Reduction*
Warnings and Cautions for Using	Warnings and 0
the Adjustable Speed Limiter	the Secondary
(ASL)5-184	Reduction
How to Use the Adjustable Speed	How to Use the
Limiter (ASL)5-185	Collision Redu
Intelligent Speed Assistance	Cruise Control
(ISA)5-187	Cruise Control
Intelligent Speed Assistance	Warnings and 0
(ISA)* 5-187	the Cruise Cor
Warnings and Cautions for Using	How to Use the
the Intelligent Speed Assistance	Control
(ISA) 5-187	
How to Use the Intelligent Speed	Rear View Monito
Assistance (ISA) 5-188	Rear View Moi
	Warnings and 0
Smart Brake Support (SBS) 5-190	the Rear View
Smart Brake Support (SBS)*	How to Use the
5-190	Monitor
Warnings and Cautions for Using	
the Smart Brake Support	Parking Sensor
(SBS)5-191	Parking Sensor
How to Use the Smart Brake	Warnings and
Support (SBS)5-192	the Parking Ser
	How to Use the
360° View Monitor5-197	Sensor
360° View Monitor*5-197	
Warnings and Cautions for Using	Winter Driving
the 360° View Monitor 5-200	Winter Driving
How to Use the 360° View	Snow Tyres
Monitor 5-202	Tyre Chains
Convenient Ways to Use the 360°	1,10 01141113
View Monitor 5-210	

Secondary Collision
Reduction 5-211
Secondary Collision
Reduction* 5-211
Warnings and Cautions for Using
the Secondary Collision
Reduction 5-211
How to Use the Secondary
Collision Reduction 5-212
Cruise Control5-213
Cruise Control*5-213
Warnings and Cautions for Using
the Cruise Control 5-213
How to Use the Cruise
Control 5-214
Rear View Monitor5-217
Rear View Monitor* 5-217
Warnings and Cautions for Using
the Rear View Monitor5-218
How to Use the Rear View
Monitor 5-219
Parking Sensor5-222
Parking Sensor*5-222
Warnings and Cautions for Using
the Parking Sensor 5-222
How to Use the Parking Sensor5-223
Sensor5-223
Winter Driving5-228
Winter Driving5-228
Snow Tyres 5-229
Tyre Chains 5-229

Mirrors

Before driving, adjust the inside and outside mirrors.

Warnings and Cautions for Using the Mirrors



Be sure to look over your shoulder before changing lanes.

Changing lanes without taking into account the actual distance of a vehicle in the convex mirror is dangerous. You could have a serious accident. What you see in the convex mirror is closer than it appears.

Always return the outside mirrors to the driving position before you start driving.

Driving with the outside mirrors folded in is dangerous. Your rear view will be restricted, which could lead to an unexpected accident.

(Vehicles with electric retractable mirrors)

Do not touch the outside mirrors while they are folding in and out.

Touching an outside mirror while it is folding in or out is dangerous. Your hands could get caught which could cause an injury or the door mirror could be damaged.

Use the switch to set the outside mirrors.

Setting the outside mirrors manually is dangerous. The outside mirrors will not lock into place, which could obstruct visibility.

Always operate the electric retractable mirrors with the vehicle parked in a safe place.

Operating the electric retractable mirrors while driving is dangerous. Wind pressure could damage the outside mirrors, making it impossible to return them to the driving position and to see behind you.

Do not adjust the outside mirrors while driving the vehicle.

Adjusting the outside mirrors while driving the vehicle is dangerous as doing so could distract your attention from the road ahead and lead to an accident



(Vehicles with electric retractable mirrors)

Operate the folding switch to fold in or out the outside mirrors. If you unfold the outside mirrors manually, they will not be in a secured position and you will be unable to check the view to the rear of the vehicle.

How to Use the Outside Mirrors

Folding in and out the outside mirrors

Manual type

Fold the outside mirror rearward until it is flush with the vehicle.



Electric type

- 1. Switch the vehicle power ACC or ON.
- 2. Press the folding mirror button to fold the mirror in. Press again to fold out.




Adjusting the Outside Mirror Angle

- Switch the vehicle power ACC or ON.
- Press the select button on the side of the outside mirror to be adjusted.

The indicator light turns on.



Press the adjustment switch to adjust the angle of the outside mirror.

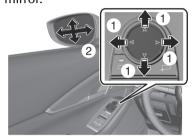

4. Press the select button on the side of the outside mirror that has been adjusted.

The indicator light turns off.

Convenient Ways to Use the Outside Mirrors

Driving Position Memory*

The angle of the outside mirrors can be programmed to the Driving Position Memory.

Refer to Driving Position Memory on page 3-27.

Auto fold function*

When locking/unlocking the doors while the vehicle power is switched OFF, the outside mirrors automatically fold in and out.

When the outside mirrors are folded in and the vehicle power is switched ON, or the engine is started, the outside mirrors fold out automatically.

Turn the auto fold function on using the centre display.

Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

If you press the folding switch to fold in the outside mirrors, they will not fold out automatically when unlocking the doors. Press the folding switch to fold out the outside mirrors.

Operation function after engine is stopped

The angle of the outside mirrors can be adjusted and they can be folded in and out for about 40 seconds after the vehicle power is switched from ON to OFF.

Auto tilt-down outside mirror function for reversing*

The outside mirrors can be set to tilt downwards automatically when reversing the vehicle. When the vehicle is finished reversing, the outside mirrors return to their original angle.

- Press the select switch on the side of the door mirror to be tilted down.
 - Turn on the indicator light of the select switch.
- Shift the shift lever/selector lever to the R position.
 The outside mirror on the side where you pressed the select switch will tilt downward.

NOTE

When any of the following condition is met, the outer mirrors return to their normal positions.

- The vehicle power is switched to a position other than ON.
- The shift lever/selector lever is shifted to a position other than R.
- · The select switch is pressed again.


Automatic glare prevention function*

In conjunction with the glare prevention function of the auto-type rearview mirror, only the driver's side outside mirror reduces the light from the headlights of on-coming vehicles.

Driver's side wide-angle mirror*

A wide-angle mirror has two curvatures on its surface and it is divided into an outer and an inner sections by a boundary line. The inner section is a standard convex mirror. The outer section provides a larger area of visibility with the same area.

This combination improves visibility when changing lanes.

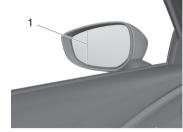

1. Region line Objects visible outer and inner sections of the wide-angle mirror are at different distances. Objects that displayed in the outer section are actually farther away than the inner section.

Warnings and Cautions for the Rearview Mirror


• WARNING

Do not stack luggage higher than the seatback.

Loading luggage higher than the seatback is dangerous. The rearview mirror visibility may be obstructed, which may result in a collision with another vehicle when changing lanes.

How to Use the Rearview Mirror

Move and adjust the rearview mirror body.

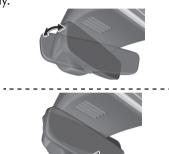

Convenient Ways to Use the Rearview Mirror

Glare prevention function

Prevents glare from the headlights of rear on-coming vehicles.

Manual type

Push the antidazzle lever forward for day driving. Pull it back to reduce glare of headlights from vehicles at the rear.



Automatic type

Automatically operates when the vehicle power is switched ON and the shift lever/selector lever is in a position other than R.

Push Button Start

Press the push button start to start/ stop the engine or to switch the vehicle power position (OFF/ACC/ON).



Vehicle power position

OFF

All electrical accessories cannot be used.

ACC

Some electrical accessories such as audio can be used.

ON

All electrical accessories can be used.

Warning and Cautions for Using the Push Button Start

MARNING

Before leaving the driver's seat, always switch the vehicle power off, set the parking brake, and make sure the selector lever is in the P position. Leaving the driver's seat without switching the vehicle power off, setting the parking brake, and shifting the selector lever to the P position is dangerous. Unexpected vehicle movement could occur which could result in an accident. In addition, if vour intention is to leave the vehicle for even a short period, it is important to switch the vehicle power position to OFF, as leaving it in another position will disable some of the vehicle's security systems and run the lead-acid battery down.

Radio waves from the key may affect medical devices such as pacemakers. Before using the key near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the key will affect the device.

Other than for an emergency situation, do not attempt to stop the engine while driving the vehicle. If the engine is stopped while driving the vehicle, loss of brake power and power steering functions could occur, making it difficult to control the vehicle which could result in an accident.

A CAUTION

- If the KEY warning light (red) □ is displayed, or the push button start indicator light (amber) flashes, this could indicate a problem with the engine starting system. This may prevent the engine from starting or from switching the vehicle power position to ACC or ON. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

 Refer to KEY Warning Light (Red) on page 8-51.
- ➤ Before leaving the vehicle, make sure that the vehicle power is switched OFF.

How to Use the Push Button Start

The push button start starts/stops the engine and switches the vehicle power position depending on the vehicle status and the driver's operation.

Starting the Engine

- 1. Make sure that the parking brake is applied.
- 2. (Automatic transmission)
 Make sure that the selector lever is in the P position.
- 3. Depress the clutch pedal (manual transmission) or brake pedal (automatic transmission).

 The push button start indicator light (green) and the KEY indicator light (green) " in the instrument cluster turn on.



The engine starts and the KEY indicator light (green) " in the instrument cluster turns off.

NOTE

- Do not use high engine speeds until reaching the operating temperature.
- (Germany)
 Drive immediately after start the engine.

Stopping The Engine

1. Stop the vehicle.

3.

2. (Manual transmission)
Shift into neutral.
(Automatic transmission)
Shift the selector lever to the P position.



The engine stops and the vehicle power is switched OFF.

Switching the Vehicle power Position

Press the push button start without depressing the clutch pedal (manual transmission) or brake pedal (automatic transmission).

Each time the push button start is pressed, the vehicle power position is switched in the order of ACC, ON, and OFF.

When the vehicle power is switched to ACC, the steering wheel is unlocked and the push button start indicator light (amber) turns on.

When the vehicle power is switched OFF and a door is opened/closed or locked, the steering wheel is locked and the push button start indicator light (amber) turns off.

NOTE

(Automatic transmission)

If you leave the vehicle power switched to ACC while the selector lever is in the P position, the vehicle power is switched OFF in about 25 minutes.

Mazda M Hybrid (e-SKYACTIV G, e-SKYACTIV X)

Mazda M Hybrid is a system that improves driving performance and fuel economy by assisting the engine with the Integrated Starter-Generator (ISG) and charging with regenerative braking according to the driving conditions of the vehicle. Because the Mazda M Hybrid Battery charges the vehicle while driving, charging from outside of the vehicle is not necessary.

Warning and Cautions for Using the Mazda M Hybrid

⚠ WARNING

Do not touch the high temperature or high current areas.

The following areas are high temperature and high current and may cause serious burns and electrical shock if touched.



- 1. Integrated Starter-Generator (ISG)
- 2. DC-DC Converter
- 3. Mazda M Hybrid Battery

To reduce the risk of burns or electrical shock, always heed the following precautions.

- Never remove and disassemble the brackets and connectors securing the terminal part, wiring harness, and the Mazda M Hybrid Battery.
- Never touch the Mazda M Hybrid Battery because it becomes extremely hot under direct sunlight or after driving.
- Never touch the Mazda M Hybrid Battery when it is wet because it is especially dangerous.

To ensure safe and correct handling of the Mazda M Hybrid Battery, always heed the following.

- ➤ Do not remove the Mazda M Hybrid Battery.
- Do not resell, transfer, or modify the Mazda M Hybrid Battery.
- Do not make secondary use of the Mazda M Hybrid Battery.

If the Mazda M Hybrid Battery is not handled properly, the following may occur which could lead to serious injury or death.

- ➤ Touching an unattended or illegally abandoned Mazda M Hybrid Battery may cause electrocution.
- If the Mazda M Hybrid Battery is used on a vehicle other than the one it came equipped on (including modified vehicles), accidents such as electric shock, heat generation, smoking, combustion, and explosions, or an electrolyte leakage may occur.

Appropriate disposal of the Mazda M Hybrid Battery.

If the Mazda M Hybrid Battery is not collected and disposed of appropriately, such as by leaving it unattended or illegally abandoning, some other person may touch it which could cause electrocution leading to serious injury.

Never touch the areas where high current is flowing.

Never touch an Mazda M Hybrid system related part. Otherwise, it could result in serious injury such as burns and electrical shock.

Never touch electrical wiring that may be protruding into or outside of the cabin. Otherwise, it could result in serious injury such as burns and electrical shock.

Never touch any area where electrolyte is visible or electrolyte is leaking from the area.

If electrolyte from the Mazda M Hybrid Battery gets in the eyes or on the skin, it could cause loss of vision or skin reactions. If electrolyte comes into contact with the eyes, do not rub them, and after flushing with water for 15 minutes or longer, seek medical attention immediately. In addition, if electrolyte comes into contact with the skin, wash the areas with soap and water thoroughly. If you feel any abnormality in your body, seek medical attention immediately.

Do not come near the vehicle if electrolyte is leaking from the Mazda M Hybrid Battery.

Even if the Mazda M Hybrid Battery is damaged, large quantities of electrolyte will not flow out due to the internal structure of the Mazda M Hybrid Battery, however, in the unlikely event that it does, it will produce steam. The steam contains properties that can irritate the eyes and skin, and could cause acute poisoning if absorbed.

Never approach objects that are on fire or extremely hot.

Electrolyte in the Mazda M Hybrid Battery may cause a fire. If the vehicle catches fire, extinguish the fire using a fire extinguisher (type ABC, BC, or C). Only extinguish a fire with water when a large amount of water is available such as from a fire hydrant. Using a small amount of water may cause the fire to spread.

A CAUTION

- If the driver's door is opened under the following conditions, the vehicle determines that the driver is trying to leave the vehicle, a warning sound notifying the driver of possible danger is activated, and the warning indication is displayed.
 - > The engine is running.
 - ➤ (Automatic transmission)

The selector lever is in a position other than P or N.

If there is a problem with the Mazda M Hybrid system, a warning is displayed.

How to Use the Mazda M Hybrid

Mazda M Hybrid automatically switches between engine assist by the Integrated Starter-Generator (ISG) and charging by regenerative braking according to the driving conditions of the vehicle.

The Mazda M Hybrid power generating status is displayed on the system operation status display of the fuel economy monitor.

Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

Drive the vehicle for about 30 minutes once every 2 to 3 months because self-discharge occurs gradually if the vehicle is not driven for a long period of time. If the Mazda M Hybrid Battery discharges completely and the Mazda M Hybrid system cannot be activated, contact an expert repairer (we recommend an Authorised Mazda Repairer).

Replacement and Disposal of Mazda M Hybrid Battery

Technical knowledge and skill are necessary in handling the Mazda M Hybrid Battery. The Mazda M Hybrid Battery is collected and recycled to prevent accidents involving it. When scrapping your vehicle, replacing the Mazda M Hybrid Battery, or disposing of the Mazda M Hybrid Battery, consult an expert repairer (we recommend an Authorised Mazda Repairer). Please cooperate in ensuring that the vehicle's Mazda M Hybrid Battery is collected and recycled.

Mazda M Hybrid Malfunction

If the vehicle receives an impact of a certain level or greater in a collision, the Mazda M Hybrid system stops. In this case, the charging system warning light turns on and the Mazda M Hybrid system may not activate. Park the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer).

i-stop^{*}

i-stop is a function that automatically stops and restarts the engine to improve fuel economy, reduce exhaust emissions, and idling noise.

How to Use the i-stop

Enabling Operation of the i-stop Function

The i-stop function becomes operational when all of the following conditions are met.

- · After engine warm-up.
- · After starting the engine and driving once.
- · All doors, liftgate, and bonnet are closed.
- · The driver's seat belt is fastened.
- The air conditioner is not operated with the airflow mode in the position.
- The temperature control dial of the air conditioner is in a position other than maximum heating or maximum cooling (A/C ON) position.
- (Automatic air-conditioning system)
 The vehicle's interior temperature and the set temperature for the air conditioner are nearly the same.
- The ambient temperature is not too low or too high.
- The atmospheric pressure is not low (when not driving at high altitudes).
- The steering wheel is almost in the straight-ahead position (the i-stop function may not operate even with the steering wheel in the straight-ahead position if force is applied to the steering wheel).
- · The vehicle is not on a steep slope.
- · The vehicle is not stopped suddenly.
- The vehicle is not driven in sport mode.
- · (Automatic transmission)
 - The selector lever is in the D or M position (not in second gear fixed mode).
 - The automatic transmission fluid has warmed up sufficiently.

 The automatic transmission fluid temperature is not abnormally high.

· (SKYACTIV-G)

- The brake vacuum is sufficiently high.
- The lead-acid battery is in good condition.
- · (e-SKYACTIV G, e-SKYACTIV X)
 - The temperature and the state of charge of the Mazda M Hybrid Battery are good.
 - The Integrated Starter-Generator (ISG) and regenerative braking are in good condition.

Operating the i-stop Function

Manual transmission

- 1. Stop the vehicle.
- 2. Shift the shift lever to the N position.

Release the clutch pedal. The i-stop function operates and the i-stop indicator light (green) i-stop turns on.

When AUTOHOLD is operating, the i-stop function continues to operate even if you release the brake pedal.

3. Start driving the vehicle. The engine restarts.

Automatic transmission

(While vehicle is stopped)
Mazda Radar Cruise Control with
Stop & Go function (MRCC with Stop
& Go function)/Cruising & Traffic
Support (CTS) is not in use

1. Stop the vehicle.
The i-stop function operates and the i-stop indicator light (green)
i-stop turns on.

When AUTOHOLD is operating, the i-stop function continues to

- operate even if you release the brake pedal.
- 2. Start driving the vehicle. The engine restarts.

MRCC with Stop & Go function/CTS is in use

- 1. When the vehicle is stopped by the stop and hold control of MRCC with Stop & Go function/CTS, the i-stop function operates and the i-stop indicator light (green) i-stop turns on.
- 2. Start driving the vehicle or press the RES switch on the steering switch. The engine restarts.

(While driving)

Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)/Cruising & Traffic Support (CTS) is not in use

- 1. Decelerate the vehicle
 When the vehicle speed decreases
 to a certain speed or slower, the
 i-stop function operates and the
 i-stop indicator light (green) i-stop
 turns on.
- 2. Start driving the vehicle. The engine restarts.

MRCC with Stop & Go function/CTS is in use

- 1. When the vehicle speed decreases to a certain speed or slower by the MRCC with Stop & Go function/CTS, the i-stop indicator light (green) i-stop turns on.
- Start driving the vehicle or press the RES switch on the steering switch. The engine restarts.

NOTE


· (SKYACTIV-G)

After 2 minutes since i-stop function has operated, the engine restarts.

- · If the lead-acid battery terminals are disconnected, the i-stop function may not operate right after connecting the lead-acid battery terminals. In addition, if the lead-acid battery is replaced, the i-stop functions require checking. Consult an expert repairer (we recommend an Authorised Mazda Repairer).
- · (European model)

 If the following operations are performed while the idling is stopped, the engine will not restart for safety reasons. In such cases, start the engine using the normal method.
 - · The bonnet is opened.
 - The driver's seat belt is unfastened and the driver's door is opened.

Stopping the Operation of the i-stop Function

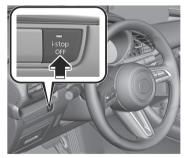

The i-stop function stops and the i-stop OFF switch indicator light turns on.

NOTE

When the i-stop function is stopped and the engine is stopped, the i-stop function becomes operational again the next time the engine is started.

Cylinder Deactivation*


The cylinder deactivation is a function designed to improve fuel economy by deactivating 2 of the 4 cylinders while driving.

How to Use the Cylinder Deactivation

The cylinder deactivation function automatically switches to 4 cylinders or 2 cylinders. The cylinder deactivation function does not operate under the following conditions.

- (Manual transmission)
 The selector lever is in the N/R position.
- · (Automatic transmission)
 The selector lever is in the P/N/R position.
- · The gear is in 1st gear.
- The engine oil temperature or engine coolant temperature is low.
- After disconnecting the battery terminals for some reason, such as for battery replacement.

Instrument Cluster

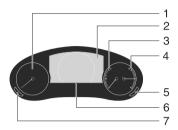

- 1 Tachometer
- ② Multi-information Display
- 3 Engine Coolant Temperature Gauge
- 4 Fuel Gauge
- (5) Instrument Panel Illumination Switch
- **6** Speedometer
- 7 TRIP Switch

Speedometer

The speedometer indicates the speed of the vehicle.

Tachometer

The tachometer shows engine speed in thousands of revolutions per minute (rpm).



Do not run the engine with the tachometer needle in the RED ZONE. This may cause severe engine damage.



- 1. STRIPED ZONE*1
- 2. RED ZONE*1
- *1 The range varies depending on the type of gauge.

NOTE

When the tachometer needle enters the STRIPED ZONE, this indicates to the driver that the gears should be shifted before entering the RED ZONE.

Multi-information Display


The screen display informs you of the vehicle information.




The multi-information display indicates the following information.

- · Speedometer
- Odometer
- · Trip meter
- · Outside temperature
- · Maximum driving distance
- · Average fuel economy
- · Current fuel economy
- Deceleration regeneration charge display (e-SKYACTIV G, e-SKYACTIV X)
- · i-ACTIVSENSE display
- · Vehicle speed alarm*
- · Door-ajar/liftgate-open/bonnet-open warning indication*1
- Message display
- *1 Displayed when opening door/liftgate/bonnet.

How to Use the Multi-information Display

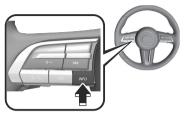

The screen content changes each time the INFO switch is pressed.

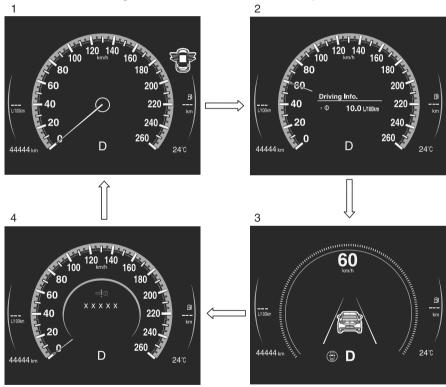

- 1. Basic display
- 2. Drive information display3. i-ACTIVSENSE display
- 4. Message display*1
- Displayed only when a warning occurs.

Convenient Ways to Use the Multi-information Display

The type of display for the fuel economy and the maximum driving distance can be changed.
Refer to the Settings section in the Mazda Connect Owner's Manual.

Odometer/Trip Meter

Odometer

The odometer records the total distance the vehicle has been driven.


Trip meter

The driving distance for a specified interval is indicated. Two types (TRIP A, TRIP B) of interval distance can be measured.

How to Use the Odometer/Trip Meter



The display changes each time the TRIP switch is pressed.

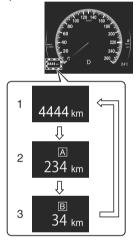

- 1. Odometer display
- 2. Trip meter A display
- 3. Trip meter B display


When returning the trip meter to "0", press the TRIP switch for 2 seconds or longer while the trip meter is displayed.

NOTE

If the lead-acid battery is disconnected for vehicle maintenance or other reasons, the trip meter display returns to "0".

Engine Coolant Temperature Gauge

Displays the engine coolant temperature. The blue range of the gauge indicates that the engine coolant temperature is low, and the red range of the gauge indicates that the engine coolant temperature is high and overheating.

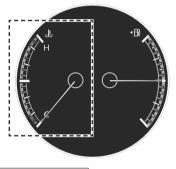


A CAUTION

If the engine coolant temperature gauge needle is in the red range, there is the possibility of overheating. Drive slowly to reduce engine load.
Refer to Taking Action with
Overheating on page 8-21.

Fuel Gauge

The fuel gauge shows approximately how much fuel is remaining in the tank when the vehicle power is switched ON.

When the fuel tank is full, 1 is indicated, and as the level lowers the needle approaches 0.

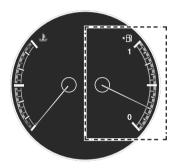

NOTE

- · After refuelling, it may require some time for the indicator to stabilize. In addition, the indicator may deviate while driving on a slope or curve since the fuel moves in the tank.
- The direction of the arrow This indicates that the fuel-filler flap is on the left side of the vehicle.

Instrument Panel Illumination

(Without auto-light control)

When the lights are turned on with the vehicle power switched ON, the brightness of the instrument panel illumination is dimmed.

(With auto-light control)

When the lights are turned on with the vehicle power switched ON, the brightness of the instrument panel illumination is dimmed. However, when the light sensor detects that the surrounding area is bright such as when the lights are turned on in the daytime, the instrument panel illumination does not dim.


NOTE

(With auto-light control)


When the vehicle power is switched ON in the early evening or at dusk, the instrument panel illumination is dimmed for several seconds until the light sensor detects the brightness of the surrounding area, however, the dimming may cancel after the brightness is detected.

How to Use the Instrument Panel Illumination

Brightening the instrument panel illumination

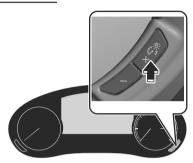

Dimming the instrument panel illumination

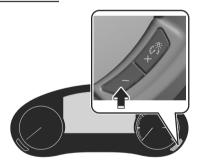

If you press the - switch again while the instrument panel illumination is at maximum dimness, a sound is activated to notify you that the dimmer setting is at maximum dimness.


Function for cancelling illumination dimmer

The illumination dimmer can be cancelled by pressing the + switch while the instrument cluster is at maximum dimness and while the vehicle power is switched ON. If you press the + switch again while the

illumination dimmer is cancelled, a sound is activated to notify you that it is cancelled. If the instrument cluster's visibility is reduced due to glare from surrounding brightness, cancel the illumination dimmer.

Outside Temperature Display

When the vehicle power is switched ON, the outside temperature is displayed.

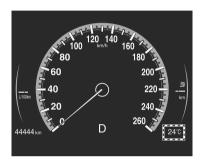

NOTE

The outside temperature display may differ from the actual outside temperature depending on the surroundings and vehicle conditions.

Outside Temperature Warning*

When the outside temperature is low, the indication flashes and a beep sound is heard to warn the driver of the possibility of icy roads. If the outside temperature is lower than about 4 °C (39 °F), the outside

temperature display and the ** mark flashes for about 3 seconds and a beep sound is heard once.

NOTE

If the outside temperature is lower than $-20 \,^{\circ}\text{C} (-4 \,^{\circ}\text{F})$, the beep sound does not operate. However, the mark illuminates.

Maximum Driving Distance Display

The maximum driving distance is calculated and displayed based on the current remaining fuel tank level and the fuel economy. When the maximum driving distance is 50 km (30 miles) or farther, the maximum driving distance indication decreases in 10 km (10 mile) increments, and when the maximum driving distance is shorter than 50 km (30 miles), it decreases in 1 km (1 mile) increments.



NOTE

The maximum driving distance is just an approximate numerical value and differs from the actual driving distance. Drive the vehicle while checking the fuel gauge.


Average Fuel Economy Display

This mode displays the average fuel economy by calculating the total travelled distance and the total fuel consumption since the vehicle was purchased or the past data was reset. The average fuel economy is calculated and displayed every 30 seconds.



How to Use the Average Fuel Economy Display

To reset the displayed average fuel economy data, press the INFO switch for 2 seconds or longer.

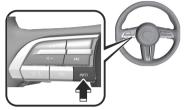

After resetting the data, - - - L/100 km (- - - mpg) is displayed until the average fuel economy is recalculated and displayed.

Instantaneous Fuel Economy Display

This displays the current fuel economy by calculating the amount of fuel consumption and the distance travelled.

(e-SKYACTIV G, e-SKYACTIV X)



(SKYACTIV-G)




NOTE

- Displays the 0 position when the vehicle speed decreases to a constant speed or slower.
- The arrow on the scale indicates the average fuel economy.

Deceleration Regeneration Charge Display (e-SKYACTIV G, e-SKYACTIV X)

This displays the status of the charging produced by deceleration regeneration.

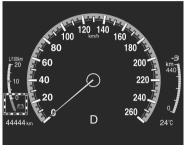

Vehicle Speed Alarm^{*}

In this mode, the current setting for the vehicle speed alarm is displayed. You can change the vehicle speed setting at which the warning is triggered.

NOTE

The vehicle speed alarm display is activated at the same time the beep sound is heard.



1. "Speed Alert" message is displayed


The vehicle speed alarm can be set using the centre display.
Refer to the Settings section in the Mazda Connect Owner's Manual.

NOTE

Always set the vehicle speed according to the laws and regulations of the country/city in which the vehicle is driven. In addition, always verify the speed of the vehicle using the speedometer.

i-ACTIVSENSE Display

Displays the system status.

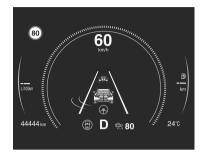


Message Display

Displays a message to notify the user of the system operation status and malfunctions or abnormalities. Follow the instructions indicated on the display. Refer to How to Use the Multi-information Display on page 5-29.

Active Driving Display

The active driving display indicates vehicle information and navigation information.

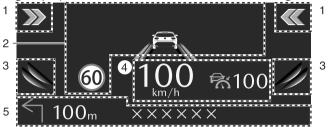

- 1. Front Cross Traffic Alert (FCTA) warning display area
- 2. i-ACTIVSENSE information display area and warning guidance display area
- 3. Blind Spot Monitoring (BSM) warning display area
- 4. Vehicle speed display area and setting speed display area
- 5. Navigation information display area

NOTE

- · Wearing polarized sunglasses will reduce the visibility of the active driving display due to the characteristics of the display.
- If the lead-acid battery has been removed and re-installed or the lead-acid battery voltage is low, the adjusted position may deviate.
- The display may be difficult to view or temporarily affected by weather conditions such as rain, snow, light, and temperature.


Warnings and Cautions for Using the Active Driving Display

MARNING

Always adjust the display brightness and position with the vehicle stopped. Adjusting the display brightness and position while driving the vehicle is dangerous as doing so could distract your attention from the road ahead and lead to an accident.

A CAUTION

- > Do not place beverages near the dust-proof sheet of the active driving display. If water or other liquids are splashed on the dust-proof sheet, it could cause damage.
- > Do not place objects or apply stickers to the dust-proof sheet as they will cause interference.

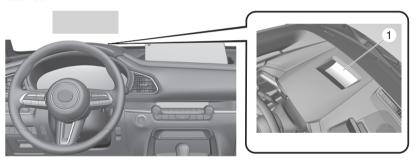

1. Dust-proof sheet

Convenient Ways to Use the Active Driving Display

The active driving display settings can be changed or adjusted.
Refer to the Settings section in the Mazda Connect Owner's Manual.

NOTE

The desired driving position (display position, brightness level, display information) can be called up after programming the position.

Refer to How to Use the Driving Position Memory on page 3-27.

Warning and Cautions for Using the Shift Lever

▲ WARNING

Do not use sudden engine braking on slippery road surfaces or at high speeds.

Shifting down while driving on wet, snowy, or frozen roads, or while driving at high speeds causes sudden engine braking, which is dangerous. The sudden change in tyre speed could cause the tyres to skid. This could lead to loss of vehicle control and an accident.

Always leave the shift lever in 1 or R position and set the parking brake when leaving the vehicle unattended. Otherwise the vehicle could move and cause an accident.

A CAUTION


- ➤ Keep your foot off the clutch pedal except when shifting gears. Also, do not use the clutch to hold the vehicle on an upgrade. Riding the clutch will cause needless clutch wear and damage.
- Do not apply any excessive lateral force to the shift lever when changing from 5th to 4th gear. This could lead to the accidental selection of 2nd gear, which could result in damage to the transmission.
- Make sure the vehicle comes to a complete stop before shifting to R. Shifting to R while the vehicle is still moving may damage the transmission.

How to Use the Shift Lever (Manual Transmission)

- 1. Depress the clutch pedal.
- (Position other than R) Operate the shift lever.



1. Neutral position (**R position**) Operate the shift lever while pushing it down.

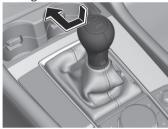

3. Release the clutch pedal. The Gear Shift Indicator (GSI) is displayed in the instrument cluster. Refer to Gear Shift Indicator (GSI) on page 5-56.

NOTE

• (e-SKYACTIV G, e-SKYACTIV X)

The parking brake may be applied automatically to prevent the vehicle from moving if the engine stalls while the vehicle is on a slope.

· (With i-stop function)

If the engine has stopped due to stalling, it can be restarted by depressing the clutch pedal within 3 seconds of the engine stopping. The engine cannot be restarted even if the clutch pedal is depressed under the following conditions.

- · The driver's door is open.
- · The driver's seat belt is unfastened.
- The clutch pedal is not released completely after the engine stalled.
- The clutch pedal is depressed with the engine not stopped completely.

Warning and Cautions for Using the Selector Lever

♠ WARNING

Always apply the parking brake when the selector lever is in the P position. When parking the vehicle, only shifting the selector lever to the P position is

dangerous as the vehicle may move unexpectedly and result in an accident.

Do not move the selector lever from the N or P position while the engine speed is high.

Otherwise, the vehicle will move suddenly which could lead to an unexpected accident.

When operating the selector lever, shift the selector lever with the brake pedal firmly depressed and the vehicle completely stopped.

Operating the selector lever while the vehicle is moving could lead to an unexpected accident.

Do not shift the selector lever with the accelerator pedal depressed when the selector lever is in the P or N position. Always operate the selector lever with the brake pedal depressed when the selector lever is in the P or N position. Otherwise, the vehicle will suddenly accelerate which could lead to an accident

Do not shift the selector lever to the N position while driving.

Otherwise, it could result in the loss of the engine braking power and cause an accident.

Do not depress the accelerator pedal unnecessarily while the vehicle is stopped.

If the accelerator pedal is mistakenly depressed when the selector lever is in a position other than the P or N position, the vehicle could suddenly accelerate resulting in an accident.

After stopping the vehicle, check the shift position indication in the instrument cluster before re-accelerating.

If the vehicle were to move unexpectedly, it could lead to an accident.

Do not allow the vehicle to move in reverse on an upslope while the selector lever is in forward drive, or move forward on a downslope while the selector lever is in reverse drive. Otherwise, the engine could stop, making the steering wheel difficult to control, which could result in an accident.



- ➤ When visually checking at the rear of the vehicle while reversing the vehicle, your body twists around to the rear. Be careful and make sure that the brake pedal can be firmly depressed.
- ➤ Completely stop the vehicle before shifting the selector lever to the P position. If the selector lever is shifted to P position before the vehicle is completely stopped, unnecessary force will be applied to the transmission which could cause damage.

- ➤ On roads with high driving resistance such as deep-snowy or sandy roads, or on steep slopes, a high load is applied to the transmission, causing excessive heat generation. Under these driving conditions, pay attention to the following points.
 - Stop and hold the vehicle on a steep slope with the brake pedal, not the accelerator pedal. Do not use the accelerator pedal to prevent the vehicle from rolling.
 - Avoid using the accelerator pedal and the brake pedal at the same time.
 - Start driving the vehicle in the D or R position according to the direction of travel (avoid starting in manual mode).

If you do not follow the above precautions, the transmission may overheat. If a message, such as transmission cooling, is displayed, it is necessary to temporarily stop the vehicle to cool the transmission.


How to Use the Selector Lever (Automatic Transmission)

Operating the Selector Lever

- 1. Start the engine.
- 2. Operate the selector lever.

Selector lever operation	Operation condition
Shift from P position to R position	Depress the brake pedal and press the selector lever button to operate.
Shift from R position to N position	
Shift from N position to D position	Shift the lever without pressing the selector lever button.
Shift from D position to M position	
Shift from M position to D position	
Shift from D position to N position	
Shift from N position to R position	Press the selector lever button to shift the lever.
Shift from R position to P position	

The shift indicator turns on at the same position as the shift position displayed in the instrument cluster.

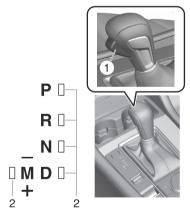

- 1. Selector lever button
- 2. Shift indicator

The shift position is displayed in the instrument cluster.



Shift position restrictions

If the selector lever is shifted from the N position to the R or D position under the following conditions while the selector lever is in the N position and the vehicle is stopped, the parking brake is operated while the shift position remains in the N position.

- · The brake pedal is not depressed.
- · The accelerator pedal is depressed.

Release the accelerator pedal and depress the brake pedal. The shift position changes from the N position to the R or D position.

Using Manual Shift Mode

Shift the selector lever from the D to the M position.



The gear position can be switched manually in manual shift mode. The manual shift mode indication and the gear position are displayed in the instrument cluster.



Shifting up



Shifting down



NOTE

- · If the automatic transmission fluid (ATF) temperature becomes too high, the mode will not switch to manual shift mode. In addition, if the ATF temperature becomes too high while in manual shift mode, the mode may be cancelled. If the mode is switched to manual shift mode again, it is necessary to operate the steering shift switches.
- When fully depressing the accelerator pedal even while in manual mode, the transmission kicks down, but it does not kick down while the Traction Control System (TCS)/Dynamic Stability Control (DSC) is turned off. However, if the vehicle is continuously driven at a high rpm, the gears may automatically shift up to protect the engine.

Cancelling Manual Shift Mode


Shift the selector lever from the M to the D position.



Manual shift mode is cancelled.

Shift gear (shifting) speed limit

The gear is shifted when the steering shift switches are operated within the speed limit ranges.

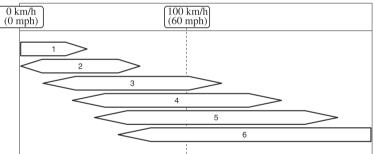

- 1. 1st gear
- 2. 2nd gear
- 3. 3rd gear
- 4. 4th gear
- 5. 5th gear
- 6. 6th gear

When shifting down is not possible depending on the vehicle speed, the gear position indication displayed in the instrument cluster flashes 2 times.

Using Second Gear Fixed Mode

1. Shift the selector lever from the D to the M position.



- 2. Drive the vehicle at a speed of 10 km/h (6.2 mph) or slower.
- 3. Operate the selector lever to the (+) side and shift to 2nd gear. Second gear fixed mode is activated.

NOTE

When using second gear fixed mode, the vehicle stops at the 2 gear position.

Cancelling Second Gear Fixed Mode

Operate the selector lever to a gear other than 2nd gear. Second gear fixed mode is cancelled.

Warnings and Cautions for Using the Steering Shift Switches




Avoid using sudden engine braking (shift-down).

If you apply sudden engine braking (shift-down) while driving at high speed or on wet roads, snow-covered roads, or icy roads, the tyres may slip and cause an unexpected accident.

How to Use the Steering Shift Switches (Automatic Transmission)

Using Direct Mode

Pull the up switch (+/OFF) or the down switch (-) of the steering shift switches toward you when the selector lever is in the D position.

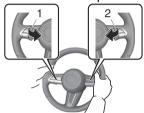

- 1. Down switch (-)
- 2. Up switch (+/OFF)

The gear position can be temporarily switched manually in direct mode. The direct mode indication and the gear position are displayed in the instrument cluster.

Shifting up/down

Pull the up switch (+/OFF) or the down switch (-) of the steering shift switches toward you.



- 1. Down switch (-)
- 2. Up switch (+/OFF)

Shifts up or down.

NOTE

- · If the automatic transmission fluid (ATF) temperature becomes too high, the mode will not switch to direct mode. In addition, if the ATF temperature becomes too high while in direct mode, the mode may be cancelled. If the mode is switched to direct mode again, it is necessary to operate the steering shift switches.
- While the vehicle is stopped, direct mode cannot be set even if the DOWN switch (-) is pulled.
- · When fully depressing the accelerator pedal even while in direct mode, the transmission kicks down, but it does not kick down while the Traction Control System (TCS) is turned off. However, if the vehicle is continuously driven at a high rpm, the gears may automatically shift up to protect the engine.

Cancelling Direct Mode

Direct mode can be cancelled by performing the following operations.


- The UP switch (+/OFF) is pulled toward you for a certain period of time or longer.
- The vehicle is driven for a certain period of time or longer (time differs depending on the driving conditions while operating).
- · The vehicle is stopped.
- · The vehicle is driven at a low speed.

Using Manual Shift Mode

1. Shift the selector lever from the D to the M position.



2. Pull the up switch (+/OFF) or the down switch (-) of the steering shift switches toward you.

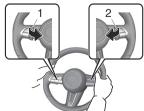

1. Down switch (-)


2. Up switch (+/OFF)

The gear position can be switched manually in manual shift mode. The manual shift mode indication and the gear position are displayed in the instrument cluster.



Shifting up/down

Pull the up switch (+/OFF) or the down switch (-) of the steering shift switches toward you.

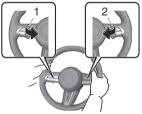

- 1. Down switch (-)
- 2. Up switch (+/OFF) Shifts up or down.

NOTE

- · If the automatic transmission fluid (ATF) temperature becomes too high, the mode will not switch to manual shift mode. In addition, if the ATF temperature becomes too high while in manual shift mode, the mode may be cancelled. If the mode is switched to manual shift mode again, it is necessary to operate the steering shift switches.
- · When fully depressing the accelerator pedal even while in manual mode, the transmission kicks down, but it does not kick down while the Traction Control System (TCS) is turned off. However, if the vehicle is continuously driven at a high rpm, the gears may automatically shift up to protect the engine.

Cancelling Manual Shift Mode

Shift the selector lever from the M to the D position.



Manual shift mode is cancelled.

Shift gear (shifting) speed limit

Refer to How to Use the Selector Lever on page 5-46.

Gear Shift Indicator (GSI)*

The GSI supports you to obtain optimum fuel economy and smooth driving. The current gear position and the recommended gear position corresponding to the driving condition is displayed in the instrument cluster.

2 - 3

NOTE

The GSI does not display under the following conditions.

- · The vehicle is stopped.
- · (Manual transmission)
 - · The vehicle is put in neutral.
 - · The vehicle is driven in reverse.
 - The clutch is not fully engaged when accelerating from a stop.
 - The clutch pedal remains depressed for 2 seconds or longer while driving.
- · (Automatic transmission)

 The manual shift mode is not used.

Warning and Cautions for Using the Gear Shift Indicator (GSI)

A CAUTION

Do not rely completely on the GSI. The actual driving situation might require shift operations different from the indication. To avoid the risk of accidents, the road and traffic conditions have to be determined correctly by the driver before shifting.

Warning and Cautions for Using the Foot Brake

⚠ WARNING

Do not coast with the engine turned off, find a safe place to stop.

Coasting with the engine turned off is dangerous. Braking will require more effort, and the brake's power-assist could be depleted if you pump the brake. This will cause longer stopping distances or even an accident.

Shift to a lower gear when going down steep hills.

Driving with your foot continuously on the brake pedal or steadily applying the brakes for long distances is dangerous. This causes overheated brakes, resulting in longer stopping distances or even total brake failure. This could cause loss of vehicle control and a serious accident. Avoid continuous application of the brakes.

Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal.

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.

Do not drive with worn disc pads.

Driving with worn disc pads is dangerous. The brakes could fail and cause a serious accident. As soon as you hear a screeching noise consult an expert repairer (we recommend an Authorised Mazda Repairer).

A CAUTION

- ➤ Do not drive with your foot held on the clutch pedal or brake pedal, or hold the clutch pedal depressed halfway unnecessarily. Doing so could result in the following:
 - The clutch and brake parts will wear out more quickly.
 - The brakes can overheat and adversely affect brake performance.
- Always depress the brake pedal with the right foot. Applying the brakes with the unaccustomed left foot could slow your reaction time to an emergency situation resulting in insufficient braking operation.



➤ Wear shoes appropriate for driving in order to avoid your shoe contacting the brake pedal when depressing the accelerator pedal.

Electric Parking Brake (EPB)

The EPB system applies the parking brake using a motor.

NOTE

If the parking brake is applied with the vehicle power switched to OFF or

ACC, the EPB indicator light (P) in the instrument cluster and the indicator light in the switch may turn on for a certain period of time.

Warning and Cautions for Using the Electric Parking Brake (EPB)

MARNING

Do not drive the vehicle with the parking brake applied.

If the vehicle is driven with the parking brake applied, the brake parts may generate heat and the brake system may not operate, leading to an accident. Before driving the vehicle, release the parking brake and make sure that the EPB indicator light (P) in the instrument cluster turns off.

Apply the parking brake when leaving the vehicle.

Not applying the parking brake when parking the vehicle is dangerous as the vehicle may move unexpectedly and result in an accident. Before leaving the vehicle, apply the parking brake and make sure that the EPB indicator light

(P) in the instrument cluster turns on.



➤ Depress the brake pedal firmly before doing a shift operation as the vehicle may start moving unexpectedly.

If something such as the driver's foot contacts the accelerator pedal while the engine is operating and the parking brake is applied, the parking brake may be released automatically and the vehicle may move unexpectedly. If you do not intend to start driving the vehicle immediately, shift the shift lever to the neutral position for a manual transmission, or shift the selector lever to the P or N position for an automatic transmission.

How to Use the Electric Parking Brake (EPB)

Applying the Parking Brake Manually

Depress the brake pedal.
 Depress the brake pedal.



The parking brake is applied and the EPB indicator light (P) in the instrument cluster and the EPB switch indicator light turn on.

Releasing the Parking Brake Manually

1. Depress the brake pedal with the vehicle power switched ON or the engine operating.

2.



When the parking brake is released, the EPB indicator light (P) in the instrument cluster and the EPB switch indicator light turn off.

Electric Parking Brake (EPB)

NOTE

- To release the parking brake when the vehicle power is switched OFF, it is necessary to cancel the parking brake auto operation. If the parking brake is likely to freeze such as during cold weather conditions, cancel the parking brake auto operation.
- When the charging system warning light in the instrument cluster turns on, the parking brake cannot be applied after the vehicle power is switched OFF. Before switching the vehicle power OFF, apply the parking brake manually.

Applying the Parking Brake Automatically

Switch the vehicle power from ON to ACC or OFF.

The parking brake is applied and the EPB indicator light (P) in the instrument cluster and the EPB switch indicator light turn on.

Releasing the Parking Brake Automatically

Shift-linked release (Automatic transmission)

Shift the selector lever from the P position to a position other than P when all of the following conditions are met.

- · Engine is operating.
- · Driver's door is closed.
- · Brake pedal is firmly depressed.

When the parking brake is released, the EPB indicator light (P) in the instrument cluster and the EPB switch indicator light turn off.

Accelerator-linked release

Depress the accelerator pedal when all of the following conditions are met.

- · Engine is operating.
- · Driver's door is closed.
- · Driver's seat belt is fastened.
- (Automatic transmission)
 The selector lever is in the D, M, or R position.
- · (Manual transmission)
 - The shift lever is in a position other than neutral.
 - The clutch pedal is depressed halfway.

When the parking brake is released, the EPB indicator light (P) in the instrument cluster and the EPB switch indicator light turn off.

Convenient Ways to Use the Electric Parking Brake (EPB)

Enabling/Disabling Shift-Linked Release (Automatic transmission)

- 1. Switch the vehicle power ON.
- 2. Make sure that the parking brake is applied (EPB indicator light (P) is turned on).
- 3. Continue pulling the EPB switch for 4 seconds or longer.



- 4. Release the EPB switch once.
- 5. Immediately continue pulling the EPB switch for 4 seconds or longer.



When the shift-linked release is enabled, a sound is activated 2 times, the EPB switch indicator light switches to fast flashing, and then flashes for a certain period of time. When the shift-linked release is disabled, a sound is activated 1

time, the EPB switch indicator light switches to slow flashing, and then flashes for a certain period of time.

Cancelling the Parking Brake Automatic Operation

The parking brake automatic operation returns to automatic operation when the vehicle power is switched ON. When cancelling the parking brake auto operation and parking the vehicle, shift the shift lever to the 1st gear or the R position for a manual transmission, or shift the selector lever to the P position for an automatic transmission and use wheel blocks on the tyres. If one of the following operations is performed, the parking brake automatic operation can be cancelled when the vehicle power is switched from ON to OFF.

Operation method 1

- 1. Switch the vehicle power ON.
- 2. Release the parking brake manually.
- 3. Turn off the AUTOHOLD.
- 4. Press the EPB switch continuously until a sound is activated.



5. Release the EPB switch.

Switch the vehicle power OFF immediately after a sound is activated.

After the parking brake auto operation is cancelled, a warning sound is activated one time, and the EPB switch indicator light switches from illumination to flashing, and then turns off after a certain period of time has passed.

Operation method 2

- 1. Switch the vehicle power ON.
- 2. Release the parking brake manually.
- 3. Turn off the AUTOHOLD.
- 4. With the EPB switch pressed, switch the vehicle power OFF without depressing the brake pedal.



After the parking brake auto operation is cancelled, a warning sound is activated one time, and the EPB switch indicator light switches from illumination to flashing, and then turns off after a certain period of time has passed.

NOTE

- The auto operation may not cancel if the vehicle is parked on a steep slope.
- When using an automatic car wash which moves the vehicle with the front tyres mounted, it is necessary to cancel the parking brake automatic operation.

Brake Override System

The brake override system applies the brake first for safety if the brake pedal and the accelerator pedal are depressed at the same time.

Warning and Cautions for Using the Brake Override System



Do not drive with your foot held on the brake pedal. The brake override system may not operate normally.

How to Use the Brake Override System

You can use the Mazda Connect setting to disable the brake override system warning.

system warning.
Refer to the Mazda Connect Owner's
Manual or consult an expert repairer
(we recommend an Authorised Mazda
Repairer).

AUTOHOLD

AUTOHOLD is a function to keep the vehicle stopped by applying the brakes even if you take your foot off the brake pedal while the vehicle is stopped. This function reduces the burden on the driver while the vehicle is stopped, such as at traffic lights.

Warning and Cautions for Using the AUTOHOLD

! WARNING

Do not rely completely on the AUTOHOLD function.

The AUTOHOLD function is only designed to assist the brake operation while the vehicle is stopped.

Neglecting to operate the brakes and relying only on the AUTOHOLD system is dangerous and could result in an unexpected accident if the vehicle were to suddenly move. Operate the brakes appropriately in accordance with the road and surrounding conditions. Note that the vehicle may move suddenly depending on the vehicle's load or if it is towing something.

Do not release your foot from the brake pedal while the vehicle is stopped on a steep grade.

Because there is a possibility of the vehicle not being held in the stopped position by the AUTOHOLD function, the vehicle may move unexpectedly and result in an accident.

Refrain from using the AUTOHOLD function on slippery roads such as icy or snow-covered roads, or unpaved roads.

Even if the vehicle is held in the stopped position by the AUTOHOLD function, the vehicle may move unexpectedly and result in an accident. Operate the accelerator pedal, brakes, or steering wheel appropriately as necessary.

Immediately depress the brake pedal in the following case.

Because the AUTOHOLD function is cancelled forcibly, the vehicle may move unexpectedly and result in an accident.

➤ The message "Depress Brake Pedal. Brake Hold Disabled" is displayed on the instrument cluster and the warning sound is activated at the same time.

When parking and before leaving the vehicle, apply the parking brake.

Otherwise, the vehicle may move unexpectedly and result in an accident. When parking and before leaving the vehicle, shift the selector lever to the P position (automatic transmission) and apply the parking brake.



If you stop operating the accelerator pedal before the vehicle starts moving, the brake may be released. Firmly depress the brake pedal or depress the accelerator pedal to start driving the vehicle.

How to Use the AUTOHOLD

Operating the AUTOHOLD



The AUTOHOLD becomes operational and the AUTOHOLD standby indicator light turns on.

Using the AUTOHOLD

- Stop the vehicle.
 When all of the following conditions are met, the
 AUTOHOLD operates and the
 AUTOHOLD active indicator light
 HOLD in the instrument cluster turns on.
 - · The engine is operating.
 - · The driver's seat belt is fastened.
 - · The driver's door is closed.
 - · The parking brake is released.
- Start driving the vehicle.
 The brakes are released and the AUTOHOLD active indicator light HOLD in the instrument cluster turns off.

NOTE

 When about 10 minutes or longer have passed since the AUTOHOLD operated, the parking brake is applied automatically. When the parking brake is released, the AUTOHOLD operates again.

- When the vehicle power is switched OFF while the AUTOHOLD is operating, the parking brake is applied automatically.
- If the shift lever/selector lever is shifted to the R position with the vehicle tilted rearward or on level ground, the AUTOHOLD is cancelled. Operate the brakes if necessary.
- Under the following conditions, the parking brake is automatically applied and the AUTOHOLD is released. The AUTOHOLD is re-enabled when the conditions before the AUTOHOLD is released are restored.
 - · The driver's seat belt is unfastened.
 - · The driver's door is opened.

Cancelling the AUTOHOLD Operation

1. Depress the brake pedal with the AUTOHOLD operating.

2.



The AUTOHOLD operation is cancelled and the AUTOHOLD standby indicator light turns off.

NOTE

 The AUTOHOLD can be turned off by pressing the AUTOHOLD switch while driving. When the vehicle power is switched OFF while the AUTOHOLD is operating, the parking brake is applied automatically and the AUTOHOLD is turned off.

Hill Launch Assist (HLA)

The HLA prevents the vehicle from rolling backward or forward, such as when releasing the brake pedal while on a slope.

NOTE

- The HLA may not operate on a gentle slope or depending on the vehicle's load.
- The HLA does not operate if the parking brake is applied or the vehicle has not stopped completely.
- When the TCS/DSC operation indicator light turns on, the HLA may not operate.
- The HLA does not turn off even if the TCS/DSC is turned off.

Warning and Cautions for Using the Hill Launch Assist (HLA)

MARNING

Do not rely completely on the HLA. The HLA is designed only to assist the driver in accelerating from a stop on a slope. The HLA only operates for about 2 seconds and therefore, if the accelerator and brake pedals are not operated correctly the vehicle may move (roll) unexpectedly and cause an accident. Always confirm the safety around the vehicle before starting to drive the vehicle. Note that the vehicle may move suddenly depending on the vehicle's load or if it is towing something. In addition, for vehicles with a manual transmission, the vehicle could still roll depending on how the clutch pedal or the accelerator pedal is operated.

Emergency Signal System (ESS)

If sudden braking is applied, the ESS rapidly flashes all the direction indicator lights to caution drivers behind your vehicle of the sudden braking situation. The ESS operates when sudden braking is applied while the vehicle speed is 55 km/h (34 mph) or faster.


NOTE

- · When you bring your vehicle to a complete stop while all the direction indicator lights are flashing rapidly, the rapid flashing of all the direction indicator lights changes back to the normal flashing pattern. The direction indicator lights turn off when you release your foot from the brake pedal.
- When the ABS operates, the ESS is more likely to operate. Therefore, if the brakes are applied on a slippery road, the ESS may operate.

Light Switch

Each light turns on/off when the switch is operated.

With Auto Light

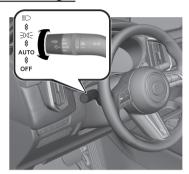

Without Auto Light



Warnings and Cautions for Using the Light Switch



A CAUTION

Do not cover the light sensor by applying stickers or labels to the windscreen. Otherwise the sensor cannot detect the surrounding light correctly.



How to Use the Light Switch

NOTE

Headlights which do not blind drivers approaching in the opposite direction have been adopted. Therefore, it is not necessary to adjust the optical axis of the headlights even when travelling temporarily in a country where vehicles are driven on the right-hand side of the road.

Using the Lights Automatically

Using the Auto Light*

Make sure that the light switch is in the **AUTO** position.



The daytime running lights turn on automatically when it is bright, and the headlights, position lights, tail lights, and the number plate lights turn on automatically when it is dark. When the position lights, tail lights, and the number plate lights are turned on, the position lights indicator light in the instrument cluster turns on.

NOTE

 If the surroundings remain dark for several minutes even during daytime, the light sensor determines that it is nighttime, and the lights may not turn off immediately even if the surroundings become bright. The illumination timing for the headlights can be changed.
 Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

Using the Daytime Running Lights*

The daytime running lights turn on while driving in bright surroundings such as during the day.

NOTE

(Only in regions where daytime running lights are not mandatory)
The daytime running lights can be set so that they do not to turn on.
Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

Using the Lights Manually


Using the Position lights, Tail lights, and Number Plate Lights

(The vehicle power is switched to ON)



The position lights, tail lights, and number plate lights turn on, and the position lights indicator light in the instrument cluster turns on. When the vehicle power is switched OFF while the position lights, tail lights, and the number plate lights are turned on, the position lights, tail lights, and the number plate lights turn off.

(The vehicle power is switched to ACC or OFF)

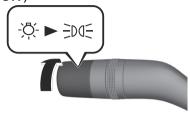

The position lights, tail lights, and number plate lights turn on, and the position lights indicator light in the instrument cluster turns on.

NOTE


Do not leave the lights on while the engine is turned off. Otherwise, the lead-acid battery power could be depleted.

Using the Headlights



The headlights, position lights, tail lights, and the number plate lights turn on, and the position lights indicator light in the instrument cluster turns on.

Switching the Headlights to High Beams

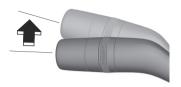

The headlights are switched to high beams and the headlight high-beam indicator light ≡○ in the instrument cluster turns on.

When the lever is returned to its original position, the headlights are switched to low beams.

Flash-to-pass



While the lever is being operated, the headlight high beams turn on and the headlight high-beam indicator light

In the instrument cluster turns on.

Turning off the Lights

Turn the light switch to the **OFF** position when the vehicle is stopped.



(With Auto Light)

The light switch returns to the **AUTO** position automatically.

All the lights that are turned on turn off, and the position lights indicator light in the instrument cluster turns off.

Headlight Levelling

The number of passengers and weight of cargo in the luggage compartment change the angle of the headlights. The angle of the headlights will be automatically adjusted when turning on the headlights. A system malfunction or operation conditions are indicated by a warning. Refer to Exterior Lights Warning Light on page 8-53.

Convenient Ways to Use the Light Switch

Coming Home Light

After the vehicle power is switched OFF, the headlights can be turned on for a while.

Using the coming home light

1. Switch the vehicle power to ACC or OFF.





The headlights turn on, and then turn off when any of the following conditions is met.

- A certain amount of time has passed since occupants got out of the vehicle and all the doors closed.
- Three minutes have passed since the headlights turned on.
- The light switch was operated after the headlights turned on.

NOTE

The time until the headlights turn off can be changed.

Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

Leaving Home Light

The lights of your vehicle parked at a distance can be turned on by operating the key.

Using the leaving home light

Press the unlock button on the key while the vehicle power is switched OFF.



When the vehicle receives a key operation signal, the headlights, position lights, tail lights, and the number plate lights turn on. The lights turn off when any of the following conditions is met.

- Thirty seconds have passed since the lights turned on.
- The light switch is set to the **OFF** position.
- The lock button on the key is pressed.



NOTE

The leaving home light can be set so that it does not operate.

Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

How to Use the Fog Light Switch*

When the switch is operated, the rear fog light turns on/off.

Using the Rear Fog Light

When the headlights are turned on, turn the rear fog light switch to the position.

The fog light switch automatically returns to the - position.



The rear fog light turns on and the rear fog light indicator light 0‡ in the instrument cluster turns on.

NOTE

Even if the headlights are turned off, the rear fog light remains on when the position lights are on.

Turning off the Rear Fog Light

Turn the rear fog light switch to the position or the light switch to the **OFF** position.


How to Use the Direction Indicator Lever

When the lever is operated, the direction indicator lights flash/turn off.

Using the Direction Indicator Lever

Turning left or right


Operate the lever to the 1 or 4 position.

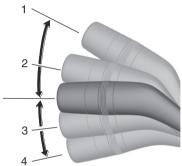

Each direction indicator light flashes and the direction indicator light in the instrument cluster flashes. The lever returns to its original position in conjunction with the steering wheel operation. If it does not return, return it by hand.

Changing lanes

Operate the lever to the 2 or 3 position.

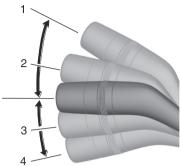

While the lever is in the 2 or 3 position, each direction indicator light flashes and the direction indicator light

in the instrument cluster flashes. If you move the lever to the 2 or 3 position and release it immediately, the three-flash turn signal operates and the direction indicator light flashes 3 times.


NOTE

- The volume of the direction indicator lever sound can be changed.
 Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The three-flash turn signal can be turned on/off.
 Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).


Windscreen Wiper/ Washer Switch

When the switch or lever is operated, the windscreen wiper/washer operates.

With Auto-Wiper Control

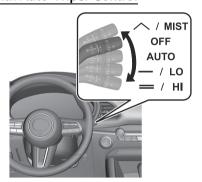

With Intermittent Wiper

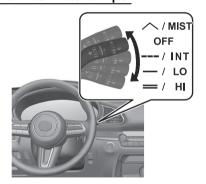

Warning and Cautions for Using the Windscreen Wiper/Washer Switch

M WARNING

In cold regions, use washer fluid containing anti-freeze. In addition, warm the windscreen glass before spraying washer fluid during cold temperatures.

If washer fluid not containing anti-freeze is used during cold temperatures, it will freeze on the windscreen causing reduced visibility which may lead to an accident. Before spraying washer fluid, use the defroster to make sure that the windscreen is sufficiently warmed up.

A CAUTION

- ➤ When the windscreen wipers are not used during freezing temperatures or for a long time, the wiper rubber may freeze to the glass. If the wipers are operated while frozen to the glass, it could damage the wiper rubber and motor.
- ➤ If the windscreen wipers are operated while the windscreen glass is dry, the glass could be scratched and the wiper rubber damaged. When the window glass is dry, spray washer fluid before operating the wipers.
- If the amount of washer fluid spray is insufficient, do not use the windscreen washer switch. If the washer switch continues to be operated with no washer fluid being sprayed, it could lead to pump damage.

> Do not cover the rain sensor by applying stickers or labels to the windscreen. Otherwise, the sensor cannot detect the amount of rainfall.




- ➤ When the vehicle power is switched ON and the wiper lever is in the AUTO position, the windscreen wipers may operate automatically in the following cases:
 - > The area of the windscreen above the rain sensor is touched or wiped with a cloth
 - The windscreen or the rain sensor area in the cabin is hit.

When the vehicle power is switched ON and the wiper lever is in the AUTO position, do not touch the windscreen or the windscreen wipers Otherwise, the windscreen wipers will operate automatically which could catch your fingers or damage the windscreen wipers. When removing ice or snow, or cleaning the windscreen, always make sure the wiper lever is in the OFF position.

How to Use the Windscreen Wiper/ **Washer Switch**

Using the Auto Wipers*

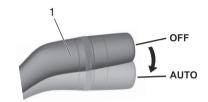

1. Indicator light The indicator light of the lever turns

The windscreen wipers operate automatically according to the rainfall amount.



Even if it is not raining, the windscreen wipers may operate automatically in the following cases.

- The area of the windscreen above the rain sensor is touched or wiped with a cloth.
- The windscreen or the rain sensor area in the cabin is hit.

NOTE


· If a water repellent coating other than a genuine product is used, the rain sensor may not detect the rainfall amount correctly and the auto wipers may not operate normally. Do not use a water repellent coating other than a genuine product.

Windscreen Wiper/Washer Switch

- · If dirt or ice is adheres to the top of the rain sensor on the windscreen and the windscreen wipers cannot remove the dirt or ice even after the wipers operate several times, the auto wipers will stop operating. If the auto wipers stopped, remove the dirt and ice from the windscreen.
- The auto wipers could operate from the effect of strong light sources, electromagnetic waves, or infrared light because the rain sensor uses an optical sensor. It is recommended that the auto-wiper lever be switched to the **OFF** position other than when driving the vehicle under rainy conditions.

Changing sensitivity of auto wipers

The rain sensitivity level can be adjusted by rotating the switch.

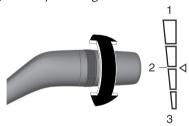

- 1. Higher sensitivity
- 2. Normal
- 3. Less sensitivity


Using the Intermittent Wiper*



The wipers operate intermittently.

Changing the intermittent operation time


The intermittent operation time can be adjusted by turning the switch.

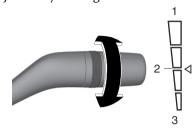

- 1. Fast
- 2 Normal
- 3. Slow

Using the Windscreen Wipers

Using continuously

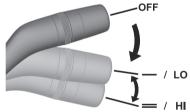

In the ____ or LO position, the windscreen wipers operate at low speed. In the ___ or HI position, the wipers operate at high speed.

Using temporarily




The windscreen wipers operate while the lever is in the or MIST position.

Set the lever to the or MIST position and immediately release it to

operate the windscreen wipers only once.

Stopping the Windscreen Wipers

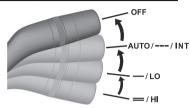

The windscreen wipers stop.

Using the Windscreen Washer



While the windscreen wipers move out of their stowed positions to the point where they start reversing back, the washer fluid is sprayed and the wipers operate several times.

NOTE

- When the windscreen washer is used for the first time after turning on the headlights, the headlight washers also operate in conjunction with it.
- If you pull the wiper lever while the windscreen wipers are reversing back to their stowed positions, the next time the washer fluid is sprayed is during the next cycle.

Using the Headlight Washers*

When the headlights are turned on, pull the lever 2 times in the direction of the arrow.



The washer fluid is sprayed.


NOTE

When the windscreen washer is used for the first time after turning on the headlights, the headlight washers also operate in conjunction with it.

How to Use the Rear Wiper/Washer Switch

Using the Rear Wiper

Using intermittent operation

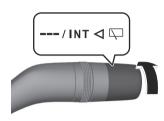

The wiper operates at regular intervals.

Using continuous operation




The wiper operates continuously.

Stopping the Rear Wiper



The rear wiper stops.

Using the Rear Washer

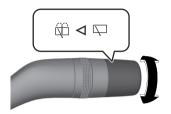

While the switch is in the position, the washer fluid is sprayed and the wiper operates.

NOTE

When the windscreen washer fluid is being sprayed, the rear washer fluid will not be sprayed even if the switch is operated.

Rear Window Defogger Switch

The rear window defogger warms the rear window and removes fog. When the rear window defogger is operated, the following equipment operates in conjunction with it.

- Mirror defogger*
 Refer to How to Use the Mirror
 Defogger on page 5-83.
- Windscreen wiper de-icer*
 Refer to How to Use the Windscreen
 Wiper De-icer on page 5-84.

Warnings and Cautions for Using the Rear Window Defogger Switch

A CAUTION

- ➤ Be careful not to scratch the filaments when washing the rear window. The filaments are installed inside the rear window.
- ➤ Use the rear window defogger while the engine is running. In addition, do not use the rear window defogger for a long time. Otherwise, the lead-acid battery power could be depleted.

How to Use the Rear Window Defogger Switch

Using the Rear Window Defogger Switch

1. Start the engine.

2.



The rear window defogger operates and the switch indicator light turns on. The rear window defogger stops automatically after it operates for about 15 minutes.

NOTE

The rear window defogger operation time can be changed.

Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

Stopping the Rear Window Defogger

Press the rear window defogger switch while the rear window defogger is operating.

The rear window defogger stops and the switch indicator light turns off.

Mirror Defogger

The mirrors are heated using heat filaments to remove fog.

How to Use the Mirror Defogger

The mirror defoggers operate in conjunction with the rear window defogger.

For the operation method, refer to How to Use the Rear Window Defogger on page 5-82.

Windscreen Wiper De-icer*

A part of the windscreen is heated using heat filaments to melt the ice on the glass and wipers.



How to Use the Windscreen Wiper De-icer

The windscreen wiper de-icers operate in conjunction with the rear window defogger.

For the operation method, refer to How to Use the Rear Window Defogger on page 5-82.

Hazard Warning Lights

The hazard warning light switch is used when it is necessary to park the vehicle on a roadside due to a vehicle breakdown or other emergency.

How to Use the Hazard Warning Lights



All the direction indicator lights flash and the direction indicator light in the instrument cluster flashes. Press the switch again to turn off the lights.

How to Use the Horn

Press the area around the mark on the steering wheel.
The horn sounds while it is pressed.

Antilock Brake System (ABS)

The ABS prevents the wheels from locking, caused by braking on slippery roads, and maintains driving directional stability and ensures steerability.

NOTE

- When depressing the brake pedal, slight vibration might be felt from the pedal. This vibration is a normal occurrence when the ABS operates.
- ABS does not operate at low speeds (about 10 km/h (6.2 mph) or slower).

Warning and Cautions for Using the Antilock Brake System (ABS)

⚠ WARNING

Do not rely on the ABS as a substitute for safe driving.

The ABS cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), driving on ice and snow, and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.



Always use tyres of the specified size and type for the front and rear wheels. If a tyre other than the specified size or type is installed, the ABS system may not operate normally.

Traction Control System (TCS)

The TCS prevents drive-wheel spinning which occurs during acceleration from a stop or acceleration during cornering on slippery roads, such as wet or snow-covered roads, and assures optimum drive force and steerability.

Warning and Cautions for Using the Traction Control System (TCS)

MARNING

Do not rely on the Traction Control System (TCS) as a substitute for safe driving.

The Traction Control System (TCS) cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

Use snow tyres or tyre chains and drive at reduced speeds when roads are covered with ice and/or snow. Driving without proper traction devices on snow and/or ice-covered roads is dangerous. The Traction Control System (TCS) alone cannot provide adequate traction and you could still have an accident.

How to Use the Traction Control System (TCS)

Switch the vehicle power ON.
The TCS is operable.
When the TCS operates, the TCS/DSC operation indicator light a flashes.

Stopping the TCS Operation*



The TCS operation is cancelled and the TCS OFF indicator light of in the instrument cluster and the TCS OFF switch indicator light turn on. Press the TCS OFF switch again to enable the TCS operation.

NOTE

- If the engine is stopped while the TCS operation is cancelled, the TCS becomes operational when the engine is started the next time.
- When the TCS is on and you attempt to free the vehicle from being stuck, the TCS will activate. Depressing the accelerator will not increase engine power and freeing the vehicle from being stuck might be difficult. When this happens, turn off the TCS.
- If the TCS is cancelled and the following systems are operated, the TCS becomes operational.
 - · Smart Brake Support (SBS)

- Mazda Radar Cruise Control (MRCC)
- · Cruising & Traffic Support (CTS)
- If the TCS OFF switch is pressed and held for 10 seconds or longer, the TCS operation can no longer be turned off even if the TCS OFF switch is pressed. In this case, the TCS OFF switch will operate normally when the vehicle power is switched ON again after being switched OFF.

Dynamic Stability Control (DSC)

The DSC automatically controls braking and engine power output in conjunction with systems such as the ABS and TCS to help control side slip when driving on slippery surfaces, or during sudden or evasive steering, which enhances vehicle stability. Also refer to Antilock Brake System (ABS) 5-87, Traction Control System (TCS) 5-88.

Warning and Cautions for Using the Dynamic Stability Control (DSC)

⚠ WARNING

Do not rely on the Dynamic Stability Control as a substitute for safe driving.

The Dynamic Stability Control (DSC) cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

A CAUTION

- ➤ Heed the following cautions so that the DSC can operate normally.
 - ➤ Always use tyres of the specified size, same manufacturer, brand, and pattern (tread pattern) for the front and rear wheels.
 - ➤ Do not use tyres with sizes other than the specified size, different type, and significantly different wear patterns on the same vehicle.
- When using tyres where the tyre diameter is changed due to the installation of tyre chains, or when installing an emergency spare tyre, the DSC may not operate normally.

How to Use the Dynamic Stability Control (DSC)

Drive the vehicle at a speed of about 20 km/h (13 mph) or faster. The DSC is operable. When the DSC operates, the TCS/DSC operation indicator light flashes.

Off-Road Traction Assist*

When the vehicle tyres become embedded in mud, sand, or deep snow, the Off-Road Traction Assist functions to prevent drive-wheel spinning and to assist in freeing tyres that are stuck.

Warning and Cautions for Using the Off-Road Traction Assist

MARNING

Do not rely completely on the Off-Road Traction Assist.

The Off-Road Traction Assist has limitations. Always drive the vehicle safely according to the road conditions. Do not drive the vehicle recklessly, otherwise it may result in an accident. In addition, do not drive the vehicle under the following conditions while the Off-Road Traction Assist is operating. Otherwise, it could negatively affect the drivetrain parts which could result in an accident.

- ➤ Vehicle is driven on paved roads.
- ➤ Temporary spare tyre of a different specified size is used.
- Tyre chains are used.

A CAUTION

The Off-Road Traction Assist is a function to assist in freeing tyres that are stuck. When it is not necessary to use this function, avoid driving the vehicle continuously with the Off-Road Traction Assist on. If the vehicle is driven continuously with the Off-Road Traction Assist on, the AWD warning light AWD may turn on or flash. Refer to AWD Warning Light on page 8-48.

How to Use the Off-Road Traction Assist

Press the Off-Road Traction Assist switch while the vehicle is stopped.



The Off-Road Traction Assist operates and the Off-Road Traction Assist

indicator light in the instrument cluster turns on.

Pressing the Off-Road Traction Assist switch again cancels the Off-Road Traction Assist.

NOTE

If the engine is stopped with the Off-Road Traction Assist operational, the Off-Road Traction Assist is cancelled when the engine is started the next time.

Drive Selection^{*}

Drive selection is a system which switches the vehicle's drive mode to SPORT mode. When SPORT mode is selected, the vehicle response is enhanced when the accelerator pedal is depressed, resulting in powerful acceleration.

Warning and Cautions for Using the Drive Selection



Do not use the SPORT mode when driving on slippery roads such as wet or snow-covered roads. It may cause tyre slipping.

How to Use the Drive Selection



When the sport mode is selected, the select mode indicator light **SPORT** turns on in the instrument cluster



When SPORT mode is cancelled, the select mode indicator light **SPORT** in the instrument cluster turns off.

NOTE

 Depending on driving conditions when selecting SPORT mode, the vehicle may perform shift-down or accelerate slightly.

- When SPORT mode is selected, driving the vehicle at higher engine speeds increases and fuel economy may worsen. Cancelling SPORT mode during normal driving is recommended.
- SPORT mode cannot be switched in the following cases. If the mode cannot be switched to SPORT mode, the select mode indicator light SPORT flashes.
 - The Antilock Brake System (ABS) is operating.
 - The Traction Control System (TCS) is operating.
 - The Dynamic Stability Control (DSC) is operating.
 - The steering wheel is being operated abruptly.
 - Mazda Radar Cruise Control (MRCC) is operating.
- SPORT mode is cancelled in the following cases.
 - · The vehicle power is switched off.
 - Mazda Radar Cruise Control (MRCC) is set.

i-ACTIV AWD

AWD demonstrates superior driving performance on slippery surfaces such as snow-covered roads, sandy areas, mud, and steep slopes.

Warnings and Cautions for Using the i-ACTIV AWD

MARNING

Do not rotate wheels that have left the ground due to the vehicle being stuck or in a ditch.

The drive component can be seriously damaged, resulting in an accident. It can also lead to overheating, oil leakage, and fire.

A CAUTION

- ➤ This vehicle is not designed for off-road and rally driving. Do not drive over rough rocky roads and river beds.
- ➤ Unevenly worn tyres, mismatched manufacturers, models, or brands can be different in size even if the printed size on the tyre is the same. AWD functionality may be limited or potential damage to the AWD system may occur with tyres of different sizes.

Power Steering

The power steering operates while the engine is operating.

Even when the engine is stopped or the power steering system does not operate, steering is possible but the operation may feel heavier compared to normal.

Tyre Pressure Monitoring System (TPMS)*

The TPMS monitors the air pressure of each tyre and informs the driver of a decrease in the tyre air pressure when it becomes lower than the specified air pressure.

For the TPMS, the air pressure data sent from the tyre pressure sensors installed on each wheel via radio signal is received by the receiver unit in the vehicle to monitor the tyre pressures.



1. Tyre pressure sensor

Warning and Cautions for Using the Tyre Pressure Monitoring System (TPMS)

! WARNING

Do not drive the vehicle at high speeds if the TPMS warning light is turned on or flashing.

Driving the vehicle at high speeds while the TPMS warning light is turned on or flashing is dangerous because the brake performance and the steering wheel operability will be reduced. If the vehicle is driven at high speeds or the brakes are suddenly applied, it could lead to an accident. Gradually apply the brake and reduce the vehicle speed.

Do not ignore the TPMS warning light

when it is turned on or flashing. Continuing to drive the vehicle while ignoring the illumination/flashing of the TPMS warning light is dangerous because a tyre may burst which could lead to an accident. Take appropriate measures as soon as possible.

A CAUTION

Each tyre, including the spare (if

provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tyre inflation pressure label. (If your vehicle has tyres of a different size than the size indicated on the vehicle placard or tyre inflation pressure label, you should determine the proper tyre inflation pressure for those tyres.) As an added safety feature, your vehicle has been equipped with a tyre pressure monitoring system (TPMS) that illuminates a low tyre pressure telltale when one or more of your tyres is significantly under-inflated. Accordingly, when the low tyre pressure telltale illuminates, you should stop and check your tyres as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tyre maintenance, and it is the driver's

Please note that the IPMS is not a substitute for proper tyre maintenance, and it is the driver's responsibility to maintain correct tyre pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tyre pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tyre pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated. the system may not be able to detect or signal low tyre pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tyres or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tyres or wheels on your vehicle to ensure that the replacement or alternate tyres and wheels allow the TPMS to continue to function properly.

To avoid false readings, the system samples for a little while before indicating a problem. As a result it will not instantaneously register a rapid tyre deflation or blow out.

How to Use the Tyre Pressure Monitoring System (TPMS)

Check the tyre pressure

The current tyre pressure can be checked on the centre display.
Refer to the Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).

Low tyre pressure warning

When a tyre pressure of the specified air pressure or lower is detected, the

TPMS warning light turns on and a warning indication is displayed in the instrument cluster.



Action

 Adjust the tyre pressure to the appropriate pressure.
 Refer to the Tyres on page 10-90.



If the tyre pressure is adjusted when the tyre is warm, the tyre pressure may lower below the specified pressure after cooling and the warning light may turn on. Adjust the air pressure of the tyres when they are cold.

- 2. Make sure that the TPMS warning light (!) is turned off.
- 3. If the TPMS warning light does not turn off, drive the vehicle for 3 minutes or longer at a speed of 25 km/h (16 mph) or faster.
- 4. Make sure that the TPMS warning light is turned off.

If the TPMS warning light remains on even after adjusting the tyre pressure, there is a possibility that the tyre is flat.



When inspecting/adjusting the tyre pressures, do not apply excessive force to the air valve of the tyre pressure sensor. Otherwise, the tyre pressure sensor could be damaged.

When changing tyres and wheels

When changing the tyres or wheels (such as installing winter tyres), it will be necessary to register the ID signal code of the tyre pressure sensor to the TPMS.

Have an expert repairer (we recommend an Authorised Mazda Repairer) do the registration or register the ID signal codes of the tyre pressure sensors using the following procedure.

NOTE

The tyre pressure sensors on each wheel have a unique ID signal code. For the TPMS to operate correctly, the ID signal codes of the tyre pressure sensors need to be registered to the system.

- 1. Wait more than 19 minutes after changing a tyre or wheel.
- After more than 19 minutes have passed, drive the vehicle at a speed of 25 km/h (16 mph) or faster for 3 minutes or longer. While driving,

the ID signal codes of the tyre pressure sensors are automatically registered.

NOTE

If you drive the vehicle within 19 minutes of changing a tyre or wheel, the TPMS warning light (!) will flash because the ID signal codes for the tyre pressure sensors were not registered. In this case, stop the vehicle and register the ID signal codes of the tyre pressure sensors following the procedure.

When replacing tyres and wheels



- ➤ When replacing the tyres and wheels, consult an expert repairer (we recommend an Authorised Mazda Repairer) Otherwise, the tyre pressure sensors could be damaged when replacing them.
- ➤ Do not install non-genuine wheels. If wheels other than genuine ones are installed, it may not be possible to install the tyre pressure sensors.

When replacing a tyre or wheel, always install the tyre pressure sensor. The following combinations of tyres, wheels, or tyres and wheels are possible.

- The tyre pressure sensor from the old wheel is removed and it is installed to the new wheel.
- Only a tyre is replaced without replacing the tyre pressure sensor and wheel.
- · A new tyre pressure sensor is installed to a new wheel.

NOTE

When installing a new tyre pressure sensor, the ID signal code for the tyre pressure sensor needs to be registered. For details on purchasing a tyre pressure sensor and registering the ID signal of the tyre pressure sensor, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Petrol Particulate Filter (e-SKYACTIV X)

The petrol particulate filter collects and removes most of the particulate matter (PM) in the exhaust gas of a petrol engine. PM collected by the petrol particulate filter is removed naturally while the vehicle is being driven with the engine warmed up.

Warnings and Cautions for When the Refuelling

MARNING

Always heed the following when refuelling.

- ➤ Turn off the engine.
- ➤ Keep sparks and flames away from the fuel-filler port.
- ➤ Wipe off any spilled fuel as soon as possible.

Otherwise, it could cause a fire or explosion because fuel or fuel vapour could ignite easily.

Before refuelling, make sure to discharge the static electricity in your body by touching a metal object on the vehicle body.

An electrical discharge could ignite the fuel or cause serious burns.

Always heed the following while refuelling.

- Always refuel the vehicle by yourself and do not allow other people to come close to the fuel-filler port.
- Do not go back inside the cabin or touch a person or object charged with static electricity.
- Do not use any electronic devices such as a mobile phone or Smartphone.

It could ignite the fuel or cause serious burns caused by the charged static electricity in your body again.

When opening/closing the fuel-filler cap, always turn the fuel-filler cap by holding the knob of the fuel-filler cap.

An electrical discharge could ignite the fuel or cause serious burns.

Slowly open the fuel-filler cap, wait for any hissing to stop, then open the cap.

If the fuel-filler cap is opened quickly, fuel may spray out and cause a fire. Spraying fuel can also be harmful if it gets in the eyes or on the skin.

Do not breath fuel vapours.

Toxic substances might be included in the fuel.

Insert the refuelling nozzle into the fuel-filler port securely.

If the nozzle is not inserted sufficiently, it may delay the auto stop when the tank is full, resulting in the fuel spilling over and a possible fire.

Do not continue fueling after it is stopped automatically.

If you continue fueling, fuel may spill over causing a fire.

Do not pull out the refuelling nozzle immediately after the fuel is stopped automatically.

The fuel remaining in the refuelling nozzle may spill out and cause a fire.

Securely close the fuel-filler cap. If the fuel-filler cap is not closed securely, fuel may leak while driving the vehicle which could cause a fire.



➤ Follow the fueling instructions indicated at the gas station when refuelling.

- Always close the door and windows when refuelling. If a fire occurs with the doors or windows open, the flames may spread into cabin.
- Do not spill fuel on the vehicle while refuelling. It may cause discolouration, stains, or paint damage.
- Do not use any non-genuine fuel-filler cap. Use of a non-genuine fuel-filler cap may lead to a malfunction in the fuel system or emission system.
- ➤ When using an automatic car wash or a high water pressure car wash, make sure that the fuel-filler flap is closed and lock the doors.

 Otherwise, the fuel-filler flap may open unexpectedly and become damaged.

Refuelling

- 1. Close all the doors, and the liftgate.
- 2. Switch the vehicle power OFF.
- 3. Unlock the driver's door.
- 4. Press the fuel-filler flap. The fuel-filler flap opens.



5. Slowly turn the fuel-filler cap. The fuel-filler cap opens.



6. Place the fuel-filler cap on the fuel-filler flap holder.



- 7. Insert the refuelling nozzle all the way and begin refuelling.
- 8. Turn the fuel-filler cap until a click sound is heard.
- 9. Close the fuel-filler flap.

NOTE

- If the fuel-filler flap is closed after locking the doors, the fuel-filler flap will not be locked.
- If the doors are locked by any of the following functions, the fuel-filler flap is also locked at the same time.
 - Vehicle speed sensing auto door lock function
 - · Auto re-lock function

Fuel Requirements

Vehicles with catalytic converters or oxygen sensors must use ONLY UNLEADED FUEL, which will reduce exhaust emissions and keep spark plug fouling to a minimum.

To achieve maximum engine performance, use the specified fuel.

Fuel	Research Octane Number	Country
Premium unleaded fuel (Conforming to EN 228 and within E10)*1	95 or above	Albania, Algeria, Andorra, Antigua, Armenia, Aruba, Austria, Azerbaijan, Barbados, Belarus, Belgium, Bermuda, Bolivia, Bosnia and Herzegovina, Botswana, Brunei, Bulgaria, Canary Islands, Croatia, Cyprus, Czech, Denmark, Estonia, F.Guiana, Faeroe, Finland, France, Georgia, Germany, Greece, Grenada, Guadeloupe, Guatemala, Honduras, Hong Kong, Hungary, Iceland, Ireland, Israel, Italy, Jamaica, Kazakhstan, Latvia, Lebanon, Lesoto, Libya, Liechtenstein, Lithuania, Luxembourg, Macau, Macedonia, Madagascar, Malta, Martinique, Mauritius, Moldova, Monaco, Mongolia, Montenegro, Morocco, Namibia, New Caledonia, Nicaragua, Norway, Paraguay, Poland, Portugal, Reunion, Romania, Russia, San Marino, Serbia, Seychelles, Singapore, Slovakia, Slovenia, South Africa, Spain, St.Lucia, St.Martin, St.Vincent, Surinam, Swaziland, Sweden, Switzerland, Tahiti, Taiwan, The Netherlands, Tunisia, UAE, UK, Ukraine, Uruguay, Vanuatu, Vatican
	92 or above	Egypt, Myanmar
Regular unleaded fuel	90 or above	Angola, B.Virgin, Bahrain, Burundi, Cambodia, Cameroon, Chile, Colombia, Commonwealth of Dominica, Costa Rica, Curacao, Dominican Republic (LHD), Ecuador, El Salvador, Fiji, Gabon, Ghana, Haiti, Indonesia, Iraq, Ivory Coast, Jordan, Kenya, Kuwait, Laos, Marshall Islands, Mozambique, Nepal, Nigeria, Oman, Panama, Papua New Guinea, Peru, Qatar, Saudi Arabia, Senegal, Sri Lanka, Syria, Tanzania, The Philippines, Trinidad and Tobago, Ustt ² , Zimbabwe

^{*1} Europe

^{*}2 Republic of Palau & Federated States of Micronesia Fuel with a lower rating will negatively affect the emission control system performance and could also cause engine knocking and serious engine damage.

Warnings and Cautions for Using the Fuel Requirements

A CAUTION

- ➤ USE ONLY UNLEADED FUEL. Leaded fuel is harmful to the catalytic converter and oxygen sensors and will lead to deterioration of the emission control system and or failures.
- The use of E10 fuel with 10 % ethanol in Europe is safe for your vehicle. Damage to your vehicle may occur when ethanol exceeds this recommendation.
- ➤ Never add fuel system additives other than a Mazda genuine product, otherwise the emission control system could be damaged. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.

Deposit Cleaner

To get the best performance out of our newest-technology SKYACTIV petrol engines, cleaning of deposits adhering to the fuel related system, such as fuel injectors, may be required by using a Mazda genuine deposit cleaner in the specified countries.

Refer to Maintenance Table on page 9-6.

Warnings and Cautions for Using the Deposit Cleaner

A CAUTION

- According to the inspection result of scheduled maintenance, Mazda genuine deposit cleaner is to be used. Neglected deposits in the fuel system may cause malfunction indicator light coming on to indicate an engine malfunction, and if the vehicle continues to be driven under this condition, it could result in problems occurring such as idling failure and poor acceleration.
- The Mazda genuine deposit cleaner is not a guarantee of engine performance no matter the quality of the fuel used. When a problem occurs even though the specified fuel is used and the Mazda genuine deposit cleaner is used according to the instructions, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- If a deposit cleaner other than the Mazda genuine product is used, it could result in damage to the fuel system or the engine internally; therefore use only the Mazda genuine product. Mazda genuine deposit cleaner: K002 W0 001A
- ➤ If cleaning required according to the inspection result of scheduled maintenance is not done with the Mazda genuine deposit cleaner, repair cost for engine malfunctions caused by deposits are borne by the customer.

How to Use the Deposit Cleaner

With the fuel tank full, infuse 1 bottle of Mazda genuine deposit cleaner directly into the fuel tank.

NOTE

Infusing the deposit cleaner when the fuel tank is full provides the concentration of cleaner within the range effective for removing the deposits and the best cleaning results can be obtained by the full tank of fuel with the infused deposit cleaner contacting the deposits for a long period of time until the full tank of fuel is nearly used up.

Emission Control System

This vehicle is equipped with an emission control system (the catalytic converter is part of this system) that enables the vehicle to comply with existing exhaust emissions requirements.

Warnings and Cautions for Using the Emission Control System

MARNING

Never park over or near anything flammable.

Parking over or near anything flammable, such as dry grass, is dangerous. Even with the engine turned off, the exhaust system remains very hot after normal use and could ignite anything flammable. A resulting fire could cause serious injury or death.

A CAUTION

Ignoring the following precautions could cause lead to accumulate on the catalyst inside the converter or cause the converter to get very hot. Either condition will damage the converter and cause poor performance.

- > USE ONLY UNLEADED FUEL.
- ➤ Do not drive your Mazda with any sign of engine malfunction.
- ➤ Do not coast if the vehicle power is switched OFF.
- ➤ Do not descend steep grades in gear if the vehicle power is switched OFF.
- ➤ Do not operate the engine at high idle for more than 2 minutes.
- ➤ Do not tamper with the emission control system. All inspections and adjustments must be made by a qualified technician.
- ➤ Do not push-start or pull-start this vehicle.

Warnings and Cautions for Engine Exhaust (Carbon monoxide)

MARNING

Do not drive your vehicle if you smell exhaust gas inside the vehicle:

Engine exhaust gas is dangerous. This gas contains carbon monoxide (CO), which is colourless, odourless, and poisonous. When inhaled, it can cause loss of consciousness and death. If you smell exhaust gas inside the vehicle, keep all windows fully open and contact an expert repairer (we recommend an Authorised Mazda Repairer) immediately.

Do not run the engine when inside an enclosed area:

Running the engine inside an enclosed area, such as a garage, is dangerous. Exhaust gas, which contains poisonous carbon monoxide, could easily enter the cabin. Loss of consciousness or even death could occur.

Open the windows or adjust the heating or cooling system to draw fresh air when idling the engine: Exhaust gas is dangerous. When the vehicle is stopped with the windows closed and the engine running for a long time even in an open area, exhaust gas, which contains poisonous carbon monoxide, could enter the cabin. Loss of consciousness or even death could occur.

Clear snow from underneath and around your vehicle, particularly the tail pipe, before starting the engine:

Running the engine when a vehicle is stopped in deep snow is dangerous. The exhaust pipe could be blocked by the snow, allowing exhaust gas to enter the cabin. Because exhaust gas contains poisonous carbon monoxide, it could cause loss of consciousness or even death to occupants in the cabin.

i-ACTIVSENSE

i-ACTIVSENSE is a collective term covering a series of advanced safety and driver support systems. i-ACTIVSENSE consists of two technologies, active safety and pre-crash safety technologies.

Warnings and Cautions for Using the i-ACTIVSENSE



Do not rely completely on the i-ACTIVSENSE system.

The i-ACTIVSENSE system is designed to assist the driver in safe driving by reducing the load on the driver and helping to avert collisions or reduce their severity.

Because each i-ACTIVSENSE system has its limitations, always drive carefully.

Active Safety Technology

Active safety technology supports driver's safe driving and helps to prevent accidents from occurring. Active safety technology includes driver awareness support systems and driving support systems.

Driver Awareness Support Systems

Driver awareness support systems assist in the recognition of roads, signs, vehicle surroundings, and driver fatigue.

Driver awareness support systems include the following systems.

Nighttime visibility

Adaptive Front Lighting	System
(AFS)	
High Beam Control Syst	em
(HBC)	page 5-129
Adaptive LED Headlight	s (ALH)

Left/right side and rear detection

Lane Departure Warning System
(LDWS) page 5-135
Blind Spot Monitoring (BSM)
page 5-137

Road sign recognition

Traffic Sign Recognition Syste	m	
(TSR)p	age	5-140

Inter-vehicle distance recognition

Distance & Speed Alert (DSA)
page 5-144

Forward obstruction detection when accelerating at an intersection

Front Cross Traffic Alert (FCTA)
page 5-153

Rear obstruction detection when leaving a parking space

Full-surround recognition
360° View Monitor page 5-197
Driver fatigue detection
Driver Attention Alert (DAA)

.....page 5-146

Driver Monitoring (DM).... page 5-149

Rear Cross Traffic Alert (RCTA).....

nage 5-156

Driver Support Systems

Driver support systems assist in acceleration, deceleration, and steering operations while driving. Driver support systems include the following systems.

Inter-vehicle distance

Mazda Radar Cruise Con	trol	
(MRCC)	page	5-158

Inter-vehicle distance and lane keeping

Traffic Support	
 	page 5-168

Lane departure

Lane Keep Assist System (LAS)
page 5-181

Speed control

naga F 19	
page 5-18	4
Intelligent Speed Assistance	
(ISA) page 5-18	7

Adjustable Speed Limiter (ASL)

Pre-crash Safety Technology

Pre-crash safety technology is designed to assist in collision avoidance in situations where it is difficult for the driver to avert it, and to reduce damage from a collision if it occurs. Pre-crash safety technology includes the following systems.

Collision avoidance support and damage reduction

Smart Brake Support (SBS)page 5-190
Collision damage reduction
Secondary Collision Reductionpage 5-21

i-ACTIVSENSE Status Symbol (Warning/Risk Avoidance Support System)

The i-ACTIVSENSE status symbol (Warning/risk avoidance support system) indicates the operation status.

- Lane Departure Warning System (LDWS)
- · Blind Spot Monitoring (BSM)
- Traffic Sign Recognition System (TSR)
- · Distance & Speed Alert (DSA)
- · Front Cross Traffic Alert (FCTA)
- · Rear Cross Traffic Alert (RCTA)
- · Lane-keep Assist System (LAS)
- Smart Brake Support (SBS) forward detection function
- Smart Brake Support (SBS) rearward detection function
- Smart Brake Support (SBS) Rear Crossing

i-ACTIVSENSE status symbol (Warning/risk avoidance support system) (white) (system standby status)

If all systems do not meet the operation conditions, or if any system has stopped functioning, the i-ACTIVSENSE status symbol (Warning/risk avoidance support system) (white)

i-ACTIVSENSE status symbol (Warning/risk avoidance support system) (green) (system operation status)

displayed.

If any system meets the operation conditions, the i-ACTIVSENSE status symbol (Warning/risk avoidance

support system) (green) (1/1) is displayed.

NOTE

Even if the i-ACTIVSENSE status symbol (Warning/risk avoidance support system) (green) is displayed, systems which do not meet the operation conditions will not operate.

i-ACTIVSENSE status symbol (Warning/risk avoidance support system) (amber) (system) malfunction status)


If any system has a malfunction, the i-ACTIVSENSE status symbol (Warning/risk avoidance support system) (amber) *1/ is displayed.

i-ACTIVSENSE OFF symbol (Warning/ risk avoidance support system) (system stop status)

If all systems are turned off using Mazda Connect, the i-ACTIVSENSE OFF symbol (Warning/risk avoidance support system) *1/ is is displayed.

Displays when i-ACTIVSENSE warning sound is switched off. Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

How to Use the i-ACTIVSENSE mute switch

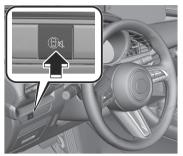

When the i-ACTIVSENSE mute switch is pressed while the following systems are operating, the warning sound deactivates.

- · Lane Departure Warning System (LDWS)
- · Blind Spot Monitoring (BSM)
- Traffic Sign Recognition System (TSR)
- · Front Cross Traffic Alert (FCTA)
- · Rear Cross Traffic Alert (RCTA)
- · Smart Brake Support (SBS) forward detection function

Press the i-ACTIVSENSE mute switch again to return to the previous operation status.

NOTE

If the vehicle power is switched OFF with each system warning sound turned off using the i-ACTIVSENSE mute switch, each system automatically turns on the next time the vehicle power is switched ON.

Forward Sensing Camera

The Forward Sensing Camera (FSC) determines the conditions ahead of the vehicle and detects the white (yellow) lines on the traffic lane.



1. Forward Sensing Camera (FSC)

The following systems utilize the Forward Sensing Camera (FSC).

- High Beam Control System (HBC)
- Adaptive LED Headlights (ALH)
- · Lane Departure Warning System (LDWS)
- · Traffic Sign Recognition System (TSR)
- · Distance & Speed Alert (DSA)
- Driver Attention Alert (DAA)
- · Mazda Radar Cruise Control (MRCC)
- · Cruising & Traffic Support (CTS)
- · Lane-keep Assist System (LAS)
- · Smart Brake Support (SBS) forward drive detection

WARNING

Do not modify the suspension:

If the vehicle height or inclination is changed, the system will not be able to correctly detect vehicles ahead. This will result in the system not operating normally or mistakenly operating, which could cause a serious accident.

▲ CAUTION

Heed the following cautions to operate the system correctly.

- > Do not hit or apply strong force to the Forward Sensing Camera (FSC) or the area around it. If the Forward Sensing Camera (FSC) received a strong impact, stop using the following systems and consult an expert repairer (we recommend an Authorised Mazda Repairer).
 - ➤ High Beam Control System (HBC)
 - ➤ Adaptive LED Headlights (ALH)
 - Lane Departure Warning System (LDWS)
 - ➤ Traffic Sign Recognition System (TSR)
 - ➤ Distance & Speed Alert (DSA)
 - ➤ Driver Attention Alert (DAA)
 - ➤ Mazda Radar Cruise Control (MRCC)
 - Cruising & Traffic Support (CTS)
 - Lane-keep Assist System (LAS)
 - Smart Brake Support (SBS) forward drive detection
- ➤ Do not remove the Forward Sensing Camera (FSC) cover.
- ➤ Be careful not to scratch the Forward Sensing Camera (FSC) lens or allow it to get dirty. Also, do not take the camera apart. Otherwise, it may cause a malfunction or mis-operation.
- ➤ The direction of the Forward Sensing Camera (FSC) has been finely adjusted, therefore do not change the installation position or remove the Forward Sensing Camera (FSC). Otherwise, it may cause a malfunction or mis-operation.
- Consult an expert repairer (we recommend an Authorised Mazda Repairer) regarding cleaning of the camera lens.

Forward Sensing Camera (FSC)

- ➤ Do not place objects on the instrument panel which reflect light.
- ➤ Do not apply accessories, stickers, or film to the windscreen near the Forward Sensing Camera (FSC). If the area in front of the Forward Sensing Camera (FSC) lens is obstructed, it will cause the system to not operate correctly even if it is transparent.
- Always keep the windscreen glass around the Forward Sensing Camera (FSC) clean by removing dirt or fogging. If the windscreen is fogged, press the windscreen defroster switch.
- The Forward Sensing Camera (FSC) includes a function for detecting a soiled windscreen and informing the driver, however, depending on the conditions, it may not detect plastic shopping bags, water or snow on the windscreen. In such cases, the system cannot accurately determine a vehicle or obstruction in front and may not be able to operate normally. Always drive carefully and pay attention to the road ahead.
- ➤ When cleaning the windscreen, do not allow glass cleaners or similar cleaning fluids to get on the Forward Sensing Camera (FSC) lens. In addition, do not touch the Forward Sensing Camera (FSC) lens.
- Consult an expert repairer (we recommend an Authorised Mazda Repairer) regarding cleaning the interior side of the windscreen around the Forward Sensing Camera (FSC).
- If there are cracks or damage caused by flying gravel or debris on the windscreen, always have the windscreen replaced. Consult an expert repairer (we recommend an Authorised Mazda Repairer) before replacing the windscreen.

- Consult an expert repairer (we recommend an Authorised Mazda Repairer) before doing repairs around the Forward Sensing Camera (FSC).
- ➤ When doing repairs around the rearview mirror, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- ➤ Always use tyres of the specified size and the same manufacturer, brand, and tread pattern on all 4 wheels. In addition, do not use tyres with significantly different wear patterns or tyre pressures on the same vehicle (including temporary spare tyre).

NOTE

- · If the Forward Sensing Camera (FSC) does not function normally due to fog or the vehicle being driven towards the sun, the functions related to the Forward Sensing Camera (FSC) are temporarily stopped. In this case, the following warning indications turn on. However, this does not indicate a problem.
 - HBC warning indication
 - ALH warning indication
 - · i-ACTIVSENSE warning indication
 - SBS OFF indication
- If the Forward Sensing Camera (FSC) does not function normally due to high temperatures, the functions related to the Forward Sensing Camera (FSC) are temporarily stopped. In this case, the following warning indications turn on. However, this does not indicate a problem. Cool down the area around the Forward Sensing Camera (FSC) such as by turning on the air conditioner.
 - · HBC warning indication

- · ALH warning indication
- · i-ACTIVSENSE warning indication
- · SBS OFF indication
- · When the Forward Sensing Camera (FSC) detects that the windscreen is dirty or foggy, the functions related to the Forward Sensing Camera (FSC) are temporarily stopped. In this case, the following warning indications turn on. However, this does not indicate a problem. Remove the dirt from the windscreen or press the windscreen defroster switch.
 - · HBC warning indication
 - · ALH warning indication
 - · i-ACTIVSENSE warning indication
 - · SBS OFF indication

Detection of pedestrians

The Forward Sensing Camera (FSC) detects pedestrians when all of the following conditions are met.

- The height of a pedestrian is about 1 to 2 meters.
- The outline of a pedestrian is recognised such as the head, both shoulders, or the feet.

The Forward Sensing Camera (FSC) may not be able to detect pedestrians when any of the following conditions is met.

- · There are multiple pedestrians.
- A pedestrian is close to a separate object.
- · A pedestrian is crouching, lying, or slouching.
- · A pedestrian suddenly jumps into the road.
- A pedestrian is holding something (such as an open umbrella or large baggage).
- A pedestrian blends into the background (such as in a dark location at night or by wearing

clothes matching the background colour).

Detection of objects

When any of the following conditions is met, the Forward Sensing Camera (FSC) may not be able to detect target objects correctly, and each system may not operate normally.

- · You are driving your vehicle at the same speed as the vehicle ahead.
- The headlights of your vehicle are not turned on during the night or in a tunnel.
- The target object is in the blind spot of the Forward Sensing Camera (FSC).
- A person or object bursts onto the road from the shoulder or cuts right in front of you.
- The distance between your vehicle and the target object is extremely close or extremely far.
- You change the course and approach a target object.
- The target object (vehicle ahead, white line (yellow line), sign) is dirty or worn.
- · A vehicle ahead has a special shape (such as a vehicle carrier).
- A vehicle ahead is a truck with a low loading platform.
- · A vehicle ahead has an extremely low or high profile.
- A vehicle ahead is outside the illumination range of the headlights.
- The illumination area of the tail lights of the vehicle ahead is small.
- The tail lights of a vehicle ahead are dim or turned off.
- The headlights of an on-coming vehicle are dim or turned off.
- Under bad weather conditions (rain, fog, and snow).

Forward Sensing Camera (FSC)


- Front visibility is reduced (due to a vehicle ahead casting off water, snow, or sand).
- Strong light is directed at the front of your vehicle (such as backlight and high-beam headlights).
- The surrounding area is dark (such as during the night, early evening, or early morning, or in a tunnel or indoor parking lot).
- There are light sources in the surrounding area (such as street lamps, illuminated signboards, and traffic signals).
- There are objects which reflect light (such as reflective plates and signs) in the surrounding area.
- The surrounding brightness suddenly changes (such as when entering or exiting a tunnel).
- The brightness of the headlights of your vehicle is insufficient (such as the illumination is weakened due to a dirty lens or the optical axis is deviated).
- Tyres other than the specified size are used on your vehicle (such as when tyre chains or temporary spare tyres are used).
- The tyres on your vehicle have significantly different wear.
- Foreign matter is stuck to the windscreen (such as ice, fog, snow, frost, raindrops, dirt, or a piece of plastic).
- The windscreen is dirty or fogged.
- The Forward Sensing Camera (FSC) is blocked by an obstruction, causing poor forward visibility (such as when roof rails are installed to the vehicle and a long object is loaded).
- The windscreen washer is being used.
- The windscreen wipers are not used when it is raining.

- · Your vehicle is tilted (such as when heavy luggage is in the luggage compartment or on the rear seat).
- The vehicle is making a sharp curve, or ascending or descending a steep slope.
- The vehicle is driven on a road with sharp curves or up and down (wavy) slopes.
- The vehicle is driven on uneven roads.
- The vehicle is driven next to walls with no patterning (including fences and longitudinally striped walls).
- There is a strong reflection of light from the road surface.

Radar Sensors^{*}

The radar sensor detects objects by sending radio waves in a specific direction and receiving the reflected waves back.

Vehicle front

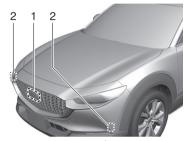

- Front radar sensor*
- 2 Front side radar sensors*

Vehicle rear



Rear side radar sensors



- > Heed the following cautions so that the radar sensors can function normally.
 - ➤ Do not modify the suspensions.

- > Always use tyres of the specified size and the same manufacturer. brand, and tread pattern on all 4 wheels. In addition, do not use tyres with significantly different wear patterns or tyre pressures on the same vehicle (including temporary spare tyre).
- > Do not spray highly pressurised water against the radar sensors or rub them strongly.
- Do not apply stickers on parts near the radar sensors.
- > If foreign matter adheres to parts near the radar sensors, remove it and switch the vehicle power OFF. The foreign matter detection status is reset by switching the vehicle power OFF.
- Consult an expert repairer (we recommend an Authorised Mazda Repairer) if you need to repair, replace, or paint parts near the radar sensors.
- ➤ Do not install any parts that cover the front of the radar sensors.
- > Do not replace the radiator grille and emblem with anything other than genuine products.
- > If strong force is applied to parts near the radar sensors, the direction of the radar sensor may become deviated and each system may not operate normally. Stop each system immediately and have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

• The radar sensors include a function for detecting abnormalities in the sensor, soiling of the sensor's front surface, and informing the driver. If a message appears on the screen that can be addressed, follow the directions of the message.

Front radar sensor

The following systems utilize the front radar sensor.

- · Distance & Speed Alert (DSA)
- Mazda Radar Cruise Control (MRCC)
- · Cruising & Traffic Support (CTS)
- Smart Brake Support (SBS) forward drive detection

NOTE

- When driving on roads with few vehicles ahead, a message may temporarily be displayed on the screen indicating that the front radar sensor is dirty.
- When the vehicle is driven on roads in which there is an elevated road on one side, the front radar sensor function may be restricted temporarily.
- If the lead-acid battery power is weak, the front radar sensor detection function may decrease and each system may not operate normally.
- When any of the following conditions is met, the front radar sensor may not be able to detect vehicles ahead or obstructions correctly.
 - · During inclement weather.
 - · Front visibility is reduced.

- The vehicle is driven near facilities or objects emitting strong radio waves.
- The rear surface of a vehicle ahead does not reflect radio waves effectively.
- · A vehicle ahead has limited areas that can reflect radio waves.
- · Your vehicle is tilted.
- · Foreign matter is adhering to parts near the front radar sensor.
- When any of the following conditions is met, the front radar sensor may detect vehicles in the adjacent lane or surrounding obstructions, or it may not be able to detect vehicles ahead or obstructions.
 - The vehicle is entering or exiting a curve.
 - The vehicle is driven on a continuously curving road.
 - The vehicle is driven on roads with repeated up and downslopes.
 - The vehicle is driven on roads with narrow lanes.
 - The vehicle is driven on poor roads or unpaved roads.
 - The vehicle ahead enters the front radar sensor's blind spot.
 - The distance to the vehicle ahead is extremely close.
 - The vehicle ahead is being driven in an unstable condition.
 - · A vehicle suddenly comes close such as by cutting into your lane.

Front side radar sensors

The following system utilizes front side radar sensors.

· Front Cross Traffic Alert (FCTA)

NOTE

- When any of the following conditions is met, the front side radar sensors may not be able to detect target objects.
 - · During inclement weather.
 - The vehicle is driven on a sharp curve or on bumpy roads.
 - Radar sensor from an adjacent vehicle causes radio wave interference.
 - The detection range of a front side radar sensor is obstructed by an adjacent wall or vehicle, or the radar is reflected.
 - A vehicle suddenly enters the detection range from the front or side of your vehicle.
 - The target object is extremely small.
 - The target object is extremely low/high.
 - · A vehicle approaches while turning.
 - · A vehicle that has stopped suddenly starts to move.
 - · Multiple objects move at the same time.
 - The bumper around a front side radar sensor is deformed.
 - Foreign matter is adhering to the bumper around a front side radar sensor.
 - The temperature near a front side radar sensor is extremely hot.
- The front side radar sensors may not detect the following target objects.
 - · Animals.
 - · Pedestrians.
 - · Bicycles and small motorcycles moving at a low speed.
 - · Shopping carts.
 - Stationary objects on the road or roadside.

 Vehicles with shapes that may not reflect radar waves.

Rear side radar sensors

The following systems utilize rear side radar sensors.

- · Blind Spot Monitoring (BSM)
- · Rear Cross Traffic Alert (RCTA)
- Smart Brake Support (SBS) Rear Crossing

NOTE


- When any of the following conditions is met, the rear side radar sensors may not be able to detect target objects.
 - · During inclement weather.
 - The vehicle is driven on a sharp curve or on bumpy roads.
 - Radar sensor from an adjacent vehicle causes radio wave interference.
 - The detection range of a front side radar sensor is obstructed by an adjacent wall or vehicle, or the radar is reflected.
 - A vehicle suddenly enters the detection range from the front or side of your vehicle.
 - The target object is extremely small.
 - The target object is extremely low/ high.
 - · A vehicle approaches while turning.
 - · A vehicle that has stopped suddenly starts to move.
 - · Multiple objects move at the same time.
 - The bumper around a rear side radar sensor is deformed.
 - Foreign matter is adhering to the bumper around a rear side radar sensor.

- The temperature near a rear side radar sensor is extremely hot.
- · When towing a trailer.
- The rear side radar sensors may not detect the following target objects.
 - · Animals.
 - · Pedestrians.
 - · Bicycles and small motorcycles moving at a low speed.
 - · Shopping carts.
 - Stationary objects on the road or roadside.
 - · Vehicles with shapes that may not reflect radar waves.
 - A vehicle is travelling alongside your vehicle at nearly the same speed for an extended period of time.

Ultrasonic Sensors

The ultrasonic sensors detect objects by sending ultrasonic waves in a specific direction and receiving the reflected waves back.


Front ultrasonic sensors*

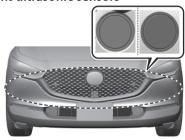

Rear ultrasonic sensors*



Detection ranges of ultrasonic sensors

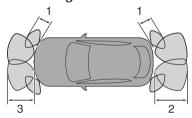

- 1. About 50 cm (20 in)
- 2. About 1 m 50 cm (59 in)
- 3. About 1 m (39.3 in)



- Heed the following cautions so that the ultrasonic sensors can function normally.
 - ➤ Do not modify the suspensions.

- ➤ Do not spray highly pressurised water against the ultrasonic sensors or rub them strongly.
- > Do not apply stickers on the ultrasonic sensors.
- > Consult an expert repairer (we recommend an Authorised Mazda Repairer) if you need to repair, replace, or paint the bumper.
- > Depending on the type of target object and surrounding conditions, the distance at which the ultrasonic sensors can detect target objects may be shortened or the target objects may not be detected. Always confirm the safety around the vehicle visually when driving.
- ➤ If strong force is applied to parts near the ultrasonic sensors, the direction of the ultrasonic sensor may become deviated and each system may not operate normally. Stop each system immediately and have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

- · The ultrasonic sensors include a function for detecting abnormalities in the sensor, soiling of the sensor's front surface, and informing the driver. If a message appears on the screen that can be addressed, follow the directions of the message.
- · When any of the following conditions is met, the ultrasonic sensors may not be able to detect target objects, and each system may not operate normally.
 - · Target object is thin such as wire, rope, or poles.
 - · Target object absorbs waves easily such as cotton or snow.
 - Target object has an angular shape.

- Target object is tall and wide at the upper part.
- · Target object height is low.
- · There are multiple target objects.
- Target objects are too close to the sensors.
- · Ice, snow, or mud is adhering to the sensor area.
- Heavy rainfall or pressurised water is applied to the sensor area.
- · The sensor areas are frozen.
- You cover the sensor with your hand.
- The area around the sensor has received a strong impact.
- · The vehicle is excessively tilted.
- · Under extremely hot or cold weather.
- Approached by an object that generates ultrasonic waves, such as the horn of another vehicle, the engine noise of a motorcycle, the air brake noise of a large vehicle, or the sensor of another vehicle.
- A commercially-available wing pole or an aerial for a radio transmitter is installed to the vehicle.
- The vehicle is moving towards a tall or square curbstone, or a steep grade.
- The vehicle is moving towards an uneven wall or stairs.
- The vehicle is driven in a place with low ceilings.
- The vehicle is driven on bumpy roads, inclines, gravel roads, dense grass, or grating.
- The ultrasonic sensor does not detect target objects directly beneath the bumper. Even if target objects which are located at a position lower than an ultrasonic sensor have been detected, the ultrasonic sensor may suddenly stop detecting as the vehicle approaches the target object.

Front ultrasonic sensors

The following systems utilize front ultrasonic sensors.

Parking Sensor


Rear ultrasonic sensors

The following systems utilize rear ultrasonic sensors.

- Smart Brake Support (SBS) reverse drive detection
- Parking Sensor

Cameras

The cameras shoot images of the area surrounding the vehicle.

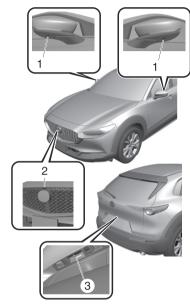

- Side cameras³
- Front camera
- 3. Rear camera

A CAUTION

- ➤ Do not disassemble, modify, or remove a camera.
- Consult an expert repairer (we recommend an Authorised Mazda Repairer) if you need to repair, replace, or paint parts near the cameras.
- If strong force is applied to a camera, the camera position and the installation angle may shift. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

- ➤ Heed the following cautions so that the cameras can function normally.
 - > Do not modify the suspensions.
 - Always use wheels of the specified size for the front and rear wheels. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for tyre replacement.
- > Do not apply oil film remover, organic solvents, wax or coating agents, because the camera cover is made of hard plastic. If any such agent is applied, wipe it off using a soft cloth immediately.
- ➤ Do not rub a camera cover forcefully with an abrasive or hard brush. The camera cover or lens might be scratched which might affect the images.
- ➤ If the lens of the camera is badly damaged by flying gravel, replace the camera. For the camera replacement, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- Depending on the type of target object and surrounding conditions, the distance at which the camera can detect target objects may be shortened or the target objects may not be detected. Always confirm the safety around the vehicle visually when driving.

NOTE

· Do not apply stickers and do not install accessories or illuminated number/character number plates to the area around a camera. Otherwise, the camera may not correctly display the surrounding conditions.

- If a camera is affected by excessive changes in temperature such as pouring hot water on the camera during cold weather, the camera may not operate normally.
- The cameras include a function for detecting abnormalities in the camera, soiling of the camera's front surface, and informing the driver. If a message appears on the screen that can be addressed, follow the directions of the message.
- If there are water droplets, snow, or mud on the camera lens, wipe it off using a soft cloth. If the camera lens is especially dirty, wash it off with mild detergent.

Front camera

The following system use the front camera.

· 360° View Monitor

Side cameras

The following system use the side cameras.

· 360° View Monitor

Rear camera

The following systems use rear camera.

- · 360° View Monitor
- · Rear View Monitor

Driver Monitoring Camera

The driver monitoring camera detects changes in the driver's facial features and estimates the driver's condition.



1. Driver monitoring camera

The following systems use the driver monitoring camera.

- Driver Monitoring (DM)
- · Smart Brake Support (SBS) forward detection function

NOTE

- Each system may not operate normally if any of the following conditions is met.
 - · You are wearing glasses or sunglasses
 - · A cap or hat you are wearing partially blocks the driver monitoring camera's view of your eyes, you have long bangs partially covering your eyes, or a part of your face is invisible due to a scarf, face mask, beard, or hand.
 - The lighting conditions change significantly (such as backlight, light from the side, direct light from the setting sun, or the headlights of on-coming vehicles)
 - Device that emits near-infrared light is used in the cabin.

- · The temperature in the cabin is high.
- · The driver monitoring camera is blocked by hands or arms.
- · There is more than one face in the detection range of the driver monitoring camera, such as when the front passenger or a rear seat passenger leans forward.
- · The driver's face is far out of the detection range of the driver monitoring camera, such as when the driver's face is put outside of the window.
- · (Israel and Europe (excluding Armenia, Azerbaijan, Belarus, Georgia, Kazakhstan, and Russia)) If the driver monitoring camera is blocked for a certain period of time or there are abnormalities in the temperature or voltage of the driver monitoring camera, driver monitoring may not operate normally. In this case, the i-ACTIVSENSE warning light turns on. However, this does not indicate a problem. If the driver monitoring camera is blocked for a certain period of time or there are abnormalities in the temperature or voltage of the driver monitoring camera, driver monitoring may not operate normally. In this case, the i-ACTIVSENSE warning light turns on. However, this does not indicate a problem.

Adaptive Front Lighting System (AFS)

The adaptive front lighting system (AFS) automatically adjusts the headlight beams to the left or right in conjunction with the operation of the steering wheel after the headlights have been turned on

How to Use the High **Adaptive Front Lighting** System (AFS)

Operating the AFS

The AFS operates when all of the following conditions are met.

· The vehicle speed is about 2 km/h (2 mph) or higher.

NOTE

 Headlights do not blind drivers approaching in the opposite direction no matter what side of the road you must drive your vehicle (left-hand or right-hand traffic). Therefore, it is not necessary to adjust the optical axis of the headlights when switching temporarily to driving on the opposite side of the road (left-hand or right-hand traffic).


Turning off the AFS

The AFS can be turned off using Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

High Beam Control System (HBC)*

The HBC determines the conditions in front of the vehicle while driving at night to automatically switch the headlights between high and low beams.

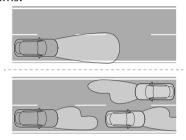

Warnings and Cautions for Using the High Beam Control System (HBC)

A CAUTION

- ➤ Heed the following cautions so that the HBC can operate normally.
 - > Do not modify the suspensions.
 - ➤ Do not modify the headlight units.
 - ➤ Do not remove the Forward Sensing Camera (FSC).
- Do not rely completely on the system and switch the headlights between the high and low beams manually if necessary.

How to Use the High Beam Control System (HBC)

NOTE

- The distance in which the HBC can detect objects varies depending on the surrounding conditions.
- The Forward Sensing Camera (FSC) may not be able to detect target objects correctly, and the HBC may not operate normally.
 Refer to Forward Sensing Camera (FSC) on page 5-115.

Using the HBC

Make sure that the light switch is in the AUTO position.



The HBC determines the surrounding conditions and operates automatically. When the HBC operates, the HBC indicator light (green) in the instrument cluster turns on.

Switching the headlights to high beams

The HBC switches the headlights to high beams when all of the following conditions are met.

• The vehicle speed is about 30 km/h (19 mph) or faster.

• The system does not detect a vehicle ahead.

Switching the headlights to low beams

The HBC switches the headlights to low beams when any of the following conditions is met.

- The vehicle speed is less than about 20 km/h (12 mph).
- When driving in areas with a continuous line of street lamps or on roads in well-lit cities and towns.
- The system detects the headlights of a vehicle ahead.

Cancelling the HBC during operation



When the HBC is cancelled, the HBC indicator light (green) in the instrument cluster turns off.

Press the HBC switch again to make the HBC operable.

NOTE

If the vehicle power is switched OFF with the HBC turned off, the HBC automatically turns on the next time the vehicle power is switched ON.

Turning off the HBC

The HBC can be turned off using Mazda Connect.


Refer to the Settings section in the Mazda Connect Owner's Manual.

Adaptive LED Headlights (ALH)*

The ALH are a system which determines the conditions ahead while driving at night to automatically switch the illumination range of the headlights or the illumination brightness. The ALH has the following 3 functions.


Glare-free high beams

When the high-beam are on, the illumination on vehicles ahead is dimmed

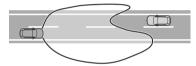


Wide-range low beam

Extends the illumination range of the low beams.

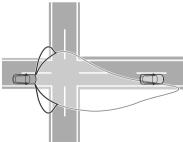

Highway mode

This feature shifts the illumination angle of the headlights upward while driving at high speeds.

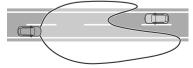

Warnings and Cautions for Using the Adaptive LED Headlights (ALH)

A CAUTION

- ➤ Heed the following cautions so that the ALH can operate normally.
 - ➤ Do not modify the suspensions.
 - ➤ Do not modify the headlight units.
 - ➤ Do not remove the Forward Sensing Camera (FSC).
- Do not rely completely on the system. Switch the headlights between the high and low beams manually if necessary.

How to Use the Adaptive LED Headlights (ALH)

NOTE

- The Forward Sensing Camera (FSC) may not be able to detect target objects correctly, and the ALH may not operate normally.
 Refer to Forward Sensing Camera (FSC) on page 5-115.
- Depending on the position and brightness of signs, the glare-free high beams may not operate normally.

Using the ALH

Make sure that the light switch is in the AUTO position.



The ALH operates automatically after determining the surrounding conditions.

When the glare-free high beams operate

The glare-free high beams operate when all of the following conditions are met.

 \cdot The vehicle speed is about 30 km/h (19 mph) or faster.

· The system detects a vehicle ahead.

The wide-range low beam operation conditions

The wide-range low beam operates while driving the vehicle at a vehicle speed slower than about 40 km/h (25 mph).

Highway mode operation conditions

Highway mode operates when the vehicle speed is about 105 km/h (65.2 mph) or faster.

Stopping the ALH during operation



When the ALH is cancelled, the ALH indicator light (green) in the instrument cluster turns off. Press the ALH switch again to make the ALH operable.

NOTE


 If the vehicle power is switched OFF with the ALH stopped, the ALH automatically turns on the next time the vehicle power is switched ON.

Turning off the ALH

The ALH can be turned off using Mazda Connect.
Refer to the Settings section in the Mazda Connect Owner's Manual.

Lane Departure Warning System (LDWS)*

The LDWS notifies the driver that the vehicle might be deviating from its lane. If there is a possibility of your vehicle deviating from the vehicle lane, a screen display and a warning sound notify the driver of the danger.

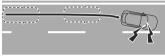

Warnings and Cautions for Using the Lane Departure Warning System (LDWS)

WARNING

Do not rely completely on the LDWS.

- > The LDWS has limitations. Do not rely completely on the system and always stay on course using the steering wheel.
- > The LDWS is not designed to compensate for a driver's lack of caution and relying on the system could lead to an accident.

A CAUTION

Heed the following cautions so that the LDWS can operate normally.

- ➤ Do not modify the suspensions.
- Always use wheels of the specified size for the front and rear wheels. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for tyre replacement.

Lane Departure Warning System (LDWS)

How to Use the Lane Departure Warning System (LDWS)

LDWS operates

The LDWS operates when all of the following conditions are met.

- The vehicle speed is about 60 km/h (37 mph) or faster.
- The system detects white (yellow) lane lines.
- The CTS steering assist function is not operating.
- The system determines that the vehicle may depart from the lane.

When the LDWS is operating, a screen display and a warning sound (steering wheel vibration and warning sound) notify the driver of the danger.

Instrument cluster



Active driving display



NOTE

 The LDWS operates only on the side that detects white lines (yellow lines).

- The forward sensing camera (FSC) may not be able to detect target objects correctly, and the LDWS may not operate normally.
 Refer to Forward Sensing Camera (FSC) on page 5-115.
- The LDWS warning type can be changed using Mazda Connect. Refer to the Settings section in the Mazda Connect Owner's Manual.

LDWS is temporarily cancelled

If any of the following conditions is met, the LDWS is cancelled. In addition, the LDWS is automatically enabled when the condition changes and the system is operable.

- The direction indicator lever is operated.
- · The accelerator pedal is operated.
- · The steering wheel is operated.
- · The brake pedal is depressed.

Turning off the warning sound

There are 2 ways to turn off the warning sound while the LDWS is operating.

- Turn off the warning sound using Mazda Connect.
 Refer to the Settings section in the Mazda Connect Owner's Manual.
- Turn off the warning sound using the i-ACTIVSENSE mute switch.
 Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

Turning off the LDWS


The LDWS can be turned off using the Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

When the LDWS is turned off, the LAS & LDWS OFF indicator off turns on.

Blind Spot Monitoring (BSM)*

The BSM is a system that assists the driver in checking for vehicles at your rear when making a lane change. When a vehicle approaching from the rear is detected, various screen displays and warning sounds notify the driver of the danger.

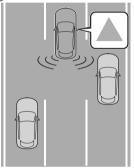

Warnings and Cautions for Using the Blind Spot Monitoring (BSM)

MARNING

Always check the surrounding area visually before making a lane change. The BSM is a system to assist the driver in checking the area to the rear of the vehicle when making a lane change. Due to certain limitations with the operation of system, the BSM warning lights may not flash or it might be delayed even though a vehicle is in an adjacent lane. Always make it your responsibility as a driver to check the rear.

How to Use the Blind Spot Monitoring (BSM)

When the BSM operates

The BSM operates when all of the following conditions are met.

- The vehicle speed is about 30 km/h (19 mph) or faster.
- The system detects an approaching vehicle.

When the BSM operates, the driver is notified of the presence of an approaching vehicle using the BSM warning lights and a screen display (white)*1.

BSM warning light



Instrument cluster




Active driving display




*1 The instrument cluster screen display (white) is displayed only when the instrument cluster is set to the i-ACTIVSENSE display.

When the direction indicator lever is operated in the direction in which an approaching vehicle is detected, the driver is notified of the danger by flashing of the BSM warning lights, the warning sound, and the warning indication (amber).

BSM warning light

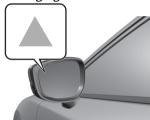

Instrument cluster

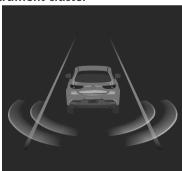

Active driving display



NOTE

- The BSM may not operate normally if any of the following conditions is met.
 - The rear side radar sensors cannot detect an object.

Refer to Radar Sensors on page 5-119.

- · The road is on a steep slope.
- · The road is extremely wide.
- You make a lane change 2 lanes or more.
- The BSM may operate when turning at intersections in urban areas or with stationary objects on the road or the roadside (such as guardrails, sidewalls, and parked vehicles).
- If a Mazda genuine trailer hitch is used, the BSM is automatically turned off when the trailer's electrical connector is connected.
- When pulling a trailer other than with a Mazda genuine trailer hitch, or while an accessory such as a bicycle carrier is installed to the rear of the vehicle, turn off the BSM. Otherwise, the radar's radio waves will be blocked causing the BSM to not operate normally.
- The brightness of the BSM warning lights is linked to the panel light control.

Refer to Instrument Panel Illumination on page 5-32.

Turning off the warning sound

There are 2 ways to turn off the warning sound while the BSM is operating.

- Turn off the warning sound using Mazda Connect.
 Refer to the Settings section in the Mazda Connect Owner's Manual.
- Turn off the warning sound using the i-ACTIVSENSE mute switch.
 Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

Turning off the BSM

The BSM can be turned off using the Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

Traffic Sign Recognition System (TSR)

The TSR is a system to notify the driver of traffic signs by displaying traffic signs on the screen which are recognised by the vehicle while driving.

Warnings and Cautions for Using the Traffic Sign Recognition System (TSR)

• WARNING

Always check the traffic signs visually while driving.

Depending on weather and traffic sign conditions, the TSR may not recognise traffic signs or it may display them differently. Always make it your responsibility as a driver to check the actual traffic signs. Otherwise, it could result in an accident.

How to Use the Traffic Sign Recognition System (TSR)

NOTE

- The TSR operates even if the SD card of the navigation system is not inserted, but a traffic sign different from the actual traffic sign may be displayed.
- The TSR may not operate normally if any of the following conditions is met.
 - The Forward Sensing Camera (FSC) does not detect traffic signs correctly.
 Refer to Forward Sensing Camera
 - · (Vehicles with navigation system)

(FSC) on page 5-115.

- The map has not been updated to the latest version.
- The speed limit sign included in the map is inaccurate.
- The map does not contain a speed limit sign.
- The vehicle position in the navigation system is deviated.
- The TSR may display signs at the same time in any of the following patterns.
 - Displays only a single traffic sign at the same time.
 - Displays a speed limit sign and conditional speed sign at the same time (when the system cannot accurately determine the conditional speed sign).
 - Displays a speed limit sign and a speed sign ahead at the same time.
 - Displays a speed limit sign and either a stop/do not enter/passing prohibited sign at the same time.

 Display of the TSR on the Active Driving Display can be disabled.
 Refer to the Settings section in the Mazda Connect Owner's Manual.

Update related devices

Update the map data regularly to maintain the performance of the TSR. For updating the map data, refer to the Navigation System Owner's Manual. If the Forward Sensing Camera (FSC) needs updating, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Speed limit signs (Including auxiliary signs) are displayed

When any of the following conditions is met, the speed limit sign [®] recognised by the system is displayed on the screen.

- · The vehicle passes a recognised sign.
- The speed limit sign stored in the navigation system is read by the system while driving.

NOTE

- · If the system cannot recognise a speed limit sign, —/? is displayed.
- If the system does not correctly recognise any conditional sign, is displayed.
- · If the system recognises a conditional speed sign such as time, weather, or zone, that sign is displayed.
- When the speed limit sign indication changes, a notification sound is activated. This notification sound can be turned off using Mazda Connect.

Traffic Sign Recognition System (TSR)

Refer to the Settings section in the Mazda Connect Owner's Manual.

- · (Vehicles with navigation system)
 - If the navigation system can determine the upcoming speed sign change, that speed limit sign is displayed.



This display can be turned off using Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

When an excessive speed warning is displayed

Type A: Israel and Europe (excluding Armenia, Azerbaijan, Belarus, Georgia, Kazakhstan, and Russia)

If your vehicle's speed exceeds the speed on the speed limit sign, the area around the display of the speed limit

sign flashes in amber [®]. In addition, if the vehicle speed continues to be excessive, a warning sound is activated.

The warning sound can be turned off using with the i-ACTIVSENSE mute switch.

Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

Type B: Countries other than Type A

If your vehicle's speed exceeds the speed on the speed limit sign, the area around the display of the speed limit

sign flashes in amber and a warning sound is activated. In addition, if the vehicle speed continues to be

excessive, it stops flashing and remains on.

The warning sound can be turned off using Mazda Connect or the i-ACTIVSENSE mute switch.
Refer to the Settings section in the Mazda Connect Owner's Manual.
Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

NOTE

 The warning pattern and the warning activation timing can be changed using Mazda Connect.
 Refer to the Settings section in the Mazda Connect Owner's Manual.

A do not enter sign is displayed

If the system recognises a do not enter sign, the do not enter sign is displayed on the screen.

NOTE

The screen display ends after a certain amount of time has passed since the vehicle passed the sign.

A stop sign is displayed

When your vehicle is travelling at a certain speed or slower, the stop sign

recognised by the system is displayed on the screen.

NOTE

The screen display ends after a certain period of time has passed since the sign was displayed on the screen.

A passing prohibited sign is displayed


When the system recognises a passing prohibited sign and the vehicle passes the sign, the passing prohibited sign is displayed on the screen.

NOTE

- If any of the following conditions is met, the display of the passing prohibited sign ends.
 - The system recognises a passing prohibited end sign and the vehicle passes the sign.
 - A sign cannot be found even after travelling a certain distance after the vehicle has travelled on the same road.
 - The system determines that your vehicle has turned left or right.

Distance & Speed Alert (DSA)

The DSA is a system in which the screen display notifies the driver that the distance between your vehicle and a vehicle ahead is close.

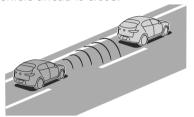

Warnings and Cautions for Using the Distance & Speed Alert (DSA)

WARNING

Do not rely completely on the DSA. The DSA may not be able to detect a vehicle ahead depending on the type of vehicle ahead and its conditions, the weather conditions, and the road conditions. In addition, the system is not for maintaining the distance between your vehicle and a vehicle ahead. If you neglect to operate the accelerator and brake pedals correctly, it could lead to an accident. Always check the surrounding conditions and depress the brake pedal or accelerator pedal while keeping a safe distance from a vehicle ahead or a vehicle following behind you.

How to Use the Distance & Speed Alert (DSA)

Operating the DSA

The DSA operates when all of the following conditions are met.

- The vehicle speed is about 30 km/h (19 mph) or faster.
- The system determines that the distance to the vehicle ahead is close.

When the DSA operates, the screen display notifies the driver that the distance between your vehicle and a vehicle ahead is close.

Instrument cluster



Active driving display



NOTE

- The objects which operate the DSA are four-wheeled vehicles. However, the DSA may also operate in the presence of motorcycles and bicycles.
- The DSA does not operate on stopped vehicles.

 When the speed of the vehicle ahead is extremely slow, the DSA may not operate normally.


Turning off the DSA

The DSA can be turned off using the Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

Driver Attention Alert $(DAA)^*$

The DAA is a system that detects the driver fatigue and decreased attentiveness based on various types of vehicle information, and encourages the driver to take a rest using a screen display and warning sound.

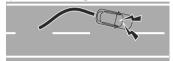

Warnings and Cautions for Using the Driver Attention Alert (DAA)

↑ WARNING

Do not rely completely on the DAA. The DAA does not prevent driver fatigue or decreased attentiveness and over reliance on the system could lead to an accident. Drive carefully and turn the steering wheel appropriately. In addition, the system may not be able to correctly detect driver fatigue or decreased attentiveness depending on the road and driving conditions. The driver must take sufficient rest in consideration of safe driving.

How to Use the Driver Attention Alert (DAA)

Operating the DAA

If all of the following conditions are met, the screen display and warning sound notify the driver that his/her attention level has decreased.

- The system has completed learning of the driver's driving data.
- The system detects white (yellow) lane lines.
- The following time has passed since the driver began driving.
 - · (Type A countries: Israel and Europe (excluding Armenia, Azerbaijan, Belarus, Georgia, Kazakhstan, and Russia)) 30 minutes
 - · (Type B countries : Countries other than Type A)
 60 minutes
- The vehicle speed is about 65 km/h to 140 km/h (41 mph to 86 mph).
- The system detects driver fatigue or decreased attentiveness



1. "Time for a Break"

NOTE

 The DAA does not operate if any of the following conditions is met.

- · The vehicle is making a sharp turn.
- · The vehicle is changing lanes.
- The DAA may not operate normally if any of the following conditions is met.
 - The visibility of white (yellow) lane lines is poor.
 - The vehicle is jolted or swayed continuously by strong winds or rough roads.
 - The electric power steering warning light turns on.
 - · The ABS warning light turns on.
 - The brake control system warning light (amber) turns on.
 - The electric parking brake (EPB) indicator light turns on while driving.
 - The TCS/DSC indicator light turns on.
 - The i-ACTIVSENSE warning light turns on.
- The DAA detects driver fatigue and decreased attentiveness based on the driving data when driving the vehicle at a vehicle speed between about 65 km/h and about 140 km/h (41 to 86 mph) for about 20 minutes. The learned driving data is reset when any of the following conditions is met
 - The vehicle is stopped for 15 minutes or longer.
 - The vehicle is driven at less than about 65 km/h (41 mph) for about 30 minutes.
 - · The vehicle power is switched OFF.
- After the DAA has displayed the first message encouraging rest, it does not display the next one until the following time has passed.
 - · (Type A countries) 45 minutes
 - · (Type B countries) 60 minutes

Turning off the DAA

Turn off the DAA using Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

NOTE

- For vehicles equipped with the driver monitoring camera, the DAA setting item is not displayed in Mazda Connect because the Driver Monitoring (DM) operation takes priority.
- · (Type A countries)

 If the vehicle power is switched OFF with the DAA turned off, the DAA automatically turns on the next time the vehicle power is switched ON.

Driver Monitoring (DM)

The DM is a system that detects dangerous conditions and behaviour of the driver and notifies the driver of possible danger.

The DM has two detection functions.


Drowsiness detection function

The drowsiness detection function detects the level of driver drowsiness. When the driver drowsiness is detected, the screen display and warning sound encourage the driver to take a rest.

There are 2 levels of screen display and warning sound.


Warning pattern (caution)

When driver drowsiness is detected, taking a rest is encouraged.

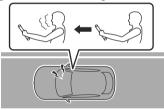

Warning pattern (warning)

If a higher level of driver drowsiness is detected, taking a rest is encouraged.

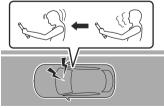

Inattentive driving detection function

The inattentive driving detection function detects that the driver is not paying attention to the road. When the

system detects that the driver is not paying attention to the road, it alerts the driver with a screen display and a warning sound.



Warnings and Cautions for Using the Driver Monitoring (DM)

WARNING

Do not rely completely on the DM. The DM does not prevent driver drowsiness or inattentive driving and over reliance on the system could lead to an accident. Drive carefully and turn the steering wheel appropriately. In addition, the system may not be able to correctly detect driver drowsiness or inattentive driving depending on the road and driving conditions. The driver must take sufficient rest in consideration of safe driving.

How to Use the Driver Monitoring (DM)


Operating the drowsiness detection function

The drowsiness detection function operates when all of the following conditions are met.

- The vehicle has been driven for about 20 minutes or longer.
- The vehicle speed is about 5 km/h (3 mph) or faster.
- The system detects driver drowsiness.


When the drowsiness detection function operates, the screen display and warning sound encourage the driver to take a rest.

Warning pattern (caution) (white)

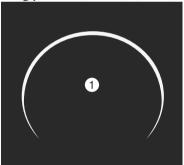

1. "Time for a Break"

Warning pattern (warning) (amber)

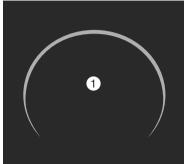

1. "Time for a Break"

NOTE

- After the drowsiness detection function has displayed the first message encouraging the driver to take a rest, it does not display it again during the following periods.
 - After displaying the warning pattern (caution), the next warning pattern (caution) is not displayed until 45 minutes have passed.
 - After displaying the warning pattern (warning), the next warning pattern (warning) is not displayed until 15 minutes have passed.
 - After displaying the warning pattern (warning), the next warning pattern (caution) is not displayed until 45 minutes have passed.
- If the driver monitoring camera does not recognise the driver correctly, the drowsiness detection function may not operate normally.
 Refer to Driver Monitoring Camera on page 5-127.
- The drowsiness detection function may not operate normally if any of the following conditions is met.
 - · You are looking down.


- You are squinting or closing your eyes.
- · One eye is closed.
- · You are laughing.

Operating the inattentive driving detection function

The inattentive driving detection function operates when all of the following conditions are met.

- The vehicle speed is about 30 km/h (19 mph) or faster.
- The system detects inattentive driving.

When the inattentive driving detection function operates, the screen display and warning sound alerts the driver.

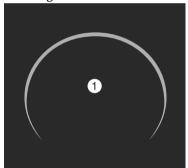

1. "Distracted Driver Detected"

NOTE

- If the driver monitoring camera does not recognise the driver correctly, the inattentive driving detection function may not operate normally.
 Refer to Driver Monitoring Camera on page 5-127.
- The inattentive driving detection function may not operate normally if any of the following conditions is met.
 - · Your line of sight moves or directly after it stops moving

- There is a large difference between your line of sight and the direction your face is pointed.
- Your face or your eyes frequently turn in a direction other than straight ahead.
- · You are driving the vehicle with your head largely tilted to one side.
- · You are moving around extensively.

Turning off the DM

The DM can be turned off using the Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

NOTE

(Israel and Europe (excluding Armenia, Azerbaijan, Belarus, Georgia, Kazakhstan, and Russia)) If the vehicle power is switched OFF with the DM turned off, the DM automatically turns on the next time the vehicle power is switched ON.

Front Cross Traffic Alert (FCTA)

The FCTA assists the driver in checking both sides of the vehicle when the vehicle starts to drive at an intersection. When a vehicle approaching from the blind spots on the front left or right side is detected, a screen display and warning sound notify the driver of the danger.



Warnings and Cautions for Using the Front Cross Traffic Alert (FCTA)

WARNING

Always check the surrounding area visually when the vehicle starts to drive at an intersection.

Due to certain limitations with the operation of the FCTA, the screen display and warning sound might be delayed even though there is a vehicle approaching from a blind spot. Always make it your responsibility as a driver to check the left and right sides.

How to Use the Front Cross Traffic Alert (FCTA)

Operating the FCTA

The FCTA operates when all of the following conditions are met.

- The vehicle speed is less than about 10 km/h (6 mph).
- The selector lever is in the D position.
- The system detects a vehicle approaching at a speed of about 5 km/h (3 mph) or faster from the front side of your vehicle.

When the FCTA is operating, the driver is notified of the danger by the screen display and the warning sound according to the situation.

When your vehicle is stopped

The screen display (white)*1 notifies you that a vehicle is approaching.

Instrument cluster



Active driving display



360° view monitor



*1 The instrument cluster screen display (white) is displayed only when the instrument cluster is set to the i-ACTIVSENSE display.

When your vehicle is moving

The screen display (amber) and warning sound notify the driver of the possibility that a collision may occur with an approaching vehicle.

Instrument cluster



Active driving display



360° view monitor



NOTE

 The system may operate even if a vehicle is not approaching depending on the conditions around your vehicle. The front side radar sensors may not detect objects and the FCTA may not operate normally.
 Refer to Radar Sensors on page 5-119.

Turning off the warning sound

There are 2 ways to turn off the warning sound while the FCTA is operating.


- Turn off the warning sound using Mazda Connect.
 Refer to the Settings section in the Mazda Connect Owner's Manual.
- Turn off the warning sound using the i-ACTIVSENSE mute switch.
 Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

Turning off the FCTA

The FCTA can be turned off using the Mazda Connect.
Refer to the Settings section in the Mazda Connect Owner's Manual.

Rear Cross Traffic Alert (RCTA)*

The RCTA assists the driver in checking the area to the rear of the vehicle, such as while reversing out of a parking space. When a vehicle approaching from the rear on the left or right is detected, various screen displays and warning sounds notify the driver of the danger.

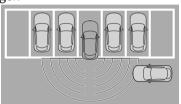

Warnings and Cautions for Using the Rear Cross Traffic Alert (RCTA)

↑ WARNING

Do not rely completely on the RCTA. The RCTA is a system to assist the driver in checking the area to the rear of the vehicle while reversing. Due to certain limitations with the operation of the system, the BSM warning light may not flash or it might be delayed even though a vehicle is at the rear of your vehicle. Always make it your responsibility as a driver to check the rear.


How to Use the Rear Cross Traffic Alert (RCTA)

Operating the RCTA

The RCTA operates when all of the following conditions are met.

- The vehicle is about to be driven in reverse.
- The system detects an approaching vehicle.

When the RCTA operates, the driver is notified of the danger by flashing of the BSM warning lights, a warning indication, and a warning sound.

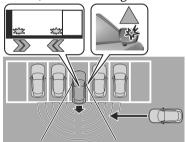

NOTE

- The system may operate even if a vehicle is not approaching depending on the conditions around your vehicle.
- The RCTA may not operate normally if any of the following conditions is met.
 - The rear side radar sensors cannot detect an object.
 Refer to Radar Sensors on page 5-119.
 - The vehicle speed when reversing is about 15 km/h (9 mph) or faster.
 - · A vehicle is approaching directly from the rear of your vehicle.
 - · A vehicle is approaching at an angle from the rear of your vehicle.

- If a Mazda genuine trailer hitch is used, the RCTA is automatically turned off when the trailer's electrical connector is connected.
- When pulling a trailer other than with a Mazda genuine trailer hitch, or while an accessory such as a bicycle carrier is installed to the rear of the vehicle, turn off the RCTA. Otherwise, the radar's radio waves will be blocked causing the RCTA to not operate normally.
- The brightness of the BSM warning lights is linked to the panel light control.

Refer to Instrument Panel Illumination on page 5-32.

Turning off the warning sound

There are 2 ways to turn off the warning sound while the RCTA is operating.

- Turn off the warning sound using Mazda Connect.
 Refer to the Settings section in the Mazda Connect Owner's Manual.
- Turn off the warning sound using the i-ACTIVSENSE mute switch.
 Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

Turning off the RCTA

The RCTA can be turned off using the Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

Mazda Radar Cruise Control (MRCC)*

MRCC is a system that reduces load on the driver through constant speed and headway control. The function performs headway control to maintain the distance with a vehicle ahead at a constant preset speed without you having to depress the accelerator or brake pedal.

Warnings and Cautions for Using the Mazda Radar Cruise Control (MRCC)

♠ WARNING

in an accident.

Do not rely completely on the MRCC. The MRCC may not be able to detect a vehicle ahead depending on the type of vehicle ahead and its conditions, the weather conditions, and the road conditions. Additionally, the system might be unable to decelerate sufficiently if the vehicle ahead applies the brakes suddenly or another vehicle cuts into your lane, which could result

Always check the surrounding conditions and depress the brake pedal or accelerator pedal while keeping a safe distance from a vehicle ahead or a vehicle following behind vou.

Do not use the MRCC under the following conditions. Otherwise, it may result in an accident.

- The vehicle is driven on roads other than highways.
- The vehicle is driven on roads with sharp curves or with heavy traffic where sufficient distances between vehicles cannot be kept.
- The vehicle is driven on roads where acceleration and deceleration are frequently repeated.
- The vehicle is exiting the main lane on an expressway to enter an interchange, a rest area, or a parking area.

- The vehicle is driven on slippery roads such as icy roads, snow-covered roads, and unpaved roads.
- The vehicle is driven on a long downslope.
- The vehicle is driven on a steep slope.
- A two-wheeled vehicle such as a motorcycle or bicycle is travelling ahead.

Switch the MRCC off when it is not being used.

Leaving the MRCC on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.

Do not leave the vehicle while the vehicle is stopped by the MRCC control. (Only with Stop & Go function)

Getting out of the vehicle while the stop hold control is operating is dangerous as the vehicle may move unexpectedly and result in an accident. Before leaving the vehicle, switch the MRCC off, shift the selector lever to the P position, and apply the parking brake.

A CAUTION

- ➤ If the vehicle is towed or you are towing something, switch the MRCC off.
- Turn off the MRCC when the vehicle is running on a chassis roller.

How to Use the Mazda Radar Cruise Control (MRCC)

MRCC operation conditions

The MRCC can be set when all of the following conditions are met.

(Except with Stop & Go function)

- · The brake pedal is not depressed.
- · The vehicle speed is as follows:
 - · (European models)

About 30 km/h (19 mph) to 200 km/h (125 mph).

· (Except European models)

About 30 km/h (19 mph) to 145 km/h (90 mph).

· (Manual transmission vehicle)

The clutch pedal is not depressed.

(With Stop & Go function)

- · The brake pedal is not depressed.
- · The vehicle speed is as follows:
 - · (European models)

About 0 km/h (0 mph) to 200 km/h (125 mph).

· (Except European models)

About 0 km/h (0 mph) to 145 km/h (90 mph).

Setting the MRCC

1. Press the MRCC switch to turn the system on.




When the system is on, the MRCC standby indication (white) is displayed on the screen.

- 2. Accelerate to the desired speed.
- 3. Set the vehicle speed by pressing the RES switch up (SET+) or down (SET-).



Constant speed driving starts when the vehicle speed is set. In addition, the set speed is displayed on the screen, and the MRCC standby indication (white) changes to the MRCC set indication (green) .

If a vehicle ahead is detected while travelling at a constant speed, the system switches to headway control. The vehicle ahead indication is displayed on the screen while in headway control.

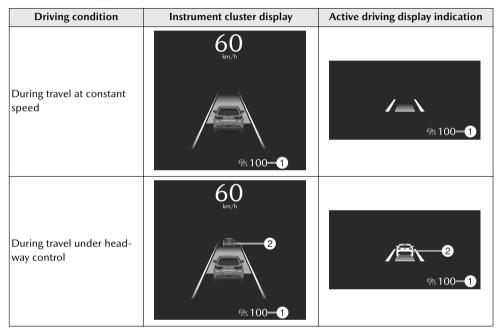

- 1. Set speed
- 2. Vehicle ahead indication

NOTE

- If there is a structure on the road or an obstruction at a low height off the ground in front of the vehicle, the system may recognise it as a vehicle ahead.
- · Acceleration and deceleration by accelerator pedal operation takes priority while travelling at a constant speed or in headway control. When the accelerator pedal is released, the vehicle returns to driving at a constant speed or headway control at the set speed.
- · If a vehicle ahead is travelling at an extremely low speed, the system may not detect it correctly.
- · While driving using the MRCC, intended engine braking is not applied even if the selector lever/shift lever is operated.
- The brake lights turn on while the brakes are operating by the MRCC control.

Mazda Radar Cruise Control (MRCC)

- The MRCC is also turned off automatically when the vehicle power is switched OFF.
- · If the distance between vehicles control is disabled using Mazda Connect, the system switches to the cruise control. At this time, the MRCC switch functions as the cruise control switch.

Refer to the Settings section in the Mazda Connect Owner's Manual.

If the vehicle power is switched OFF while the distance between vehicles control is disabled, the distance between vehicles control is enabled automatically the next time the vehicle power is switched ON.

(With Stop & Go function)

If the vehicle ahead stops during headway control, your vehicle in headway control also stops. When the vehicle is stopped, the MRCC indicator light **HOLD** in the instrument cluster turns on.

When the vehicle ahead accelerates from a stop and one of the following operations is performed, your vehicle starts driving.

- · Press the RES switch.
- · Depress the accelerator pedal.

If you do not start driving the vehicle after the vehicle ahead has resumed driving, the system urges the driver to resume driving.

NOTE

- If the vehicle ahead resumes driving within 3 seconds after the vehicle was stopped by the system, your vehicle also resumes driving automatically.
- If the vehicle is stopped by the system continuously for 10 minutes or longer, the parking brake is applied automatically. At this time, the MRCC is cancelled.
- Even if the MRCC is cancelled while the vehicle is stopped, the vehicle is held in its stopped position.

Refer to AUTOHOLD on page 5-65.

- If the MRCC is cancelled while the vehicle is stopped and there is no vehicle ahead, you cannot resume driving the vehicle using the RES switch. Depress the accelerator pedal and start driving the vehicle.
- If the i-stop operation conditions are met while the vehicle is stopped, the i-stop function operates without depressing the brake pedal. The engine restarts automatically when you start driving the vehicle.

 Refer to i-stop on page 5-22.

(Manual transmission vehicle)

The shift-up or shift-down request display might be displayed while the MRCC is operating. When this occurs, shift gears because the gear position is not appropriate.

NOTE

• The MRCC may be cancelled automatically if the shift up/shift down is not done even when the shift up/shift down request display is indicated. In addition, the engine may be damaged or the engine may stall.

Changing the set vehicle speed

NOTE

· (European models)

The system automatically provides more acceleration when operating the direction indicator to switch to the passing lane. Drive with caution as your vehicle may be too close to the vehicle ahead.

Changing the set vehicle speed using the RES switch

Press the RES switch up (SET+) or down (SET-) to the desired speed.

- · Press and release immediately: 1 km/h (1 mph)
- · Press and hold: 10 km/h (5 mph)

Changing the set vehicle speed using the accelerator pedal

Depress the accelerator pedal until the vehicle speed reaches the desired speed, then press the RES switch up (SET+) or down (SET-).

Setting the distance-between-vehicles during headway control

1. Press the CANCEL switch up (longer distance) or down (shorter distance).



MRCC is not operating (white)

Distance-between-vehicles guide- line (at 80 km/h (50 mph) vehicle speed)	Instrument cluster display	Active driving display indica- tion
Long (about 50 m (164 ft))		
Medium (about 40 m (131 ft))		
Short (about 30 m (98 ft))		
Extremely short (about 25 m (82 ft))		

MRCC is operating (green)


Distance-between-vehicles guide- line (at 80 km/h (50 mph) vehicle speed)	Instrument cluster display	Active driving display indica- tion
Long (about 50 m (164 ft))		
Medium (about 40 m (131 ft))		
Short (about 30 m (98 ft))		
Extremely short (about 25 m (82 ft))		

NOTE

- The distance-between-vehicles can be set to 4 levels: Long, medium, short, and extremely short distance.
- The distance-between-vehicles differs depending on the vehicle speed, and the slower the vehicle speed, the shorter the distance.

Close proximity warning

If your vehicle approaches a vehicle ahead while in headway control, a warning sound and a display cautions you.

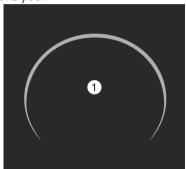

1. "Depress Brake Pedal"

NOTE

The close proximity warning may not be activated in the following cases.

- The vehicle is driven at the same speed as the vehicle ahead.
- · Directly after the MRCC is set.
- · Immediately after the accelerator pedal is released.
- · Another vehicle cuts into the driving lane.
- Do not use the MRCC under conditions in which the close proximity warnings are frequently activated.

The MRCC is cancelled temporarily

If any of the following conditions is met, the MRCC is cancelled temporarily.

- · The brake pedal is depressed.
- · The CANCEL switch is pressed one time.
- · The DSC has operated.
- The Smart Brake Support (SBS) has operated.
- · The front radar sensors cannot detect target objects.
- · The parking brake is applied.
- · Any door is opened.
- · The driver's seat belt is unfastened.
- · The frequency of the braking operation by the MRCC is high.
- · (Except with Stop & Go function)

The vehicle speed decreases to less than 25 km/h (16 mph).

- · (Manual transmission vehicle)
 - The clutch pedal is depressed for a certain period of time.
 - The shift lever is shifted to neutral (N) for a certain period of time.

If the MRCC is temporarily cancelled, it will resume operation at the previously set speed by pressing the RES switch.

Turning off the MRCC

Press the MRCC switch.

The MRCC set indication (green) $\frac{1}{100}$ /MRCC standby indication (white) $\frac{1}{100}$ turns off, and the MRCC turns off.

Cruising & Traffic Support $\overline{(CTS)}^*$

The CTS is a system that reduces the load on the driver while the vehicle is driven on expressways or highways. The CTS has the following 2 functions.

Constant speed/Headway control function

The function performs headway control to maintain the distance with a vehicle ahead at a constant preset speed without you having to depress the accelerator or brake pedal.

Steering wheel assist function

When vehicle lane lines are detected. the function assists your steering wheel operation to follow the vehicle lane lines.

When vehicle lane lines are not detected, the function assists your steering wheel operation to follow the trajectory of the vehicle ahead.

Warnings and Cautions for Using Cruising & Traffic Support (CTS)

WARNING

Do not rely completely on the CTS.

- The CTS is not an automated driving system. Therefore, the function has limitations. Do not rely completely on the system and always stay on course using the steering wheel.
- > Set a vehicle speed within the speed limit according to the road conditions and the weather conditions
- The CTS may not be able to detect a vehicle ahead depending on the type of vehicle ahead and its conditions. the weather conditions, and the road conditions. Additionally, the system might be unable to decelerate sufficiently if the vehicle ahead applies the brakes suddenly or another vehicle cuts into your lane, which could result in an accident.

Do not use the CTS under the following conditions. Otherwise, it may result in an accident.

- The vehicle is driven on roads other than expressways and highways.
- The vehicle is driven on roads with sharp curves or with heavy traffic where sufficient distances between vehicles cannot be kept.
- The vehicle is driven on roads where acceleration and deceleration are frequently repeated.
- The vehicle is exiting the main lane on an expressway to enter an interchange, a rest area, or a parking area.

- The vehicle is driven on slippery roads such as icy roads, snow-covered roads, and unpaved roads.
- ➤ The vehicle is driven on a long downslope.
- The vehicle is driven on a steep slope.
- A two-wheeled vehicle such as a motorcycle or bicycle is travelling ahead.
- The vehicle is being towed or towing another vehicle.
- Proximity warnings activate frequently.
- ➤ Under bad weather conditions (rain, fog, and snow).
- > Tyres other than the specified size are used, such as when tyre chains or temporary spare tyres are used.
- ➤ The tyre pressures are not adjusted to the appropriate pressure.
- Tyres with insufficient tread are used.

Switch the CTS off when it is not being used.

Leaving the CTS on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.

Do not leave the vehicle while the vehicle is stopped by the CTS control. (Only vehicles with Mazda Radar Cruise Control with Stop & Go function)

Getting out of the vehicle while the stop hold control is operating is dangerous as the vehicle may move unexpectedly and result in an accident. Before leaving the vehicle, switch the CTS off, shift the selector lever to the P position, and apply the parking brake.

A CAUTION

- ➤ Heed the following cautions so that the CTS can operate normally.
 - ➤ Do not modify the suspensions.
 - ➤ Always use wheels of the specified size for the front and rear wheels. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for tyre replacement.
- Turn off the CTS when the vehicle is running on a chassis roller.

How to Use the Cruising & Traffic Support (CTS)

CTS operation conditions

The CTS speed can be set when all of the following conditions are met.

(Vehicles with Mazda Radar Cruise Control)

- · The brake pedal is not depressed.
- · The vehicle speed is as follows:
 - · (European models)
 - About 30 km/h (19 mph) to 200 km/h (125 mph).
 - · (Except European models)
 - About 30 km/h (19 mph) to 145 km/h (90 mph).
- · The Mazda Radar Cruise Control is available.
- · (Manual transmission vehicle)


The clutch pedal is not depressed.

(Vehicles with Mazda Radar Cruise Control with Stop & Go function)

- · The brake pedal is not depressed.
- · The vehicle speed is as follows:
 - · (European models)
 - About 0 km/h (0 mph) to 200 km/h (125 mph).
 - · (Except European models)
 - About 0 km/h (0 mph) to 145 km/h (90 mph).
- · The Mazda Radar Cruise Control is available.

Setting the CTS


1. Press the CTS switch to turn the system on.

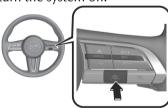

When the system is on, the CTS standby indication (white) is displayed on the screen.

2. Accelerate to the desired speed.

3. Set the vehicle speed by pressing the RES switch up (SET+) or down (SET-).

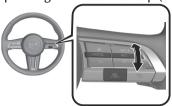

Constant speed driving starts when the vehicle speed is set. In addition, the set speed is displayed on the screen, and the CTS standby indication (white) changes to the CTS set indication (green).

If a vehicle ahead is detected while travelling at a constant speed, the system switches to headway control. The vehicle ahead indication is displayed on the screen while in headway control.

Driving condition	Instrument cluster display	Active driving display indication
During travel at constant speed	60 ⊕ 100—1	∕⊕\ ≈100 —1
During travel under head- way control	60 Em/h	∕ €100 —1

- 1. Set speed
- 2. Vehicle ahead indication

NOTE

• If there is a structure on the road or an obstruction at a low height off the ground in front of the vehicle, the system may recognise it as a vehicle ahead.

Cruising & Traffic Support (CTS)

- Acceleration and deceleration by accelerator pedal operation takes priority while travelling at a constant speed or in headway control. When the accelerator pedal is released, the vehicle returns to driving at a constant speed or headway control at the set speed.
- The Forward Sensing Camera (FSC) may not be able to detect target objects correctly, and the CTS may not operate normally.

 Refer to Forward Sensing Camera (FSC) on page 5-115.
- If a vehicle ahead is travelling at an extremely low speed, the system may not detect it correctly.
- While driving using the CTS, intended engine braking is not applied even if the selector lever/shift lever is operated.
- The brake lights turn on while the brakes are operating by the CTS control.

The steering assist function operates if all of the following conditions are met while travelling at a constant speed or in headway control.

· (European models)

The vehicle is driven at a vehicle speed slower than about 150 km/h (94 mph) near the centre of the lane and the white (yellow) lane lines on both sides are detected clearly, or the vehicle is driven at a vehicle speed slower than about 50 km/h (31 mph) and a vehicle ahead is detected clearly in front of your vehicle.

· (Except European models)

When driving near the centre of the lane and the white (yellow) lane lines on both sides are detected clearly, or a vehicle ahead is detected clearly in front of your vehicle and at less than about 50 km/h (31 mph).

- · The steering wheel is not turned sharply.
- The direction indicator lever is not operated.
- · (Vehicles with Mazda Radar Cruise Control)
 The vehicle speed is about 30 km/h (19 mph) or faster.

When the steering assist function operates, the steering assist operation display changes from white to green.

Driving condition	Instrument cluster display	Active driving display indication
Steering assist within vehicle lane lines	60 ← 100	∕∕ ⊕ \ ≈100
	1100	

Driving condition	Instrument cluster display	Active driving display indication
	$60\atop{^{\rm km/h}}$	
Steering assist along the trajectory of the vehicle ahead	⊕ 100	Æ 100

NOTE

- The steering assist function assists the steering wheel operation so that the vehicle remains near the centre of the driving lane, however, the function might not be able to keep the vehicle near the centre of the driving lane when any of the following conditions is met.
 - · The vehicle speed is high.
 - · The vehicle is making a sharp turn.
 - The vehicle is driven on a road with steep or up and down (wavy) slopes.
 - · The vehicle is driven on a road with a large lateral gradient.

(Vehicles with Mazda Radar Cruise Control with Stop & Go function)

If the vehicle ahead stops during headway control, your vehicle in headway control also stops. While the vehicle is stopped, the CTS indicator light **HOLD** in the Instrument cluster turns on.

When the vehicle ahead accelerates from a stop and one of the following operations is performed, your vehicle starts driving.

- · Press the RES switch.
- · Depress the accelerator pedal.

If you do not start driving the vehicle after the vehicle ahead has resumed driving, the system urges the driver to resume driving.

NOTE

- If the vehicle ahead resumes driving within 3 seconds after the vehicle was stopped by the system, your vehicle also resumes driving automatically.
- If the vehicle is stopped by the system continuously for 10 minutes or longer, the parking brake is applied automatically. At this time, the CTS is cancelled.
- Even if the CTS is cancelled while the vehicle is stopped, the vehicle is held in its stopped position.
 - Refer to AUTOHOLD on page 5-65.

Cruising & Traffic Support (CTS)

- If the CTS is cancelled while the vehicle is stopped and there is no vehicle ahead, you cannot resume driving the vehicle using the RES switch. Depress the accelerator pedal and start driving the vehicle.
- If the i-stop operation conditions are met while the vehicle is stopped, the i-stop function operates without depressing the brake pedal. The engine restarts automatically when you start driving the vehicle.

 Refer to i-stop on page 5-22.

(Manual transmission vehicle)

The shift-up or shift-down request display might be displayed while the CTS is operating. When this occurs, shift gears because the gear position is not appropriate.

NOTE

• The CTS may be cancelled automatically if the shift up/shift down is not done even when the shift up/shift down request display is indicated. In addition, the engine may be damaged or the engine may stall.

Changing the set vehicle speed

NOTE

· (European models)

The system automatically provides more acceleration when operating the direction indicator to switch to the passing lane. Drive with caution as your vehicle may be too close to the vehicle ahead.

Changing the set vehicle speed using the RES switch

Press the RES switch up (SET+) or down (SET-) to the desired speed.

- · Press and release immediately: 1 km/h (1 mph)
- · Press and hold: 10 km/h (5 mph)

Changing the set vehicle speed using the accelerator pedal

Depress the accelerator pedal until the vehicle speed reaches the desired speed, then press the RES switch up (SET+) or down (SET-).

Setting the distance-between-vehicles during headway control

1. Press the CANCEL switch up (longer distance) or down (shorter distance).



CTS is not operating (white)

Distance-between-vehicles guideline (at 80 km/h (50 mph) vehicle speed)	Instrument cluster display	Active driving display indication
Long (about 50 m (164 ft))		
Medium (about 40 m (131 ft))		
Short (about 30 m (98 ft))		
Extremely short (about 25 m (82 ft))		

CTS is operating (green)

Distance-between-vehicles guideline (at 80 km/h (50 mph) vehicle speed)	Instrument cluster display	Active driving display indication
Long (about 50 m (164 ft))		
Medium (about 40 m (131 ft))		
Short (about 30 m (98 ft))		
Extremely short (about 25 m (82 ft))		

NOTE

- The distance-between-vehicles can be set to 4 levels: Long, medium, short, and extremely short distance.
- The distance-between-vehicles differs depending on the vehicle speed, and the slower the vehicle speed, the shorter the distance.

Warnings by CTS

Close proximity warning

If your vehicle approaches a vehicle ahead while in headway control, a warning sound and a display cautions you.



1. "Depress Brake Pedal"

NOTE

- The close proximity warning may not be activated in the following cases.
 - The vehicle is driven at the same speed as the vehicle ahead.
 - · Directly after the CTS is set.
 - · Immediately after the accelerator pedal is released.
 - · Another vehicle cuts into the driving lane.
- Do not use the CTS system under conditions in which the close proximity warnings are frequently activated.

Steering assist limit warning

If the steering assist function cannot keep the vehicle within the lane lines, a screen display and a warning sound urge you to operate the steering wheel.

Instrument cluster



Active driving display



Warning for driving with hands off the steering wheel

If you take your hands off the steering wheel, a warning (amber) is indicated on the instrument cluster and the active driving display. Then, if you continue to leave your hands off the steering wheel, a warning (red) is indicated on the instrument cluster and the active driving display and a warning sound is activated.

This warning is cancelled by lightly operating the steering wheel to the left or right.

Instrument cluster Warning (amber)



Warning (red)



Active driving display Warning (amber)



Warning (red)



The CTS is temporarily cancelled

Constant speed/Headway control function

If any of the following conditions is met, the constant speed/headway control function is temporarily cancelled.

- The brake pedal is depressed.
- · The CANCEL switch is pressed one time.
- The DSC has operated.
- · The Smart Brake Support (SBS) has operated.
- · The front radar sensors cannot detect target objects.
- The parking brake is applied.
- · Any door is opened.
- · The driver's seat belt is unfastened.
- The driver's seat belt is unfastened when the driver is driving appropriately.
- The driver's seat belt is unfastened for a certain period of time when the driver is driving appropriately.
- The frequency of the braking operation by the CTS is high.
- · (Vehicles with Mazda Radar Cruise Control)
 The vehicle speed decreases to less than 25 km/h (16 mph).

Cruising & Traffic Support (CTS)

· (Manual transmission vehicle)

- The clutch pedal is depressed for a certain period of time.
- The shift lever is shifted to neutral (N) for a certain period of time.

If the constant speed/headway control function is temporarily cancelled, it will resume operation at the previously set speed by pressing the RES switch.

Steering assist function

If any of the following conditions is met, the steering assist function is temporarily cancelled. The steering assist function is automatically restored when its operation conditions are met.

- The constant speed/headway control function is cancelled.
- · White (yellow) lane lines cannot be detected or a vehicle ahead cannot be recognised.
- · (European models)

The vehicle speed is about 150 km/h (94 mph) or faster.

- The direction indicator lever is operated.
- · The steering wheel is operated abruptly.
- · Hands are off the steering wheel.
- · The vehicle is making a sharp curve.
- · The vehicle crosses a lane line.
- · The width of the vehicle lane is narrow or wide.

NOTE

The notification method when the steering assist function is cancelled can be changed.

Refer to the Settings section in the Mazda Connect Owner's Manual.


Turning off the CTS

Press the CTS switch.

The CTS set indication (green) \(\overline{\capacita}\)/CTS standby indication (white) \(\overline{\capacita}\) turns off, and the CTS turns off.

Lane-keep Assist System $(IAS)^*$

The LAS is a system to help the driver stay within the vehicle lane if the vehicle might be deviating. If your vehicle may be deviating from the vehicle lane, the LAS provides steering assistance to avoid departure from the lane.

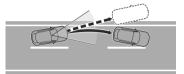

Warnings and Cautions for Using the Lane-keep **Assist System (LAS)**

WARNING

Do not rely completely on the LAS.

- The LAS is not an automated driving system. Over reliance on the system could lead to an accident.
- The functions of the LAS have limitations. Do not rely completely on the system and always stay on course using the steering wheel.

Do not use the LAS under the following conditions. Otherwise, it may result in an accident.

- The vehicle is driven on slippery roads such as icy roads, snow-covered roads, and unpaved roads.
- > Tyres other than the specified size are used, such as when tyre chains or temporary spare tyres are used.
- Tyres with insufficient tread are used.
- The tyre pressures are not adjusted to the specified pressure.
- > The vehicle is towing a camping trailer or boat trailer.
- The vehicle is driven on roads other. than expressways or highways with white (yellow) lines.

CAUTION

- ➤ Heed the following cautions so that the LAS can operate normally.
 - ➤ Do not modify the vehicle's suspensions.

Always use wheels of the specified size for the front and rear wheels. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for tyre replacement.

How to Use the Lane-keep Assist System (LAS)

When the LAS operates

When all the following conditions are met, the LAS operates to assist the steering wheel operation.

- The vehicle speed is about 60 km/h (37 mph) or faster.
- The system detects white (yellow) lane lines.
- The CTS steering assist function is not operating.
- The system determines that the vehicle may depart from the lane.

While the steering wheel operation assist is operating, the screen display notifies the driver.

Instrument cluster



Active driving display



In addition, even if the steering wheel operation assist is operated, a warning sound is activated when the driver does not operate the steering wheel.

NOTE

- · If the system determines that the driver is driving the vehicle with his or her hands off the steering wheel while the steering wheel operation assist is operating and the condition continues several times within a certain period of time, the warning sound is activated. The higher the number of times the steering wheel operation assist operates, the longer the period of time the warning sound is activated.
- The LAS operates only on the side that detects white lines (yellow lines).
- The LAS may not operate normally if any of the following conditions is met.
 - The forward sensing camera (FSC) cannot detect target objects.
 Refer to Forward Sensing Camera (FSC) on page 5-115.
 - The visibility of white (yellow) lane lines is poor.

LAS temporary cancellation

If any of the following conditions is met, the LAS is temporarily cancelled. The LAS operation is automatically restored when the system's operation conditions are met.

- The direction indicator lever is operated.
- The steering wheel is operated abruptly.
- The accelerator pedal is depressed abruptly.
- · The brake pedal is depressed.
- · The TCS/DSC is operating.
- · The TCS/DSC is turned off.

Turning off the LAS

The LAS can be turned off using the Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.

When the LAS is turned off, the LAS & LDWS OFF indicator of turns on.

Adjustable Speed Limiter $(ASL)^*$

The ASL is a function to prevent the vehicle from being driven at a vehicle speed faster than a set speed. The vehicle speed is controlled to kept it below the set speed even if the accelerator pedal is depressed. If the vehicle speed exceeds the set speed limit while driving under certain conditions such as on a downslope, the system notifies the driver using the display and a warning sound.

Warnings and Cautions for Using the Adjustable **Speed Limiter (ASL)**

♠ WARNING

Always turn off the system when changing drivers.

If the driver is changed and the new driver is unaware of the ASL function. the vehicle may not accelerate when the driver depresses the accelerator pedal, leading to an accident.

Always verify the safety of the surrounding area when setting the ASL.

If the speed is set lower than the current vehicle speed, the vehicle speed is decreased to the set speed. Verify the safety of the surrounding area and keep a safer distance between vehicles ahead and behind vou.

How to Use the Adjustable Speed Limiter (ASL)

Available vehicle speed settings

A vehicle speed can be set from about 30 km/h (19 mph) to 200 km/h (125 mph) with the ASL.

Setting the ASL

1. Press the LIM switch to turn the system on.



When the system is on, the ASL standby indication (white) LIM is displayed on the screen.

- 2. Accelerate to the desired speed.
- 3. Set the vehicle speed by pressing the RES switch up (SET+) or down (SET-).



When you set the speed, the set speed is displayed on the screen. In addition, the ASL standby indication (white) LIM changes to the ASL set indication (green) LIM.

Instrument cluster



1. Set speed

Active driving display



1. Set speed

NOTE

- The ASL is not cancelled even if the brake pedal is depressed.
- The ASL is temporarily cancelled when the accelerator pedal is completely depressed. Afterwards, when the vehicle speed is slower than the set speed, the ASL operates again.
- The vehicle speed may exceed the set speed depending on the driving conditions such as driving on a steep slope.

Changing the set vehicle speed

Press the RES switch up (SET+) or down (SET-) to the desired speed.

- Press and release immediately: 1 km/h (1 mph)
- · Press and hold: 10 km/h (5 mph)

Excessive vehicle speed warning

If the vehicle speed exceeds the set speed by about 5 km/h (3 mph), the background of the set vehicle speed indication flashes. In addition, a warning sound is activated at the same time.

Temporarily cancelling the ASL

If any of the following conditions is met, the ASL is temporarily cancelled.

- The CANCEL switch is pressed one time
- The accelerator pedal is forcefully depressed.

- · Any door is opened.
- · The driver's seat belt is unfastened.

If the ASL is temporarily cancelled, it will resume operation at the previously set speed by pressing the RES switch.

Turning off the ASL

Press the LIM switch.
The ASL set indication (green)
LIM /ASL standby indication (white)
LIM turns off, and ASL turns off.

Intelligent Speed Assistance (ISA)*

The ISA is a function which keeps the vehicle speed below the speed limit set from a speed limit sign or an optionally set speed limit. If the vehicle speed exceeds the set speed limit while driving under certain conditions such as on a downslope, the system notifies the driver using the display and a warning sound.

The ISA recognises a speed limit sign based on the Traffic Sign Recognition System (TSR) or the navigation system information.

Refer to Traffic Sign Recognition System (TSR) on page 5-140

Warnings and Cautions for Using the Intelligent **Speed Assistance (ISA)**

WARNING

Always turn off the system when changing drivers.

If the driver is changed and the new driver is unaware of the ISA function. the vehicle may not accelerate when the driver depresses the accelerator pedal, leading to an accident.

Always verify the safety of the surrounding area when setting the ISA.

If the speed is set lower than the current vehicle speed, the vehicle speed is decreased to the set speed. Verify the safety of the surrounding area and keep a safer distance between vehicles ahead and behind vou.

Always check the traffic signs visually while driving.

Depending on weather and traffic sign conditions, traffic signs may not be recognised or may be displayed differently. Always make it your responsibility as a driver to check the actual traffic signs. Otherwise, it could result in an accident.

How to Use the Intelligent Speed Assistance (ISA)

Available vehicle speed settings

A vehicle speed can be set from about 30 km/h (19 mph) to 200 km/h (125 mph) with the ISA.

Setting the ISA

1. Press the LIM switch to turn the system on.



When the system is on, the ISA standby indication (white) LIM is displayed on the screen.

- 2. Accelerate to the desired speed.
- 3. Set the vehicle speed by pressing the RES switch up (SET+) or down (SET-).



When you set the speed, the set speed is displayed on the screen. In addition, the ISA standby indication (white) changes to the ISA set indication (green) LIM.

Instrument cluster



1. Set speed

Active driving display



1. Set speed

NOTE

- The ISA operates even if the SD card of the navigation system is not inserted, but a traffic sign different from the actual traffic sign may be displayed.
- The ISA is not cancelled even if the brake pedal is depressed.
- The ISA is temporarily cancelled when the accelerator pedal is completely depressed. When any of the following conditions is met, the ISA is operational again.
 - · When the vehicle speed is the set speed or slower.
 - · (Israel and Europe (excluding Armenia, Azerbaijan, Belarus, Georgia, Kazakhstan, and Russia)) Six seconds have passed with your foot completely removed from the accelerator pedal.
- The vehicle speed may exceed the set speed depending on the driving conditions such as driving on a steep slope.
- · If the ISA is disabled in Mazda Connect, it switches to the Adjustable Speed Limiter (ASL). Refer to the Settings section in the Mazda Connect Owner's Manual. Refer to Adjustable Speed Limiter (ASL) on page 5-184.

Changing the set vehicle speed

Changing the set vehicle speed using the RES switch

Press the RES switch up (SET+) or down (SET-) to the desired speed.

- Press and release immediately: 1 km/h (1 mph)
- · Press and hold: 10 km/h (5 mph)

Reading the set vehicle speed from the speed limit sign using the RES switch

- Press the RES switch up (SET+) or down (SET-).
- Press the RES switch when the speed limit sign set indication RES turns on.

When the RES switch is pressed, the vehicle speed of the speed limit sign is read to the set vehicle speed.

A CAUTION

- ➤ The function which recognises speed limit signs has limitations. Always check the set vehicle speed that was read
- Set the speedometer display unit to the same unit as the speed limit sign. If the units differ, it reads vehicle speeds not intended by the driver.

NOTE

Set vehicle speeds read from speed limit signs can be adjusted. Refer to the Settings section in the Mazda Connect Owner's Manual.

Excessive vehicle speed warning

If the vehicle speed exceeds the set speed by about 5 km/h (3 mph), the background of the set vehicle speed indication flashes. In addition, a warning sound is activated at the same time.

Temporarily cancelling the ISA

If any of the following conditions is met, the ISA is temporarily cancelled.

- The CANCEL switch is pressed one time.
- The accelerator pedal is forcefully depressed.
- · Any door is opened.
- · The driver's seat belt is unfastened.

If the ISA is temporarily cancelled, it will resume operation at the previously set speed by pressing the RES switch.

Turning off the ISA

Press the LIM switch.
The ISA set indication (green)
LIM /ISA standby indication (white)
LIM turns off, and ISA turns off.

Smart Brake Support (SBS)

SBS is a system designed to avoid collisions and reduce damage in the event of a collision by controlling the brakes. Sensors and camera equipped on the vehicle detect objects, and operate brake control if there is a possibility of your vehicle colliding with the object.

One part of the SBS functions when you are driving forward and the other part functions when you are driving in reverse


Forward drive detection

Forward detection function*

The forward detection function is designed to assist the driver in avoiding collisions with objects (vehicles ahead, pedestrians, bicycles, and motorcycles) at the front and to reduce damage in the event of a collision.

If there is a possibility of your vehicle colliding with a target object at the front, you are notified of possible danger by a screen display and a warning sound. Furthermore, if the possibility of a collision increases, brake control is performed to avoid collision and reduce damage in the event of a collision.

In addition, when the driver depresses the brake pedal, the brakes are applied firmly and quickly to assist.

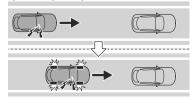


Reverse drive detection

Reverse drive detection has the following 2 functions.

Rearward detection function*

The rearward detection function is designed to assist the driver in avoiding collisions with objects at the rear (obstructions) and to reduce damage in the event of a collision.


If there is a possibility of your vehicle colliding with a target object at the rear, you are notified of possible danger by a screen display and a warning sound. Furthermore, if the possibility of a collision increases, brake control is performed to avoid collision and reduce damage in the event of a collision.

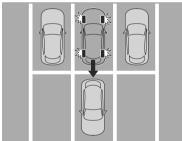

Rear Crossing*

The Rear Crossing is designed to avoid collision and reduce damage in the event of a collision with a vehicle approaching from the rear sides. If there is a possibility of your vehicle colliding with a vehicle approaching from the rear sides, you are notified of possible danger by a screen display and a warning sound. Furthermore, if the possibility of a collision increases, brake control is performed to avoid

collision and reduce damage in the event of a collision.

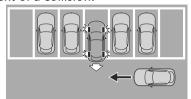

Warnings and Cautions for Using the Smart Brake Support (SBS)

WARNING

Do not rely completely on the SBS. The SBS is only designed to reduce damage in the event of a collision. Over reliance on the system leading to the accelerator pedal or brake pedal being mistakenly operated could result in an accident.

Heed the following cautions so that the SBS can operate normally.

- > Do not modify the suspensions.
- ➤ Handle the Forward Sensing Camera (FSC) appropriately. Otherwise, the Forward Sensing Camera (FSC) may not be able to detect target objects, which could result in an accident. Refer to Forward Sensing Camera (FSC) on page 5-115.
- ➤ Handle the radar sensors appropriately. Otherwise, the radar sensors may not be able to detect target objects, which could result in an accident.
 - Refer to Radar Sensors on page 5-119.
- ➤ Handle the ultrasonic sensors appropriately. Otherwise, the ultrasonic sensors may not be able to detect target objects, which could result in an accident.
 - Refer to Ultrasonic Sensors on page 5-123.

Always check the surrounding area visually.

The operation of the SBS has certain limitations. Always confirm the safety around the vehicle visually when driving.

A CAUTION

- If any of the following conditions is met, turn the SBS off to prevent a mis-operation.
 - A trailer is pulled or an accessory such as a bicycle carrier is installed to the rear of the vehicle.
 - > The vehicle is driven on rough roads such as in areas where there is grass and foliage or off-road.
- Always use tyres of the specified size and the same manufacturer, brand, and tread pattern on all 4 wheels. In addition, do not use tyres with significantly different wear patterns on the same vehicle. If such improper tyres are used, the SBS may not operate normally.

How to Use the Smart **Brake Support (SBS)**

NOTE

During the SBS brake control, the brake pedal may move rearward or become stiff. The brakes are operating, but continue to depress the brake pedal.


When the forward detection function operates'

The forward detection function operates when all of the following conditions are met.

- · (If an object is a vehicle ahead)
 - · The vehicle speed is about 4 km/h (3 mph) or faster.
- · (If an object is a bicycle/pedestrian)
 - · The vehicle speed is about 10 km/h to 80 km/h (6.3 mph to 49 mph).
- · The DSC does not operate.
- · The system determines that there is a possibility of a collision with an object ahead.

When the forward detection function operates, the driver is notified of the danger by the screen display and warning sound. Furthermore, if the possibility of a collision increases, brake control is performed.

Instrument cluster

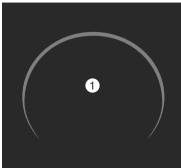

1. "BRAKE!"

Active driving display



1. "BRAKF!"

NOTE

- · If any of the following conditions is met, the forward detection function may not operate normally.
 - The Forward Sensing Camera (FSC) cannot detect target objects. Refer to Forward Sensing Camera (FSC) on page 5-115.
 - · The front radar sensor cannot detect target objects. Refer to Radar Sensors on page 5-119.
- · When there is the possibility of a partial contact with a target object.
- The driver deliberately performs driving operations (accelerator pedal operation, steering wheel operation, selector lever/shift lever operation. and direction indicator lever operation).
- · If any of the following conditions is met, the forward detection function may operate.

- · An animal or object on the road is detected.
- · Passing an approaching vehicle while rounding a curve.
- · Vehicle is passing through a narrow gate or a gate with a low ceiling.
- · There is a metal object, bump, or a protruding object on the road.
- · (Vehicles with Driver Monitoring (DM))

If the system determines that the driver is not paying attention to the road, it activates the collision warning earlier than normal.

- · (Automatic transmission vehicle) If the forward detection function performs brake control and the vehicle is stopped, the system will continue to hold the brakes for a brief time unless there is an operation performed by the driver.
- · (Manual transmission vehicle)
 - · When the forward detection function performs brake control and the vehicle is stopped, the brakes are automatically released after about 2 seconds if the driver does not depress the brake pedal.
 - · When the forward detection function performs brake control and the vehicle is stopped, the engine stops if the driver does not depress the clutch pedal.
- · The operation distance and volume of the collision warning can be changed.
 - Refer to the Settings section in the Mazda Connect Owner's Manual.

When the rearward detection function operates


The rearward detection function operates when all of the following conditions are met.

Smart Brake Support (SBS)

- The vehicle speed is about 2 km/h to 15 km/h (2 mph to 9.3 mph).
- The system determines that there is a possibility of collision with an object at the rear.

When the rearward detection function operates, the screen display and warning sound notify the driver of the danger. Furthermore, if the possibility of a collision increases, brake control is performed.

Instrument cluster

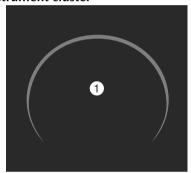

"BRAKF!"

Active driving display



1. "BRAKE!"

NOTE

- The rear ultrasonic sensors may not be able to detect target objects correctly, and the rearward detection function may not operate normally. Refer to Ultrasonic Sensors on page 5-123.
- If any of the following conditions is met, the rearward detection function may operate.
 - · There is a hanging curtain.
 - · Vehicle is passing through a narrow gate or a gate with a low ceiling.

- There is a metal object, bump, or a protruding object on the road.
- (Automatic transmission vehicle)
 If the rearward detection function performs brake control and the vehicle is stopped, the system will continue to hold the brakes for a brief time unless there is an operation performed by the driver.
- · (Manual transmission vehicle)
 - · When the rearward detection function performs brake control and the vehicle is stopped, the brakes are automatically released after about 2 seconds if the driver does not depress the brake pedal.
 - When the rearward detection function performs brake control and the vehicle is stopped, the engine stops if the driver does not depress the clutch pedal.


When the Rear Crossing is operating*

The Rear Crossing operates when all of the following conditions are met.

- The vehicle speed is about 15 km/h (9.3 mph) or slower.
- The system determines that there is a possibility of a collision with a vehicle approaching from a rear side.

When the Rear Crossing operates, the screen display and warning sound notify the driver is notified of the danger. Furthermore, if the possibility of a collision increases, brake control is performed.

Instrument cluster

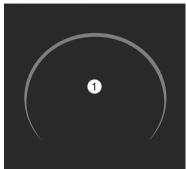

1. "BRAKE!"

Active driving display



1. "BRAKE!"

NOTE

- If any of the following conditions is met, the Rear Crossing may not operate normally.
 - The rear side radar sensors cannot detect an object.
 Refer to Radar Sensors on page 5-119.
 - · A vehicle is approaching directly from the rear of your vehicle.
 - · A vehicle is approaching at an angle from the rear of your vehicle.
 - · A vehicle is approaching from a direction at an acute angle.
- If any of the following conditions is met, the Rear Crossing may operate.
 - · There is a hanging curtain.
 - Vehicle is passing through a narrow gate or a gate with a low ceiling.
- · (Automatic transmission vehicle)

If the Rear Crossing performs brake control and the vehicle is stopped, the system will continue to hold the brakes for a brief time unless there is an operation performed by the driver.

- · (Manual transmission vehicle)
 - When the Rear Crossing performs brake control and the vehicle is stopped, the brakes are automatically released after about 2 seconds if the driver does not depress the brake pedal.
 - When the Rear Crossing performs brake control and the vehicle is stopped, the engine stops if the driver does not depress the clutch pedal.

Turning off the warning sound

The warning sound can be turned off while the following system is operating. When the warning sound is turned off, the steering wheel vibrates instead of the warning sound when the system is operating.

Forward detection function

There are 2 ways to turn off the warning sound.

- Turn off the warning sound using Mazda Connect.
 Refer to the Settings section in the Mazda Connect Owner's Manual.
- Turn off the warning sound using the i-ACTIVSENSE mute switch.
 Refer to How to Use the i-ACTIVSENSE mute switch on page 5-114.

Turning off the SBS

The SBS can be turned off using the Mazda Connect.

Refer to the Settings section in the Mazda Connect Owner's Manual.


When the SBS is turned off, the SBS OFF indicator in turns on.

360° View Monitor*

The 360° view monitor is a system which assists the driver in checking safety by displaying the conditions around the vehicle on the centre display when the vehicle is driven at low speeds or when the vehicle is parked or stopped.


Top view

Displays an image of the vehicle as if it were viewed from directly above to assist in checking the area around the vehicle when driving forward or in reverse.

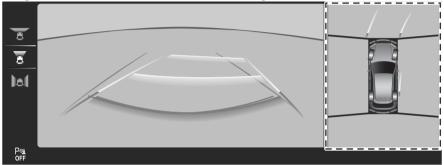


Front view

Displays an image of the front of the vehicle together with the guide lines to assist in checking the area at the front of the vehicle when driving forward, parking, or stopping.

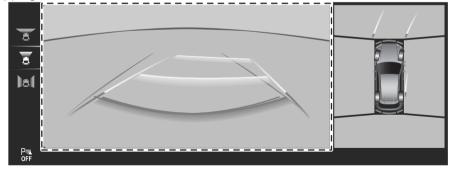


Front wide view

Displays an image of the front of the vehicle (wide area) together with the guide lines to assist in checking the area at the front of the vehicle when driving forward or entering an intersection.

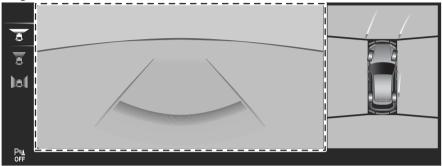


Side view

Displays an image of the front left and right sides of the vehicle together with the guide lines to assist in checking the front left and right sides of the vehicle when driving forward, parking, or stopping.

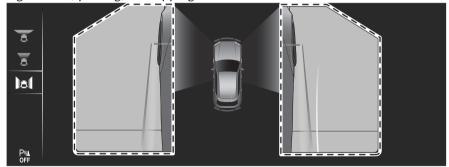


Rear view

Displays an image of the rear of the vehicle together with the guide lines to assist in checking the area at the rear of the vehicle when reversing, parking, or stopping.

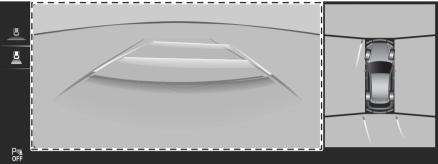

Rear wide view

Displays an image of the rear of the vehicle (wide area) together with the guide lines to assist in checking the area at the rear of the vehicle when reversing, parking, or stopping.

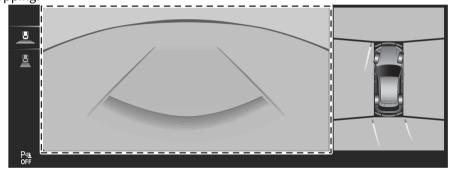

Warnings and Cautions for Using the 360° View Monitor

⚠ WARNING

Always confirm the safety of the area around the vehicle visually when driving. The 360° View Monitor is an auxiliary device which assists the driver in checking the safety of the area around the vehicle.

Do not rely completely on the 360° View Monitor.

- > The shooting range of the cameras and detection range of the sensors are limited. For example, the following locations displayed on the screen may be blind spots and target objects may not be visible.
 - > Areas in black on screen
 - Seams where each of camera images merge
- ➤ Vehicle width extension lines and projected vehicle paths are only estimates. Images displayed on the display may differ from the actual conditions.

A CAUTION


- ➤ Handle the cameras appropriately. If the cameras are handled incorrectly, images may not be displayed normally.

 Refer to Cameras on page 5-125.
- ➤ Do not use the 360° view monitor in the following locations or conditions.
 - ➤ Bumpy roads
 - The vehicle is on a road incline.
 - ➤ Icy or snow-covered roads
 - > Tyre chains or a temporary spare tyre is installed.
 - The doors are not fully closed.
 - The outside mirrors are retracted.
- If the doors are not completely closed, images and guide lines may not be displayed correctly.
- ➤ Heed the following cautions to assure that the 360° view monitor operates normally.
 - ➤ Do not modify the suspensions.
 - Always use wheels of the specified size for the front and rear wheels. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for tyre replacement.
- ➤ When the centre display is cold, images may leave trails or the display might be darker than usual, making it difficult to check the vehicle surroundings. Always confirm the safety around the vehicle visually when driving.

- Recognizing images at night may be difficult because there are no lights in the shooting range of the side camera. Always confirm the safety around the vehicle visually when driving.
- The method for parking/stopping the vehicle using the 360° View Monitor differs depending on the road conditions and vehicle conditions. In addition, when and how much you turn the steering wheel will differ depending on the situation, therefore always check the vehicle surroundings directly with your eyes while using the system.

How to Use the 360° View Monitor

Displaying images of the vehicle front/sides

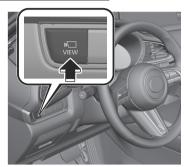

Images are displayed on the centre display.

NOTE


- · When the shift lever/selector lever is in the R position, images of the front/sides of the vehicle are not displayed.
- If any of the following conditions are met, image display of the front/sides of the vehicle ends.
 - · Switches around the commander knob are pressed.
 - · The vehicle is driven at less than 15 km/h ($\dot{9}$.3 mph) for about 4 minutes and 30 seconds.
 - · The vehicle speed is 15 km/h (9.3 mph) or faster.
 - \cdot The vehicle is driven at 15 km/h (9.3 mph) or faster for 8 seconds.
 - (Manual transmission vehicle) The parking brake is applied.
 - · (Automatic transmission vehicle)
 The selector lever is shifted to the P position.

Displaying images of the vehicle rear

Shift the shift lever/selector lever to the R position. Images are displayed on the centre display.

Switching the image

1. Turn the commander knob and move the cursor to the desired image.

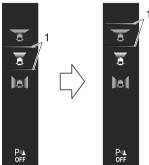

- 1. Cursor
- 2. Press the commander knob to select the image to display.


Viewing the screen

NOTE

- Because there might be a difference between the image displayed on the screen and the actual conditions, always check the safety of the surrounding area directly with your eyes when driving.
- Images may be difficult to see due to the weather and surrounding environment, however this does not indicate a problem.
- · The rear view and rear wide view images are reversed left and right.
- · The actual tyres may appear in the top view.
- Obstructions displayed in views other than the top view may not be displayed on the top view.
- The areas in black on the top view the seams where each of camera images merge are blind spots.
- \cdot The top view is displayed by processing the images taken by each camera. Therefore, images may be displayed as follows.
 - · Colour or brightness displayed on the screen may appear differently than in actuality.
 - · If the vehicle tilts, the image may appear distorted.
 - · Lines on the road may appear distorted at the seams where each of the camera images merge.
- Screen brightness and contrast can be adjusted.
 Refer to the Settings section in the Mazda Connect Owner's Manual.
 - Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The parking sensor detection range has limitations. For details, refer to the parking sensor entry.
 - Refer to Parking Sensor on page 5-222.


· The screen display may differ from the actual display.

Top view, front view

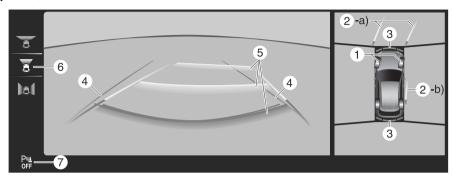

	Indication	Content	
1	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.	
2	Projected vehicle path lines (red/yellow)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation a) Indicates the path where the edge of the front bumpe is expected to travel. b) Indicates the path where the inner side of the vehicle is expected to travel.	
3	Parking sensor detection indication	Indicates the obstruction detection status.	
4	Vehicle width guide lines (blue)	Indicates the approximate width of the vehicle.	
		Indicates the distance (from front end of bumper) in front of the vehicle.	
5	Projected vehicle path distance guide lines (red/yellow)	 The red line indicates the point about 50 cm (19 in) from the front end of the bumper. The yellow lines indicate the points about 1 m (39 in) and 2 m (78 in) from the front end of the bumper. 	
6	View status icon	Indicates which image is selected.	
7	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.	

Top view, front wide view

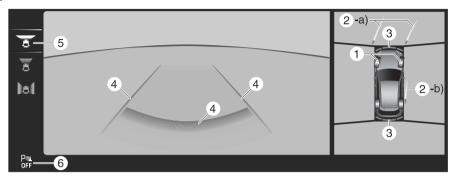


	Indication	Content		
1	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.		
2	Projected vehicle path lines (red/yellow)	Indicates the approximate projected path of the vehing Moves in conjunction with the steering wheel operation a) Indicates the path where the edge of the front buris expected to travel. b) Indicates the path where the inner side of the vehis expected to travel.		
3	Parking sensor detection indication	Indicates the obstruction detection status.		
4	Extended vehicle width lines and distance guide lines (red/blue)	 Indicates the approximate width of the vehicle and the distance (from front end of bumper) in front of the vehicle. The red line indicates the point about 50 cm (19 in) from the front end of the bumper. The blue lines indicate the points from about 50 cm (19 in) and up to 2 m (78 in) from the front end of the bumper. 		
5	View status icon	Indicates which image is selected.		
6	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.		

NOTE

The front wide view displays the image in front of the vehicle at a wide angle and corrects the image to help detect approaching obstructions from the side. Therefore, it differs from the actual view.

Side view

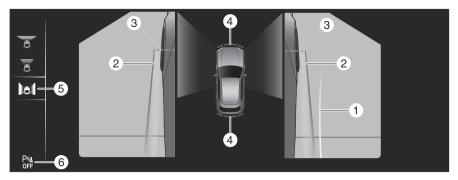


	Indication	Content
1	Projected vehicle path lines (yellow)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation. The projected vehicle path lines (yellow) indicate the path the inner side of the vehicle is expected to travel.
2	Vehicle parallel guide lines (blue)	Indicates the approximate vehicle width including the outside mirrors.
3	Vehicle front end guide lines (blue)	Indicates the front edge of the vehicle (front edge of the bumper).
4	Parking sensor detection indication	Indicates the obstruction detection status.
5	View status icon	Indicates which image is selected.
6	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.



Do not turn the steering wheel any more until the vehicle has passed the obstruction, even if the obstruction is not visible on the side view image. If the steering wheel is turned even more, the vehicle may contact the obstruction if it is turned sharply.

Top view, rear view

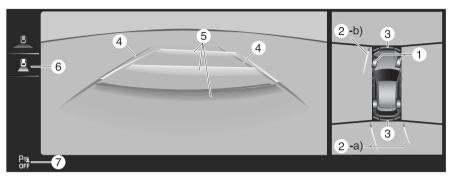

	Indication	Content	
1	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.	
2	Projected vehicle path lines (red/yellow)	Indicates the approximate projected path of the vehicl Moves in conjunction with the steering wheel operation a) Indicates the path where the rear end of the rear bumper passes as a reference. b) Indicates the path where the outer side of the vehicles expected to travel.	
3	Parking sensor detection indication	Indicates the obstruction detection status.	
4	Vehicle width guide lines (blue)	Indicates the approximate width of the vehicle.	
5	Projected vehicle path distance guide lines (red/yellow)	These guide lines indicate the approximate distance to a point measured from the rear of the vehicle (from the end of the bumper). The red line indicates the point about 50 cm (19 in) from the rear end of the rear bumper.	
		• The yellow lines indicate the points about 1 m (39 in) and 2 m (78 in) from the rear end of the rear bumper.	
6	View status icon	Indicates which image is selected.	
7	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.	




The front of the vehicle swings out wide when turning the steering wheel while reversing. Maintain sufficient distance between the vehicle and an obstruction.

NOTE

- Even though the back end of the parking space (or garage) displayed on the screen and distance guide lines appear parallel, they may not actually be parallel.
- · When parking in a space with a division line on only one side of the parking space, even though the division line and the vehicle width guide line appear parallel, they may not actually be parallel.

Top view, rear wide view

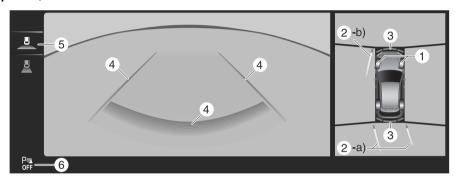

	Indication	Content	
1	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.	
2	Projected vehicle path lines (red/yellow)	Indicates the approximate projected path of the vehicle Moves in conjunction with the steering wheel operatio a) Indicates the path where the rear end of the rear bumper passes as a reference. b) Indicates the path where the outer side of the vehicl is expected to travel.	
3	Parking sensor detection indication	Indicates the obstruction detection status.	
4	Extended vehicle width lines and distance guide lines (red/blue)	 These guide lines indicate the approximate width of the vehicle and distance to a point measured from the rear of the vehicle (from the end of the bumper). The red line indicates the point about 50 cm (19 in) from the rear end of the rear bumper. The blue lines indicate the points from about 50 cm (19 in) and up to 2 m (78 in) from the rear end of the bumper. 	
5	View status icon	Indicates which image is selected.	
6	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.	

NOTE

The rear wide view displays the image at the rear of the vehicle at a wide angle and corrects the image to help detect approaching obstructions from the side. Therefore, it differs from the actual view.

System problem indication

In the following cases, there might be a problem with the system. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

- · "No camera signal." is displayed on the centre display.
- The display on the centre display does not switch to the camera image even if the selector lever is shifted to the R position.
- \cdot The display on the centre display does not switch to the camera image even if the 360° view monitor switch is pressed.
- · A portion of the display on the centre display is black.

Convenient Ways to Use the 360° View Monitor

The 360° View Monitor settings can be changed as follows.


Refer to the Settings section in the Mazda Connect Owner's Manual.

- · Automatic display of the 360° View Monitor when the vehicle power is switched ON.
- · When the 360° view mode is activated, the preferentially displayed images can be selected.
- Automatic display of the front view when switching from reverse to forward gear.
- · No display of the projected vehicle path lines.

Secondary Collision Reduction*

The Secondary Collision Reduction reduces secondary damage by decelerating the vehicle when it is damaged in a collision to the extent that the airbags are deployed while the vehicle is stopped.

If a collision occurs to the extent that the airbags are deployed while the vehicle is stopped, the hazard warning lights flash to alert surrounding vehicles and the brakes are controlled to reduce damage in the event of a collision with an obstruction or other object.

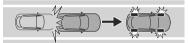

Warnings and Cautions for Using the Secondary **Collision Reduction**

WARNING

Do not rely completely on the Secondary Collision Reduction.

- ➤ The Secondary Collision Reduction may not operate normally depending on various conditions such as the vehicle condition, component part damage condition, target object condition, weather conditions, or traffic conditions. Do not rely completely on the system and make it your responsibility as a driver to drive the vehicle.
- ➤ The functions of the Secondary Collision Reduction have limitations. If you neglect to operate the brake and accelerator pedals correctly, it could result in serious injury.

How to Use the Secondary Collision Reduction

When the Secondary Collision Reduction operates

The Secondary Collision Reduction operates if the vehicle is damaged in a collision to the extent that the airbags are deployed while the vehicle is stopped.

When the Secondary Collision Reduction operates, the system controls and applies the brakes until the vehicle stops. In addition, the hazard warning lights continue to flash. After the vehicle stops, the parking brake is applied by the Electric Parking Brake (EPB).

NOTE

- The brake lights turn on while the brakes are operating by the system control.
- If there is a malfunction with the electric parking brake (EPB), the brakes are released by the system control after the vehicle is stopped.
- The settings for the Secondary Collision Reduction system differ depending on the grade/ specification-separate equipment.

Secondary Collision Reduction is disabled

If any of the following conditions is met, the Secondary Collision Reduction is cancelled.

- · A certain period of time has passed since the system operated.
- After stopping the vehicle, the accelerator pedal is strongly depressed 3 times.

 The parking brake is released after the Electric Parking Brake (EPB) operates.

NOTE

- If the driver's brake pedal depression force is stronger than the system's brake control, the driver's brake operation takes priority.
- Flashing of the hazard warning lights by the system control is cancelled when any of the following operations is performed.
 - · Hazard warning light switch is pressed.
 - · Vehicle power is switched OFF.

Cruise Control^{*}

Cruise control reduces the load on the driver by driving the vehicle at a constant speed. The vehicle is driven at the preset speed and maintaining a constant vehicle speed without the driver having to depress the accelerator or brake pedal.

Warnings and Cautions for Using the Cruise Control

WARNING

Do not rely completely on the cruise control.

The functions of the cruise control have limitations. Always drive carefully by checking the safety of your surroundings and depressing the brake or accelerator pedal.

Do not use the cruise control under the following conditions. Otherwise, it may result in an accident.

- The vehicle is driven on roads other than highways.
- The vehicle is driven on roads with sharp curves or with heavy traffic where sufficient distances between vehicles cannot be kept.
- ➤ The vehicle is driven on slippery roads such as icy or snow-covered roads, and unpaved roads.
- > The vehicle is driven on a long downslope.
- The vehicle is driven on a steep slope.

Turn off the cruise control when not in use.

Leaving the cruise control turned on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.



> Turn off the cruise control when being towed or when towing another vehicle.

➤ Turn off the cruise control when the vehicle is running on a chassis roller.

How to Use the Cruise Control

Setting the cruise control

1. Press the cruise control switch to turn the system on.



When the system is on, the cruise control standby indication (white)

is displayed.

- 2. Accelerate the vehicle to the desired speed of 25 km/h (16 mph) or faster (minimum speed setting is 30 km/h (19 mph)).
- 3. Set the vehicle speed by pressing the RES switch up (SET+) or down (SET-).



When the vehicle speed is set, the set vehicle speed is displayed on the displays and the cruise control

standby indication (white) changes to the cruise control set

indication (green) .
While the cruise control is operating, the driver is notified of the operation condition by the screen display.

Instrument cluster (i-ACTIVSENSE display)



1. Set speed

Instrument cluster (Other than i-ACTIVSENSE display)



1. Set speed

Active driving display



1. Set speed

NOTE

- The accelerator pedal operation takes priority during constant speed driving. When you release your foot from the accelerator pedal, the vehicle returns to constant speed driving at the set speed.
- (Vehicles with Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function))

If the distance between vehicles control is disabled using the Mazda Connect, the system switches to the cruise control. At this time, the MRCC switch functions as the cruise control switch.

Refer to the Settings section in the Mazda Connect Owner's Manual. If the vehicle power is switched OFF while the distance between vehicles control is disabled, the distance between vehicles control is enabled automatically the next time the vehicle power is switched ON.

- The system may not be able to maintain the set speed depending on the road conditions such as steep up or down slopes.
- When the vehicle speed is less than 20 km/h (12 mph), the cruise control is cancelled. If you want to use the cruise control again, reset the cruise control.
- The brake lights turn on while the brakes are operating by the cruise control.
- (Automatic transmission vehicle)
 The cruise control cannot be
 cancelled while driving in manual
 shift mode (selector lever shifted
 from the D to M position).
 Therefore, engine braking does not
 work even if you shift down to a
 lower gear. If deceleration is
 required, lower the set vehicle speed
 or depress the brake pedal.

Changing the set vehicle speed

Changing the set vehicle speed using the RES switch

Press the RES switch up (SET+) or down (SET-) to the desired speed.

- Press and release immediately: 1 km/h (1 mph)
- · Press and hold: 10 km/h (5 mph)

Changing the set vehicle speed using the accelerator pedal

Depress the accelerator pedal until the vehicle speed reaches the desired speed, then press the RES switch up (SET+) or down (SET-).

The cruise control is temporarily cancelled

The cruise control is temporarily cancelled when one of the following conditions is met.

- · The brake pedal is depressed.
- The CANCEL switch is pressed one time.
- · The DSC has operated.
- The Smart Brake Support (SBS) has operated.
- The frequency of the braking operation by the cruise control is high.
- · (Manual transmission vehicle)
 - The clutch pedal is depressed for a certain period of time.
 - The shift lever is shifted to neutral (N) for a certain period of time.

If the cruise control is temporarily cancelled, it operates at the previously set speed by pressing the RES switch.

Turning off the cruise control

Press the cruise control switch.


The cruise control standby indication

(white) 🕅 /cruise control set

indication (green) turns off and the cruise control stops.

Rear View Monitor*

The rear view monitor is a system which assists the driver in checking safety by displaying the conditions behind the vehicle on the centre display when the vehicle is driven in reverse.

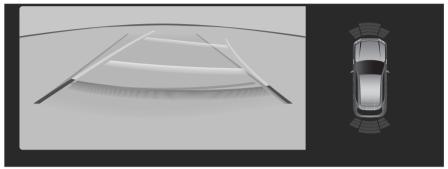

Warnings and Cautions for Using the Rear View Monitor

⚠ WARNING

Always confirm the safety of the area around the vehicle visually when driving. The rear view monitor is only designed to assist the driver while reversing. Images displayed on the display may differ from the actual conditions. Do not rely completely on the rear view monitor while reversing. Otherwise, the vehicle may contact an obstruction and cause an accident.



- ➤ Do not use the rear view monitor in the following locations/situations.
 - There is a bump on a road.
 - The vehicle is on a road incline.
 - > Icy or snow-covered slippery roads.
 - Tyre chains or a temporary spare tyre is installed.
 - The liftgate is not fully closed.
- ➤ When the centre display is cold, images may leave trails or the display might be darker than usual, making it difficult to check the vehicle surroundings. Always confirm the safety around the vehicle visually when driving.

How to Use the Rear View Monitor

Displaying the rear view monitor

Shift the shift lever/selector lever to the R position. Images are displayed on the centre display.


Viewing the screen

NOTE


- The images displayed on the centre display are reversed left and right.
- Screen brightness and contrast can be adjusted.
 Refer to the Settings section in the Mazda Connect Owner's Manual.

Type A

When the parking sensor is ON

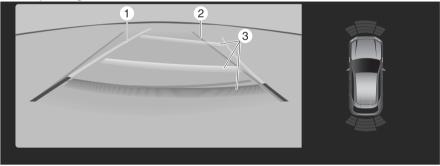

When the parking sensor is OFF

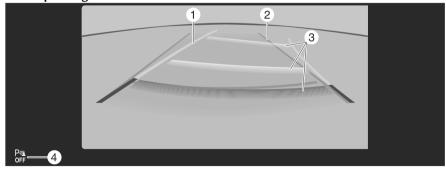


Indication		Content
1	Projected vehicle path lines (yellow)	Indicates the approximate projected path of the vehicle. The projected vehicle path lines move in conjunction with the steering wheel operation.


	Indication	Content	
2	Vehicle width guide lines (blue)	Indicates the approximate width of the vehicle. Does not display when the steering wheel is operated in a straight-ahead position.	
3	Projected vehicle path distance guide lines (red/yellow)	 These guide lines indicate the approximate distance to a point measured from the rear of the vehicle (from the end of the bumper). The centre point of the red line indicates the point about 50 cm (19 in) from the rear end of the rear bumper. The centre points of the yellow lines indicate the points about 1 m (39 in) and 2 m (78 in) from the rear end of the rear bumper. 	
4	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.	

Type B

When the parking sensor is ON

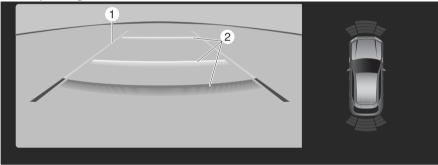

When the parking sensor is OFF

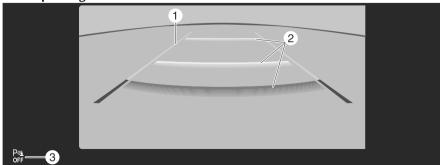

		Indication	Content	
1	I	Vehicle width guide lines (yellow)	Indicates the approximate width of the vehicle.	
2	2	Projected vehicle path distance guide lines (red/yellow)	 These guide lines indicate the approximate distance to a point measured from the rear of the vehicle (from the end of the bumper). The red line indicates the point about 50 cm (19 in) from the rear end of the rear bumper. The yellow lines indicate the points about 1 m (39 in) and 2 m (78 in) from the rear end of the rear bumper. 	
3	3	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.	

System problem indication

In the following cases, there might be a problem with the system. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

- · "No camera signal." is displayed on the centre display.
- The display on the centre display does not switch to the camera image even if the selector lever is shifted to the R position.
- · A portion of the display on the centre display is black.

Parking Sensor^{*}

The parking sensors are a system that assists the driver in checking safety by detecting obstructions around the vehicle and notifying the driver while parking. When an obstruction is detected, a screen display and a warning sound notify the driver of the distance to the obstruction.

Warnings and Cautions for Using the Parking Sensor

• WARNING

Always confirm the safety of the area around the vehicle visually when driving.

The parking sensors are only auxiliary devices when driving forward or in reverse. In addition, the detection range of the sensors is limited, and driving the vehicle relying on the system completely may cause an accident.

How to Use the Parking Sensor

The parking sensors operate

When the system detects an obstruction, the driver is notified of the presence of the obstruction by a screen display and a warning sound. The screen display and warning sound change according to the distance from the obstruction. In addition, if multiple obstructions are detected simultaneously, the warning sound for the nearest obstruction is activated.

Front*, rear

Distance between vehicle and obstruction Front Rear		Display		
		Vehicles without 360° View Moni- tor	Vehicles with 360° View Monitor	Warning sounds
About 1 m to 60 cm (39 in to 24 in)	About 1 m 50 cm to 60 cm (59 in to 24 in)	Green	Green	Slow, intermittent sound
About 60 cm to 50 cm (24 in to 20 in)	About 60 cm to 50 cm (24 in to 20 in)	Yellow	Yellow	Intermittent sound

Distance between vehicle and obstruction		Display		
Front Rear		Vehicles without 360° View Moni- tor	Vehicles with 360° View Monitor	Warning sounds
About 50 cm to 40 cm (20 in to 16 in)	About 50 cm to 40 cm (20 in to 16 in)	Amber	Amber	Fast intermittent sound
Within about 40 cm (16 in)	Within about 40 cm (16 in)	Red	Red	Continuous sound

Corners

Distance between vehi-	Dis		
cle and obstruction	Vehicles without 360° View Monitor	Vehicles with 360° View Monitor	Warning sounds
About 50 cm to 40 cm (20 in to 16 in)	Yellow	Yellow	Intermittent sound


Distance between vehi-	Dis	play	
cle and obstruction	Vehicles without 360° View Monitor	Vehicles with 360° View Monitor	Warning sounds
About 40 cm to 30 cm (16 in to 12 in)	Amber	Amber	Fast intermittent sound
Within about 30 cm (12 in)	Red	Red	Continuous sound

NOTE

- If ultrasound sensors cannot detect an object correctly, the system may not operate normally.
 - Refer to Ultrasonic Sensors on page 5-123.
- The screen display can be switched between display and non-display and the volume of the warning sound can be changed.
 - Refer to the Settings section in the Mazda Connect Owner's Manual.
- · (Vehicles with 360° View Monitor)
 - When the screen display is set to be displayed, the display automatically switches to the 360° View Monitor display when the sensor detects an obstruction. When an obstruction is no longer detected, the display switches to the display before the obstruction was detected. However, when the 360° View Monitor is displayed in advance, it continues to be displayed no matter if an obstruction is detected or not.

• If an obstruction in the same detection range is detected continuously for 6 seconds or longer, only the warning sound stops (excluding the closest detection range). When the detection range changes to the close side, the warning sound resumes.

Turning off the parking sensors

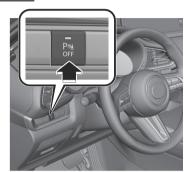

The parking sensors turn off and the parking sensor OFF switch indicator light turns on.

If the switch is pressed again, the parking sensors become operational and the indicator light of the switch turns off.

System problem indication

· If a problem occurs, the following display notifies the driver. The system may have a malfunction. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

(Vehicles without 360° View Monitor)



(Vehicles with 360° View Monitor)



• If a certain obstruction detection indication is continuously displayed, make sure that there is no foreign matter on the sensor area corresponding to the detection indicator. If the system does not recover, have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Winter Driving

Carry emergency gear, including tyre chains, window scraper, flares, a small shovel, jumper leads, and a small bag of sand or salt.

Ask an expert repairer (we recommend an Authorised Mazda Repairer) to check the following:

- Have the proper ratio of antifreeze in the radiator.

 Pefer to Inspecting the Coolert on
 - Refer to Inspecting the Coolant on page 9-36.
- · Inspect the battery and its leads. Cold reduces battery capacity.
- Use an engine oil appropriate for the lowest ambient temperatures that the vehicle will be driven in (page 9-39).
- Inspect the ignition system for damage and loose connections.
- Use washer fluid made with antifreeze—but do not use engine coolant antifreeze for washer fluid (page 9-38).

When driving on ice or in water, snow, mud, sand, or similar hazards:

- Be cautious and allow extra distance for braking.
- Avoid sudden braking and sudden manoeuvring.
- Do not pump the brakes. Continue to press down on the brake pedal.
 Refer to Antilock Brake System (ABS) on page 5-87.
- If you get stuck, select a lower gear and accelerate slowly. Do not spin the front wheels.
- For more traction in starting on slippery surfaces such as ice or packed snow, use sand, rock salt, chains, carpeting, or other nonslip material under the front wheels.

NOTE

- Remove snow before driving. Snow left on the windscreen is dangerous as it could obstruct vision.
- Do not apply excessive force to a window scraper when removing ice or frozen snow on the mirror glass and windscreen.
- Never use warm or hot water for removing snow or ice from windows and mirrors as it could result in the glass cracking.
- Drive slowly. Braking performance can be adversely affected if snow or ice adheres to the brake components. If this situation occurs, drive the vehicle slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal.

Snow Tyres



Do Not Use Tyres Other Than The Specified Size. In Addition, Do Not Mix Different Types Of Tyres.

Using tyres with sizes other than the specified size or mixing different tyre types is dangerous. It could compromise the vehicle's driveability, resulting in an accident. In addition, it could be in violation of the law. Use the tyre size indicated on the label applied to the door frame of the driver's door while the door is open. Use only the same type tyres on all four wheels.



Check local regulations before using studded tyres.

Use snow tyres on all 4 wheels

Do not exceed the maximum permissible speed for your snow tyres or legal speed limits.

Europe

When snow tyres are used, select the specified size and pressure (page 10-90).

Tyre Chains

Check local regulations before using tyre chains.



- ➤ Chains may affect handling.
- Do not go faster than 50 km/h (30 mph) or the chain manufacturer's recommended limit, whichever is lower.
- ➤ Drive carefully and avoid bumps, holes, and sharp turns.
- ➤ Avoid locked-wheel braking.
- ➤ Do not use chains on a temporary spare tyre; it may result in damage to the vehicle and to the tyre. In some models, the vehicle is not equipped with a factory installed temporary spare tyre.
- Do not use chains on roads that are free of snow or ice. The tyres and chains could be damaged.
- Chains may scratch or chip aluminium wheels.

NOTE

If your vehicle is equipped with the tyre pressure monitoring system, the system may not function correctly when using tyre chains.

Install the chains on the front tyres only.

Do not use chains on the rear tyres.

Tyre chain selection (Europe)

Mazda recommends hexagon type steel ring chains. Select the proper type according to your tyre size.



NOTE


Although Mazda recommends hexagon type steel ring chains, all chains within the installation specifications may be used.

Installation specification (Europe)

When installing tyre chains, the distance between the tyre tread and the chain must be within the prescribed limits in the following table.


Distance [Unit mm (in)]

Side view

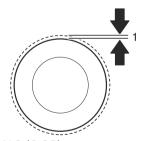

1. MAX 9 (0.35)

Cross section view

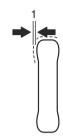

1. MAX 9 (0.35)

Installing the chains

- If your vehicle is equipped with wheel covers remove them, otherwise the chain bands will scratch them.
- Secure the chains on the front tyres as tightly as possible. Always follow the chain manufacturer's instructions.
- 3. Retighten the chains after driving 1/2-1 km (1/4-1/2 mile).

Equipment to Make Cabin More Comfortable

Fully Automatic Air-Conditioning
System6-2
Air Vents 6-2
How to Use the Air Vents 6-2
Fully Automatic Air-Conditioning
System6-4
Fully Automatic Air-Conditioning
System Overview 6-6
How to Use the Fully Automatic
Air-Conditioning System 6-7
Operating Each Switch 6-7
Manual Air-Conditioning
System6-11
Air Vents 6-11
How to Use the Air Vents 6-11
Manual Air-Conditioning System
Overview 6-14
How to Use the Manual Air-
Conditioning System6-15
Operating Each Switch 6-17

Seat Warmer 6-20
Seat Warmer* 6-20
Warnings and Cautions For Using
the Seat Warmer6-20
How to Use the Seat
Warmer6-21
Convenient Ways to Use the Seat
Warmer6-22
Heated Steering Wheel 6-23
Heated Steering Wheel6-23 Heated Steering Wheel*6-23
Heated Steering Wheel*6-23
Heated Steering Wheel*6-23 Warnings and cautions For Using
Heated Steering Wheel*6-23 Warnings and cautions For Using the Heated Steering Wheel
Heated Steering Wheel*6-23 Warnings and cautions For Using the Heated Steering Wheel6-23 How to Use Heated Steering Wheel6-24
Heated Steering Wheel*6-23 Warnings and cautions For Using the Heated Steering Wheel6-23 How to Use Heated Steering

Air Vents


The location and the direction airflow exits the air vents changes depending on the air vent adjustment.

How to Use the Air Vents

Air vent open/closet


Move the knob or the dial fully in the fully open or fully closed direction.

Driver's Side Vents

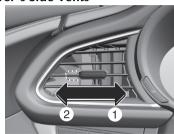


- 1. Open
- 2. Close

Passenger's Side Vents

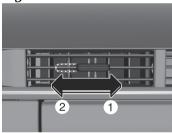

- 1. Open
- 2. Close


Rear Vents*

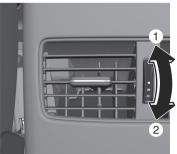


- 1. Open
- 2. Close

Fully Automatic Air-Conditioning System


Airflow direction adjustment Driver's Side Vents

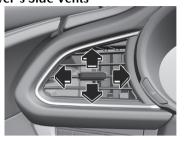


Passenger's Side Vents

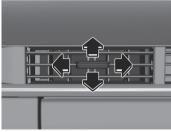

Rear Vents*

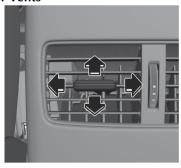

Airflow selection Instrument panel Vents

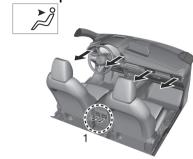


1. With rear vents

Instrument panel and Floor Vents




1. With rear vents

Floor Vents

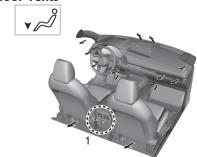

1. With rear vents

Defroster and Floor Vents

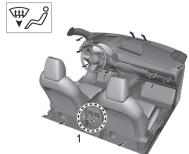

1. With rear vents

Defroster Vents



Fully Automatic Air-Conditioning System

The following functions are automatically controlled according to the set temperature.

- · Airflow temperature control
- · Airflow amount control
- · Airflow mode switching
- · Recirculate/fresh air mode switching
- · Air conditioning (cooling/ dehumidifying functions) on/off
- · Seat warmer level selection*
- · Heated steering wheel operation*

NOTE

To prevent cold airflow immediately after heating starts when the engine is cold, the airflow amount is decreased.

Fully automatic air-conditioning uses the sunlight and interior temperature sensors to control the temperature in the cabin by measuring interior and exterior temperatures, humidity, and sunlight. Do not cover the sunlight/interior temperature sensor.


Sunlight sensor



Interior temperature sensor



Fully Automatic Air-Conditioning System Overview

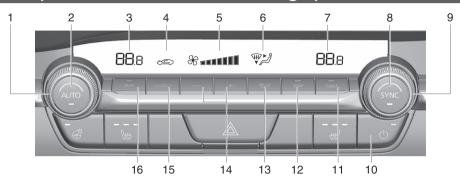

- 1. Driver temperature control dial
- 2. AUTO switch
- 3. Temperature setting display (driver's side)
- 4. Air intake display
- 5. Airflow display6. Mode selector display
- 7. Temperature setting display (passenger's side)8. SYNC (synchronized temperature) switch
- 9. Passenger temperature control dial
- 10.Power switch
- 11.Rear window defogger switch 12.Windscreen defroster switch
- 13. Mode selector switch
- 14.Fan control switch
- 15. Air intake selector switch
- 16.A/C switch

How to Use the Fully Automatic Air-Conditioning System

1. Start the engine.





The AUTO switch indicator light turns on.

- 3. Turn the temperature control dial to set the desired temperature.

 Each function is automatically controlled according to the set temperature.
- 4. To stop the operation, press the air-conditioning system power switch.

NOTE

· (Europe)

The recommended set temperature is $22 \,^{\circ}\text{C}$ (72 $^{\circ}\text{F}$).

- (Except Europe)
 The recommended set temperature is 25 °C (77 °F).
- If any mode selector switch, fan control switch, or windscreen defroster switch is operated during auto operation, the AUTO switch indicator light turns off. The functions for switches other than those operated will continue to operate in auto control.

Operating Each Switch

AUTO switch

Automatically controlled according to the set temperature.



Temperature control dial

How to increase the set temperature



How to decrease the set temperature



Fully Automatic Air-Conditioning System

NOTE

· (Europe)

The set temperature changes in increments of 0.5 °C within a range of 15 °C (60 °F) and 29 °C (84 °F).

· (Except Europe)

The set temperature changes in increments of 0.5 °C within a range of 18 °C (64 °F) and 32 °C (90 °F).

• When the temperature is set to the lower or upper limit, "Lo" or "Hi" is displayed.

SYNC (synchronized temperature) switch



The mode switches between independent mode and interconnection mode each time the switch is pressed.

Independent mode (indicator light turned off)

The set temperature can be controlled independently for the driver's side and front passenger's side.

Turn the driver's side temperature control dial or the front passenger's side temperature control dial to control the temperature.

Interconnection mode (indicator light turned on)

The set temperature for the driver's side and front passenger's side is controlled simultaneously.

Turn the driver's side temperature control dial to control the temperature.

NOTE

- The set temperature for the front passenger's side changes to that of the driver when independent mode is switched to interconnection mode.
- When the front passenger's side temperature control dial is turned while in interconnection mode (SYNC switch indicator light turned on), the mode switches to independent mode (SYNC switch indicator light turned off).

A/C switch



The cooling/dehumidifying function switches between on and off each time the switch is pressed. The indicator light turns on while the function is operating.

NOTE

The air conditioner may not operate when the ambient temperature falls to nearly 0 °C to protect the system.

Rear window defogger switch

Use to defog the rear window. Refer to How to Use the Rear Window Defogger Switch on page 5-82.

Fully Automatic Air-Conditioning System

Air intake selector switch



The mode is switched between recirculate mode and fresh air mode each time the switch is pressed. The display indicates whether recirculate mode (((a)) or fresh air mode ((a)) is selected.



Do not recirculate the air in the cabin during cold or rainy weather.

Recirculating the air in the cabin during cold and rainy weather is dangerous as it will cause the windows to fog up. Your vision will be hampered, which could lead to a serious accident.

Recirculate mode (

Outside air is shut off. Air within the vehicle is recirculated. Use this position when going through tunnels, driving in congested traffic (high engine exhaust areas) or when quick cooling is desired.

Fresh air mode (⇐⇒)

Outside air is allowed to enter the cabin. Use this position for ventilation or windscreen defrosting.

Mode selector switch



The desired airflow mode can be selected.

The mode changes each time the switch is pressed. The selected mode is indicated on the display.

NOTE

To set the air vent to \(\partial \text{yr} \) press the windscreen defroster switch.

Fan control switch

How to increase the airflow amount



How to decrease the airflow amount



Fully Automatic Air-Conditioning System

The airflow amount changes each time the switch is pressed. The airflow amount is indicated on the display. The airflow amount can be adjusted to 7 levels.

Air-conditioning system power switch (system on/off)



Switches the air-conditioning system on and off.

The indicator light turns on while the function is operating.

Windscreen defroster switch



Switches the windscreen defroster on (indicator light turned on) and off (indicator light turned off).

Use to defrost the windscreen and side windows.

The fresh air mode (\iff) is automatically selected, and the air conditioner automatically turns on when the windscreen defroster is operating.

⚠ WARNING

Do not lower the airflow temperature when defrosting the windscreen. Otherwise, the outer side of the windscreen will frost causing reduced visibility which may lead to an accident

NOTE

- For faster defrosting, do any of the following operations.
 - Operate the fan switch and increase the airflow amount.
 - Turn the temperature control dial to increase the airflow temperature.
- Be careful that the windows do not fog up when doing any of the following operations.
 - · Switch to recirculate mode.
 - · Turn off the air conditioner.


Air Vents

The location and the direction airflow exits the air vents changes depending on the air vent adjustment.

How to Use the Air Vents


Air vent open/closet
Move the knob or the dial fully in the fully open or fully closed direction.

Driver's Side Vents

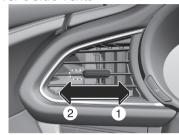

- 1. Open
- 2. Close

Passenger's Side Vents

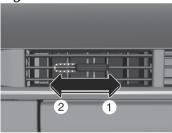

- 1. Open
- 2. Close


Rear Vents*




- 1. Open
- 2. Close

Equipment to Make Cabin More Comfortable Manual Air-Conditioning System


Airflow direction adjustment Driver's Side Vents

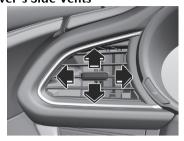

Passenger's Side Vents

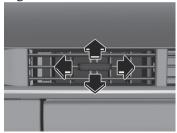

Rear Vents*

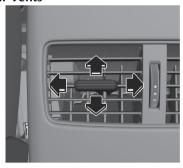


Airflow selection **Instrument panel Vents**




1. With rear vents

Instrument panel and Floor Vents

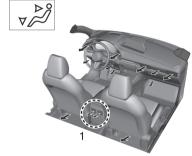


1. With rear vents

Floor Vents

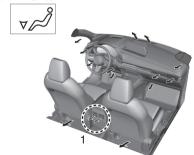

1. With rear vents

Defroster and Floor Vents

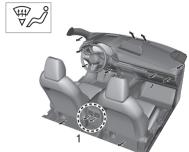


1. With rear vents

Defroster Vents



Manual Air-Conditioning System Overview

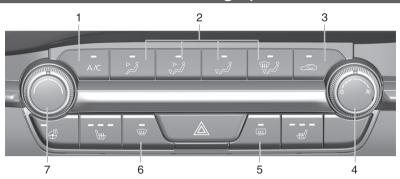

- 1. A/C switch
- 2. Mode selector switch
- 3. Air intake selector switch
- 4. Fan control dial
- 5. Rear window defogger switch6. Windscreen defroster switch7. Temperature control dial

How to Use the Manual Air-Conditioning System

Heating

Start the engine.




- Set the air intake selector to the outside air position (indicator light turns off).
- 4. Set the temperature control dial to the hot position.
- 5. Set the fan control dial to the desired speed.
- 6. If dehumidified heating is desired, turn on the air conditioner.

NOTE

- · If the windscreen fogs up easily, press the ♥% switch.
- If cooler air is desired at face level, press the v
 ⇒ switch and adjust the temperature control dial to maintain maximum comfort.
- The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).

Cooling

1. Start the engine.

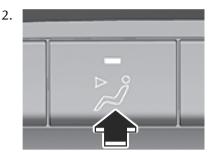

- 3. Set the temperature control dial to the cold position.
- 4. Set the fan control dial to the desired speed.
- 5. Turn on the air conditioner by pressing the A/C switch.
- After cooling begins, adjust the fan control dial and temperature control dial as needed to maintain maximum comfort.

A CAUTION

If the air conditioner is used while driving up long hills or in heavy traffic, monitor the high engine coolant temperature warning light to see if it is displayed (page 8-43).

The air conditioner may cause overheating. If the warning light is displayed, turn the air conditioner off (page 8-21).

NOTE


- When maximum cooling is desired, set the temperature control dial to the extreme cold position and set the air intake selector to the recirculated air position, then turn the fan control dial fully clockwise.
- If warmer air is desired at floor level, press the v switch and adjust the temperature control dial to maintain maximum comfort.

Manual Air-Conditioning System

 The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).

Ventilation

1. Start the engine.

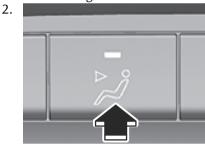

- Set the air intake selector to the outside air position (indicator light turns off).
- 4. Set the temperature control dial to the desired position.
- 5. Set the fan control dial to the desired speed.

Windscreen Defrosting and Defogging

1. Start the engine.



- 3. Set the temperature control dial to the desired position.
- 4. Set the fan control dial to the desired speed.
- 5. If dehumidified heating is desired, turn on the air conditioner.

MARNING

Do not defog the windscreen using the with switch with the temperature control set to the cold position:

Using the \(\frac{\pmathcal{T}}{\pmathcal{T}} \) switch with the temperature control set to the cold position is dangerous as it will cause the outside of the windscreen to fog up. Your vision will be hampered, which could lead to a serious accident. Set the temperature control to the hot or warm position when using the \(\frac{\pmathcal{T}}{\pmathcal{T}} \) switch.

NOTE

- Fogging on the windows clears up more easily while the air conditioner is on, but they will fog up more easily if the air conditioner is turned off.
- Be careful that the windows do not fog up when doing any of the following:
 - · Switching to recirculate mode
 - · Turning off the air conditioner
- For maximum defrosting, turn on the air conditioner, set the temperature control dial to the extreme hot position, and turn the fan control dial fully clockwise.
- If warm air is desired at the floor, press the ♥² switch.
- With the \(\frac{\pmath}}}}}}}}}}} periotion} \endotspicture \end{\pmath{\pm

Dehumidifying

Operate the air conditioner in cool or cold weather to help defog the windscreen and side windows.

1. Start the engine.

- 2. Press the desired mode switch you want to set.
- Set the air intake selector to the outside air position (indicator light turns off).
- 4. Set the temperature control dial to the desired position.
- 5. Set the fan control dial to the desired speed.
- 6. Turn on the air conditioner by pressing the A/C switch.

NOTE

One of the functions of the air conditioner is dehumidifying the air and, to use this function, the temperature does not have to be set to cold. Therefore, set the temperature control dial to the desired position (hot or cold) and turn on the air conditioner when you want to dehumidify the cabin air.

Operating Each Switch

Temperature control dial

How to increase the set temperature




How to decrease the set temperature



Fan control dial

How to increase the airflow amount

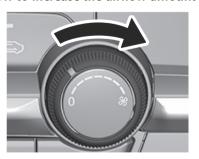

Manual Air-Conditioning System

How to decrease the airflow amount



This dial allows variable fan speeds. The airflow amount can be adjusted to 7 levels.

Mode selector switches



The desired airflow mode can be selected.

A/C switch



Switches the air conditioner on and off.

The indicator light on the switch will illuminate when the fan control dial is in any position except OFF.

NOTE

The air conditioner may not operate when the ambient temperature falls to nearly $0 \, ^{\circ}\text{C} \, (32 \, ^{\circ}\text{F})$ to protect the system.

Air intake selector switch



The mode is switched between recirculate mode and fresh air mode each time the switch is pressed.

▲ WARNING

Do not recirculate the air in the cabin during cold or rainy weather.

Recirculating the air in the cabin during cold and rainy weather is dangerous as it will cause the windows to fog up. Your vision will be hampered, which could lead to a serious accident.

Recirculated mode (indicator light illuminated)

Outside air is shut off. Air within the vehicle is recirculated. Use this position when going through tunnels, driving in congested traffic (high engine exhaust areas), or when quick cooling is desired.

Outside air mode (indicator light turned off)

Outside air is allowed to enter the cabin. Use this position for ventilation or windscreen defrosting.

Windscreen defroster switch



Use to defrost the windscreen and front door windows.



Do not lower the airflow temperature when defrosting the windscreen. Otherwise, the outer side of the windscreen will frost causing reduced visibility which may lead to an accident.

Rear window defogger switch

Use to defog the rear window. Refer to How to Use the Rear Window Defogger Switch on page 5-82.

Seat Warmer

The seat warmer warms the seat.

Warnings and Cautions For Using the Seat Warmer

MARNING

Be careful when using the seat warmer.

The heat from the seat warmer may be too hot for the following people and could cause a low-temperature burn.

- ➤ Infants, small children, elderly people, and physically challenged people
- ➤ People with delicate skin
- ➤ People who are excessively fatigued
- > People who are intoxicated
- People who have taken sleep-inducing medicine such as sleeping pills or cold medicine

Do not use the seat warmer with anything having high moisture-retention ability such as a blanket or cushion on the seat.

The seat may be heated excessively and cause a low-temperature burn.

Do not use the seat warmer even when taking a short nap in the vehicle.

The seat may be heated excessively and cause a low-temperature burn.

Do not place heavy objects with sharp projections on the seat, or insert needles or pins into it.


This could cause the seat to become excessively heated and result in injury from a minor burn.



➤ Do not use organic solvents to clean the seat. It may damage the seat surface and the heater.

How to Use the Seat Warmer

1. Start the engine.

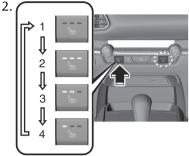

- 1. OFF
- 2. High
- 3. Mid
- 4. Low

The indicator light in the seat warmer switch turns on according to the set temperature.

The set temperature changes each time the seat warmer switch is pressed.

NOTE

If the engine is stopped while the seat warmer is operating in manual mode, the seat warmer does not turn on automatically the next time the engine is started. To turn the seat warmer on, press the switch again.

Convenient Ways to Use the Seat Warmer

The seat temperature for front seat can be automatically controlled (auto mode) at 4 levels (High, Mid, Low, OFF) according to the conditions in the cabin.

The seat warmer can be operated in conjunction with auto mode for the air-conditioning system.

- 1. Turn on the "Occupant Comfort" Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).
- 2. Press the AUTO switch for the air-conditioning system.

NOTE

- If the front passenger's seat belt is unfastened, the front passenger's seat warmer turns off.
- If the seat warmer switch is pressed during auto mode, the seat warmer on the side where the switch was pressed switches to manual mode. To return to auto mode, press the AUTO switch.
- If the engine is turned off while the seat warmer is operating in auto mode, the seat warmer operates in auto mode again the next time the engine is turned on.

Heated Steering Wheel*

The grips on the left and right of the steering wheel can be warmed up.

Warnings and cautions For Using the Heated Steering Wheel

M WARNING


The following types of persons should be careful not to touch the steering wheel. Otherwise, it could cause a low-temperature burn.

- ➤ Infants, small children, elderly people, and physically challenged people
- ➤ People with delicate skin
- ➤ People who are excessively fatigued
- ➤ People who are intoxicated
- ➤ People who have taken sleep-inducing medicine such as sleeping pills or cold medicine

How to Use Heated Steering Wheel

Using the Heated Steering Wheel

Start the engine.

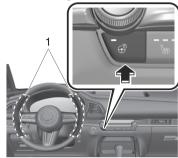

1. Heating area The indicator light in the heated steering wheel switch turns on.

NOTE

The heated steering wheel operates for a certain period of time and then stops automatically.

Turning Off the Heated Steering Wheel

Press the heated steering wheel switch. The heated steering wheel stops and the indicator light in the switch turns off.

Convenient Ways to Use Heated Steering Wheel

The steering warmer can be automatically (auto mode) turned on/off depending on the conditions in the cabin.

The steering warmer can be operated in conjunction with auto mode for the air-conditioning system.

- 1. Turn on the "Occupant Comfort" Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).
- 2. Press the AUTO switch for the air-conditioning system.

NOTE

- If the heated steering wheel switch is pressed during auto mode or the auto operation of the air-conditioning system is cancelled, the heated steering wheel switches from auto mode to manual mode. To return to auto operation, press the AUTO switch for the air-conditioning system.
- If the vehicle power is switched OFF while the heated steering wheel is operating in auto mode, the heated steering wheel operates in auto mode again the next time the vehicle power is switched ON.

7 Other Equipment

Mazda Connect 7-4
Mazda Connect7-4
Warnings and Cautions for Using
the Mazda Connect
Mazda Connect Overview
7-7
How to Use the Mazda
Connect7-8
Appendix 7-13
Emergency Call System 7-19
Emergency Call System7-19
Warnings and Cautions for Using
the Emergency Call System
7-23
How to Use the Emergency Call
System7-25
,
Mazda ERA-GLONASS 7-31
Mazda ERA-GLONASS 7-31
Warnings and Cautions for Using
Mazda ERA-GLONASS 7-33
How to Use Mazda
ERA-GLONASS 7-35
Storage Compartments7-43
Warning and Cautions for Using
the Storage Compartments
/-43
Cup Holders7-44
Warnings and Cautions for Using
the Cup Holders7-44
How to Use the Cup
i i

Bottle Holder7-4
Warnings and Cautions for Using
the Bottle Holder7-4
How to Use the Bottle
Holder7-4
110100111111111111111111111111111111111
-
Glove Compartment7-4
How to Use the Glove
Compartment 7-4
Coin Box7-4
How to Use the Coin Box*
7-4
Centre Console 7-4
Warnings and Cautions for Using
the Centre Console7-4
How to Use the Centre
Console
Console
Overhead Console7-4
How to Use the Overhead
Console 7-4
Rear Coat Hooks7-5
Warning and Cautions for Using
the Rear Coat Hooks7-5
How to Use the Rear Coat
Hooks7-5
Luggage Compartment 7-5
Luggage Compartment7-5
How to Use the Luggage
Compartment

Sunvisor7-52
How to Use the Sunvisor 7-52
Vanity Mirror7-53 How to Use the Vanity
Mirrors7-53
Interior Lights7-54
Illuminated Entry System7-54 How to Use the Illuminated Entry
System7-54 How to Use the Overhead
Lights7-55 How to Use the Map Lights
Compartment Lights 7-57
Accessory Sockets 7-58
Accessory Sockets
Using the Accessory Socket
How to Use the Accessory Socket7-59
Wireless Charger (Qi) 7-60
Wireless Charger (Qi)*7-60 Warnings and Cautions When Using the Wireless Charger
(Qi)7-60 How to Use the Wireless Charger
(Qi)7-62 Convenient Ways to Use the
Wireless Charger (Qi)7-63
Assist Grip7-64
Warnings and Cautions When Using the Assist Grips7-64
Using the Assist Offps/-64

	How to Use the Assist Grips	7-64
	gage compartment cover Luggage Compartment Cover Warnings and Cautions for U the Luggage compartment cover How to Use the Luggage Compartment Cover	.7-65 sing 7-65
	ving Towing (Europe/Russia/Israe South Africa) Warnings and Cautions for U the Towing How to Use the Towing	el/ 7-67 sing 7-67
	essories Warnings and Cautions For U the Accessories	Ising
	or Mat Warnings and Cautions For U the Floor Mat	sing
Con	function Diagnosis nnector Malfunction Diagnosis Connector	
	re Tyre and Tool Storage Jack [*] Spare Tyre [*] Screwdriver and Wrench [*]	7-79 7-79

MEMO

Mazda Connect

Mazda Connect is a system that allows users to use various functions such as displaying vehicle information, playing music, connecting to mobile devices and changing vehicle settings.

Mazda Connect home screen



This manual only indicates a part of the information for Mazda Connect. For detailed user information, refer to the Mazda Connect Owner's Manual.

Mazda Connect functions

Mazda Connect has the following 8 functions.

Information

Information stored in the vehicle can be checked.

Entertainment

You can listen to radio and music.

Notifications

Notifications from the vehicle can be checked. If a serious problem occurs, the background of the notification display turns amber or red.

Communication

By connecting your mobile device, such as a Smartphone, to Mazda Connect via Bluetooth®, you can use the hands-free call and short message functions.

Navigation/Compass

If a navigation system SD card is inserted, you can use the navigation system. If the navigation system SD card is not inserted, a compass indicating the direction the vehicle is moving is displayed.

Settings

You can change the settings for the Mazda Connect and the vehicle functions.

Apple CarPlay

By connecting an iPhone compatible with Apple CarPlay, you can use Apple CarPlay.

Android Auto™

By connecting an Android™ Smartphone compatible with Android Auto™, you can use Android Auto™.

NOTE

- The explanation of functions described in this manual may differ from the actual operation, and the shapes of screens and buttons and the letters and characters displayed may also differ from the actual appearance. Additionally, depending on future software updates, the content is subject to change without notice.
- · Using a cellular phone or CB radio in or near the vehicle could cause noise.

Warnings and Cautions for Using the Mazda Connect



Always adjust Mazda Connect while the vehicle is stopped:

Do not adjust Mazda Connect with the Commander switch while driving the vehicle. Adjusting Mazda Connect with the Commander switch while driving the vehicle is dangerous as it could distract your attention from the vehicle operation which could lead to a serious accident.

Even if the audio remote control switches are equipped on the steering wheel, learn to use the switches without looking down at them so that you can keep your maximum attention on the road while driving the vehicle.

Do not allow the connection plug cord to get tangled with the shift lever (manual transmission)/selector lever (automatic transmission):

Allowing the plug cord to become tangled with the shift lever (manual transmission)/selector lever (automatic transmission) is dangerous as it could interfere with driving, resulting in an accident.


Do not adjust a mobile device or a similar product while driving the vehicle:

Adjusting a mobile device or a similar product while driving the vehicle is dangerous as it could distract your attention from the vehicle operation which could lead to a serious accident. Always adjust a mobile device or a similar product while the vehicle is stopped.



For the purposes of safe driving, adjust the audio volume to a level that allows you to hear sounds outside of the vehicle including car horns and particularly emergency vehicle sirens.

Mazda Connect Overview

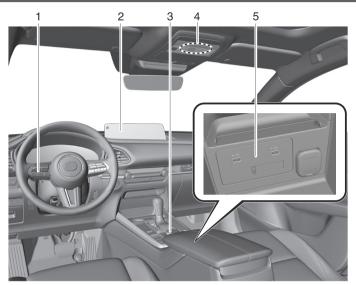

- 1. Audio remote control switch
- 2. Centre display
- 3. Commander switch
- 4. Microphone
 5. USB port/SD card slot*1*
- SD card slot for the navigation system. Insert an SD card (Mazda genuine) for the navigation system.

How to Use the Mazda Connect

Mazda Connect operation method

You can operate Mazda Connect when the vehicle power is switched to ACC or ON. There are 4 ways to operate Mazda Connect.

Commander switch operation



Buttons		Explanation
		Adjusting the volume
		You can adjust the volume by turning the volume knob. Press and release the volume knob immediately to mute the audio. Press and release the volume knob immediately again to cancel the mute.
		Switching radio stations/music
		You can switch between radio stations and audio tracks by sliding the volume knob left or right.
	Volume knob	Selecting a radio station automatically
		 Slide and hold the volume knob to start automatic radio station selection. Automatic radio station selection stops when a broadcast is received.
		Turning the power off/on
		You can turn off Mazda Connect by pressing and holding the volume knob. You can turn on Mazda Connect by pressing the volume
		knob again.
B	Entertainment button	Press the entertainment button to display the most recently played audio source screen.

Buttons		Explanation
		Operating the cursor
	Commander knob	You can move the cursor on the screen by turning or sliding the commander knob.
		Selection
		Press the commander knob to select the function the cursor is hovering over.
4	Map button	Press the map button to display the navigation/compass screen.
4	Back button	Press the back button to display the previous screen.
	Home button	Displaying the home screen
		Press and release the home button immediately to display the Home screen.
		Switching between screens
		 Press and hold the Home button to switch between the Apple CarPlay/Android Auto™ screen and the Mazda Connect screen.
		Displaying the favourites screen
☆	Favourites button	Press and release the favourites button immediately to display the favourites screen.
		Programming favourites
		Press and hold the favourites button to save the currently displayed contact, broadcast station, navigation point, and others as favourites.

Audio remote control switch operation



Buttons		Explanation
A 	Volume adjustment but- ton	You can adjust the volume by pressing the volume adjustment button.
\$	Mute button	 Mute Press the mute button to mute the audio. Press the mute button again to cancel the mute. Pausing the audio
		Pressing the mute button while playing an audio source that can be paused will pause the audio source.
KK	Seek button	Press the seek button to switch between radio stations and
M		audio tracks.
	SOURCE SOURCE button	Switching audio sources
SOURCE		The audio source switches each time you press the SOURCE button.
		Turning off the audio
		You can turn off the audio during playback by pressing and holding the SOURCE button.
3411	Talk/pick-up button*1	You can answer an incoming call by pressing the button while on another call.
	Hang-up button ^{*1}	Hanging up a call
		You can hang up a call by pressing the hang-up button during the call.
		Putting a call on hold
		Press the hang-up button during a call to put the call on hold.

^{*1} You can also use the voice recognition for the talk, pick-up/hang-up button.

Operating the voice recognition function



Buttons		Explanation
3411	Talk/pick-up button	Activating the voice recognition Press the talk/pick-up button to activate voice recognition. In addition, the top screen of the voice recognition is displayed.
		Ending the voice recognition
		 Press and hold the talk/pick-up button to end the voice recognition.
		Skipping the voice guidance
		 Press the talk/pick-up button while the voice guidance is playing to skip the voice guidance.
	Hang-up button	Press the hang-up button to end the speech recognition.

Examples of effective voice commands in various categories are displayed on the voice recognition top screen.

Anything that is not a valid voice command is not recognised by the system.

NOTE

- Some voice commands may not be available depending on the vehicle specifications and the mobile device connection status.
- · While Apple CarPlay or Android Auto™ is connected, press and hold the talk/ pick-up button to activate Siri or Android Auto™ voice recognition without activating the Mazda Connect voice recognition.
- Voice commands can be spoken and operated even while voice guidance is playing (Barge-In function). However, voice commands may not be recognised correctly if the guidance volume is set to a high volume.
 Refer to the Mazda Connect Owner's Manual for details on the Barge-In setting method.
- To prevent mistaken voice recognition, be aware of the following points.

- Do not speak more slowly than necessary. Speak at a normal speed.
- · Speaking in a slightly louder voice will improve voice recognition, but an excessively loud voice is unnecessary. Try to speak in a slightly louder voice than when talking to other passengers in the vehicle.
- · Speak clearly, without pausing between words or numbers.
- It is not necessary to orient oneself in the direction of the microphone or approach the microphone. Speak the voice commands while maintaining your driving posture.
- · Voice commands may not be recognised correctly due to external noise or air turbulence in the car.
- When calling a person in the mobile device's phone book, the recognition rate increases the longer the name is. Errors may occur with names that are short such as (Mama), (Home), or (wife).

Centre display operation*

Only Apple CarPlay or Android Auto™ can be operated by touching the centre display.

Turning Mazda Connect off/on

Turning off

Press and hold the volume knob to turn off the Mazda Connect power.

Turning on

There are 2 ways to turn Mazda Connect ON.

- · Press the volume knob.
- · Press the commander knob.

Appendix

Gracenote® Database

When connecting a USB audio device or Bluetooth® audio device to this unit and playing audio, the unit searches the database stored in the vehicle for the album art. If there is a match in the vehicle's database compilation to the music being played, the album art is displayed. The database information stored in this device uses database information in the Gracenote® music recognitions service.

Apple CarPlay



> YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY ("THE APPLICATION") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND THAT THE APPLICATION AND INFORMATION ON THE APPLICATION IS PROVIDED "AS IS" AND "AS AVAILABLE", WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND MAZDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATION AND INFORMATION ON THE APPLICATION, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS.

AS EXAMPLES, AND WITHOUT LIMITATION, MAZDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATION, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, ITS AFFILIATES, OR THIRD PARTY PROVIDERS; MAZDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA, WHICH MAY BE LOST AT ANY TIME; MAZDA DOES NOT GUARANTEE THAT THE APPLICATION OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC.

Mazda Connect

IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL MAZDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATION OR YOUR USE OF OR INABILITY TO USE THE APPLICATION OR INFORMATION ON THE APPLICATION.

- ➤ When using Apple CarPlay, please avoid distraction and use Apple CarPlay responsibly.
 - Stay fully aware of driving conditions and always obey applicable laws.

NOTE

- Apple CarPlay is provided by Apple and its use is subject to your agreement to the Apple CarPlay terms of use, which are included as part of the Apple iOS terms of use.
- · When using Apple CarPlay, location, speed, and other vehicle data is transferred to your iPhone. For further details, refer to Apple's Privacy Policy.

Android Auto™



> YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF ANDROID AUTO™

("THE APPLICATION") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND THAT THE APPLICATION AND INFORMATION ON THE APPLICATION IS PROVIDED "AS IS" AND "AS AVAILABLE," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND MAZDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATION AND INFORMATION ON THE APPLICATION, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS.

AS EXAMPLES, AND WITHOUT LIMITATION, MAZDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATION, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY GOOGLE, ITS AFFILIATES, OR THIRD PARTY PROVIDERS; MAZDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA, WHICH MAY BE LOST AT ANY TIME; MAZDA DOES NOT GUARANTEE THAT THE APPLICATION OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC.

IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL MAZDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATION OR YOUR USE OF OR INABILITY TO USE THE APPLICATION OR INFORMATION ON THE APPLICATION.

➤ When using Android Auto[™], please avoid distraction and use Android Auto[™] responsibly.

Stay fully aware of driving conditions and always obey applicable laws.

NOTE

- · Android Auto™ is provided by Google and its use is subject to your agreement to the Android Auto™ terms of use.
- · When using Android Auto™, location, speed, and other vehicle data is transferred to your smart phone. For further details, refer to Google Privacy Policy.

Trademark

- · iPhone, iPod touch, iPod nano, Siri and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- · Apple CarPlay is a trademark of Apple Inc.
- · Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards. Please note that the use of this product with iPhone, iPod may affect wireless performance.
- · iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- "Made for iPhone" and "Made for iPod" mean that an accessory has been designed to connect specifically to iPhone or iPod, and has been certified by the

Mazda Connect

developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone or iPod may affect wireless performance.

The following models differ depending on the vehicle model and date of manufacture.

Made for

iPhone 12 Pro Max

iPhone 12 Pro

iPhone 12

iPhone 12 mini

iPhone SE (2nd generation)

iPhone 11 Pro Max

iPhone 11 Pro

iPhone 11

iPhone XS Max

iPhone XS

iPhone XR

iPhone X

iPhone 8 Plus

iPhone 8

iPhone 7 Plus

iPhone 7

iPhone SE

iPhone 6s Plus

iPhone 6s

iPhone 6 Plus

iPhone 6

iPhone 5s

iPod touch (7th Generation)

iPod touch (6th Generation)



- · Google, Android, Android Auto and other related marks are trademarks of Google LLC.
- · AudioPilot is a registered trademark of Bose Corporation.
- · Centerpoint is a registered trademark of Bose Corporation.
- This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

- This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and (ii) decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide MPEG-4/AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.



· SDHC Logo is a trademark of SD-3C, LLC.



• Gracenote, the Gracenote logo and logotype, "Powered by Gracenote" and Gracenote MusicID are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.



Regarding the license for the audio amplifier (except vehicles with Bose audio)

License for CMSIS-RTOS RTX Implementation

Copyright (c) 1999-2009 KEIL, 2009-2015 ARM Germany GmbH, 2013-2016 ARM Ltd All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

 Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer

Mazda Connect

- Redistributions in binary form must reproduce the above copyright notice, this list
 of conditions and the following disclaimer in the documentation and/or other
 materials provided with the distribution.
- Neither the name of ARM nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL COPYRIGHT HOLDERS AND CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Emergency Call System


Emergency Call System

When an emergency situation such as an accident or sudden illness occurs, the Emergency call system dials the call centre automatically or the user can make a call to the call centre manually to enable a voice call.


The system operates automatically when the vehicle receives an impact of a certain level or more in a collision, or it can be operated manually using the Emergency call switch if an emergency situation arises such as sudden illness.

The call centre operator confirms the status via the voice call, confirms the vehicle's position information using the GNSS*1, and calls the police or emergency services.

*1 GNSS, short for "Global Navigation Satellite System", is a system that obtains the vehicle's current location by receiving radio waves emitted from the GNSS satellites to the ground.

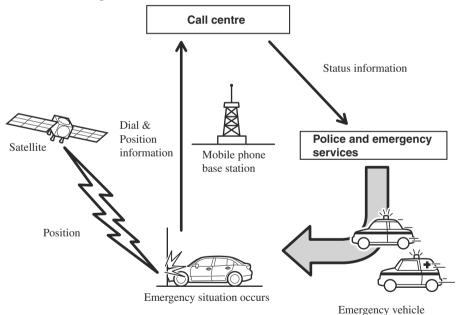

Component Parts of Mazda eCall

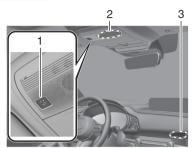

- 1. Emergency call switch
- 2. Microphone, Speaker
- 3. Aerial

Handling of Data in Accordance with Laws and Regulations

DESCRIPTION OF THE Emergency call system IN-VEHICLE SYSTEM

- The 112-based Emergency call system service is a public service of general interest and is accessible free of charge.
- The 112-based Emergency call system in-vehicle system is activated by default. It is activated automatically by means of in-vehicle sensors in the event of a severe accident.
- The 112-based Emergency call system in-vehicle system can also be triggered manually.
- In the event of a critical system failure that would disable the 112-based Emergency call system in-vehicle system, the following warning will be given to the occupants of the vehicle:
- If a problem occurs with the Emergency call system, the indicator light on the Emergency call switch turns on in red and a beep sound is activated 3 times. Thereafter, if the indicator light remains turned on in red, the system will not operate normally in an emergency. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

INFORMATION ON DATA PROCESSING

- · Any processing of personal data through the 112-based Emergency call system in-vehicle system shall comply with the personal data protection rules provided for in Directives 95/46/EC(1) and 2002/58/EC(2) of the European Parliament and of the Council, and in particular, shall be based on the necessity to protect the vital interests of the individuals in accordance with Article 7(d) of Directive 95/46/EC(3).
- Processing of such data is strictly limited to the purpose of handling the Emergency call system to the single European emergency number 112.

Types of data and its recipients

- The 112-based Emergency call system in-vehicle system may collect and process only the following data:
- · Vehicle Identification Number
- · Vehicle type (passenger vehicle or light commercial vehicle)
- Vehicle propulsion storage type (petrol/diesel/CNG/LPG/electric/hydrogen/hybrid electric)
- · Vehicle last three locations and direction of travel
- · Log file of the automatic activation of the system and its timestamp
- Recipients of data processed by the 112-based Emergency call system in-vehicle system are the relevant public safety answering points designated by the respective public authorities of the country on which territory they are located, to first receive and handle emergency calls (Emergency call system) to the single European emergency number 112.

Arrangements for data processing

- The 112-based Emergency call system in-vehicle system is designed in such a way as to ensure that the data contained in the system memory is not available outside the system before an Emergency call system is triggered.
- The 112-based Emergency call system in-vehicle system is designed in such a way as to ensure that it is not traceable and not subject to any constant tracking in its normal operation status.
- The 112-based Emergency call system in-vehicle system is designed in such a way as to ensure that data in the system internal memory is automatically and continuously removed.
- The vehicle location data is constantly overwritten in the internal memory of the system so as always to keep maximum of the last three up-to-date locations of the vehicle necessary for the normal functioning of the system.
- The log of activity data in the 112-based Emergency call system in-vehicle system is kept for no longer than necessary for attaining the purpose of handling the Emergency call system and in any case not beyond 13 hours from the moment an Emergency call system was initiated.

Modalities for exercising data subject's rights

- The data subject (the vehicle's owner) has a right of access to data and as appropriate to request the rectification, erasure or blocking of data, concerning him or her, the processing of which does not comply with the provisions of Directive 95/46/EC. Any third parties to whom the data have been disclosed have to be notified of such rectification, erasure or blocking carried out in compliance with this Directive, unless it proves impossible or involves a disproportionate effort.
- The data subject has a right to complain to the competent data protection authority if he or she considers that his or her rights have been infringed as a result of the processing of his or her personal data.

Emergency Call System

Contact service responsible for handling access requests:

Please contact your local Mazda Organisation for data protection requests. Contact details related thereto are listed in the Privacy Statement which you find on your country-specific webpage.
Please visit "https://www.mazda.eu" to find your country-specific webpage.

Warnings and Cautions for Using the Emergency Call System

♠ WARNING

When using the emergency call system, keep medical devices such as an implanted heart pacemaker or defibrillator about 22 cm (8.7 in) or more away from the vehicle's aerial. Otherwise, the operation of the medical device may be affected by radio waves.

A CAUTION

- ➤ Do not disassemble the Emergency call system. Otherwise, it could become damaged and may not function in an emergency.
- The Emergency call system has a special built-in battery so that it can operate even if the power supply from the vehicle is cut such as in an accident.
 - Heed the following cautions. If the Emergency call system is not used correctly it may not operate.

If the built-in battery power is low due to natural discharge and the system determines that there is a problem, the Emergency call system cannot be used. If the system determines that there is a problem, the indicator light (red) in the Emergency call switch turns on to notify the driver. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer). Refer to Indicator light/Beep sound in How to Use the Emergency Call System on page 7-25.

NOTE

- The Emergency call system can be used when the vehicle power is switched ON.
- There are two ways the Emergency call system makes calls; automatically or manually.
- The Emergency call system may not make a connection under the following conditions or depending on the use environment. If the Emergency call system does not connect, make a call from another telephone such as the nearest available public telephone.
 - The vehicle is outside of a mobile phone network area
 - The vehicle is in a weak radio wave transmission environment (such as inside tunnels, underground parking areas, shadow of buildings, and mountain areas)
 - The vehicle does not receive an impact of a certain level or more even if an accident has occurred.
 - An extremely serious collision occurs resulting in damage to the Emergency call system.

Emergency Call System

- The position information cannot be obtained when signals cannot be received from the GNSS satellites, however, voice calls are possible.
- When a voice call is made by the Emergency call system, the audio system is muted so that it does not interfere with the call.
- It may take some time for the call centre to respond after the Emergency call system first starts operating.
- If you are unable to respond to an operator's questions after the voice call begins, the operator may proceed with emergency procedures at their own discretion.
- Even if it is difficult for you to hear the operator's voice, your voice may be heard by the call centre. Continue explaining your circumstances.
- If the Emergency call system operates while you are making a call with your mobile phone using Bluetooth® Hands-Free, the call may be interrupted.
- It may not be possible to receive a call using the Bluetooth® Hands-Free normally while the Emergency call system is operating.
- A voice call with an operator may not be possible if the speaker or microphone is broken. If the speaker or microphone is broken, always have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
- The Emergency call system may not operate normally outside of the following temperature range: If the Emergency call system does not operate normally, make a call from another telephone such as the nearest available public telephone.

- Operation temperature range: $-40 \,^{\circ}\text{C} (-40 \,^{\circ}\text{F}) \text{ to } 85 \,^{\circ}\text{C} (185 \,^{\circ}\text{F})$
- There may be a difference between the position information sent to the call centre and the actual position of the vehicle where the call was made. Indicate landmarks around the position of the vehicle where the call is being made to the operator during the voice call.

How to Use the Emergency Call System

Flow of Emergency call system

User status	Emergency	Call centre/ Police/ Emergency services	
Osci status	Automatic call Manual call		
Emergency situation arises such as collision or sudden	Automatic call made due to vehicle	Emergency call switch	
illness	receiving impact of certain level or more	Manual call made by user	
4	Status confirmation	Status information Police and emergency services	
Rescue			Emergency vehicle

Emergency Call System

Automatic emergency calls

If the vehicle receives an impact of a certain level or more in a collision, vehicle information is automatically sent to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.



If an automatic call is made, the built-in battery power may be depleted and emergency calls may not be possible in the event that an emergency occurs again. After an automatic emergency call has been made, have the built-in battery replaced by an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

- · Automatic emergency calls cannot be cancelled by the user.
- The call centre will end an emergency call. The user cannot end the emergency call.
- · If the vehicle receives an impact of a certain level or more in a collision, an automatic call is made even if the air bags do not deploy.
- · If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. Redialing cannot be cancelled.
- 1. If the vehicle receives an impact of a certain level or more in a collision, the Emergency call system begins operating automatically.
- 2. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.



1. Green

- 3. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the transmission of the vehicle information begins.
- 4. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.
- 5. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals) and the beep sounds simultaneously.

In this case, make a manual connection using the Emergency call switch because an automatic connection is not possible.



- 1. Red (Turns on)
- 2. Green (Flashes)

Manual emergency calls

With the vehicle power switched ON, long-press the Emergency call switch and after releasing your finger from the switch, the vehicle information is automatically transmitted to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.

NOTE


- Only make calls manually for conditions requiring urgent treatment such as illness or serious injury.
- When making emergency calls manually, stop the vehicle in a safe location before making the call.
- The call centre will end an emergency call. The user cannot end the emergency call.
- · If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre.
- 1. Make sure that the vehicle power is switched ON.
- 2. Long-press the Emergency call switch on the overhead console and then release your finger from the switch.



1. Emergency call switch


Emergency Call System

3. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

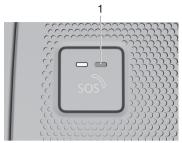

- 1. Green
- 4. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the transmission of the vehicle information begins.
- 5. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.
- 6. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals), and the beep sounds simultaneously.

Make a manual emergency call again.

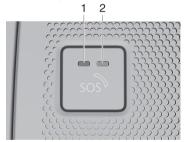

- 1. Red (Turns on)
- 2. Green (Flashes)

NOTE

If a call to the call centre does not connect even though the indicator light shows a call is possible, make a call to the police or other authority by means other than the Emergency call system.

Indicator light/Beep sound

The indicator light turns on/flashes and beep sounds are activated to notify the driver of the system operation status or if there is a problem with the system.

Status	Indicator light			Beep sound	On/flashing conditions	
Status	Green	Red	Flash interval	status	On/ hashing conditions	
Diagnosis	Turns on	Turns on	_	_	When the vehicle power is switched ON, it turns on and then turns off after a few seconds. NOTE A manual emergency call is not possible during diagnosis.	
Normal	Turns off	Turns off	_	_	The system is operating normally.	
Malfunction	Turns off	Turns on	_	3 beeps (Slow intermit- tent sound)	A system malfunction is detected. The remaining power of the built-in battery is low. CAUTION If the indicator light (red) remains on constantly, the system will not operate normally. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.	
Call being made with call centre	Flashes	Turns off	Slow (0.5 second intervals)	The beep does not sound, but the ringback tone can be heard.	An emergency call is being made by the Emergency call system.	
Vehicle infor- mation is be- ing transmitted	Flashes	Turns off	Somewhat quick (0.3 second intervals)	_	Vehicle information is being transmitted to the call centre.	
Start of voice call	Turns on	Turns off	_	1 beep	During a voice call with the	
During voice call	Turns on	Turns off	_	_	call centre.	
Connection failure	Flashes	Turns on	Quick (0.15 second intervals)	3 beeps (Fast intermit- tent sound)	When an emergency call fails to connect.	

Indicator light Beep sound On/flashing conditions Status status Green Red Flash interval (Vehicles When waiting for the call which support centre to call back. Connected Very slow (Flashes for about 1 hour af-Service) (1 second in-Flashes Turns on ter 30 seconds have passed Waiting for tervals) since the call with the call callback from centre was ended.) call centre


Mazda ERA-GLONASS

When an emergency situation such as an accident or sudden illness occurs, the Mazda ERA-GLONASS dials the call centre automatically or the user can make a call to the call centre manually to enable a voice call.


The system operates automatically when the vehicle receives an impact of a certain level or more in a collision, or it can be operated manually using the Emergency call switch if an emergency situation arises such as sudden illness.

The call centre operator confirms the status via the voice call, confirms the vehicle's position information using the GNSS*1, and calls the police or emergency services.

*1 GNSS, short for "Global Navigation Satellite System", is a system that obtains the vehicle's current location by receiving radio waves emitted from the GNSS satellites to the ground.

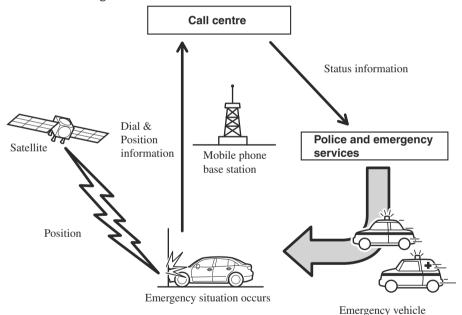

Component Parts of Mazda ERA-GLONASS

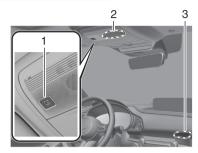

- Emergency call switch
 Microphone, Speaker
 Aerial

Warnings and Cautions for Using Mazda ERA-GLONASS

⚠ WARNING

When using the Mazda ERA-GLONASS, keep medical devices such as an implanted heart pacemaker or defibrillator about 22 cm (8.7 in) or more away from the vehicle's aerial.

Otherwise, the operation of the medical device may be affected by radio waves.



- Do not disassemble the Mazda ERA-GLONASS. Otherwise, it could become damaged and may not function in an emergency.
- The Mazda ERA-GLONASS has a special built-in battery so that it can operate even if the power supply from the vehicle is cut such as in an accident.
 - Heed the following cautions. If the Mazda ERA-GLONASS is not used correctly it may not operate.
 - ➤ The built-in battery is not a rechargeable type battery. Do not attempt to recharge the battery.
 - The built-in battery life is 3 years. Have the built-in battery replaced at an expert repairer (we recommend an Authorised Mazda Repairer) periodically.

➤ If the built-in battery power is low due to natural discharge and the system determines that there is a problem, the Mazda ERA-GLONASS cannot be used. If the system determines that there is a problem, the indicator light (red) in the Emergency call switch turns on to notify the driver. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer). Refer to Indicator light/Beep sound in How to Use Mazda ERA-GLONASS on page 7-35.

NOTE

- The Mazda ERA-GLONASS can be used when the ignition is switched ON.
- There are two ways the Mazda ERA-GLONASS makes calls; automatically or manually.
- The Mazda ERA-GLONASS may not make a connection under the following conditions or depending on the use environment. If the Mazda ERA-GLONASS does not connect, make a call from another telephone such as the nearest available public telephone.
 - The vehicle is outside of a mobile phone network area
 - The vehicle is in a weak radio wave transmission environment (such as inside tunnels, underground parking areas, shadow of buildings, and mountain areas)
 - The vehicle does not receive an impact of a certain level or more even if an accident has occurred.
 - An extremely serious collision occurs resulting in damage to the Mazda ERA-GLONASS.

Mazda ERA-GLONASS

- The position information cannot be obtained when signals cannot be received from the GNSS satellites, however, voice calls are possible.
- When a voice call is made by the Mazda ERA-GLONASS, the audio system is muted so that it does not interfere with the call.
- It may take some time for the call centre to respond after the Mazda ERA-GLONASS first starts operating.
- If you are unable to respond to an operator's questions after the voice call begins, the operator may proceed with emergency procedures at their own discretion.
- Even if it is difficult for you to hear the operator's voice, your voice may be heard by the call centre. Continue explaining your circumstances.
- If the Mazda ERA-GLONASS operates while you are making a call with your mobile phone using Bluetooth® Hands-Free, the call may be interrupted.
- It may not be possible to receive a call using the Bluetooth® Hands-Free normally while the Mazda ERA-GLONASS is operating.
- A voice call with an operator may not be possible if the speaker or microphone is broken. If the speaker or microphone is broken, always have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
- The Mazda ERA-GLONASS may not operate normally outside of the following temperature range: If the Mazda ERA-GLONASS does not operate normally, make a call from another telephone such as the nearest available public telephone. Operation temperature range: 40 °C (—40 °F) to 85 °C (185 °F)

 There may be a difference between the position information sent to the call centre and the actual position of the vehicle where the call was made. Indicate landmarks around the position of the vehicle where the call is being made to the operator during the voice call.

How to Use Mazda ERA-GLONASS

Flow of Mazda ERA-GLONASS

User status	Mazda EF	Call centre/ Police/ Emergency services	
User status	Automatic call Manual call		
Emergency situation arises such as collision or sudden illness	Automatic call made due to vehicle receiving impact of certain level or more	Emergency call system switch Manual call made by user	
4	Status confirmation	Status information Police and emergency services	
Rescue			Emergency vehicle

Mazda ERA-GLONASS

Automatic emergency calls

If the vehicle receives an impact of a certain level or more in a collision, vehicle information is automatically sent to the call centre.


When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.



If an automatic call is made, the built-in battery power may be depleted and emergency calls may not be possible in the event that an emergency occurs again. After an automatic emergency call has been made, have the built-in battery replaced by an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

- · Automatic emergency calls cannot be cancelled by the user.
- The call centre will end an emergency call. The user cannot end the emergency call
- If the vehicle receives an impact of a certain level or more in a collision, an automatic call is made even if the air bags do not deploy.
- · If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. Redialing cannot be cancelled.
- 1. If the vehicle receives an impact of a certain level or more in a collision, the Mazda ERA-GLONASS begins operating automatically.
- 2. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

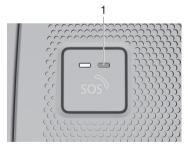

1. Green

- 3. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the beep sounds simultaneously, and the transmission of the vehicle information begins.
- 4. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.

5. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals) and the beep sounds simultaneously.

In this case, make a manual connection using the Emergency call switch because an automatic connection is not possible.



- 1. Red (Turns on)
- 2. Green (Flashes)

Manual emergency calls

With the ignition switched ON, long-press the Emergency call switch and after releasing your finger from the switch, the vehicle information is automatically transmitted to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.

NOTE


- Only make calls manually for conditions requiring urgent treatment such as illness or serious injury.
- · When making emergency calls manually, stop the vehicle in a safe location before making the call.
- The call centre will end an emergency call. The user cannot end the emergency call.
- · If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. To cancel the redialing, refer to Manual emergency call cancellation.
- 1. Make sure that the ignition is switched ON.

Mazda ERA-GLONASS

2. Long-press the Emergency call switch on the overhead console and then release your finger from the switch.




- 1. Emergency call switch
- 3. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

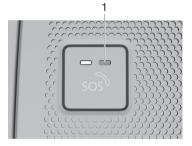

- 1. Green
- 4. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the beep sounds simultaneously, and the transmission of the vehicle information begins.
- 5. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.

If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals), and the beep sounds simultaneously.

Make a manual emergency call again.

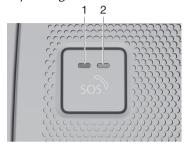

- 1. Red (Turns on)
- 2. Green (Flashes)

NOTE

If a call to the call centre does not connect even though the indicator light shows a call is possible, make a call to the police or other authority by means other than the Mazda ERA-GLONASS.

Manual emergency call cancellation

A manual emergency call can be cancelled even after the Emergency call switch has been pressed by pressing the switch again, as long as the call with the call centre has not begun. If the call cannot be cancelled and the call with the call centre has begun, tell the operator that the call is mistaken.

Indicator light/Beep sound

The indicator light turns on/flashes and beep sounds are activated to notify the driver of the system operation status or if there is a problem with the system.

Status	Indicator light		Beep sound	On/flashing conditions	
Status	Green	Red	Flash interval	status	On mashing conditions
Diagnosis	Turns on	Turns on	_	_	When the ignition is switched ON, it turns on and then turns off after a few seconds. NOTE A manual emergency call is not possible during diagnosis.
Normal	Turns off	Turns off	_	_	The system is operating normally.

Ctatus	Indicator light			Beep sound	On Alexander and distance
Status	Green	Red	flash interval status	status	On/flashing conditions
Malfunction	Turns off	Turns on	_	3 beeps (Slow intermit-	 A system malfunction is detected. The remaining power of the built-in battery is low. CAUTION If the indicator light (red) re-
				tent sound)	mains on constantly, the system will not operate normally. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
Call being made with call centre	Flashes	Turns off	Slow (0.5 second intervals)	The beep does not sound, but the ringback tone can be heard.	An emergency call is being made by the Mazda ERA-GLONASS.
Vehicle infor- mation is be- ing transmitted	Flashes	Turns off	Somewhat quick (0.3 second intervals)	Continuous in- termittent sound	Vehicle information is being transmitted to the call centre.
Start of voice call	Turns on	Turns off	_	1 beep	During a voice call with the call centre.
During voice call	Turns on	Turns off	_	_	
Connection failure	Flashes	Turns on	Quick (0.15 second intervals)	3 beeps (Fast intermit- tent sound)	When an emergency call fails to connect.

Test Mode


The test mode function makes sure that the Mazda ERA-GLONASS can operate normally.


Have your vehicle tested at an expert repairer (we recommend an Authorised Mazda Repairer) when performing the test mode.

Method to start test mode

Switch the ignition ON while the parking brake is applied, and wait 2 minutes with the vehicle stopped.

After that, perform the following procedure.

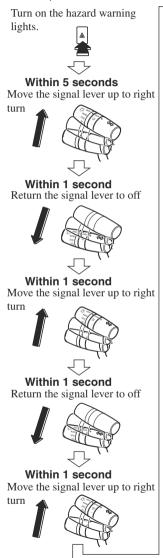

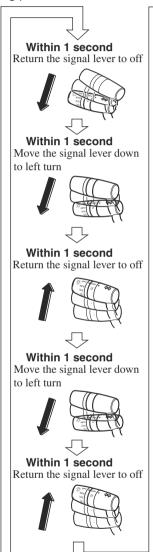



Within 5 seconds

Turn off the hazard warning lights.



Both red and green Emergency call switch indicator lights turn on.



Within 5 seconds

Press the Emergency call switch for one second or longer and release it.



Mazda ERA-GLONASS

After the procedure is completed, the test mode is performed in the following order automatically.

- Procedure is completed
 Switch to test mode
 Call is placed to call centre
- 4. Vehicle information is sent
- 5. Start of voice call
- 6. Voice guidance from the call centre is played

NOTE

Communication with the call centre may fail if the reception is poor. Perform the test mode in a location with good reception.

The test mode finishes automatically.

Warning and Cautions for Using the Storage Compartments

MARNING

When loading cargo, make sure that it is completely secured.

If the cargo is not completely secured, it may move or collapse while driving or during sudden braking, resulting in injury or an accident.

A CAUTION

- ➤ Always close the covers for storage such as the glove compartment when the vehicle is being driven. Open storage boxes and their contents may cause injury during sudden braking or if the vehicle is involved in a collision.
- ➤ Be careful when storing items in uncovered storage spaces. If an item is ejected from the storage space during sudden braking, manoeuvring, or acceleration it could lead to an accident.
- ➤ Do not leave lighters or eyeglasses in the storage boxes while parked under the sun. A lighter could explode or the plastic material in eyeglasses could deform and crack from high temperature.

Warnings and Cautions for Using the Cup Holders

♠ WARNING

Never use a cup holder to hold hot liquids while the vehicle is moving. Using a cup holder to hold hot liquids while the vehicle is moving is dangerous. If the contents spill, you could be scalded.

Do not put anything other than cups or drink cans in cup holders.

Putting objects other than cups or drink cans in a cup holder is dangerous.

During sudden braking or manoeuvring, occupants could be hit and injured, or objects could be thrown around the vehicle, causing interference with the driver and the possibility of an accident. Only use a cup holder for cups or drink cans.

How to Use the Cup Holders

Cup holders are installed to the following positions.

Front



Rear



Warnings and Cautions for Using the Bottle Holder



Do not use the bottle holders for containers without caps. The contents may spill when opening/closing the door or while driving the vehicle.

How to Use the Bottle Holder

Plastic bottles can be placed in the bottle holders.



How to Use the Glove Compartment



How to Use the Coin Box*



Warnings and Cautions for Using the Centre Console



Do not put your hands or fingers around the moving part of the console lid when operating it. Otherwise, your hands or fingers could be injured.

How to Use the Centre Console

Sliding

The console lid can be slid rearward in 2 steps.



Opening/closing

The console lid can be opened at the 1st or 2nd step of the slide positions.



How to Use the Overhead Console



Warning and Cautions for Using the Rear Coat Hooks

▲ WARNING

Never hang heavy or sharp objects on the assist grips and coat hooks. Hanging heavy or sharp-ended objects such as a coat hanger from the assist grips or coat hooks is dangerous as they can fly off and hit an occupant in the cabin if a curtain air bag was to deploy, which could result in serious injury or death.

How to Use the Rear Coat Hooks

Use the rear coat hooks when hanging a coat or jacket.



Luggage Compartment

Cargo Securing Loops

Use rope or a net to secure cargo.

Cargo Sub-Compartment

The spaces can be used to store small items.

How to Use the Luggage Compartment

Cargo Securing Loops

The tension load of a luggage hook is 20 kg (44 lb). Do not tighten a rope to the anchors excessively.




Cargo Sub-Compartment*

Open the luggage board.




How to Use the Sunvisor

When blocking light from the front

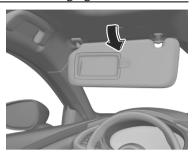


When blocking light from the side

Unhook the sunvisor and swing it to the side.

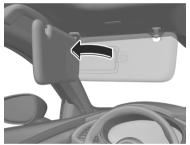

How to Use the Vanity Mirrors

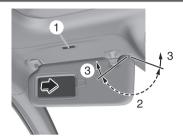

- 1. Vanity mirror light*
- 2. Lighting range
- 3. Off range

For vehicles with a light, it turns on when the cover is opened.

The light turns on only when the sunvisor angle is within the lighting range.

NOTE

- If a vanity mirror light is left on with the vehicle power switched OFF, the light is turned off automatically to prevent the lead-acid battery from being discharged.
- The vanity mirror light can be turned on again by doing any of the following operations:
 - $\cdot \ \mathsf{Opening/closing} \ \mathsf{any} \ \mathsf{door}.$
 - · Unlocking any door.
 - · Switching the vehicle power to ACC or ON.
 - · Switching an overhead light/front map light on.

Illuminated Entry System

The interior lights turn on/off in conjunction with the opening/closing of the doors and the position of the vehicle power (ON/OFF).

How to Use the Illuminated Entry System

The overhead lights turn on when any of the following operations is done with the overhead light switch in the DOOR-linked position.

- The driver's door is unlocked with the vehicle power switched OFF.
- The vehicle power is switched OFF with all doors closed.

The overhead lights turns off when any of the following operations is done.

- · The driver's door is locked.
- · The vehicle power is switched ON.

When the vehicle power is switched OFF and the interior lights remain on, they turn off after a certain period of time has passed.

NOTE

- The amount of time until the illuminated entry system turns off can be changed.
 - Refer to Mazda Connect Owner's Manual or consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The illuminated entry system does not operate when the overhead lights are turned on by operating the overhead light ON/OFF switch.

How to Use the Overhead Lights

Front



The overhead lights turn on.

Press the switch again to turn off the overhead lights.

When the door interlock is ON



- The indicator light in the OFF switch turns off.
- The lights turn on when any of the doors is opened.
- The light turns on/off depending on the illumination entry system.

When the door interlock is OFF

The indicator light in the switch turns on.


Rear

The rear overhead lights also turns on/off in conjunction with the operation of the front overhead lights.

Type A



Type B

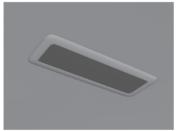

How to Use the Map Lights


Front



The map light turns on.

Press the switch again to turn off the map lights.

Rear

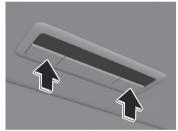

The map light turns on. Press the switch again to turn off the map lights.

NOTE

- Pressing the switch does not turn the lights off in any of the following cases.
 - · When the light is turned on by operating an overhead light witch.
 - · When the illuminated entry system is operating.
- · (Rear)

Once the rear map lights have been turned off, they will turn on/off in conjunction with the operation of an overhead light switch.

How to Use the Luggage Compartment Lights

Open the liftgate.



The luggage compartment lights turn on.

When the liftgate is closed, the luggage compartment lights turn off.

Accessory Sockets

The accessory socket is used as a socket for accessories when the vehicle power is switched to ACC or ON. Only use accessories that have a maximum power consumption of 120 W (DC12V-10A) or below.

Warnings and Cautions When Using the Accessory Socket

A CAUTION

- Always close the cover when it is not in use. If foreign matter or liquid penetrates the socket, it may cause a problem.
- ➤ Insert the accessory plug into the socket securely. If the plug is not inserted securely, it may heat excessively and blow the fuse.
- ➤ Do not use accessories that have a power consumption of over 120 W (DC12V-10A). Otherwise, it could cause a malfunction.
- Noise may occur on the audio playback depending on the device connected to the accessory socket.
- ➤ Do not insert the cigarette lighter into the accessory socket.
- Depending on the device connected to the accessory socket, the vehicle's electrical system might be affected, which could cause the warning light to turn on. Disconnect the connected device and make sure that the problem is resolved. If the problem is resolved, switch the vehicle power OFF after the device is disconnected from the socket. If the problem is not resolved, consult an expert repairer (we recommend an Authorised Mazda Repairer).

How to Use the Accessory Socket

Open the lid and insert the plug to be used.



Wireless Charger (Qi)*

You can charge mobile devices such as Smartphones which comply with the Qi Wireless Charging standard. Only use mobile devices that have a maximum power consumption of 5 W, or 15 W or below.

Trademarks

"Qi" and the Qi symbol are trademarks or registered trademarks of the Wireless Power Consortium (WPC).



Warnings and Cautions When Using the Wireless Charger (Qi)

MARNING

Radio waves from the Wireless Charger (Qi) may affect the operation of medical devices such as implanted-type cardiac pacemakers or defibrillators.

- ➤ Before using the Wireless Charger (Qi) near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the Wireless Charger (Qi) will affect the device.
- ➤ The Wireless Charger (Qi) can be disabled to prevent it from affecting medical devices. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.

Heed the following cautions. Otherwise, the Wireless Charger (Qi) may malfunction or be damaged, which could cause a fire, burns due to heat generation, or an accident such as electrical shock.

➤ Do not install, remove, disassemble, or change the wiring of the Wireless Charger (Qi). If the Wireless Charger (Qi) needs to be installed or removed, consult an expert repairer (we recommend an Authorised Mazda Repairer).

- ➤ Do not use the Wireless Charger (Qi) when it is malfunctioning. In addition, if smoke, abnormal noise, or abnormal smell is emitted from the Wireless Charger (Qi), stop the vehicle in a safe place, turn off the Wireless Charger (Qi), and consult an expert repairer (we recommend an Authorised Mazda Repairer).
- ➤ When using the Wireless Charger (Qi) to store items on, turn off the Wireless Charger (Qi).
- ➤ Do not place any metal object between the charging area and the mobile device. Also, do not apply items such as a metallic sticker to the Wireless Charger (Qi).
- ➤ When charging, do not place any item other than the mobile device to be charged on the Wireless Charger (Qi). In addition, do not place any metal object, IC card, coin, or magnetic item near the charging area.
- Remove dust or dirt from the charging area before use.
- Do not apply strong force or impact to the Wireless Charger (Qi) or get it wet.
- ➤ Use only mobile devices which support the Wireless Charger (Qi).

A CAUTION

- ➤ While a mobile device is placed on the charging area, keep the vehicle key away from the Wireless Charger (Qi). The vehicle key may not be detected due to radio wave interference by the Wireless Charger (Qi).
- ➤ Charging may not operate normally under the following conditions:
 - The mobile device is fully charged.

- > There is foreign matter between the mobile device and the charging area.
- ➤ The temperature of the mobile device is high.
- ➤ The mobile device is placed with the charging side facing upward.
- The mobile device is placed in a position extremely deviating from the centre of the charging area.
- ➤ Your vehicle is in an area where strong radio waves or electrical noise occur such as near a television tower, power plant, or airport.
- ➤ The Near Field Communication (NFC) function setting of the mobile device is on (depends on the model of the mobile device).
- ➤ Keep the following items away from the charging area. Otherwise the data stored on the mobile device could be erased or the device could malfunction.
 - ➤ Magnetic items such as magnets, magnetic cards, and magnetic recording media.
 - ➤ High precision devices such as wristwatches.
- Before using the Wireless Charger (Qi), make sure to back up the data stored on the mobile device. The data on the mobile device could be deleted.
- Do not wipe the Wireless Charger (Qi) using oil, alcohol, or thinner, or spray hairspray or insecticide onto it. Otherwise, it could cause damage or cracking.
- ➤ Do not leave mobile devices in the cabin. The temperature inside the cabin may become very hot, causing the devices to malfunction.

How to Use the Wireless Charger (Qi)

- Start the engine.
 The power for the Wireless Charger
 (Qi) turns on and the LED indicator
 turns on.
- 2. Place a device compliant with the Qi Wireless Charging standard (portable device with a maximum power consumption of 5 W or 15 W or below) in the centre of the charging area on the tray.



- 1. Charging area
- 2. LED indicator

The LED indicator turns on in amber or green when charging starts. Charging starts when all the doors and liftgate are closed.

For details on the LED indicator, refer to the following LED indicator table.

Charging status display

The charging status of the Wireless Charger (Qi) can be checked with the LED indicator or the icon displayed on the centre display.

Illumina- tion/flash pattern	Icon indi- cation	Status	
Does not turn on		Indicates that charging is turned off.	

Illumina- tion/flash pattern	Icon indi- cation	Status
Turns on in white		Indicates that charging is possible.
Turns on in amber		Indicates normal charging.
Turns on in green		Indicates fast charging*1.
Flashes in white	•	Indicates that the charging conditions are not met.
Flashes in red		Indicates that charging is not possible because a high temperature is detected.
riasnes in red	0	Indicates that charging is not possible because foreign matter is detected.
Turns on in red	8	Indicates that there is a problem with Wireless Charger (Qi) and it needs to be repaired. Consult an expert repairer (we recommend an Authorised Mazda Repairer).

*1 Some mobile devices can switch between normal charging and fast charging.

NOTE

 Charging efficiency may be reduced or charging may not be possible depending on the use environment and conditions.

- Depending on the mobile device case or accessories used, the mobile device may not charge, or the charging efficiency may be reduced resulting in a longer charging time. If charging does not start even when a mobile device is placed on the charging area, remove the case or accessory.
- Depending on the vehicle condition, charge amount may be temporarily restricted and charging may be cancelled, however, this does not indicate a problem.
- If the mobile device temperature rises during charging, charging may stop due to the protection function of the device. If that happens, wait until the mobile device cools down sufficiently and then recharge it.
- When using the Wireless Charger (Qi), applications using the Near Field Communication (NFC) function may launch, however, this does not indicate a problem with the Wireless Charger (Qi).
- (Vehicles with i-stop)
 While i-stop is operating, charge amount may be temporarily restricted and charging may be temporarily cancelled, however, this does not indicate a problem.
- Charging may be temporarily cancelled depending on the vehicle conditions, such as when the engine is stopped.

Convenient Ways to Use the Wireless Charger (Qi)

The Wireless Charger (Qi) can be turned on/off and the connection mode can be switched.
Refer to the Settings section in the Mazda Connect Owner's Manual.

Warnings and Cautions When Using the Assist Grips

! WARNING

Never hang heavy or sharp objects on the assist grips and coat hooks. Hanging heavy or sharp-ended objects such as a coat hanger from the assist grips or coat hooks is dangerous as they can fly off and hit an occupant in the cabin if a curtain air bag was to deploy, which could result in serious injury or death.

Do not use the assist grips when getting in and out of the vehicle or getting out of a seat.

An assist grip could break under a heavy load resulting in injury.

How to Use the Assist Grips

Use the assist grips to support your body while seated in the vehicle and while the vehicle is moving.



Luggage Compartment Cover

Cargo can be covered in the luggage compartment by storing it under the luggage board.

Warnings and Cautions for Using the Luggage compartment cover

⚠ WARNING

Do not place anything on top of the cover.

Placing luggage or other cargo on top of the luggage compartment cover is dangerous. During sudden braking or a collision, the cargo could become a projectile that could hit and injure someone.

Make sure luggage and cargo are secured before driving.

Not securing cargo while driving is dangerous as it could move or be crushed during sudden braking or a collision and cause injury.



Make sure the luggage compartment cover is firmly secured. If it is not firmly secured, it could unexpectedly disengage resulting in injury.

How to Use the Luggage Compartment Cover

The luggage compartment can be accessed by opening the liftgate when the straps are attached to the sides of the liftgate.

Removing the luggage compartment cover

This cover can be removed for more room.

1. Remove the straps from the hooks.



2. Press the luggage compartment cover upward from near the pins and remove the luggage compartment cover from the pins.



3. Lift the front end of the luggage compartment cover and remove it.



Towing (Europe/Russia/ Israel/South Africa)

Your Mazda was designed and built primarily to carry passengers and cargo.

If you tow a trailer, follow these instructions because driver and passenger safety depends on proper equipment and safe driving habits. Towing a trailer will affect handling, braking, durability, performance, and economy.

Never overload vehicle or trailer. Consult an expert repairer (we recommend an Authorised Mazda Repairer) if you need further details.

NOTE

- When towing a trailer, do not use the following safety systems (If a Mazda genuine trailer hitch is used, these systems are automatically turned off when the trailer's electrical connector is connected):
 - · Blind Spot Monitoring (BSM)
 - · Rear Cross Traffic Alert (RCTA)
 - Smart Brake Support (SBS) reverse drive detection
 - · Parking Sensor System (Rear)

Turn off the aforementioned safety systems when towing a trailer without a genuine Mazda trailer hitch.

Warnings and Cautions for Using the Towing

↑ WARNING

Always keep tow loads within specified limits as indicated in the Trailer Towing-Load Table.

Attempting to tow loads greater than those specified is dangerous as it may cause serious handling and performance problems that could result in personal injury or vehicle damage, or both.

Always keep the trailer nose weight within the specified limits in the Trailer Towing-Load Table.

Loading the trailer with more weight in the rear than in the front is dangerous. This could cause loss of vehicle control and an accident.



- ➤ Do not tow a trailer during the first 1,000 km (600 miles) of your new Mazda. If you do, you may damage the engine, transmission, differential, wheel bearings, and other power train components.
- ➤ (SKYACTIV-G 1.5 (European model))

Trailers and caravans cannot be towed by vehicles with the i-stop function.

Towing

➤ Be aware of the towing load weight differences when towing at high altitudes. For altitudes exceeding 1,000 meter (3,280 ft 10 in), always reduce the towing load by 10 % for every 1,000 meter (3,280 ft 10 in) increase in altitude from the load indicated under the gross combination weight heading in the maximum trailer towing-load table. If the determined maximum total towing load weight is exceeded, the engine and other power train parts may be damaged.

NOTE

- The total trailer weight and nose weight can be determined by weighing the trailer on platform scales at a highway weighing station or a trucking company.
- Appropriate total trailer weight and nose weight may prevent the danger of trailer sway from crosswinds, rough roads, or other causes.

How to Use the Towing


Trailer Hitch

When towing a trailer, use an appropriate trailer hitch. We recommend using a genuine Mazda trailer hitch. Use the original holes drilled by the vehicle manufacturer for securing the trailer hitch. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for more information.

Do not install a trailer hitch that is not easy to remove or reposition if there is the possibility that a part of the trailer hitch partially obscures the lighting system and/or rear number plate.

If a trailer hitch that is easy to remove or reposition is installed, make sure to remove or reposition it when it is not in use.

Trailer hitch installation area

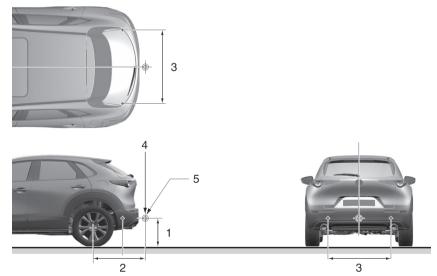


- 1. 350 420 mm (13.8 16.5 in)
- 2. 912.0 mm (35.91 in)
- 3. 1022.2 mm (40.244 in)
- 4. MAX. 80 kg (176.3 lb)
- 5. Hitch coupling point

Weight Limits


The total trailer weight, gross combination weight and trailer nose weight must be within the prescribed limits in the Trailer Towing-Load Table.

TOTAL TRAILER WEIGHT:

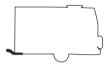


Sum of weights of the trailer and its load.

GROSS COMBINATION WEIGHT:

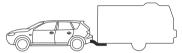

Sum of total trailer weight and towing vehicle weight; including trailer hitch, vehicle passengers, and vehicle load.

TRAILER NOSE WEIGHT:

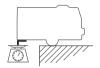

The weight exerted on the trailer tongue. It is varied by changing the weight distribution when loading the trailer.

Maximum trailer towing-load table

Europe/Gradient up to 12%

MODEL		TOTAL TRAILER WEIGHT		GROSS COMBINA- TION WEIGHT	
Engine	Transmission	Drive sys- tem	Trailer without brake	Trailer with brake	Trailer with brake
SKYACTIV-G 2.0	Manual transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,227 kg (7,114.2 lb)
SKYACTIV-G 2.0	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,257 kg (7,180.3 lb)
SKYACTIV-G 2.0	Manual transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,295 kg (7,264.1 lb)

	MODEL		TOTAL TRAILER WEIGHT		GROSS COMBINA- TION WEIGHT
Engine	Transmission	Drive sys- tem	Trailer without brake	Trailer with brake	Trailer with brake
SKYACTIV-G 2.0	Automatic transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,321 kg (7,321.4 lb)
SKYACTIV-X 2.0	Manual transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,265 kg (7,198.0 lb)
SKYACTIV-X 2.0	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,265 kg (7,198.0 lb)
SKYACTIV-X 2.0	Manual transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,342 kg (7,367.7 lb)
SKYACTIV-X 2.0	Automatic transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,370 kg (7,429.5 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

Germany and Austria/Gradient up to 8%

	MODEL		TOTAL TRAILER WEIGHT		GROSS COMBINA- TION WEIGHT
Engine	Transmission	Drive sys- tem	Trailer without brake	Trailer with brake	Trailer with brake
SKYACTIV-G 2.0	Manual transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,227 kg (7,114.2 lb)
SKYACTIV-G 2.0	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,257 kg (7,180.3 lb)
SKYACTIV-G 2.0	Manual transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,295 kg (7,264.1 lb)
SKYACTIV-G 2.0	Automatic transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,321 kg (7,321.4 lb)
SKYACTIV-X 2.0	Manual transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,265 kg (7,198.0 lb)
SKYACTIV-X 2.0	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,265 kg (7,198.0 lb)
SKYACTIV-X 2.0	Manual transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,342 kg (7,367.7 lb)
SKYACTIV-X 2.0	Automatic transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,370 kg (7,429.5 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

Russia/Gradient up to 12%

	MODEL		TOTAL TRAILER WEIGHT		GROSS COMBINA- TION WEIGHT
Engine	Transmission	Drive sys- tem	Trailer without brake	Trailer with brake	Trailer with brake
SKYACTIV-G 2.0	Manual transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,192 kg (7,037.0 lb)
SKYACTIV-G 2.0	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,240 kg (7,142.9 lb)
SKYACTIV-G 2.0	Automatic transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,316 kg (7,310.4 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb) Israel/Gradient up to 12%

	MODEL		TOTAL TRAILER WEIGHT		GROSS COMBINA- TION WEIGHT
Engine	Transmis- sion	Drive sys- tem	Trailer without brake	Trailer with brake	Trailer with brake
SKYACTIV-G 2.0	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,236 kg (7,134.0 lb)
SKYACTIV-G 2.5	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,239 kg (7,140.6 lb)
SKYACTIV-X 2.0	Automatic transmission	FWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,309 kg (7,295.0 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

South Africa/Gradient up to 12%

	MODEL		TOTAL TRAILER WEIGHT		GROSS COMBI- NATION WEIGHT	
Engine	Transmission	Drive system	i-stop system	Trailer without brake	Trailer with brake	Trailer with brake
SKYACTIV-G 2.0	Manual transmission	FWD	×	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,112 kg (6,860.7 lb)
SKYACTIV-G 2.0	Automatic transmission	FWD	×	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,137 kg (6,915.8 lb)
SKYACTIV-G 2.0	Automatic transmission	AWD	×	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,200 kg (7,054.7 lb)

×: Available

—: Not available

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

Tyres

When towing a trailer, make sure that the tyre pressures of the rear tyres are at 20 kPa (0.2 bar, 2.9 psi) higher than the recommended maximum tyre pressures indicated on the tyre pressure chart on the driver's door frame. Trailer tyre size, load rating, and inflation pressures should conform to tyre manufacturer specifications.



Never use the temporary spare tyre when towing:

Using the temporary spare tyre on your vehicle when towing a trailer is dangerous as it could result in tyre failure, loss of control, and injury to vehicle occupants.

Safety Chains

Safety chains must be used as a precautionary measure should the trailer become unintentionally unhitched. They should cross under the trailer tongue and attach to the hitch. Leave enough slack to allow full turns. Consult literature published by your trailer or hitch manufacturer for more details.



Make sure the safety chain is securely attached to both the trailer and the vehicle prior to departure.

Towing a trailer without using a safety chain securely attached to both the trailer and the vehicle is dangerous. If damage occurs to the coupling unit or hitch ball, the trailer could wander into another lane and cause a collision.

Trailer Lights



Do not connect a trailer lighting system directly to the lighting system of your Mazda. This may damage your vehicle's electrical system and lighting systems. To connect the lighting system, consult an expert repairer (we recommend an Authorised Mazda Repairer)

Trailer Brakes

Check the Maximum trailer towing-load table in Weight Limits , and if your trailer weight exceeds the value in the TOTAL TRAILER WEIGHT (Trailer without brake), trailer brakes are required.

If your trailer has brakes, make sure they meet regulations.



Do not connect a hydraulic trailer-brake system to your vehicle's brake system. Connecting a hydraulic trailer-brake system directly to the vehicle brake system is dangerous and will result in inadequate braking and possible injury.

Before driving

- · Verify that your Mazda maintains a near-normal attitude when a loaded or unloaded trailer is connected. Do not drive if it has an abnormal front-up or front-down position. Inspect for incorrect nose weight, worn suspension parts, and trailer overloading. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).
- · Make sure the trailer cargo is secure to prevent it from shifting.
- · Make sure the mirrors meet all government regulations. Inspect them.
- Before starting out, inspect the operation of all vehicle and trailer lights and all vehicle-to-trailer connections. Stop and re-inspect all lights and connections after driving a short distance.

Driving

- · Your Mazda will handle differently with a trailer in tow, so practice turning, backing, and stopping in a traffic-free area.
- · Take time to get accustomed to the extra weight and length.
- Do not exceed 100 km/h (62 mph) with a trailer in tow. If the local legal maximum speed with a trailer in tow is less than 100 km/h (62 mph), do not exceed the legal speed.



If the vehicle exceeds 100 km/h (62 mph) with a trailer in tow, the vehicle could be damaged.

- · When ascending a hill, shift into a lower gear to reduce the possibility of overloading or overheating the engine, or both.
- When descending a hill, shift into a lower gear and use engine compression as a braking effect. Pay constant attention to speed and use the brakes only as needed. Holding the brake pedal down for a prolonged period may cause the brakes to overheat and lose power.

Parking

Avoid parking on an incline with a trailer. If this must be done, follow these instructions.

Parking on an Incline

- 1. Set the parking brake and the brakes.
- 2. Have someone block the wheels of the vehicle and trailer while you apply the brakes

- 3. After the wheels are blocked, release the parking brake and the brakes slowly, allowing the blocks to bear the load.
- 4. Set the parking brake firmly.
- 5. If the vehicle has an automatic transmission, put the selector lever in P position. If it has a manual transmission, place the gear shift in 1 or R position.

Starting on an Incline

- 1. Start the engine (page 5-15).
- 2. Release the parking brake and slowly pull away a short distance from the wheel blocks.
- 3. Stop on the nearest level ground, set the parking brake, and pick up the wheel blocks.

Warnings and Cautions For Using the Accessories



When installing accessories using electrical or electronic components, consult an expert repairer (we recommend an Authorised Mazda Repairer).

There is a possibility of accidents due to brake or air bag mis-operation, vehicle damage or malfunctions.

Warnings and Cautions For Using the Floor Mat

We recommend the use of Genuine Mazda floor mats.

♠ WARNING

Make sure the floor mats are secured with the grommets to prevent them from bunching up under the foot pedals (Driver's side).

Using a floor mat that is not secured is dangerous as it will interfere with the accelerator and brake pedal operation (driver's side), which could result in an accident.

Only use a floor mat which conforms to the shape of the floor on the driver's side and make sure it is oriented correctly.

Secure the floor mat using the grommets.



There are various ways to secure floor mats depending on the type used, therefore secure the mat according to the type.

After installing the floor mat, make sure that it does not slide from side to side or back and forth, and that there is sufficient clearance with the accelerator and brake pedals on the driver's side.

After removing the floor mat for cleaning or some other reason, always securely reinstall it while paying attention to the precautions just mentioned.

Do not install two floor mats, one on top of the other, on the driver's side. Installing two floor mats, one on top of the other, on the driver's side is dangerous as the retention pins can only keep one floor mat from sliding forward.

Loose floor mat(s) will interfere with the foot pedals and could result in an accident.

If using an all-weather mat for winter use always remove the original floor mat.

Malfunction Diagnosis Connector



Do not connect any devices other than the specially designed malfunction diagnosis devices for servicing. If any device other than the malfunction diagnosis device is connected, it may affect the vehicle's electrical devices or lead to damage such as lead-acid battery depletion.



Jack*

To remove the jack

1. Remove the luggage board.



2. (Type A)



(Type B)



To secure the jack

Perform the removal procedure in reverse.

Maintenance

- · Always keep the jack clean.
- · Make sure the moving parts are kept free from dirt or rust.
- Make sure the screw thread is adequately lubricated.

Spare Tyre

The temporary spare tyre is lighter and smaller than a conventional tyre, and is designed only for emergency use and should be used only for VERY short periods. Temporary spare tyres should NEVER be used for long drives or extended periods.

MARNING

Do not install the temporary spare tyre on the front wheels (driving wheels).

Driving with the temporary spare tyre on one of the front driving wheels is dangerous. Handling will be affected. You could lose control of the vehicle, especially on ice or snow bound roads, and have an accident. Move a regular tyre to the front wheel and install the temporary spare tyre to the rear.

A CAUTION

- When using the temporary spare tyre, driving stability may decrease compared to when using only the conventional tyre. Drive carefully.
- ➤ To avoid damage to the temporary spare tyre or to the vehicle, observe the following precautions:
 - ➤ Do not exceed 80 km/h (50 mph).
 - Avoid driving over obstacles. Also, do not drive through an automatic car wash. This tyre's diameter is smaller than a conventional tyre, so the ground clearance is reduced.
 - ➤ Do not use a tyre chain on this tyre because it will not fit properly.

Spare Tyre and Tool Storage

- Do not use your temporary spare tyre on any other vehicle, it has been designed only for your Mazda.
- ➤ Use only one temporary spare tyre on your vehicle at the same time.

To remove the spare tyre

1. Remove the luggage board.



2. (Vehicles with sub-woofer)
Uncouple the sub-woofer
connector.



NOTE

Extra strength may be required to uncouple the connector. Be sure to squeeze the tab firmly.

3. (Vehicles with sub-woofer)
Turn the spare tyre hold-down bolt anticlockwise and remove the sub-woofer and the spare tyre.



(Vehicles without sub-woofer)
Turn the spare tyre hold-down bolt anticlockwise and remove the spare tyre.



NOTE

If the spare tyre hold-down bolt cannot be loosened, hold the edge of the tyre and turn it anticlockwise until the spare tyre hold-down bolt rotates.

To secure the spare tyre

Store the spare tyre in the reverse order of removal. After storing, verify that the spare tyre is stored securely.

Screwdriver and Wrench*



- 1. Wrench
- 2. Screwdriver

MEMO

8

What to Do in Case of Emergency

In Case of Emergency 8-4
Dealing With an Accident8-4
Make a Mazda Emergency
Call* 8-4
Call 6-4
When Towing is Required8-5
Having the Vehicle Towed 8-5
Using the Towing Hooks8-6
K 5 N . 0
Key Does Not Operate8-9
Cancelling the Key Temporary
Suspension Function 8-9
Unlocking Using the Auxiliary
Key8-9
Starting the Engine with a Dead
Key Battery8-10
ney buttery
5 1 5 N. G
Engine Does Not Start8-12
Taking Action with Depleted
Lead-acid Battery8-12
Starting a Flooded Engine 8-16
g g
Engine Cannot be Stopped 8-17
•
Forcibly Stopping the
Engine8-17
Problem With the Brake System (Foot
Brake)8-18
Applying the Emergency
Brake 8-18

AUTOHOLD Cannot be
Cancelled 8-19
Forcibly Cancelling the
AUTOHOLD8-19
Selector Lever Cannot Be
Operated8-20
Cancelling shift-lock system
(Automatic transmission)8-20
Overheating 8-21
Taking Action with
Overheating 8-21
Tyre is Punctured or Bursts8-23
Using the Emergency Flat Tyre
Repair Kit*8-23
Changing a Flat Tyre (With Spare
Tyre)* 8-29
Tyre) 6-29
1.6
Liftgate Cannot Open 8-35
Open the liftgate from the
luggage compartment 8-35
The Power Windows Cannot Be
Operated 8-36
Initializing the Power
Window8-36
The Sunroof Cannot Be
Operated 8-37
Initializing the Sunroof* 8-37

Windscreen Wipers Operate Speed	e at High 8-38
Have the Vehicle Inspect	ed
Washer Fluid Does Not Spra	
Inspecting Washer Fluid Level	
Active Driving Display Does Operate Active Driving Display Do Operate	8-40 bes Not
Warning / Indicator Light Tur On	8-418-41 ght8-41 g8-41 g8-428-43 nperature8-43 varning8-448-45 arning8-45 arning8-46 nber)* 8-47 varning

Automatic Transmission Warning
Light*
AWD Warning Light* 8-48
120 km/h Warning Light* 8-49
Tyre Pressure Monitoring System
(TPMS) Warning Light
(Flashing)*8-49 TCS/DSC Indicator Light (Turns
on)8-50
Air Bag/Seat Belt Pretensioner
System Warning Light 8-50
KEY Warning Light (Red)8-51
Security Indicator Light 8-51
High Beam Control System (HBC)
Warning Light (Amber)* 8-52
Adaptive LED Headlights (ALH)
Warning Light (Amber)*8-52
i-ACTIVSENSE Warning Light*
8-53 Exterior Lights Warning
Light8-53
Low Fuel Warning Light8-54
Engine Oil Level Warning
Light 8-54
Seat Belt Warning Light (Front
Seat)8-55
Seat Belt Warning Light (Rear
Seat) (Red)8-55
Low Washer Fluid Amount
Warning Light* 8-56
Door-ajar Warning Light/Liftgate-
open Warning Light/Bonnet-
open Warning Light8-56
KEY Indicator Light (Green)
(Flashing)8-57
Wrench Indicator Light 8-57
<u> </u>
Warning Sound is Activated8-59
Lights-On Reminder8-59
0

Power Switch Not Switched OFF
Reminder Warning Sound8-59
Key Removed from Vehicle
Warning Sound8-60
Key Left-in-Vehicle Warning
Sound8-60
Key Left-In-Luggage
Compartment Warning Sound
(Vehicles With Advanced Keyless
Function) 8-61
Door Lock Inoperable Warning
Sound8-61
Power Liftgate Warning Sound*
8-62

Electronic Steering Lock Warnir	ıg
Sound8-	-62
Brake System Warning	
Sound8-	-63
Electric Parking Brake (EPB)	
Warning Sound8-	-63
Low Lead-Acid Battery Charge	
Warning Sound8-	-64
What to do when the vehicle is stuck	

Dealing With an Accident

In case of an accident, react calmly and perform as follows.

- 1. Prevention of secondary accident Move the vehicle to a safe place (such as a shoulder or a vacant lot) where it does not obstruct traffic, and stop the engine.
- 2. Aiding injured person
 If there is any injured person,
 provide any possible first aid until
 an ambulance or a doctor arrives.
 If someone has injured his or her
 head, do not move the person
 unnecessarily. However, move the
 person to a safe place if there is the
 possibility of a secondary accident.
- 3. Call the police
 Provide information such as the location, conditions, and level of injury, and take directions.
- 4. Check the name and address of the other person.
- 5. Call an expert repairer (we recommend an Authorised Mazda Repairer) and insurance agency.

Make a Mazda Emergency Call^{*}


Connected service is available through the emergency call operator. Refer to How to Use the Emergency Call System on page 7-25.

Having the Vehicle Towed

We recommend that towing be done only by an expert repairer (we recommend an Authorised Mazda Repairer) or a commercial tow-truck service.

Proper lifting and towing are necessary to prevent damage to the vehicle. Particularly when towing an AWD vehicle, where all the wheels are connected to the drive train, proper transporting of the vehicle is absolutely essential to avoid damaging the drive system. Government and local laws must be followed.

A towed FWD vehicle should have its drive wheels (front wheels) off the ground. If excessive damage or other conditions prevent this, use wheel dollies.

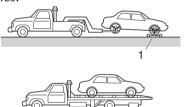

1. Wheel dollies When towing a FWD vehicle with the rear wheels on the ground, release the parking brake.

MARNING

Always tow an AWD vehicle with all four wheels off the ground.

Towing an AWD vehicle with either the front or rear wheels on the ground is dangerous as the drive train could be damaged, or the vehicle could trail away from the tow truck and cause an accident. If the drive train has been damaged, transport the vehicle on a flatbed truck.



A CAUTION

➤ Do not tow the vehicle pointed backward with driving wheels on the ground. This may cause internal damage to the transmission.




Do not tow with sling-type equipment. This could damage your vehicle. Use wheel-lift or flatbed equipment.



When Towing is Required

If the parking brake cannot be released when towing the vehicle, transport the vehicle with all front and rear wheels raised off the ground as shown in the figure. If the vehicle is towed without raising the wheels off the ground, the brake system could be damaged.

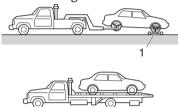

Wheel dollies

If towing service is not available in an emergency, the vehicle may be towed with all four wheels on the ground using the towing hook at the front of the vehicle.

Refer to Using the Towing Hooks on page 8-6.

Only tow the vehicle on paved surfaces for short distances at low speeds.

A CAUTION

Follow these instructions when towing the vehicle with all wheels on the ground.

- 1. Shift to neutral (Manual transmission), or the N position (Automatic transmission).
- 2. Switch the vehicle power to ACC or ON.
- 3. Release the parking brake. Refer to Electric Parking Brake (EPB) on page 5-59.

Remember that power assist for the brakes and steering will not be available when the engine is not running.

Using the Towing Hooks

A CAUTION


- The towing eyelet should be used in an emergency (to get the vehicle out of a ditch or a snow bank, for example).
- ➤ When using the towing eyelets, always pull the lead or chain in a straight direction with respect to the eyelet. Never apply a sideways force.
- If the towing eyelet is not securely tightened, it may loosen or disengage from the bumper when towing the vehicle. Make sure that the towing eyelet is securely tightened to the bumper.
- ➤ Be careful not to damage the towing eyelet and towing hook or vehicle body when towing under the following conditions:
 - ➤ Do not tow a vehicle heavier than yours.
 - Do not suddenly accelerate your vehicle as it will apply a severe shock to the towing eyelet and towing hook or rope.
 - > Do not attach any rope other than to the towing eyelet and towing hook.

NOTE

When towing with chain or lead, wrap the chain or lead with a soft cloth near the bumper to prevent damage to the bumper.

When Towing is Required

1. Remove the towing eyelet, the jack lever and the wheel brace or equivalent from the luggage compartment.

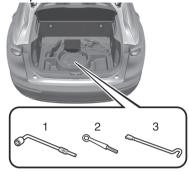

- 1. Wheel brace
- 2. Towing eyelet
- 3. Jack lever

Availability and location of each tool may differ depending on the specification.

2. Wrap a flathead screwdriver or jack lever or a similar tool with a soft cloth to prevent damage to a painted bumper, and open the cap located on the front or rear bumper.

Front








Do not use excessive force as it may damage the cap or scratch the painted bumper surface.

NOTE

Remove the cap completely and store it so as not to lose it.


3. Securely install the towing eyelet using the wheel brace, the jack lever or equivalent.

Front

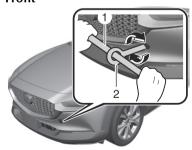

- 1. Wheel brace
- 2. Towing eyelet

What to Do in Case of Emergency When Towing is Required

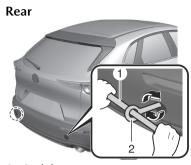

- 1. Jack lever
- 2. Towing eyelet
- 4. Hook the towing rope to the towing eyelet.

Cancelling the Key Temporary Suspension Function

If a key is inside the vehicle, its functions might be temporarily suspended to prevent theft. In this case, press the unlock button on the suspended key in the vehicle to restore the functions.

Unlocking Using the Auxiliary Key

1. Remove the cover while pressing the knob.



- 2. Remove the auxiliary key.
- 3. Insert the auxiliary key while pulling the driver's door handle.




4. Turn the auxiliary key. The door is unlocked.



5. Attach the auxiliary key to its original position.

Key Does Not Operate

6. Insert the tabs of the cover.

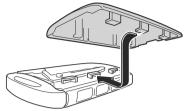

Starting the Engine with a Dead Key Battery



CAUTION

Do not allow the following conditions. Otherwise, the vehicle may not receive the correct signal from the key and the engine may not start.

➤ Metal parts of other keys or metal objects touch the key.



Spare keys or keys for other vehicles equipped with an immobilizer system touch or come near the key.



> Equipment containing electronic components or cards with magnetic strips such as credit cards come near the key.

If the engine cannot be started due to a dead key battery, use the following procedure to start the engine.

- 1. Depress the clutch pedal (Manual transmission) or brake pedal (Automatic transmission). The push button start indicator light (green) flashes.
- 2. Align the centre of the key emblem with the centre of the push button start.

The push button start indicator light (green) turns on.



- 1. Indicator light
- 2. Push button start
- 3. Key
- 4. Emblem
- 3. Press the push button start.

NOTE

- If there is a problem with the push button start function, the push button start indicator light (amber) flashes.
 - In this case, it is possible to start the engine, however, have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
- If the push button start indicator light (green) does not turn on, perform the operation from the beginning.
 - If it still does not turn on, have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).
- To change the vehicle power position, release the clutch pedal (Manual transmission) or brake pedal (Automatic transmission) after the push button start indicator light (green) turns on, then press the push button start.

The vehicle power position is switched in the order of ACC, ON, and OFF.

Once the vehicle power is switched OFF, the vehicle power position can no longer be changed. Therefore, to start the engine, perform the operation from the beginning.

Taking Action with Depleted Lead-acid Battery

The lead-acid battery might be depleted if the following conditions occur.

- · The engine does not start.
- The horn sound is weak or it does not sound.
- · The brightness of the lights is extremely low.

Using commercially available booster leads, connect the lead-acid battery of the booster vehicle's battery to the lead-acid battery of your vehicle and start the engine. Jump-starting is dangerous if done incorrectly. Therefore, follow the procedure carefully. If you feel unsure about jump-starting, we strongly recommend that you have a competent service technician do the work.

⚠ WARNING

Read the following precautions carefully before using the lead-acid battery or inspecting to ensure safe and correct handling.

Always wear eye protection when working near the lead-acid battery. Working without eye protection is dangerous. Lead-acid battery fluid contains SULPHURIC ACID which could cause blindness if splashed into your eyes. Also, hydrogen gas produced during normal lead-acid battery operation, could ignite and cause the lead-acid battery to explode.

Wear eye protection and protective gloves to prevent contact with lead-acid battery fluid.

Spilled lead-acid battery fluid is dangerous.

Lead-acid battery fluid contains SULPHURIC ACID which could cause serious injuries if it gets in eyes, or on the skin or clothing. If this happens, immediately flush your eyes with water for 15 minutes or wash your skin thoroughly and get medical attention.

Always keep lead-acid batteries out of the reach of children.

Allowing children to play near lead-acid batteries is dangerous. Lead-acid battery fluid could cause serious injuries if it gets in the eyes or on the skin.

Keep flames and sparks away from lead-acid battery cells and do not allow metal tools to contact the positive (+) or negative (-) terminal of the lead-acid battery when working near a lead-acid battery. Do not allow the positive (+) terminal to contact the vehicle body.

Flames and sparks near lead-acid battery cells are dangerous. Hydrogen gas, produced during normal lead-acid battery operation, could ignite and cause the lead-acid battery to explode. An exploding lead-acid battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from lead-acid battery cells.

Keep all flames and sparks away from lead-acid battery cells because hydrogen gas is produced from lead-acid battery cells while charging the lead-acid battery or adding lead-acid battery fluid.

Flames and sparks near lead-acid battery cells are dangerous. Hydrogen gas, produced during normal lead-acid battery operation, could ignite and cause the lead-acid battery to explode. An exploding lead-acid battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from lead-acid battery cells.

Do not jump-start a frozen lead-acid battery or one with a low fluid level. Jump-starting a frozen lead-acid battery or one with a low fluid level is dangerous. It may rupture or explode, causing serious injury.

Connect the negative lead to a good ground point away from the lead-acid battery.

Connecting the end of the second jumper lead to the negative (–) terminal of the depleted lead-acid battery is dangerous.

A spark could cause the gas around the lead-acid battery to explode and injure someone.

Route the jumper leads away from parts that will be moving.

Connecting a jumper lead near or to moving part (cooling fans) is dangerous. The lead could get caught when the engine starts and cause serious injury.




- ➤ Use only a 12 V booster system. You can damage a 12 V starter, ignition system, and other electrical parts beyond repair with a 24 V power supply (two 12 V batteries in series).
- Do not use vehicles with Mazda M Hybrid as a booster vehicle to prevent damaging your vehicle.

Engine Does Not Start

- 1. Make sure that the vehicle power is switched OFF.
- 2. Remove the hole cover.

 Refer to Removing the hole cover in Inspecting Lead-acid battery on page 9-39.
- 3. Remove the lead-acid battery cover.

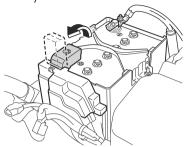

4. Turn off the booster vehicle's engine and connect the jumper leads in the following order.


Make sure that the jumper leads are securely connected so that they do not disconnect due to the vibrations.

1st lead

- ① Positive (+) terminal on the depleted lead-acid battery
- ② Positive (+) terminal on booster vehicle's battery

2nd lead

- ③ Negative (-) terminal on booster vehicle's battery
- ① Location shown in the figure (do not connect to the negative (-) terminal of the depleted lead-acid battery)

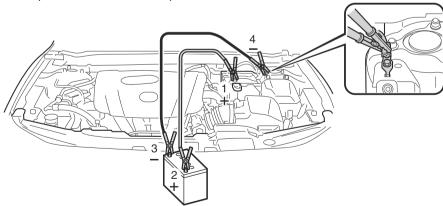

- 5. Start the booster vehicle's engine and rev the engine.
- 6. Start the engine of your vehicle.
- 7. Disconnect the booster leads in the reverse order of their connection after the engine is started.

- 8. Install the lead-acid battery cover.
- 9. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

Push-Starting

Do not push-start your Mazda.



Never tow a vehicle to start it.

Towing a vehicle to start it is dangerous. The vehicle being towed could surge forward when its engine starts, causing the 2 vehicles to collide. The occupants could be injured.

Starting a Flooded Engine

If the engine stops unexpectedly, it may be flooded (excessive fuel in the engine).

Follow this procedure:

- If the engine does not start within 5 seconds on the first try, wait 10 seconds and try again.
- 2. Make sure the parking brake is on.
- 3. Depress the accelerator all the way and hold it there.
- 4. Depress the brake pedal, then press the push button start. If the engine starts, release the accelerator immediately because the engine will suddenly rev up.
- 5. If the engine fails to start, crank it without depressing the accelerator.

If the engine still does not start using the previous procedure, have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Forcibly Stopping the Engine

Press and hold the push button start or press it quickly and repeatedly. The engine stops and the vehicle power is switched ACC.

Applying the Emergency Brake

Continue pulling the EPB switch.



The brakes are applied and the vehicle can be decelerated/stopped. A sound is activated when the brake is applied and when the EPB switch is released, the brake will be released and the sound stops.

⚠ WARNING

Use only in emergency situations.

Use this function only in an emergency. Excessive use will cause the brake parts to wear out quickly or cause the brakes to generate heat, reducing their effectiveness.

Forcibly Cancelling the AUTOHOLD

The AUTOHOLD can be cancelled forcibly by fully depressing the accelerator pedal for about 1 second while the AUTOHOLD is operating. Forcibly cancel the AUTOHOLD only when the AUTOHOLD cannot be cancelled due to a system malfunction or it is necessary to cancel the AUTOHOLD in an emergency.


Cancelling shift-lock system (Automatic transmission)

(Type A)

1. Remove the cover using a flathead screwdriver.



- 1. Cover
- 2. Depress the brake pedal.
- 3. While pressing the shift lock-release button using a flathead screwdriver, press the selector lever button to operate the selector lever.

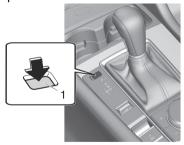

- 1. Shift lock-release button (Type B)
- 1. Depress the brake pedal.

2. While pressing the shift lock-release button, press the selector lever button to operate the selector lever.



1. Shift lock-release button

Taking Action with Overheating

If the engine coolant temperature gauge indicates overheating and the high engine coolant temperature

warning light is displayed, the vehicle loses power or you hear a loud knocking or pinging noise, the engine is probably too hot.



Do not open the bonnet while steam is escaping from the engine compartment.

If the bonnet is opened while the engine compartment is hot, steam and scalding hot coolant may shoot out and cause serious injury. In addition, even if steam is not escaping, some parts in the engine compartment may remain at high temperature. Be extremely careful when opening the bonnet.

Do not touch rotating parts such as the fan belt when inspecting inside the engine compartment.

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.

Do not remove either cooling system cap when the engine and radiator are hot.

When the engine and radiator are hot, scalding coolant and steam may shoot out under pressure and cause serious injury.

- 1. Drive safely to the side of the road and park off the right-of-way.
- 2. Put a vehicle with an automatic transmission in park (P), a manual transmission in neutral.
- 3. Apply the parking brake.
- 4. Turn off the air conditioner.
- Check whether coolant or steam is escaping from the engine compartment.

If steam is coming from the engine compartment:

Do not go near the front of the vehicle. Stop the engine. Wait until the steam dissipates, then open the bonnet and start the engine.

If neither coolant nor steam is escaping:

Open the bonnet and idle the engine until it cools.

Make sure the cooling fan is operating, then turn off the engine after the temperature has decreased.




If the cooling fan does not operate while the engine is running, the engine temperature will increase. Stop the engine and call an expert repairer (we recommend an Authorised Mazda Repairer).

7. When cool, check the coolant level. If it is low, look for coolant leaks from the radiator and hoses.

If you find a leak or other damage, or if coolant is still leaking:

Stop the engine and call an expert repairer (we recommend an Authorised Mazda Repairer).

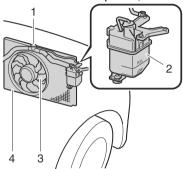

- 1. Cooling system cap
- 2. Coolant reservoir
- 3. Cooling fan
- 4. Radiator

If you find no problems, the engine is cool, and no leaks are obvious:

Carefully add coolant as required (page 9-36).

A CAUTION

If the engine continues to overheat or frequently overheats, have the cooling system inspected. The engine could be seriously damaged unless repairs are made. Consult an expert repairer (we recommend an Authorised Mazda Repairer).

Using the Emergency Flat Tyre Repair Kit*

About the Emergency Flat Tyre Repair Kit

The emergency flat tyre repair kit included with your Mazda is for a temporary repair of a slightly damaged flat tyre resulting from running over nails or similar sharp objects on the road surface.

Perform the emergency flat tyre repair without removing the nail or similar sharp object which punctured the tyre.

MARNING

Do not allow children to touch the tyre sealant.

- ➤ Ingestion of tyre sealant is dangerous. In the event tyre sealant is accidentally swallowed, drink large amounts of water immediately and seek medical assistance.
- ➤ Tyre sealant that comes into contact with the eyes and skin is dangerous. If tyre sealant enters the eyes or contacts the skin, flush immediately with large amounts of water and seek medical assistance.

NOTE


- · Your vehicle is not equipped with a spare tyre. In the event of a flat tyre, use the emergency flat tyre repair kit to repair the tyre temporarily. When doing the repair, refer to the instructions included in the emergency flat tyre repair kit. If an emergency repair was performed on a flat tyre using the emergency flat tyre repair kit, have an expert repairer (we recommend an Authorised Mazda Repairer), repair or replace the tyre as soon as possible.
- The tyre sealant cannot be reused. Purchase new tyre sealant at an expert repairer (we recommend an Authorised Mazda Repairer).
- The emergency flat tyre repair kit cannot be used in the following cases.

Consult an expert repairer (we recommend an Authorised Mazda Repairer).

- The period of effective use for the tyre sealant has expired. (The period of effectiveness is indicated on the bottle label.)
- The tear or puncture exceeds about 4 mm (0.16 in).
- The damage has occurred to an area of the tyre other than the tread.
- The vehicle has been driven with nearly no air remaining in the tyre.
- The tyre has come off the wheel rim.
- Damage to the wheel rim has occurred.
- $\boldsymbol{\cdot}$ The tyre has 2 or more punctures.

Tyre is Punctured or Bursts

The emergency flat tyre repair kit includes the following items.

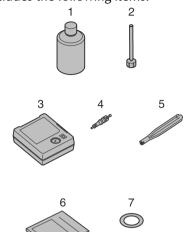

- 1. Tyre sealant
- 2. Injection hose
- 3. Compressor
- 4. Spare valve core
- 5. Valve core tool
- 6. Instructions
- 7. Speed restriction sticker

Using the Emergency Flat Tyre Repair Kit


- Park on a level surface off the right-of-way and set the parking brake.
- 2. Put a vehicle with an automatic transmission in Park (P), a manual transmission in Reverse (R) or 1, and turn off the engine.
- 3. Turn on the hazard warning flasher.

4. Unload passengers and luggage, and remove the emergency flat tyre repair kit.



The location of the emergency flat tyre repair kit may differ depending on the specification.

5. Shake the tyre sealant well.

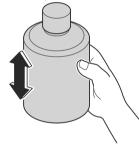




If the bottle is shaken after the injection hose is screwed on, tyre sealant could spray out from the injection hose. Tyre sealant contacting clothing or other objects may be impossible to remove. Shake the bottle before screwing on the injection hose.

NOTE


The tyre sealant can be used at outside temperatures down to $-30 \,^{\circ}\text{C} (-22 \,^{\circ}\text{F})$.

In extremely cold temperatures (0 °C (32 °F) or below), the tyre sealant hardens easily and injection of the sealant will be difficult. Warm the sealant inside the vehicle before doing the injection work.

6. Remove the cap from the bottle. Screw on the injection hose with the bottle's inner cap left on to break the inner cap.

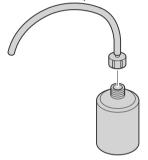


7. Remove the valve cap from the flat tyre. Press the back of a valve core tool to the core of the tyre valve and bleed all the remaining air.

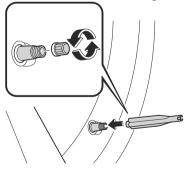

A CAUTION

If there is air remaining in the tyre when the valve core is removed, the valve core could fly out. Remove the valve core carefully.


8. Turn the valve core anticlockwise with the valve core tool and remove the valve core.

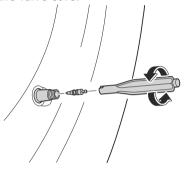

NOTE

Store the valve core in a place where it will not get dirty.

9. Insert the injection hose into the valve.

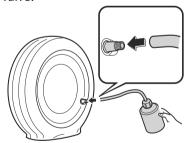

Tyre is Punctured or Bursts

10.Hold the bottom of the bottle upright, squeeze the bottle with your hands, and inject the entire amount of tyre sealant into the tyre.



11. Pull out the injection hose from the valve. Reinsert the valve core into the valve and turn it clockwise to install it.

NOTE

Do not throw away the empty tyre sealant bottle after use. Return the empty tyre sealant bottle to an expert repairer (we recommend an Authorised Mazda Repairer) when replacing the tyre. The empty tyre sealant bottle will need to be used to extract and dispose of the used sealant from the tyre.

12.Adhere the speed restriction sticker in a place where it can be viewed easily by the driver.




Attach the speed restriction sticker in a place where it can be viewed easily by the driver.


Applying the speed restriction sticker to the steering wheel is dangerous as it could interfere with the air bag deployment and result in serious injury.

A CAUTION

- ➤ Do not apply speed restriction stickers on the instrument panel or displays. Otherwise, the instrument panel or displays could be scratched or damaged when removing the sticker.
- Remove the speed restriction sticker immediately after repair or replacement of a tyre.
- 13.Install the compressor hose to the tyre valve.

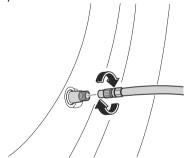

14.Insert the compressor plug into the interior accessory socket and switch the vehicle power to ACC (page 7-59).

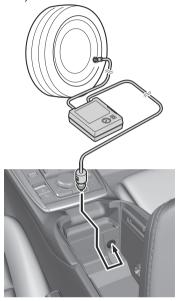



- ➤ Before pulling out the compressor plug from the electrical socket, make sure the compressor power switch is off.
- The compressor turns on and off with the push-button switch.
- 15. Turn the compressor switch on and inflate the tyre carefully to the correct inflation pressure.

▲ WARNING

Never operate the compressor above 300 kPa (3.1 kgf/cm², 3 bar, 43.5 psi).

Operating the compressor above 300 kPa (3.1 kgf/cm², 3 bar, 43.5 psi) is dangerous. When the inflation pressure rises above 300 kPa (3.1 kgf/cm², 3 bar, 43.5 psi), heated air will be exhausted from the back of the compressor and you could be burned.

NOTE

- Check the tyre inflation pressure label (driver's door frame) for the correct tyre inflation pressure.
- Do not use the compressor for longer than 10 minutes because using the compressor for long periods could damage it.
- If the tyre does not inflate, repair of the tyre may not be possible. If the tyre does not reach the correct inflation pressure within a 10-minute period, it probably has received more extensive damage. When this happens, the emergency flat tyre repair kit cannot be used to repair the tyre. Contact an expert repairer (we recommend an Authorised Mazda Repairer).
- If the tyre has been over-inflated, loosen the screw cap on the compressor and bleed some of the air out.
- 16. When the tyre has been inflated to the proper inflation pressure, turn the compressor switch off and remove the compressor hose from the tyre valve.
- 17.Install the tyre valve cap.

Tyre is Punctured or Bursts

18. Put the emergency flat tyre repair kit in the luggage compartment and continue driving.

A CAUTION

- ➤ Drive carefully to an expert repairer (we recommend an Authorised Mazda Repairer) and keep the vehicle speed below 80 km/h (50 mph).
- ➤If the vehicle is driven 80 km/h (50 mph) or higher, the vehicle might begin to vibrate.

NOTE

If the tyre is not properly inflated, the tyre pressure monitoring system warning light (!) will illuminate (page 5-100).

19. After driving the vehicle for 10 minutes or 5 km (3 miles), connect the air compressor to the tyre using Step 13 of the procedure, and check the tyre pressure with the tyre pressure gauge equipped with the compressor. If the tyre pressure has fallen below the correct tyre pressure, inflate the tyre to the correct pressure again following the steps from number 14.

A CAUTION

➤ If the tyre inflation pressure falls below 130 kPa (1.3 kgf/cm² or bar, 18.9 psi), repair cannot be done with the repair kit. Park the vehicle on a level surface off the right-of-way and contact an expert repairer (we recommend an Authorised Mazda Repairer).

➤ If the tyre inflation pressure continues to remain low after repeating steps 13 to 19, park the vehicle on a level surface off the right-of-way and contact an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

When checking the tyre inflation pressure with the tyre pressure gauge on the compressor unit, make sure the compressor switch is turned off.

20.The emergency flat tyre repair is completed if the tyre air pressure does not decrease. Drive the vehicle carefully to the nearest expert repairer (we recommend an Authorised Mazda Repairer) promptly and have the tyre replaced. Mazda recommends that the tyre be replaced with a new one. If the tyre is to be repaired and reused, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Peel off the speed restriction sticker after replacing the tyre.

A CAUTION

- For a tyre which has undergone an emergency flat tyre repair using the emergency flat tyre repair kit, Mazda recommends that the tyre be replaced with a new one as soon as possible. If the tyre is to be repaired and reused, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The wheel can be reused after any sealant adhering to it is wiped off and carefully inspected. However, replace the tyre valve with a new one.

Changing a Flat Tyre (With Spare Tyre)*

NOTE

If the following occurs while driving, it could indicate a flat tyre.

- · Steering becomes difficult.
- The vehicle begins to vibrate excessively.
- · The vehicle pulls in one direction.

If you have a flat tyre, drive slowly to a level spot that is well off the road and out of the way of traffic to change the tyre.

Stopping in traffic or on the shoulder of a busy road is dangerous.

MARNING

Do not install the temporary spare tyre on the front wheels (driving wheels).

Driving with the temporary spare tyre on one of the front driving wheels is dangerous. Handling will be affected. You could lose control of the vehicle, especially on ice or snow bound roads, and have an accident. Move a regular tyre to the front wheel and install the temporary spare tyre to the rear.

Be sure to follow the directions for changing a tyre.

Changing a tyre is dangerous if not done properly. The vehicle can slip off the jack and seriously injure someone. No person should place any portion of their body under a vehicle that is supported by a jack.

Never allow anyone inside a vehicle supported by a jack.

Allowing someone to remain in a vehicle supported by a jack is dangerous. The occupant could cause the vehicle to fall resulting in serious injury.

NOTE

Make sure the jack is well lubricated before using it.

- Park on a hard, level surface off the right-of-way and firmly set the parking brake.
- 2. Put a vehicle with an automatic transmission in Park (P), a manual transmission in Reverse (R) or 1, and turn off the engine.
- 3. Turn on the hazard warning flasher.
- 4. Have passengers get out of the vehicle and away from the vehicle and traffic.
- 5. Remove any luggage, the jack (page 7-79), spare tyre (page 7-79), and tools (page 8-6).
- 6. Block the wheel diagonally opposite the flat tyre. When blocking a wheel, place a tyre block both in front and behind the tyre.



NOTE

When blocking a tyre, use rocks or wood blocks of sufficient size if possible to hold the tyre in place.

Removing a Flat Tyre

♠ WARNING

When jacking-up a vehicle, always shift the shift lever to 1st or R position (manual transmission vehicle) or shift the selector lever to P position (automatic transmission vehicle), apply the parking brake, and place wheel blocks in the position diagonally opposed to the jack. Changing a flat tyre without using wheel blocks is dangerous because the vehicle may move and fall off the jack even with the shift lever in 1st or R position, or the selector lever is in P position, which could result in an accident.

1. If your vehicle is equipped with a wheel cover, pry off the wheel cover with the bevelled end of the jack lever.



A CAUTION

Align the notch on the wheel cover with the valve stem when installing it.



- 1. Tyre valve
- 2. Notch

Damage could occur during installation if the wheel cover is not properly aligned.

NOTE


Force the end of the jack lever firmly between wheel and cover, or removal will be difficult.

Loosen the wheel nuts by turning them anticlockwise one turn each, but do not remove any wheel nuts until the tyre has been raised off the ground.




3. Place the jack on the ground.


4. Turn the jack screw in the direction shown in the figure and adjust the jack head so that it is close to the jack-up position.

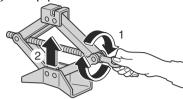

 Place the jack under the jack-up position closest to the tyre being changed with the jack head squarely under the jack-up point.

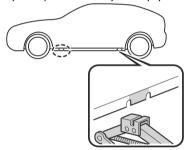

6. Continue raising the jack head gradually by rotating the screw with your hand until the jack head is inserted into the jack-up position.

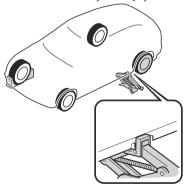

▲ WARNING

Use only the front and rear jacking positions recommended in this manual.

Attempting to jack the vehicle in positions other than those recommended in this manual is dangerous. The vehicle could slip off the jack and seriously injure or even kill someone. Use only the front and rear jacking positions recommended in this manual.

Do not jack up the vehicle in a position other than the designated jack-up position or place any objects on or under the jack. Jacking up the vehicle in a position other than the designated jack-up position or placing objects on or under the jack is dangerous as it could deform the vehicle body or the vehicle could fall off the jack resulting in an accident.

Use only the jack provided with your Mazda.

Using a jack that is not designed for your Mazda is dangerous. The vehicle could slip off the jack and seriously injure someone.


Never place objects under the jack.

Jacking the vehicle with an object under the jack is dangerous. The jack could slip and someone could be seriously injured by the jack or the falling vehicle.

NOTE

When raising the jack head into the jacking position and aligning the groove in the jack head with the rail under the vehicle body, the top of the jack head contacts the vehicle's underbody without the rail contacting the bottom of the groove.

7. Insert the jack lever and attach the wheel brace to tyre jack.

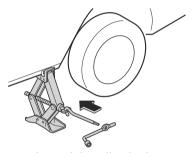

8. Turn the jack handle clockwise and raise the vehicle high enough so that the spare tyre can be installed. Before removing the wheel nuts, make sure your Mazda is firmly in position and that it cannot slip or move.



▲ WARNING

Do not jack up the vehicle higher than is necessary.

Jacking up the vehicle higher than is necessary is dangerous as it could destabilize the vehicle resulting in an accident.

Do not start the engine or shake the vehicle while it is jacked up. Starting the engine or shaking the vehicle while it is jacked up is dangerous as it could cause the vehicle to fall off the jack resulting in an accident.

Never go under the vehicle while it is jacked up.

Going under the vehicle while it is jacked up is dangerous as it could result in death or serious injury if the vehicle were to fall off the jack.

9. Remove the wheel nuts by turning them anticlockwise; then remove the wheel and centre cap.

Mounting the Spare Tyre

 Remove dirt and grime from the mounting surfaces of the wheel and hub, including the hub bolts, with a cloth.






MARNING

Make sure the mounting surfaces of the wheel, hub and wheel nuts are clean before changing or replacing tyres.

When changing or replacing a tyre, not removing dirt and grime from the mounting surfaces of the wheel, hub and hub bolts is dangerous. The wheel nuts could loosen while driving and cause the tyre to come off, resulting in an accident.

- 2. Mount the spare tyre.
- Install the wheel nuts with the bevelled edge inward; tighten them by hand.

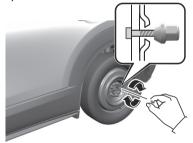

MARNING

Do not apply oil or grease to wheel nuts and bolts and do not tighten the wheel nuts beyond the recommended tightening torque. Applying oil or grease to wheel nuts and bolts is dangerous. The wheel nuts could loosen while driving and cause the tyre to come off, resulting in an accident. In addition, wheel nuts and bolts could be damaged if tightened more than necessary.

 Turn the jack handle anticlockwise using the wheel brace and lower the vehicle. 5. Use the wheel brace to tighten the nuts in the order shown.



If you are unsure of how tight the nuts should be, have them inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

Nut tightening torque	
N⋅m (kgf⋅m, ft⋅lbf)	108—147 (12—14, 80—108)



Always securely and correctly tighten the wheel nuts.

Improperly or loosely tightened wheel nuts are dangerous. The wheel could wobble or come off. This could result in loss of vehicle control and cause a serious accident.

Be sure to reinstall the same nuts you removed or replace them with metric nuts of the same configuration.

Because the wheel studs and wheel nuts on your Mazda have metric threads, using a non-metric nut is dangerous. On a metric stud, it would not secure the wheel and would damage the stud, which could cause the wheel to slip off and cause an accident.

Tyre is Punctured or Bursts

- 6. Remove the tyre blocks and store the tools and jack.
- 7. Store the damaged tyre in the boot/luggage compartment.
- 8. Check the inflation pressure. Refer to Tyres on page 10-90.



Do not drive with any tyres that have incorrect air pressure.

Driving on tyres with incorrect air pressure is dangerous. Tyres with incorrect pressure could affect handling and result in an accident. When you check the regular tyres' air pressure, check the spare tyre, too.

9. Have the flat tyre repaired or replaced as soon as possible.

Open the liftgate from the luggage compartment

If the lead-acid battery is dead, the liftgate cannot be unlocked and opened. In this case, the liftgate can be unlocked by taking care of the dead lead-acid battery situation.

Refer to Taking Action with Depleted Lead-acid Battery on page 8-12. If the liftgate cannot be unlocked even after charging the dead lead-acid battery, you can open the liftgate as an emergency measure by following the procedure below.

- Fold down the rear seatbacks. Refer to How to Use the Rear Seats on page 3-30.
- 2. Remove the cover.



Move the lever. (Vehicles with power liftgate)



(Vehicles without power liftgate)



The liftgate is unlocked. After performing this emergency measure, have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Initializing the Power Window

To restore these functions, do the following:

- 1. Switch the vehicle power ON.
- 2. Press the power window switch to fully open the window.3. Pull the power window switch and
- Pull the power window switch and fully close the window, and continue pulling the switch for about 2 seconds.

Initializing the Sunroof

If the sunroof does not operate normally, do the following procedure:

- 1. Switch the vehicle power ON.
- 2. Press the tilt switch, to partially tilt open the rear of the sunroof.
- 3. Repeat Step 2. The rear of the sunroof tilts open to the fully open position, then closes a little.

If the reset procedure is performed while the sunroof is in the slide position (partially open) it will close before the rear tilt opens.

Have the Vehicle Inspected

The windscreen wipers may operate at high speed if there is a problem with the wiper control.

If the wipers operate at high speed regardless of the wiper switch operation, have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Inspecting Washer Fluid Level

If the washer fluid is not sprayed, check the amount of fluid in the washer tank. Refer to Replenishing Windscreen Washer Fluid on page 9-38. If air enters the washer pipe when refilling the empty washer tank with washer fluid, the washer fluid may not be sprayed.

Operate the wiper lever until the washer fluid is sprayed.

If the washer fluid is not sprayed even after refilling, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Active Driving Display Does Not Operate

If the active driving display does not operate, switch the vehicle power off and then restart the engine. If the active driving display does not operate even with the engine restarted, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

Warning Lights

If any warning/indicator light turns on/flashes, take appropriate action for each light. If the warning/indicator light does not turn off, or it turns on or flashes again, consult an expert repairer (we recommend an Authorised Mazda Repairer).

MARNING

If the warning light/indicator light turns on or flashes, park the vehicle in a safe place immediately and take appropriate measures.

Continuing to drive the vehicle while ignoring the illumination/flashing of the warning light/indicator light is dangerous because a problem may occur to a vehicle system, the engine may be damaged, or it could lead to an accident.

The details for some warnings can be viewed on the centre display or instrument cluster.

Checking Using the Centre Display

- 1. Select "Information" on the home screen.
- 2. Select "Vehicle Status Monitor".
- 3. Select the applicable warning to view the warning details.

Checking Using the Instrument Cluster

Press the INFO switch on the steering switch to display the warning indication screen.

Refer to How to Use the Multi-information Display on page 5-29.

Brake System Warning Light (Red)



The light turns on continuously if any one of the following occurs:

- · Insufficient brake fluid
- Brake system (electronic brake force distribution system) has a problem

Park the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer).

MARNING

Do not drive with the brake system warning light illuminated. Contact an expert repairer (we recommend an Authorised Mazda Repairer) to have the brakes inspected as soon as possible.

Driving with the brake system warning light illuminated is dangerous. It indicates that your brakes may not work at all or that they could completely fail at any time. If this light remains illuminated, after checking that the parking brake is fully released, have the brakes inspected immediately.

Warning/Indicator Light Turns On

If the brake system warning light and the ABS warning light (ABS) turn on at the same time, stop the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer).

The rear wheels could lock more quickly in an emergency stop than under normal circumstances which could result in an accident.



- In addition, the effectiveness of the braking may diminish so you may need to depress the brake pedal more strongly than normal to stop the vehicle.
- ➤ (e-SKYACTIV G, e-SKYACTIV X)

 The brake warning light may turn on when the engine is started. In this case, park the vehicle in a safe location and release the brake pedal. If the brake warning light remains illuminated, have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Charging System Warning Light



The light turns on if the charging system has a problem. Park the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer).



Do not continue driving with the charging system warning light turned on:

Otherwise, the engine may stop, which could result in an accident.

Engine Oil Warning Light



The light turns on when the engine oil pressure decreases.



Do not drive the vehicle with the engine oil warning light turned on. Driving the vehicle with decreased engine oil pressure may cause engine damage.

If the engine oil warning light turns on while driving, stop the vehicle in a safe place and stop the engine.

After that, contact an expert repairer (we recommend an Authorised Mazda Repairer).

High Engine Coolant Temperature Warning Light



The light turns on if the engine coolant temperature has increased excessively. Check the contents of the message displayed and take the necessary action.



Do not drive the vehicle with the high engine coolant temperature warning light turned on. Driving the vehicle with the engine not cooled down may cause engine damage.

Warning / Indicator Light Turns On

Electric Power Steering Warning Light



The warning light turns on if the electric power steering has a malfunction.

If the warning light turns on, stop the vehicle in a safe place and switch the vehicle power OFF.

There is no problem if the warning light turns off when the engine is restarted after some time has passed. If the warning light turns on even after the engine is restarted, contact an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

- · If the warning light turns on, the electric power steering will not operate normally. In this case, the steering wheel can still be operated, however, the operation may feel heavy compared to normal.
- Repeatedly jerking the steering wheel left and right while the vehicle is stopped or moving extremely slowly will cause the power steering system to go into protective mode which will make the steering feel heavy, but this does not indicate a problem. If this occurs, park the vehicle safely and do not operate the steering wheel. The system will return to normal after a few minutes.

ABS Warning Light



The light remains on if the system has a problem.

Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

WARNING

If the brake system warning light (red)

(!) and the ABS warning light turn on at the same time, stop the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer).

The rear wheels could lock more quickly in an emergency stop than under normal circumstances which could result in an accident

Master Warning Light



The light turns on if the system has a problem.

Check the contents of the message displayed on the centre display or in the instrument cluster and take the necessary action.

Brake Control System Warning Light (Amber)



The light turns on if the system has a problem.

Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Electric Parking Brake (EPB) Indicator Light



The light turns on when applying the parking brake and it turns off when releasing the parking brake.

Parking brake warning/Indicator light inspection

The light illuminates when the parking brake is applied with the vehicle power switched to START or ON. It turns off when the parking brake is released.

Turning on

If the light remains on even with the electric parking brake (EPB) switch turned off, the system may have a malfunction. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Flashing

The light flashes if the system has a problem. If the light remains flashing even if the electric parking brake (EPB) switch is pressed, consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

Check Engine Warning Light



M WARNING

Do not disconnect the lead-acid battery leads when the check engine warning light is turned on/flashing. The engine may be damaged when

The engine may be damaged when reconnecting the lead-acid battery leads, which could result in a fire.

The light turns on if the engine has a problem while it is running. Park the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer). If any of the following problems occur, the check engine warning light turns on.

- There is a problem with the engine control system
- There is a problem with the emission control system
- There is a problem with the transmission control system
- · (e-SKYACTIV G, e-SKYACTIV X)
 There is a problem with the Mazda
 M Hybrid
- The fuel tank level being very low or approaching empty.

If the check engine warning light remains turned-on/flashing, do not drive at high speed and have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

i-stop Warning Light (Amber)*



- After the engine is started, the light turns on/flashes continuously if the system has a problem.
 Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).
- · (Except European model)

If the i-stop warning light (amber) remains on while the engine is running, the lead-acid battery performance may have decreased. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

Petrol Particulate Filter Warning Light*



Check the contents of the message displayed and take the necessary action.



If the vehicle is continually driven as usual with the petrol particulate filter warning light illuminated, PM increases and the warning light may start flashing. If the petrol particulate filter warning light starts flashing, have the vehicle inspected immediately at an expert repairer (we recommend an Authorised Mazda Repairer). If the vehicle is not inspected and continues to be driven, the engine may malfunction.

Automatic Transmission Warning Light*



The light turns on if the system has a problem.

Contact an expert repairer (we recommend an Authorised Mazda Repairer).



Do not drive the vehicle with the automatic transmission warning light turned on. If the vehicle continues to be driven while the automatic transmission warning light is turned on, the transmission could be damaged. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

AWD Warning Light^{*}



The light turns on if the system has a problem or if the tyre sizes do not match.

Check the contents of the message displayed and take the necessary action.

120 km/h Warning Light*

120 km/h

The light turns on when the vehicle speed exceeds 120 km/h. In addition, when the light turns on, a warning sound is activated. Lower the vehicle speed.

Tyre Pressure Monitoring System (TPMS) Warning Light (Flashing)*



The light flashes if there is a malfunction in the system. Contact an expert repairer (we recommend an Authorised Mazda Repairer).

MARNING

Do not drive the vehicle at high speeds if the TPMS warning light turns on or flashes:

Driving the vehicle at high speeds while the TPMS warning light is turned on or flashing is dangerous because the brake performance and the steering wheel operability will be reduced. If the vehicle is driven at high speeds or the brakes are suddenly applied, it could lead to an accident. Gradually apply the brakes to lower the vehicle's speed.

Do not ignore the TPMS warning light when it is turned on or flashing:

Continuing to drive the vehicle while ignoring the illumination/flashing of the TPMS warning light is dangerous because a tyre may burst which could lead to an accident. Take appropriate measures as soon as possible.

TCS/DSC Indicator Light (Turns on)



There may be a problem with the DSC, TCS, or Hill Launch Assist (HLA) under the following conditions. Have your vehicle inspected by an expert repairer (we recommend an

Authorised Mazda Repairer).

- The light does not turn on or remains on even if the vehicle power is switched ON.
- · It turns on while driving the vehicle.

Air Bag/Seat Belt Pretensioner System Warning Light



A problem in the system might be indicated under the following conditions.

Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

- Does not turn on even if the vehicle power is switched ON.
- · Remains turned-on/flashing.

⚠ WARNING

Never tamper with the air bag/ pretensioner systems and always have an expert repairer (we recommend an Authorised Mazda Repairer) perform all servicing and repairs.

Self-servicing or tampering with the systems is dangerous. An air bag/pretensioner could accidentally activate or become disabled causing serious injury or death.

KEY Warning Light (Red)



The light turns on if the system has a problem or if the key is out of the operation range.

Check the contents of the message displayed and take the necessary action.



If the push button start indicator light (amber) flashes at the same time, the engine may not start. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

Security Indicator Light



If the security indicator light turns on/flashes while driving, do not stop the engine (leave it operating) and have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer). If you stop the engine, you may not be able to start it again.

If the engine cannot be started, switch the vehicle power OFF, place the key in another position within the operation range, and then restart the engine. Check the security indicator light and if it does not turn off, such as it remains

on or flashes, switch the vehicle power OFF, wait for a while, and then restart the engine.

If the engine does not start after three attempts, a system malfunction may have occurred. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

When repairing the immobilizer system, the key codes will need to be reprogrammed. Bring all the remaining keys to an expert repairer (we recommend an Authorised Mazda Repairer).

High Beam Control System (HBC) Warning Light (Amber)*



The light turns on if the system has a problem.

Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Adaptive LED Headlights (ALH) Warning Light (Amber)*



The light turns on if the system has a problem.

Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

i-ACTIVSENSE Warning Light*



The light turns on if any i-ACTIVSENSE related system has a problem. Check the contents of the message displayed and take the necessary action.

Exterior Lights Warning Light



The light turns on if the exterior lights (not including the number plate lights) has a problem.

Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).



Do not drive the vehicle while an exterior light has a malfunction. Poor visibility, and not being able to signal braking and turns may cause an accident. In addition, if the vehicle is driven with the lights not turned on, it may conflict with laws and regulations due to poor maintenance.

Low Fuel Warning Light



The light turns on/flashes when the remaining fuel in the tank is near empty.

When the light flashes, a warning sound is activated.
Refuel immediately.

NOTE

The light illumination timing may vary because fuel inside the fuel tank moves around according to the driving conditions and the vehicle posture.

Engine Oil Level Warning Light



This warning light indicates that the engine oil level is around the MIN mark.



Do not continue to drive the vehicle with the engine oil level warning light turned on. If the vehicle continues to be driven with an insufficient amount of engine oil, it could cause damage to the engine.

Add 1 L (0.26 US gal, 0.22 Imp gal) of engine oil (page 9-32).

Seat Belt Warning Light (Front Seat)





Turning on

The warning light turns on if the driver/front passenger's seat belt is not fastened when the vehicle power is switched ON.

Wear the seat belt.

Flashing

If the driver or passenger's seat belt is unfastened and the vehicle is driven at about 20 km/h (12 mph) or faster, the warning light flashes for a certain period.

After a short time, the warning light stops flashing, but remains illuminated. In addition, when the warning light flashes, a warning sound is activated. Wear the seat belt.

NOTE

- Placing heavy items on the front passenger's seat may cause the front passenger's seat belt warning function to operate depending on the weight of the item.
- To allow the sensor that detects an occupant to function properly, do not sit on the front passenger's seat with a cushion or other object on it. The sensor may not function properly because the additional seat cushion could cause sensor interference.
- If a small child is seated on the front passenger's seat, the warning light may not operate.

Seat Belt Warning Light (Rear Seat) (Red)



When the vehicle power is switched ON, the warning lights turn on if the seat belts are not fastened.*1

After the engine is started, the warning lights turn off after a short period of time.

In addition, if a fastened seat belt is unfastened, the warning light flashes for a short period of time and then turns off.

When the warning light flashes, a warning sound is activated.
Wear the seat belt.


*1 The warning light also turns on when the rear seat is unoccupied.

Low Washer Fluid Amount Warning Light*



The light turns on if the amount of washer fluid is low when the vehicle power is switched ON.
Add washer fluid.

Door-ajar Warning Light/ Liftgate-open Warning Light/Bonnet-open Warning Light

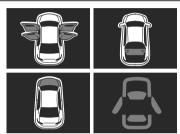

The light turns on if any door/liftgate/bonnet is not closed securely. In addition, the warning sound is activated if any door/liftgate is not closed and the vehicle is driven.

Close the door/liftgate/bonnet securely.

KEY Indicator Light (Green) (Flashing)



The light flashes if the battery power of the key is low when the vehicle power is switched from ON to OFF. Replace the key battery.

Wrench Indicator Light



The wrench indication/indicator light is displayed/turns on under the following conditions.

 When the preset maintenance period has arrived.
 Refer to the Information section in the Mazda Connect Owner's Manual.



- When the maintenance period arrives, have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible. If maintenance is neglected, a decrease in vehicle performance may occur which could cause damage. Have your vehicle inspected before the maintenance period arrives.
- ➤ if the vehicle continues to be driven after the engine oil replacement period has passed, it could cause damage to the engine. Replace the engine oil before the maintenance period arrives.

NOTE

- The wrench indication/indicator light may display/turn on earlier than the preset period depending on vehicle usage conditions.
- Whenever the engine oil is replaced, a reset of the vehicle engine control unit is necessary.

Refer to the Information section in the Mazda Connect Owner's Manual.

Lights-On Reminder

If the vehicle power is switched OFF with the exterior lights turned on and the driver's door is opened, a sound is activated.

Operate the headlight switch to turn off the exterior lights.

NOTE

A personalised function is available to change the sound volume for the lights-on reminder.

Refer to the Settings section in the Mazda Connect Owner's Manual.

Power Switch Not Switched OFF Reminder Warning Sound

European models

If the driver's door is opened with the vehicle power switched to ACC, a beep will be heard 6 times in the cabin to notify the driver that the vehicle power has not been switched OFF (STOP). Under this condition, the keyless entry system will not operate, the vehicle cannot be locked, and the lead-acid battery voltage will be depleted.

Except European models

If the driver's door is opened with the vehicle power switched to ACC, a beep will be heard continuously in the cabin to notify the driver that the vehicle power has not been switched OFF (STOP). Under this condition, the keyless entry system will not operate, the vehicle cannot be locked, and the lead-acid battery voltage will be depleted.

Switch the vehicle power OFF.

Key Removed from Vehicle Warning Sound

Vehicles with advanced keyless function

If the key is taken out of the vehicle while the vehicle power is switched to ACC or ON, and all the doors are closed, a sound is activated 6 times outside of the vehicle and a sound is activated 1 time in the vehicle.

Vehicles without advanced keyless function

If the key is taken out of the vehicle while the vehicle power is switched to ACC or ON, and all the doors are closed, a sound is activated 1 time in the vehicle.

Make sure that you leave the vehicle while carrying the key, or switch the vehicle power OFF.

Key Left-in-Vehicle Warning Sound

If all the doors and luggage compartment are locked using another key while the key is left in the cabin, the beep which sounds outside of the vehicle will be heard for about 10 seconds to notify the driver that the key is in the cabin. In this case, take out the key by opening the door. A key taken out of the vehicle using this method may not operate because its functions have been temporarily stopped. To restore the key's functions, perform the applicable procedure (page 8-9).

Key Left-In-Luggage Compartment Warning Sound (Vehicles With Advanced Keyless Function)

If the key is left in the luggage compartment with all the doors locked and the liftgate closed, a beep will be heard outside for about 10 seconds to notify the driver that the key is in the luggage compartment. In this case, take out the key by pressing the electric liftgate opener and opening the liftgate.

The key taken out of the luggage compartment may not operate because its functions have been temporarily stopped. To restore the key's functions, perform the applicable procedure (page 8-9).

Door Lock Inoperable Warning Sound

Operation Using Touch Sensor

A warning beep is activated to notify the driver that the doors are not locked when all of the following conditions are met:

- · The vehicle power is switched OFF.
- · All the doors are not fully closed.
- The lock is operated 3 times within 5 seconds.

Check the vehicle power and whether the doors are open or closed, and then operate the lock again.

Operation Using Door-lock Switch on the Liftgate

When the door-lock switch on the liftgate is pressed under any of the following conditions, a warning sound is activated.

- The vehicle power is switched to a position other than OFF.
- · Any door is open.

Make sure that none of the above conditions are present, and then press the door-lock switch again.

Power Liftgate Warning Sound*

- A sound is activated 3 times when the power liftgate is operated and an object is stuck in the liftgate.
 Make sure that there is nothing stuck.
- If the vehicle is driven while the liftgate is open, a sound is activated for a while.
 - Drive the vehicle with the liftgate closed.

Electronic Steering Lock Warning Sound

When the steering wheel is locked and you press the push button start, a warning sound is activated and the push button start indicator light (green) flashes.

Release the steering wheel by pressing the push button start while turning the steering wheel to the left and right.

Brake System Warning Sound

A warning sound is activated if a problem with the brake system occurs and the brakes may not work as intended. Decelerate the vehicle while checking the safety of the surrounding area, and park the vehicle in a safe place. After stopping the vehicle, contact an expert repairer (we recommend an Authorised Mazda Repairer).

Electric Parking Brake (EPB) Warning Sound

The warning sound is activated under the following conditions:

- The vehicle is driven with the parking brake applied.
- The Electric Parking Brake (EPB) switch is pulled while the vehicle is driven.
- You attempt to start driving the vehicle while the conditions for releasing the Electric Parking Brake (EPB) automatically have not been met.

Check the condition of the parking brake.

Low Lead-Acid Battery Charge Warning Sound

A warning sound is activated if the lead-acid battery charge is depleted. To charge the lead-acid battery, start the engine and keep running the engine for 5 minutes or longer.

What to do when the vehicle is stuck



Do not spin the wheels at high speed, and do not allow anyone to stand behind a wheel when pushing the vehicle:

When the vehicle is stuck, spinning the wheels at high speed is dangerous. The spinning tyre could overheat and explode. This could cause serious injuries.

A CAUTION

Too much rocking may cause engine overheating, transmission failure, and tyre damage.

If you must rock the vehicle to free it from snow, sand or mud, depress the accelerator slightly and slowly move the shift lever/selector lever from 1 (D) to R position.

MEMO

9

Inspection and Servicing/Cleaning

Inspection and Servicing 9-4
Inspection and Servicing9-4
Scheduled Maintenance 9-5
Scheduled Maintenance9-5
Maintenance Table 9-6
Table 19-8
Table 29-11
Table 39-14
Table 49-16
Table 59-20
Table 5
Daily Inspection9-23
Daily Inspection9-23
Warnings and Cautions for Daily
Inspection9-23
Engine Compartment
Inspection9-25
Checking the Inspection
Locations and Inspection
Locations and Inspection Items9-25
Items 9-25
Items

Vehicle Exterior Inspection 9-49
Checking the Inspection
Locations and Inspection
Items 9-49
Replacing Windscreen Wiper
Blade Rubbers 9-49
Inspecting the Tyres9-53
Rotating the Tyres 9-54
Replacing a Tyre or a
Wheel9-55
Inspecting the Emergency Flat
Tyre Repair Kit* 9-56
Panlasing Light Bulbs 0.57
Replacing Light Bulbs 9-57
VIII
Vehicle Interior Inspection 9-60
Checking the Inspection
Locations and Inspection
Items 9-60
Air Conditioner
Maintenance9-61
V 1
Key Inspection9-62
Warnings and Cautions about Key
Battery Replacement 9-62
Replacing the Key Battery 9-63
Futorior Maintenance 0.64
Exterior Maintenance 9-64
Exterior Maintenance 9-64
Wheel Maintenance9-65
Interior Maintenance9-66
Interior Maintenance 9-66
Instrument Panel Top (Soft pad)
matiament raner top (soft pau)

Maintenance......9-66

Upholstery and Synthetic Le	ather
Maintenance	9-67
Leather Upholstery	
Maintenance	9-67

Maintenance of the Dust-pro	of
Sheet of the Active Driving	
Display	9-68
Seat Belt Maintenance	9-69

MEMO

Inspection and Servicing

Be careful not to hurt yourself when inspecting your vehicle, replacing a tyre, or doing some kind of maintenance such as car washing. In particular, wear thick work gloves such as cotton gloves when touching areas that are difficult to see while inspecting or working on your vehicle. Doing inspections or procedures with your bare hands could cause injury.

If you are unsure about any procedure this manual describes, we strongly urge you to have a reliable and qualified technician perform the work, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Authorised Mazda technicians and genuine Mazda parts are dedicated to your vehicle. Without this expertise and the parts that have been designed and made especially for your Mazda, inadequate, incomplete, and insufficient servicing may result in problems. This could lead to vehicle damage or an accident and injuries.

For expert advice and quality service, consult an expert repairer (we recommend an Authorised Mazda Repairer).

The owner should retain evidence that proper maintenance has been performed as prescribed.

A claim against a warranty will not qualify if it results from lack of maintenance and not from defective material or authorised workmanship.

Scheduled Maintenance

NOTE

After the prescribed period, continue to follow the described maintenance at the recommended intervals.

Emission control and related systems

The ignition and fuel systems are highly important to the emission control system and to efficient engine operation. Do not tamper with them.

All inspections and adjustments must be made by an expert repairer (we recommend an Authorised Mazda Repairer).

Maintenance Table

Each maintenance table is based on the environmental conditions for each country and region.

Perform the appropriate maintenance according to the maintenance table for your country or region.

For the maintenance table that applies to your country or region, refer to the following guide.

Country/Region Maintenance Table Guide

Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble
ALBANIA	1	ALGERIA	4	ANDORRA	1
ANGOLA	4	ANTIGUA	4	ARMENIA	2
ARUBA	4	AUSTRIA	1	AZERBAIJAN	2
B.VIRGIN	4	BAHRAIN	4	BARBADOS	4
BELARUS	2	BELGIUM	1	BERMUDA	4
BOLIVIA	4	BOSNIA AND HER- ZEGOVINA	1	BOTSWANA	4
BRUNEI	4	BULGARIA	1	BURUNDI	4
CAMBODIA	4	CAMEROON	4	CANARY ISLANDS	4
CHILE*1	4 or 5	COLOMBIA*3	4 or 6	COMMONWEALTH OF DOMINICA	4
COSTA RICA	4	CROATIA	1	CURACAO	4
CYPRUS*2	1 or 4	CZECH	1	DENMARK	1
DOMINICAN RE- PUBLIC (LHD)	4	ECUADOR	4	EGYPT	4
EL SALVADOR	4	ESTONIA	1	ETHIOPIA	4
F.GUIANA	4	FAEROE	4	FIJI	4
FINLAND	1	FRANCE	1	GABON	4
GEORGIA	4	GERMANY	1	GHANA	4
GREECE	1	GRENADA	4	GUADELOUPE	4
GUATEMALA	4	HAITI	4	HONDURAS	4
HONG KONG	4	HUNGARY	1	ICELAND	1
INDONESIA	4	IRAN	4	IRAQ	4
IRELAND	1	ISRAEL	3	ITALY	1
IVORY COAST	4	JAMAICA	4	JORDAN	4

Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble
KAZAKHSTAN	2	KENYA	4	KUWAIT	4
LAOS	4	LATVIA	1	LEBANON	4
LESOTHO	4	LIBYA	4	LIECHTENSTEIN	1
LITHUANIA	1	LUXEMBOURG	1	MACAU	4
MACEDONIA	1	MADAGASCAR	4	MALAYSIA*3	4 or 6
MALTA*2	1 or 4	MARSHALL ISLANDS	4	MARTINIQUE	4
MAURITIUS	4	MOLDOVA	1	MONACO	1
MONGOLIA	4	MONTENEGRO	1	MOROCCO	4
MOZAMBIQUE	4	MYANMAR	4	NAMIBIA	4
NEPAL	4	NEW CALEDONIA	4	NICARAGUA	4
NIGERIA	4	NORWAY	1	OMAN	4
PANAMA	4	PAPUA NEW GUIN- EA	4	PARAGUAY	4
PERU	4	POLAND	1	PORTUGAL	1
QATAR	4	REUNION	4	ROMANIA	1
RUSSIA	2	SAN MARINO	1	SAUDI ARABIA*1	4 or 5
SENEGAL	4	SERBIA	1	SEYCHELLES	4
SINGAPORE*3	4 or 6	SLOVAKIA	1	SLOVENIA	1
SOUTH AFRICA	4	SPAIN	1	SRI LANKA	4
ST.LUCIA	4	ST.MARTIN	4	ST.VINCENT	4
SURINAM	4	SWAZILAND	4	SWEDEN	1
SWITZERLAND	1	SYRIA	4	TAHITI	4
TAIWAN	4	TANZANIA	4	THAILAND	4
THE NETHERLANDS	1	THE PHILIPPINES	4	TRINIDAD AND TO- BAGO	4
TUNISIA	4	TURKEY	4	UAE	4
UK	1	UKRAINE	1	URUGUAY	4
USTT	4	VANUATU	4	VATICAN	1
VIETNAM			4	Country/Region, not listed in the chart	4

^{*}1 Table 4: Diesel engine and SKYACTIV-G 2.5T, Table 5: Petrol engine except SKYACTIV-G 2.5T

^{*2} Table 1: Petrol engine and e-SKYACTIV EV, Table 4: Diesel engine

^{*3} Table 4: Except e-SKYACTIV EV, Table 6: e-SKYACTIV EV

Table 1

Vehicles utilizing the vehicle status monitor feature (My Mazda Service):

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval, 20,000 km (12,500 miles) or 12 months, whichever comes first. (after the previous maintenance)

Maintenance ite	m		Num	ber o	of tin	nes, r	naint	tenar	ice w	as p	erfor	med.	
Maintenance ne	'''	1	2	3	4	5	6	7	8	9	10	11	12
Engine oil & filter*1*2		R	R	R	R	R	R	R	R	R	R	R	R
Spark plugs*3	SKYAC- TIV-G/ e-SKYACTIV G	Replace every 120,000 km (75,000 miles							s).				
	e-SKYACTIV X	Replace every 64,000 km (40,000 miles).).				
Air filter*4				R			R			R			R
Fuel filter	Cyprus/ Malta		R	.epla	ce ev	ery 6	0,00	0 km	(37,	500	miles).	
Fuel lines and hoses			ı		I		ı		ı		ı		ı
Hoses and tubes for emission				1			ı			ı			ı
Self-test with Mazda Modular Diagnostic System (M-MDS)*5*6 SKYACTIV-G, e-SKYACTIV G & e-SKYACTIV X	Ukraine	I	ı	I	I	I	I	ı	I	I	I	I	I
Drive belts*7				ı			ı			ı			ı
Vacuum brake booster and hose	With vacuum booster		ı		I		I		ı		ı		I
Manual transmission oil			Re	place	e eve	ry 18	0,00	0 km	(112	2,500) mile	es).	
Exhaust system and heat shiel	ds	In	spec	t eve	ry 10	0,00	0 km	(62,	500	miles) or 8	3 yea	rs.
Self-test with Mazda Modular System (M-MDS)*8	Diagnostic	1 1 1 1 1 1 1 1 1 1					ı						
Coolant level		1 1 1 1 1 1 1 1 1 1 1 1							ı				
Coolant ^{*9}											s) or es) or	,	
Battery*10*11		I	I	ı	I	I	I	I	I	I	I	ı	I

Maintenance ite	m		Num	ber o	of tim	ies, r	naint	enar	ıce w	as p	erfor	med.	
Maintenance ne	111	1	2	3	4	5	6	7	8	9	10	11	12
Brake lines, hoses and connec	tions	ı	ı	ı	I	I	I	ı	ı	ı	ı	ı	ı
Brake fluid*12			R		R		R		R		R		R
Disc brakes		1 1 1 1 1 1 1 1 1 1				I	1						
Steering operation and link-	Except below		ı		ı		ı		ı		1		ı
ages	Cyprus/ Malta	ı	I	ı	I	I	I	ı	I	I	I	I	ı
Front and rear suspension, bal wheel bearing axial play	l joints and		I		I		I		I		I		ı
Driveshaft dust boots			ı		ı		I		ı		ı		Ι
Bolts and nuts on chassis and	body		Т		Т		Т		Т		Т		Т
Body condition (for rust, correforation)	osion and per-		•	•		Insp	oect a	annu	ally.				-
Cabin air filter (if equipped)			R		R		R		R		R		R
Tyre inflation pressure and tyre	e wear*13*14	1 1 1 1 1 1 1 1 1 1 1 1						I					
Emergency flat tyre repair kit (ped)*15	if equip-	ı	I	I	I	ı	ı	ı	I	I	I	I	I

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

C: Clean
T: Tighten
R: Replace

Remarks:

- ^{*}1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- ² If you drive your vehicle under any of the following conditions, replace the engine oil & filter every 10,000 km (6,250 miles) or shorter.
 - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
 - b) Driving under dusty conditions.
 - c) Driving for long periods in cold temperatures or driving regularly for short distances only.
 - d) Driving under extremely high temperature conditions.
 - e) Driving continuously in mountainous regions.
- ³ In the countries below, inspect the spark plugs at every 10,000 km (6,250 miles) or 12 months before replacing them at the said interval.
 - Albania, Bosnia and Herzegovina, Bulgaria, Croatia, Latvia, Macedonia, Moldova, Montenegro, Romania, Serbia, Slovakia, Ukraine

Scheduled Maintenance

- ^{*}4 If the vehicle is operated in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- *5 If DTC P1200 is stored, clean the fuel system by using Mazda genuine deposit cleaner.

 If the required tool (M-MDS) is not available, clean the fuel system by using Mazda genuine deposit cleaner without performing self-test.
- *6 If the vehicle is operated primarily under any of the following conditions, perform "Self-test with Mazda Modular Diagnostic System (M-MDS)" at every 10,000 km (6,250 miles).

Using non-genuine deposit cleaner could cause internal damage to the fuel system.

- a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
- b) Driving under extremely high temperature conditions.
- *7 Also inspect the air conditioner drive belts, if equipped.
 - If the vehicle is operated primarily under any of the following conditions, inspect the drive belts at every 20,000 km (12,500 miles) or 12 months.
 - a) Driving under dusty conditions.
 - b) The vehicle is idled for long periods or driven at low speeds.
 - c) Driving for long periods in cold temperatures or driving regularly for short distances only.
 - d) Driving under extremely high temperature conditions.
 - e) Driving continuously in mountainous regions.
 - f) Driving for long periods in extremely wet or heavy rain conditions.
- *8 For software traceability to comply with Intelligent Speed Assistance (ISA) requirements, if vehicles equipped with ISA.
- ⁹ Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *10 Inspect the battery electrolyte level and outer appearance. The sealed battery only requires an outer appearance inspection.
- *11 Inspection is only subjected for lead-acid battery.
- *12 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- *13 Tyre rotation is recommended every 10,000 km (6,250 miles).
- *14 Inspect a spare tyre if equipped.
- *15 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.

Table 2

Vehicles utilizing the vehicle status monitor feature:

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both. Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval in travelled distance or elapsed days since the last maintenance, or if the engine oil has deteriorated. Depending on driving manner and/or conditions, engine oil may deteriorate before reaching the maximum interval.

Russia/Belarus/Kazakhstan

Maximum interval 15,000 km or 12 months, whichever comes first.

Azerbaijan/Armenia

Maximum interval 10,000 km or 12 months, whichever comes first.

Manually set Next Service Distance of Vehicle Status Monitor to a half mileage from the above maximum mileage and months i.e. 7,500 km/6 months at Russia/Belarus/Kazakhstan or 5,000 km/6 months at Azerbaijan/Armenia if the vehicle is driven primarily under any of the following conditions:

Refer to the Information section in the Mazda Connect Owner's Manual about the manual setting procedure.

- 1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
- 2. Driving under dusty conditions.
- 3. Driving for long periods in cold temperatures or regularly driving too short distances for engine warm-up to be completed.
- 4. Driving under extremely high temperature conditions.
- 5. Driving continuously in mountainous regions.

Maintenance ite	m		Num	ber o	of tim	ies, r	naint	tenar	ıce w	as p	erfor	med.	
Maintenance ne	111	1	2	3	4	5	6	7	8	9	10	11	12
Engine oil & filter*1		R	R	R	R	R	R	R	R	R	R	R	R
Spark plugs		ı	ı	I	ı	I	I	ı	R	ı	ı	I	Ι
Drive belts*2		ı	ı	ı	1	I	I	ı	ı	ı	ı	ı	Ι
Coolant level		ı	ı	I	ı	ı	I	ı	ı	ı	ı	ı	Ι
Battery*3*4		ı	ı	I	ı	ı	ı	ı	ı	ı	ı	I	Ι
Vacuum brake booster and hose	With vacuum booster		I		ı		I		I		I		I
Brake lines, hoses and connec	tions	ı	ı	I	ı	ı	ı	ı	ı	ı	ı	ı	Ι
Disc brakes		ı	ı	I	ı	ı	ı	ı	ı	ı	ı	ı	ı
Steering operation and linkage	es	I	ı	I	ı	I	I	ı	ı	I	ı	I	I

Maintananca	itam		Num	ber o	of tin	nes, r	naint	tenar	ıce w	as p	erfor	med.	
Maintenance item		1	2	3	4	5	6	7	8	9	10	11	12
Bolts and nuts on chassis a	Bolts and nuts on chassis and body			Т	Т	Т	Т	Т	Т	Т	Т	Т	T
Front and rear suspension, ball joints and wheel bearing axial play			ı	ı	I	ı	I	I	ı	ı	ı	ı	ı
Driveshaft dust boot		ı	ı	ı	I	ı	ı	ı	ı	ı	I	ı	-
Exhaust system and heat sl	nields	ı	ı	ı	ı	ı	ı	ı	ı	I	I	I	ı
Function of all lights		I	ı	ı	ı	ı	ı	I	ı	I	I	ı	ı
Body condition (for rust, conforation)	orrosion and per-	ı	ı	ı	ı	ı	I	I	ı	ı	ı	ı	ı
Tyre inflation pressure and	tyre wear*5*6	ı	ı	ı	ı	ı	ı	I	ı	ı	ı	ı	ı
Emergency flat tyre repair I	kit (if equipped) ^{*7}	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı
Fuel lines & hoses			ı		I		ı		ı		I		ı
Brake fluid*8			R		R		R		R		R		R
Cabin air filter (if equipped	d)		R		R		R		R		R		R
Hoses and tubes for emiss	ion				ı				ı				ı
Air filter*9				R			R			R			R
Fuel filter	Except below countries			•	Rep	lace	every	120	,000	km.	'		
ruei ilitei				Rep	olace	ever	y 60,	000	km.				
Coolant*10	·	Replace at first 195,000 km or 120 months; a every 90,000 km or 60 months.							ter th	at,			

Chart symbols:

1: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

T: Tighten

R: Replace

Remarks:

- ^{*}1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- ^{*}2 Also inspect the air conditioner drive belts, if equipped.

 If the vehicle is driven primarily under any of the following conditions, inspect the drive belts at every 7,500 km or 6 months.
 - a) Driving for long periods in extremely wet or heavy rain conditions.
- ^{*}3 Inspect the battery electrolyte level and outer appearance. The sealed battery only requires an outer appearance inspection.
- *4 Inspection is only subjected for lead-acid battery.
- *5 Tyre rotation is recommended every 15,000 km.

- *6 Inspect a spare tyre if equipped.
- ^{*}7 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- ⁸ If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- ^{*}9 If the vehicle is operated in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- ^{*}10 Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.

Table 3

Vehicles utilizing the vehicle status monitor feature:

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both. Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval.

Maximum interval 15,000 km or 12 months, whichever comes first.

Manually set Next Service Distance of Vehicle Status Monitor to 10,000 km or shorter if the vehicle is driven primarily under any of the following conditions: Refer to the Information section in the Mazda Connect Owner's Manual about the manual setting procedure.

- 1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
- 2. Driving under dusty conditions.
- 3. Driving for long periods in cold temperatures or driving regularly for short distances only.
- 4. Driving under extremely high temperature conditions.
- 5. Driving continuously in mountainous regions.

Maintenance Ite	••		Num	ber o	of tim	ies, r	naint	tenar	ice w	as p	erfor	med.	
Maintenance item		1	2	3	4	5	6	7	8	9	10	11	12
Engine oil & oil filter*1		R	R	R	R	R	R	R	R	R	R	R	R
Drive belts*2		ı	ı	ı	I	ı	ı	I	ı	ı	ı	ı	ı
Coolant level		ı	ı	ı	I	ı	ı	I	ı	ı	ı	ı	ı
Battery*3*4		ı	ı	ı	I	ı	ı	I	ı	ı	ı	ı	ı
Vacuum brake booster and hose	With vacuum booster	I	ı	I	I	ı	I	I	I	I	I	ı	I
Brake and clutch fluid level		ı	I	ı	I	ı	ı	I	ı	I	ı	ı	ı
Brake lines, hoses and connec	tions	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı
Disc brakes		ı	ı	ı	ı	1	ı	ı	ı	ı	ı	ı	I
Bolts and nuts on chassis and	body	Т	Т	Т	Т	T	Т	Т	Т	Т	Т	Т	Т
Front and rear suspension, bal wheel bearing axial play	l joints and	I	ı	I	ı	ļ	I	ı	I	I	ı	I	I
Body condition (for rust, corrosion and perforation)		I	ı	ı	ı	ı	I	I	ı	ı	ı	ı	I
Tyre inflation pressure and tyre	e wear ^{*5}	1	ı	ı	I	ı	ı	I	ı	1	ı	1	I
Emergency flat tyre repair kit (if equipped) ^{*6}	ı	ı	ı	I	ı	ı	I	ı	I	ı	ı	I
Fuel lines and hoses			I		I		ı		ı		ı		I

Maintenance Item		Num	ber o	of tim	ies, r	naint	tenar	ice w	as p	erfor	med.	
Maintenance item	1	2	3	4	5	6	7	8	9	10	11	12
Steering operation and linkages		ı		ı		ı		I		ı		ı
Brake fluid* ⁷		R		R		R		R		R		R
Cabin air filter (if equipped)		R		R		R		R		R		R
Hoses and tubes for emission				ı				ı				ı
Driveshaft dust boots			ı			ı			ı			I
Air filter*8				R				R				R
Exhaust system and heat shields					I					ı		
Manual transmission oil			Rep	ace e	every	100,	,000	km o	r 5 y	ears.		
Spark plugs				Rep	lace	every	120	,000	km.			
Fuel filter	Replace every 135,000 km.											
Coolant*9	Rep	lace	at fir				or 10 or 5	-		ter th	at, e	very

Chart symbols:

1: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

T: Tighten

R: Replace

Remarks:

- ^{*}1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- Also inspect the air conditioner drive belts, if equipped. If the vehicle is driven primarily under any of the following conditions, inspect the drive belts at every 10.000 km or shorter.
 - a) Driving for long periods in extremely wet or heavy rain conditions.
- ^{*}3 Inspect the battery electrolyte level and outer appearance. The sealed battery only requires an outer appearance inspection.
- ^{*}4 Inspection is only subjected for lead-acid battery.
- ^{*}5 Inspect a spare tyre if equipped.
- ^{*}6 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- ^{*}7 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- ^{*}8 If the vehicle is driven in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- ⁹ Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.

Table 4

Vehicles utilizing the vehicle status monitor feature

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both. Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval.

For Vehicles in Burundi, Cambodia, Cameroon, Gabon, Georgia, Ghana, Mongolia, Mozambique, Paraguay and Tanzania.

Maximum interval 5,000 km (3,125 miles) or 6 months, whichever comes first.

For Vehicles in applicable countries/regions, except Burundi, Cambodia, Cameroon, Gabon, Georgia, Ghana, Mongolia, Mozambique, Paraguay Tanzania, and Petrol engine vehicles in South Africa.

Maximum interval 10.000 km (6.250 miles) or 6 months, whichever comes first.

For Petrol engine vehicles in South Africa.

Maximum interval 15,000 km (9,375 miles) or 12 months, whichever comes first.

Manually set Next Service Distance of Vehicle Status Monitor to a shorter mileage than maximum interval (50 % of maximum mileage is recommended) if the vehicle is driven primarily under any of the following conditions: Refer to the Information section in the Mazda Connect Owner's Manual about the manual setting procedure.

- 1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
- 2. Driving under dusty conditions.
- 3. Driving for long periods in cold temperatures or driving regularly for short distances only.
- 4. Driving under extremely high temperature conditions.
- 5. Driving continuously in mountainous regions.

Maintenance item		Number of times, maintenance was performed.															
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Engine oil & filter*1		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Air filter*2	Except South Africa						R						R				
	South Africa			R			R			R			R			R	
Fuel filter	Except Tai- wan	Replace every 60,000 km (37,500 miles).															
	Taiwan	Replace every 80,000 km (50,000 miles).															

				Nun	nbei	r of t	time	s, m	nain	tena	nce	was	per	forn	ned.		
Maintenance	item	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Spark plugs ^{*3}	SKYAC- TIV-G/ e-SKYACTIV G	Replace every 120,000 km (75,000 miles).															
	e-SKYACTIV X			١	Repl	ace	evei	y 64	1,00	0 kn	า (40	0,00	0 m	iles)			
Self-test with Mazda	Except below countries	I	ı	ı	ı	I	I	ı	ı	ı	ı	ı	ı	ı	ı	ı	I
Modular Diagnostic System (M-MDS)*4*5*6 SKYACTIV-G, e-SKY- ACTIV G, e-SKYACTIV X and e-SKYACTIV PHEV	odular Diagnostic stem (M-MDS)*4*5*6 CYACTIV-G, e-SKY- CTIV G, e-SKYACTIV and e-SKYACTIV Approximately Burundi/ Cambodia/ Cameroon/ Gabon/ Ghana/		1		ı		ı		I		ı		ı		1		ı
Drive belts*7			I	ı	I	I	I	ı	ı	ı	I	I	ı	I	ı	I	ı
Fuel lines and hoses			I		I		I		ı		I		I		I		ı
Vacuum brake booster and hose	r With vacuum booster		ı		ı		ı		ı		ı		ı		ı		ı
Hoses and tubes for em	ission				ı				ı				ı				ı
Exhaust system and hea	t shields	Inspect every 80,000 km (50,000 miles).															
Manual transmission oil	I			I	Repl	ace	evei	y 10	0,0	00 k	m o	r 60	mo	nths			
Self-test with Mazda Monostic System (M-MDS)	U	I	ı	ı	ı	I	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı
Coolant level		ı	1	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı
Coolant*9		Re											s) or s) o		•		ter
Battery*10*11			ı		1		ı		ı		I		I		1		ı
Brake lines, hoses and connections			ı		I		ı		I		I		ı		ı		ı
Brake & Clutch fluid level		ı	ı	ı	ı	I	ı	ı	ı	ı	I	I	ı	ı	ı	I	ı
	Except below				R				R				R				R
Brake fluid*12 Petrol engii in South Af ca			R		R		R		R		R		R		R		R
Disc brakes		I	ı	ı	ı	I	I	ı	ı	I	I	I	ı	ı	1	I	I

Inspection and Servicing/Cleaning Scheduled Maintenance

Maintenance item				Nun	nbei	of	ime	s, m	naint	tena	nce	was	per	forn	ned.		
Maintenance	itein	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	Except below		ı		ı		ı		ı		ı		ı		ı		ı
Steering operation and linkages	Petrol engine in South Afri- ca	Į	I	Į	Į	Į	Į	Į	Į	I	Į	Į	Į	Į	Į	I	I
Front and rear suspension and wheel bearing axial	. ,		ı		ı		ı		ı		ı		ı		ı		ı
Driveshaft dust boots					ı				ı				Т				1
Bolts and nuts on chass	is and body		Т		Т		T		Т		Т		Т		Т		Т
Body condition (for rust, corrosion and perforation)			ı		ı		ı		ı		I		I		ı		ı
	Except below		R		R		R		R		R		R		R		R
Cabin air filter (if equipped)	Petrol engine in South Afri- ca	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Tyre inflation pressure a wear*13	nd tyre	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	I	ı
	Except below	N Rotate every 10,000 km (6,250 miles).															
Tyre rotation	Petrol engine in South Afri- ca																
Emergency flat tyre re-	Except below		ı		ı		Т		ı		П		Т		ı		1
pair kit (if equip- ped)*14	Petrol engine in South Afri- ca	ı	I	I	I	ı	ı	I	I	I	I	ı	I	I	I	Ι	I
Bonnet striker		ı	I	I	I	ı	ı	ı	I	I	ı	ı	ı	I	I	I	Ι
Function of all lights		ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	I	ı	1

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

C: Clean

T: Tighten

R: Replace

Remarks:

- *1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- *2 If the vehicle is driven in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.

- ^{*}3 In the countries below, inspect the spark plugs at every 10,000 km (6,250 miles) or 1 year before replacing them at the said interval.
 - Algeria, Angola, Bahrain, Bolivia, Burundi, B. Virgin, Cambodia, Cameroon, Chile, Costa Rica, Curacao, El Salvador, Ethiopia, Gabon, Georgia, Ghana, Guatemala, Haiti, Honduras, Hong Kong, Iran, Ivory Coast, Jordan, Kenya, Macau, Madagascar, Malaysia, Mongolia, Mozambique, Myanmar, Nigeria, Nicaragua, Oman, Panama, Papua New Guinea, Paraguay, Peru, Senegal, Seychelles, Syria, Tanzania, The Philippines, UAE, Vietnam, Zaire, Zimbabwe
- *4 If DTC P1200 is stored, clean the fuel system by using Mazda genuine deposit cleaner. If the required tool (M-MDS) is not available, clean the fuel system by using Mazda genuine deposit cleaner without performing self-test.
 - Using non-genuine deposit cleaner could cause internal damage to the fuel system.
- ^{*}5 If the vehicle is driven primarily under any of the following conditions, perform "Self-test with Mazda Modular Diagnostic System (M-MDS)" at every 5,000 km.
 - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
 - b) Driving under extremely high temperature conditions.
- *6 Applicable countries are as follows:
 - SKYACTIV-G, e-SKYACTIV G and e-SKYACTIV PHEV: Algeria, Angola, Antigua, Aruba, Bahrain, Barbados, Bermuda, Bolivia, Botswana, Brunei, Burundi, Cambodia, Cameroon, Colombia, Common Wealth of Dominica, Curacao, Ecuador, El Salvador, Ethiopia, Gabon, Ghana, Grenada, Haiti, Honduras, Indonesia, Iran, Iraq, Ivory Coast, Jordan, Kenya, Kuwait, Laos, Lesotho, Libya, Macau, Madagascar, Malaysia, Marshall islands, Mongolia, Morocco, Myanmar, Namibia, Nicaragua, Nigeria, Oman, Paraguay, Peru, Qatar, Senegal, Seychelles, South Africa, Sri Lanka, St. Lucia, St. Martin, St. Vincent, Swaziland, Syria, Tanzania, The Philippines, Trinidad and Tobago, Tunisia, USTT, Vanuatu, Vietnam, Zimbabwe
 - e-SKYACTIV X: Chile, Hong Kong, Iran, Macau, Mauritius, New Caledonia, Papua New Guinea, Saudi Arabia, Singapore, Thailand, Trinidad and Tobago, UAE
- ^{*}7 Also inspect the air conditioner drive belts, if equipped.

 If the vehicle is driven primarily under any of the following conditions, inspect the drive belts more often than the recommended intervals.
 - a) Driving for long periods in extremely wet or heavy rain conditions.
- ^{*}8 For software traceability to comply with Intelligent Speed Assistance (ISA) requirements, if vehicles equipped with ISA.
- ^{*}9 Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *10 Inspect the battery electrolyte level and outer appearance. The sealed battery only requires an outer appearance inspection.
- *11 Inspection is only subjected for lead-acid battery.
- *12 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- *13 Inspect a spare tyre if equipped.
- *14 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.

Table 5

Vehicles utilizing the vehicle status monitor feature

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both. Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval. Maximum interval 10,000 km (6,250 miles) or 12 months, whichever comes first.

Manually set Next Service Distance of Vehicle Status Monitor to a shorter mileage than maximum interval (50 % of maximum mileage is recommended) if the vehicle is driven primarily under any of the following conditions: Refer to the Information section in the Mazda Connect Owner's Manual about the manual setting procedure.

- 1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
- 2. Driving under dusty conditions.
- 3. Driving for long periods in cold temperatures or driving regularly for short distances only.
- 4. Driving under extremely high temperature conditions.
- 5. Driving continuously in mountainous regions.

Maintenance	it a ma			Nun	nbei	of	ime	s, m	aint	ena	nce	was	per	forn	ned.		
Maintenance	Maintenance item			3	4	5	6	7	8	9	10	11	12	13	14	15	16
Engine oil & filter*1		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Air filter*2				R			R			R			R			R	
Fuel filter				ı	Repl	ace	ever	y 60	,00	0 km	າ (37	7,50	0 m	iles)			
Spark plugs*3				R	epla	ice e	every	/ 12	0,00	00 kr	n (7	5,00	00 m	niles).		
Drive belts*4		ı	ı	I	I	I	ı	ı	I	I	ı	ı	ı	I	I	1	1
Coolant level		Ι	ı	I	ı	ı	Ι	ı	I	ı	T	Ι	ı	I	ı	I	I
Fuel lines and hoses		Ι	ı	I	I	I	Ι	ı	I	I	I	I	ı	I	I	ı	I
Vacuum brake booster and hose	With vacuum booster	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	1	1
Hoses and tubes for em	ission		ı		I		ı		I		ı		ı		I		I
Exhaust system and hea	t shields	Inspect every 80,000 km (50,000 miles).															
Manual transmission oil				ı	Repl	ace	ever	y 10	0,0	00 k	m o	r 60	mo	nths			
Coolant*5									•		000 r 500				,		ter
Battery ^{*6*7}		Ι	ı	I	I	1	1	ı	I	I	ı	1	ı	I	I	ı	ı
Brake lines, hoses and c	onnections	1	Ι	I	I	1	1	Ι	I	I	ı	1	Ι	Ι	I	1	1
Brake & Clutch fluid leve	el	ı	ı	I	I	I	I	ı	I	I	I	I	ı	I	I	I	I

Maintenance item			Nun	nbei	r of t	ime	s, m	aint	tena	nce	was	per	forn	ned.		
Maintenance item	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Brake fluid ^{*8}		R		R		R		R		R		R		R		R
Disc brakes	ı	ı	I	I	I	ı	ı	ı	ı	I	I	ı	ı	1	ı	I
Steering operation and linkages	ı	I	Ι	ı	I	I	I	ı	ı	I	I	I	I	1	-	ı
Front and rear suspension, ball joints and wheel bearing axial play	ı	ı	ı	ı	ı	ı	ı	ı	ı	I	ı	ı	ı	ı	I	I
Driveshaft dust boots		1		ı		ı		ı		ı		1		1		I
Bolts and nuts on chassis and body	Т	Т	T	Т	Т	Т	Т	Т	Т	Т	Т	Т	Т	Т	Т	Т
Body condition (for rust, corrosion and perforation)	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı	I	I
Cabin air filter (if equipped)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Tyre inflation pressure and tyre wear*9	I	I	1	-	I	I	I	ı	ı	I	I	I	I	1	Ι	I
Tyre rotation				Rot	ate	ever	y 10	,00	0 km	า (6,	250	mile	es).			
Emergency flat tyre repair kit (if equipped)*10	ı	ı	ı	ı	ı	ı	ı	ı	ı	I	ı	ı	ı	ı	I	1
Bonnet striker	I	I	1	I	I	I	I	ı	ı	I	I	I	ı	1	I	I
Function of all lights	I	I	Ι	I	I	I	I	ı	ı	I	I	I	ı	1	I	I

Chart symbols:

1: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

C: Clean
T: Tighten
R: Replace

Remarks:

- ¹1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- ² If the vehicle is driven in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- ^{*}3 For Chile, inspect the spark plugs at every 10,000 km (6,250 miles) or 1 year before replacing them at the said interval.
- ^{*}4 Also inspect the air conditioner drive belts, if equipped.

 If the vehicle is driven primarily under any of the following conditions, inspect the drive belts more often than the recommended intervals.
 - a) Driving for long periods in extremely wet or heavy rain conditions.
- ^{*}5 Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.
- ^{*}6 Inspect the battery electrolyte level and outer appearance. The sealed battery only requires an outer appearance inspection.

Inspection and Servicing/Cleaning Scheduled Maintenance

- *7 Inspection is only subjected for lead-acid battery.
- *8 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- *9 Inspect a spare tyre if equipped.
- *10 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.

Daily Inspection

We highly recommend that these items be inspected before driving.

- Engine Oil Level (page 9-32)
- · Coolant Level (page 9-36)
- · Brake Fluid Level (page 9-37)
- · Washer Fluid Level (page 9-38)
- Lead-acid Battery Maintenance (page 9-39)
- Tyre Inflation Pressure (page 9-53)

Improper or incomplete service may result in problems. This section gives instructions only for items that are easy to perform.

Several procedures can be done only by a qualified service technician with special tools.

Improper do-it yourself maintenance during the warranty period may affect warranty coverage. For details, read the separate Mazda Warranty statement provided with the vehicle. If you are unsure about any servicing or maintenance procedure, have it done by an expert repairer (we recommend an Authorised Mazda Repairer).

There are strict environmental laws regarding the disposal of waste fluids. Please dispose of your waste properly and with due regard to the environment.

Entrust the oil and fluid changes of your vehicle to an expert repairer (we recommend an Authorised Mazda Repairer).

Warnings and Cautions for Daily Inspection

⚠ WARNING

Do not perform maintenance work if you lack sufficient knowledge and experience or the proper tools and equipment to do the work. Have maintenance work done by a qualified technician.

Performing maintenance work on a vehicle is dangerous if not done properly. You can be seriously injured while performing some maintenance procedures.

If you must run the engine while working under the bonnet, make certain that you remove all jewellery (especially rings, bracelets, watches, and necklaces) and all neckties, scarves, and similar loose clothing before getting near the cooling fan which may turn on unexpectedly. Working under the bonnet with the engine operating is dangerous. It becomes even more dangerous when you wear jewellery, loose clothing or have long hair or a long beard. Either can become entangled in moving parts and result in injury.

Daily Inspection

Pull over to a safe location, then switch the vehicle power off and make sure the fan is not running before attempting to work near the cooling fan.

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.

Do not leave items in the motor compartment.

After you have finished checking or doing servicing in the engine compartment, do not forget and leave items such as tools or rags in the motor compartment. Tools or other items left in the engine compartment could cause the engine damage or a fire leading to an unexpected accident.

A CAUTION


When using a chassis roller, turn the following systems off to prevent them from mis-operating while the vehicle is running on the chassis roller.

- Mazda Radar Cruise Control (MRCC)
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
- Cruising & Traffic Support (CTS)
- Smart Brake Support (SBS)


Checking the Inspection Locations and Inspection Items

The position and shape of each part may differ slightly depending on the specification.

SKYACTIV-G and e-SKYACTIV G

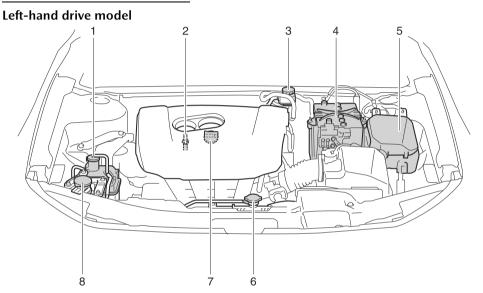


Right-hand drive model

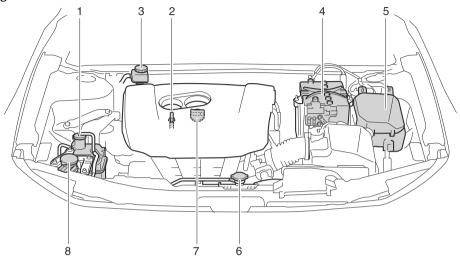

- Engine coolant reservoir
 Engine oil dipstick
 Brake/Clutch fluid reservoir
 Lead-acid battery
 Fuse block


- 6. Cooling system cap7. Engine oil-filler cap8. Windscreen washer fluid reservoir

e-SKYACTIV X

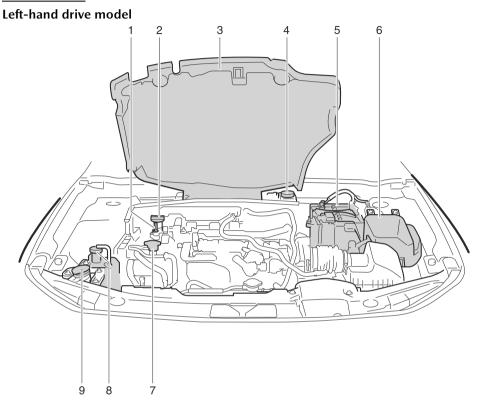

Inspection and Servicing/Cleaning Engine Compartment Inspection


Right-hand drive model

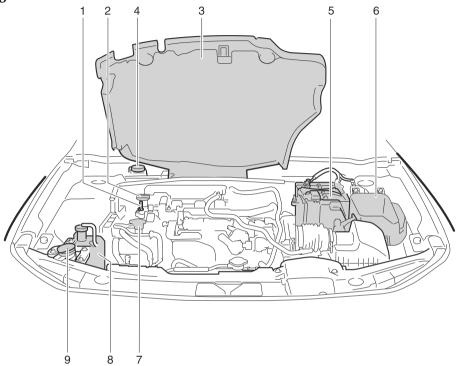


- Engine oil dipstick
 Engine oil-filler cap
 Engine cover
 Brake/Clutch fluid reservoir
 Lead-acid battery
- 6. Fuse block
- Cooling system cap
 Engine coolant reservoir
 Windscreen washer fluid reservoir

Opening the engine cover (e-SKYACTIV X)


1. Open the bonnet (page 4-24).

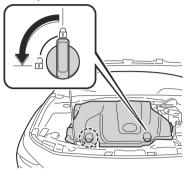

3.

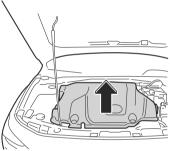

4.

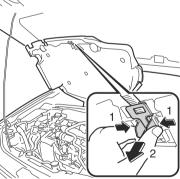

5.







Remove the strap when opening/closing the bonnet. If the bonnet is opened/closed while the strap is engaged, the strap or hook may be damaged.

Closing the engine cover (e-SKYACTIV X)


1.

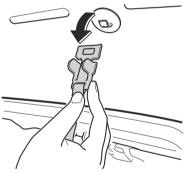


2. Pinch the strap and press it in until a click sound is heard, and store.

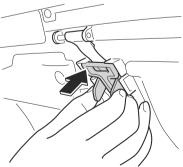

3.

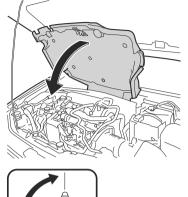

4.

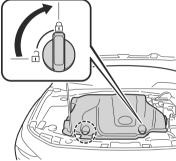


5. Make sure that the engine cover is securely closed.

Inspecting Engine Oil


- 1. Be sure the vehicle is on a level surface.
- 2. Warm up the engine to normal operating temperature.
- 3. Turn it off and wait at least 5 minutes for the oil to return to the sump.
- 4. (e-SKYACTIV X)
- Open the engine cover (page 9-25).

 5. Pull out the dipstick, wipe it clean, and reinsert it fully. SKYACTIV-G and e-SKYACTIV G

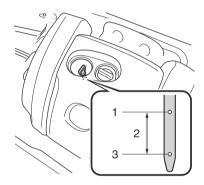

- 1. MAX
- 2. OK
- 3. MIN

e-SKYACTIV X

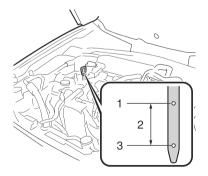

- 1. MAX
- 2. OK
- 3. MIN

Pull it out again and examine the level.
 The level is normal if it is between the MIN and MAX marks.
 If it is near or below MIN, add enough oil to bring the level to MAX.

A CAUTION

Do not overfill the engine oil. This may cause engine damage.

- 7. Make sure the O-ring on the dipstick is positioned properly before reinserting the dipstick.
- 8. Reinsert the dipstick fully.

Engine Compartment Inspection

Recommended Oil

In order to keep the maintenance interval (page 9-5) and to protect the engine from damage caused by poor lubrication, it is vitally important to make use of engine oil with the correct specification. Do not use oils which do not meet the following specifications or requirements. Use of unsuitable oil may lead to engine damage which is not covered by the Mazda Warranty.

Engine oil viscosity, or thickness, has an effect on fuel economy and cold-weather operation (starting and oil flow).

Low-viscosity engine oils can provide improved fuel economy and cold-weather performance.

When choosing an oil, consider the temperature range your vehicle will operate in before the next oil change.

Then select the recommended viscosity from the chart.


SKYACTIV-G and e-SKYACTIV G

(Europe and Taiwan)

Temperatur	Temperature Range SAE Viscosity Numbers										
Grade		°C -40 -30 -20 -10 0 10 20 30 40 °F -40 -20 0 20 40 60 80 100									
Recommended Oils											
Mazda Original Oil Supra-X 0W-20)	0W-20									
Mazda Original Oil Ultra 5W-30		5W-30									
A	lternative	Oil Quality									
API SN or higher	0W-20	0W-20									
Art 514 of higher	5W-30	5W-30									
ACEA A5/B5	5W-30	5W-30									


^{*1} Use API SM or higher in Kazakhstan.

(Except Europe and Taiwan)

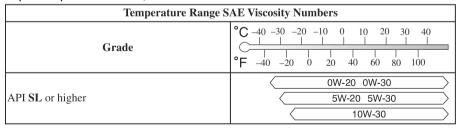

e-SKYACTIV X

(Europe and Taiwan)

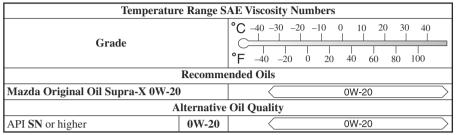

(Except Europe and Taiwan)

Temperature Range SAE Viscosity Numbers							
Grade	°C -40 -30 -20 -10 0 10 20 30 40 °F -40 -20 0 20 40 60 80 100						
API SN or higher	0W-20 5W-30						



➤ Using oils of viscosity besides those recommended for specific temperature ranges could result in engine damage.

NOTE

It is normal for all engines to consume engine oil under normal driving conditions. Engine oil consumption may be as high as 0.8 L/1,000 km (1 L/800 miles). This may be as a result of evaporation, internal ventilation or burning of the lubricating oil in the working engine. Oil consumption may be higher when the engine is new due to the running-in process. Oil consumption is also dependant on engine speed and engine load. Under extreme driving conditions, oil consumption may be higher.

Inspecting the Coolant

♠ WARNING

Do not use a match or live flame in the engine compartment. DO NOT ADD COOLANT WHEN THE ENGINE IS HOT.

A hot engine is dangerous. If the engine has been running, parts of the engine compartment can become very hot. You could be burned. Carefully inspect the engine coolant in the coolant reservoir, but do not open it.

Do not touch rotating parts such as the fan belt when inspecting inside the engine compartment.

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.

Do not remove either cooling system cap when the engine and radiator are hot.

When the engine and radiator are hot, scalding coolant and steam may shoot out under pressure and cause serious injury.


NOTE

If the replacement is not done using the correct procedure indicated in the service manual, it could cause an engine malfunction. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.

Inspect the antifreeze protection and coolant level in the coolant reservoir at least once a year—at the beginning of the winter season—and before travelling where temperatures may drop below freezing.

Inspect the condition and connections of all cooling system and heater hoses. Replace any that are swollen or deteriorated.

The coolant should be at full in the radiator and between the FULL and LOW marks on the coolant reservoir when the engine is cool.

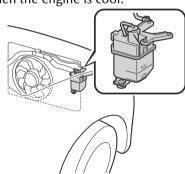

If it is at or near the LOW position, add enough coolant to the coolant reservoir to provide freezing and corrosion protection and to bring the level to FULL.

Securely tighten the coolant reservoir tank cap after adding coolant.

A CAUTION

- ➤ Radiator coolant will damage paint. Rinse it off quickly if spilled.
- ➤ If the "FL22" mark is shown on or near the cooling system cap, use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.



If the coolant reservoir is empty or new coolant is required frequently, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Inspecting the Brake/ Clutch Fluid

▲ WARNING

If the brake/clutch fluid level is low, have the brakes inspected.

A low brake/clutch fluid level is dangerous. A low level could indicate brake lining wear or a brake system leak which could cause the brakes to fail and lead to an accident.

The brakes and clutch draw fluid from the same reservoir.

Inspect the fluid level in the reservoir regularly. It should be kept between the MAX and MIN lines.

The level normally drops with accumulated distance, a condition associated with wear of brake and clutch linings. If it is excessively low, have the brake/clutch system inspected by an expert repairer (we recommend an Authorised Mazda Repairer).


The position of the brake fluid reservoir differs depending on whether the vehicle is a left-hand or right-hand drive.

Refer to Checking the Inspection Locations and Inspection Items on page 9-25.


Engine Compartment Inspection

Brake fluid reservoir

SKYACTIV-G

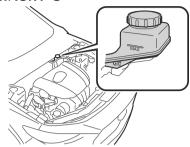

e-SKYACTIV G and e-SKYACTIV X

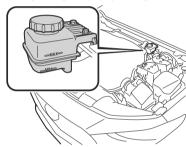

Replenishing Windscreen Washer Fluid

▲ WARNING

Use only windscreen washer fluid or plain water in the reservoir.


Using radiator antifreeze as washer fluid is dangerous. If sprayed on the windscreen, it will dirty the windscreen, affect your visibility, and could result in an accident.



Do not use soapy water or engine antifreeze in the reservoir as it could cause paint discolouration or pump damage.

Add washer fluid under any of the following conditions.

- · The top of the fluid level is low.
- The Low Washer Fluid Level Warning Indication/Warning Light (if equipped) turns on.
- The top of the fluid level is lower than E (if equipped).

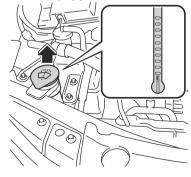

Use plain water if washer fluid is unavailable.

But use only washer fluid in cold weather to prevent it from freezing.

Inspecting Lead-acid Battery



Read the following precautions carefully before using the lead-acid battery or inspecting to ensure safe and correct handling.

Always wear eye protection when working near the lead-acid battery.

Working without eye protection is dangerous. Lead-acid battery fluid contains SULPHURIC ACID which could cause blindness if splashed into your eyes. Also, hydrogen gas produced during normal lead-acid battery operation, could ignite and cause the lead-acid battery to explode.

Wear eye protection and protective gloves to prevent contact with lead-acid battery fluid. Spilled lead-acid battery fluid is dangerous.

Lead-acid battery fluid contains SULPHURIC ACID which could cause serious injuries if it gets in eyes, or on the skin or clothing. If this happens, immediately flush your eyes with water for 15 minutes or wash your skin thoroughly and get medical attention.

on the skin.

Engine Compartment Inspection

Always keep lead-acid batteries out of the reach of children. Allowing children to play near lead-acid batteries is dangerous. Lead-acid battery fluid could cause serious injuries if it gets in the eyes or


Keep flames and sparks away from lead-acid battery cells and do not allow metal tools to contact the positive (+) or negative (-) terminal of the lead-acid battery when working near a lead-acid battery. Do not allow the positive (+) terminal to contact the vehicle body. Flames and sparks near lead-acid battery cells are dangerous. Hydrogen gas, produced during normal lead-acid battery operation, could ignite and cause the lead-acid battery to explode. An exploding lead-acid battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from lead-acid battery cells.

Keep all flames and sparks away from lead-acid battery cells because hydrogen gas is produced from lead-acid battery cells while charging the lead-acid battery or adding lead-acid battery fluid.

Flames and sparks near lead-acid battery cells are dangerous. Hydrogen gas, produced during normal lead-acid battery operation, could ignite and cause the lead-acid battery to explode. An exploding lead-acid battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from lead-acid battery cells.

Before performing lead-acid battery maintenance, remove the lead-acid battery cover.

Removing the Lead-acid Battery Cover

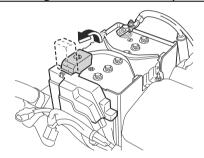


Maintaining Lead-acid Battery

To get the best service from a lead-acid battery:


- · Keep it securely mounted.
- · Keep the top clean and dry.
- Keep terminals and connections clean, tight, and coated with petroleum jelly or terminal grease.
- Rinse off spilled electrolyte immediately with a solution of water and baking soda.

 If the vehicle will not be used for an extended time, disconnect the lead-acid battery leads and charge the lead-acid battery every 6 weeks.

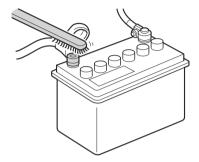

Inspecting Electrolyte Level

A low level of electrolyte fluid will cause the battery to discharge quickly. Inspect the electrolyte level at least once a week. If it is low, contact an expert repairer (we recommend an Authorised Mazda Repairer) for electrolyte level.

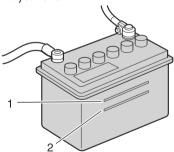

- 1. Upper level
- 2. Lower level

Replacing lead-acid battery

Contact an expert repairer (we recommend an Authorised Mazda Repairer) for lead-acid battery replacement.

Replacing the Fuses


Replacing the fuses on the vehicle's left side

If the electrical system does not work, first inspect the fuses on the vehicle's left side.


- Make sure the vehicle power is switched off, and other switches are off.
- 2. Open the fuse panel cover.



3. Pull the fuse straight out with the fuse puller provided on the fuse block located in the engine compartment.

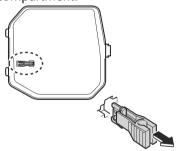

4. Inspect the fuse and replace it if it is blown.

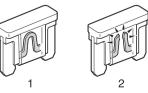

1. Normal

Engine Compartment Inspection

2. Blown

5. Insert a new fuse of the same amperage rating, and make sure it fits tightly. If it does not fit tightly, have an expert install it. Consult an expert repairer (we recommend an Authorised Mazda Repairer). If you have no spare fuses, borrow one of the same rating from a circuit not essential to vehicle operation, such as the audio or accessory socket circuit.




Always replace a fuse with a genuine Mazda fuse or equivalent of the same rating. Otherwise, you may damage the electric system.

6. Reinstall the cover and make sure that it is securely installed.


Replacing the fuses under the bonnet

If the headlights or other electrical components do not work and the fuses in the cabin are normal, inspect the fuse block under the bonnet. If a fuse is blown, it must be replaced. Follow these steps:

- Make sure the vehicle power is switched off, and other switches are off.
- Remove the fuse block cover.

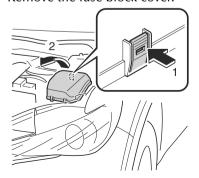

3. If any fuse but the MAIN fuse is blown, replace it with a new one of the same amperage rating.

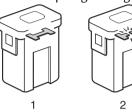

- 1. Normal
- 2. Blown



Do not replace the main fuse by yourself. Have an expert repairer (we recommend an Authorised Mazda Repairer) perform the replacement.

Replacing the fuse by yourself is dangerous because the MAIN fuse is a high current fuse. Incorrect replacement could cause an electrical shock or a short circuit resulting in a fire.


Do not replace the main fuse and multiplex slow blow fuse by yourself. Have an Authorised Mazda Repairer perform the replacement.

Replacing these fuses by yourself is dangerous because they are high current fuses. Incorrect replacement could cause an electrical shock or a short circuit resulting in a fire.

4. Reinstall the cover and make sure that it is securely installed.

Fuse Panel Description

Fuse block (Engine compartment)

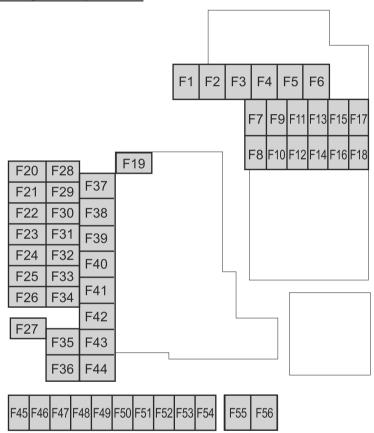

No.	FUSE RAT- ING	PROTECTED COMPONENT
F1	_	_
F2	20 A	Windscreen wiper de-icer*
F3	30 A	Engine control system*/Injector*
F4	20 A	S-VT
F5	40 A	Engine control system
F6	20 A	S-VT [*]

Inspection and Servicing/Cleaning Engine Compartment Inspection


No.	FUSE RAT- ING	PROTECTED COMPONENT
F7	20 A	Fuel pump
F8	15 A	Engine control system
F9	15 A	Transmission control system*
F10	15 A	Engine control system
F11	7.5 A	Air conditioner
F12	15 A	Engine control system
F13	15 A	NOx sensor*
F14	20 A	Front seat warmer
F15	20 A	Headlight washer*
F16	15 A	For protection of various circuits
F17	_	_
F18	15 A	Accessory sockets
F19	60 A	Power steering system
F20	15 A	Headlight (LH) 1
F21	15 A	Headlight (RH) 1
F22	15 A	Keyless system
F23	30 A	ABS, Dynamic stability control system
F24	15 A	Headlight (LH) 2
F25	15 A	Headlight (RH) 2
F26	7.5 A	On board diagnostics
F27	25 A	For protection of various circuits
F28	25 A	For protection of various circuits
F29	15 A	Windscreen washer
F30	_	_
F31	15 A	Horn
F32	15 A	Headlights
F33	_	_
F34	10 A	i-ACTIVSENSE
F35	50A	ABS, Dynamic stability control system
F36	_	_
F37	40 A	Rear window defogger
F38	50 A	For protection of various circuits
F39	_	_

Engine Compartment Inspection

No.	FUSE RAT- ING	PROTECTED COMPONENT
F40	40 A	Air conditioner
F41	_	_
F42	20 A	Windscreen wiper
F43	30 A	Cooling fan*
F44	30 A	Starter
F45	10 A	Engine control system
F46	15 A	Audio
F47	15 A	For protection of various circuits
F48	7.5 A	Air bag
F49	15 A	Instrument cluster
F50	15 A	Room light
F51	25 A	Audio
F52	10 A	Sunroof*
F53	15 A	Engine control system
F54	15 A	i-ACTIVSENSE
F55	50 A	For protection of various circuits*
F56	50 A	_

Inspection and Servicing/Cleaning Engine Compartment Inspection

Fuse block (Left side)

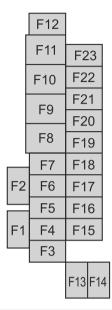

No.	FUSE RAT- ING	PROTECTED COMPONENT
F1	_	_
F2	_	_
F3	_	_
F4	15 A	Power door locks (Driver)
F5	15 A	Power door locks (Passenger)
F6	_	_
F7	25 A	Power liftgate*
F8	_	_
F9	30 A	Power windows (Driver)
F10	30 A	Power windows (Passenger)
F11	30 A	Power seat (Driver)*
F12	_	_
F13	15 A	Audio
F14	_	-
F15	15 A	Liftgate lock

Engine Compartment Inspection

No.	FUSE RAT- ING	PROTECTED COMPONENT
F16	15 A	Illumination
F17	10 A	Brake lights
F18	10 A	Reverse lights
F19	10 A	Rear direction indicator lights
F20	10 A	Tail lights
F21	10 A	Tail lights
F22	7.5 A	Electric steering lock
F23	_	_

Inspecting Body Lubrication

All moving points of the body, such as door and bonnet hinges and locks, should be lubricated each time the engine oil is changed. Use a non-freezing lubricant on locks during cold weather.


Make sure the bonnet's secondary latch keeps the bonnet from opening when the primary latch is released.

Checking the Inspection Locations and Inspection Items

Front



Rear

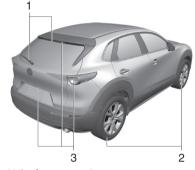

- 1. Windscreen wipers
- 2. Tyres
- 3. Light bulbs

Replacing Windscreen Wiper Blade Rubbers

CAUTION

- ➤ Hot waxes applied by automatic car washers have been known to affect the wiper's ability to clean windows.
- An operation malfunction may occur or the wiper effectiveness may be reduced if a water-repellent coating is used.
- ➤ To prevent damage to the wiper blades, do not use petrol, paraffin, paint thinner, or other solvents on or near them.
- ➤ When the wiper lever is in the AUTO position and the vehicle power is switched ON, the wipers may move automatically in the following cases:
 - ➤ If the windscreen above the rain sensor is touched.
 - ➤ If the windscreen above the rain sensor is wiped with a cloth.
 - ➤ If the windscreen is struck with a hand or other object.
 - If the rain sensor is struck with a hand or other object from inside the vehicle.

Be careful not to pinch hands or fingers as it may cause injury, or damage the wipers. When washing or servicing the vehicle, make sure the wiper lever is in the OFF position.

➤ Before lifting the windscreen wiper blades off the windscreen, always follow the procedure for moving the windscreen wiper blades. Otherwise, a wiper blade, wiper arm, or the bonnet could be damaged.

Vehicle Exterior Inspection

Contamination of either the windscreen or the blades with foreign matter can reduce wiper effectiveness. Common sources are insects, tree sap, and hot wax treatments used by some commercial car washes.

If the blades are not wiping properly, clean the window and blades with a good cleaner or mild detergent; then rinse thoroughly with clean water. Repeat if necessary.

NOTE


You can replace the wiper blades yourself, however you cannot replace the wiper arms.


If you want to replace the wiper arms, consult an expert repairer (we recommend an Authorised Mazda Repairer).


Replacing Front Windscreen Wiper Blade rubbers

- Move the wipers to the service positions using the following procedure.
 - a) Switch the vehicle power ON.
 - b) Switch the vehicle power OFF.
 - c) Press up the wiper switch to the MIST position 2 times within 30 seconds after switching the vehicle power OFF.
 When the procedure is completed, the wipers operate and they stop at the service positions.
- 2. Raise the wiper arms.


3. Slide the blade component in the direction of the arrow while pressing the wiper arm tab to remove the blade component from the wiper arm.

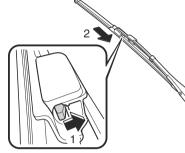


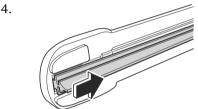

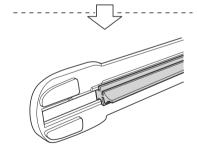


7.

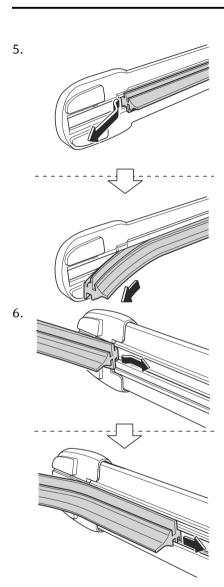

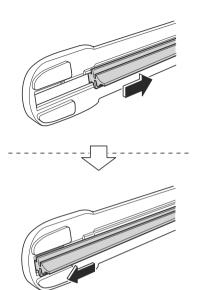

8. Make sure that the blade rubber is correctly installed to the blade holder.

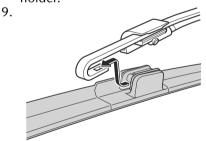

10. Slowly lower the wiper arms onto the windscreen.



To prevent damage to the windscreen let the wiper arm down easily, do not let it slap down on the windscreen.

- 11. Move the wipers to their initial positions using the following procedure.
 - a) Make sure that the wipers are set on the windscreen.

Vehicle Exterior Inspection


- b) Switch the vehicle power ON.
- c) Press up the wiper switch to the MIST position 2 times.

Replacing Rear Windscreen Wiper Blade rubber



To prevent damage to the wiper arm and other components, do not move the wiper by hand.


1. Raise the wiper arm and rotate the wiper blade to the right until it unlocks, then remove the blade.

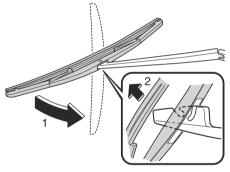

A CAUTION

To prevent damage to the rear window, do not let the wiper arm fall on it.

2.

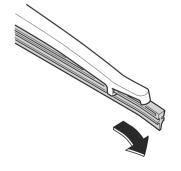


3. Remove the metal stiffeners from the blade rubber and install them in the new blade rubber.





Do not bend or discard the stiffeners. You need to use them again.

4.

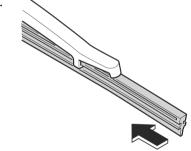

5. Install the blade assembly in the reverse order of removal.

Inspecting the Tyres

About Tyres

For reasons of proper performance, safety, and better fuel economy, always maintain recommended tyre inflation pressures and stay within the recommended load limits and weight distribution.

MARNING

Do Not Use Tyres Other Than The Specified Size. In Addition, Do Not Mix Different Types Of Tyres.

Using tyres with sizes other than the specified size or mixing different tyre types is dangerous. It could compromise the vehicle's driveability, resulting in an accident. In addition, it could be in violation of the law. Use the tyre size indicated on the label applied to the door frame of the driver's door while the door is open. Use only the same type tyres on all four wheels.

Inspecting Tyre Inflation Pressure



Always inflate the tyres to the correct pressure.

Overinflation or underinflation of tyres is dangerous. Adverse handling or unexpected tyre failure could result in a serious accident.

Refer to Tyres on page 10-90.

Use only a Mazda-genuine tyre valve cap.

Use of a non-genuine part is dangerous as the correct tyre air pressure cannot be maintained if the tyre valve becomes damaged. If the vehicle is driven under this condition, the tyre air pressure will decrease which could result in a serious accident. Do not use any part for the tyre valve cap that is not a Mazda-genuine part.

Inspect all tyre pressures monthly (including the spare*) when the tyres are cold. Maintain recommended pressures for the best ride, handling, and minimum tyre wear.

Refer to the specification charts (page 10-90).

NOTE

- Underinflation or overinflation can cause a harsh ride, reduced fuel economy, a greater possibility of damage from road hazards, uneven and accelerated tyre wear, and poor sealing of the tyre bead, which will deform the wheel and cause separation of tyre from rim.
- Keep your tyre pressure at the correct levels. If one frequently needs inflating, have it inspected.

Inspecting Temporary Spare Tyre*

Inspect the temporary spare tyre at least monthly to make sure it is properly inflated and stored.



➤ Do not use your temporary spare tyre rim with a snow tyre or a conventional tyre. Neither will properly fit and could damage both tyre and rim.

Vehicle Exterior Inspection

- ➤ The temporary spare tyre has a tread life of less than 5,000 km (3,000 miles). The tread life may be shorter depending on driving conditions.
- The temporary spare tyre is for limited use, however, if the tread wear solid-band indicator appears, replace the tyre with the same type of temporary spare (page 9-55).

The temporary spare tyre is easier to handle because of its construction which is lighter and smaller than a conventional tyre. This tyre should be used only for an emergency and only for a short distance.

Use the temporary spare tyre only until the conventional tyre is repaired, which should be as soon as possible. Refer to Tyres on page 10-90.

NOTE

The temporary spare tyre condition gradually deteriorates even if it has not been used.

Rotating the Tyres

⚠ WARNING

Rotate tyres periodically.


Irregular tyre wear is dangerous. To equalize tread wear for maintaining good performance in handling and braking, rotate the tyres periodically or sooner if irregular wear develops. Please refer to Scheduled maintenance for your tyre rotation interval.

During rotation, inspect them for correct balance.

NOTE

(Without temporary spare tyre)

Because your vehicle is not equipped with a spare tyre, you cannot do a tyre rotation safely with the jack that comes with your vehicle. Have an expert repairer (we recommend an Authorised Mazda Repairer) perform tyre rotation.

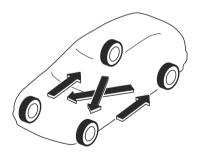

Do not include (TEMPORARY USE ONLY) spare tyre in rotation. Also, inspect them for uneven wear and damage. Abnormal wear is usually caused by one or a combination of the following:

· Incorrect tyre pressure

- · Improper wheel alignment
- · Out-of-balance wheel
- · Severe braking

After rotation, inflate all tyre pressures to specification (page 10-90) and inspect the wheel nuts for tightness.



Rotate unidirectional tyres and radial tyres that have an asymmetrical tread pattern or studs only from front to rear, not from side to side. Tyre performance will be reduced if rotated from side to side.

Replacing a Tyre or a Wheel

♠ WARNING

Always use tyres that are in good condition.

Driving with worn tyres is dangerous. Reduced braking, steering, and traction could result in an accident.

Replace all four tyres at the same time.

Replacing just one tyre is dangerous. It could cause poor handling and poor braking resulting in loss of vehicle control. Mazda strongly recommends that you replace all four tyres at the same time.

Always use wheels of the correct size on your vehicle.

Using a wrong-sized wheel is dangerous. Braking and handling could be affected, leading to loss of control and an accident.

A CAUTION


A wrong-sized wheel may adversely affect:

- ➤ Tyre fit
- >Wheel and bearing life
- ▶ Ground clearance
- ➤ Snow-chain clearance
- ➤ Speedometer calibration
- ➤ Headlight aim
- ➤ Bumper height
- ➤ Tyre Pressure Monitoring System*

If a tyre wears evenly, a wear indicator will appear as a solid band across the tread.

Vehicle Exterior Inspection

Replace the tyre when this happens.

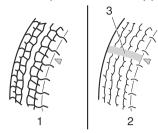

- 1. New tread
- 2. Worn tread
- 3. Tread wear indicator

You should replace the tyre before the band crosses the entire tread.

Inspecting the Emergency Flat Tyre Repair Kit*

Inspect the emergency flat tyre repair kit at regular intervals.

- · Check the tyre sealant period of effective use.
- · Check the operation of the tyre compressor.


NOTE

The tyre sealant has a period of effective use. Check the period of effective use indicated on the bottle label and do not use it if it has expired. Have the tyre sealant replaced at an expert repairer (we recommend an Authorised Mazda Repairer) before the period of effective use has expired.

Replacing Light Bulbs

Front

Type A

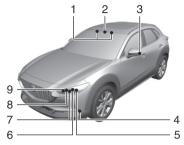

- 1. Vanity mirror lights*
- 2. Front overhead lights/Front map lights
- 3. Side direction indicator lights
- 4. Front direction indicator lights/ Position lights
- 5. Running lights/Headlights (Low
- 6. Headlights (High/Low beam)
- 7. Running lights
- 8. Headlights (High beam)*
- 9. Headlights (Wide-range low beam)*


Type B



- 1. Vanity mirror lights*
- 2. Front overhead lights/Front map
- 3. Side direction indicator lights
- 4. Running lights*

- 5. Front direction indicator lights/ Position lights
- 6. Headlights (High/Low beam)

Rear

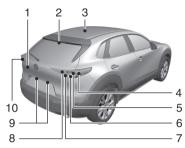

- 1. Luggage compartment light
- 2. High-mount brake light
- 3. Rear overhead light
- 4. Tail lights*
- 5. Rear direction indicator lights
- 6. Brake lights/Tail lights
- 7. Tail lights (Liftgate side)*8. Reverse lights
- 9. Number plate lights 10.Rear fog light*



When removing the lens or lamp unit using a flathead screwdriver, make sure that the flathead screwdriver does not contact the interior terminal. If the flathead screwdriver contacts the terminal, a short circuit may occur.

NOTE

- · When replacing a bulb, contact an expert repairer (we recommend an Authorised Mazda Repairer).
- · Use the protective cover and carton for the replacement bulb to dispose of the old bulb promptly and out of the reach of children.
- · For details regarding the installation positions of the interior lights, refer to the following:

Vehicle Exterior Inspection

- Vanity mirror lights Refer to Vanity Mirrors on page 7-53.
- · Front overhead lights/front map lights, rear overhead light, and luggage compartment light Refer to Interior Lights on page 7-54.

Replacing Exterior Light Bulbs

LED type

- · Headlights
- · Running lights (Type A)
- · Position lights
- · Front direction indicator lights
- · Side direction indicator lights
- · High-mount brake light
- · Rear direction indicator lights
- · Brake lights
- · Tail lights
- · Reverse lights
- · Rear fog lights
- · Number plate lights

The LED bulb cannot be replaced as a single unit because it is an integrated unit.


The LED bulb has to be replaced with the unit. If a replacement is necessary, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Bulb type


Running lights (Type B)

- 1. Make sure the ignition is switched off, and the headlight switch is off.
- If you are changing the left bulb, start the engine, turn the steering wheel all the way to the right, and turn off engine. If you are changing the right bulb, turn the steering wheel to the left.

3. Pull the centre of each plastic retainer and remove the retainers.

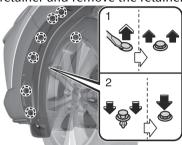

- 1. Removal
- 2. Installation
- 4. Pull the centre of each plastic retainer and remove the retainers.

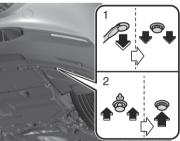


- 1. Removal
- 2. Installation
- 5. Turn the screw anticlockwise and remove it, and then partially peel back the mudguard.



6. Remove the wiring harness from the clip.



7. Turn the socket and bulb assembly anticlockwise and remove it.

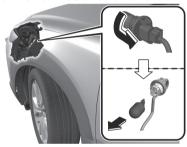

- 8. Disconnect the bulb from the socket.
- 9. Install the new bulb in the reverse order of the removal procedure.

Replacing Interior Light Bulbs


LED type

- Front overhead lights/Front map lights
- · Rear overhead light
- · Vanity mirror lights*
- · Luggage compartment light

The LED bulb cannot be replaced as a single unit because it is an integrated unit.

The LED bulb has to be replaced with the unit. If a replacement is necessary, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Checking the Inspection Locations and Inspection Items

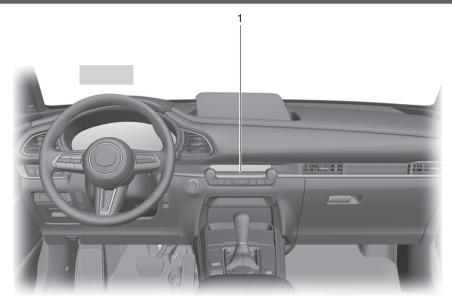

1. Air Conditioner

Air Conditioner Maintenance

Before Using the Air Conditioner

Lack of refrigerant may make the air conditioner less efficient.
The refrigerant specifications are indicated on a label attached to the inside of the engine compartment. If the wrong type of refrigerant is used, it could result in a serious malfunction of the air conditioner. Consult a professional, government certified repairer for the inspection or repair because a special device is required for the air conditioner maintenance. For details, consult an expert repairer (we recommend an Authorised Mazda Repairer).



Air filter

An air filter with pollen and dust collecting function is equipped. To ensure safe and comfortable use of the air conditioner, have the air filter replaced periodically.

For details, consult an expert repairer

For details, consult an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

 If the airflow of the air-conditioning system significantly decreases, the air filter may be clogged. Replace the air filter. If the vehicle is driven in areas with large amounts of dust and heavy traffic such as in large cities and cold regions, the air filter may need to be replaced more frequently.

Warnings and Cautions about Key Battery Replacement

A CAUTION

- ➤ Make sure the battery is installed correctly. Battery leakage could occur if it is not installed correctly.
- > When replacing the battery, be careful not to touch any of the internal circuitry and electrical terminals, bend the electrical terminals, or get dirt in the transmitter as the transmitter could be damaged.
- ➤ There is the danger of explosion if the battery is not correctly replaced.
- ➤ Dispose of used batteries according to the following instructions.
 - ➤ Insulate the plus and minus terminals of the battery using cellophane or equivalent tape.
 - ➤ Never disassemble.
 - Never throw the battery into fire or water.
 - Never deform or crush.
 - Replace only with the same type battery (CR2032 or equivalent).

Replacing the Key Battery

Replace with a new battery before the key becomes unusable. The following conditions indicate that the battery power is low:

- The KEY indicator light (green) flashes in the instrument cluster.
- The system does not operate and the operation indicator light on the transmitter does not flash when the buttons are pressed.
- The system's operational range is reduced.

Do not attempt to replace the key battery yourself. Incorrect battery replacement operation may damage the key. Replacing the battery at an expert repairer (we recommend an Authorised Mazda Repairer) is recommended.

Exterior Maintenance

Exterior Maintenance

▲ WARNING

Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal. Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.

A CAUTION

- ➤ Before lifting the windscreen wiper blades off the windscreen, always follow the procedure for moving the windscreen wiper blades. Otherwise, a wiper blade, wiper arm, or the bonnet could be damaged. Refer to the Replacing Windscreen Wiper Blade Rubbers section (page 9-49) for the procedure on how to move the windscreen wiper blades to the service position.
- > When the vehicle power is switched ON and the wiper lever is in the AUTO position, the windscreen wipers may operate automatically in the following cases:

 The area of the windscreen above the rain sensor is touched or wiped with a cloth.

 The windscreen or the rain sensor

area in the cabin is hit.

When the vehicle power is switched ON and the wiper lever is in the AUTO position, do not touch the windscreen or the windscreen wipers Otherwise, the windscreen wipers will operate automatically which could catch your fingers or damage the windscreen wipers. When removing ice or snow, or cleaning the windscreen, always make sure the wiper lever is in the OFF position.

- Do not spray water in the engine compartment. Otherwise, it could result in engine-starting problems or damage to electrical parts.
- When washing and waxing the vehicle, be careful not to apply excessive force to any single area of the vehicle roof. Otherwise, you could dent the vehicle.
- Make sure that the fuel-filler flap is closed and lock the doors. Otherwise, the fuel-filler flap may be forcefully opened by water pressure causing damage to the vehicle or fuel-filler flap.
- ➤ Do not use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodised aluminium parts. This may damage the protective coating; also, cleaners and detergents may discolour or deteriorate the paint.
- ➤ If organic solvents such as petrol, oil, engine coolant, or battery fluid, get on the exterior, wipe it off immediately.
- Do not use wax containing compounds, organic solvents such as petrol or benzene, alcohols, acidic or alkaline detergents, or bleach for cleaning.

Wheel Maintenance

A CAUTION

- ➤ If there is seawater or anti-freezing agent on the wheels, wash it off with water as soon as possible.
- ➤ Do not use any detergent other than mild detergent. Before using any detergent, verify the ingredients. Otherwise, the product could discolour or stain the aluminium wheels.

Interior Maintenance

MARNING

Do not spray water into the vehicle cabin.

Spraying water into the vehicle cabin is dangerous as electrical devices such as the audio and switches could get wet resulting in a malfunction or vehicle fire.

A CAUTION

- ➤ Do not use polishing agents. Depending on the product ingredients, they could cause discolouration, stains, cracks or peeling of the coating.
- Do not scrape or scratch the inside of the window glass. It could damage the thermal filaments and the aerial lines.
- ➤ When washing the inside of the window glass, use a soft cloth dampened in lukewarm water, gently wiping the thermal filaments and the aerial lines.
 - Use of glass cleaning products could damage the thermal filaments and the aerial lines.
- If liquid such as fragrance is spilled on the interior, wipe it off immediately.
- Do not use wax containing compounds, organic solvents such as petrol or benzene, alcohols, acidic or alkaline solvents, or bleach for cleaning.
- Do not try to rub off the shiny surface panels and the metallic parts with a dry cloth. Otherwise, it may cause scratches.

Instrument Panel Top (Soft pad) Maintenance

Instrument panel maintenance for areas requiring further cleaning.

- Wipe the soiled area with a soft cloth soaked in a mild detergent diluted with water.
- Wipe off any detergent and water remaining on the surface using a cloth soaked in water and wrung out well.

Upholstery and Synthetic Leather Maintenance

Fabric

- Clean the soiled area by lightly dabbing it with a soft cloth soaked in a mild detergent (approx. 5 %) diluted with water.
- 2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

Synthetic leather

- 1. Remove dust and sand using a vacuum cleaner.
- Wipe the soiled area with a soft cloth soaked in a mild detergent (approx. 5 %) diluted with water.
- 3. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

Leather Upholstery Maintenance

- 1. Remove dust and sand using a vacuum cleaner.
- Wipe off the soiled area with a soft cloth and a suitable, special cleaner or a soft cloth soaked in a mild detergent (about 5%) diluted with water.
- Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.
- 4. Remove moisture with a dry, soft cloth and allow the leather to further dry in a well-ventilated, shaded area. If the leather gets wet such as from rain, remove the moisture and dry it as soon as possible.

NOTE

- Because genuine leather is a natural material, its surface is not uniform and it may have natural scars, scratches, and wrinkles.
- To maintain the quality for as long as possible, periodical maintenance, about twice a year, is recommended.
- If the leather upholstery comes into contact with any of the following, clean it immediately.
 Leaving it uncleaned could cause premature wear, mold, or stains.
 - · Sand or dirt
 - · Grease or oil, such as hand cream
 - Alcohol, such as in cosmetic or hair dressing items
- If the leather upholstery gets wet, promptly remove moisture with a dry cloth. Remaining moisture on the surface may cause deterioration such as hardening and shrinkage.

Interior Maintenance

- Exposure to direct sunlight for long periods may cause deterioration and shrinkage. When parking the car under direct sunlight for long periods, shade the interior using sunshades.
- Do not leave vinyl products on the leather upholstery for long periods.
 They may affect the leather quality and colouring. If the cabin temperature becomes hot, the vinyl may deteriorate and adhere to the genuine leather.

Maintenance of the Dust-proof Sheet of the Active Driving Display



Do not use detergent to clean the dust-proof sheet. In addition, if a chemical agent gets on the dust-proof sheet, wipe it off immediately. Otherwise, the coating may be damaged.

1. Wipe with a fine, soft cloth such as those used for cleaning eyeglasses.

Seat Belt Maintenance

MARNING

If a seat belt appears frayed or has abrasions, have it replaced by an expert repairer (we recommend an Authorised Mazda Repairer).

If a seat belt is used under such a condition, it cannot function at its full capacity which could result in serious injury or death.

Use a mild detergent to remove soiling from a seat belt.

If organic solvents are used for cleaning the seat belts or they become stained or bleached, there is the possibility of them becoming weakened and as a result, they may not function at their full capacity which could cause serious injury or death.

Do not disassemble, modify, or replace a seat belt.

If a seat belt is used under such a condition, it cannot function at its full capacity which could result in serious injury or death.

Always have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) if the vehicle has been involved in an accident.

Seat belts with the pretensioner system and the seat belts with the load-limiter system cannot be reused once they have operated (deployed). If a seat belt is used under such a condition, it cannot function at its full capacity which could result in serious injury or death.

Always consult an expert repairer (we recommend an Authorised Mazda Repairer) when scrapping the vehicle. If the pretensioner system operates (deploys) unexpectedly, it could result in serious injury or death.

Do not repair the pretensioner system parts or wiring harnesses and do not attempt diagnose the pretensioner system circuits using an electrical tester or similar device.

Otherwise, they may not function normally or they may operate incorrectly, which could result in serious injury or death.

Check periodically that the seat belt systems work properly and are not damaged.

Seat belt cleaning procedure

- 1. Lightly tap with a mild detergent to remove dirt.
- 2. Wipe with a thoroughly wrung cloth.
- 3. Allow to dry.
- 4. Make sure that the seat belt locks when it is pulled rapidly. If it is still not retracting properly, have it inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

NOTE

Clean seat belts diligently if they get dirty. Leaving them uncleaned will make it difficult to clean them later, and it may affect the smooth retracting of the seat belt

MEMO

10 Specifications/Customer Information

Warranty10-4
Registering Your Vehicle in A
Foreign Country10-4
Add-On Non-Genuine Parts and
Accessories
Accessories 10-4
Cell Phones10-5
Cell Phones Warning10-5
Cell Filones Warning10-5
Declaration of Conformity 10-6
Keyless Entry System/Immobilizer
System10-6
Tyre Pressure Monitoring
System
Front Radar Sensor System
10-12
Front Side Radar Sensor System/
Rear Side Radar Sensor
System 10-23
Audio System 10-26
Radio System10-36
Emergency Call System 10-43
Mazda ERA-GLONASS 10-72
Wireless Charger (Qi)10-73
Electromagnetic
Compatibility 10-74
Electromagnetic
Compatibility 10-74
Compatibility 10-74

Collection/Disposal of Old
Equipment/Used Battery 10-75
Information for Users on
Collection and Disposal of Old
Equipment and Used
Batteries10-75
Information on Disposal in the
European Union10-75
Information on Disposal in Other
Countries Outside the European
Union
Identification Numbers 10-77
Vehicle Identification Number*
10-77
Vehicle Emission Control
Information Label (The
Philippines)10-77
Tyre Pressure Label 10-78
Engine Number10-78
Conformity Plate (Arab Gulf
Cooperation Council, Iraq)
10-79
Vehicle Specification 10-80
Engine10-80
Mazda M Hybrid Battery (e-
SKYACTIV G, e-SKYACTIV
X)10-81
Electrical System 10-82
Lubricant Quality 10-83
Cleaner10-85
Capacities10-86
Dimensions 10-88
Light Bulbs10-89

Brakes......10-92

MEMO

Registering Your Vehicle in A Foreign Country

Registering your vehicle in a foreign country may be problematic depending on whether it meets the specific emission and safety standards of the country in which the vehicle will be driven. Consequently, your vehicle may require modifications at personal expense in order to meet the regulations.

In addition, you should be aware of the following issues: Satisfactory vehicle servicing may be difficult or impossible in another

country.

The fuel specified for your vehicle may be unavailable.

Parts, servicing techniques, and tools necessary to maintain and repair your vehicle may be unavailable.

There might not be an expert repairer (we recommend an Authorised Mazda Repairer) in the country you plan to take your vehicle.

The Mazda warranty is valid only in certain countries.

Add-On Non-Genuine Parts and Accessories

Please note that technical alterations to the original state of your Mazda vehicle can affect the safety of the vehicle. Such technical alterations include not only the use of unsuitable spare parts, but also accessories, fittings or attachments, including rims and tyres.

Genuine Mazda Parts and Genuine Mazda Accessories have been specifically designed for Mazda vehicles.

Other parts and accessories than those mentioned above have not been examined and approved by Mazda unless explicitly stated by Mazda. We cannot certify the suitability of such products. Mazda is not liable for any damage caused by the use of such products.

MARNING

Be very careful in choosing and installing add-on electrical equipment, such as mobile telephones, two-way radios, stereo systems, and car alarm systems. Incorrectly choosing or installing improper add-on equipment or choosing an improper installer is dangerous. Essential systems could be damaged, causing engine stalling, air-bag (SRS) activation, ABS/TCS/DSC inactivation, or a fire in the vehicle.

Mazda assumes no responsibility for death, injury, or expenses that may result from the installation of add-on non-genuine parts or accessories.

Cell Phones Warning

MARNING

Please comply with the legal regulations concerning the use of communication equipment in vehicles in your country.

Use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous. Dialing a number on a cell phone while driving also ties-up the driver's hands. Use of these devices will cause the driver to be distracted and could lead to a serious accident. If a passenger is unable to use the device, pull off the right-of-way to a safe area before use. If use of a cell phone is necessary despite this warning, use a hands-free system to at least leave the hands free to drive the vehicle. Never use a cell phone or other electrical devices while the vehicle is moving and, instead, concentrate on the full-time job of driving.

Keyless Entry System/Immobilizer System

[EN] English	Hereby, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, declares that the radio equipment type Keyless System (SKE11E-01, SKE114-01, SKE116-01) is in compliance with Directive 2014/53/EU.
[BG] Bulgarian	С настоящото MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS декларира, че този тип радиосъоръжение Keyless System (SKE11E-01, SKE114-01, SKE116-01) е в съответствие с Директива 2014/53/EC.
[ES] Spanish	Por la presente, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS declara que el tipo de equipo radioeléctrico Keyless System (SKE11E-01, SKE114-01, SKE116-01) es conforme con la Directiva 2014/53/UE.
[CS] Czech	Timto MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS prohlašuje, že typ rádiového zařízení Keyless System (SKE11E-01, SKE114-01, SKE116-01) je v souladu se směrnicí 2014/53/EU.
[DA] Danish	Hermed erklærer MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, at radioudstyrstypen Keyless System (SKE11E-01, SKE114-01, SKE116-01) er i overensstemmelse med direktiv 2014/53/EU.
[DE] German	Hiermit erklärt MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, dass der Funkanlagentyp Keyless System (SKE11E-01, SKE114-01, SKE116-01) der Richtlinie 2014/53/EU entspricht.
[ET] Estonian	Käesolevaga deklareerib MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, et käesolev raadioseadme tüüp Keyless System (SKE11E-01, SKE114-01, SKE116-01) vastab direktiivi 2014/53/EL nõuetele.
[EL] Greek	Με την παρούσα ο/η MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, δηλώνει ότι ο ραδιοεξοπλισμός Keyless System (SKE11E-01, SKE114-01, SKE116-01) πληροί την οδηγία 2014/53/ΕΕ.
[FR] French	Le soussigné, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, déclare que l'équipement radioélectrique du type Keyless System (SKE11E-01, SKE114-01, SKE116-01) est conforme à la directive 2014/53/UE.
[HR] Croatian	MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS ovime izjavljuje da je radijska oprema tipa Keyless System (SKE11E-01, SKE114-01, SKE116-01) u skladu s Direktivom 2014/53/EU.
[IT] Italian	Il fabbricante, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, dichiara che il tipo di apparecchiatura radio Keyless System (SKE11E-01, SKE114-01, SKE116-01) è conforme alla direttiva 2014/53/UE.
[LV] Latvian	Ar šo MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS deklarē, ka radioiekārta Keyless System (SKE11E-01, SKE114-01, SKE116-01) atbilst Direktīvai 2014/53/ES.
[LT] Lithuanian	Aš, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, patvirtinu, kad radijo įrenginių tipas Keyless System (SKE11E-01, SKE114-01, SKE116-01) atitinka Direktyvą 2014/53/ES.
[HU] Hungarian	MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS igazolja, hogy a Keyless System (SKE11E-01, SKE114-01, SKE116-01) tipusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
[MT] Maltese	B'dan, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, niddikjara li dan it-tip ta' taghmir tar-radju Keyless System (SKE11E-01, SKE114-01, SKE116-01) huwa konformi mad- Direttiva 2014/53/UE.
[NL] Dutch	Hierbij verklaar ik, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, dat het type radioapparatuur Keyless System (SKE11E-01, SKE114-01, SKE116-01) conform is met Richtlijn 2014/53/EU.
[PL] Polish	MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS niniejszym oświadcza, że typ urządzenia radiowego Keyless System (SKE11E-01, SKE114-01, SKE116-01) jest zgodny z dyrektywą 2014/53/UE.
[PT] Portuguese	O abaixo assinado MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS declara que o presente tipo de equipamento de rádio Keyless System (SKE11E-01, SKE114-01, SKE116-01) está em conformidade com a Diretiva 2014/53/UE.
[RO] Romanian	Prin prezenta, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS declară că tipul de echipamente radio Keyless System (SKE11E-01, SKE114-01, SKE116-01) este în conformitate cu Directiva 2014/53/UE.

[SK] Slovak	MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS týmto vyhlasuje, že rádiové zariadenie typu Keyless System (SKE11E-01, SKE114-01, SKE116-01) je v súlade so smemicou 2014/53/EÚ.
ISL1	MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS potrjuje, da je tip radijske opreme
Slovenian	Keyless System (SKE11E-01, SKE114-01, SKE116-01) skladen z Direktivo 2014/53/EU.
[FI]	MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS vakuuttaa, että radiolaitetyyppi Keyless
Finnish	System (SKE11E-01, SKE114-01, SKE116-01) on direktiivin 2014/53/EU mukainen.
[SV]	Härmed försäkrar MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS att denna typ av
Swedish	radioutrustning Keyless System (SKE11E-01, SKE114-01, SKE116-01) överensstämmer med direktiv 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:http://www.mitsubishielectric.com/bu/automotive/doc/re.html

UK UK

[EN]	Hereby, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS, declares that the radio
English	equipment type Keyless System (SKE11E-01, SKE114-01, SKE116-01) is in compliance with the
	relevant statutory requirements.
	The full text of the EU declaration of conformity is available at the following internet
	address:http://www.mitsubishielectric.com/bu/automotive/doc/ukgb.html

Manufacturer: MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS 2-3-33, Miwa, Sanda-City, Hyogo 669-1513, Japan

Hand Unit: SKE11E-01

Operation frequency: 433.92 MHz Maximum output power: 10mW LFU: SKE114-01

Operation frequency: 125 kHz

Maximum output power : 107dB μ V/m at. 10 meters

Receiver: SKE116-01

Operation frequency: 433.92 MHz

CAUTION - Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

Please check and obey all local laws and regulations for the disposal of batteries or

accumulations.

Never dispose of battery in fire or mechanical crushing or cutting.

If battery is incorrectly discarded or heated to high temperature (100 $^{\circ}$ C(212 $^{\circ}$ F) or higher), gas may be generated inside battery, causing electrolyte leak, internal short circuit,

heat generation, explosion and violent flaring.

CAUTION - Do not expose Hand Unit to excessive heat such as sunshine, fire or the like.

WARNING

Do not ingest the battery, Chemical Burn Hazard

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The caution mark of ISO 7000-0434 is located on the internal case.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Declaration of Conformity

Prin prezenta, MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS declară că tipul de Moldova

echipamente radio (SKE11E-01, SKE114-01, SKE116-01) este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

http://www.mitsubishielectric.com/bu/automotive/doc/mda.html

СПРАВЖНІМ MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS ЗАЯВЛЯЄ, ЩО ТИП Україна

радіообладнання (SKE11E-01, SKE114-01) відповідає Технічному регламенту

радіообладнання.

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

http://www.mitsubishielectric.com/bu/automotive/doc/ukr.html

Беларусь Назва прадукту: Сістэма бязключавога доступу

Мэта выкарыстання: замыканне або разблакоўка дзвярэй аўтамабіля і запуск рухавіка

Радыё спецыфікацыя

- Прыёмаперадатчык
 - Мадэль: SKE11E-01 - Рабочая частата: 433,92 МГц
 - Максімальная магутнасць: 10 мВт

Перадатчык

- Мадэль: SKE114-01
- Рабочая частата: 125 кГц
- Максімальная магутнасць: 107 dBµV/м, на 10 метрах

Прыёмнік

- Мадэль: SKE116-01
- Рабочая частата: 433,92 МГц

Устаноўка: устаноўлена ў транспартным сродку Правілы і інфармацыя аб бяспецы выкарыстання: апісаны ў гэтым кіраўніцтве

Спосаб рамонту: звяжыцеся з пакупніком транспартнага сродку

Вытворца: MITSUBISHI ELECTRIC CORPORATION, SANDA WORKS 2-3-33, Miwa, Sanda-City, Hyogo 669-1513, Japan

Мясцовы прадстаўнік-агент

- Кампанія: Friendly LLC
- Адрас: 220007, г. Мінск, вул. Валадзько, 6, Рэспубліка Беларусь
- Тэлефонны нумар: + 375 17 2205545
- Кантактная асоба: Aleksey Moroz

- Эл. Пошта: moroz.aleksey@friendly.by Дата вырабу: Паказаць на прадукце

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been Type Approved by Jamaica: SMA -SKE11D-01 / SKE114-01 / SKE115-01.

低功率射頻器材技術規範

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率、 加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用, 並改善至無干擾時方得繼續使用。

前述合法通信,指依電信管理法規定作業之無線電通信。

低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Keyless System Radio approval Marking













Oman - TRA

D090024

R/5590/18: SKE11E-01 R/5655/18:SKE114-01 R/5659/18:SKE116-01

SyTRA

REGISTERED No. FR00122-18:SKE11E-01 FR00123-18:SKE114-01 FR00124-18:SKE116-01

SKE116-01

Ghana

SKE11E-01 NCA APPROVED: BR3-H8-GE2-05A SKE114-01 NCA APPROVED: BR3-1M-GE2-05B



NR: 2021-02-1-0070 Model: SKE11E-01 NR: 2021-02-1-0071 Model: SKE114-01

BOCRA REGISTERED No: BOCRA/TA/2020/3919:SKE11E-01 BOCRA/TA/2020/3918:SKE114-01 BOCRA/TA/2020/3917:SKE116-01







Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

Israel

ימספר אישור התאמה מטעם משרד התקשורת:" - "51-80389(SKE11E-01) 51-79883(SKE114-01) - יימספר אישור התאמה מטעם משרד התקשורת:יי 51-80851(SKE116-01) - יימספר אישור התאמה מטעם משרד התקשורת יימספר אישור ייחל איסור לבצע פעולות במכשיר אשר יש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית ללא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.יי.

Senegal

AGREE PAR ARTP SENEGAL

Numéro d'agrément : 072247/AG/ER (SKE11E-01) Numéro d'agrément : 072246/AG/ER (SKE114-01)

Tyre Pressure Monitoring System

[EU, Ukraine]

https://continental-homologation.com/mazda

[Taiwan]

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機, 非經許可, 公司、商號或使用者均不得擅自變更頻率、加大功率 或 變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善 至無干擾時方得繼續使用。前項合法通信,指依電信法規定作業之無線電通信。低功率射頻電機須忍受 合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

[Moldova]



[Jordan]

Manufacturer Name: Continental Automotive GmbH

Model, Type Number: TIS-15

Serial Number

TRC type approval's number : TRC/LPD/2017/560

[UAE]

[Indonesia]

TRA REGISTERED No: ER59583/17 DEALER No: DA36975/14

55266/SDPPI/2018 2684

[Russia]

[Serbia]



Декларания осоответствии ТР ТС 020/2011 ЕАЭС № RU Д-DE.ЭM03.B.00148 от 05.03.2018, действительна по 04.03.2023, зарегистрирована органом по сертификации продукции ФГУП Ордена Трудового Красного Знамени научно-исследовательский институт радио «Испытательный центр «Омега»

[Israel]

- א. השימוש במכשיר הוא על בסיס "משני" ופטור מרישיון הפעלה אלחוטי.
 כלומר לא מוגן מהפרעות, וללא הפר למערכות אחרות.
- ב. רק "בפעולות בזק" לשימוש עצמי של הלקוח בלבד, הציוד פטור מרישיון הפעלה אלחוטי.
 מתן "שרות בזק" לצד ג' מחייב רישיון מיוחד ממשרד התקשורת
 - ג. אסור להחליף את האנטנה המקורית של המכשיר, ולא לעשות בו כל שינוי טכני אחר.

Front Radar Sensor System

ΕU

Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH
Peter-Dornier-Strasse 10, 88131 Lindau, Germany

01 RED BG Bulgarian

_	_	_	-	
ОПРОО ДЕКЛА СЪОТЕ	РАЦИ	AS F		С настоящого ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение ARS 4-В е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/
				радиочестотната лента или ленти, в която или които работи
				радиосъоръжението:
				76–77 GHz
				максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението.: 3.16W (356Bm RMS EIRP)

02 RED ES Spanish

DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA	Por la presente. ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico ARS 4-B es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/
	Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 76–77 GHz
	Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 3.16W (354Bm RMS EIRP)

03_RED_CS_Czech

ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ	Timto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádio- vého zařízení ARS 4-B je v souladu se směrníci 2014/53/EU. Úplně znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://continental.automotive-approvals.com/
	Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 76–77 GHz
	Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v nárů (v nichž) je rádiové zařízení provozováno: 3.16W (356Bm RMS EIRP)

04 RED DA Dansih

FORENKLET EU- OVERENSSTEMMELSE SERKLÆRING	Hermed erklærer ADC Automotive Distance Control Systems GmbH, at ra- dloudstyrstypen ARS 4-B er i overensstemmelse med direktiv 2014/53/EU. EU- overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental.automotive-approvals.com/
	Frekvensbånd, som radioudstyret fungerer på: 76–77 GHz
	Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 3.16W (35dBm RMS EIRP)

05_RED_DE_German

	T
VEREINFACHTE EU-	Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der
KONFORMITÄTSERKL	Funkanlagentyp ARS 4-B der Richtlinie 2014/53/EU entspricht. Der vollständige Text
ÄRUNG	der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
	http://continental.automotive-approvals.com/
	Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage
	betrieben wird:
	76–77 GHz
	Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die
	Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung:
	3.16W (35dBm RMS EIRP)

06 RED ET Estonian

LIHTSUSTATUD ELI VASTAVUSDEKLARAT SIOON	Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp ARS 4-B vastab direktiivi 2014/53/EL nõuetele. ELI vastavusdeklaratsiooni tälelik tekst on kättesaadav järgmisel internetiaadressii: http://continental.automotive-approvals.com/
	Sagedusriba(d), millel raadioseade töötab: 76–77 GHz
	Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus: 3.16W (35dBm RMS EIRP)

07 RED EL Greek

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ	Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός ARS 4-Β πληροι την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://continental.automotive-approvals.com/
	Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 76–77 GHz
	η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός: 3.16W (35dBm RMS EIRP)

08 RED EN English

SIMPLIFIED EU DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type ARS 4-B is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/
	Frequency band(s) in which the radio equipment operates: 76–77 GHz
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates:
	3.16W (35dBm RMS EIRP)

09 RED FR French

DECLARATION UE DE CONFORMITE SIMPLIFIEE	Le soussigné. ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radicélectrique du type ARS 4-B est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/
	Bandes de fréquences utilisées par l'équipement radioélectrique: 76–77 GHz
	Puissance de radiofréquence maximale transmise sur les bandes de fréquences uti- lisées par l'équipment radiofelèctrique: 3,16W (35dBm RMS EIRP)

11 RED HR Croation

POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI	ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa ARS 4-B u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sijedećoj internetskoj adresi:: http://continental.automotive-approvals.com/
	Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 76–77 GHz
	Najweća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 3.16W (35dBm RMS EIRP)

12 RED IT Italian

DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA	Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio ARS 4-B è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE e disponibile al seguente indirizzo internet: http://confinental.automotive-approvals.com/
	Bande di frequenza di funzionamento dell'apparecchiatura radio: 76–77 GHz
	Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 3,16W (356Bm RMS EIRP)

13 RFD IV Latvian

10_11att.	411
VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA	Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta ARS 4-B atblist Direktīval 2014/53/ES. Pilns ES atblistības deklarācijas teksts ir pi- eejams šādā interneta vietnē: http://continental.automotive-approvals.com/
	Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 76–77 GHz
	Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu.: 3 16W (35dRm RMS FIRP)

14 RED LT Lithunian

	· · · · · · · · · · · · · · · · · · ·
SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA	Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas ARS 4-B atlitinka Direktyvą 2014/53/ES. Visas ES atlitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/
	Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai: 76–77 GHz
	Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (-ose), kurioje (-lose) veikla radijo [renginial: 3.16W (35dBm RMS EIRP)

15_RED_HU_Hungarian

	ADC Automotive Distance Control Systems GmbH igazolja, hogy a ARS 4-B típusú
MEGFELELŐSÉGI	rádlóberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilat-
NYILATKOZAT	kozat teljes szövege elérhető a következő internetes címen::
	http://continental.automotive-approvals.com/
	Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik:
	76–77 GHz
	Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított max-
	imális jelerősség, amely(ek)ben a rádióberendezés üzemel:
	3.16W (35dBm RMS EIRP)

16 RED MT Maltese

DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL-UE	B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara II dan it-tip ta' tagħmir tar-radju ARS 4-B huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponiibbli f'dan I-indirizz tal-Internet II ģej: http://continental.automotive-approvals.com/
	II-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 76–77 GHz
	II-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded tal- frekwenza II jaħdem fihom It-tagħmir tar- radju: 3.16W (35dBm RMS EIRP)

17 RED NL Dutch

	•
VEREENVOUDIGDE EU- CONFORMITEITSVERK LARING	Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur ARS 4-B conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/
	Frequentieband(en) waarin de radioapparatuur functioneert:
	76–77 GHz
	Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 3.16W (35dBm RMS EIRP)

18 RED PL Polish

IO_KED_FL_FOIISII	
UPROSZCZONA DEKLARACJA ZGODNOŚCI UE	ADC Automotive Distance Control Systems GmbH ninlejszym oświadcza, że typ urzadzenia radiowego ARS 4-B jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/
	Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 76–77 GHz

19 RED PT Portuguese

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA	O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio ARS 4-B está em conformidade on a Diretiva 2014/63/UE. O texto integral da declaração de conformidade está dis- ponívei no seguinte endereço de Internet: http://confinental.automotive-approvals.com/
	A(s) banda(s) de frequências em que o equipamento de rádio funciona: 76–77 GHz
	A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 3.16W (35dBm RMS EIRP)

20 RED RO Romanian

DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declará că tipul de echipamente radio ARS 4-B este în conformitate cu Directiva 2014/53/UE. Textul integral al declaraţiei UE de conformitate este disponibil ia urmatoarea adresă internet: http://confinental.automotive-approvals.com/
	Banda (benzile) de frecvențe în care funcționează echipamentul radio: 76–77 GHz
	Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 3.16W (358m RMS EIRP)

21 RED SK Slovak

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE	ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu ARS 4-B je v súlade so smernicou 2014/53/EÜ. Úplně EÜ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/
	Frekvenčné pásmo resp. pásma, v ktorých rádlové zariadenie pracuje: 76–77 GHz
	Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádlové zariaddenie pracuje: 3.16W (358m RMS EIRP)

22 RED SL Slovenian

POENOSTAVLJENA IZJAVA EU O SKLADNOSTI	ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme ARS 4-B skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://continental.automotive-approvals.com/
	Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 76–77 GHz
	Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali paso- vlh, na katerlh radijska oprema deluje: 3,16W (35dBm RMS EIRP)

23 RED FI Finnish

YKSINKERTAISTETTU EU- VAATIMUSTENMUKAISU USVAKUUTUS	ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi ARS 4-B on direktiivin 2014/53/EU mukainen. EU- vaatimustemmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://continental.automotive-approvals.com/
	Radiotaajuudet, joilla radiolaite toimii: 76–77 GHz
	Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 3.16W (35dBm RMS EIRP)

24 RED SV Swedish

FÖRENKLAD EU-	Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ
FÖRSÄKRAN OM	av radioutrustning ARS 4-B överensstämmer med direktiv 2014/53/EU. Den
ÖVERENSSTÄMMELSE	fullständiga texten till EU-försäkran om överensstämmelse finns på följande
	webbadress:
	http://continental.automotive-approvals.com/
	Det eller de frekvensband där radioutrustningen arbetar:
	76–77 GHz
	Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband där
	radioutrustningen arbetar:
	3.16W (35dBm RMS EIRP)

Specifications/Customer Information Declaration of Conformity

01_RED_IS_Icelandic

EINFÖLDUÐ ESB SAMRÆMISYFIRLÝSING	Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjar- skiptabúnaðurinn að gerð ARS 4-B er í samræmi við tilskipun 2014/63/ ESB. Textinn í fullri lengd um Samræmisyfirlýsingu ESB er aðgengilegur á eftirfarandi veffandi:
	http://continental.automotive-approvals.com/
	Bandbreidd(ir), sem fjarskiptabúnaðurinn starfar í: 76–77 GHz
	Hámarks fjarskiptatíðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjarskiptabúnaðurinn starfar í: 3.16W (35dBm RMS EIRP)

01 RED TR Turkish

BASİTLEŞTİRİLMİŞ AB UYGUNLUK BEYANI	Işbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi ARS 4-B tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki İnternet adresinde mevcuttur: http://continental.automotive-approvals.com/
	Radyo cihazının çalıştığı frekans bandı/bantları: 76–77 GHz
	Radyo ekipmanının çalıştığı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 3.16W (35dBm RMS EIRP)

RUSSIA, KAZAKHSTAN, BELARUS

EAC

A

Serbia

A A

Morocco

AGREE PAR L'ANRT MAROC Numéro d'agrément : MR 9778 ANRT 2014 Date d'agrément : 2014-11-11

Bahrain

The Equipment Identified hereon is approved for use under the following rules

- 1- This equipment must not cause harmful interference to other services.
- 2- This equipment is subject to harmful interference, and the owner of this equipment must not claim for protection.

NIGERIA

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

INDONESIA

68161/R/SDPPI/2021



8032

UKRAINE



справжнім (найменування виробника ADC Automotive Distance Control Systems GmbH) заявляє, що тип радіообладнання (позначення типу радіообладнання ARS4-B) відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою: http://continental.automotive-approvals.com/

3* sDoC_RED_Ukrainian

найменування та адресу	АДС Автомотів Дістанс Контрол Сістемс ГмбХ
виробника	Пітер-Дорніер-Штрассе 10, 88131, Ліндау, Німеччина
	(ADC Automotive Distance Control Systems GmbH
	Peter-Dornier-Strasse 10, 88131, Lindau, Germany)
СПРОЩЕНА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ	Цим ADC Automotive Distance Control Systems GmbH заявляє, що радіообладнання тилу ARS4-В відповідає вимогам Директиви 2014/33/ЕU. Повний текст декларації ЄС про відповідність доступний за наступною адресою в мережі Інтернет: http://continental.automotive-approvals.com/
	Частотний діапазон(-и), в якому працює радіообладнання: 76—77 ГГц
	Максимальна потумність радіочастотного сигналу, що передається у частотному діапазоні(-ах), в якому працює радіообладнання: 3.16 Вт (35 д.бм середньоквадратична ефективна потужність випромінювання)

ARS4-B has been registered with: UA RF: 1CONT 0001

JORDAN

"Name of the manufacturer

ADC Automotive Distance Control Systems GmbH Address of the manufacturer: Peter-Dornier-Strasse 10, 88131 Lindau, Germany

Brand, Model Continental, ARS4-B, "

Singapore

South Africa

Complies with IMDA Standards DA100926



Taiwan



「取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。前述合法通信,指依電信管理法規定作業之無線電通信。低功率射頻器材類思受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。」

Botswana

OMAN

BTA REGISTERED No: BOCRA/TA/2018/2026 Oman – TRA D080134 TRA/TA-R/2210/14

DOMINICAN REPUBLIC / EL SALVADOR / PALAU

Model: ARS4-B IC: 4135A-ARS4B FCC ID: OAYARS4B

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions sulvantes:

- (1) l'apparell ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiofrequency radiation exposure Information:

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 30 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôle. Cet équipement duit être installé et utilisé avec un minimum de 30 cm de distance critre la source de rayonnement et voire corps.

FCC Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THAILAND

" เครื่องโทรคมนาคมและอุปกรณ์นี้ มีความสอดคล้องศามมาตรฐานหรือข้อกำหนดของ กลทอ."

"ได้รอวัทยุคมนาคมนี้มีเระดับการแล่คั้นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้ เ ดิรัจจัวทยคมนาดเพื่อณะกรรมการกิจการโทรดมนาคมแน่งชาติประกาสกำหนด"

Malaysia



MOLDOVA

Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany

01_MD_Romanian

	DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio ARS4-B este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio". Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet: http://continental.automotive-approvals.com/
Banda (benzile) de frecvențe în care funcționează echipamer 76–77 GHz		Banda (benzile) de frecvențe în care funcționează echipamentul radio: 76–77 GHz

Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 3.16W (35dBm RMS EIRP)

VIETNAM





uк

A) Generic information:

Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter Domier Strasse 10, 88131 Lindau, Germany

01_UK_English

SIMPLIFIED UK DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems CmbH declares that the radio courpment type AR84-B is in compliance with Radio Equipment Regulations of the United Kingdom. The full text of the UK declaration of conformity is available at the following internet address: http://confinental.automotive.approvals.com/
	Frequency band(s) in which the radio equipment operates: 76–77 CHz
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 3.16W (354Bm RMS FIRP)



Importer Information

Name:Mazda Motors UK Limited

Address: Victory Way, Crossways Business Park, Dartford, Kent, DA 2 6DT, UK

Paraguay



Garden MPYS.A.

Republica Argentina y Facundo Machain, Asuncion, PARAGUAY

ISRAEL

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.

SENEGAL

AGREE PAR ARTP SENEGAL

Numéro d'agrément : N° 072193 / AG / ER

Front Side Radar Sensor System/Rear Side Radar Sensor System

We, FURUKAWA AUTOMOTIVE SYSTEMS INC., hereby declare, at our sole responsibility, that the following product conforms to the Essential Requirements of Radio Equipment Directive 2014/53/EU. The latest Declaration of Conformity is available at the following address:

address: http://www.furukawaas.co.jp/english/approval/

	Frequency range: 24.05 GHz to 24.25 GHz
English	Maximum radiated peak power(e.i.r.p) : -10 dBm
	Temperature range : -40°C to +85°C
	Честотен диапазон: 24,05 GHz до 24,25 GHz
Bulgarian	Максимално излъчвана върхова мощност (еиим): -10 dBm
	Температурен диапазон: -40°С до +85°С
	Frekvenční rozsah: 24,05 GHz až 24,25 GHz
Czech	Maximum vyzářeného výkonu (e.i.r.p): -10 dBm
	Teplotní rozsah: -40°C až +85°C
200	Frekvensinterval: 24,05 GHz til 24,25 GHz
Danish	Maksimalt udstrålede spidseffekt (e.i.r.p): -10 dBm
	Temperaturinterval: -40°C til +85°C
	Frequenzbereich: 24,05 GHz bis 24,25 GHz
German	Max. Strahlung sleistungspegel (EIRP): -10 dBm
	Temperaturbereich: -40°C bis +85°C
S22 102	Sagedusala: 24,05 GHz kuni 24,25 GHz
Estonian	Maksimaalne kiirguse tippvõimsus (ekvivalentne isotroopne kiirgusvõimsus): -10 dBm
	Temperatuurivahemik: -40 °C kuni +85 °C
	Raon minicíochta:idir 24.05 GHz agus 24.25 Ghz
Gaeilge	Buaic-chumhacht radaithe uasta (e.i.r.p): -10 dBm
	Raon teochta: -40°C to +85°C
	Περιοχή συχνοτήτων: 24,05 GHz έως 24,25 GHz
Greek	Μέγιστη ακτινοβολούμενη ισχύς αιχμής (ιιαι): -10 dBm
	Εύρος θερμοκρασίας: -40°C έως +85°C
	Rango de Frecuencia: 24,05 GHz a 24,25 GHz
Spanish	Potencia Isótropa Radiada Equivalente (e.i.r.p, por sus siglas en inglés): -10 dBm
	Rango de temperatura: -40°C a +85°C
	Bande de fréquence: 24,05 GHz to 24,25 GHz
French	Puissance maximale de crête rayonnée (e.i.r.p): -10 dBm
	Écart de température: -40°C à +85°C
	Frekvencijski raspon: 24,05 GHz do 24,25 GHz
hrvatski	Maksimalna emitirana vršna snaga (e.i.r.p): -10 dBm
	Raspon temperatura: -40°C do +85°C
	Gamma di frequenza : da 24,05 GHz ta 24,25 GHz
Italian	Picco massimo delle potenza irradiata (e.i.r.p): -10 dBm Escursione termica: da -40°C a +85°C
	Frekvences diapazons: 24,05 GHz līdz 24,25 GHz
Latvian	Maksimālā izstarotā maksimālā jauda (e.i.r.p): -10 dBm
	Temperatūras diapazons: -40°C līdz +85°C
	Dažnio intervalas: 24,05–24,25 GHz
Lithuania	Didžiausioji spinduliuotės galia (EIRP): -10 dBm
	Temperatūros intervalas: -40 – +85 °C
	Frequenzberäich: 24.05 GHz bis 24.25 GHz
Lëtzebuergesch	Maximal ausgestraalt Spëtzteleeschtung (e.i.r.p): -10 dBm Temperaturberäich:-40°C bis +85°C
	Frekvenciatartomány: 24,05 GHz - 24,25 GHz
Hungarian	Maximum sugárzott csúcsteljesítmény (e.i.r.p): -10 dBm Hőmérsékleti tartomány: -40 °C - +85 °C
	nomersexieti tartomany40 C - +65 C

Specifications/Customer Information Declaration of Conformity

	Medda tal-frekwenza: 24.05 GHz sa 24.25 Ghz		
Maltese	L-ogħla gawwa rradjata massima (e.i.r.p): -10 dBm		
	Firxa tat-Temperatura: -40°C sa +85°C		
	Frequentiebereik: 24,05 GHz tot 24,25 GHz		
Dutch	Maximaal uitgezonden vermogen (EIRP): -10 dBm		
	Temperatuurbereik: -40°C tot +85°C		
	Frequenzbereich: 24,05 GHz bis 24,25 GHz		
German	Max. Strahlung sleistungspegel (EIRP): -10 dBm		
Cerman	Temperaturbereich: -40°C bis +85°C		
	Zakres częstotliwości: od 24,05 GHz do 24,25 GHz		
Polish	Maksymalna wypromieniowana moc (EIRP): -10 dBm		
Polish	Zakres temperatur: od -40°C do +85°C		
	Alcance de frequência: 24,05 GHz a 24,25 GHz		
Portuguese	Máximo Potência de pico irradiada (e.i.r.p): -10 dBm		
	Faixa de temperatura: -40°C a +85°C		
	Interval de frecvență: 24,05 GHz - 24,25 GHz		
Rumanian	Putere de vârf maximă radiată (e.i.r.p): -10 dBm		
	Interval de temperatură: -40 °C - +85 °C		
	Frekvenčni razpon: 24,05 GHz do 24,25 GHz		
Slovenian	Maksimalna zračena moč (e.i.r.p): -10 dBm		
	Temperaturni razpon: -40°C to +85°C		
	Frekvenčný rozsah: 24,05 GHz až 24,25 GHz		
Slovakian	Maximum efektívneho izotropného vyžiareného výkonu (e.i.r.p): -10 dBm		
Olo valuari	Teplotný rozsah: -40°C zž +85°C		
	Taajuusalue: 24,05 – 24,25 GHz		
Finnish	Maksimi säteilyhuipputeho (e.i.r.p): -10 dBm		
FILILISTI	Lämpötila-alue: -40°C - +85°C		
	Frekvensintervall: 24,05 GHz till 24,25 GHz		
0 " 1	Högsta utstrålade maximal effekt (e.i.r.p): -10 dBm		
Swedish	Temperaturintervall: -40°C till +85°C		
	Temperaturmervali40 C tili +65 C		
	Δ		
Serbia	A A		
	N038 21		
	FURUKAWA AUTOMOTIVE SYSTEMS INC., hereby declare, at our sole responsibility, that		
	24GMMR20 conforms to the essential requirements of the radio equipment regulations		
United Kingdom	of the United Kingdom. The UK Declaration of Conformity is available at the following		
_	address:		
	http://www.furukawaas.co.jp/english/approval/		
	MODEL:24GMMR20		
	FURUKAWA ELECTRIC CO.,Ltd.		
	Адреса виробника: FURUKAWA AUTOMOTIVE SYSTEMS INC.		
	1000, Amago, Koura-cho, Inukami-gun, Shiga, JAPAN		
	справжнім(FURUKAWA AUTOMOTIVE SYSTEMS INC.) заявляє, що тип радіообладнання		
	(Радіолокатор периферійного безперервного нагляду діапазоном 24 ГГц) відповідає		
l	Технічному регламенту радіообладнання;		
Ukraine	повний текст декларації про відповідність доступний на веб-сайтіза такою адресою		
	http://www.furukawaas.co.jp/english/approval/		
	Diamona una grantini a 24 05 no 24 25 FFu		
1	Діапазон частот: від 24,05 до 24,25 ГГц Максимальна пікова потужність випромінювання (еквівалентна ізотропній		
	потужності):-10дБм		

Ghana	NCA Approved: 7E5-7M-109-RDR			
Nigeria		Connection and use of this communications equipment is permitted by the Nigerian Communications Commission		
Paraguay	Marca: FURUKAWA Modelo: 24GMMR20 Fabricante: Furukawa Automotive Systems INC. Número del Registro: 2021-07-I-0394			
Taiwan	整語 取得電驗證明之低功率射頻器材,非經核准,公司,商號或使用者均不得擅自變更頻率,加大功率或變更原設計 之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信,經發現有干擾現象時,應立即停用,並 改善至無干擾時方得翻賴使用。前述合法通信,指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受 合法通信或工業、科學及醫療用電波攝射性電膜設備之干擾。			
Vietnam	THACO-MAZDA CO90248 CO90248 ICT			
INDONESIA	77980/SDPPI/2021			
Malaysia	MCMC HIDF18000266	South Africa	TA-2021/1522 APPROVED	
Oman	OMAN-TRA R/11893/21 D172338	Singapore	Complies with IMDA Standards DA100926	
Israel	מספר אישור התאמה מטעם משרד התקשורת:-5183926 חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינוי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות. חל איסור על הפעלת המכשיר מחוץ למבנה, בשל חשש להפרעות אלחוטיות.			

Audio System

[*1]: CL-MM28E0JT, CL-MMN9E0JT, CL-MMN9E0TT, CL-MMN9E0GQ, CL-MM28A0JT, CL-MM29A0TT,

CL-MM29Z0GQ, CL-MMN9Z0GQ, CL-MMN9A0JT, CL-MMN9A0TT, CL-MM28A1JT, CL-MMN9A1JT

[*2]: CL-MM2BE0JT, CL-MM2BE0GO

[*3]: CL-MM2DA2JT, CL-MM2DA1JT, CL-MM2DA0JT, CL-MM2DA3JT, CL-MM2DA0GQ, CL-MM2DA1GQ, CL-MM2DE0JT

[*4] : CL-MM2DE1JT

Cyprus, Canary Islands, Austria, Greece, Italy, Switzerland, Belgium, Denmark, Finland, Norway, Portugal, Spain, Sweden, Hungary, Germany, Poland, Bulgaria, Croatia, Slovenia, Luxembourg, Slovakia, Latvia, Lithuania, France, Czech, Estonia, Iceland, Romania, Netherlands, Malta, Ireland, Liechtenstein, Albania, Serbia French Guiana, Guadeloupe, Virgin Islands, St. Martin, Martinique, Reunion, New Caledonia, Tahiti

[*]:[*1],[*2],[*3],[*4], AM1701, AM1905, AM2201, AM2202

·Name: Panasonic Automotive Systems Co., Ltd.

·Address: 4261, Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken 224-8520, Japan

Importer, Address :

Mazda Motor Logistics Europe NV

Blaasveldstraat 162, 2830 Willebroek, België

Mazda Motor Poland sp.zo.o.

ul. Postępu 14B, 02-676 Warsaw, Poland

Mazda Motor Czech, s.r.o.

Türkova 2319/5b, Chodov, 149 00 Prague 4, Czech Republic

Mazda Motor Slovakia, s.r.o.

LINDNER II, Galvaniho 7/B, Bratislava - Ružinov 821 04, Slovak Republic

Mazda Motor Logistics Europe NV Merkezi Belçika Türkiye İstanbul Şubesi

Merdivenköy Mah. Dikyol Sok. Business Istanbul B Blok No:2/72, 34732 Kadıköy- Istanbul, Turkey

Model No.[*]

Model No.[*1], AM1701 Specifications of Bluetooth

Frequency band: 2402-2480MHz

Maximum radio-frequency power: 13.19mW Max

Specifications of WLAN

Frequency band: 2412-2472MHz

Maximum radio-frequency power: 56.23mW Max

Model No.[*2], AM1905

Specifications of Bluetooth

Frequency band: 2402-2480MHz

Maximum radio-frequency power: 19.95mW Max

Specifications of WLAN

Frequency band: 2412-2472MHz

Maximum radio-frequency power: 56.23mW Max

Model No.[*3], [*4], AM2202 Specifications of Bluetooth

Frequency band: 2402-2480MHz

Maximum radio-frequency power: 9.77mW Max

Specifications of WLAN

Frequency band: 2412-2462MHz

Maximum radio-frequency power: 31.6mW Max

Model No.[*4], AM2201 Specifications of WLAN

Frequency band: 5745-5825MHz

Maximum radio-frequency power: 12.13mW Max

Hereby, Panasonic Automotive Systems Co., Ltd. declares that the radio equipment type [*] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.ptc.panasonic.eu/

Me anë të kësaj, Panasonic Automotive Systems Co., Ltd. deklaron se pajisjet e radios [*] janë në përputhje me Direktiv ën 2014/53 / BE.

Teksti i plotë i deklaratës së BE-së për konformitetin është në dispozicion në adresën e mëposhtme të internetit: https://www.ntc.panasonic.eu/

С настоящото Panasonic Automotive Systems Co., Ltd. декларира, че този тип радиосьоръжение [*] е в съответств ие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.ptc.panasonic.eu/

Tímto Panasonic Automotive Systems Co., Ltd. prohlašuje, že typ rádiového zařízení [*] je v souladu se směrnicí

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.ptc.panasonic.eu/

Hermed erklærer Panasonic Automotive Systems Co., Ltd., at radioudstyrstypen [*] er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.ptc.panasonic.eu/

Hiermit erklärt Panasonic Automotive Systems Co., Ltd., dass der Funkanlagentyp [*] der Richtlinie 2014/53/EU

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.ptc.panasonic.eu/

Με την παρούσα ο/η Panasonic Automotive Systems Co., Ltd., δηλώνει ότι ο ραδιοεξοπλισμός [*] πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.ptc.panasonic.eu/

Por la presente, Panasonic Automotive Systems Co., Ltd. declara que el tipo de equipo radioeléctrico [*] es conforme con la Directiva 2014/53/UF.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.ptc.panasonic.eu/

Käesolevaga deklareerib Panasonic Automotive Systems Co., Ltd., et käesolev raadioseadme tüüp [*] vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

https://www.ptc.panasonic.eu/

Panasonic Automotive Systems Co., Ltd. vakuuttaa, että radiolaitetyyppi [*] on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.ptc.panasonic.eu/

Le soussigné, Panasonic Automotive Systems Co., Ltd., déclare que l'équipement radioélectrique du type [*] est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.ptc.panasonic.eu/

Panasonic Automotive Systems Co., Ltd. ovime izjavljuje da je radijska oprema tipa [*] u skladu s Direktivom 2014/53/FII

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

https://www.ptc.panasonic.eu/

Panasonic Automotive Systems Co., Ltd. igazolja, hogy a [*] típusú rádióberendezés megfelel a 2014/53/EU irá nyelvnek

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.ptc.panasonic.eu/

Hér með lýsir Panasonic Automotive Systems Co., Ltd. því yfir að gerð útvarpsbúnaðarins [*] sé í samræmi við tilskipun 2014/53 / ESB.

Heildartexti samræmisyfirlýsingar ESB er að finna á eftirfarandi internetið:

https://www.ptc.panasonic.eu/

Il fabbricante, Panasonic Automotive Systems Co., Ltd., dichiara che il tipo di apparecchiatura radio [*] è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.ptc.panasonic.eu/

nttps.// www.ptc.panasonic.ca/

Aš, Panasonic Automotive Systems Co., Ltd., patvirtinu, kad radijo įrenginių tipas [*] atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.ptc.panasonic.eu/

Ar šo Panasonic Automotive Systems Co., Ltd. deklarē, ka radioiekārta [*] atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.ptc.panasonic.eu/

B'dan, Panasonic Automotive Systems Co., Ltd., niddikjara li dan it-tip ta' tagħmir tar-radju [*] huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej: https://www.ptc.panasonic.eu/

Herved erklærer Panasonic Automotive Systems Co., Ltd. at radioutstyrstypen [*] er i samsvar med direktiv 2014/53 / FU.

Hele teksten til EU-samsvarserklæringen er tilgjengelig på følgende internettadresse:

https://www.ptc.panasonic.eu/

Hierbij verklaar ik, Panasonic Automotive Systems Co., Ltd., dat het type radioapparatuur [*] conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.ptc.panasonic.eu/

Panasonic Automotive Systems Co., Ltd. niniejszym oświadcza, że typ urządzenia radiowego [*] jest zgodny z dyrektyw ą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.ptc.panasonic.eu/

O(a) abaixo assinado(a) Panasonic Automotive Systems Co., Ltd. declara que o presente tipo de equipamento de rádio [*] está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

https://www.ptc.panasonic.eu/

Prin prezenta, Panasonic Automotive Systems Co., Ltd. declară că tipul de echipamente radio [*] este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.ptc.panasonic.eu/

Ovim, Panasonic Automotive Systems Co., Ltd. deklariše da je [*] u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 2014/53/EU

Pun tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

https://www.ptc.panasonic.eu/

Panasonic Automotive Systems Co., Ltd. týmto vyhlasuje, že rádiové zariadenie typu [*] je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.ptc.panasonic.eu/

Panasonic Automotive Systems Co., Ltd. potrjuje, da je tip radijske opreme [*] skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.ptc.panasonic.eu/

Härmed försäkrar Panasonic Automotive Systems Co., Ltd. att denna typ av radioutrustning [*] överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

https://www.ptc.panasonic.eu/

Panasonic Automotive Systems Co., Ltd., [*] türü telsiz ekipmanının 2014/53/EU Direktifine uygun olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden

ulaşılabilir:

https://www.ptc.panasonic.eu/

Co ова, Panasonic Automotive Systems Co., Ltd. изјавува дека типот на радио опрема [*] е во согласност со Директ ивата 2014/53/EU.

Целосниот текст на декларацијата за усогласеност на ЕУ е достапен на следната интернет адреса:

https://www.ptc.panasonic.eu/

[*]:[*1],[*2],[*4]

Manufacturer

·Name: Panasonic Automotive Systems Co., Ltd.

·Address: 4261, Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken 224-8520, Japan

Importer, Address :

Mazda Motors UK Limited

Crossways Business Park, Victory Way, Dartford DA2 6DT, Kent, UK

Model No.[*]

Model No.[*1]

Specifications of Bluetooth

Frequency band: 2402-2480MHz

Maximum radio-frequency power: 13.19mW Max

Specifications of WLAN

Frequency band: 2412-2472MHz

Maximum radio-frequency power: 56.23mW Max

Model No.[*2]

Specifications of Bluetooth

Frequency band: 2402-2480MHz

Maximum radio-frequency power: 19.95mW Max

Specifications of WLAN

Frequency band: 2412-2472MHz

Maximum radio-frequency power: 56.23mW Max

Model No.[*4]

Specifications of Bluetooth

Frequency band: 2402-2480MHz

Maximum radio-frequency power: 9.77mW Max

Specifications of WLAN

Frequency band: 2412-2462MHz

Maximum radio-frequency power: 31.6mW Max

Frequency band: 5745-5825MHz

Maximum radio-frequency power: 12.13mW Max

Hereby, Panasonic Automotive Systems Co., Ltd. declares that the radio equipment type[*] is in compliance with The

Radio Equipment Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.ptc.panasonic.eu/

Moldova

[*]: AM1701, AM1905, AM2201

Producător

Numele : Panasonic Automotive Systems Co., Ltd.

Adresa: 4261, Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken 224-8520, Japonia

Importatorii Numele:

Denumirea comercială înregistrată : Mazda Austria Gesellschaft m. b. H. Adresa poștală : Ernst Diez Strasse 3, 9020 Klagenfurt, Österreich

Numarul modelului.[*]

Numarul modelului. AM1701

Bluetooth

Banda de frecvență : 2402-2480MHz

Puterea maximă a frecvenței radio : 13.19mW Max

WLAN

Banda de frecvență : 2412-2472MHz

Puterea maximă a frecvenței radio : 56.23mW Max

Numarul modelului. AM1905

Bluetootl

Banda de frecvență : 2402-2480MHz

Puterea maximă a frecvenței radio : 19.95mW Max

WIAN

Banda de frecvență : 2412-2472MHz

Puterea maximă a frecvenței radio : 56.23mW Max

Numarul modelului. AM2201

Bluetooth

Banda de frecvență : 2402-2480MHz

Puterea maximă a frecvenței radio : 9.77mW Max

WLAN

Banda de frecvență : 2412-2462MHz

Puterea maximă a frecvenței radio : 31.6mW Max

Banda de frecvență : 5745-5825MHz

Puterea maximă a frecvenței radio : 12.13mW Max

Prin prezenta, Panasonic Automotive Systems Co., Ltd. declară că tipul de echipamente radio [*] este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață aechipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

https://service.panasonic.ua

Ukraine

[*]:[*1],[*2],[*4]

Випобники

назву компанії; Panasonic Automotive Systems Co., Ltd.

адресу; 4261, Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken 224-8520, Japan

Імпортери

назву компанії; SC AUTO International

адресу; 22A, Stepana Bandery ave, Kiev, 04655, Ukraine

моделі;[*]

моделі;[*1]

Bluetooth

смугу радіочастот, в якій працює радіообладнання; 2402-2480МНг

максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 13.19mW

MAIL A NI

смугу радіочастот, в якій працює радіообладнання; 2412-2472МНz

максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 56.23mW

моделі;[*2]

Bluetooth

смугу радіочастот, в якій працює радіообладнання; 2402-2480МНz

максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 19.95mW

WIAN

смугу радіочастот, в якій працює радіообладнання; 2412-2472МНz

максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 56.23mW

моделі;[*4]

Bluetooth

смугу радіочастот, в якій працює радіообладнання; 2402-2480МНz

максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 9.77mW

WLAN

смугу радіочастот, в якій працює радіообладнання; 2412-2462МНz

максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 31.6mW

смугу радіочастот, в якій працює радіообладнання; 5745-5825МНz

максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 12.13mW

справжнім Panasonic Automotive Systems Co., Ltd. заявляє, що тип радіообладнання [*] відповідає Технічному регл аменту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

https://service.panasonic.ua/

(розділ «Технічне регулювання»)

Mongolia



ID: A19000702



ID: A18000275 ID: A19000702 ID: A22000763

Kazakhstan, Armenia, Russia, Belarus [*]: [*1], [*2], [*3]



Модель No..[*

Страна происхождения: Таиланд, Мексика.

производитель

•Название: Panasonic Automotive Systems Co., Ltd.

•Адрес: 4261, Иконобэ-тё, Цузуки-ку, Йокогама-ши, Канагава-кен 224-8520, Япония.

Местный представитель

000 «Юнисервис»

Россия, 111123, г. Москва, ул. 1-ая Владимировска, д. 20А, этаж 1 пом. 1, комн. 17, ОГРН 5107746076873.

Belarus

[*]: AM1701, AM1905, AM2202



Нумар мадэлі.[*]

вытворца

·Назва: Panasonic Automotive Systems Co., Ltd.

•Адрас: 4261, Іканабе-тэ, Цузукі-ку, Ёкагама-шы, Канагава-кен 224-8520, Японія.

Местный представитель

000 «Юнисервис»

Россия, 111123, г. Москва, ул. 1-ая Владимировска, д. 20А, этаж 1 пом. 1, комн. 17, ОГРН 5107746076873.

This telecommunication equipment conforms to the standard or technical requirements of NBTC.



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับ ใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต วิทยุคมนาคม ตามพระราชบัญญัติวิทยุ คมนาคม พ.ศ. 2498



กลักษ์. โกรคมนาคม กำกับดูแลเพื่อประชาชน Call Center 1200 (โกรฟรี)

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。 低功率射頻器材才使用不得影響飛航安全及干擾合法通信;經發現有干護現象時,應立即停用,並改萬至無干援時方得繼續使用。 前述合法通信,指依電信管理法規定作業之無線電通信。 低功率射頻器材須及受合法通信或工業、科學及醫療用電液輻射性電機設備之干擾。

This product has been Type Approved by Jamaica: SMA – AM1701 This product has been Type Approved by Jamaica: SMA – AM1905 This product has been Type Approved by Jamaica: SMA – AM2202

Garden MPY S.A.

Republica Argentina y Facundo Machain, Asuncion, PARAGUAY

Complies with IMDA Standards DA107248

Oman-TRA D090024 TRA/TA-R/5803/18

TRA
REGISTERED No: ER65894/18
DEALER No: DA0052708/10

Complies with IMDA Standards DA100926

Oman-TRA D090024 TRA/TA-R/12269/21

TRA
REGISTERED No: ER04654/22
DEALER No: DA0052708/10

Oman-TRA D090024 TRA/TA-R/14420/22

TRA
REGISTERED No: ER15049/22
DEALER No: DA0052708/10

מספר זיהו יהיבואן : 510947153

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תבונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית. בלא קבלת אישור משרד התקשורת. בשל החשש להפרעות אלחוטיות

AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément :MR 16863 ANRT 2018 AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément : MR 30047 ANRT 2021 AGREE PAR L'ANRT MAROC Numéro d'agrément: MR34478ANRT2022 Date d'agrément: 13/09/2022

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

NCA APPROVED:BR3-1M-GE2-0C4 NCA APPROVED:7E5-BH-1CB-RDR NCA APPROVED:7E6-M1-182-SRD

BOCRA
REGISTERED No:
BOCRA/TA/2021/4117
BOCRA/TA/2021/6533
BOCRA/TA/2022/7848
BOCRA/TA/2021/6533

Model No.: AM1701, AM1905, AM2202

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party

•Name: Panasonic Corporation of North America •Address: Two Riverfront Plaza, Newark, NJ 07102-5490 •Support Contact: https://shop.panasonic.com/support

NOTE

Properly shielded and grounded cables and connectors must be used for connection to host computers and / or peripherals in order to meet FCC emission limits.

▲ WARNING

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). [But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body.]

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FCC CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio System

With DAB radio

Manufacture, Address - Oretici, Adres - Prodhim | Adresa. Paragonio Corcorat on

4261 Ikonobericho, Tauzukirku, Yokohama-City, Kanagawarken 224-8520, Japan

Model, ND OR TM80F24M, CG TM2FF0TT, RD TM2NF0G0, RD TM80F44M

Importer, Audress, İthalsiy, Abres, İmportuesi, Alfress, Marda Mator Logistica Firmpa, W. Blassveldstraat 182, 2880 Willebrook, Belg & Mazda Motor Foland apzolo. ul. Poctgau 14B, 02-676 Waroaw, Polano

uti, Poctago 1785, 02-976 Maradw, Polano Mazde McLor Czech, sirio. Türkova 8719/55, Chodov, 149 Ct. Pragile 4, Gzech Republic Mazde Motor Slocakia, sino.

LIND MLR ..., Ce vaniho 773, Bratislava — Ružinov 821 04, Slovek Republic

	Me snë të këtij dokur snit "Panasonio Corporation" daktaron se radiopajisja e lipit të listuar më lart është në përputhshmëri me Diraktivën
	2014/59/BE
	Hyning fillp //www.ptc.panasonic.su/, klikoni "Declaration of Conformity (Dektarata e pặrputhahmānisā)", shkudani termin kyç nặ kuting s kặ
Hoaria	Initialité terraves leves des nums le substricce versionie e tundit le "DEGLARATION of CONFORMITY (DEKLARATEN E PERPUTISHMER S
	E)*(D:C).
	Tamil kyr. GQ-TM28ED4M
	С настрящого Panasonic Corporation дакларира, че радироборушванего от гипа, посочен почторе,
	в в съответствие с Директива 2014/55/EC
	Отищете на http://www.ptc.parraeonic.eu/ шракиете върху "Declaration of Conformity (Декларация за съответствие)",
Bulmanan	в ввещете ключовата шума, дадена по-долу, в полето за гърсене по ключова дума и ше можете да изгетлите най-новата "
Haiger er	DECLARATION of CONFORMITY (ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ) (ФоС).
	Кикчова дум а. СО-ТМ28E04M
	Timto společnost Panezonio Corporation prohlažuje, že výše uvedené rádiové zářízení typu CQ TM28E04M je v soulodu se smělnicí
	2014/53/EU.
So-c i	Když přejdete na stránky http //www.ptc.panasonic.eu/. kliknete na "Declaration of Conformity (Prohládaní o shodě)" a zadáte čislo modelu CC.
	TM2BE64M do pole pro vyhledávání podle klýčováho slovai budele si mod stáhnoul nejnovější verzi "DECLARATION of CONFORMITY
	(PROHLÁSENÍ O SHODÉ)* (DRO).
	Harmad arklærer Panasonic Corporation, at radioudatyret at typen nævet oventor
	er i overenestemmelse med direktiv 2014/53/EU.
Danieh	Du kari hente den seneste "DECLARAT ON s" CONFORMITY (OVERENSSTEMMELSESERKLÆRING)" (DoC) ved at bespije
-er ner	http://www.ptc.panasonic.eu/, klikke på "Declaration of Conformity (Overensstemmelseserklæring)" og indtaste nedenstående nøgleord i feltet
	lil negleodseg ning.
	Nggleord, CQ-TM28E04M
	Hiernit erklärt Panasonic Corporation, dasz der obsog enante Eunkanlag etyp
	dar Richtlinia 2014/5%/EU antspricht
Germer	Klicken Sis unter http://www.ptc.panasonic.su/ aut , Declaration of Conformity' (Konformity'therk@nung), a sherSie das nachstshende Schlüsselwort in die Schlüsselwort suche ein und laden Sie
	g lebenste das nachstenende schligsserwort in die schligsserwortsuche ein und naden sie die aktuelle "DEGLARAT ON of CONFORMITY (Konformitätserklärung) (DoC) berunter.
	Schlüsselwort: CO TM2HE04M
	Με την παρούσα, η Panasonic Corporation Εηλώνει ότι ο ραδιοεξοτέλευμος που παρατίθεται ανωτέρω
	συμμορφώνεται με την οδηγιο 2014/6/HEE
	Emakra Bára τον ιστότοπο http://www.urbo.panasonic.eu/, κοντα κλικ στο «Declaration of Contermity (Δήδωση συμμόρουσηκή»
árock	καταχωρίστε την παρακάτω λέξη κλειδί στο πλαίσιο αναζήτησης λέξης κλειδιού για να μπορέσετε να κατεβάσετε
	Thy me Treesyon goedlaration of Conformity (AHADEH EVMINOPOCHED) (DO).
	ACEN KASIGE CO TM28EC4 H
	Hereby, Panasonio Corporation declares that the radio equipment type Listed above
	is in compliance with Directive 2014/53/EU.
Englan	Access to http://www.ptc panasonic eu/,click "Declaration of Conformity",
Ligion	antar the balow Keyword into the keyword search box, you can download
	the latest*DECLARATION of CONFORM TY** (DoC).
	Keyword: GQ TM28E24M
	Por la presente. Parrasonio Corporation declara que el equipo de radio del tipo citado más amba
	oumple con lo establecido en la Birectiva 2014/53/UE.
	Acceds a http://www.ptc.panascnic.eu/ hag actic en "Declaration of Conformity (Declaración de conformidad)"
Donastala	introduzca la palabra clave indicada a continuación en el cuadro de búsqueda y podrá descary a la última "DECLARATION of CONFORMITY."
Sperish	
Spariah	(Decleración de conformidad)* (DeC) Palabra clave: Cd Th428EC4M
Spanish	(Declaration de con our aded)* (DeC) Pelobra deve: CO TRABECPAN
Spanish	(Destinación de con our idado" (DeC) Palobra clave: CO TRAZECEAM Kaesclevag adektarearib Panasznic Corporation, et esima initud naudiossadme (QQ)
Sperish	Dealermoider, vie. oon 'on relate)" (DeiC) Palobra claver: On ThibEEC+M Kigentlevag artiskteresin Pannannic Corporation, et eelmainitud naadiossadme (QQ) voetbo direlatiini 2014/5/SCL voetsetels. Voetbo direlatiini 2014/5/SCL voet
	(Declaración de con our adud)" (DeC) Palobra clave: CO TRAZECAM Kaesclavag adektarearib Parascolo: Corporation, et estima initiud raadicas adme 100p
	Declaración de con our adud?" (DeC) Palotra claver: Col Th/BEC/PAN Kascalevog adeletimento Paroscorio Corporation, se esimainitud rapidiossadine (QQ) vedab direktiini 2014/5.9CL növetele. Altrig evedab direktiini 2014/5.9CL növetele. Altrig evedab direktiini 2014/5.9CL planisassiric eur. kiūgsake valkiul. Declaration of Conformity* (Vasianusdekla aktioon),
Spariah Beto via	Gedinnisticn is non-normality (DeC) Pelabra claims: CD_TM28EC4M Kastaleng admittmenth Princencine Corporation, or estimate interaction and the 1000 vestable direction 12014-53EL injusted is. Many several behalf 2014-53EL injusted is. Many several behalf 10014-53EL injusted is. Many several behalf 10014-53EL injusted is. Many several behalf 10014-53EL injusted is. Many several behalf 10014-53EL injusted is. Many several behalf 10014-53EL injusted is. Many several behalf 10014-53EL injusted is. Many several behalf 10014-53EL injusted is. Many several behalf 10014-53EL injusted injuste

Personantic Corporation valeuralisms, state adebtity state for conficiently yap in glydig disentiturised of Confidence valeuralisms. Vierneish in DCCARATHOR of Confidence variations are valeuralisms. Vierneish in DCCARATHOR of Confidence variations are valeuralisms. Vierneish in DCCARATHOR of Confidence variations are valeuralisms. Valeuralisms of Confidence valeuralisms. Per la priesmal, Personalisms of Confidence valeuralisms. Per la priesmal, Personalisms Corporation decides expelled by per disquisment radio signification of confidence valeuralisms. Per la priesmal, Personalism Corporation decides expelled by per disquisment radio signification of confidence valeuralisms. Per la priesmal personalism Corporation decides expelled by per disquisment radio signification of confidence valeuralisms. Internalisms of the personalisms of confidence valeuralisms of Confidence valeuralisms of confidence valeuralisms. Internalisms of the Confidence valeuralisms of Confidence valeuralisms of confidence valeuralisms. Internalisms of the Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of valeuralisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeuralisms of Confidence valeuralisms of Confidence valeuralisms. Internalisms of Confidence valeur
Vierneben DECLARATION of CONFORMITY (VANTINUS*EDMUKASUUSVARUUTUS)* (Doc)on ladottaviosa verkitotekulla Mythria private provincia suf validementalis latina tribula for disclaration of Conformity valadinuszernutulaisuusvaluurusa*) ja vojatemalla latina tribulatusuna halubularutulaisuusvaluurusa*) ja pailemalla olia ministiin halubusuna halubularutulaisuusvaluurusa*) ja pailemalla latina tribulatusuusvaluusuusa*) ja pailemalla olia ministiin halubusuna latinativa suoria talatusva suoria talatusva suoria talatusvaluusvaluusuusa*) ja pailemalla olia ministiin halubusuna suoria talatusvalusvaluusval
Map New york parasonic set
valibremalis loshs "Dischartion of Carfornity repatimization valuable users of carefully and administration of carfornity repatimization of the production of an initial balance and studentials and the production of the prevention of composition debts rape for the degraphement radio repetitor of the prevention of composition of the prevention of the pre
voldsmalls of an ministra haluson habutentia, an Habutentia, an Habutentia, and Carlos of the program of the pr
Mediuseins COCT-MAREDOM Part to presente, Present Corporation declare que le type d'éculpement radio répetitoris d'allereurs et la présente, Present le dissertive 2014/53/LE Part to présente, Presente COCT-MAREDOM CONFORMITY (DECLARATION DE CONFORMITÉ) > (DOC), reindez vous eur le dissertive part de dissertive de la dissertive 2014/53/LE Presente de Martin de la conformité par robri dés dissertives de la conformité par robri dés dissertives de la conformité par robri dés dissertives de la conformité par robri dés dissertives de la conformité par robri dés dissertives de la conformité par robri dés dissertives de la conformité de la conformité par robri dés dissertives de la conformité de la conform
Habbassina COTTRASSIDENT Part la griednic, Particula Componition diplane que le type d'équipement radio répetioniq ci-clessus set en continuing avec la riterative 2014/53/LE Part la griednic, Particule 2014/53/LE Priednic Habbassina COTTRASSIDENT Priednic Habbassina COTTRASSIDENT Ovitine Paradonic out, diques ou s. Declaration of Conformity (Déclaration de centromité) », puis valeires au le mot dig di-devenous si en temp de authention par note delle. Mot régis COTTRASSIDENT Ovitine Paradonic Corporation (ajardique du je redigitée opraire virte real edins izraci unitée (Supposite Deve de paradonic Corporation et distillation de Conformity (ajava o cutdadnosti), unitée (Supposite Supposite Corporation et virte (Supposite Conformity) (ajava o cutdadnosti), unitée (Supposite Supposite Corporation et virte (Supposite Corporation et al. Estate Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et al. Estate Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporation et virte (Supposite Corporatio
Value of the Conformal growth is intention 2014/5/SAIE
Proc. Neighborg et al deminé et DECLARATION of CONFORM TY/DECLARATION DE CONFORM TÉ) » (DoC), rendez vous sur My Proves ple pranación du, diques aux et Declaration of Conformity (Declaration de conformity) », puis valeiras az le mot digicile vous sur tempo de achierathe per note deja. Mot dej 4: CO TURBERGO CONFORMITO (Declaration of Conformity (Declaration de conformity) », puis valeiras az le mot digicile vous sur tempo de achierathe per note deja de rendigida oprana vinde nex séens bried a vitadou » Divistrion (2014/2004). Ovirre Panacionia Corporation Ligivilipie de je rendigida oprana vinde nex séens bried adjecture par hip dever pto ponecione ou kilkintis "Declaration of Conformity" (play a cudidationi), unestés ligitars rigida (On of CONFORMITY (ELEVANI O SULLA DENOST) (Declaration de ponecioni (Conformity) (Declaration (Confo
http://www.ptp.pama.onic.outp.dipuse.wu.s. Decidention of Conformity (Decidention de conformity) s., puis valvieses_termot significances in the conformity of the conformity o
http://www.ptp.pama.onic.outp.dipuse.wu.s. Decidention of Conformity (Decidention de conformity) s., puis valvieses_termot significances in the conformity of the conformity o
is change of anotherphe par note ide. Mortaly SCOTTUBERDAM Onime Panaconic Corporation Lightfulge do je radijeko oprama vrote navedens izrazi u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU u sklada u Sikakhom 2014/25/EU A Panaconic Corporation evennel rijalithanik arroj, hogy a farr meg ladit u publi rijalo berendzegeleki megfelsineki s 2014/25/EU izr pysh ddilipsolnik. Lipjen a hithy Provov pip panaconicus (Jariani, Astination a Declaration of Conternity (Magnelialia gij nyllakkozal) stemme est tijs be au dabbi fulkozacje a udiosac kersadinacjejen, ha szerstni skoleni aligia bib DCCLARATION ON OF CONTORM TY* (Magnelialia gij nyllakkozi) dokumentumot (Idoc Taji). Kultozog: CO TOZEIEDAN Har maj ligish DCCLARATION ON OF CONTORM TY* (Magneliadiosagii nyllaklozot) dokumentumot (Idoc Taji). Kultozog: CO TOZEIEDAN Har maj ligish panaconic Corporation by ylir ap stangerendur (Magnelia) majura (Idoc Taji). Kultozog: CO TOZEIEDAN Har maj ligish panaconic Corporation by ylir ap stangerendur (Magnelia) majura (Idoc Taji). Kultozog: CO TOZEIEDAN Har maj ligish DCCLARATION of CONFORMITY (SAMRAEM SYFIRLY SINKI NA). (DoC). Tag undarigmen OC TAZEICOAN Jayana (Idoc Taji) majura (Idoc Taji)
Morting COLORATION CONFORMETY (SANRQM SYPERLY SMARQM (SYPERLY SMARQM SYPERLY SMARQM) Little and stage of the Paraconic Corporation identification of Conformity (given a outlated out of state) at the Stage of the Conformity (given a outlated out of the care principle aging Myster siged in Caste preuable signature and the stage of the Conformity (given a outlated out), amenited Myster siged. On the Conformity (given a preuable signature) and conformity (given a outlated out). A Panascanic Corporation exemel rigitalization and the stage of the stage of the Conformity (Marginalization of Conformity). A Panascanic Corporation exemel rigitalization and the stage of the stage o
Oviere Pennomic Corporation ispatigated as je realigidos opiraria vista nove densi cared under Johanne SCHARSEU Prietar zo. http://www.ptc.ponesonic.eu/. ilikiaria, p. obstantion of Conformity (glava o audidational), userale kijuzina rijed Koja je inariadena u realaria usera
u skladu u Divektioni 2016/36/EU peritab za http zww.pt poneonia eus i Mistria, Destaration of Conformity (zjava o oukladnosti, unestila kjuživa i ječ koja je nace dans u restelarki u oteki za prelaživaje kjuživa i ječ koja je nace dans u restelarki u oteki za prelaživaje kjuživa i ječ koja je nace dans u restelarki u oteki za prelaživaje kjuživa i ječ mod zaste pezuzeli najprejava, i DECLARAT ON di CONFORBITY (ZJAVII O SURLADNOST) ("OEC.) Njuživa rigot DO TRESCOST A Panascnic Greporation svenenia rijalitianski azrot, hogy a farm mej podet trugit zašte berendazelecki megificializanski azrot, hogy a farm mej podet trugit zašte berendazelecki megificializanski azrot, hogy a farm mej podet trugit zašte berendazelecki megificializanski operativa zašte i stava i stava i stava zasta i stava stava i stava i stava i stava sta
Prietap za hita zwer to ponesonie ou Mikieria. Declaration of Conformity (javva o outlatinosti), usesita kijužou rijeć koja je manadana u svalanku u okini za prieduživanja kijužou rijeć možate preuzeti najaroviu. DECLARAT ON of CONFORMITY (ZLANT) OS DINLA DONOSTI) (DEC). Najazin rijeć DO TRESCOMI. A Panascelio Graporation everneli mjoliticinik ampl, hogy a first meg poditi upus delige berendzešetek) segletikinak o 2014 kSSCU izi prysh edipracinak. Lighter albeit drugun saldos berendzešetek) segletikinak o 2014 kSSCU izi prysh edipracinak. Lighter albeit drugun saldos berendzešetek) segletikinak o 2014 kSSCU izi prysh edipracinak. Lighter albeit kinika od pisk DECLARAT ON OF CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacati) dokumentumot (doc 7aji). Kutnard CONFORMITY (Megleteldsegii rijakilacation of Conformity (Megleteldsegii rijakilacation of Conformity (Megleteldsegii rijakilacation of Conformity). (Doc). Proceedia doc 7aji). Academe oli zich Priezus (Megleteldsegii rijakilacation of Conformity (Megleteldsegii rijakilacation of Conformity). (Megleteldsegii rijakilacation of Conformity). (Megleteldsegii rijakilacation of Conformity). (Megleteldsegii rijakilacation of Conformity). (Megleteldsegii rijakilacation of Conformity). (Megleteldsegii rijakilacation of Conformity). (Megleteldsegii rijakilacation of Conformity). (Megletelds
omenia Njužiru nječ koja je narodelnik u odelaka u odela za prekaživaja Njužiru nječ koja je narodelnik u odelaka previdelnik njenogu. DERLARATO NG CONDORSITY (ZJAVIJ O SUKLADNOST) (DEC). Njužiru pijeć DO THESCOMI A Parascenic Corporation evenneli njužitirank ampl, hogy o firm meg podri tjuruj (sido berendosejeki) meglitelatirak ampl, hogy o firm meg podri tjuruj (sido berendosejeki) meglitelatirak a 2014/35/UL ja njeh editjacolnak. Lejpin a heji vizuv pje panasonicu už datiru, katinitato ni, Declaratino o Conternity' (Magrielilosigi njužirkoral) eterme editjaci pitu DCCLARATO NO CONFORM TY' (Meglielidoseji njekib zool) dokumentumot (doci aji). Kulmorji COTTAZEONA Har mež lijaki DCCLARATO NO CONFORM TY' (Meglielidoseji njekib zool) dokumentumot (doci aji). Subarati dokumentumot vizuv pjekib podrijaci pitu vizir až ofrancjenidur (Mrepebanačur eri semarami vižirkovim od Nakipam 2014/35/ESIS Fardu a hito vizuvim od Nakipam 2014/35/ESIS Fardu a hito vizuvim od Conformaty' (SAMRAS SYFIRLY SINKANNA) (Doc). Tga undarigmer co ThizeCOAAT 1 fabbricante, Panasonic Corporation dichiana citi bipo di apparaschiatura radio etencato copra a conforma alta Janistica 2014/35/UL. Amediema iti zo hapri-vavvum pje panasonica us, fare dia su "Declaration of Conformity" (Dichianazione di Conformity) elitara il tradiciona di zo hapri-vavvum pje panasonica us, fare dia su "Declaration of Conformity" (Dichianazione di Conformity) a tradiciona di zo hapri-vavvum pje panasonica us, fare dia su "Declaration of Conformity" (Dichianazione di Conformity) a tradiciona di zo hapri-vavvum pje panasonica us, fare dia su "Declaration of Conformity" (Dichianazione di Conformity) a tradicionale pode panasonica di conformity (Dichianazione di Conformity) a tradicionale pode panasonica di conformity (Dichianazione prote conformity) a tradicionale protectionale protectiona parasidis indocionale protectionale protectionale protectionale protectionale protectionale protectionale protectionale protectionale protectionale protectionale protectio
insprove, DECLARATION of CONFORMITY (ZJANU O SUKLADNOST) (Decl). Kijdon rijdo DO TREGEDHA A Panaschic Corporation exameni nyllaticarik ampl, hogy o firm meg lodd tyrug (addice beendbaselek) megfeletineta a 2014/35/CU is great deligracionix. Light in high with provided penaschic subjects of panaschic sub
Kijužna rijec Do THESECHM A Panascnic Corporation evennel nyllaticarik ampl, hogy a first meg add typug (adde beensteeleek) magifetainatis a 2014/SSCU ja nystv didingacinak. Ligipe a http://www.pip panascnic.au/, didain, katinitaran a, Declaration or Controlly (Magrieliata (gi nyllaticara) stemme et al., in the serial stem of the act algibit funcación autorità and participation or Controlly (Magrieliata (gi nyllaticara) stemme et al., and the act algibit funcación autorità (serial discontrollation) a leg path. DCDLARAT ON OT CONTRORT TY. (Negleteldeagi rejidale.cot) dokumentumot (doc 'aji). Kurtacó COT TUBERDAT Her með kjair Panasonic Corporation þri yfir eð oftengreindur (tverpebandur er í semmer min við Riskipan 2814-756-858) Fara við hittp://www.pip panasonic path yfir eð oftengreindur (tverpebandur er í semmer min við Riskipan 2814-756-858) Fara við hittp://www.pip panasonic oftengreindur (tverpebandur er í semmer min gillatina 2014-756-858) I riðbridanne, Declaration of corporation of pag ja buðu voll við pag pag pag pag pag pag pag pag pag pag
A Panaschie Corporation exembel injusticanik ampl, hogy of firm meg ladit upung radiot berendbasekelih implications and professionals. I I I I I I I I I I I I I I I I I I I
typung radiob berendezeelekin medifelatinatis a 2014/SSCUL iangveh edityasoriak. Lepina hithy Proving promocenium, Udainn, Astintona no Declaration of Conternity (Magnetistas gol nyslekozał) słemno és tylis be an obbit Kutsaczd a subraco kersadeneziden, ha szeretha letgleni słegi pist. DCCLARATO NOT CONFORMITY (Meglelediosagi myslekozał) dokumentumot (doc 'aji). Kutsaczgi COT TOSEBLACA Har meż lysia Pranocenia Corporation jeż ylir og stangreindur (Magnetistas) er i samorami wich Nishbyra 2014-15588 Farbu a hitti prowingte panaconic swy.smetitu a Declaration of Conformity (Samoramanisyfirlysing) (słąba official in the samorami symonomic swy.smetitu a Declaration of Conformity (Samoramanisyfirlysing) (słąba official in the samorami symonomic swy.smetitu a Declaration of Conformity (Samoramanisyfirlysing) (słąba official in the samorami symonomic swy.smetitu a Declaration of Conformity (Doc), Togu undurujeme - CO TOJECCOMI 1 febricarske, Panaconic Corporation dichiara chel tipo di apparezchiatura radio elencato copra a conforma alla Janiellus 2014/SSUC. Amederia alla ot Implication dichiara chel tipo di apparezchiatura radio elencato copra a conforma alla Janiellus 2014/SSUC. Amederia alla otipo terpoven, pie perinazioni e un', fore ciba un'Declaration of Conformity (Dichiarazione di Conformity) bit an conforma alla Janiellus 2014/SSUC. Amederia alla otipo terpoven, pie perinazioni e un' productioni of Conformity (Dichiarazione di Conformity) sia "DECLARATION of CONFORMITY (Dichiarazione di Conformity)" (Doc) più reserte. Parta didave Con "Amedica" y perinazioni cui y spustatalation (Declaration of Conformity (Allalitica distante)), (rastazzadzio pesitico i stude) preside richia paletiki più distantioni of Conformity (Paletike distante)), (rastazzadzio pesitico i stude) preside richia paletiki più distantioni of Conformity (Dichiarazioni of Conformity) (Allario di Conformita) (Dichiarazione di cipi etti nighini tra-resgia allaketa bishingel meditale cui a stati i stude preside richia i signi etti nin
Lépies a http://www.ptp.penaconic.eu/_citalain_kaintaion a_Declaration of Conternity* (&egréeitate gig) nyterkozaly elemone # Les in 1 * lag jabb_DCCLARA** ON OF CONFORM TY* (Megledésagi injuitate.cut) dokumentumot (.doc*aji). Kultisord; COT** TABLELIAIN * Note that by jabr Panaconic Corporation by yttrae a françainature (Arrapebundum) # of Table Liain # lag jabb_DCCLARA** ON OF CONFORM TY* (Megledésagi injuitate.cut) dokumentumot (.doc*aji). Kultisord; COT** TABLELIAIN # lag jabb_DCCLARA** ON OF CONFORM TY* (Megledésagi injuitate.cut) dokumentumot (.doc*aji). Kultisord; COT** TABLELIAIN # lag jabb_DCCLARA** ON OF CONFORM TY* (Megledésagi injuitate.cut) dokumentumot (.doc*aji). # lag jabb_DCCLARA** ON OF CONFORM TY* (SANIRABIA STPIRLY SINIAINA). # lag jabb_DCCLARA** ON OF CONFORM TY* (SANIRABIA STPIRLY SINIAINA). # lag jabb_DCCLARA** ON OF CONFORM TY* (SANIRABIA STPIRLY SINIAINA). # lag jabb_DCCLARA** ON OF CONFORM TY* (SANIRABIA STPIRLY SINIAINA). # lag jabb_DCCLARA** ON OF CONFORM TY* (SANIRABIA STPIRLY SINIAINA). # lag jabb_DCCLARA** DO CONFORM TY* (Melainadore di lago paracetticale di lago paracetticale di lago del paracetticale di lago paracetticale
Set Bis Set and sjebt Notices of a subsect hereafteredgiber, he accorded telephonic special policy of the process of the pro
Set lipis et al. object full-coacyt is utilised certain-recibilet, he accorded telephonic guide DCCLARATON of CONFORM TY (Megleteldisegii rejidulised) dokumentumot (doc 'aji). Kulterod; COTTABERIAN Harmed joint Panaconic Corporation by yill rejidulised (Menceticum) dokumentumot (doc 'aji). Kulterod; COTTABERIAN Harmed joint Panaconic Corporation by yill rejidulised (Menceticum) dokumentumot (doc 'aji). Kulterod; COTTABERIAN Harmed joint Panaconic Corporation by yill rejidulised (Menceticum) dokumentumot (doc 'aji). Kulterod; COTTABERIAN Harmed joint Panaconic Corporation by yill rejidulised (Menceticum) dokumentumot (Menceticum) dokumen
Har may gight Panasonic Corporation by yitr as strangerindur (throughbunabur et annacem vib history 2014-75/58) Faibu at hit private panasonic sex amelitia a Declaration of Conformity (Samragenisyfriyang) , stakes and sex
Her med lysir Panesonic Corporation joily vitir ab strangerendur (two-pebunation of sentendin with thistipun 2014-75-8588 Farbul with thistipun 2014-75-8588 Farbul with prevent population in the lateration of planger in the production of Conformity (Samraemisyfriyalng) , stabulation with thistipun 2014-75-8588 Farbul with prevent population of CONFORMITY (SAMRAEM SYFIRLY SINVALINA) (DoC). They undimigner COLTESECORN If abbricante, Panasonic Corporation dichians the II tipo dil appareschiatura radio elencato sopra a conforme vital sinvivale 2014-35/U. Amadese al size high-view, pip panasonic est, fore die su "Decharation of Conformity (Dichiasovions di Conformity)" elimetrie la portida chiave segu uste mella casella di recroa per parate chiave per poter conforme is "DOCLARATION of CONFORMITY (Dichiasovione di Conformity)" elimetrie la portida chiave segu uste mala casella di recroa per parate chiave per poter conforme is "DOCLARATION of CONFORMITY (Dichiasovione di Conformity)" (Dichiasovione di Conformity) elimetrie la portida chiave segu uste mala casella di recroa per parate chiave per poter conforme is "DOCLARATION of CONFORMITY (Dichiasovione di Conformity)" (Dichiasovione di Conformity) (Dichiasovione di Conformity) (Dichiasovione di Conformity) (Dichiasovione di Conformity) (Dichiasovione di Conformity) (Intikacedor parate di casella di chiave parate di chiave per parate chiave per para
er i semosem visi Nikipun 2014-15-8588 Fabu Jaht prevent paraconic successful a Declaration of Conformity (Samzaemisyfriyalog)*, olajou efficie ondit leg underigher or in i lederretim og på gi bujou efficiency (Sandarder)*, olajou efficiency (Sandarder)*
er i semosem visi Nikipun 2014-15-8588 Fabu Jaht prevent paraconic successful a Declaration of Conformity (Samzaemisyfriyalog)*, olajou efficie ondit leg underigher or in i lederretim og på gi bujou efficiency (Sandarder)*, olajou efficiency (Sandarder)*
Factor a http://www.ptc.pranaconic.seu/.amelliu.a. Declaration of Conformity (Samraemisyfirfysing)*, stable and stability and office and stap underliner into letteraction op big a judice soll in plants of the conformation of the plants of t
Steamed State of the Control of the
nginata, DECLARATION of CONFORMETY (SAMRAEM SYFERLY SINKALNA), (DoC). Tog undammer Co. Thisspools Corporation dichiara che il tipo di apparaschiatura radio elencato sopra a conforme alla direllica 2014/SSUC. Accedente al lor https://www.jcp.prantanic.eu/, fure dio su "Declaration of Conformity, (Dichiaraziona di Conformity)" elemente la portati oritiona segui uste malici casella di ricerca per parole chiave per poter conforma il "DECLARATION of CONFORMITY (Dichiarazione di Conformity)" (DoC) più recerta. Parola chiave CO" MAECOM Sius dichumentu. Pareschia Corporation' paretitikia lead primisu poteikia lipo rodigi ryžio jamga attinka di aktyve, 2014/88/88. Sius dichumentu. Pareschia Corporation' paretitikia lead primisu poteikia lipo rodigi ryžio jamga attinka di aktyve, 2014/88/88. Sius dichumentu. Pareschia Corporation' paretitikia lead primisu poteikia lipo rodigi ryžio jamga attinka di aktyve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Alle si dividina di silve, 2014/88/88. Editor, Pannaschio Corporation Biddigian si sigi rei tragimiri harvengiu aleaken bavon "un havon kontorni medi Dictiona 2014/88/88. Editor, Pannaschio Corporation Biddigian si sigi rei tragimiri harvengiu aleaken bavon "un havon kontorni medi Dictiona 2014/88/88. Editor, Pannaschio Corporation Biddigian si sigi rei tragimiri harvengiu aleaken bavon "un havon kontorni medi Dictiona 2014/88/88. Editor, Pannaschio Corporation Biddigian si sigi rei tragimiri harvengiu aleaken bavon "un havon kontorni medi Dictiona 2014/88/88. Editor, Pannaschio Corporation Biddigian si sigi rei tragimiri harvengiu aleaken bavon "un havon kontorni medi Dictiona 2014/88/88. Editor, Pannasc
Teg undangmer: Co TN2ECOM Inabbitrante, Panaconic Corporation dichiana che il tipo di apparacchiatura radio atencato sopria a conforme alla infelio 2014/53/LC. Accedere al sino http://www.ptp.panaconic.eu/, fure cilo su "Dechrarion of Conformity," (Dichianazione di Conformity). Izili ar in "DOCLARATION of CONFORMITY" (Editinazione di Conformity)" (Dico) più recerte. Parcia chiave Co "MEECOM Sue dichiane illu-Paracciai Corporation'i peretikio kad primisu potelebile lipor radijo rybio ipranga altinis di siktive 2014/58/EB. Abratica http://www.ptp.panaconic.our.pustalishista.Doclaration of Conformity (Withhes distancia)), [raktacidiz operativo i suedeli preside toliau palaishig raktacidi più prisipi salaisiage maginale, DECLARATION of CONFORMITY (ATT KITES DERLARACILIA). Radiazionis Conformita di prisipi sue prisipi si signi di signi di prisipi subisti di prisipi subisti di presidenti proprisipi si signi signi si prisipi subisti di prisipi subisti di prisipi si prisipi subisti di prisipi si signi signi si signi signi si
I "debddannte, Panasonic Corporation dichiano che il tipo di apparazohiatura radio dencato sopra à conforme alla direttiva 2014/53/UE. Abadene al izo haryowe, tip panasonici euti, fore dia su "Desdandron of Conformity", (Dichiano ione di Conformity) a interdre la pordia chiava segi useti nello casella di ricerca per parole chiava per poter conforma la "DECLARATION of CONTONEM TY (Dichiano ione di Conformity)" (Dec) più resertie. Parola chiave ci oli "MESEOAM Siud distumentu Parrisonic Corporation' peretitikio ikad pirmisu poteilida tipo rodijo ryšio (yanga altituka di aktyve, 2014/63/85). Siud distumentu Parrisonic Corporation' peretitikio ikad pirmisu poteilida tipo rodijo ryšio (yanga altituka di aktyve, 2014/63/85). Li il il vei isoni individa hittyritava panasonic auzi yaustifikita, Destandron of Conformity' (Altititiva di Attarea), (rattazodizio parisitivo i taukeli (reskibit toliau yalakiti, rattazodizio in gi leiste alsiniqua" nagariasi, DECLARATION or CONFORNITY (ATTIKTER) DEKLARACI(A). Rakazodisi Co-Trictese di Attarea di Parola di
I "debddannte, Panasonic Corporation dichiano che il tipo di apparazohiatura radio dencato sopra à conforme alla direttiva 2014/53/UE. Abadene al izo haryowe, tip panasonici euti, fore dia su "Desdandron of Conformity", (Dichiano ione di Conformity) a interdre la pordia chiava segi useti nello casella di ricerca per parole chiava per poter conforma la "DECLARATION of CONTONEM TY (Dichiano ione di Conformity)" (Dec) più resertie. Parola chiave ci oli "MESEOAM Siud distumentu Parrisonic Corporation' peretitikio ikad pirmisu poteilida tipo rodijo ryšio (yanga altituka di aktyve, 2014/63/85). Siud distumentu Parrisonic Corporation' peretitikio ikad pirmisu poteilida tipo rodijo ryšio (yanga altituka di aktyve, 2014/63/85). Li il il vei isoni individa hittyritava panasonic auzi yaustifikita, Destandron of Conformity' (Altititiva di Attarea), (rattazodizio parisitivo i taukeli (reskibit toliau yalakiti, rattazodizio in gi leiste alsiniqua" nagariasi, DECLARATION or CONFORNITY (ATTIKTER) DEKLARACI(A). Rakazodisi Co-Trictese di Attarea di Parola di
a conforme alla directive 2014/SSUE. Abademe alla of hetyrowup the processoric est, face dies su "Deschartion of Conformity" (Dishiesonione di Conformity)" a interdire la portial chieve seg usetin relicio assella di ricerca per parcie chieve per poter conformati b "DECLARATION of CONTONENTY" (Dishiesonione di Conformity)" (De 0) più recerde. Parcia chieve: CO "MESECAM Siud defaumenta Parrisonio Corporation' pereitikio ikad pirmisu poteilida tipo rodijo ryšio (yanga altituka di aktyre, 2014/83/85. Siud defaumenta Parrisonio Corporation' pereitikio ikad pirmisu poteilida tipo rodijo ryšio (yanga altituka di aktyre, 2014/83/85. Li il est isoni isoni pereitiko i taukeli (rekitalo tipo rodijo ryšio (yanga altituka di aktyre, 2014/83/85. Ari So Pornascinio Corporationio au corporationio pereitiko indica pateitiko tipo rodijo ratitalo indica pereitiko indica pateitiko pereitiko indica pateitiko di perei
Actordere al 70 http://www.pt.ponracnic.eu/, fire did sur/Decharation of Conformity (Debinancion di Conformity) are interested to porcial others eagle uder interest caselled directors per prote character protes contrare la "DECLARATION of CONFORM TY (Dichlanacione di Conformity)" (DicO) più recente. Parcia chiave Col "MEECO-M Sur dichurentu Parrectario Corporation' pereitiko kad pirmisu poteidida lipor rolijo ryšio janga attikak direktyre (2014-8988). Abvirtich hip ywww.pt openacioni our pousitalistis activation of Conformity' (Altibities dictarenja), (Tatavirieri transportation our pousitalistis in Declaration of Conformity' (Altibities dictarenja), (Tatavirieri transportation our pousitalistis in Declaration of Conformity' (Altibities dictarenja), (Tatavirieri transportation our pousitalistis in Declaration of Conformity' (Altibities dictarenja), (Tatavirieri transportation our pousitalistis in Declaration of Conformity' (Altibities dictarenja), (Tatavirieri transportation our pousitalistis in Declaration of Conformity' (Altibities dictarenja), (Tatavirieri transportation our pousitalistis in Declaration of Conformity' (Altibities) dictarenja), (Tatavirieri transportation of Conformity (Tatavirieri transportation of Conformity' (Altibities) dictarenja), (Tatavirieri transportation of Conformity (Tatavirieri transportation of Conformity), (Altibities dictarentia), (Tatavirieri dictarentia), (Altibitiga "Declaration of Conformity (Disparazzioni ta' Konformity)) Activation of Conformity (Disparazzioni transportation), (Altibitiga "Declaration of Conformity (Disparazzioni ta' Conformity)) Activation of Conformity (Disparazzioni transportation), (Altibitiga "Declaration of Conformity (Disparazzioni ta' Conformity)) Activation of Conformity (Disparazzioni transportationi disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni disparazioni dispar
Intertine to portion driver seg useth relic caselle di ricerca per parcel chiave per poter conforms
la "DECLARATION of CONTORM TY (Dichianazione di Conformità)" (Dic) più recente. Partia chiave CO "Mastedouth" Ty (Dichianazione di Conformità)" (Dic) più recente. Sius disture di Parissonic Corporation' pareitikis ikad pirmiou poteikis tipo realijo yelio janga attitiska di sikuye (2014/83/85). Ahvarida hip yakwa pio panasanio aur spustelikisti, Decisration di Conformity" (Altikine de Blaradja), (pastedouth production de Blaradja), (pastedouth più pastedouth più pa
la "DECLARATION of CONTORM TY (Dichianazione di Conformità)" (Dic) più recente. Partia chiave CO "Mastedouth" Ty (Dichianazione di Conformità)" (Dic) più recente. Sius disture di Parissonic Corporation' pareitikis ikad pirmiou poteikis tipo realijo yelio janga attitiska di sikuye (2014/83/85). Ahvarida hip yakwa pio panasanio aur spustelikisti, Decisration di Conformity" (Altikine de Blaradja), (pastedouth production de Blaradja), (pastedouth più pastedouth più pa
Pareta chieve: CG TM28C04M Suc disturrentu. Parescado Corporation' peretikkis kad pirmiou poteikla tipo rodijo ryšio įranga attitinta di aktive; 2014/85/85. Li il vai intra sinta province pareta pareta province province province province data attitinta di aktive; 2014/85/85. Li il vai intra sinta province pareta pareta province pro
adlinks disklywy 2014/83/ES. allinks disklywy 2014/83/ES. hill and invitable the process of parameteristic parameteristic of Contromby (Allinkse distancies), instancial limited in the process of parameteristic para
adlinks disklywy 2014/83/ES. allinks disklywy 2014/83/ES. hill and invitable the process of parameteristic parameteristic of Contromby (Allinkse distancies), instancial limited in the process of parameteristic para
atlista disktyre 2014-88-88. Abbits disktyre 2014-88-88. A
Absorbe http://www.pip.gov.com/posaconio.eu/ sputsfills/file
Instruction Instruction
insignate, DECLARATION or GOLDFORNITY (ATT KTIES DEKLARACIJA). Rakkafodis GO-th/2886MA Ar 30 Pornastriis Corporation deklarie ka ispiekis ministii radioiekinta abbiat Die ktifina 20 14-69/CS presibėm Doublides uz visitini filigi./ikww. sp.top parasento.eu/, radioiekinta abbiat Die ktifina 20 14-69/CS presibėm Doublides uz visitini filigi./ikww. sp.top parasento.eu/, radioiekinta uz vaddela / Diocharation of Con foreity* (Attitistina abdidinacija) um statiggretii in modela turpratik ministo abtiligioni in parasento.eu/, pa
Rakkadotis CO-TACREDAM As o Portrascric Corporation delikaris to ispreks minetis radiotekaris attabil Direktiras 2014-95/CS presidem Dodates uz visini hitp://www.jstp.parazenis.eu/; notificikinisi uz vadelar Direktiras 2014-95/CS presidem melitēlanos tuskā ieradet turprdik minēto etelēprácīdu, bi ieppelidetu jounder "DECLARATION e" CONFORMITY (DeC)" (ATBILS"TS) DCLARAC JU, Ablagadas CO-TACREDAM Editor Panasanio Corporation Riddijans is kijs ta tagāmir harvedjiu alendes havon "un havor konformir und-Direktira 2014-793/LE Addess ghall hitp://www.pcr.panasanic.eu/, killiklija "Declaradon o" Conformity (Dilgianozgoni ta" Konformita)" Addellera Ad
Ar So Pornascrite Corporation debtarie ika isprekti ministi radiolektria abbitat Drebtarios 2014-65/CS pronthèm Doddete uz vielni hilly //www.stopparasente.ou/, noticité hills vielni debtaria abbitat Drebtariation of Con for-rity* (Attitutiona debtarios) un abbigorio metidesanos tautis insolate trapratik ministro attitigaria la legipatitidade journitis "DCCLARACTION of CONFORM TY (DeC)" (ATRILIS")S DCLLARAC UI). Abbigoria de CONTRESED 444 Siden, Penastanio Conpraziona Radiojare il Hills et insplimir tax-resigni elenkoli haven "un huora konformi med-Destinus 2014/93/IE. Abbess sphall Repolewes por panascricic eur.) (killikija "Declaration of Conformity", Dikjarozajoni ta Konformita): datha li Kenira killinish Theren tabil "Egent ba-incenta tak-kileru mutleh" taka halizzel id-"DECLARACTION of CONFORMITY (DIKJARAZZJI TA KONFORMITA): I aktur diorent duoc. Kellmo Martiella: CO TRESEDOMI Panascrici Corporation sinlagrar herviral at radiority at av typen never oventor eri sveneva ir red di viskov 2014-50/EU. Neverur viskova pit panascricio eux, kilkis pa "Declaration of Conformity" (asmirovaria ekitgaring) tog taste inn nederiotisende nekkalon
Doublistes zuz-kleich hitg. Newer sich primaranto auf, roddick heit zu sadele z "Declaration of Com for-rig" (Albithitosa deklanicie) um stubigném side sons auté internative traprelle minéte attilisée à la partie débui journée. DECLARATION of CONFORMITY (DeC) (ATBILSTS). Albignées violantes de Conformation hidisjees à Laip ne regional elenkeit haven fun huven konformit met Direttive. 2014-7819. E. Adbess ghall interpréte par la septimie fair versign elenkeit haven fun huven konformit met Direttive. 2014-7819. E. Adbess ghall interpréte haven plus paraiser le la production de la province par la production de la province par la production de la province par la production de la p
meldébanos taivá ierodiet turprélik miněto obtlégvárdu, bi lejupisláděků jaunáke "DECLARATION s" CONFORMITY (Dec)" (ATBILSTŠ) DECLARAC JU). Abbligvárdu COTHAISECHM Briten, Pannaznic Corporation tiddisjene il kiji na trajbník tarvedju elenkéh havon turp havon kontrom i nad-Distrien 2314/2314E. Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Abbligvárdu COTHAISECHM Panasonic Corporation srikijarac havorad at redicutstytel av hypen nevně oveníce eri vermená med direktiv 2014/301CU. Abbligvárdu COTHAISECHM Panasonic Corporation srikijarac havorad at redicutstytel av hypen nevně oveníce eri vermená med direktiv 2014/301CU.
DDLLARAC_U). Abbligweld is COSTRUEED444 Bitter, Penestanic Corporation Biddisjees it Fig. to 1sg/bmir tax-resign wheeket hown "up hune konforms" med-Destine 2244/2341E. Addess sphall https://www.ptp.canastonic.eu/, likelikija "Declaration of Conformity, (Dilijanozgioni to Konformity)" which is added likeling a biddest interest and processor between muttern trivia habited in "DECLARAT ON of CONFORMITY (DIKJARAZZJI TA' KONFORMIT'A). Lakter destrict dock; (Reline Matthet). OF THE CONFORMITY (DIKJARAZZJI TA' KONFORMIT'A). Lakter destrict dock; (Reline Matthet). OF THE CONFORMITY (DIKJARAZZJI TA' KONFORMIT'A). Lakter destrict dock; (Reline Matthet). OF THE CONFORMITY (DIKJARAZZJI TA' KONFORMIT'A). Penastenic Corporation sinlagers herved at redicultivist as "typen nevel oventor et is warrest are district 2014/30/XJU. Note: The Conformity of the Conformity (Semenasterickgaing) tog taste inn nederiolateride nekkelon.
DCH_ARAC_UI. Abbigvieter (COT-MESE-MA) Eiten, Penestanio Corporation Redisigen il Filig ha teghnir har englu elenkel havun "un huve konformi and-Dreibur 2014-03418". Abbigvieter (COT-MESE) Abbig
E iden, Panesanio Corporation Redisjens III-lig ha tegiphnichar engliu elenkeit haven "un huven konformi und-Direitivu 2014/53/IE. Abbess phalit hipotivewyper panesanio (social, ilikilikija "Declaration of "Conformity, Dilipinozgioni ta" Konformity) dahbal I-Kelma Multich Thaun halt "Ilipan tannicasa hal-kilem multich testa halter id-DECLARAT ON of CONFORMITY (DIKJARAZZJI TA' KONFORMITY). I natur ricinst (bac) Kelma Multich Conformity (Dikjarazzoni tannicasa) dahbal I-Kelma Multich Thaun halt "Ilipan tannicasa hal-kilem multich testa halter id-DECLARAT ON of CONFORMITY (DIKJARAZZJI TA' KONFORMITY). I natur ricinst (bac) Kelma Multich Thaun halter (bac) Kelma Multich Thaun halter (bac) Kelma Multich Tannicasa (bac) K
huve konformi med-Disellive 2014/93/IE. Abbess phall RepOkwwing or panasonic eut, likilikija "Declaration of Conformity, (Dikjarozajoni ta 'Konformity)' dathal likerina kultekh Theren hall righant be-incenia hal-kiler muttleh, tiska halizzel id-"DECLARAT ON ef CONFORMITY (DIKJARAZZJI TA 'KONFORMIT'); I akter indere Bucc) Kellina Martieh: CO TRESCOMM Panasonio Corporation sinkarar hervind at redicultatival av typen nevet oventor er i sveneva ir red disektiv 2014/30/IU. Novement and disektiv 2014/30/IU.
huve konform in ned-Deshive 2014/9348. Addess shall freplowers per panasonic eut, likilikija "Declaration of Conformity, (Disjanozajoni ta' Konformita)" dathal ilikerina binitish rihara hali rejeant te-incesia hal-sisen mutteh, insia hali zele id-"DECLARAT ON et CONFORMITY (DIKJARAZZJI TA' KONFORMIT (i). I aktar ederat Quoc) Kellano Atribles COO "IARZOCOM" Panasonio Compensition eritigarer herved at rediountstyret ev typen neivot oventor er'i venneva i red direktiv 2014/50/EU. Volumer ventor eritigarer per panasonio eut, kilikke pa "Declaration of Conformity (astrovariatiektgaring)" og tallet inn nederatigende njakkalon
Addess shall http://www.ptc.panasonic.eu/, ikklikkja "Declaration of Conformity (Dikjanazijoni tai Konformity) dahhal il-Kerina kliniteh Thero hahi il-pan tak-ricensa hak-kien muntieh tiska hahtel id-"DECLARAT ON ef CONFORMITY (DIKJARA ZZJI TA'KONFORMITA) Later ricensi Dacci. Kelmo Muhlett: CO TAZBCO4M Panasonio Corporation erikajara hek-vist al reddiudstyret av typen nevnik avendra er i vannera i med diraktir 2014-53CU. Vold à g. 8t haj il-www.ptc.panasonio eu/, kikke pa "Declaration of Conformity (sarrevasisektezing)" og taste inn nederstøende nakkelon
dathbasi (Kellenia Minteh Thaver tabi Hippan tan-riderika kal-kilen) muritish itiva haizzetik-DECQARAT ON et CONFORMITY (OKJARAZZJI TA' KONFORMITÄ, I Takter denni (DoC) Kelma kurileh (Og TikketCoHM) Panasanio Corporation arkikarer herved at redicutstyret en typen neven oventer er i venneva med direktiv 2014-2010. November 1 en di direktiv 2014-2010. November 2 en di direktiv 2014-2010.
TA' KONFORMIT (A) Lakter nierint (DuC) Kellmo Martieh: CQ TR28004M Penasonio Corporation intilgene herved at redibultstyret av hypen nevn? ovenfor er i samerea i med direktir 2014-590U. Ved à g (a) til higt vivver pto penasonio euri, kilike pa "Doctaration of Contomity (samevasis ektopring)" og taste inn nederetgende nipkkalon
Kelmo Multieth: CQ TM28CO4M Penascinic Carpertition indigene beeveld at redibutity/ret av typen nevn/ ovenfor er i vannera i med direktir 2014/53/DU. Vold à g dit http://www.ptc.penascinio eud, kilkke pa "Declaration o" Continutity (samevasis erktgeling)" og taller inn nederretgende nøkkelon
Penascelio Corporation critigarer bervied at redicultatyret av typen nevnt ovenfor wir semmer in red Unitativ 2014/2014 og til November in red Unitativ 2014/2014 og til November i der på gjell higt Javan på paransonia oci, kilikk på "Dedardon o' Contornity (samovasceklagsling)" og talle inn nederstigende ripkkalon
er i wanevar med direktiv 2014/53/ITU. Ved à g all http://www.pto.panasonio.eu/, klikks.pa:"Declaration of Contornity (sernevarsenkte/ning) og taste inn nederstøende nigkkelon
er i vanevar med direktiv 2014/59/ICU. Ved å gittl http://www.ptc.panasonibieut, kilkke pa "Destaration of Conformity (semevanserktæring)" og taste inn nederetjende nijkkalon
Ved à g-all http://www.ptc.panasonic.eu/, klikke.pa "Dectaration of Conformity (samevarserktæring) og teste inn nedenstående nøkkalon
IKKEIDEG-SØKEDCKSED KAD DI IASTE DED DER DVESTE "UEULAHAT UN OF CUNIFURNITY (SAMSVARGERKLÆR NIGENY (DOC).
Nakkelad CQ-TM28E94M
Hierbij verklaar ik, Panasonic Corporation, dat radioapparatuur van het hierboven vermelde type
Hieroj ventaarik, Panasonic Corporation, dat radioapparatitur van het niercoven vertreids type conform to met Richtlin 2014/S3/EU.
Gainair http://www.ptc.pairasonic.eu/, ktik op "Declaration of Conformity (conformitalisvarklaring)",
vui in net vak keyword Search de chaerstaande oode in en dan kunt u
Life and selected PDECLADATION ACCOMECDES TWO was broaded and other based on the absorber
de recentate "DECLARATION of CONFORM TY (conformiteitsventdaring)" (DoC) downloaden. Code: CO-TM28E34M

Specifications/Customer Information Declaration of Conformity

	Niniejszym firma Panosonic oświadcza, że podany powyżej typ urządzeń radiowych jest zgłodny z dyraktowy 2014/93/UE
Listis a	pien z ja up zaprospa za umeterza. Wegiz na serne przywowyże ponacenie eut, klinij "Dedaration of Conformity (Deldaracja zg odniści)", w polu wyszubiwania słow Maucowyst wpowadz podem poniżej okowo Maczowe i pobierz najnowszą wereję "DECLARACION of CONFORM TY (DERLARACII ZODNOWSKI") [DEC] Słowo Maczowe: CO TNIZEDO4M
lia wase	Pala presente: a Parassonio Carporellan declera que o squipenmento de sidio do tipa li-latin actino se encontra em conformidade com a Direlina 2014/4/33-LE se encontra em conformidade com a Direlina 2014/4/33-LE acedas à high zivine plo parassonio en utilique sim "Diochiaristin o" Conformity (Decleração de Conformidade)", intratura a patient-chosa indicada abalista ne caise de praquista de patienta-chosa para-chosa indicada abalista ne caise de praquista de patienta-chosa para descarreg a e ruisis recente IDECLARATION nt CONFORMIT PEGLARAÇÃO DE CONFORMI DADE; (DoC). Paldevra-chosa CONTROSECHIA
Montana de la composición del composición de la	Prin pre-valued ubcurrent, Previousn's Corporation declaré de exchipemental andra de lignel énumerier intel nux este in conformable ou Directives 2014/85/UE. Accesses il light Previous plus paraiser de out, l'accept dissiper, Declaration of Conformity (Declarație de conformitate)*, introducie; lous anul otheria de mai jair in desente de deutement dupé quarrier chéeé, și pute; les despârcații care mai recente DECLARATION of CONFORMITY (DECLARATIC DE CONFORMITATE)* (Doc) Curdint dineia, CUTTAL/SEE/SEA
Sertia	Ovin kompenije Panazonio Corporation izjevljuje da je gi emresulana rodio oprante tips u stakrdu sa odredstvam direktiva 2014/20/EU. Prikopije stranich filo //www.pr. posazodi.e.u.y. kliknike na "Declaration of Conformity (Izjava o uskladenosti)", deteresektima kljužnu rodi omaliku potije za prekrag uključnih rodi čaute prezista da premznale nejmoviji dokumeni "DEGLARA" ON of GONFORMITY z java o uskladenosti)" (DeG. bijava o uskladenosti). Kljužna rodi OG "Triti 2004.
Sovak	Spoločnect Panasonie Corperation tymic vyhlasuje, že rądiovę zariadenie vyššie uvedenęho typu je v oglade od smernicou 201463-LIO w kolikowa pod pod pod pod pod pod pod pod pod pod
S (Supple)	Pariastanic Corporation potigije da je zg. taj na vederi bij rodijeke oprenie skladen z Dieklice 2014/SSCU OEBORA Mitu, Avovu picu pariastanic voj. (Albrila "Declaration o" Conformity (zjeva o vidiadnosti)" v oberice za iskanje vnevile vpodnjo ključno bekada in prevadin najnovejsko injevni o skladnosti – "DECLARATION at CONFORM TY (IZJAVA O SKLADNOSTI)" (DoC). Ključna beseda - CO-TIAZBOCA)
Swedish	Hatmed singly #Perwastric Corporation att sudoutustraing entreming system death; 2014;39(EU). Ga Nill http://www.ptb.panencells.eu/, kildks.pd.**Deatheation.ort Conformity (Strajkton.orn @verencellanning) onthe ang. reyelestorate nedom i signouture. Sodian Rand Juli Jedian et allen serratels "DECLARAT ON of CONFORMITY (floration on gwerencellannings)" (DUC). Nyckeletin CONFORMERSEMA)
Turkey	ichu brig ville Panaricnic Corporation, yutanuda listelenen rodyc ekişenan tipinin. 2014/3/SAB Disekti insi vişi urulduğunu beyeni sirhaktedir. hip brewzetçi peranancinası indendenden Tedenderini Corporatiy (Uyg. utaki beyeni)' başlığına tiklind kifan sonra, aşağıdıdı onathar kelineyi sırana kuturuna girerek en son DECILARA-KINA «CONFORMITY (UYGUNLUK BEYANI)'n (DGC) indrebiliratiri. Anathar keline GO TISZECIAN.

[English]

Hereby, Panasonic Corporation declares that the radio equipment type [CQ-TM8CE24M] is in compliance with The Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet address: https://www.ptc.panasonic.eu/



Without DAB radio

Manufacture, Address - Chetici, Adres. Prodhimi, Adresa. Panaconic Corporation.

4251 konobe cho, Isuzuki ku, Yokohama City Kanagawa keri 224, 8520, Japan.

DO TM60 04M, 00 TM200111, OC TM2 10M, DQ TM60054M

Importer, Andress I thaletyr, Adres. Importuesi, Adresa. Mazda Matar Logiotica Europa NV Blasauelder had 182, 7800 Wille Froek, België

Mazda Motor Poland sczelo. Jl. Postępu 14B, 02-676 Warsaw, Foland

Mazda Metor Ozeor , s.n.o. Türkova 2319/5b Ghodov 149 00 Praguo 4, Ozeoh Recublio

Mazda Michar Slocakia, sino LINDNER II, Galvaniho 773, Bratislava - Ružinov 821 04, Slovak Republic

	Me ang të katij dokumenti, "Panseonio Corporation" deklaron se radiopajisja e tipit të fetuar më fart është në përputhetimëni me Direktirën 2014/33/BE
A caria	Hyrin in http://www.plc.pemsonie.su/: klikaris/Declaration of Cenfornity (Deklaration e pigruthal-misins)*, althouni termin log mis kulini e ski ddrink telemines logge dhe mund te shkarkoni versionin e fundit te "DECLARAT ON of CONFORMITY (DERLARATÈN E PERPUTHSHMERIS E) *(DAC). Tenni kog OO TM28E14M
Bulgarian	С настрящого Parasonic Corporation девлорира, че раднооборудаването от типа, посочен по горе, в в съответствия с Дирялиям 2014/1950 ; постоятеления с Дирялиям 2014/1950 ; ответен в ВНОймие регранизать вей шразнете выроу "Declarollon of Conformity (Демларация за съответствие) вызываето мно-ровка дума, дована не дилу, и коне с эк перевле не мно-ская дум в и ше и свете е да изгетиене най номага , DECLARAT ОТ «Сом FORMITY (ДЕКГАРАЦИЯ ЗА СЪОГВЕ" СТВИЕ) (DeC). Ключево дума СОСПАВЛЕНИЯ
Cason	Timto spolednost Panasonic Corporation prohiabuje, že vyše uvedane radiove zařízení typu CO TMZEC 14M je v souladu se směrnici 2014-35ECU. Když příješte ma stýrnky hlip třevne pterpanasonio se,* klikovite na "Decharáton of Conformity (Prohiá Sani o shouší) se zadáte čídě modalu CO TMZEC 14M do pole pro výhledavání podle kličového slove, buddet si mod stáhnout nejnovější vezzi "DCCLARATION of CONFORATTY PROHIALSONIO SHOULO SH
L'an sh	Production of Producty (OCC). Hermad additive Proposation Corporation, Alreadoutshyrel of typen navent overvior or inversessements a medideative 2012/53/EU. Duitan herter den energe "DECLARA" ON of "ONIT ORM TY (OVERENSS" EMMELSESERIAL ERING)" (DOC) wed at besings this reviews by the print according to the production of Combinity (Overensstamonshasserial largery) by industrial mediental angle-ord I failed things of the print according to the production of the print according to the production of the print according to th
Somer	Hermit entlärt Pannscnic Corporation, dass der abeng entente Funkantag styp der Röcklinie 2014/25/2U entspeickt. Kilden Sie unter hit province principation. Sickles dies under hit province principation og det and "Denteration of Contornity" (Konformitätsekkläning) g aberdie das nachstehende Schligsselvort in die Schligsselvortsuche ein und leden Sie die aktuelle "DECLARATION of CONFORMITY" (Konformitätusriktärung)* (DUC) Herunitar. Schligsselvort: COC"—7/2/2E Leib.
Greece	Με την πορούση, η Pinnstenie Corporation δηλώνει ότι ο ροδιετέζετ/λετώς που περιστάξεται πουσέρω επιμματριανώνει με την είνην 2514-654/ΕΕ Επισκεμέθεται εντότεποι δήξετ-κονος βεριπικοίο πευ/ μέντε είναι επα «Disclination of Conformity (Δηλώνιση συμμορφικτης)» καταχωρίστε την παριοσότο λέξη κλιάξί στο πλείστο αναξήτησης λέξης ελιάδιού ναι νε μπορέσετε να καταβάσετε την πιο προσίρτη «DECLARA-TIO» οι CONFORMET Y (ΔΗΛΙΣΣΗ ΕΥΜΙΚΟΡΦΟΣΕΗΣ» (ΔΑΟ). Λέξη εκλάδε CONTROLESEMAN
Englon	Hereby, Panasonic Corporation declares that the radio equipment type Listed above in compliance with Directive 2014/SCILU. Access to this previous propanisation, equipick "Declaration of Conformity", ander the below Keyword into the layword search box, you are download the latest TDCLLARATION of CONTORM TY" (Dc.O). Keyword: COLTMARCIAM
Scenish	Por la presente Prinspini Corporation declara que el equipo de radio del tipo citado más amba curgio con lo setabelación en la oberia 2014/3010. Acceda a http://www.ptc.poinspinic.eu/ hog adio en "Declaration of Conformity (Declaración de conformidad"), introduco la polatra clava indicada a confinuación en el cuadro de bigregada y podrá descang a la última "DEGLARAT ON of DONTORMITY (Declaración de conformidad") ("DOC). Polatra clava: O Q TRASEC14M
Estonia	Kgendervag stekkweerb Panacroid Corporation, et entmainkut madioseadrie rupp vasted direktivi 2011-258EL noutetie. Mittig veetlibehe hittp://www.jst.panaovid.eu.p. kigpsake valikut Declaration of Contornity" (Vastavundeklaratistoon) steedag sattotodud maksiona spectioaatele teting sejtich ning laadig satta dokumenta. Dick. John of CONTORM TY* (Vastavundeklaratistoon) (DoC) viimone versitosu. Maksiona CO-TRESETEM

Specifications/Customer Information Declaration of Conformity

	Parasonic Corporation vakuultas, että edellä lustettu radiolaitetyyppi	
	täyttää direktiivissä 2014/55/EU asetetut vaatimukset.	
	Vilmeisin *DECLARATION of CONFORMITY (VAATIMUSTENMUKAISUUSVAKUUTUS)" (DoCion ladattavissa verkkosivulla	
inning	http://eww.ptc.panasonic.au/	
	valitsemalla kohta "Declaration of Conformity (vaatimustenmukaisuusvakuutus)" ja	
	syöllämällä olla mainitu hakusana hakulenttään	
	Hakusana, CQ-TH/28E14M	
	Par la présente, Parrasonic Corporation déclare que le type d'équipement radio répertorié di-dessus	
	eat en conformité avec la directive 2014/53AJE.	
	Pour telectorigi e la demière « DECLARATION of CONFORM TY (DÉCLARATION DE CONFORMITÉ) » (DoC), rendez vous sur	
Pronch .	http://www.ptc.panasonic.eu/, cliquez.surik, Declaration of Conformity (Dadaration de conformita) », puis saisissez le mot digit-dessous dans	
	le champ de recherche par mots clés.	
	Miot się : CQ TM28E14M	
	Ovime Panasonio Corporation izjavljuje da je radijeka oprema vrste novedene iznad	
	u skladu s Direktivom 2014/53/EU	
	Pristup zs: http://www.rpto.panesonic.eu/_kliknite_Declaration of Conformity" (zjava c sukladnosti),	
arterier		
	unesite kljužnu riječ koja je navedena u nastarku, u okvir za pretraživanje kljužne riječi možete preuzeti	
	najnoviju , DECLARAT ON of CONFORMITY (IZJAVIJ O SUKLADNOST)* (DaC).	
	Ključna nječ ICQ TM28E14M	
	A Panasonic Corporation ezennel myilatkozik amţli, hogy a fent meg laddf	
	tipusti radios berendezas(ek) megfelel(nek) o 2014/53/EU iranyelv előtrásolnak.	
	Lépjen a http://www.ptc.panasonic.su/, oktaira, kattintson a "Declaration of Conformity" (Magtelelőségi nyiletkozat) slemrs	
Hargerier	és trja be az alábbi Kulosszót a kulosszó keresőmezőjébe, ha szeretné letölteni	
	a leg -jabbi "DECLARATION OF CONFORM TY" (Megfelelőségi nyilatkozat) dokumentumot ("dos "ájl).	
	Kultssard: CQ TM2HE14M	
	Har með lýsir Panasonic Corporation því yfir að ofangreindur (flyarpsbúnaður	
	er (semigemi viji tilakipun 2014-59/ESB	
	Farðu á http://www.ptc.panasonic.eu/,smelltu á "Declaration of Conformity (Samræmisyfirlysing)",	
lceard	sláðu eftir anndi leg undannýmer inn í leitanreitinn og þá g turðu sött.	
	nýjustu "DECLARATION at CONFORMITY (SAMRÆM SYF RLÝ SINGUNA). (DaG).	
	Teg undangmer: CQ TM28E14M	
	l'abbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio elencato sopra	
	A conforme allo direttivo 2014/593/JC.	
	Accedere al sito http://www.ptc.panascnic.eu/, tare clic.su "Dactaration of Conformity (Dichiarazione di Conformità)"	
Ital or	e inserire la parola chiave segi uette nella casella di ricerca per parole chiave per poter scaricare	
	la "DECLARATION of CONFORM TY (Dichianazione di Conformilà)" (DoC) più recente.	
	Pareta chiave: CQ TM28614M	
	Šiuo dokumentu "Panasonio Corporation" pareiškia kad pirmiau pateikta tipo radijo r _i šio įranga	
	afilinka dilektyvą 2014/53/ES.	
	Atvarkite http://www.plc.panascnic.eu/, spustalskits "Declaration of Contormity" (Allikties disklaracija),	
lith⊪ania	į raktažodžio paieškos laukeliį įveskite toliau pateiktą raktažodį ir g liėsite atsisiųsti	
	naujausią "DECLARATION of CONFORMITY" (ATIT KTIES DEKLARACIJA).	
	Raldažodis GO-TM28E14M	
	Raldažodis GO-TM28E14M	
	Rakirá-zdis. GO-TAGZET-Islá Az bo Ponescnic Corporation dekkiré ka ieginékā minětá ndolekána abblet Direktívas 2014/SACS prætikém Oduletie uz v záletí hlípu (róww. jtu. panasonic. eu.), nokliškýmiel uz saddas. Doubekánito of Cornoraty "Aktibitikas deklaricija) un alakiránikou.	
el cin	Rakrażodis. GO-TAG28E14M Ar bo Ponascnie Cerporation deklarie kai iginiela minidă radolektina abbiet Direktines 2014/65,CS prastNam Dodleties uz vielari hilu //www.ptu-parasonic.eu/, nokliktiķiniel uz sadelas "Declaration of Conformity" (Albitetūsas deklaritēja) un albityrafud, mektitanos taukai ierodet turprilatik mieto ablitiķiniela uz sadelas "Declaration of Conformity" (Albitetūsas deklaritēja) un albityrafud, inieleptetidetu juunatiko "DECLARATION of CONFORMITY (DOC)" (ATB LETTENS	
alen	Raktardotis. GO-TAKREELIAI Ari So Ponaecnis Corporation daktarë ka iepriski minëti radolekina abblet Direktivas 2014/S&CS pratikëm. Oolateire uz vi sifairi hily irivve, juu panasonic euri, noklikik jiniel uz saditas "Declaration of Con'orsity" (Attiliatibas deklaratija) un alski grafidu mektisanos tauta i srod atet turpritik ninitio abslig-vidru, ba lejupritiskëtu jauniko "DEGLARAT-KON o' CONFORIATY (DOC)" (ATB LSTIBAS OCCLARAT-KON o' CONFORIATY (DOC)" (ATB LSTIBAS OCCLARAT-KON o').	
alen	Rakražedis CO-TNAZNET444 Ar 50 Ponascnic Cerporation deklanže ka tepriekā minētā radiolekāra atbiet Direktīvas 2014/6.S.ES prastībām Dodleties uz sielni hīju Arvav ptc parascnic, sur, noklīdā jiniet uz vadaļas "Decitaration of Conformāy" (Albintūtas dekla Rējā) un alslēgvārdu mektāsnost baukā ievadet turpmāk nimāto atbitāyakrdu, lai lejujetilātētu jaunāko "DECLARA" (DN of CONFORKI TY (DOC)" (ATB LSTĪBAS	
el e n	Rakańscies: GO-Trazenia August	
Hen	Rakkažedis GD-TistzičE1444 Ar 50 Ponacenio Cerporation deklarie ika i spriekš minėtii radioleklata abblet Direktivas 2014/56/CS prastikšm Obuštefe uz. višninitų ("kivo», rus, parasonio, sud, ruskiškiniet uz. vadalas "Declaration of Confordit"). (Abbletikas deklaratija) un aklašgažedu meklešanaos laukā isva diet urpraik minėto abblęvārdu, jai lejupislišdėtu jaunāko "DECLARATION o" CONFORM TY (DOC)" (ATB LSTĪBAS DECLARACIU). B. Usar, Parasonio Cooperation tiddikjara it Lieju tar tagimia barradijo wienkot havon "uz.	
alen	Raktariotis GO-TAKRELIAI Ari So Poneconic Corporation dektive iku ieprieki minėti radolekina atbliet Direktivas 2014/56,CS pratikėm Oolatiete uz visitai hily živivve įtu parasonic suri, noklikiš jaidu uz sadatas "Declaration of Confordit" (Atblietibas deklaričija) un alsikignātu mektisanos tauta isradiet turpriik ninitio atslignārutu, bai jejupti tilotietu jaidunāko "DEGLARAT" (NN of CONFORM TY (DOC)" (ATBLISTIBAS OCKLARAT) (AN OF CONFORM TY (DOC)" (ATBLISTIBAS OCKLARAT) (AN OF CONFORM TY (DOC)" (ATBLIS	
	Rakkałodis (IO-TACKELIAM) Az bo Ponastorio Corporation dekindi ka ieginiski miniddi radiolekkima abilet Direktivas 2014/65,CS przetkim Oolokiete uz sichi hilly ilivww.ytc. parassonic waj, nokliškij kinel uz sadalas "Declaration of Com'oraty" (Attibitios deklaričija) un alakigariškid mektišanos tauta i svradet turprdik minitio atslėjavirdu, tai lejupistišdėtu jaunško "DECLARA" (ON o' CONFORM TY (DoC)" (ATE LSTĪBAS DECLARAC JU). Alakigarista VO — MASELIAM Bilan, Parasonic Corporation tiddisjara iš Lispital taghmi tair radija ekentoti havani uz havas kontram innd-Direttivo 2014/97.18 Bilan, Parasonic Corporation tiddisjara iš Lispital taghmi tair radija ekentoti havani uz havas kontram innd-Direttivo 2014/97.18 Bilan, Parasonic Corporation tiddisjara iš Lispital taghmi tair radija ekentoti havani uz	
	Rakkažodis : DD-Trazzieti 444 Ar is D Ponaschic Corporation dekindė ika iepriekš minėti radiolekinta abblet Direktivas 2014/56/ES praetikėm Obulieties uz vielini linjuktivas, pitu parasoniu, sud, ruokikiš inieli uz vadalas "Declaration of Comformity" (Atblitticas dekita ikcija) un alakig pistota melėtiennos tauka ievadieti turpmiški minėto abslėgvažrdu, lai lejupistišdėtu jaunako "DECLARATION of CONFORM TY (DoC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DoC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DoC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DoC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DoC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DoC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DoC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DOC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DOC)" (ATB LISTIBAS DECLARACION of CONFORM TY (DOC)" (ATB LISTIBAS DECLARACION OF	
	Rakkałodis (IO-TACKELIAM) Az bo Ponastorio Corporation dekindi ka ieginiski miniddi radiolekkima abilet Direktivas 2014/65,CS przetkim Oolokiete uz sichi hilly ilivww.ytc. parassonic waj, nokliškij kinel uz sadalas "Declaration of Com'oraty" (Attibitios deklaričija) un alakigariškid mektišanos tauta i svradet turprdik minitio atslėjavirdu, tai lejupistišdėtu jaunško "DECLARA" (ON o' CONFORM TY (DoC)" (ATE LSTĪBAS DECLARAC JU). Alakigarista VO — MASELIAM Bilan, Parasonic Corporation tiddisjara iš Lispital taghmi tair radija ekentoti havani uz havas kontram innd-Direttivo 2014/97.18 Bilan, Parasonic Corporation tiddisjara iš Lispital taghmi tair radija ekentoti havani uz havas kontram innd-Direttivo 2014/97.18 Bilan, Parasonic Corporation tiddisjara iš Lispital taghmi tair radija ekentoti havani uz	
	Rakkażodis GO-TACZELIAI Az bo Ponaconic Corporation dekkież ka iepirekă miněti radolekána abilet Direktivas 2014/56/CS przetkóm Dolaktek uz váriah hly (róww. ptz. parasonic. eu/, nokliškýmiel uz saddas "Dodakadon of Com'orsty" (Atbilatios deklaricija) un alski grafidu mektičnos talida i svodet turpnák miněto abilišyvárdu, bi lejupitilištětu jaunáko "DECLARA" (ON o' CONFORM TY (DoC)" (ATB LSTĪBAS DECLARA") Abilišyvárdu - OC. "MOZBELIAM S Stan, Pernasonic Corposition kdelujára a kilají tal syfimis tarkadju ekonket havini uz navok konformi nad-Direktiva 2014/878 LE Azbess yhlali hlytickový prz prasonickou, ikklilikja "Declaration of Conformity (Dikjarazjeni tal Konformity) datháu litkalnet klinitán havin várt Hybrit laznosky konformi talikalnet klinitán havin várt Hybrit laznosky konformi nad-Olimbity (Dikjarazzjeni tal Konformity) TA KONFORMÍT J. Lakter dezintá DoCo).	
	Raktardos CO-TAXERELIAS Ar So Ponectric Corporation delárité à legicial minété radolekána abilet Direktivas 2014/5&CS pretitión Obdatére uz várial higuárve- jstupanasonic eur, nokláškjániel uz sadátas "Declaration of Confordity "Alteliatibas deklaracija) un alsilágnādu neklétanos tauta i isradiet trumtik minéto atsignárutu, ba lejupit idedeu jaunáko "DECLARAC" (NN of CONFORM TY (DOC)" (ATB LSTIBAS OCCLARACIÓN of CONFORM TY (DOC)" (ATB LSTIBAS OCCLARACIÓN of CONFORM TY (DOC)" (ATB LSTIBAS OCCLARACIÓN of CONFORM TY (DOC)" (ATB LSTIBAS OCCLARACIÓN of CONFORM TY (DOC)" (ATB LSTIBAS OCCLARACIÓN of CONFORM TY (DOC)" (ATB LSTIBAS OCCLARACIÓN of CONFORM TY (DOC)" (ATB LSTIBAS OCCIDAN TO CONFORM TY (DOC)" (ATB LSTIBAS OCCIDAN TO CONFORM TY (DOC)" (ATB LSTIBAS OCCIDAN TO CONFORM TY (DISTARZIJION TO CONFORM TY (
laten Milless	Rakinžodis IDU-Trazelet 46 Ar 50 Ponascnic Corporation deklarie ka ispriekš minėti radioleklaria abblet Direktivas 2014/55/ES praetikėm Ooklafete uz cilarini lity, kirves vist, pransaonic, sud, ruckikiķiniet uz vadalas "Declaration of Comformity" (Atthetitas deklar Reja) un alakig plindu meklišanos taukā isvaidet urpmāk minēto atsidg vārdu, tai lejupet tiloden panaiko "DECLARACTION of CONFORM TY (DOC)" (ATB LISTĪBAS DELLARACTION OF CONFORM TY (DISJARAZZIONI TAK KONFORM TY (DISJARAZZIONI TAK TY	
	Radarácidis CO-Tratzet 448 Ar so Porascenic Corporation deklarie ka ispriekš miněti radiolekára abblet Direktivas 2014/65/CS prastikóm Oodafeler uz vieletí hilly zivvev užu pransonic, eur judkšíšjíniet uz vadala v "Declaration of Comfornity" (Albitetius deklaratija) un alalsignārdu melétisans tauka i svalidet turprak n'initio abblejositudu, tal lejupistikóstu jaunáko "DECLARA" (ON of CONFORM TY (DOC)" (ATB LISTIBAS ODCLARAC) Abblejordad v OC "AUSEC 4M Bisan, Paraszenic Corporation titodisjara ti vitje tar tagámis tarvadju www.kot.francu. "uz abblejordad v OC "AUSEC 4M Azdess, phali https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity" (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity" (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity" (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity" (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity" (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration of Conformity" (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration" (Dikjarazzjenito" Konformita) Adabas jahal https://www.prc.granasznic.eur, inklikkja "Declaration" (Dikjarazzjenito" Konformita) Bartinasznic Con	
	Rakinžodis IDU-Trazelet 444 Ar 50 Ponascinic Corporation deklarie kai ispriekš minėti radioleklaria abblet Direktivas 2014/55/ES praetikėm Ooklafete uz cilentinitų išvievas iput parassonic, sud, ruckikiš, iniet uz vadalas "Declaration of Conformity" (Albitetibas deklar Keja) un alaifigratidu mektišanos tauka isvoidet turpmiki ninėto abslėg vardu, tai lejupėt 1866tu jaunako "DECLARATION of CONFORM TY (DOC)" (ATB LISTIBAS DELLARAZ) Abbligaria dv. CO-Trazelet 444 Sidar, Perasorio Corporation stadilajaria iš lap tai legimis tairinadju ekenkot havoni uz huvokotomomi medioretinos 2014/99/LE Abbess gihali http://www.pbc.gonascinic.eu/.ji.kkilikkja "Declaration of Conformity (Dikjarazzjoni tai Konformita) dafabali iškelina kultida filman rikhi lispani tai nedezia stakšien mutirah tata indzira iškel DECLARA" ON or CONFORMITY (DIKJARAZZJONI Kellina Mutireta Conformity). Josef presentini Cooci. Kellina Mutireta. Conformita filman rikhi para tai nedezia stakšien mutirah tata indzira iski "DECLARA" ON or CONFORMITY (DIKJARAZZJONI Kellina Mutireta Conformita) data kai kelina kultien filman rikhi gara tai nedezia stakšien mutirah tata indzira iski COC Trazeli tait. Perasacinic Conformitari arkitagara havivat at radioul siyteli av lypen neveli overation or industrial tata industrial staksia in arkitagara havivat at radioul siyteli av lypen neveli overation or industrial staksia conformitation arkitagara listva at radioul siyteli av lypen neveli overation or industrial staksia conformitation arkitagara listva at radioul siyteli av lypen neveli overation or industrial staksia conformitation arkitagara listva at radioul siyteli av lypen neveli overation or industrial staksia conformitation arkitagara listva at radioul siyteli av lypen neveli overation or industrial staksia conformitation arkitagara listva at radioul siyteli av lypen neveli overation or industrial staksia conformitation arkitagara listva at radioul siyteli av lypen neveli overation or industria staksia conformitation or industrial staksia conformitation ark	
Mallesse	Raktardos CO-TAXERIAN Ar So Porsecnic Corporation delative is repriets minetis radiolections abilist Directions 2014/55/CS prefixion Collegies us visital high views you parasonic early rocklish intelle us saddes "Declaration of Conformity" (Althoritos delda scija) un alsiligarilidus meletianos tauta i revaled trumritik minitio ateiligarilidus delda juurilidus DECLARACTION of CONFORM TY (DOC)" (ATB LSTIBAS COCHARACTION) Abilityardary CO-TAXEE1444 Billian Perasonic Corporation teidoligiara si Lispi ta laghina tar radiga wankkol trievri ug havan kontromi rand-Directions 2014/87-91E Abilityardary CO-TAXEE1444 Abilityardary CO-TAXEE1445 Abilityardary Compression teidoligiara si Lispi ta laghina tar radiga wankkol trievri ug havan kontromi rand-Directions 2014/87-91E Abilityardary Compression teidoligiara si Lispi ta laghina tar radiga wankkol trievri ug havan kontromi rand-Directions 2014/87-91E Abilityardary Compression target and trievri laghina tar radiga saddes target in teidoligian si controlle trievri della della saddes target in teidoligian si controlle trievri della della saddes target in teidoligian si controlle trievri della saddes target in teidoligian si controlle trievri della saddes target in teidoligian si controlle trievri della saddes target in teidoligian si controlle trievri della saddes saddes target in teidoligian si controlle trievri della saddes	
	Raktardolis GO-TRAZELIAI Az bo Poneschio Corporation deldaria ku ispirekā minēti radolekāra atblet Direktīvas 2014/56/DS pretitikm Oolatiete uz vielai hilip (rivwe ptu parasonic eur, nokliškijainel uz sadatas "Declaration of Comoraty" (Atblittitus deldaricēja) un ataligatīstud melētianos tautā isvadet turpmāk minēto atblējadardu, lai iejuptilādētu jaunāko "DECLARAC"ION of CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DIKJARAZZJONI TA KONFORM TĀ) Lakter deciration (DoC). Kalmo Alvielin: Oo TMASCLIMM Perseatinic Corporation arkitegare tierveid at reditoral system envirul creation. The Conformation of the Conformation of the Conformation of Confo	
-fellesse	Raktardos CO-TAXERIAN Ar So Porsecnic Corporation delative is repriets minetis radiolections abilist Directions 2014/55/CS prefixion Collegies us visital high views you parasonic early rocklish intelle us saddes "Declaration of Conformity" (Althoritos delda scija) un alsiligarilidus meletianos tauta i revaled trumritik minitio ateiligarilidus delda juurilidus DECLARACTION of CONFORM TY (DOC)" (ATB LSTIBAS COCHARACTION) Abilityardary CO-TAXEE1444 Billian Perasonic Corporation teidoligiara si Lispi ta laghina tar radiga wankkol trievri ug havan kontromi rand-Directions 2014/87-91E Abilityardary CO-TAXEE1444 Abilityardary CO-TAXEE1445 Abilityardary Compression teidoligiara si Lispi ta laghina tar radiga wankkol trievri ug havan kontromi rand-Directions 2014/87-91E Abilityardary Compression teidoligiara si Lispi ta laghina tar radiga wankkol trievri ug havan kontromi rand-Directions 2014/87-91E Abilityardary Compression target and trievri laghina tar radiga saddes target in teidoligian si controlle trievri della della saddes target in teidoligian si controlle trievri della della saddes target in teidoligian si controlle trievri della saddes target in teidoligian si controlle trievri della saddes target in teidoligian si controlle trievri della saddes target in teidoligian si controlle trievri della saddes saddes target in teidoligian si controlle trievri della saddes	
Mallesse	Raktardolis GO-TRAZELIAI Azi bo Poneschio Corporation deldaire ku ispireks miněti radolekára abilet Direktívas 2014/56/DS pretikém Odoleke su záletí hlip úrwav jst. panasonic eur, nokliškýmiel su zaddas "Doclavation of Comicnity" (Attibitions deldairsčija) un abilignátid melétenos tautá isvoldet turpnák niněto abilignárdu, lai lejupistišděu jaunáko "DECLARAC"ION of CONFORM TY (DoC)" (ATB LSTIBAS DECLARAC) Abilignárda v CO-TRAZELIAI Siste, Penasonic Corporation Botalijana s Lapita taghmis tarvadju elenkst hrevní vy Azista phali https://www.ptp.panasonic.eu/, ikilistkýa "Declavation of Conformity (Dispanazajeni ta Konformita) Azista phali https://www.ptp.panasonic.eu/, ikilistkýa "Declavation of Conformity (Dispanazajeni ta Konformita) TA KONFORMITA) I Justic nicincin (DoC). Kelmo Alvielin Conformita in Alvieni do nicincin tak-kileni mutriah interval de "DeCLARAC" ON or CONFORMITY (DISPARAZZIJON) TA KONFORMITA) I Justic nicincin (DoC). Kelmo Alvielin Conformita in Alvieni do nicincin tak-kileni mutriah overalor ri sisemena nicel direktiv 2014/35/EU. Vad ja gli hlip Zwww.pt.panasonic eu/, kilike pá "Declaration of Conformity (sanavasa elkgring)" og table inn mederatújenich repkvelod i in Kakadorsky aktorick ken di lieten ned direktiv 2014/35/EU. Natikelod (CO-TRAZELIAI)	
Mallesse	Raktardolis GO-TRAZELIAI Az bo Poneschio Corporation deldaria ku ispirekā minēti radolekāra atblet Direktīvas 2014/56/DS pretitikm Oolatiete uz vielai hilip (rivwe ptu parasonic eur, nokliškijainel uz sadatas "Declaration of Comoraty" (Atblittitus deldaricēja) un ataligatīstud melētianos tautā isvadet turpmāk minēto atblējadardu, lai iejuptilādētu jaunāko "DECLARAC"ION of CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DoC)" (ATB LSTĪBAS DECLARAC") ON OF CONFORM TY (DIKJARAZZJONI TA KONFORM TĀ) Lakter deciration (DoC). Kalmo Alvielin: Oo TMASCLIMM Perseatinic Corporation arkitegare tierveid at reditoral system envirul creation. The Conformation of the Conformation of the Conformation of Confo	
Mallesse	Raktar-dois CO-TAXERIAN An So Pornectnic Corporation delative is repriets minetis indicited as abilied Direktives 2014/55/CS prefixion Collegies us visital high viewer (stupmassonic eut, nockils) initial as addies "Declaration of Conformity" (NEIsindaw deldarsCaja) un alsilign@delmonetesanos tauta invade trupmisk mineto astrigovaria, ballegies deldars "Declaration of Conformity" (NEIsindaws deldarsCaja) un alsilign@delmonetesanos tauta invade trupmisk mineto astrigovaria, ballegies deldars. Alsilign@delmonetesanos deldars astrigovaria, ballegies deldars deldars deldars. Bitas, Persoarcio Corporation tetologiana si citaj ta lagimis tar audija wanktot nivori uq havan konzimmi med-direttena 2014/87/1E Azbess pilali hepi-kivewy per paracencie aut, kildikiga "Declaration of Conformity (Dilisprazzjoni ta Konformita) Azbess pilali hepi-kivews per paracencie aut, kildikiga "Declaration of Conformity (Dilisprazzjoni ta Konformita) TA KONFORMIT (J. Indian recenti Doci). Kellemo Kurhelin, Dil Talasti. Hall Persoamino Corporation sirkigerar his ved at redinal siyest av types i neverili overation ori sventreon redindars (214-55/CU). Vald og 38 High pilavewy bic paracencie aut. Kilkie på "Declaration of Conformity (paracenes eldgeling)" og tasle linn medieratigende ripkkelod i in kikkinds spikelin, delmonetic aut. Kilkie på "Declaration of Conformity (paracenes eldgeling)" og tasle linn medieratigende ripkkelod i in kikkinds spikelin, delmonetic aut. Kilkie på "Declaration of Conformity (paracenes eldgeling)" og tasle linn medieratigende ripkkelod i in kikkindspikelod. Der Capacentina, del redinalprantatur van het hiertoven vermelde type	
Mallesse	Raktardolis GO-TRAZELIAI Az bo Poneschic Corporation delkinik ka leginiki ministi radolektina abilet Direktina 2014/55/DS pretition Oliatine uz visitari hilgi./www.ptc.panasonic.eu/, nokikikiniel uz sadatav "bedavation of Conforrity" (Attitutiona delkinicija) un abiligratidu melšteanos tauta isrodiet trupniki ministo abiligratidu iz sadatav "bedavation of Conforrity" (Attitutiona delkinicija) un abiligratidu melšteanos tauta isrodiet trupniki ministo abiligratidu iz sadatav "bedavation of Conforrity" (Attitutiona delkinicija) un abiligratidu melšteanos tauta isrodiet trupniki ministo abiligratia iz tap tautavita. Abiligratidu — Conforritutiona 2014/03/14 Situar, Penasonic Corporationa telkipiana is taip tai leginnia tarvadija veintet hevor tait adiliziona. Abiligratidu — Conforritutiona 2014/03/14 Abiligratidu — Conforritutiona 2014/03/14 Abiligratidu — Conforritutiona 2014/03/14 Abiligratidu — Conforritutiona delkiniki para tait isradio delkiniki ministrationa della ini indicata della ini indicata tait isradio della indicata tait	
Mallesse	Raktardos CO-TARGETIAS An So Pornectnic Corporation delative is aleginals minetis indicilektria arbitet Direktives 2014/56/CS pretition Outdefer out virtici high viewer (stupinissonic eut), notikišķinieli outsaddas "Dectaration of Confordis" (Vittisidas deklariscija) un alsiligrādu neietisanos tauta i isradiet trumtik ministo atsiligradas (La la lejuptistidatu jaunāko "DECLARRA" (NN of CONFORRITY (DOC)" (ATB LISTIBAS OCCIARRA") (NN of CONFORRITY (DOC)" (ATB LISTIBAS OCCIARRA") (NN of CONFORRITY (DOC)" (ATB LISTIBAS OCCIARRA") (NN of CONFORRITY (DOC)" (ATB LISTIBAS OCCIARRA") (NN of CONFORRITY (DOC)" (ATB LISTIBAS OCCIARRA") (NN of CONFORRITY (DISARAZZIONI TA KONFORRITY alliese No may	Radarácidis CO-Tratzeria 44 Ar So Ponascrnic Corporation deklarie ika ispriekă minětă radiolekâria abblet Direktivas 2014/65/ES praetikôm Oolafelee uz vielanî hiji ziwww. piz parasonic, eur j. noklášķi niet uz vadalas "Decharation of Comfornity" (Atbletitas deklariteja jun alališ grāndu meklētanos tauka isvordiet traprak nietiko atsikaj várdu, tai lejupia tilode ujaunāko "DECLARATION of CONFORM TY (DOC)" (ATB LISTIBAS DECLARAGO). Abblegardus CO-Tratzeria 444 6 38 ur. Perasonic Corporation kūdilajana it Lieju tai tagrimis tarradgu elenktot hervin tug havak kontoma in and-Direktiva 2014/8/98/E Azdess phali hipszivaw-upc panasonice.eur j. Mikilikija "Declaration of Conformity (Dilgianazzjeni tai Konformita) dahbal likkanina bilitetish hervin hist hippart tar-denkse taksken muritaih histor instrea ili d'DECLARACION of CONFORMITY (DIKJARAZZJONI TAI KONFORMIT'A) Lester intenti (DoC). Kelma Marthetin Contratzeria historia dai radioulalysel eri typean ravari cersalizi eri samesan med direktir 2014/53/EU. Perasanin Conprahitoria niktgeria historia dai radioulalysel eri typean ravari cersalizi eri samesan read direktir 2014/53/EU. Vedā ji Bill hiji jürweve piz panasonicia eur kilkile pis "Declaration of Conformity" (plantasvateskigning)" og taste inn medleria familia replakedod in kikalori dajaktibotsien kan du listen nad den nyava "Declaration of Conformity" (panasonic kilkile) Hieritij vinkina ritik ja Panasonic Corporation, det redizapparatur van het hisritoven vermelds type conformi in med traktig 2014/53/CU. Ga inast hitty vivvenz (pazamasonic dur.) Mik og "Declaration of Conformity" (ceri omitiës sentianing", uit het val Keyverd Search de denkradande entie in en dan kant u
dellesse	Radarácidis CO-Tracestato An So Porasconic Corporation deklarie kai tepriekš miněti radiolekána abblet Direktivas 2014/55/CS prastikóm Oodafete uz veletiní hly zivve v juty parasonic, eur judkšíšjí niet uz vaddala "Dectaration of Comfornity" (Albhethas dekla Rája) un atališ grandu melétisanos lauka i sera det upprak nimito atališyvárdu, la lejujet lödetu jaunáko "DECLARA" (ON o' CONFORM TY (DOC)" (ATB LISTIBAS ODCLARA). Abbligardas OC "MOSET 4M Sitian, Parasonic Ocoporation Bioditipira a Luip tar taghmir tar-radju vávnákot hivon' uz havakontoma inad-Direttiva 2014/93/LE Azbess phali hepstvávovýce panasoniceus, inklitikaja "Dectaration of Confornity" (Dilgarazgionita' Konformita) Azbess phali hepstvávovýce panasoniceus, inklitikaja "Dectaration of Confornity" (Dilgarazgionita' Konformita) Azbess phali hepstvávovýce panasoniceus, inklitikaja "Dectaration of Confornity" (Dilgarazgionita' Konformita) Azbess phali hepstvávovýce panasoniceus, inklitikaja "Dectaration o' Confornity (Dilgarazgionita' Konformita) Azbess panasoniceus produceus de visitent panasoniceus (DoC) Kellom Adribeta CD Tracest Latin Parasonicio Corporation artigerar hervad at radioutstvával av typen mávní ceranice ari somerear read drakta 2014/SCCU. Ved a ja Sit high javove pic panasoniceus ušítka pá "Dectaration o' Confornity (samasvaseskýpning)" og tasle inn nedernášanda ripkkeloid in Kakodrájakhotskan kan dilleten nad den nysata "Dectaration o' Confornity (samasvaseskýpning)" og tasle inn nedernášanda ripkkeloid in Kakodrájakhotskan kan dilleten nad den nysata "Dectaration o' Confornity (samasvaseskýpning)" og tasle inn nedernášanda ripkkeloid in Kakodrájakhotskan kan dilleten nad den nysata "Dectaration o' Confornity (samasvaseskýpning)" og tasle inn nedernášanda ripkkeloid in Kakodrájakhotskan kan dilleten nad den nysata "Dectaration o' Confornity (samasvaseskýpning)" og tasle inn nedernášanda ripkkeloid in kakodrájakhotskan kan dilleten nad den nysata "Dectaration o' Confornity (samasvaseskýpnina)" og tasle inn nedernášanda ripkkeloid in ka	

	Niniejszym firma Panasonic oświadcza, że podany powyżej typ urządzeń radiowych				
	jest zg. cdry z dyrektyovą 2014-7654 JE				
	Vřejdž na stroně http://www.ptc panasonic eu/, kliknij "Declaration of Conformity (Deklaracja zg. odnáci)", w polu wyszukiwania słów				
Listina 1	kluczowych wprowadź podane poniżej słowo kluczowa i pobierz najnowazą wersję "DECLARATION of CONFORMITY (DEKLARACJI				
	ZGODNOŚCI)" (Dz.C)				
	Słowo kluczowe: GQ TM28E14M				
	Pela presente, a Panasonio Corporation declara que o squipamento de rádio do tipo listado soima				
	as encontro em contormidade com a Diretiva 2014/533/JE				
	Acede a filly "www.plo.panasonic.au" olique em "Declaration of Contourity (Declaração de Conformidade)",				
Har i glicoso	infroduza a palavra-chava indicada abaixo na caixa da pasquisa de palavras-chave para descarreg a a mais recente "DEGLARATION o"				
	CONFORMITY (DECLARAÇÃO DE CONFORM DADE)" (DoC).				
	Palavra-chave: CO-TM28E14M				
	Prin prezentul document, Panesonio Corporation declară cê echipen setul radio de tipul snumerat mai sus				
	este in conformilate ou Directiva 2014/53/UE				
	Access; i http://www.pto.panascnid.eu/, tadej i clid.pe , Declaration of Conformity (Declarația de conformitate)",				
Domanien	intraduce; i cuvăntul cheis de mai jos în caseta de câutare după cuvints cheie și puts ji să descărcați				
	osa mai rassirià "DECLARATION SI CONFORMITY (DECLARATIE DE CONFORMITATE)" (D.G.).				
	Guvánk cheis: GO-TM/28E14M				
	Ovim kompanija Panasonio Corporation izjavljuje da je gi zenavedana radio oprama tipa				
	u skladu sa odredbama direktive 2014/53/EU.				
	Pristupits stranici http://www.pto-penasonic.su/, kliknite na. Declaration of Conformity (zjeva o uskladenosti):				
Serbi	dolen avedenu ključnu reči unasite u polje za pretragi uključnih reči i onda možete da preuzmete najnoviji dokument "DECLARATION of				
	CONFORMITY (zjava o uskladenosti)" (DoC izjava o uskladenosti).				
	Ključna reč. GO-TM29E14M				
	Spoločnosť Panasonic Corporation týmto vyhlasuje. Ze rádlové zariadenie vyššie uvedeného typu				
	je v ajlade so smemicon 2314-53/EI)				
Secul	Na lokelite http://www.ptc.psnssonic.eu/.ch2/ste klikn@na moźnost".Declaration of Conformity (Vyhlásenie o zhode)",				
ACC IIC	zadať nižšie uvedené kájčová slovo do vyhládá vacieho poža a prevziať si				
	najnovšie "DECLARATION of CONFORM TY (VYHL ÁSEN E O ZHODE)" (DoC).				
	Kitjervé slova: CQ TM28E14M				
	Panasonio Corporation potrjuje, da je zg. zaj navedeni tip radijske oprama skladen z Diraktivo 2014/63/EU				
Sicvene	Obiščite http://www.ptc.panasonic.eu/, kliknite "Declaration of Contornity (Izjava o skladnosti)", v okenos za iskanje vnesite spodnje ključno				
SCALIE	besedc in prenesite najnovejšo izjavo o skladnosti - "DECLARATION of CONFORMITY (ZJAVA O SKLADNOSTI)" (DoC) Ključna beseda: CQ-TM28E14M				
	Najuzna besson: City - Inizitz (1414)				
	Härmed intyg a Panasonic Corporation att radioutrustning lerovan				
	uppfyller direktiv 2014/53/EU.				
Sam list	Gå till http://www.plc.panasonic.eu/, klicka på "Declaration of Conformity ("Brsäkran om överensstämmelse)" och ang enyckelordet nedam i si				
	krutan. Sadan kan du ladda ned den senaste "DECLARATION of CONFORMITY (törräkran om överenzstämmelse)" (DoC)				
	Nyckelord CQ TM28E14H				
	İşbu belg elle Penasonio Corporellion, yukanda lialelenen radyo ekipmanı lipinin				
	2014/53/AB Direktifine uyg urolduğunu beyan etmektedir.				
Turkov	http://www.ptc-panasonic.su/ adresinden "Declaration of Conformity (Uyg-uiluk beyani)" bashiji na t Madriklan sonra,				
TUNGY	anağıdaki anahtar kalimaya arama kutusuna girerak en son				
	"DECLARATION of CONFORM TY (UYGUNLUK BEYANI)" in (DoC) indirebilirsiniz.				
	Anahtar kelime GQ-TM28E14M				

EAC

Model Na : CQ-TM6CE24M / CQ-TM6CE34M

Bland : Panasonic Country of origin : Malaysia

No.355,2017(Ukraine)

Виробники

назву компанії; Panasonic Automotive Systems Co.,Ltd.

адресу 4261 [konobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Імпортер

назву компанії; Auto Інтерна і ональ

адресу 04073, 22-а Stepana Bandery Ave., Kiev, Ukraine

с правжнім Penesonic Automotive Systems ∞, Ltd. заявля£. Що Пип раді ообладнання [*]

ві дпові дає Техні чном у регламенту раді ообладнання

повний текст декларації про ві дпові дні сть доступний на веб-сайт за такою

адресою

https://service.panasonic.ua/

(розділ « Техні чне регулювання»)

* OQ-TM60E24M, OQ-TM60E34M

Emergency Call System

Information of the radio device: Type FT0127D

1. Name and postal address of the manufacturer

Name: DENSO TEN Limited

Address: 2-28, Gosho-dori 1-chome, Hyogo-ku, Kobe,

652-8510 Japan

2. Simplified EU declaration of conformity

С настоящото DENSO TEN Limited декларира, че този тип радиосъоръжение FT0127D е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

https://www.denso-ten.com/support/regulation/eu_doc/

Функция	Работна честотна лента	Максимална радиочестотна мощност
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Ovim putem, DENSO TEN Limited izjavljuje da je vrsta radio opreme FT0127D u saglasnosti s Direktivom 2014/53/EU.

Cijeli tekst EČ deklaracije o usaglašenosti je dostupan na sljedećoj internetskoj adresi:

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Tímto DENSO TEN Limited prohlašuje, že typ rádiového zařízení FT0127D je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkce	Provozní frekvenční pásmu	Maximální radiofrekvenční výkon
GSM		35dBm e.i.r.p. 32dBm e.i.r.p.
II .		25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Hermed erklærer DENSO TEN Limited, at radioudstyrstypen FT0127D er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Driftsfrekvensbandet	Maksimal radio-frekvens effekt
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Hiermit erklärt DENSO TEN Limited, dass der Funkanlagentyp FT0127D der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

	Betriebsfrequenzband	Maximale
Funktion		Hochfrequenzleistung
GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Με την παρούσα ο/η DENSO TEN Limited, δηλώνει ότι ο ραδιοεξοπλισμός FT0127D πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.denso-ten.com/support/regulation/eu_doc/

Λειτουργία	Ζώνη συχνοτήτων λειτουργίας	Μέγιστη ισχύς ραδιοσυχνότητας
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
II	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Hereby, DENSO TEN Limited declares that the radio equipment type FT0127D is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso-ten.com/support/regulation/eu_doc/

	11 9 =		
Function	Operating frequency band	Maximum radio-frequency power	
GSM		35dBm e.i.r.p. 32dBm e.i.r.p.	
	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	

Por la presente, DENSO TEN Limited declara que el tipo de equipo radioeléctrico FT0127D es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

nttps://www.denee-ten.eeni/edpperaregulation/ed_dee/		
Función	Banda de frecuencia	Potencia máxima de la
1 uncion	operativa	radiofrecuencia
GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Käesolevaga deklareerib DENSO TEN Limited, et käesolev raadioseadme tüüp FT0127D vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel

internetiaadressil:

ntipo://www.doneo-ten.com/edpporaregulation/cd_doc/		
Funktsioon	Töösageduse laineala	Maksimaalne raadiosageduslik võimsus
II GSM		35dBm e.i.r.p. 32dBm e.i.r.p.
		25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

DENSO TEN Limited vakuuttaa, että radiolaitetyyppi FT0127D on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.denso-ten.com/support/regulation/eu_doc/

Toiminto	Toimintataajuuskaista	Maksimi radiotaajuusteho
GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Le soussigné, DENSO TEN Limited, déclare que l'équipement radioélectrique du type FT0127D est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

Fonction	Bande de fréquence de fonctionnement	Puissance maximale de la radiofréquence
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
1		25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Leis seo, dearbhaíonn DENSO TEN Limited go gcomhlíonann an cineál trealaimh raidió FT0127D Treoir 2014/53/EU.

Tá an téacs iomlán den dearbhú comhréireachta AE ar fáil ag an seoladh Idirlín seo a leanas:

https://www.denso-ten.com/support/regulation/eu_doc/

Feidhm	Banda minicíochta	Uaschumhacht	
	elullili	oibriúcháin	radaimhinicíochta
	GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.	
		880~915 MHz	25dBm e.i.r.p.
Įι	UMTS	1710~1785 MHz	25dBm e.i.r.p.
		1920~1980 MHz	25dBm e.i.r.p.

DENSO TEN Limited ovime izjavljuje da je radijska oprema tipa FT0127D u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

	11 3 =		
Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga	
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.	
		25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	

DENSO TEN Limited igazolja, hogy a FT0127D típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

Funkció	Üzemi frekvencia-tartomány	Maximális rádiófrekvenciás teljesítmény
GSM		35dBm e.i.r.p. 32dBm e.i.r.p.
ll .	1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Hér með, lýsir DENSO TEN Limited því yfir að gerð útvarpsbúnaðarins FT0127D samræmist tilskipun 2014/53/EU.

Allur texti ESB-samræmisyfirlýsingarinnar er aðgengilegur á eftirfarandi veffangi:

https://www.denso-ten.com/support/regulation/eu_doc/

	Aðgerð	Notkunartíðni hljómsveit	Hámarks útvarp-tíðni vald
	GSM	880~915 MHz	35dBm e.i.r.p.
	GSIVI	1710~1785 MHz	32dBm e.i.r.p.
		880~915 MHz	25dBm e.i.r.p.
1	UMTS	1710~1785 MHz	25dBm e.i.r.p.
		1920~1980 MHz	25dBm e.i.r.p.

Il fabbricante, DENSO TEN Limited, dichiara che il tipo di apparecchiatura radio FT0127D è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.denso-ten.com/support/regulation/eu_doc/

Funzione	Frequenza operativa	Massima potenza a radiofrequenza
H (250)	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Aš, DENSO TEN Limited, patvirtinu, kad radijo įrenginių tipas FT0127D atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

M. Politica de la contraction		
Funkcija	Veikimo dažnių juosta	Maksimalus radijo dažnių galingumas
H (38810/L	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
II	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Ar šo DENSO TEN Limited deklarē, ka radioiekārta FT0127D atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Darba frekvences josla	Maksimālā radiofrekvences jauda
GSM		35dBm e.i.r.p. 32dBm e.i.r.p.
ll .	1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Со ова, DENSO TEN Limited изјавува дека радио опремата од типот FT0127D е во согласност со Директивата 2014/53/EU.

Целиот текст на ЕУ изјавата за сообразност е достапен на следната интернет адреса:

https://www.denso-ten.com/support/regulation/eu_doc/

Функција	Работен фреквенциски	Максимална
Функција	опсег	радио-фреквенциска моќ
GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Ovim, DENSO TEN Limited izjavljuje da je tip radio opreme FT0127D u skladu sa Direktivom 2014/53/EU.

Cjelokupan tekst EU deklaracije o usklađenosti dostupan je na sljedećoj internet adresi:

Funkcija	Operativni frekvencijski	Maksimalna jačina radio
i unkcija	opseg	frekvencije
GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

B'dan, DENSO TEN Limited, niddikjara li dan it-tip ta' tagħmir tar-radju FT0127D huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli fdan l-indirizz tal-Internet li gej:

https://www.denso-ten.com/support/regulation/eu_doc/

Funzjoni	Band tal-frekwenza	l-enerģija massima bi
i unzjom	operatti∨a	frekwenza tar-radju
GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.
		25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Hierbij verklaar ik, DENSO TEN Limited, dat het type radioapparatuur FT0127D conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

https://www.denso-ten.com/support/regulation/eu_doc/

Functie	Actieve frequentieband	Maximale radiofrequentie
COM	880~915 MHz	35dBm e.i.r.p.
GSM	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

DENSO TEN Limited erklærer herved at radioutstyrstypen FT0127D er i samsvar med direktiv 2014/53/EU.

Den fullstendige teksten i EU-erklæringen er tilgjengelig på følgende internettadresse:

Funksjon	Driftsfrekvensbånd	Maksimal radiofrekvent strøm
GSM		35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

DENSO TEN Limited niniejszym oświadcza, że typ urządzenia radiowego FT0127D jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.denso-ten.com/support/regulation/eu_doc/

	Funkcja	Pasmo częstotliwości pracy	Maksymalna moc częstotliwości radiowej
⊩		000 045 MH I=	· · · · · · · · · · · · · · · · · · ·
11	GSM	880~915 MHz	35dBm e.i.r.p.
	OOM	1710~1785 MHz	32dBm e.i.r.p.
имт		880~915 MHz	25dBm e.i.r.p.
	UMTS	1710~1785 MHz	25dBm e.i.r.p.
		1920~1980 MHz	25dBm e.i.r.p.

O(a) abaixo assinado(a) DENSO TEN Limited declara que o presente tipo de equipamento de rádio FT0127D está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

https://www.denso-ten.com/support/regulation/eu_doc/

Função	Faixa de freqüência	Potência máxima de
i unçao	operacional	radiofreqüência
GSM	880~915 MHz	35dBm e.i.r.p.
GSIVI	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Prin prezenta, DENSO TEN Limited declară că tipul de echipamente radio FT0127D este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

Funcție	Bandă de frecvență activă	Puterea maximă a radio-frecvenței
GSM		35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

DENSO TEN Limited týmto vyhlasuje, že rádiové zariadenie typu FT0127D je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcia	Prevádzkové frekvenčné	Maximálny rádiofrekvenčný
	pásmo	∨ýkon
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
II .	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

DENSO TEN Limited potrjuje, da je tip radijske opreme FT0127D skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Delovni frekvenčni pas	Maksimalna radiofrekvenčna moč
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Nëpërmjet kësaj, DENSO TEN Limited deklaron se lloji i aparatit të radios FT0127D është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së BE-së mbi përputhshmërinë është i disponueshëm në adresën e mëposhtme të internetit:

nttpo://ttttt.doi.to.to.ti.com/poi.org/aid.to.i/ca_doc/		
Funksion	Banda e frekuencës së	Fuqia maksimale e
	punës	frekuencave radio
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Ovim, DENSO TEN Limited izjavljuje da je ovaj tip radijske opreme FT0127D u skladu sa odredbama Direktive 2014/53/EU.

Kompletan tekst EU deklaracije o konformitetu je dostupan na sledećoj internet adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM		35dBm e.i.r.p. 32dBm e.i.r.p.
II .		25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Härmed försäkrar DENSO TEN Limited att denna typ av radioutrustning FT0127D överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Operationsfrekvensbandet	Maximal radiofrekvenseffekt
H (250)	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

DENSO TEN Limited, FT0127D türü telsiz ekipmanının 2014/53/EU Direktifine uygun olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşılabilir:

İşlev	Çalışma frekans bandı	Maksimum radyo-frekans gücü
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Information of the radio device: Type TN0014F

1. Name and postal address of the manufacturer

Name: DENSO TEN Limited

Address: 2-28, Gosho-dori 1-chome, Hyogo-ku, Kobe,

652-8510 Japan

2. Simplified EU declaration of conformity

С настоящото DENSO TEN Limited декларира, че този тип радиосъоръжение TN0014F е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

nttps://www.denee_ten.een/wedpportregalation/ed_dee/		
Функция	Работна честотна лента	Максимална радиочестотна мощност
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Ovim putem, DENSO TEN Limited izjavljuje da je vrsta radio opreme TN0014F u saglasnosti s Direktivom 2014/53/EU.

Cijeli tekst EČ deklaracije o usaglašenosti je dostupan na sljedećoj internetskoj adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Tímto DENSO TEN Limited prohlašuje, že typ rádiového zařízení TN0014F je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

nttpo://www.doned.ton.com/capportrogalation/ca_doo/		
Funkce	Provozní frekvenční pásmu	Maximální radiofrekvenční výkon
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Declaration of Conformity

Hermed erklærer DENSO TEN Limited, at radioudstyrstypen TN0014F er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Driftsfrekvensbandet	Maksimal radio-frekvens effekt
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Hiermit erklärt DENSO TEN Limited, dass der Funkanlagentyp TN0014F der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

Funktion	Betriebsfrequenzband	Maximale Hochfrequenzleistung
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Με την παρούσα ο/η DENSO TEN Limited, δηλώνει ότι ο ραδιοεξοπλισμός ΤΝ0014F πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.denso-ten.com/support/regulation/eu_doc/

Λειτουργία	Ζώνη συχνοτήτων λειτουργίας	Μέγιστη ισχύς ραδιοσυχνότητας
GSM		32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Hereby, DENSO TEN Limited declares that the radio equipment type TN0014F is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

Function	Operating frequency band	Maximum radio-frequency power
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Declaration of Conformity

Por la presente, DENSO TEN Limited declara que el tipo de equipo radioeléctrico TN0014F es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

https://www.denso-ten.com/support/regulation/eu_doc/

Función	Banda de frecuencia operativa	Potencia máxima de la radiofrecuencia
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Käesolevaga deklareerib DENSO TEN Limited, et käesolev raadioseadme tüüp TN0014F vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

Funktsioon	Töösageduse laineala	Maksimaalne raadiosageduslik võimsus
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

DENSO TEN Limited vakuuttaa, että radiolaitetyyppi TN0014F on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.denso-ten.com/support/regulation/eu_doc/

Toiminto	Toimintataajuuskaista	Maksimi radiotaajuusteho
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Le soussigné, DENSO TEN Limited, déclare que l'équipement radioélectrique du type TN0014F est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

Fonction	Bande de fréquence de fonctionnement	Puissance maximale de la radiofréquence
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Declaration of Conformity

Leis seo, dearbhaíonn DENSO TEN Limited go gcomhlíonann an cineál trealaimh raidió TN0014F Treoir 2014/53/EU.

Tá an téacs iomlán den dearbhú comhréireachta AE ar fáil ag an seoladh Idirlín seo a leanas:

https://www.denso-ten.com/support/regulation/eu_doc/

Feidhm	Banda minicíochta oibriúcháin	Uaschumhacht radaimhinicíochta
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

DENSO TEN Limited ovime izjavljuje da je radijska oprema tipa TN0014F u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

DENSO TEN Limited igazolja, hogy a TN0014F típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkció	Üzemi frekvencia-tartomány	Maximális rádiófrekvenciás teljesítmény
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Hér með, lýsir DENSO TEN Limited því yfir að gerð útvarpsbúnaðarins TN0014F samræmist tilskipun 2014/53/EU.

Allur texti ESB-samræmisyfirlýsingarinnar er aðgengilegur á eftirfarandi ∨effangi:

Aðgerð	Notkunartíðni hljómsveit	Hámarks útvarp-tíðni vald
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Declaration of Conformity

II fabbricante, DENSO TEN Limited, dichiara che il tipo di apparecchiatura radio TN0014F è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.denso-ten.com/support/regulation/eu_doc/

Funzione	Frequenza operativa	Massima potenza a radiofrequenza
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Aš, DENSO TEN Limited, patvirtinu, kad radijo įrenginių tipas TN0014F atitinka Direktyva 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

Funkcija	Veikimo dažnių juosta	Maksimalus radijo dažnių galingumas
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Ar šo DENSO TEN Limited deklarē, ka radioiekārta TN0014F atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Darba frekvences josla	Maksimālā radiofrekvences jauda
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Со ова, DENSO TEN Limited изјавува дека радио опремата од типот TN0014F е во согласност со Директивата 2014/53/EU.

Целиот текст на ЕУ изјавата за сообразност е достапен на следната интернет адреса:

Функција	Работен фреквенциски опсег	Максимална радио- фреквенциска моќ
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Ovim, DENSO TEN Limited izjavljuje da je tip radio opreme TN0014F u skladu sa Direktivom 2014/53/EU.

Cjelokupan tekst EU deklaracije o usklađenosti dostupan je na sljedećoj internet adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Operativni frekvencijski	Maksimalna jačina radio
I ankoja	opseg	frekvencije
GSM	880 - 915 MHz	32 dBm e.i.r.p.
OOW	1710 - 1785 MHz	30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

B'dan, DENSO TEN Limited, niddikjara li dan it-tip ta' tagħmir tar-radju TN0014F huwa konformi mad-Direttiva 2014/53/UE.

lt-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan lindirizz tal-Internet li dei:

Funzjoni	Band tal-frekwenza operattiva	I-enerģija massima bi frekwenza tar-radju
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Hierbij verklaar ik, DENSO TEN Limited, dat het type radioapparatuur TN0014F conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

https://www.denso-ten.com/support/regulation/eu_doc/

Functie	Actieve frequentieband	Maximale radiofrequentie
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

DENSO TEN Limited erklærer herved at radioutstyrstypen TN0014F er i samsvar med direktiv 2014/53/EU.

Den fullstendige teksten i EU-erklæringen er tilgjengelig på følgende internettadresse:

Funksjon	Driftsfrekvensbånd	Maksimal radiofrekvent strøm
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Declaration of Conformity

DENSO TEN Limited niniejszym oświadcza, że typ urządzenia radiowego TN0014F jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcja	Pasmo częstotliwości pracy	Maksymalna moc częstotliwości radiowej
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

O(a) abaixo assinado(a) DENSO TEN Limited declara que o presente tipo de equipamento de rádio TN0014F está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

Função	Faixa de freqüência operacional	Potência máxima de radiofreqüência
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Prin prezenta, DENSO TEN Limited declară că tipul de echipamente radio TN0014F este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.denso-ten.com/support/regulation/eu_doc/

Funcție	Bandă de frecvență activă	Puterea maximă a radio- frecvenței
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

DENSO TEN Limited týmto vyhlasuje, že rádiové zariadenie typu TN0014F je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

Funkcia	Prevádzkové frekvenčné pásmo	Maximálny rádiofrekvenčný výkon
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Declaration of Conformity

DENSO TEN Limited potrjuje, da je tip radijske opreme TN0014F skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Delovni frekvenčni pas	Maksimalna radiofrekvenčna moč
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Nëpërmjet kësaj, DENSO TEN Limited deklaron se lloji i aparatit të radios TN0014F është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së BE-së mbi përputhshmërinë është disponueshëm në adresën e mëposhtme të internetit:

Funksion	Banda e frekuencës së	Fuqia maksimale e	
	punës	frekuencave radio	
GSM	880 - 915 MHz	32 dBm e.i.r.p.	
GOIVI	1710 - 1785 MHz	30 dBm e.i.r.p.	
UMTS	880 - 915 MHz	24 dBm e.i.r.p.	
UNITS	1920 - 1980 MHz		
	832 - 862 MHz		
	880 - 915 MHz		
LTE	1710 - 1785 MHz	24 dBm e.i.r.p.	
	1920 - 1980 MHz		
	2500 - 2570 MHz		

Ovim, DENSO TEN Limited izjavljuje da je ovaj tip radijske opreme TN0014F u skladu sa odredbama Direktive 2014/53/EU.

Kompletan tekst EU deklaracije o konformitetu je dostupan na sledećoj internet adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Härmed försäkrar DENSO TEN Limited att denna typ av radioutrustning TN0014F överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

Funktion	Operationsfrekvensbandet	Maximal radiofrekvenseffekt
GSM	880 - 915 MHz	32 dBm e.i.r.p.
	1710 - 1785 MHz	30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

DENSO TEN Limited, TN0014F türü telsiz ekipmanının 2014/53/EU Direktifine uygun olduğunu beyan etmektedir. AB uygunluk beyanının tam metnine aşağıdaki internet adresinden

ulaşılabilir:

İşlev	Çalışma frekans bandı	Maksimum radyo-frekans gücü
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p.

Information of the radio device: Type TN0014F

1. Name and postal address of the manufacturer

Name: DENSO TEN Limited

Address: 2-28, Gosho-dori 1-chome, Hyogo-ku, Kobe,

652-8510 Japan

2. Simplified UK declaration of conformity

Hereby, DENSO TEN Limited declares that the radio equipment type TN0014F is in compliance with Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.denso-ten.com/support/regulation/uk_doc/

Function	Operating frequency band	Maximum radio-frequency power
GSM	880 - 915 MHz 1710 - 1785 MHz	32 dBm e.i.r.p. 30 dBm e.i.r.p.
UMTS	880 - 915 MHz 1920 - 1980 MHz	24 dBm e.i.r.p.
LTE	832 - 862 MHz 880 - 915 MHz 1710 - 1785 MHz 1920 - 1980 MHz 2500 - 2570 MHz	24 dBm e.i.r.p

Importer Information

Name: Mazda Motors UK Limited

Address: Crossways Business Park, Victory Way, Dartford ,Kent, DA2 6DT, UK

Mazda ERA-GLONASS

Нотификация ФСБ № RU0000038283 от 10.07.2018, действительна до 05.07.2023, зарегистрирована ФСБ РФ.

Декларация о соответствии средства связи № Д-МДРТ-11635 от 06.09.2018, действительна до 31.08.2023, зарегистрирована Федеральным агентством связи РФ.

Декларация о соответствии техническому регламенту Таможенного союза 020/2011 № EA3C N RU Д-√Р.МЛ26.В.00626 от 30.08.2018, действительна по 29.08.2023, зарегистрирована органом по сертификации продукции АНО «СЦ Связь-сертификат» (аттестат аккредитации RA.RU.11МЛ26, дата перистрации 10.2.2015).

Декларация о соответствии аккумуляторной батареи FT0098A № РОСС RU Д-JP AД37.В.01289/18 от 24.10.2018, действительна до 23.10.2023, зареистрирована органом по сертификации «красно Дар» ООО «ИД Контроль» (аттестат аккредитации RA RU.11AД37, дата регистрации 03.11.2016).

Wireless Charger (Qi)

Simplified EU Declaration of Conformity:

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows: Hereby, [Huizhou Desay SV Automotive Co., Ltd.] declares that the radio equipment type [designation of type of radio equipment] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:http://www.desaysv.com/index.php?id=oumeng

Max power transmitter(Wireless Charging): 15W
Operating Frequency: 127.7KHz、125.95KHz
NFC Operating Frequency:13.56Mhz
Maximum RF Output Power(NFC): 6.48 dBuA/m at 3m distance

Importer, Address: İthalatçı, Adres: Importuesi, Adresa:

Mazda Motor Logistics Europe NV Blaasveldstraat 162, 2830 Willebroek, België

Mazda Motor Poland sp.zo.o. ul. Postepu 14B, 02-676 Warsaw, Poland

Mazda Motor Czech, s.r.o. Türkova 2319/5b, Chodov, 149 00 Prague 4, Czech Republic

Mazda Motor Slovakia, s.r.o. LINDNER II, Galvaniho 7/B, Bratislava - Ružinov 821 04, Slovak Republic

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission



Nigeria

UAE (United Arab Emirates)

For more certification marks, please see the product label.

Taiwan **RoHS** 含有物質標識表,請至下列網址查閱: https://www.desaysv.com/index.php?

台灣NCC 警語: 低功率電波輻射性電機管理辦法 第十二條 經型式認證合格之低功率射頻電機, 非經許可, 公司、商號或使用者均不得擅自變更頻率, 加大功率或變更原設計之特性及功能。第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信; 建發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。 前項合法通信, 指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。商標: Mazda

Electromagnetic Compatibility

Your Mazda has been tested and certified to the UN-R*1 10 regulation as related to electromagnetic compatibility. Radio Frequency (RF) transmitter equipment (e.g. cellular telephones, amateur radio transmitters, etc.) may only be fitted to your Mazda if they comply with the parameters shown in the table below.

 UN-R stands for United Nations Regulation.

It is your responsibility to ensure that any equipment you have fitted complies with applicable local legislations. Have any equipment fitted by properly trained technicians.

A CAUTION

- Do not mount any transceiver, microphones, speakers, or any other item in the deployment path of the air bag system.
- Do not fasten aerial lead to original vehicle wiring, fuel pipes or brake pipes. Avoid running the aerial lead parallel with the wire harness to the best extent possible.
- ➤ Keep the aerial and power leads at least 100 mm (3.9 in) from any electronic modules and the air bags.
- Avoid using the cigar lighter or accessory socket as a power source for the RF-transmitting equipment.



Aerial positions:

- ①:Front right of roof
- ②:Both sides of liftgate
- ③:Centre of roof
- 4:Front left of roof

Frequency Band (MHz)	Maximum out- put power (Wattage)	Aerial Positions
50 — 54	50	1234
68 — 87.5	50	1234
142 — 176	50	1234
380 — 470	50	1234
806 — 940	10	1234
1200 — 1300	10	1234
1710 — 1885	10	1234
1885 — 2025	10	1234
2400 — 2500	0.01*1	In a cabin ^{*1}

^{*1} Only for Bluetooth®

NOTE

After the installation of RF transmitters, check for disturbances from and to all electrical equipment in the vehicle, both in the standby and transmit modes.

Check all electrical equipment:

- · with the vehicle power ON.
- · with the engine running.
- · during a road test at various speeds.

Information for Users on Collection and Disposal of Old Equipment and Used Batteries

When disposing your old battery, please refer to the information as follows.

Information on Disposal in the European Union



These crossed-out wheeled bin symbols on the products, packaging, and/or accompanying documents mean that used electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sales where you purchased the items.

NOTE



Collection/Disposal of Old Equipment/Used Battery

The bottom two letters might be used in combination with the crossed-out wheeled bin symbol. In this case it complies with the requirement established by the Directive for the chemical involved.

"Pb" and "Cd" mean lead and cadmium respectively.

Information on Disposal in Other Countries Outside the European Union

The above symbols are only valid in the European Union. If you wish to discard old products and used batteries, please contact your local authorities, your waste disposal service or the point of sales where you purchased the items, and ask for the correct method of disposal.

Vehicle Identification Number*

The vehicle identification number legally identifies your vehicle.

Instrument panel

The number is on a plate attached to the left top side of the instrument panel.



Model Plate



Chassis

Open the cover shown in the figure to check the vehicle identification number.



Vehicle Emission Control Information Label (The Philippines)



Tyre Pressure Label

Left-hand drive model




Right-hand drive model




Engine Number

SKYACTIV-G, e-SKYACTIV G

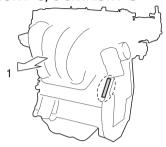

1. Forward e-SKYACTIV X

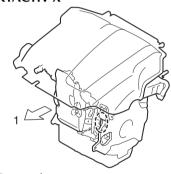

1. Forward

Conformity Plate (Arab Gulf Cooperation Council, Iraq)

Production year and month are shown on this plate.



Engine			
Item	SKYACTIV-G 2.0	SKYACTIV-G 2.5	e-SKYACTIV X
Туре	DOHC-16V in-line, 4-cylinder		
Bore × Stroke	83.5 × 91.2 mm (3.29 × 3.59 in)	89.0 × 100.0 mm (3.50 × 3.94 in)	83.5 × 91.2 mm (3.29 × 3.59 in)
Displacement	1,998 ml (1,998 cc)	2,488 ml (2,488 cc)	1,998 ml (1,998 cc)
Compression ratio	13.0	13.0	15.0

Arab Gulf Cooperation Council

Item	SKYACTIV-G 2.0		
item	Saloon	Hatchback	
Maximum engine power/revolution	114 kW/6,000 rpm		
Maximum engine torque/revolution	200 N·m/4,000 rpm		
Maximum speed	216 km/h (134 mph)	210km/h (130 mph)	

Mazda M Hybrid Battery (e-SKYACTIV G, e-SKYACTIV X)

Item	Specification	
Туре	Lithium-ion battery	
Temperature range	Operation guaranteed temperature: $-35 ^{\circ}\mathrm{C} (-31 ^{\circ}\mathrm{F}) - 60 ^{\circ}\mathrm{C}$ (140 $^{\circ}\mathrm{F}$) Storage guaranteed temperature: $-40 ^{\circ}\mathrm{C} (-40 ^{\circ}\mathrm{F}) - 90 ^{\circ}\mathrm{C}$ (194 $^{\circ}\mathrm{F}$)	

Electrical System

Battery*1

Classification		Specification
e-SKYACTIV G, e-SKYACTIV X		LN2 (12V-60Ah/20HR) or 55D23L (12V-60Ah/ 20HR) or 75D23L (12V-65Ah/20HR)
	With i-stop	Q-85
SKYACTIV-G	Without i-stop	LN2 (12V-60Ah/20HR) or 55D23L (12V-60Ah/ 20HR) or 75D23L (12V-65Ah/20HR)

^{*1} The battery specification differs depending on the country or region. Check the battery installed on the vehicle and use a battery with an equal or higher performance. However, the performance of the battery may vary even among the same battery types, consult an expert repairer (we recommend an Authorised Mazda Repairer) for replacement.

Spark-plug

Classification		Specification	
SKYACTIV-G, e-SKYACTIV G		Mazda Genuine spark plug*1	PE5R-18-110-A or PE5S-18-110
e-SKYACTIV X		Mazda Genuine spark plug*2	HF11-18-110
E-SKIACIIV X	Except Europe	Mazda Genuine spark plug*2	HF01-18-110

- ^{*}1 This spark plug provides the SKYACTIV-G, e-SKYACTIV G engine with optimum performance. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.
- *2 Because the e-SKYACTIV X is a high compression ratio engine, the piston and plugs are close to each other. If the replacement is not done using the correct procedure or a non-genuine plug is used, the engine could be damaged. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.



When cleaning the iridium plugs, do not use a wire brush. The fine particulate coating on the iridium alloy and platinum tips could be damaged.

Oil Quality

API SN or higher

Europe and Taiwan Recommended Oils*1 Oil Quality Mazda Original Oil Supra-X 0W-20 Mazda Original Oil Ultra 5W-30 Alternative Oil Quality*2 OW-20 API SL or higher

5W-30

5W-30

0W-20

5W-30

*1 Mazda Original Oils are specially designed/tested for the respective engine. For optimum performance we recommend to use Mazda Original Oils at all times.

Recommended Oils*1

Mazda Original Oil Supra-X 0W-20

Alternative Oil Quality*2

API SN*3 or higher

ACEA A5/B5

API SN or higher

Engine oil

SKYACTIV-G,

e-SKYACTIV G

e-SKYACTIV X

Do not use oils which do not meet the above specification or requirements. Use of unsuitable oil may lead to engine damage which is not covered by the Mazda Warranty.

Lubricant			With Cylinder Deactiva- tion	Without Cylinder Deac- tivation	
Coolant	Coolant			FL-22 type	
Manual transmis-	SKYACTIV-G 2.0, e-SKYACTIV G 2.0		Mazda Long Life Gear Oil G7 ^{*1}		
sion oil	e-SKYACTIV X	FWD	Mazda Long Lit	fe Gear Oil G8	
	e-skiaciiv a	AWD	Mazda Long Life Gear Oil G7 ^{*1}		
	SKYACTIV-G 2.0, SKYACTIV-G 2.5		Mazda Original Oil ATF-FZ		
Automatic trans-		FWD	Mazda Original Oil ATF-FZ		
mission fluid*2	e-SKYACTIV G 2.0		Mazda Original Oil ATF-A7	Mazda Original Oil ATF-FZ	
e-SKYACTIV X		Mazda Original Oil ATF-A7			
Transfer case oil*3		Mazda Long Life Hypoid Gear Oil SG1			
Rear differential oil*3		Mazda Long Life Hypoid Gear Oil SG1			

^{*}2 If you are unable to find a Mazda Original Oil, alternative oils meeting the listed specification may also be used.

^{*3} Use API SM or higher in Kazakhstan.

Vehicle Specification

Lubricant		With Cylinder Deactiva- tion	Without Cylinder Deac- tivation	
Brake/Clutch fluid	e-SKYACTIV G, e-SKYACTIV X	Mazda Genuine Brake Fluid or equivalent		
biake/ Ciutch huiu	SKYACTIV-G	SAE J1703 or FMVSS116 DOT-3 or DOT-4		

Mazda Long Life Gear Oil G7 is superior oil for low fuel cost and optimum shift-feel. Using Mazda Long Life Gear Oil G7 is recommended. If Mazda Long Life Gear Oil G7 cannot be obtained, use standard oil (API Service GL-4 (SAE 75W-80)).

^{*2} Periodic replacement is unnecessary.

^{*3} Replacement is necessary when the component is submerged in water.

Cleaner		
Cleaner Classification		
Deposit Cleaner*1	Mazda genuine deposit cleaner (K002 W0 001 A)	

^{*1} Use Mazda genuine deposit cleaner. Using non-genuine deposit cleaner would cause internal failure of the fuel system. Refer to 5-107, 9-6 for the details.

Capacities

(Approximate Quantities)

Item				Left-hand drive model	Right-hand drive model
	SKYAC- TIV-G 2.0,	With oil filter replace- ment		4.2 L (4.4 US qt, 3.7 Imp qt)	
	e-SKYAC- TIV G 2.0	Without oil placement	filter re-	4.0 L (4.2 US qt, 3.5 Imp qt)	
Engine oil	SKYAC-	With oil filte ment	er replace-	4.5 L (4.8 US qt, 4.0 Imp qt)	
Engine oii	TIV-G 2.5	Without oil placement	filter re-	4.3 L (4.5 US o	qt, 3.8 Imp qt)
	e-SKYAC-	With oil filte ment	er replace-	4.6 L (4.9 US o	qt, 4.0 lmp qt)
	TIV X		filter re-	4.4 L (4.6 US qt, 3.9 Imp qt)	
	SKYAC- TIV-G 2.0,	Manual transmission		5.7 L (6.0 US qt, 5.0 Imp qt)	5.6 L (5.9 US qt, 4.9 Imp qt)
	e-SKYAC- TIV G 2.0	Automatic transmission		6.0 L (6.3 US qt, 5.3 Imp qt)	5.9 L (6.2 US qt, 5.2 Imp qt)
	SKYACTIV-C	G 2.5		6.1 L (6.4 US qt, 5.4 Imp qt)	
Coolant	Coolant	For engine	Manual transmis- sion	7.0 L (7.4 US qt, 6.2 Imp qt)	6.9 L (7.3 US qt, 6.1 Imp qt)
e-SKYAC- TIV X	Tor engine	Automatic transmis- sion	7.2 L (7.6 US qt, 6.3 Imp qt)	7.1 L (7.5 US qt, 6.2 Imp qt)	
		For water-cooled charge air cooler		1.6 L (1.7 US qt, 1.4 Imp qt)	
Manual	SKYACTIV-C e-SKYACTIV	•		1.70 L (1.80 US qt, 1.50 Imp qt)	
transmis- sion oil	e-SKYAC-	FWD		1.65 L (1.74 US qt, 1.45 Imp qt)	
TIV X		AWD		1.70 L (1.80 US qt, 1.50 Imp qt)	

ltem				Left-hand drive model	Right-hand drive model		
	CVVAC-		FWD	7.9 L (8.3 US	qt, 7.0 lmp qt)		
	TIV-G 2.0, e-SKYAC-	der Deacti- vation	AWD	7.6 L (8.0 US qt, 6.7 Imp qt)			
Automatic	TIV G 2.0	Without Cyli tivation	inder Deac-	7.6 L (8.0 US qt, 6.7 Imp qt)			
transmis- sion fluid	SKYAC-	With Cylinder Deactiva- tion		7.9 L (8.3 US qt, 7.0 Imp qt)			
	TIV-G 2.5	Without Cyli tivation	inder Deac-	7.6 L (8.0 US qt, 6.7 Imp qt)			
	e-SKYACTIV X			7.6 L (8.0 US	qt, 6.7 lmp qt)		
Transfer case	Transfer case oil		0.35 L (0.37 US qt, 0.31 Imp qt)				
Rear differential oil		0.35 L (0.37 US	0.35 L (0.37 US qt, 0.31 Imp qt)				
Fuel tank	FWD					51.0 L (13.5 US gal, 11.2 Imp gal)	
ruertank	AWD			/D		48.0 L (12.7 US §	gal, 10.6 lmp gal)

Check oil and fluid levels with dipsticks or reservoir gauges.

Dimensions Item Vehicle specification Overall length 4,395 mm (173.0 in) Overall width 1,795 mm (70.7 in) Overall height 1,540 mm (60.6 in) Front tread 1,565 mm (61.6 in) Rear tread 1,565 mm (61.6 in) Wheelbase 2,655 mm (104.5 in)

Light Bulbs

The LED bulb cannot be replaced. Consult an expert repairer (we recommend an Authorised Mazda Repairer) when the replacement is necessary.

Exterior light

Light bulb		С	ategory
		Wattage	UN-R ^{*1} (SAE)
Headlights Position lights Front direction indicator lights Side direction indicator lights High-mount brake light Rear direction indicator lights Brake lights Tail lights Reverse lights Rear fog light* Number plate lights		LED	— (—)
Dunning lights*	LED type	LED	— (—)
Running lights*	Bulb type	21 ^{*2}	W21/5W (7444)

UN-R stands for United Nations Regulation.

Interior light


All the light bulbs are the LED type.

Double-filament light bulb, however, only 21 W filament bulb is used in the running lights.

Vehicle Specification

Tyres

Sample tyre mark and its meaning

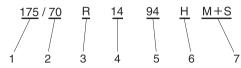

- 1. Nominal section width
- 2. Nominal aspect ratio in %
- 3. Construction code
- 4. Nominal rim diameter in inches
- 5. Load index (not on ZR tyres)
- 6. Speed symbol
- 7. Mud and snow

Tyre mark information

Choose the proper tyres for your vehicle using the following tyre mark information.

Speed symbol	Maximum permissible speed
Q	Up to 160 km/h (99 mph)
R	Up to 170 km/h (105 mph)
S	Up to 180 km/h (111 mph)
Т	Up to 190 km/h (118 mph)
U	Up to 200 km/h (124 mph)
Н	Up to 210 km/h (130 mph)
V	Up to 240 km/h (149 mph)
W	Up to 270 km/h (167 mph)
Y	Up to 300 km/h (186 mph)
ZR	Over 240 km/h (149 mph)

Tyre and inflation pressure

NOTE

The tyres have been optimally matched with the chassis of your vehicle. When replacing tyres, Mazda recommends that you replace tyres of the same type originally fitted to your vehicle. For details, contact an expert repairer (we recommend an Authorised Mazda Repairer).

Check the tyre pressure label for tyre size and inflation pressure.

· Refer to Tyre Pressure Label on page 10-78.

Standard tyre

Tyre size		Inflation pressure			
Tyle size	Up to 3 persons		—Full load		
215/65R16 98H	Front	250 kPa (2.5 bar, 36 psi)	300 kPa (3.0 bar, 44 psi)		
213/03/10 9811	Rear	250 kPa (2.5 bar, 36 psi)	310 kPa (3.1 bar, 45 psi)		
215 /55D19 05 L	Front	250 kPa (2.5 bar, 36 psi)	280 kPa (2.8 bar, 41 psi)		
215/55R18 95H	Rear	250 kPa (2.5 bar, 36 psi)	290 kPa (2.9 bar, 42 psi)		

¹ person's weight: About 75 kg

Temporary spare tyre*

Tyre size	Inflation pressure	
185/65R16 93M	320 kPa (3.2 bar, 46 psi)	
195/55R17 92M	320 kPa (3.2 bar, 46 psi)	

Winter tyre

Tyre size		Inflation pressure		
Tyle size		Up to 3 persons	—Full load	
215 /65D16*1 M. C	Front	250 kPa (2.5 bar, 36 psi)	300 kPa (3.0 bar, 44 psi)	
215/65R16*1 M+S	Rear	250 kPa (2.5 bar, 36 psi)	310 kPa (3.1 bar, 45 psi)	
215 /55D10*2 M. C	Front	250 kPa (2.5 bar, 36 psi)	280 kPa (2.8 bar, 41 psi)	
215/55R18 ^{*2} M+S	Rear	250 kPa (2.5 bar, 36 psi)	290 kPa (2.9 bar, 42 psi)	

¹ person's weight: About 75 kg

Wheel nut tightening torque

When installing a tyre, tighten the wheel nut to the following torque. 108—147 N·m (12—14 kgf·m, 80—108 ft·lbf)

^{*1} Load index and Speed Symbol: 98Q/98S/98H *2 Load index and Speed Symbol: 95Q/95S/95H

Brakes

If you require information regarding the wear limit specification for the brake disc plates and the measurement method, please contact an expert repairer (we recommend an Authorised Mazda Repairer). The information is made freely available.

Α	Dynamic Stability Control (DSC)5-90
Active Driving Display5-39	Electric Parking Brake (EPB)5-58
Active driving display does not	Emergency Signal System
operate8-40	(ESS)5-69
Maintenance of the dust-proof	Forcibly cancelling the
sheet 9-68	AUTOHOLD8-19
Air Bags3-4	Hill Launch Assist (HLA) 5-68
Air-Conditioning	Inspecting the brake fluid 9-37
Air vents 6-2	Traction Control System
Maintenance 9-61	(TCS)5-88
Operating each switch 6-7	,
Air-Conditioning System	C
Fully Automatic Air-Conditioning	Cruise Control 5-213
System Overview6-6	Cruise Control 5-213
Automatic Transmission	D
Cancelling shift-lock system8-20	
Selector lever 5-46	Deposit Cleaner5-108
Steering shift switches5-52	Doors
AWD	Doors 4-12
i-ACTIV AWD5-96	Liftgate4-18
Off-Road Traction Assist5-92	Drive Selection5-94
В	E
_	Engine
Battery	Engine 5.25
Electrical system	Cylinder deactivation5-25 Engine10-80
Inspecting Lead-acid	Engine number10-78
battery	Forcibly stopping the
Taking action with depleted lead-	engine 8-17
acid battery8-12	Inspecting the coolant 9-36
Bonnet	Inspecting the coolant
Brakes	oil9-32
Antilock Brake System	i-stop5-22
(ABS)	Overheating 8-21
Applying the emergency	Push button start5-14
brake8-18 AUTOHOLD5-65	Starting a flooded engine 8-16
	Starting the engine with a dead
Brakes10-92 Brake override system5-63	key battery8-10
brake override system 3-63	Taking action with depleted lead-
	acid battery8-12

_	Dlti
F	Deceleration regeneration charge
Fuses	display 5-36 Engine coolant temperature
Panel description9-43	gauge5-31
raner description	Fuel gauge5-32
H	Instantaneous fuel economy
111:16	display5-36
Hybrid System	Instrument cluster5-26
High voltage battery10-81	Instrument panel
1	illumination5-32
•	i-ACTIVSENSE display 5-37
Inspection and Maintenance	Maximum driving distance
Air conditioner	display 5-34
maintenance 9-61	Message display 5-38
Capacities	Multi-information display5-28
Cleaner	Odometer/Trip meter5-30
Dimensions	Outside temperature
Lubricant quality10-83	display 5-34
Vehicle Emission Control	Speedometer 5-26
Information Label	Tachometer5-27
Inspection and Servicing Body lubrication9-48	Vehicle speed alarm 5-37
Brake fluid9-37	Warning/Indicator light turns
Coolant	on 8-41
Emergency flat tyre	Interior Equipment
repair kit9-56	Accessory sockets
Engine oil9-32	Bottle holder7-45
Fuses 9-41	Centre console7-48
Inspecting the tyres9-53	Cup holders7-44
Inspection and servicing9-4	Glove compartment7-46
Lead-acid battery9-39	How to use the assist grips 7-64 Illuminated entry system7-54
Light bulbs 9-57	Luggage compartment 7-51
Replacing a tyre or a wheel9-55	Luggage compartment
Rotating the tyres 9-54	cover7-66
Scheduled maintenance9-5	Luggage compartment
Windscreen washer fluid 9-38	lights7-57
Windscreen wiper blade	Map lights7-56
rubbers 9-49	Overhead console
Instrument Cluster	Overhead lights7-55
Average fuel economy	Rear coat hooks 7-50
display 5-35	Sunvisor7-52

Vanity mirrors	Secondary Collision Reduction
(BSM)	Key
(HBC)	Washer fluid does not spray8-39 Lights Direction indicator lever5-75 Hazard warning lights5-85 Light bulbs
Lane Departure Warning System (LDWS)	Maintenance Dust-proof sheet of the active driving display

Upholstery and synthetic leather	Theft-Deterrent System
Mirrors Mirror defogger	
P	
Parking Sensor5-222	Rotating the tyres 9-54
R	Tyres10-90
Rear View Monitor	Tyre Pressure Monitoring System (TPMS)5-98 Wheel maintenance9-65
S	W
Seats Child-restraint systems3-37 Driving Position Memory3-26 Front seats3-25 Leather upholstery maintenance9-67	Window Power window
Rear seats	Windscreen wiper de-icer 5-83 Winter Driving5-228 Wipers Replacing windscreen wiper blade rubbers
Maintenance9-69	Replenishing windscreen washer fluid9-38
Security System	Washer fluid does not spray8-39

Windscreen wipers operate at high	Windscreen wiper/Washer
speed 8-38	switch5-76
Windscreen wiper de-icer 5-83	