

A Word to Mazda Owners

Thank you for choosing a Mazda. We at Mazda design and build vehicles with complete customer satisfaction in mind.

To help ensure enjoyable and trouble-free operation of your Mazda, read this manual carefully and follow its recommendations.

Regular servicing of your vehicle by an expert repairer helps maintain both its roadworthiness and its resale value. A world-wide network of Authorised Mazda Repairers can help you with their professional servicing expertise.

Their specially trained personnel are best qualified to service your Mazda vehicle properly and exactly. Also, they are supported by a wide range of highly specialized tools and equipment specially developed for servicing Mazda vehicles. When maintenance or service is necessary we recommend an Authorised Mazda Repairer.

We assure you that all of us at Mazda have an ongoing interest in your motoring pleasure and in your full satisfaction with your Mazda product.

**Mazda Motor Corporation
HIROSHIMA, JAPAN**

Important Notes About This Manual

Keep this manual in the glove compartment as a handy reference for the safe and enjoyable use of your Mazda. Should you resell the vehicle, leave this manual with it for the next owner.

All specifications and descriptions are accurate at the time of printing. Because improvement is a constant goal at Mazda, we reserve the right to make changes in specifications at any time without notice and without obligation.

Please be aware that this manual applies to all models, equipment and options. As a result, you may find some explanations for equipment not installed on your vehicle.

©2019 Mazda Motor Corporation
April 2019 (Print2)

How to Use This Manual

We want to help you get the most driving pleasure from your vehicle. Your owner's manual, when read from cover to cover, can do that in many ways.

Illustrations complement the words of the manual to best explain how to enjoy your Mazda. By reading your manual, you can find out about the features, important safety information, and driving under various road conditions.

The symbol below in this manual means "Do not do this" or "Do not let this happen".



References to left hand and right hand are made as if facing in the same direction the vehicle faces. Although this manual explains a left-hand-drive model, it also applies to right-hand-drive models.

Index: A good place to start is the Index, an alphabetical listing of all information in your manual.

You'll find several WARNINGS, CAUTIONs, and NOTEs in the manual.

⚠ WARNING

A WARNING indicates a situation in which serious injury or death could result if the warning is ignored.

⚠ CAUTION

A CAUTION indicates a situation in which bodily injury or damage to your vehicle, or both, could result if the caution is ignored.

NOTE

A NOTE provides information and sometimes suggests how to make better use of your vehicle.

The following symbol, located on some parts of the vehicle, indicates that this manual contains information related to the part.

Please refer to the manual for a detailed explanation.



Table of Contents

Pictorial Index Interior, exterior views and part identification of your Mazda.	1
Essential Safety Equipment Important information about safety equipment, including seats, seat belt system, child-restraint systems and SRS air bags.	2
Before Driving Use of various features, including keys, doors, mirrors and windows.	3
When Driving Information concerning safe driving and stopping.	4
Interior Features Use of various features for ride comfort, including air-conditioning system and audio system.	5
Maintenance and Care How to keep your Mazda in top condition.	6
If Trouble Arises Helpful information on what to do if a problem arises with the vehicle.	7
Customer Information Important consumer information including warranties and add-on equipment.	8
Specifications Technical information about your Mazda.	9
Index	10

1

Pictorial Index

Interior, exterior views and part identification of your Mazda.

Interior Overview (Left-Hand Drive Model).....1-2

- Interior Equipment (View A).....1-2
- Interior Equipment (View B).....1-3
- Interior Equipment (View C).....1-4
- Interior Equipment (View D).....1-5
- Interior Equipment (View E).....1-6

Interior Overview (Right-Hand Drive Model).....1-8

- Interior Equipment (View A).....1-8
- Interior Equipment (View B).....1-9
- Interior Equipment (View C).....1-10
- Interior Equipment (View D).....1-11
- Interior Equipment (View E).....1-12


Exterior Overview.....1-14

- Saloon.....1-14
- Hatchback.....1-15

Interior Overview (Left-Hand Drive Model)

Interior Equipment (View A)

▼ Interior Equipment (View A)

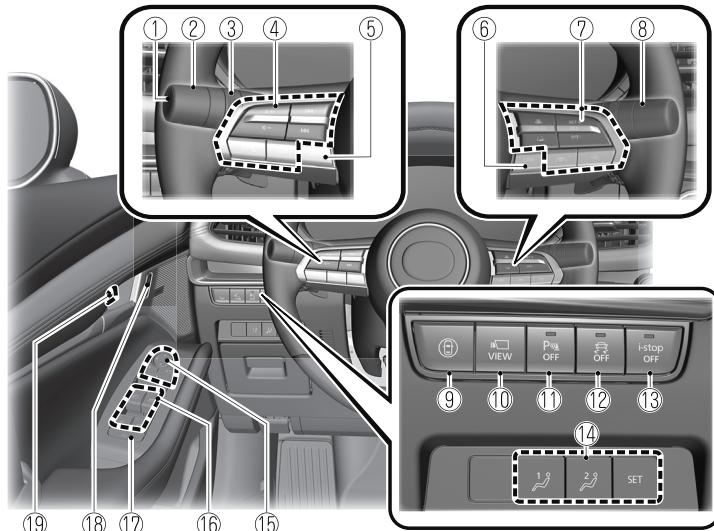


- ① High beam control switch/Adaptive LED headlight switch..... page 4-109, 4-111
- ② Lighting control..... page 4-60
- ③ Turn and lane-change signals..... page 4-66
- ④ Audio remote control switches..... page 5-21
- ⑤ INFO switch..... page 4-25
- ⑥ LIM switch..... page 4-179, 4-185
- ⑦ Cruise control switches..... page 4-144, 4-154, 4-167, 4-247
- ⑧ Wiper and washer lever..... page 4-67
- ⑨ i-ACTIVSENSE switch..... page 4-105
- ⑩ 360° view monitor switch..... page 4-210
- ⑪ Parking sensor switch..... page 4-277
- ⑫ DSC OFF switch..... page 4-91
- ⑬ i-stop OFF switch..... page 4-19
- ⑭ Position memory buttons..... page 2-11
- ⑮ Outside mirror switches..... page 3-34
- ⑯ Power window switches..... page 3-40
- ⑰ Power window lock switch..... page 3-40
- ⑱ Door-lock switch..... page 3-18
- ⑲ Door-lock knob..... page 3-20

Interior Overview (Left-Hand Drive Model)

Interior Equipment (View B)

▼ Interior Equipment (View B)

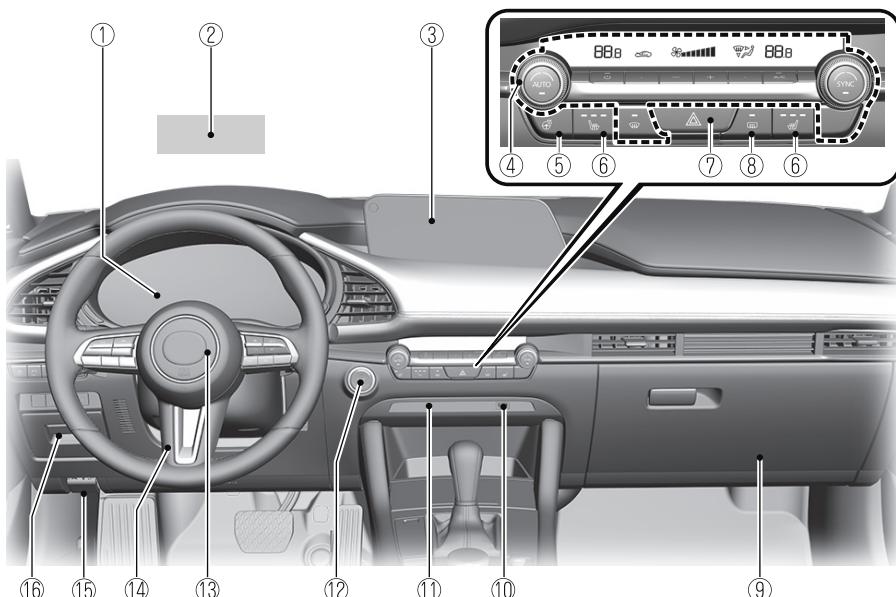


- | | |
|--------------------------------------|-----------|
| ① Instrument cluster..... | page 4-23 |
| ② Active driving display..... | page 4-42 |
| ③ MZD Connect..... | page 5-14 |
| ④ Air-conditioning system..... | page 5-2 |
| ⑤ Heated steering wheel switch..... | page 2-20 |
| ⑥ Seat warmer switches..... | page 2-19 |
| ⑦ Hazard warning flasher switch..... | page 4-74 |
| ⑧ Rear window defogger switch..... | page 4-72 |
| ⑨ Glove compartment..... | page 5-40 |
| ⑩ External input terminal..... | page 5-14 |
| ⑪ CD/DVD player..... | page 5-14 |
| ⑫ Push button start..... | page 4-4 |
| ⑬ Horn..... | page 4-74 |
| ⑭ Lock release lever..... | page 2-5 |
| ⑮ Bonnet release handle..... | page 6-17 |
| ⑯ Storage pocket..... | page 5-40 |

Interior Overview (Left-Hand Drive Model)

Interior Equipment (View C)

▼ Interior Equipment (View C)

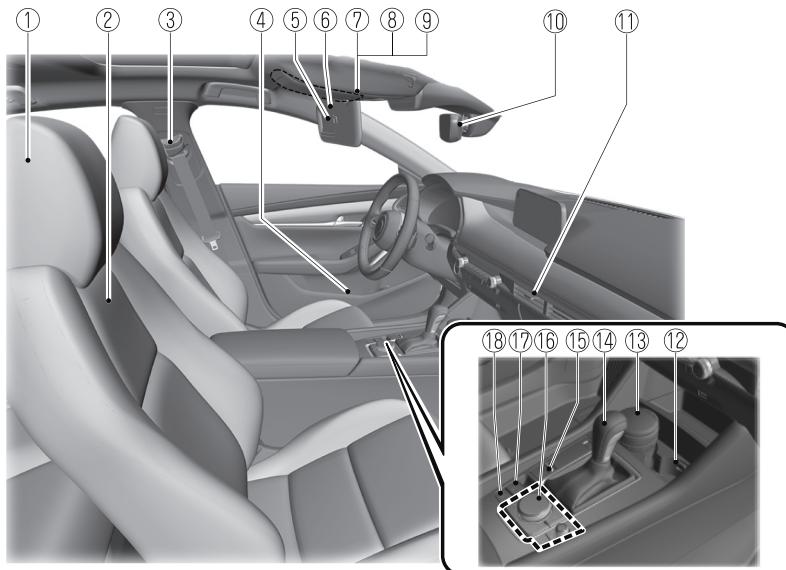


- ① Head restraint..... page 2-17
- ② Front seat..... page 2-5
- ③ Seat belt..... page 2-22
- ④ Bottle holder..... page 5-38
- ⑤ Vanity mirror..... page 5-32
- ⑥ Sunvisor..... page 5-32
- ⑦ Overhead light (front)/Map lights..... page 5-33
- ⑧ Overhead console..... page 5-40
- ⑨ Sunroof switch..... page 3-42
- ⑩ Rearview mirror..... page 3-37
- ⑪ Vent..... page 5-3
- ⑫ Cup holder..... page 5-37
- ⑬ Removable ashtray..... page 5-42
- ⑭ Shift lever/Selector lever..... page 4-45, 4-48
- ⑮ Drive selection switch..... page 4-98
- ⑯ Commander switch..... page 5-17
- ⑰ Electric Parking Brake (EPB) switch..... page 4-77
- ⑱ AUTOHOLD switch..... page 4-84

Interior Overview (Left-Hand Drive Model)

Interior Equipment (View D)

▼ Interior Equipment (View D)

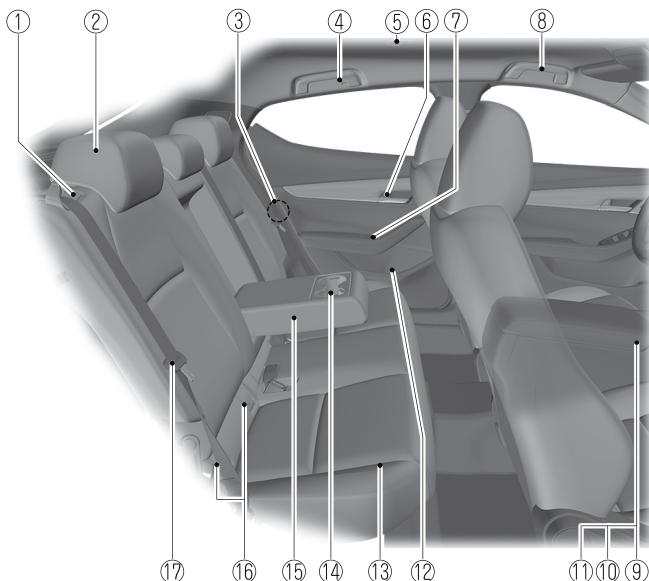


- ① Push knob..... page 2-14
- ② Head restraint..... page 2-17
- ③ Child safety lock..... page 3-21
- ④ Rear coat hook..... page 5-39
- ⑤ Overhead light (rear)..... page 5-33
- ⑥ Door-lock knob..... page 3-20
- ⑦ Power window switch..... page 3-40
- ⑧ Assist grip..... page 5-38
- ⑨ Centre console..... page 5-40
- ⑩ Accessory socket..... page 5-36
- ⑪ External input terminal..... page 5-14
- ⑫ Bottle holder..... page 5-38
- ⑬ Rear seat..... page 2-14
- ⑭ Cup holder..... page 5-37
- ⑮ Armrest..... page 2-17
- ⑯ ISOFIX lower anchors..... page 2-44
- ⑰ Seat belt..... page 2-22

Interior Overview (Left-Hand Drive Model)

Interior Equipment (View E)


▼ Saloon

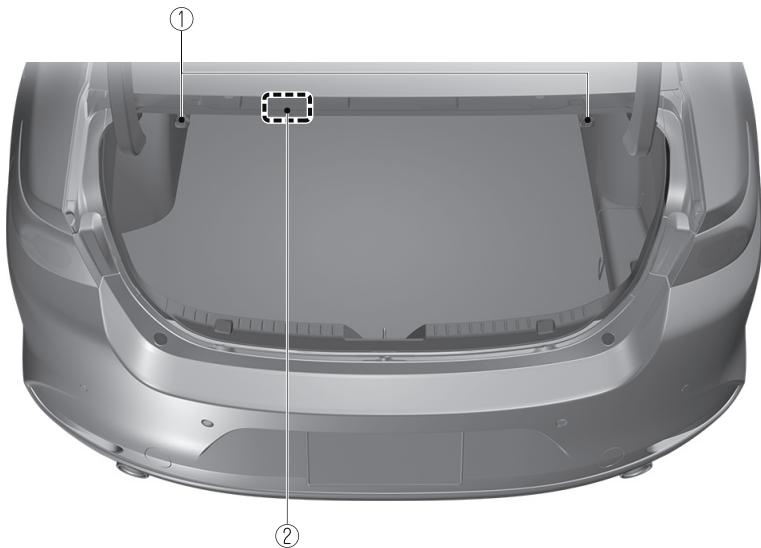

- ① Remote handles.....page 2-14
② Boot light.....page 5-33

Interior Overview (Left-Hand Drive Model)

▼ Hatchback

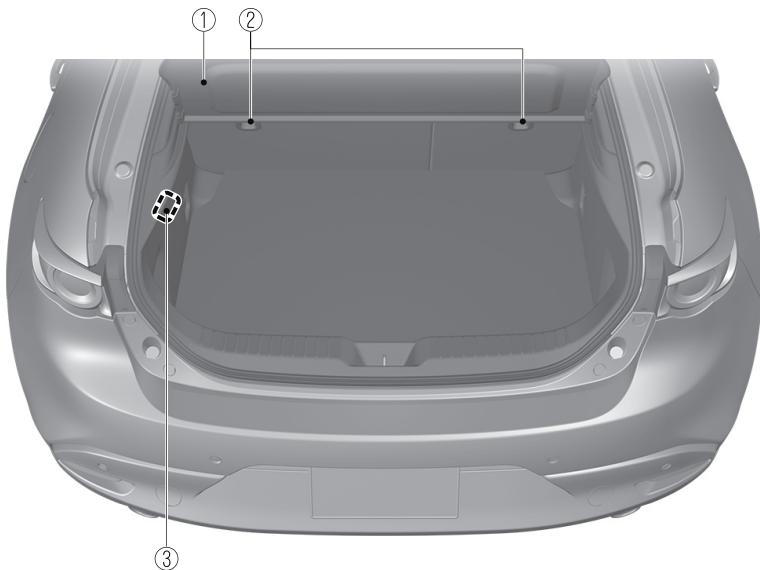


- ① Luggage compartment cover.....page 3-24
- ② Anchor brackets.....page 2-43
- ③ Luggage compartment light.....page 5-33

Interior Overview (Right-Hand Drive Model)

Interior Equipment (View A)

▼ Interior Equipment (View A)

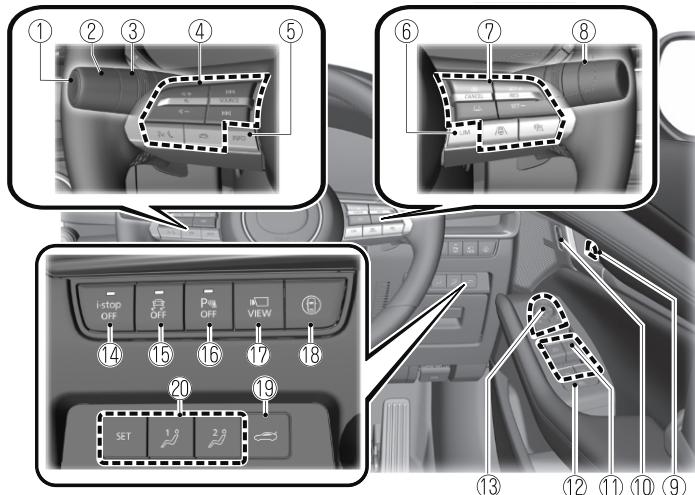


- ① High beam control switch/Adaptive LED headlight switch..... page 4-109, 4-111
- ② Lighting control..... page 4-60
- ③ Turn and lane-change signals..... page 4-66
- ④ Audio remote control switches..... page 5-21
- ⑤ INFO switch..... page 4-25
- ⑥ LIM switch..... page 4-179, 4-185
- ⑦ Cruise control switches..... page 4-144, 4-154, 4-167, 4-247
- ⑧ Wiper and washer lever..... page 4-67
- ⑨ Door-lock knob..... page 3-20
- ⑩ Door-lock switch..... page 3-18
- ⑪ Power window switches..... page 3-40
- ⑫ Power window lock switch..... page 3-40
- ⑬ Outside mirror switches..... page 3-34
- ⑭ i-stop OFF switch..... page 4-19
- ⑮ DSC OFF switch..... page 4-91
- ⑯ Parking sensor switch..... page 4-277
- ⑰ 360° view monitor switch..... page 4-210
- ⑱ i-ACTIVSENSE switch..... page 4-105
- ⑲ Boot lid release button..... page 3-22
- ⑳ Position memory buttons..... page 2-11

Interior Overview (Right-Hand Drive Model)

Interior Equipment (View B)

▼ Interior Equipment (View B)

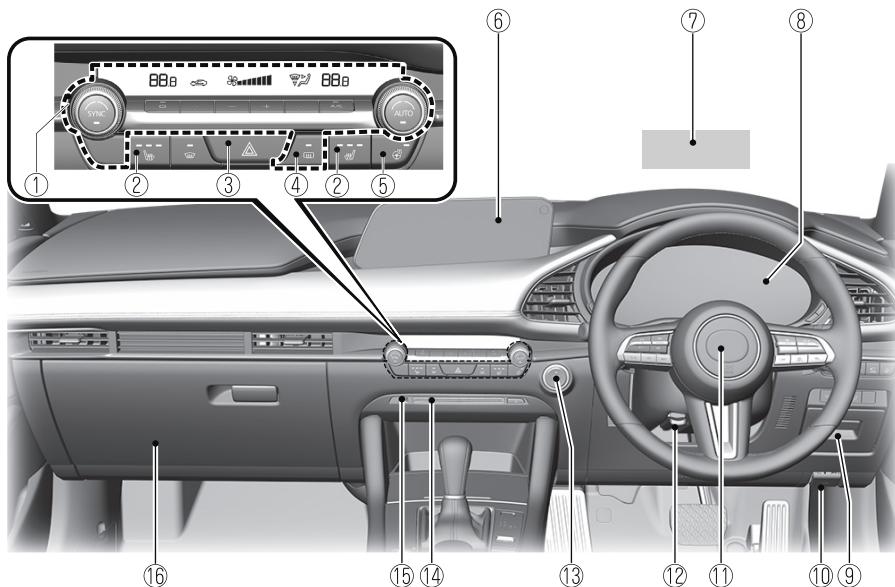


- | | |
|--------------------------------------|-----------|
| ① Air-conditioning system..... | page 5-2 |
| ② Seat warmer switches..... | page 2-19 |
| ③ Hazard warning flasher switch..... | page 4-74 |
| ④ Rear window defogger switch..... | page 4-72 |
| ⑤ Heated steering wheel switch..... | page 2-20 |
| ⑥ MZD Connect..... | page 5-14 |
| ⑦ Active driving display..... | page 4-42 |
| ⑧ Instrument cluster..... | page 4-23 |
| ⑨ Storage pocket..... | page 5-40 |
| ⑩ Bonnet release handle..... | page 6-17 |
| ⑪ Horn..... | page 4-74 |
| ⑫ Lock release lever..... | page 2-5 |
| ⑬ Push button start..... | page 4-4 |
| ⑭ CD/DVD player..... | page 5-14 |
| ⑮ External input terminal..... | page 5-14 |
| ⑯ Glove compartment..... | page 5-40 |

Interior Overview (Right-Hand Drive Model)

Interior Equipment (View C)

▼ Interior Equipment (View C)

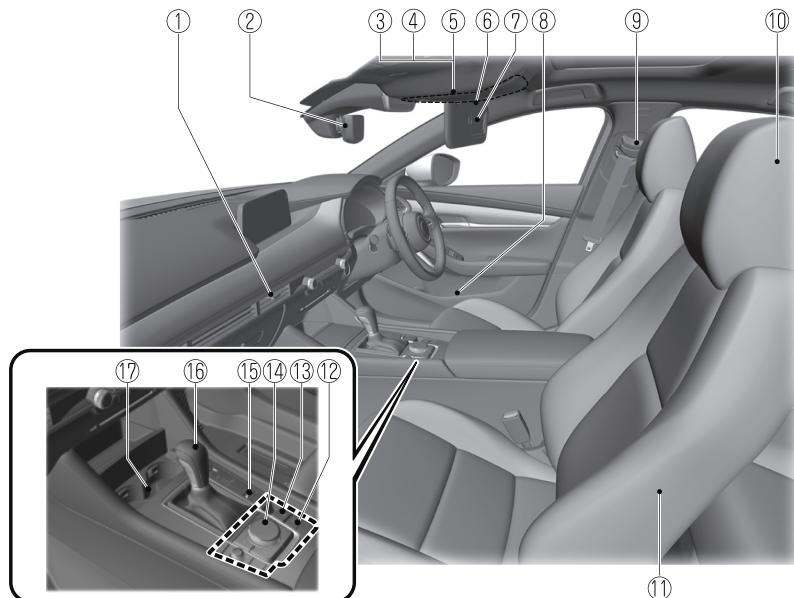


- ① Vent..... page 5-3
- ② Rearview mirror..... page 3-37
- ③ Overhead light (front)/Map lights..... page 5-33
- ④ Overhead console..... page 5-40
- ⑤ Sunroof switch..... page 3-42
- ⑥ Sunvisor..... page 5-32
- ⑦ Vanity mirror..... page 5-32
- ⑧ Bottle holder..... page 5-38
- ⑨ Seat belt..... page 2-22
- ⑩ Head restraint..... page 2-17
- ⑪ Front seat..... page 2-5
- ⑫ AUTOHOLD switch..... page 4-84
- ⑬ Electric Parking Brake (EPB) switch..... page 4-77
- ⑭ Commander switch..... page 5-17
- ⑮ Drive selection switch..... page 4-98
- ⑯ Shift lever/Selector lever..... page 4-45, 4-48
- ⑰ Cup holder..... page 5-37

Interior Overview (Right-Hand Drive Model)

Interior Equipment (View D)

▼ Interior Equipment (View D)

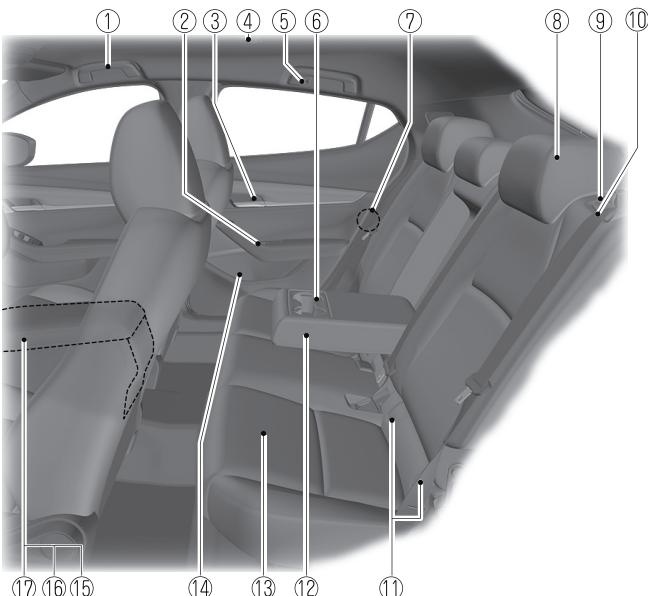


① Assist grip.....	page 5-38
② Power window switch.....	page 3-40
③ Door-lock knob.....	page 3-20
④ Overhead light (rear).....	page 5-33
⑤ Rear coat hook.....	page 5-39
⑥ Cup holder.....	page 5-37
⑦ Child safety lock.....	page 3-21
⑧ Head restraint.....	page 2-17
⑨ Push knob.....	page 2-14
⑩ Seat belt.....	page 2-22
⑪ ISOFIX lower anchors.....	page 2-44
⑫ Armrest.....	page 2-17
⑬ Rear seat.....	page 2-14
⑭ Bottle holder.....	page 5-38
⑮ Centre console.....	page 5-40
⑯ Accessory socket.....	page 5-36
⑰ External input terminal.....	page 5-14

Interior Overview (Right-Hand Drive Model)

Interior Equipment (View E)


▼ Saloon

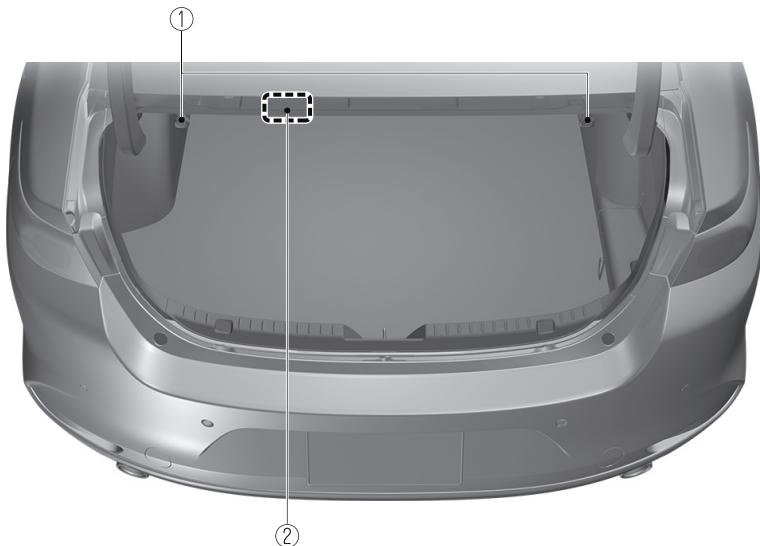

- ① Remote handles.....page 2-14
② Boot light.....page 5-33

Interior Overview (Right-Hand Drive Model)

▼ Hatchback

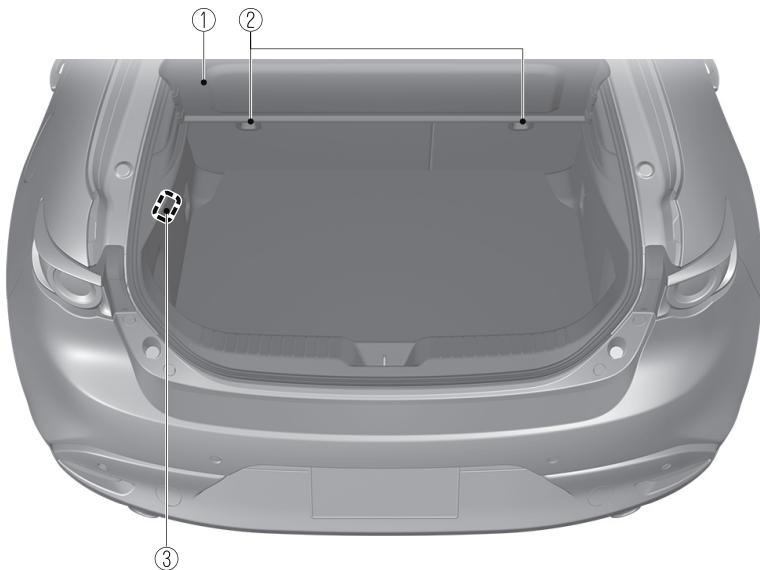


- ① Luggage compartment cover.....page 3-24
- ② Anchor brackets.....page 2-43
- ③ Luggage compartment light.....page 5-33

Exterior Overview

Saloon


▼ Saloon

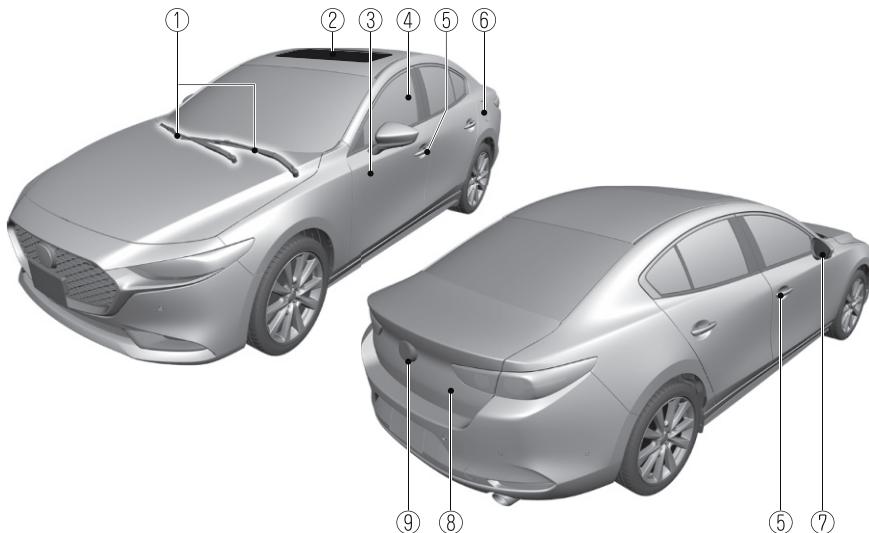

- ① Windscreen wiper blades.....page 6-33
- ② Sunroof.....page 3-42
- ③ Door.....page 3-12
- ④ Window.....page 3-39
- ⑤ Touch sensor.....page 3-15
- ⑥ Fuel-filler flap.....page 3-32
- ⑦ Outside mirror.....page 3-34
- ⑧ Boot lid.....page 3-21
- ⑨ Electric boot lid opener.....page 3-22

Hatchback

▼ Hatchback

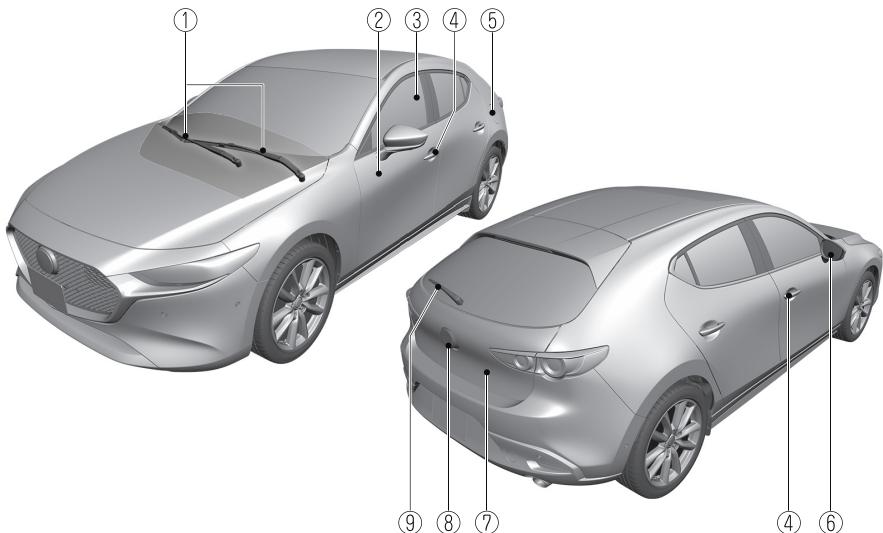

- | | |
|---------------------------------|-----------|
| ① Windscreen wiper blades..... | page 6-33 |
| ② Door..... | page 3-12 |
| ③ Window..... | page 3-39 |
| ④ Touch sensor..... | page 3-15 |
| ⑤ Fuel-filler flap..... | page 3-32 |
| ⑥ Outside mirror..... | page 3-34 |
| ⑦ Liftgate..... | page 3-21 |
| ⑧ Electric liftgate opener..... | page 3-22 |
| ⑨ Rear window wiper blade..... | page 6-37 |

MEMO

Important information about safety equipment, including seats, seat belt system, child-restraint systems and SRS air bags.

Seats.....	2-2	SRS Air Bags.....	2-47
Seat Precautions.....	2-2	Supplementary Restraint System (SRS) Precautions.....	2-47
Front Seat.....	2-5	Front Passenger Air Bag	
Rear Seat.....	2-14	Deactivation Switch*	2-52
Head Restraints.....	2-17	Supplementary Restraint System Components.....	2-55
Seat Warmer/Heated Steering Wheel.....	2-19	How the SRS Air Bags Work....	2-56
Seat Warmer*	2-19	SRS Air Bag Deployment	
Heated Steering Wheel*	2-20	Criteria.....	2-59
Seat Belt Systems.....	2-22	Limitations to SRS Air Bag.....	2-61
Seat Belt Precautions.....	2-22	Constant Monitoring.....	2-63
Seat Belt.....	2-24		
Seat Belt Warning Systems.....	2-26		
Seat Belt Pretensioner and Load Limiting Systems.....	2-26		
Child Restraint.....	2-29		
Child-Restraint Precautions.....	2-29		
Child-Restraint System Installation.....	2-33		
Child-Restraint System Suitability for Various Seat Positions Table.....	2-38		
Installing Child-Restraint Systems.....	2-43		

Seats

Seat Precautions

▼ Seat Precautions

WARNING

Make sure the adjustable components of a seat are locked in place:

Adjustable seats and seatbacks that are not securely locked are dangerous. In a sudden stop or collision, the seat or seatback could move, causing injury. Make sure the adjustable components of the seat are locked in place by attempting to slide the seat forward and backward and rocking the seatback.

Never allow children to adjust a seat:

Allowing children to adjust a seat is dangerous as it could result in serious injury if a child's hands or feet become caught in the seat.

Do not drive with the seatback unlocked:

All of the seatbacks play an important role in your protection in a vehicle. Leaving the seatback unlocked is dangerous as it can allow passengers to be ejected or thrown around and baggage to strike occupants in a sudden stop or collision, resulting in severe injury. After adjusting the seatback at any time, even when there are no other passengers, rock the seatback to make sure it is locked in place.

Adjust a seat only when the vehicle is stopped:

If the seat is adjusted while the vehicle is being driven, the seating posture may become unstable and the seat could move unexpectedly resulting in injury.

Do not modify or replace the front seats:

Modifying or replacing the front seats such as replacing the upholstery or loosening any bolts is dangerous. The front seats contain air bag components essential to the supplementary restraint system. Such modifications could damage the supplementary restraint system and result in serious injury. Consult an Authorised Mazda Repairer if there is any need to remove or reinstall the front seats.

Do not drive with damaged front seats:

Driving with damaged front seats, such as seat cushions torn or damaged down to the urethane, is dangerous. A collision, even one not strong enough to inflate the air bags, could damage the front seats which contain essential air bag components. If there was a subsequent collision, an air bag may not deploy which could lead to injuries. Always have an Authorised Mazda Repairer inspect the front seats, front seat belt pretensioners and air bags after a collision.

Do not drive with either front seats reclined:

Sitting in a reclined position while the vehicle is moving is dangerous because you do not get the full protection from seat belts. During sudden braking or a collision, you can slide under the lap belt and suffer serious internal injuries. For maximum protection, sit well back and upright.

Do not place an object such as a cushion between the seatback and your back:

Putting an object such as a cushion between the seatback and your back is dangerous because you will be unable to maintain a safe driving posture and the seat belt cannot function at its full capacity in a collision, which could result in a serious accident, injury or death.

Do not place objects under the seat:

The object could get stuck and cause the seat to not be fixed securely, and result in an accident.

Do not stack cargo higher than the seatbacks:

Stacking luggage or other cargo higher than the seatbacks is dangerous. During sudden braking or a collision, objects can fly around and become projectiles that may hit and injure passengers.

Make sure luggage and cargo is secured before driving:

Not securing cargo while driving is dangerous as it could move or be crushed during sudden braking or a collision and cause injury.

Never allow a passenger to sit or stand on the folded seatback while the vehicle is moving:

Driving with a passenger on the folded seatback is dangerous. Allowing a child to sit up on the folded seatback while the vehicle is moving is particularly dangerous. In a sudden stop or even a minor collision, a child not in a proper seat or child-restraint system and seat belt could be thrown forward, back or even out of the vehicle resulting in serious injuries or death. The child in the baggage area could be thrown into other occupants and cause serious injury.

Never give the car keys to children and do not allow them to play in the vehicle***(Saloon):***

Playing with the folding rear seats is dangerous. Once the seatbacks are back up, a child in the boot would not be able to get out the way they had entered. If you have small children, keep the seatbacks locked.

Always leave your car locked and keep the car keys safely away from children***(Saloon):***

Leaving your car unlocked or the keys in reach of children is dangerous. Children who find their way into the boot through an unlocked rear seatback or an open boot can become accidentally locked in the boot. This could result in death or brain damage from heat prostration, particularly in the summer. Always lock the doors and the boot, and as an added measure, keep the rear seatbacks locked, whether you have children in your home or not.

CAUTION

- When operating a seat, be careful not to put your hands or fingers near the moving parts of the seat or on the side trim to prevent injury.
- When moving the seats, make sure there is no cargo in the surrounding area. If the cargo gets caught it could damage the cargo.
- **(Manual Seat)**
When moving the seats forward and rearward or returning a rear-reclined seatback to its upright position, make sure you hold onto the seatback with your hand while operating. If the seatback is not held, the seat will move suddenly and could cause injury.
- When inserting your hand under the seat to clean the cabin or pick up something you dropped under the seat, be careful not to hurt yourself. If you contact the moving parts and surrounding parts around the seat rail, seat frame, and the bottom of the seat, it could result in injury.

NOTE

- When returning a rear seat to its original position, place the seat belt in its normal position. Verify that the seat belt pulls out and retracts.
- **(Power Seat)**
The seat-bottom power adjustment is operated by motors. Avoid extended operation because excessive use can damage the motors.
 - To prevent the battery from running down, avoid using the power adjustment when the engine is stopped. The adjuster uses a large amount of electrical power.
 - Do not use the switch to make more than one adjustment at a time.

Front Seat

▼ Adjusting the Driver's Seat


Using the driving position set up procedure recommended by Mazda allows you to maintain a relaxed posture, drive the vehicle for longer periods without feeling tired, and make quick operations naturally.

Also, you can be assured of a clear view in the forward direction to help you drive more safely and comfortably.

The adjustments for the driving position recommended by Mazda are done using the following procedures.

1. Moving the steering wheel and seat to their default positions.
2. Adjusting the seatback angle.
3. Adjusting the seat position forward and back.
4. Adjusting the seat height.
5. Adjusting the height on the front edge of the seat bottom.
6. Adjusting the steering wheel position.
7. Adjusting the head restraint position.

Manual seat

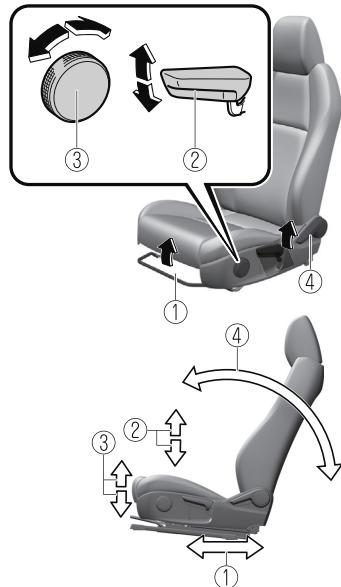

1. Seat Slide

To move a seat forward or backward, raise the lever and slide the seat to the desired position and release the lever. Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

2. Height Adjustment

To adjust the seat height, move the lever up or down.

3. Height Adjustment for Front Edge of Seat Bottom

To adjust the height for front edge of the seat bottom, rotate the dial to the desired position.

4. Seat Recline

To change the seatback angle, lean forward slightly while raising the lever. Then lean back to the desired position and release the lever.

Seats

Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.

Power seat



1. Seat Slide

To slide the seat, move the slide lifter switch on the outside of the seat to the front or back and hold it. Release the switch at the desired position.

2. Height Adjustment

To adjust the seat height, move the slide lifter switch up or down.

3. Height Adjustment for Front Edge of Seat Bottom

To adjust the front height of the seat bottom, raise or lower the front of the slide lifter switch.

4. Seat Recline

To change the seatback angle, press the front or rear side of the reclining switch. Release the switch at the desired position.

5. Lumbar Support Adjustment

To increase the seat firmness, press and hold the front part of the switch to the desired position, then release it. Press the rear part of the switch to decrease firmness.

Before making adjustments to the driving position recommended by Mazda

Before making adjustments, move the steering wheel and seat to their default positions.

How to move the steering wheel to its default position

WARNING


Never adjust the steering wheel while the vehicle is moving:

Adjusting the steering wheel while the vehicle is moving is dangerous. Moving it can very easily cause the driver to abruptly turn to the left or right. This can lead to loss of control or an accident.

After adjusting the steering wheel position, make sure it is securely locked by trying to move it up and down:

Driving with the steering wheel not securely locked in position is dangerous. If the steering wheel moves unexpectedly while driving, you could lose control of the steering resulting in an accident.

Lower the lever, move the steering wheel to the lowest position, and then push it down and all the way back.

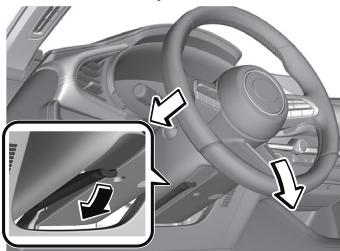

How to move a driver's seat to its default position

1. Slide the seat all the way back.
2. Lower the seat to its lowest height.
3. Lower the front edge of the seat bottom to its lowest height.
4. Sit squarely in the seat and rest your back against the seatback.

Seat adjustment procedure for the driving position recommended by Mazda

Adjusting the seatback angle (reclining)

Adjust the seatback to the angle providing a comfortable seated posture.

1. With your posture slightly slouched, move the seatback forward to the angle where your waist feels slightly cramped.



1. Manual Seat
2. Power Seat

Seats

- Move the seatback backward to a comfortable seated posture without any feeling of cramping in your waist.



- Manual Seat
- Power Seat

Adjusting the seat position forward and back (sliding)

Adjust the seat to the position best for operating the accelerator and brake pedals.

- Place your left foot on the footrest, your right foot between the accelerator and brake pedals, and position your heel to the position allowing easy switching between the pedals.


- With your heel set on the floor, set your right foot on the brake pedal and move the seat forward as far as possible until you feel a slight cramping in your ankle.



- Manual Seat
- Power Seat

- With your right foot set on the brake pedal, move the seat back until you no longer feel cramping in your ankle.
- With your heel set on the floor, make sure you can move your foot between the brake pedal and accelerator pedal smoothly.

5. Depress the accelerator pedal completely with your heel set on the floor and make sure that your ankle does not feel over-stretched.

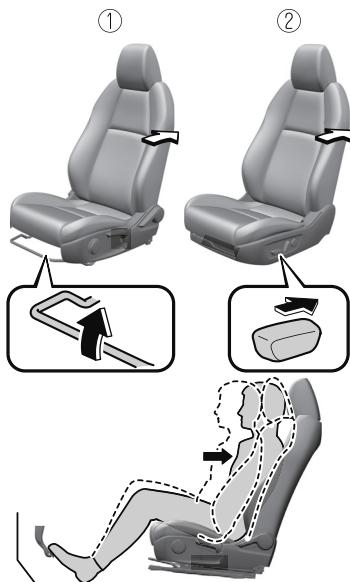

1. Manual Seat
2. Power Seat

Adjusting the seat height

Adjust the seat height to a position where you have a clear forward view and you can drive the vehicle easily.

1. With your back resting against the seatback, raise the seat to the height where you can see the rear edge area of the bonnet surface from the windscreens.




1. Manual Seat
2. Power Seat

Seats

Adjusting the height on the front edge of the seat bottom

Adjust the height on the front edge of the seat bottom to the position where the back of your knees contacts the front edge of the seat bottom.

- With your right foot set on the accelerator pedal, adjust the height on the front edge of the seat bottom so that the back of your knees lightly contacts the front edge of the seat bottom.
- Depress the accelerator pedal and make sure that you no longer feel cramping in the back of your knees.

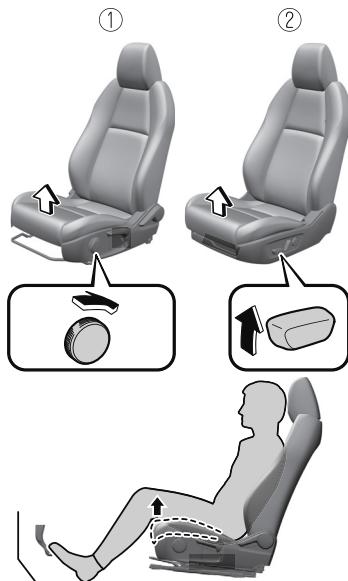


- Manual Seat
- Power Seat


Adjusting the steering wheel position

Adjust the steering wheel to the position where it can be operated easily and the gauges can be viewed easily.

- With your back resting against the seatback, extend both arms, place them on the top of the steering wheel, and pull the steering wheel towards you to the position of your wrists.

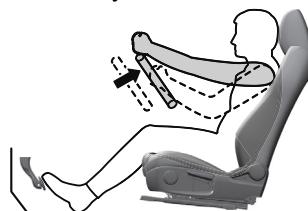

- Adjust the steering wheel height so that the gauges can be viewed easily.
- Raise the lever to securely lock the steering wheel.

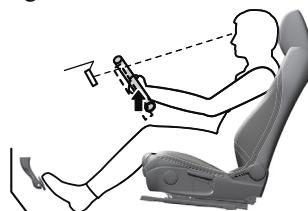

Adjusting the head restraint position

To prevent shock to the head and neck, adjust the head restraints to their correct positions.

Refer to Height Adjustment on page 2-17.

▼ Driving Position Memory (Power Seat)*

The desired driving position can be called up after programming the position.
The following driving positions can be programmed.

- Driver's seat position (seat slide, height adjustment, front edge of seat bottom, seat recline)
Refer to Adjusting the Driver's Seat on page 2-5.
- Active driving display (display position, brightness level, display information)
Refer to Active Driving Display on page 4-42.
- Outside mirror angle
Refer to Outside Mirrors on page 3-34.

A driving position can be programmed to the following parts.

- Position memory button
- Transmitter used for vehicle

NOTE

- *Lumbar support adjustment cannot be programmed.*

Programming

1. Make sure the parking brake is on.
2. **(Automatic transmission)**
Make sure the selector lever is in the P position.
3. Switch the ignition ON.
4. Adjust the following parts to the desired conditions.
 - Driver's seat
 - Active driving display
 - Outside mirrors
5. Press the SET button continuously until a sound is activated.



1. 1 button
2. 2 button
3. SET button
6. Do the following operation within 5 seconds after the sound is activated to programme the driving position.

• Programming to a position memory button

Seats

Press the button you want to programme, either 1 or 2 button.

• Programming to the transmitter

Press the unlock button on the transmitter.

A sound is activated when the operation is completed correctly.

NOTE

- If you do not perform the operation correctly, a sound indicating that the programming has failed is activated.
- If the angle of the outer mirrors only changes a little, the angle of the outer mirrors may not have been programmed correctly.
- If the angle of the outer mirrors is adjusted close to the limits of its range of motion, the driving position can be successfully programmed, but it may fail when calling up the programmed driving position.

Calling up the programmed driving position

! CAUTION

Do not place fingers or hands around the bottom of the seat while the seat memory function is operating. The seat moves automatically while the seat memory function is operating and fingers or hands could get pinched and injured.

Using the position memory button

1. Make sure the parking brake is on.
2. **(Automatic transmission)**
Make sure the selector lever is in the P position.
3. Switch the ignition ON.

4. Press the programming button for the driving position you want to call up (button 1 or 2).
5. A sound is activated when the adjustment to the programmed driving position is completed.

NOTE

- When adjustment of the driving position is not necessary, a sound is not activated.
- The driving position adjustment is cancelled in the following cases:
 - The seat adjustment switch on the driver's seat is operated.
 - The angle of the outer mirrors is adjusted.
 - The SET button is pressed.
 - Programming button 1 or 2 is pressed.
 - The lock button or unlock button on the transmitter is pressed.
 - The vehicle starts moving.
 - The active driving display is adjusted.
 - **(Manual transmission)**
The parking brake is released.
 - **(Automatic transmission)**
The selector lever is shifted to a position other than P.

Using the transmitter

1. Unlock the driver's door using one of the following methods.
 - Touch the sensing area of the door release touch sensor.
 - Press the unlock button on the transmitter.
2. When you open the driver's door within 90 seconds after unlocking the doors, the adjustment of the following parts starts.

- Driver's seat
- Active driving display (When the ignition is switched ON, the adjusted active driving display is activated.)
- Outside mirrors

A sound is activated when the adjustment is completed.

NOTE

- When adjustment of the driving position is not necessary, a sound is not activated.
- The driving position adjustment is cancelled in the following cases:
 - The seat adjustment switch on the driver's seat is operated.
 - The angle of the outer mirrors is adjusted.
 - The SET button is pressed.
 - Programming button 1 or 2 is pressed.
 - The lock button or unlock button on the transmitter is pressed.
 - The vehicle starts moving.
 - The active driving display is adjusted.
 - **(Manual transmission)**
The parking brake is released.
 - **(Automatic transmission)**
The selector lever is shifted to a position other than P.

Erasing programmed driving positions


Erasing the driving positions programmed to the key

1. Switch the ignition OFF.
2. Press the SET button continuously until a sound is activated.
3. Press the lock button on the transmitter within 5 seconds after the sound is activated.

NOTE

If you do not perform the operation correctly, a sound indicating that the programming has failed is activated.

▼ Adjusting the Front Passenger's Seat

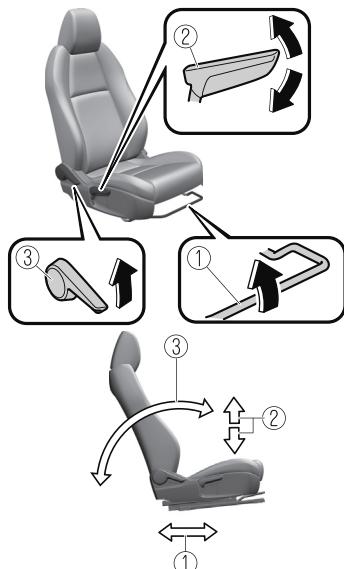

1. Seat Slide

To move a seat forward or backward, raise the lever and slide the seat to the desired position and release the lever. Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

2. Height Adjustment*

To adjust the seat height, move the lever up or down.

Seats

3. Seat Recline

To change the seatback angle, lean forward slightly while raising the lever. Then lean back to the desired position and release the lever.

Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.

Rear Seat

▼ Split Folding

By lowering the rear seatbacks the luggage compartment space can be expanded.

WARNING

Do not drive the vehicle with occupants on folded down seatbacks or in the luggage compartment.

Putting occupants in the luggage compartment is dangerous because seat belts cannot be fastened which could lead to serious injury or death during sudden braking or a collision.

Do not allow children to play inside the vehicle with the seatbacks lowered.

Allowing children to play in the vehicle with the seatbacks folded down is dangerous. If a child enters the luggage compartment and the seatbacks were raised back up, the child may become trapped in the luggage compartment which could lead to an accident.

Tightly secure cargo in the luggage compartment when it is transported with the seatbacks folded down.

Driving without tightly securing cargo and luggage is dangerous as it could move and become an obstruction to driving during emergency braking or a collision resulting in an unexpected accident.

When transporting cargo, do not allow the cargo to exceed the height of the seatbacks.

Transporting cargo stacked higher than the seatbacks is dangerous as visibility to the rear and sides of the vehicle is reduced which could interfere with driving operations and lead to an accident.

Lowering the seatbacks

⚠ CAUTION

➤ **(Hatchback)**


When folding the seatback forward, always support the seatback with your hand. If it is not supported by a hand, fingers or the hand pressing the push knob could be injured.

➤ *Check the position of a front seat before folding a rear seatback.*

Depending on the position of a front seat, it may not be possible to fold a rear seatback all the way down because it may hit the seatback of the front seat which could scratch or damage the front seat or its pocket. Lower or remove the head restraint on the rear outboard seat if necessary.

(Saloon)

1. Open the boot lid and pull the lever of the seatback you want to fold down.

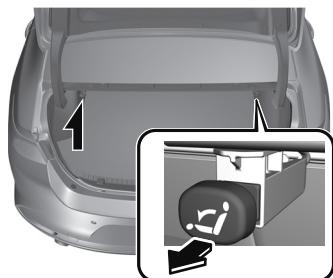

2. Open a rear door and fold the rear seat forward.

(Hatchback)

Press the push knob to fold down the seatback.



Seats

To return the seatback to its upright position:


! WARNING

When returning a seatback to its upright position, make sure the 3-point seat belt is not caught in the seatback and the 3-point seat belt is not twisted.

If the seat belt is used while it is twisted and caught in the seatback, the seat belt cannot function at its full capacity, which could cause serious injury or death.

When returning a seatback to its upright position, make sure that it is firmly locked and the red indication is not visible (Hatchback).


If the red indication is visible behind the push knob, it means the seatback is not locked. If the vehicle is driven without the seatback locked, it could fold down suddenly and cause an accident.

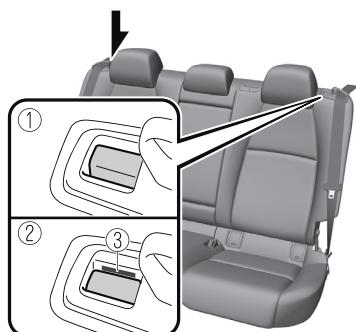

1. Locked position
2. Unlocked position
3. Red indication


1. Make sure that the seat belt passes through the seat belt guide correctly and it is not twisted, then raise the seatback while preventing the seat belt from being caught in the seatback.

(Saloon)

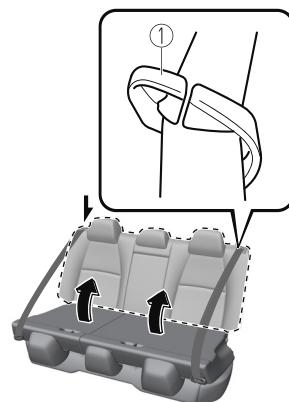

1. Seat belt guides

(Hatchback)

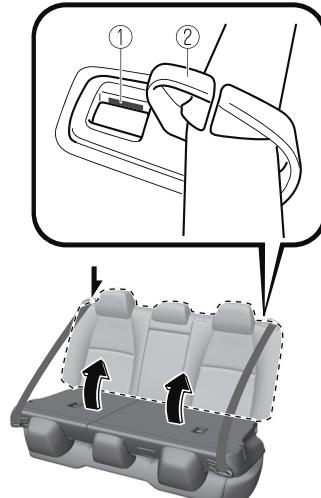


1. Red indication

2. Seat belt guide
2. Press the seatback rearward and lock it in place. After returning the seatback to its upright position, make sure it is securely locked.

▼ Armrest*

The rear armrest in the centre of the rear seatback can be used (no occupant in the centre seat) or placed upright.

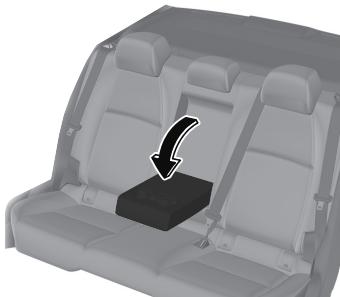

⚠ WARNING

Never put your hands and fingers around the moving parts of the seat and armrest:
Putting your hands and fingers around the moving parts of the seat and armrest is dangerous as they could get injured.

Head Restraints

▼ Head Restraints

Your vehicle is equipped with head restraints on all outboard seats and the rear centre seat. The head restraints are intended to help protect you and the passengers from neck injury.


⚠ WARNING

Always drive with the head restraints installed when seats are being used and make sure they are properly adjusted:

Driving with the head restraints adjusted too low or removed is dangerous. With no support behind your head, your neck could be seriously injured in a collision.

▼ Height Adjustment

Adjust the head restraint so that the centre is even with the top of the passenger's ears.

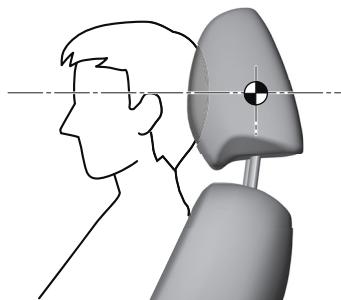


To raise a head restraint, pull it up to the desired position.


To lower the head restraint, press the stop-catch release, then push the head restraint down.

Seats


Front seats

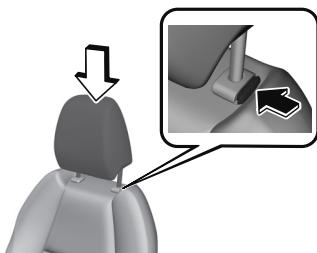

Rear outboard seats

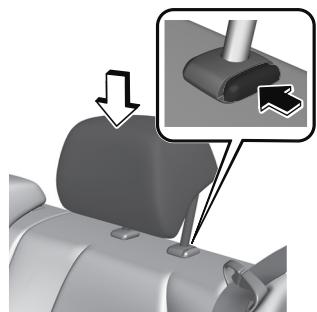

Rear centre seat

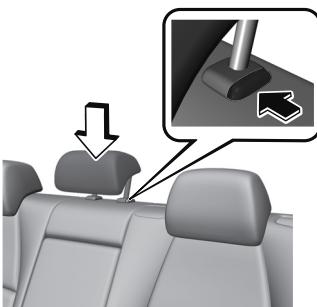

▼ Removal/Installation

To remove the head restraint, pull it up while pressing the stop-catch.

To install the head restraint, insert the legs into the holes while pressing the stop-catch.

WARNING

Always drive with the head restraints installed when seats are being used and make sure they are properly installed:

Driving with the head restraints not installed is dangerous. With no support behind your head, your neck could be seriously injured in a collision.

After installing a head restraint, try lifting it to make sure that it does not pull out:

Driving with an unsecured head restraint is dangerous as the effectiveness of the head restraint will be compromised which could cause it to unexpectedly detach from the seat.

CAUTION

- When installing a head restraint, make sure that it is installed correctly with the front of the head restraint facing forward. If the head restraint is installed incorrectly, it could detach from the seat during a collision and result in injury.
- The head restraints on each of the front and rear seats are specialized to each seat. Do not switch around the head restraint positions. If a head restraint is not installed to its correct seat position, the effectiveness of the head restraint during a collision will be compromised which could cause injury.

Seat Warmer/Heated Steering Wheel

Seat Warmer*


▼ Seat Warmer

The front seats can be warmed up while the engine is running.

While the seat warmer is operating, the indicator light in the seat warmer switch turns on according to the set temperature.

Manual mode

When the seat warmer switch is pressed, the seat warmer operates in manual mode. The set temperature changes as shown in the figure each time the seat warmer switch is pressed.

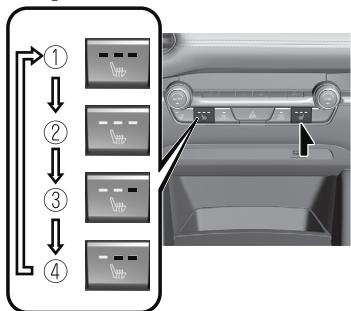

1. OFF
2. High
3. Mid
4. Low

NOTE

If the engine is turned off while the seat warmer is operating in manual mode, the seat warmer does not turn on automatically the next time the engine is turned on. To turn the seat warmer on, press the switch again.

Auto mode

The driver and front passenger's seat warmer can be operated in auto mode using the following procedure.

1. If "Link Seat & Climate Control Temperatures" has been disabled, enable it using the following procedure.
 - a) Select "Settings" from the MZD Connect home screen.
 - b) Select "Vehicle Settings".
 - c) Enable "Link Seat & Climate Control Temperatures".

2. Press the AUTO switch.
While in auto mode, the seat temperature is automatically controlled in 4 levels (High, Mid, Low, and OFF) according to the conditions in the cabin.

NOTE

- *If the front passenger's seat belt is unfastened, the front passenger's seat warmer turns off.*
- *If the seat warmer switch is pressed during auto mode, the seat warmer on the side where the switch was pressed switches to manual mode. To return to auto mode, press the AUTO switch.*
- *If the engine is turned off while the seat warmer is operating in auto mode, the seat warmer operates in auto mode again the next time the engine is turned on.*

Seat Warmer/Heated Steering Wheel

⚠ WARNING

Be careful when using the seat warmer:

The heat from the seat warmer may be too hot for the following people and could cause a low-temperature burn.

- Infants, small children, elderly people, and physically challenged people
- People with delicate skin
- People who are excessively fatigued
- People who are intoxicated
- People who have taken sleep-inducing medicine such as sleeping pills or cold medicine

Do not use the seat warmer with anything having high moisture-retention ability such as a blanket or cushion on the seat:

The seat may be heated excessively and cause a low-temperature burn.

Do not use the seat warmer even when taking a short nap in the vehicle:

The seat may be heated excessively and cause a low-temperature burn.

Do not place heavy objects with sharp projections on the seat, or insert needles or pins into it:

This could cause the seat to become excessively heated and result in injury from a minor burn.

⚠ CAUTION


- Do not use organic solvents to clean the seat. It may damage the seat surface and the heater.

Heated Steering Wheel*

▼ Heated Steering Wheel

The grips on the left and right of the steering wheel can be warmed up when the ignition is switched ON.

While the heated steering wheel is operating, the indicator light in the heated steering wheel switch turns on.

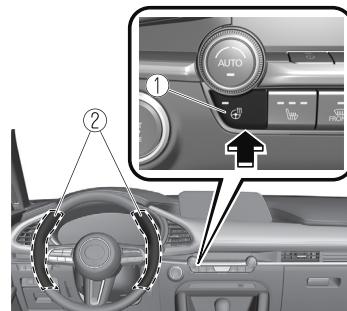

1. Heated steering wheel switch
2. Heating area

Manual mode

The heated steering wheel operates for about 30 minutes when the heated steering wheel switch is pressed, and then automatically turns off.

To turn the heated steering wheel off manually, press the switch again.

Seat Warmer/Heated Steering Wheel

Auto mode

The heated steering wheel can be operated in auto mode using the following procedure.

1. If “Link Seat & Climate Control Temperatures” has been disabled, enable it using the following procedure.
 - a) Select “Settings” from the MZD Connect home screen.
 - b) Select “Vehicle Settings”.
 - c) Enable “Link Seat & Climate Control Temperatures”.
2. Press the AUTO switch.

While in auto mode, the heated steering wheel automatically operates/turns off according to the conditions in the cabin.

NOTE

- *If the heated steering wheel switch is pressed during auto mode, the heated steering wheel switches to manual mode. To return to auto mode, press the AUTO switch.*
- *If the ignition is switched OFF while the heated steering wheel is operating in auto mode, the heated steering wheel operates in auto mode again the next time the ignition is switched ON.*

CAUTION

The following types of persons should be careful not to touch the steering wheel. Otherwise, it could cause a low-temperature burn.

- *Infants, small children, elderly people, and physically challenged people*
- *People with delicate skin*
- *People who are excessively fatigued*
- *People who are intoxicated*
- *People who have taken sleep-inducing medicine such as sleeping pills or cold medicine*

Seat Belt Systems

Seat Belt Precautions

▼ Seat Belt Precautions

Seat belts help to decrease the possibility of severe injury during accidents and sudden stops. Mazda recommends that the driver and all passengers always wear seat belts.

All the seats have lap/shoulder belts. These belts also have retractors with inertia locks that keep them out of the way when not in use. The locks allow the belts to remain comfortable on users, but they will lock in position during a collision.

WARNING

Always wear your seat belt and make sure all occupants are properly restrained:

Not wearing a seat belt is extremely dangerous. During a collision, occupants not wearing seat belts could hit someone or things inside the vehicle or even be thrown out of the vehicle. They could be seriously injured or even killed. In the same collision, occupants wearing seat belts would be much safer.

Do not wear twisted seat belts:

Twisted seat belts are dangerous. In a collision, the full width of the belt is not available to absorb the impact. This puts more force on the bones beneath the belt, which could cause serious injury or death. So, if your seat belt is twisted, you must straighten the seat belt to remove any twists and to allow the full width of the belt to be used.

Never use one seat belt on more than one person at a time:

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way cannot spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time and always operate the vehicle with each occupant properly restrained.

Do not operate a vehicle with a damaged seat belt:

Using a damaged seat belt is dangerous. An accident could damage the belt webbing of the seat belt in use. A damaged seat belt cannot provide adequate protection in a collision. Have an expert repairer, we recommend an Authorised Mazda Repairer inspect all seat belt systems in use during an accident before they are used again.

Have your seat belts changed immediately if the pretensioner or load limiter has been expended:

Always have an expert repairer, we recommend an Authorised Mazda Repairer immediately inspect the seat belt pretensioners and air bags after any collision. Like the air bags, the seat belt pretensioners and load limiters will only function once and must be replaced after any collision that caused them to deploy. If the seat belt pretensioners and load limiters are not replaced, the risk of injury in a collision will increase.

Positioning the Shoulder Portion of the Seat Belt:

Improper positioning of the shoulder portion of the seat belt is dangerous. Always make sure the shoulder portion of the seat belt is positioned across your shoulder and near your neck, but never under your arm, on your neck, or on your upper arm.

Positioning the Lap Portion of the Seat Belt:

The lap portion of the seat belt worn too high is dangerous. In a collision, this would concentrate the impact force directly on the abdominal area, causing serious injury. Wear the lap portion of the belt snugly and as low as possible.

Instructions for Use of Seat Belt Assemblies:

Seatbelts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seatbelts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.


Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

CAUTION

Belt retraction may become difficult if the belts and rings are soiled, so try to keep them clean. For more details about cleaning the seat belts, refer to "Seat Belt Maintenance" (page 6-63).

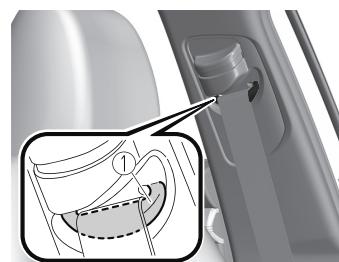

1. Ring

Seat Belt Systems

▼ Pregnant Women and Persons with Serious Medical Conditions

Pregnant women should always wear seat belts. Ask your doctor for specific recommendations.

The lap belt should be worn SNUGLY AND AS LOW AS POSSIBLE OVER THE HIPS.

The shoulder belt should be worn across your shoulder properly, but never across the stomach area.

Persons with serious medical conditions also should wear seat belts. Check with your doctor for any special instructions regarding specific medical conditions.



▼ Emergency Locking Mode

When the seat belt is fastened, it will always be in the emergency locking mode. In the emergency locking mode, the belt remains comfortable on the occupant and the retractor will lock in position during a collision.

If the belt is locked and cannot be pulled out, retract the belt once, and then try pulling it out slowly. If this fails, pull the belt strongly 1 time and loosen, then pull it out again slowly.

Seat Belt


▼ Fastening the Seat Belt

Insert the seat belt tongue into the buckle.



1. Seat belt tongue
2. Seat belt buckle

Position the lap belt as low as possible, not on the abdominal area, then adjust the shoulder belt so that it fits snugly against your body.

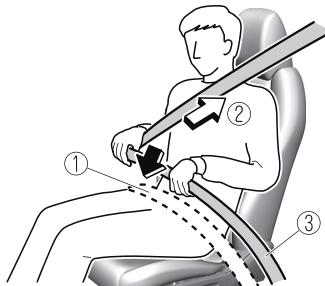


1. Keep low on hip bone
2. Take up slack
3. Too high

Before fastening the rear seat belt, make sure that the seat belt passes through the seat belt guide correctly and it is not twisted.



▼ Unfastening the Seat Belt

Depress the button on the seat belt buckle. If the belt does not fully retract, pull it out and check for kinks or twists. Then make sure it remains untwisted as it retracts.

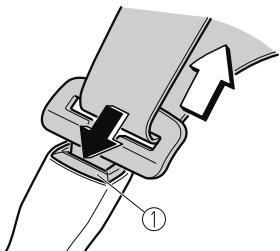

1. Button

NOTE

If a belt does not fully retract, inspect it for kinks and twists. If it is still not retracting properly, have it inspected at an expert repairer; we recommend an Authorised Mazda Repairer.

▼ Front Shoulder Belt Adjuster

The front seat belts have a front shoulder belt adjuster. If the seat belt contacts your neck or it slips off the shoulder, adjust the seat belt height.


To raise

To heighten the seat belt, move the front shoulder belt adjuster upward.



To lower

To lower the seat belt, hold the front shoulder belt adjuster and lower the seat belt with the knob of the front shoulder belt adjuster pressed.

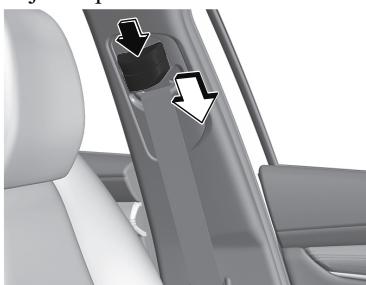

After adjusting, press the front shoulder belt adjuster downward and make sure that it is securely locked.

Seat Belt Systems

Seat Belt Warning Systems

▼ Seat Belt Warning Systems

If it detects that the occupant seat belt is unfastened, the warning light or beep alerts the occupant.

Refer to Seat Belt Warning Indication/Warning Light (Front seat) on page 7-68. Refer to Seat Belt Warning Light (Rear seat) (Red) on page 7-69.

Refer to Seat Belt Warning Beep on page 7-74.

Seat belt indicator light (rear seat) (green)

REAR



The light turns on when the ignition is switched ON and a rear seat belt is fastened, and then it turns off after about 60 seconds.

Seat Belt Pretensioner and Load Limiting Systems

▼ Seat Belt Pretensioner and Load Limiting Systems

For optimum protection, the front seat belts and rear outboard seat belts* are equipped with pretensioner and load limiting systems. For both these systems to work properly you must wear the seat belt properly.

Pretensioners:

When a collision is detected, the pretensioners deploy simultaneously with the air bags.

(With roll-over sensor)

The pretensioners deploy simultaneously with the air bags when a roll-over is also detected.

For deployment details, refer to the SRS Air Bag Deployment Criteria (page 2-59).

The seat belt retractors remove slack quickly as the air bags are expanding. Any time the air bags and seat belt pretensioners have fired they must be replaced.

A system malfunction or operation conditions are indicated by a warning. Refer to Air Bag/Seat Belt Pretensioner System Warning Indication/Warning Light on page 7-63.

Refer to Air Bag/Seat Belt Pretensioner System Warning Beep on page 7-74.

(With front passenger air bag deactivation switch)

In addition, the pretensioner system for the front passenger, like the front and side passenger air bag, is designed to only deploy when the front passenger air bag deactivation switch is turned to the ON position.

For details, refer to Front Passenger Air Bag Deactivation Switch (page 2-52).

Load limiter:

The load limiting system releases belt webbing in a controlled manner to reduce belt force on the occupant's chest. While the most severe load on a seat belt occurs in frontal collisions, the load limiter has an automatic mechanical function and can activate in any accident mode with sufficient occupant movement.

Even if the pretensioners have not fired, the load limiting function must be checked by an expert repairer, we recommend an Authorised Mazda Repairer.

WARNING

Wear seat belts only as recommended in this owner's manual:

Incorrect positioning of the seat belts is dangerous. Without proper positioning, the pretensioner and load limiting systems cannot provide adequate protection in an accident and this could result in serious injury. For more details about wearing seat belts, refer to "Fastening the Seat Belt" (page 2-24).

Have your seat belts changed immediately if the pretensioner or load limiter has been expended:

Always have an expert repairer, we recommend an Authorised Mazda Repairer immediately inspect the seat belt pretensioners and air bags after any collision. Like the air bags, the seat belt pretensioners and load limiters will only function once and must be replaced after any collision that caused them to deploy. If the seat belt pretensioners and load limiters are not replaced, the risk of injury in a collision will increase.

Do not modify the components or wiring, or use electronic testing devices on the pretensioner system:

Modifying the components or wiring of the pretensioner system, including the use of electronic testing devices is dangerous. You could accidentally activate it or make it inoperable which would prevent it from activating in an accident. The occupants or repairers could be seriously injured.

Properly dispose of the pretensioner system:

Improper disposal of the pretensioner system or a vehicle with non-deactivated pretensioners is dangerous. Unless all safety procedures are followed, injury could result. Have an expert repairer, we recommend an Authorised Mazda Repairer safely dispose of the pretensioner system or scrap a pretensioner system equipped vehicle.

Seat Belt Systems

NOTE

- The pretensioner system may not operate depending on the type of the collision. For details, refer to the SRS Air Bag Deployment Criteria (page 2-59).*
- Some smoke (non-toxic gas) will be released when the air bags and pretensioners deploy. This does not indicate a fire. This gas normally has no effect on occupants, however, those with sensitive skin may experience light skin irritation. If residue from the deployment of the air bags or the pretensioner system gets on the skin or in the eyes, wash it off as soon as possible.*

Child-Restraint Precautions

▼ Child-Restraint Precautions

Mazda strongly urges the use of child-restraint systems for children small enough to use them.

Mazda recommends use of a Mazda genuine child-restraint system or one that complies with the UN-R *1 44 or UN-R 129 regulation. If you would like to purchase a Mazda genuine child-restraint system, please contact an Authorised Mazda Dealer.

Check your local and state or provincial laws for specific requirements regarding the safety of children riding in your vehicle.

*1 UN-R stands for United Nations Regulation.

Whatever child-restraint system you consider, please pick the appropriate one for the age and size of the child, obey the law and follow the instructions that come with the individual child-restraint system.

A child who has outgrown child-restraint systems should sit in the rear and use seat belts.

The child-restraint system should be installed on the rear seat.

Statistics confirm that the rear seat is the best place for all children up to 12 years of age—the more so with a supplementary restraint system (air bags).

A rear-facing child-restraint system should NEVER be used in the front passenger seat with the air bag system activated. The front passenger's seat is also the least preferred seat for other child-restraint systems.

For some models, we have provided a deactivation switch that will disable front passenger air bag inflation. Do not switch off the front passenger air bag without reading the "Front Passenger Air Bag Deactivation Switch" (page 2-52).

WARNING

Use the correct size child-restraint system:
For effective protection in vehicle accidents and sudden stops, a child must be properly restrained using a seat belt or child-restraint system depending on age and size. If not, the child could be seriously injured or even killed in an accident.

Follow the manufacturer's instructions and always keep the child-restraint system buckled down:

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure any child-restraint system is properly secured in place according to the child-restraint system manufacturer's instructions. When not in use, remove it from the vehicle or fasten it with a seat belt, or latch it down to BOTH ISOFIX anchors, and attach the corresponding tether anchor.

Child Restraint

Always secure a child in a proper child-restraint system:

Holding a child in your arms while the vehicle is moving is extremely dangerous. No matter how strong the person may be, he or she cannot hold onto a child in a sudden stop or collision and it could result in serious injury or death to the child or other occupants. Even in a moderate accident, the child may be exposed to air bag forces that could result in serious injury or death to the child, or the child may be slammed into an adult, causing injury to both child and adult.

Extreme Hazard! Never use a rear-facing child-restraint system on the front passenger seat with an air bag that could deploy:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Vehicles with a front passenger air bag have the following warning label. The warning label reminds you not to put a rear-facing child-restraint system on the front passenger seat at any time.

(Except Taiwan)



(Taiwan)



依規定前排座椅禁止乘載嬰兒、幼童及兒童。

Even in a moderate collision, the child-restraint system can be hit by a deploying air bag and moved violently backward resulting in serious injury or death to the child. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position when installing a rear-facing child-restraint system on the front passenger seat.



(Taiwan, except front passenger seat, if equipped with the following label)

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable:

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.

Make sure that the front passenger air bag deactivation switch is in the OFF position. Refer to Front Passenger Air Bag Deactivation Switch (page 2-52).



Do not allow a child or anyone to lean over or against the side window of a vehicle with side and curtain air bags:

It is dangerous to allow anyone to lean over or against the side window, the area of the front passenger seat, the front and rear window pillars and the roof edge along both sides from which the side and curtain air bags deploy, even if a child-restraint system is used. The impact of inflation from a side or curtain air bag could cause serious injury or death to an out of position child. Furthermore, leaning over or against the front door could block the side and curtain air bags and eliminate the advantages of supplementary protection. With the front air bag and the additional side air bag that comes out of the front seat, the rear seat is always a better location for children. Take special care not to allow a child to lean over or against the side window, even if the child is seated in a child-restraint system.

Child Restraint

Never use one seat belt on more than one person at a time:

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way cannot spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time and always operate the vehicle with each occupant properly restrained.

Use the tether and tether anchor only for a child-restraint system:

Child-restraint system anchorages are designed to withstand only those loads imposed by correctly installed child-restraint systems. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Always remove the head restraint and install child-restraint system (except when installing a booster seat):

Installing a child-restraint system without removing the head restraint is dangerous. The child-restraint system cannot be installed correctly which may result in death or injury to the child in a collision.



CAUTION

A seat belt or child-restraint system can become very hot in a closed vehicle during warm weather. To avoid burning yourself or a child, check them before you or your child touches them.

NOTE

Your Mazda is equipped with ISOFIX anchors for attachment of ISOFIX child-restraint systems on the rear seats. When using these anchors to secure a child-restraint system, refer to "Using ISOFIX Anchor" (page 2-44).

Child-Restraint System Installation

▼ Categories of Child-Restraint Systems

NOTE

When purchasing, ask the manufacturer of the child-restraint system which type of child-restraint system is appropriate for your child and vehicle.

(Europe and countries conforming to the UN-R 44 and UN-R 129 regulation)

Child-restraint systems are classified into the following 5 groups according to the UN-R 44 regulation.

Group	Age	Weight	Size Classification/ Fixture (CRF)
0	Up to about 9 months old	Up to 10 kg (up to 22 lb)	ISO/L1
			ISO/L2
			ISO/R1
0+	Up to about 2 years old	Up to 13 kg (up to 29 lb)	ISO/R1
			ISO/R2
			ISO/R3
1	About 8 months to 4 years old	9 kg — 18 kg (20 lb — 40 lb)	ISO/R2
			ISO/R3
			ISO/F2
			ISO/F2X
			ISO/F3
2	About 3 to 7 years old	15 kg — 25 kg (33 lb — 55 lb)	—
3	About 6 to 12 years old	22 kg — 36 kg (48 lb — 79 lb)	—

(Other countries)

Please comply with the legal regulations concerning the use of child-restraint systems in your country.

▼ Child-Restraint System Types

(Europe and countries conforming to the UN-R 44 and UN-R 129 regulation)

In this owner's manual, explanation of child-restraint systems secured with seat belts is provided for the following 3 types of popular child-restraint systems: baby seat, child seat, junior seat.

NOTE

- Installation position is determined by the type of child-restraint system.
Always read the manufacturer's instructions and this owner's manual carefully.*

Child Restraint


• Due to variations in the design of child-restraint systems, vehicle seats and seat belts, all child-restraint systems may not fit all seating positions. Before purchasing a child-restraint system, it should be tested in the specific vehicle seating position (or positions) where it is intended to be used. If a previously purchased child-restraint system does not fit, you may need to purchase a different one that will.

Baby seat

Equal to Group 0 and 0+ of the UN-R 44 and UN-R 129 regulation.

(Europe)

Recommended child-restraint system:
Britax Römer BABY-SAFE PLUS and
ISOFIX BASE

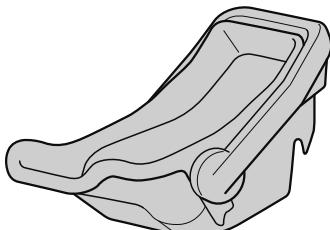

Child seat

Equal to Group 1 of the UN-R 44 and UN-R 129 regulation.

(Europe)

Recommended child-restraint system:
Britax Römer Duo Plus




Junior seat

Equal to Group 2 and 3 of the UN-R 44 and UN-R 129 regulation.

(Europe)

Recommended child-restraint system:
Britax Römer KidFix XP OEM

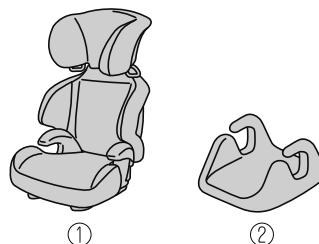

1. Full booster seat
2. Booster seat


When using a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed.

(Other countries)

Please comply with the legal regulations concerning the use of child-restraint systems in your country.

▼ Baby Seat Installation Position

A baby seat is used in the rear-facing position only.

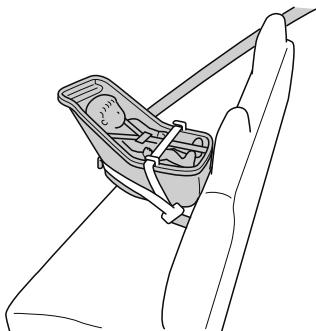

Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for baby seat installation position (page 2-38).



WARNING

Always install a baby seat in the correct seat position:

Installing a baby seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A baby seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Never use a rear-facing child-restraint system on the front passenger seat protected by an air bag:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

The child-restraint system can be hit by the deploying air bag and knocked out of position. A child in the child-restraint system could be seriously injured or killed. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position if installing a rear-facing child-restraint system on the front passenger seat is unavoidable.



▼ Child Seat Installation Position

A child seat is used in front-facing and rear-facing positions depending on the age and size of the child. When installing, follow the manufacturer's instructions in accordance with the appropriate age and size of the child as well as the directions for installing the child-restraint system. Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for child seat installation position (page 2-38).

Child Restraint

Rear-facing type

WARNING

Always install a rear-facing child seat in the correct seat position:

Installing a rear-facing child seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A rear-facing child seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Never use a rear-facing child-restraint system on the front passenger seat protected by an air bag:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

The child-restraint system can be hit by the deploying air bag and knocked out of position. A child in the child-restraint system could be seriously injured or killed. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position if installing a rear-facing child-restraint system on the front passenger seat is unavoidable.



Front-facing type

WARNING

Never install a front-facing child seat in the wrong seat position:

Installing a front-facing child seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A front-facing child seat installed in the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable:

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.

Make sure that the front passenger air bag deactivation switch is in the OFF position.

Refer to Front Passenger Air Bag Deactivation Switch (page 2-52).



▼ Junior Seat Installation Position

A junior seat is used in the front-facing position only.

We recommend the use of the junior seat with backrest to allow simple adjustment of the shoulder belt position and to give your child the best protection.



Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for junior seat installation position (page 2-38).

WARNING

Always install a junior seat in the correct seat position:

Installing a junior seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A junior seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable:

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.

Make sure that the front passenger air bag deactivation switch is in the OFF position. Refer to Front Passenger Air Bag Deactivation Switch (page 2-52).



Child-Restraint System Suitability for Various Seat Positions Table

▼ Child-Restraint System Suitability for Various Seat Positions Table

(Europe and countries conforming to the UN-R 16 regulation)

Provided information in the table shows your child-restraint system suitability for various seating position. For installation suitability of other manufacturer child-restraint system, carefully consult the manufacturer's instructions which accompany the child-restraint system.

When installing a child-restraint system, the following points must be observed:

- Always remove the head restraint before installing a child-restraint system. However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed. In addition, always use a tether strap and attach it securely. Refer to Head Restraints on page 2-17.
- When installing a child-restraint system to the front passenger seat, adjust the seat slide position as far back as possible. Adjust the seat bottom (height adjustable seat bottom) to the highest position so that the seat belt can securely fasten the child-restraint system. Refer to Adjusting the Front Passenger's Seat on page 2-13.
- When it is difficult to install a child-restraint system to the front passenger seat, or the seat belt cannot be secured to the child-restraint system, perform the following operations to adjust the seat holding the child-restraint system so that the seat belt can be secured completely to it.
 - Move the seat forward or back.
 - Move the seatback forward or back.
 - Move the seat bottom up or down.
- When installing a child-restraint system to the rear seat, adjust the front seat position so that the front seat does not contact the child-restraint system. Refer to Adjusting the Driver's Seat on page 2-5. Refer to Adjusting the Front Passenger's Seat on page 2-13.
- A child-restraint system with a support leg cannot be installed on the rear centre seat position.
- When installing a child-restraint system equipped with a tether, remove the head restraint. Refer to Head Restraints on page 2-17.
- An i-Size child-restraint system refers to a child-restraint system which has acquired i-Size category certification for the UN-R 129 regulation.

When installing a child-restraint system to the rear seat, refer to the child-restraint system manufacturer's instructions and the Using ISOFIX Anchor on page 2-44.

Except Taiwan

Seating position	Passenger		Rear (Left)	Rear (Centre)	Rear (Right)
	Airbag activated	Airbag de-activated			
Seating position suitable for universal belted (Yes/No)	Yes (UF)	Yes (U)	Yes (U)	Yes (U)	Yes (U)
i-Size seating position (Yes/No)	No	No	Yes (i-U)	No	Yes (i-U)
Largest suitable rearward facing fixture (R1)	No	No	Yes (IL)	No	Yes (IL)
Largest suitable rearward facing fixture (R2)	No	No	Yes (IL)	No	Yes (IL)
Largest suitable rearward facing fixture (R2X)	No	No	Yes (IL)	No	Yes (IL)
Largest suitable rearward facing fixture (R3)	No	No	Yes (IL)	No	Yes (IL)
Largest suitable forward facing fixture (F2)	No	No	Yes (IUF)	No	Yes (IUF)
Largest suitable forward facing fixture (F2X)	No	No	Yes (IUF)	No	Yes (IUF)
Largest suitable forward facing fixture (F3)	No	No	Yes (IUF)	No	Yes (IUF)
Largest suitable lateral facing fixture (L1)	No	No	No	No	No
Largest suitable lateral facing fixture (L2)	No	No	No	No	No
Largest suitable booster fixture (B2)	No	No	Yes (IUF)	No	Yes (IUF)
Largest suitable booster fixture (B3)	No	No	Yes (IUF)	No	Yes (IUF)

Child Restraint

Seating position	Passenger		Rear (Left)	Rear (Centre)	Rear (Right)
	Airbag activated	Airbag de-activated			
Non i-size compatible with a support leg (Yes/No)	Yes* ¹	Yes	Yes	No	Yes
Lower ISOFIX anchorages but without Top Tether (Yes/No)	No	No	No	No	No

U = Suitable for "universal" category restraints approved for use in this mass group.

UF = Suitable for forward-facing "universal" category restraints approved for use in this mass group.

IUF = Suitable for ISOFIX forward child restraints systems of universal category approved for use in the mass group.

L = Suitable for particular child restraints given on attached list. These restraints may be of the "specific vehicle", "restricted" or "semi-universal" categories.

IL = Suitable for particular ISOFIX child restraint systems (CRS) given in the attached list. These ISOFIX CRS are those of the "specific vehicle", "restricted" or "semi-universal" categories.

i-U = Suitable for i-Size "universal" Child Restraint Systems forward and rearward facing.

i-UF = Suitable for forward-facing i-Size "universal" Child Restraint Systems only.

Yes = Child-restraint system can be secured on the seat.

No = Child-restraint system cannot be secured on the seat, or there is no fixture.

X = Child-restraint system cannot be installed.

*¹ Child restraint system can only be installed in the forward-facing position.

A Mazda genuine child-restraint system can be installed. Regarding child-restraint systems which can be installed, refer to the accessories catalog.

Taiwan

ISOFIX anchor-secured child-restraint systems

Mass group	Size Class	Fixture	Seat Positions		
			Vehicle ISOFIX positions	Rear seat (centre)	Front passenger seat (outboard)
			Rear seat (out-board)		
Carycot	F	ISO/L1	X	X	X
	G	ISO/L2	X	X	X
	(1)		X	X	X
GROUP 0 Up to 10 kg (up to 22 lb)	E	ISO/R1	IL	X	X
	(1)		X	X	X
GROUP 0+ Up to 13 kg (up to 29 lb)	E	ISO/R1	IL	X	X
	D	ISO/R2	IL	X	X
	C	ISO/R3	IL	X	X
	(1)		X	X	X

Mass group	Size Class	Fixture	Seat Positions		
			Vehicle ISOFIX positions	Rear seat (centre)	Front passenger seat (outboard)
			Rear seat (out-board)		
GROUP 1 9 kg — 18 kg (20 lb — 40 lb)	D	ISO/R2	IL	X	X
	C	ISO/R3	IL	X	X
	B	ISO/F2	IUF	X	X
	B1	ISO/F2X	IUF	X	X
	A	ISO/F3	IUF	X	X
	(1)		X	X	X
GROUP 2 15 kg — 25 kg (33 lb — 55 lb)		(1)	X	X	X
GROUP 3 22 kg — 36 kg (48 lb — 79 lb)		(1)	X	X	X

(1) For the CRS which do not carry the ISO/XX size class identification (A to G), for the applicable mass group, the car manufacturer shall indicate the vehicle specific ISOFIX child-restraint system(s) recommended for each position.

Key of letters to be inserted in the above table:

IL = suitable for ISOFIX forward child-restraints systems of universal category approved for use in this mass group.

IUF = suitable for particular ISOFIX child-restraint systems (CRS).

These ISOFIX CRS are those of the “specific vehicle”, “restricted” or “semi-universal” categories.

A Mazda genuine child-restraint system can be installed. Regarding child-restraint systems which can be installed, refer to the accessories catalog.

X = ISOFIX position not suitable for ISOFIX child-restraint systems in this mass group and/or this size class.

i-Size child-restraint systems

An i-Size child-restraint system can be installed to the specified seat as follows:

	Front passenger seat	Rear seat (outboard)	Rear seat (centre)
i-Size child-restraint systems	X	X	X

Key of letters to be inserted in the above table:

X = Seating position not suitable for i-Size “universal” child-restraint systems.

Child Restraint

Seat belt-secured child-restraint systems

System group	Age group	Weight group	Child-restraint system type	Front passenger seat	Rear seat (outboard)	Rear seat (centre)
GROUP 0	Up to about 9 months old	Up to 10 kg (up to 22 lb)	Baby seat	X	U	U
GROUP 0+	Up to about 2 years old	Up to 13 kg (up to 29 lb)	Baby seat	X	U	U
GROUP 1	About 8 months to 4 years old	9 kg— 18 kg (20 lb— 40 lb)	Child seat	X	U	U
GROUP 2	About 3 to 7 years old	15 kg— 25 kg (33 lb— 55 lb)	Junior seat	X	U	U
GROUP 3	About 6 to 12 years old	22 kg— 36 kg (48 lb— 79 lb)	Junior seat	X	U	U

Key of letters to be inserted in the above table:

U = Suitable for “universal” category restraints approved for use in this mass group.

UF = Suitable for forward-facing “universal” category restraints approved for use in this mass group.

X = Seat position not suitable for children in this mass group.

(Other countries)

- Regarding child-restraint systems which can be installed to your Mazda, consult an expert repairer, we recommend an Authorised Mazda Repairer.
- A child-restraint system with a support leg cannot be installed on the rear centre seat position.
- Please comply with the legal regulations concerning the use of child-restraint systems in your country.
- For the CRS which do not carry the ISO/XX size class identification (A to G), for the applicable mass group, the child seat manufacturer shall indicate the vehicle specific ISOFIX child-restraint systems recommended for each position.

Installing Child-Restraint Systems


▼ Anchor Bracket

Anchor brackets for securing child-restraint systems are equipped in the vehicle. Locate each anchor position using the illustration.

To install a child-restraint system, remove the head restraint. Always follow the instruction manual accompanying the child-restraint system.

Anchor bracket location

Use the indicated anchor bracket locations when installing a child-restraint system equipped with a tether.

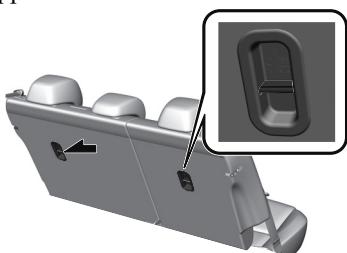


⚠ WARNING

Always attach the tether strap to the correct tether anchor position:

Attaching the tether strap to the incorrect tether anchor position is dangerous. In a collision, the tether strap could come off and loosen the child-restraint system. If the child-restraint system moves it could result in death or injury to the child.

Always remove the head restraint and install child-restraint system:

Installing a child-restraint system without removing the head restraint is dangerous. The child-restraint system cannot be installed correctly which may result in death or injury to the child in a collision.

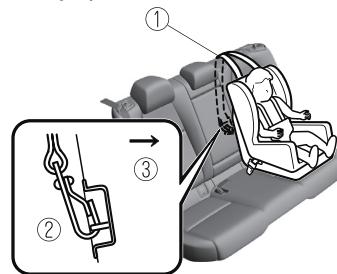

1. Tether strap
2. Anchor bracket
3. Forward

Always install the head restraint and adjust it to the appropriate position after removing the child-restraint system:

Driving with the head restraint removed is dangerous as impact to the occupant's head cannot be prevented during emergency braking or in a collision, which could result in a serious accident, injury or death.

Refer to Head Restraints on page 2-17.

▼ Using the Seat Belt

When installing a child-restraint system, follow the installation instructions included with the product.

In addition, remove the head restraint. However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed.

Child Restraint

▼ Using ISOFIX Anchor

WARNING

Follow the manufacturer's instructions for the use of the child-restraint system:

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure any child-restraint system is properly secured in place according to the manufacturer's instructions.


Make sure the child-restraint system is properly secured:

A child-restraint system that is not secured is dangerous. In a sudden stop or collision, it can become a projectile and hit someone, causing serious injury. When not in use, remove it from the vehicle, put it in the luggage compartment or at least make sure it is securely fastened to the ISOFIX anchors.

Make sure there are no seat belts or foreign objects near or around the ISOFIX anchor-secured child-restraint system:

Not following the child-restraint system manufacturer's instructions when installing the child-restraint system is dangerous. If seat belts or a foreign object prevent the child-restraint system from being securely attached to the ISOFIX anchors and the child-restraint system is installed improperly, the child-restraint system could move in a sudden stop or collision causing serious injury or death to the child or other occupants. When installing the child-restraint system, make sure there are no seat belts or foreign objects near or around the ISOFIX anchors. Always follow the child-restraint system manufacturer's instructions.

1. First, adjust the front seat to allow clearance between the child-restraint system and the front seat.
Refer to Adjusting the Driver's Seat on page 2-5.
Refer to Adjusting the Front Passenger's Seat on page 2-13.
2. Make sure the seatback is securely latched by pushing it back until it is fully locked.
3. Remove the cover of the child-restraint system's ISOFIX anchors to verify the locations of the ISOFIX anchors.

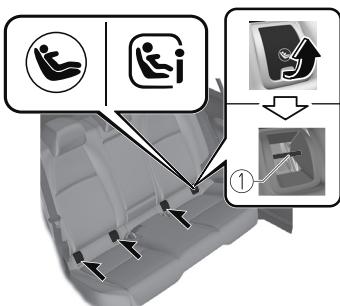

1. ISOFIX anchor

NOTE

- The ISOFIX anchors marking on the cover indicates the position of the ISOFIX anchors for the attachment of a child-restraint system.
 - Store the removed cover so that it does not get lost.
4. Remove the head restraint. However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed. Refer to Head Restraints on page 2-17.
 5. Secure the child-restraint system using the ISOFIX anchor, following the child-restraint system manufacturer's instruction.
 6. If your child-restraint system came equipped with a tether, that probably means it is very important to properly secure the tether for child safety. Please carefully follow the child-restraint system manufacturer's instructions when installing tethers (page 2-43).

⚠ WARNING


Always attach the tether strap to the correct tether anchor position:

Attaching the tether strap to the incorrect tether anchor position is dangerous. In a collision, the tether strap could come off and loosen the child-restraint system. If the child-restraint system moves it could result in death or injury to the child.

Child Restraint

Always remove the head restraint and set the tether strap (except when installing a booster seat):

Routing the tether strap on top of the head restraint is dangerous. In a collision the tether strap could slide off the head restraint and loosen the child-restraint system. The child-restraint system could move which may result in death or injury to the child.

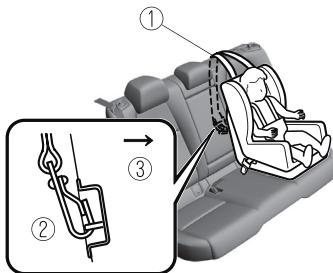

1. Tether strap
2. Anchor bracket
3. Forward

Always install the head restraint and adjust it to the appropriate position after removing the child-restraint system:

Driving with the head restraint removed is dangerous as impact to the occupant's head cannot be prevented during emergency braking or in a collision, which could result in a serious accident, injury or death.

Refer to Head Restraints on page 2-17.

Supplementary Restraint System (SRS) Precautions

▼ Supplementary Restraint System (SRS) Precautions

The front and side supplementary restraint systems (SRS) include different types of air bags. **Please verify the different types of air bags which are equipped on your vehicle by locating the “SRS AIRBAG” location indicators.** These indicators are visible in the area where the air bags are installed.

The air bags are installed in the following locations:

- The steering wheel hub (driver air bag)
- The front passenger instrument panel (front passenger air bag)
- Under the instrument panel (driver knee air bag)
- The outboard sides of the front seatbacks (side air bags)
- The front and rear window pillars, and the roof edge along both sides (curtain air bags)

Some vehicles have a sensor which detects an impending roll-over accident.

The air bag supplementary restraint systems are designed to provide supplementary protection in certain situations so seat belts are always important in the following ways:

Without seat belt usage, the air bags cannot provide adequate protection during an accident. Seat belt usage is necessary to:

- Keep the occupant from being thrown into an inflating air bag.
- Reduce the possibility of injuries during an accident that is not designed for air bag inflation, such as rear impact.
- Reduce the possibility of injuries in frontal, near frontal or side collisions or roll-over accidents that are not severe enough to activate the air bags.
- Reduce the possibility of being thrown from your vehicle.
- Reduce the possibility of injuries to lower body and legs during an accident because the air bags provide no protection to these parts of the body.
- Hold the driver in a position which allows better control of the vehicle.

A child who is too small to use a seat belt must be properly secured using a child-restraint system (page 2-29).

Carefully consider which child-restraint system is necessary for your child and follow the installation directions in this Owner's Manual as well as the child-restraint system manufacturer's instructions.

⚠ WARNING

Seat belts must be worn in air bag equipped vehicles:

Depending only on the air bags for protection during an accident is dangerous. Alone, air bags may not prevent serious injuries. The appropriate air bags can be expected to inflate only in the first accident, such as frontal, near frontal or side collisions or roll-over accidents that are at least moderate. Vehicle occupants should always wear seat belts.

Children should not ride in the front passenger seat:

Placing a child, 12 years or under, in the front seat is dangerous. The child could be hit by a deploying air bag and be seriously injured or even killed. A sleeping child is more likely to lean against the door and be hit by the side air bag in moderate collision to the front-passenger side of the vehicle. Whenever possible, always secure a child 12 years and under on the rear seats with an appropriate child-restraint system for the child's age and size.

Extreme Hazard! Never use a rear-facing child-restraint system on the front passenger seat with an air bag that could deploy:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Even in a moderate collision, the child-restraint system can be hit by a deploying air bag and moved violently backward resulting in serious injury or death to the child. If your vehicle is equipped with a front passenger air bag deactivation switch, always set the switch to the OFF position when installing a rear-facing child-restraint system on the front passenger seat.



Do not sit too close to the driver and front passenger air bags:

Sitting too close to the driver and front passenger air bag modules or placing hands or feet on them is extremely dangerous. The driver and front passenger air bags inflate with great force and speed. Serious injuries could occur if someone is too close. The driver should always hold onto only the rim of the steering wheel. The front seat passenger should keep both feet on the floor. Front seat occupants should adjust their seats as far back as possible and always sit upright against the seatbacks with seat belts worn properly.

Sit in the centre of the seat and wear seat belts properly:

Sitting too close to the side air bag modules or placing hands on them, or sleeping up against the door or hanging out the windows is extremely dangerous. The side and curtain air bags inflate with great force and speed directly expanding along the door on the side the car is hit. Serious injury could occur if someone is sitting too close to the door or leaning against a window, or if rear seat occupants grab the sides of the front seatbacks. Give the side and curtain air bags room to work by sitting in the centre of the seat while the vehicle is moving with seat belts worn properly.

Do not attach objects on or around the area where driver and front passenger air bags deploy:

Attaching an object to the driver and front passenger air bag modules or placing something in front of them is dangerous. In an accident, an object could interfere with air bag inflation and injure the occupants.

Do not attach objects on or around the area where a side air bag deploys:

Attaching objects to the front seat in such a way as to cover the outboard side of the seat in any way is dangerous. In an accident the object could interfere with the side air bag, which inflates from the outboard side of the front seats, impeding the added protection of the side air bag system or redirecting the air bag in a way that is dangerous. Furthermore, the bag could be cut open releasing the gas.

Do not hang net bags, map pouches or backpacks with side straps on the front seats. Never use seat covers on the front seats. Always keep the side air bag modules in your front seats free to deploy in the event of a side collision.

Do not attach objects on or around the area where a curtain air bag deploys:

Attaching objects to the areas where the curtain air bag activates such as on the windscreen glass, side door glass, front and rear window pillars and along the roof edge and assist grips is dangerous. In an accident the object could interfere with the curtain air bag, which inflates from the front and rear window pillars and along the roof edge, impeding the added protection of the curtain air bag system or redirecting the air bag in a way that is dangerous. Furthermore, the bag could be cut open releasing the gas.

Do not place hangers or any other objects on the assist grips. When hanging clothes, hang them on the coat hook directly. Always keep the curtain air bag modules free to deploy in the event of a side collision or roll-over accident.

Do not touch the components of the supplementary restraint system after the air bags have inflated:

Touching the components of the supplementary restraint system after the air bags have inflated is dangerous. Immediately after inflation, they are very hot. You could get burned.

SRS Air Bags

Never install any front-end equipment to your vehicle:

Installation of front-end equipment, such as frontal protection bar (kangaroo bar, bull bar, push bar, or other similar devices), snowplow, or winches, is dangerous. The air bag crash sensor system could be affected. This could cause air bags to inflate unexpectedly, or it could prevent the air bags from inflating during an accident. Front occupants could be seriously injured.

Do not modify the suspension:

Modifying the vehicle suspension is dangerous. If the vehicle's height or the suspension is modified, the vehicle will be unable to accurately detect a collision or roll-over accident resulting in incorrect or unexpected air bag deployment and the possibility of serious injuries.

Do not modify a front door or leave any damage unrepairs. Always have an expert repairer, we recommend an Authorised Mazda Repairer inspect a damaged front door:

Modifying a front door or leaving any damage unrepairs is dangerous. Each front door has a side crash sensor as a component of the supplementary restraint system. If holes are drilled in a front door, a door speaker is left removed, or a damaged door is left unrepairs, the sensor could be adversely affected causing it to not detect the pressure of an impact correctly during a side collision. If a sensor does not detect a side impact correctly, the side and curtain air bags and the seat belt pretensioners may not operate normally which could result in serious injury to occupants.

Do not modify the supplementary restraint system:

Modifying the components or wiring of the supplementary restraint system is dangerous. You could accidentally activate it or make it inoperable. Do not make any modifications to the supplementary restraint system. This includes installing trim, badges, or anything else over the air bag modules. It also includes installing extra electrical equipment on or near system components or wiring. An expert repairer, we recommend an Authorised Mazda Repairer can provide the special care needed in the removal and installation of front seats. It is important to protect the air bag wiring and connections to assure that the bags do not accidentally deploy, and that the driver seat slide position sensor is not damaged and the seats retain an undamaged air bag connection.

Do not place luggage or other objects under the front seats:

Placing luggage or other objects under the front seats is dangerous. The components essential to the supplementary restraint system could be damaged, and in the event of a side collision, the appropriate air bags may not deploy, which could result in death or serious injury. To prevent damage to the components essential to the supplementary restraint system, do not place luggage or other objects under the front seats.

Do not operate a vehicle with damaged air bag/seat belt pretensioner system components:

Expendited or damaged air bag/seat belt pretensioner system components must be replaced after any collision which caused them to deploy or damage them. Only a trained expert repairer, we recommend an Authorised Mazda Repairer can fully evaluate these systems to see that they will work in any subsequent accident. Driving with an expended or damaged air bag or pretensioner unit will not afford you the necessary protection in the event of any subsequent accident which could result in serious injury or death.

Do not remove interior air bag parts:

Removing any components such as the front seats, front instrument panel, the steering wheel or parts on the front and rear window pillars and along the roof edge, containing air bag parts or sensors is dangerous. These parts contain essential air bag components. The air bag could accidentally activate and cause serious injuries. Always have an Authorised Mazda Repairer remove these parts.

Properly dispose of the air bag system:
Improper disposal of an air bag or a vehicle with live air bags in it can be extremely dangerous. Unless all safety procedures are followed, injury could result. Have an expert repairer, we recommend an Authorised Mazda Repairer safely dispose of the air bag system or scrap an air bag equipped vehicle.

NOTE

- When an air bag deploys, a loud inflation noise can be heard and some smoke will be released. Neither is likely to cause injury, however, the texture of the air bags may cause light skin injuries on body parts not covered with clothing through friction.
- Should you sell your Mazda, we urge you to tell the new owner of its air bag systems and that familiarization with all instructions about them, from the Owner's Manual, is important.
- This highly-visible label warns against the use of a rear-facing child-restraint system on the front passenger seat.
(Except Taiwan)



(Taiwan)



依規定前排座椅禁止乘載嬰兒、幼童及兒童。

(Taiwan, except front passenger seat, if equipped with the following label)

The highly-visible labels warn against the use of a rear-facing child-restraint system on the seat protected by an air bag.




Front Passenger Air Bag Deactivation Switch*

▼ Front Passenger Air Bag Deactivation Switch

WARNING

Do not deactivate the front passenger air bag unnecessarily:

Unnecessary deactivation of the front passenger air bag is dangerous. If turned off unnecessarily, the front passenger will not receive the added protection of the air bag. Serious injuries or even death could occur. With the exception of installing a child-restraint system on the front passenger seat, do not turn the air bag deactivation switch to the OFF position.

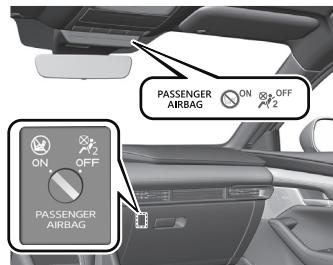

The front passenger air bag deactivation switch should be used to deactivate the front passenger front and side air bags and also the front passenger seat belt pretensioner system if installing a child-restraint system on the front passenger seat.

When the ignition is switched ON, both front passenger air bag deactivation indicator lights illuminate regardless of the front passenger air bag deactivation switch position. The indicator light turns off after a specified period of time, then turns on/off depending on the conditions as indicated in the following table.

Front Passenger Air Bag Deactivation Switch	Front Passenger Seat/Side Air Bag, Front Passenger Seat Belt Pretensioner Operation Condition	Front Passenger Air Bag Deactivation Indicator Light
OFF position 	Deactivate	 OFF
ON position 	Ready	 ON Turns off after a short period of time.

NOTE

Have the front passenger air bag deactivation switch inspected by an expert repairer, we recommend an Authorised Mazda Repairer if any of these conditions occur:

- The front passenger air bag deactivation indicator light does not illuminate for a specified period of time when the ignition is switched ON.
- The front passenger air bag deactivation indicator light does not turn off after a short period of time when the ignition is switched ON (front passenger air bag deactivation switch is in ON position).

▼ Switch Positions

Before driving, always confirm that the front passenger air bag deactivation switch is in the appropriate position using the auxiliary key according to your requirements.

WARNING

Do not leave the key in the front passenger air bag deactivation switch:

Unintentional deactivation of the front passenger air bag is dangerous. In an accident, the front passenger will not be properly protected. Serious injuries or even death could occur. To avoid unintentional deactivation, always use the auxiliary key stored in the transmitter body currently being used to operate the front passenger air bag deactivation switch. After deactivating the air bag, put the auxiliary key back into the transmitter body. That way you will not leave the key in the front passenger air bag deactivation switch.

NOTE

After operating the front passenger air bag deactivation switch, put the auxiliary key back into the transmitter body.

OFF

Front passenger front air bag, side air bag and front passenger seat belt pretensioners do not operate.

SRS Air Bags

Switching to OFF position

1. Insert the key into the front passenger air bag deactivation switch and turn the key clockwise until the key points to OFF.
2. Remove the key.
3. Make sure the air bag deactivation indicator light remains illuminated when the ignition is switched ON.

The front passenger front and side air bags and also the seat belt pretensioner system will remain deactivated until the front passenger air bag deactivation switch is turned to the ON position.

ON


Front passenger front air bag, side air bag and front passenger seat belt pretensioners operate. Activate the system only when a child-restraint system is not installed on the front passenger seat.

Switching to ON position

1. Insert the key into the front passenger air bag deactivation switch and turn the key anticlockwise until the key points to ON.
2. Remove the key.
3. Make sure the air bag deactivation indicator light remains illuminated when the ignition is switched ON. The air bag deactivation indicator light turns off after a short period of time.

Supplementary Restraint System Components

▼ Supplementary Restraint System Components

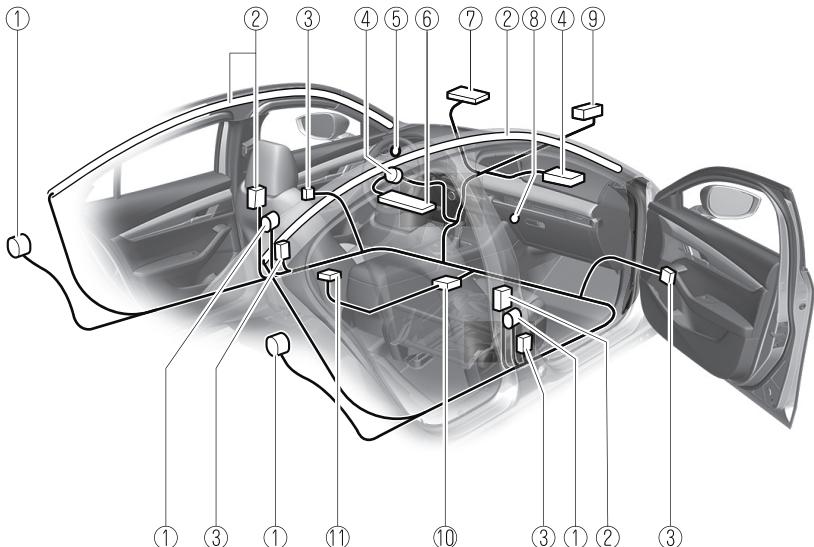

1. Seat belt pretensioners (page 2-26)
2. Side and curtain inflators and air bags
3. Side crash sensors
4. Driver/Front passenger inflators and air bags
5. Air bag/seat belt pretensioner system warning indication/warning light (page 7-63)
6. Driver knee inflator and air bag
7. Front passenger air bag deactivation indicator light* (page 2-52)
8. Front passenger air bag deactivation switch* (page 2-52)
9. Front air bag sensor
10. Roll-over sensor*, crash sensors, and diagnostic module (SAS unit)
11. Driver seat slide position sensor* (page 2-56)

How the SRS Air Bags Work

▼ How the SRS Air Bags Work

Your Mazda is equipped with the following types of SRS air bags. SRS air bags are designed to work together with the seat belts to help to reduce injuries during an accident.

The SRS air bags are designed to provide further protection for passengers in addition to the seat belt functions. Be sure to wear seat belts properly.

▼ Seat Belt Pretensioners

The pretensioners operate differently depending on what types of air bags are equipped. For more details about seat belt pretensioner operation, refer to the SRS Air Bag Deployment Criteria (page 2-59).

Front

The front seat belt pretensioners are designed to deploy in moderate or severe frontal, near frontal collisions. In addition, the pretensioners operate when a side collision or a roll-over accident (with roll-over sensor) is detected.

Rear Outboard*

The rear outboard seat belt pretensioners are designed to deploy in moderate or severe frontal, near frontal collisions.

▼ Driver Air Bag

The driver's air bag is mounted in the steering wheel.

When air bag crash sensors detect a frontal impact of greater than moderate force, the driver's air bag inflates quickly helping to reduce injury mainly to the driver's head or chest caused by directly hitting the steering wheel.

For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-59).

(With Front Passenger Air Bag Deactivation Switch)

The inflation of the driver's dual-stage air bag is controlled in two energy stages depending on the driver's seat position. The driver's seat slide position sensor is located under the driver's seat. The sensor determines whether the driver's seat is forward of or behind a reference position and sends the seat position to the diagnostic module (SAS unit). The SAS unit is designed to control the deployment of the driver's air bag depending on how close the driver's seat is to the steering wheel.


During an impact of moderate severity, the driver's air bag deploys with lesser energy, whereas during more severe impacts and when the driver's seat is behind the reference position, it deploys with more energy.



▼ Front Passenger Air Bag

The front passenger air bag is mounted in the front passenger instrument panel. The inflation mechanism for the front passenger air bag is the same as the driver's air bag.

For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-59).

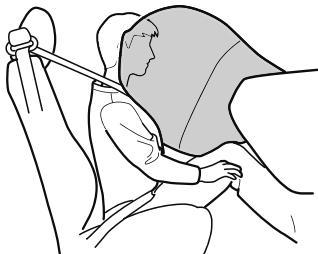

▼ Driver Knee Air Bag

The knee air bag is equipped under the instrument panel.

If the air bag crash sensors receive a frontal impact of greater than moderate force, the knee air bag deploys immediately to reduce impact to the driver's legs.


For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-59).



▼ Side Air Bags

The side air bags are mounted in the outboard sides of the front seatbacks. When the air bag crash sensors detect a side impact of greater than moderate force, the system inflates the side air bag only on the side in which the vehicle was hit. The side air bag inflates quickly to reduce injury to the driver or front passenger's chest caused by directly hitting interior parts such as a door or window.

For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-59).

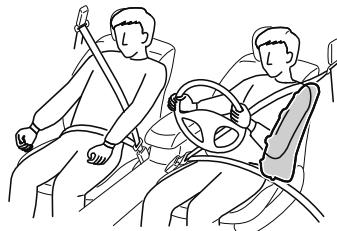

▼ Curtain Air Bags

The curtain air bags are mounted in the front and rear window pillars, and the roof edge along both sides.


When the air bag crash sensors detect a side impact of greater than moderate force, the curtain air bag inflates quickly and helps to reduce injury mainly to the driver and front and rear outboard passengers' heads caused by directly hitting interior parts such as a door or window.

For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-59).

SRS Air Bags

In a side impact:

Greater than moderate impact to one side of the vehicle will cause the curtain air bag on that side only to inflate.

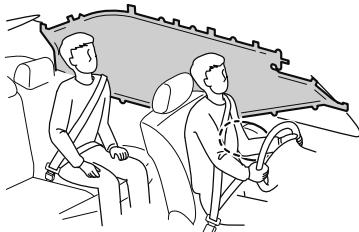


Only one side curtain air bag will deploy on the side of the vehicle that receives the force of an impact.

(With roll-over sensor)

In a roll-over:

In response to a vehicle roll-over, both curtain air bags inflate.

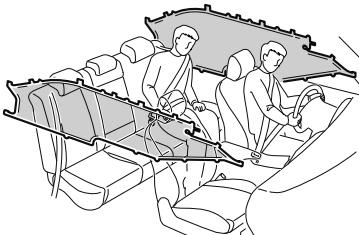

Both curtain air bags will deploy after the roll-over accident is detected.

▼ Warning Light/Beep

A system malfunction or operation conditions are indicated by a warning. Refer to Air Bag/Seat Belt Pretensioner System Warning Indication/Warning Light on page 7-63.






Refer to Air Bag/Seat Belt Pretensioner System Warning Beep on page 7-74.

SRS Air Bag Deployment Criteria

▼ SRS Air Bag Deployment Criteria

This chart indicates the applicable SRS equipment that will deploy depending on the type of collision.

(The illustrations are the representative cases of collisions.)

     SRS equipment	Types of collision			
	A severe frontal/near frontal collision	A severe side collision	A roll-over/near roll-over* ²	A rear collision
	 			
	 			
				

SRS Air Bags

SRS equipment	Types of collision			
	A severe frontal/near frontal collision	A severe side collision	A roll-over/near roll-over ^{*2}	A rear collision
Front seat belt pretensioner	X ^{*1}	X ^{*1}	X ^{*1}	No air bag and seat belt pretensioner will be activated in a rear collision.
Rear seat belt pretensioner*	X	X	X	
Driver air bag	X	—	—	
Front passenger air bag	X ^{*1}	—	—	
Knee Airbag	X	—	—	
Side air bag	—	X ^{*1} (impact side only)	—	
Curtain air bag	—	X (impact side only)	X (both sides)	

X: The SRS air bag equipment deploys in a collision.

—:The SRS air bag equipment does not deploy in a collision.

***1 (With Front Passenger Air Bag Deactivation Switch)**

The front passenger front and side air bags and seat belt pretensioner are designed to deploy depending on the status of the front passenger air bag deactivation switch.

***2 (With roll-over sensor)**

In a roll-over accident, the seat belt pretensioners and the curtain air bags deploy.

NOTE

In a frontal offset collision, the equipped air bags and pretensioners may all deploy depending on the direction, angle, and rate of impact.

Limitations to SRS Air Bag


▼ Limitations to SRS Air Bag

In severe collisions such as those described previously in "SRS Air Bag Deployment Criteria", the applicable SRS air bag equipment will deploy. However, in some accidents, the equipment may not deploy depending on the type of collision and its severity.

Limitations to front/near front collision detection:

The following illustrations are examples of front/near front collisions that may not be detected as severe enough to deploy the SRS air bag equipment.


Impacts involving trees or poles

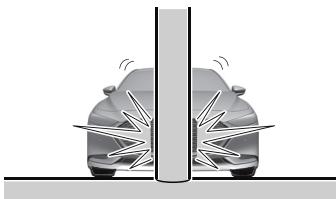

Frontal offset impact to the vehicle



Rear-ending or running under a truck's tail gate

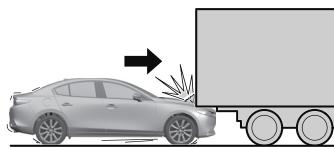

Limitations to side collision detection:


The following illustrations are examples of side collisions that may not be detected as severe enough to deploy the SRS air bag equipment.

Essential Safety Equipment
SRS Air Bags


Side impacts involving trees or poles



Side impacts with two-wheeled vehicles

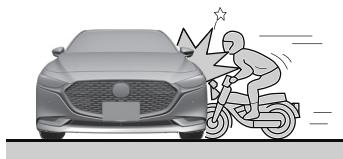

Roll-over (Without roll-over sensor)

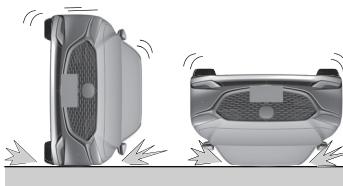

Limitations to roll-over detection (With roll-over sensor):

The following illustration is an example of an accident that may not be detected as a roll-over accident. Therefore, the front seat belt pretensioners and curtain air bags may not deploy.

Pitch end over end



Constant Monitoring

▼ Constant Monitoring

The following components of the air bag systems are monitored by a diagnostic system:

- Front air bag sensors
- Crash sensors, and diagnostic module (SAS unit)
- Side crash sensors
- Air bag modules
- Seat belt pretensioners
- Air bag/Seat belt pretensioner system warning indication/warning light
- Related wiring
- Driver seat slide position sensor*

(With Front Passenger Air Bag Deactivation Switch)

- Front passenger air bag deactivation switch
- Front passenger air bag deactivation indicator light

The diagnostic module continuously monitors the system's readiness. This begins when the ignition is switched ON and continues while the vehicle is being driven.

MEMO

3

Before Driving

Use of various features, including keys, doors, mirrors and windows.

Keys.....	3-2
Keys.....	3-2
Keyless Entry System.....	3-4
 Advanced Keyless Entry System.....	3-10
Advanced Keyless Entry System*	3-10
Operational Range.....	3-11
 Doors and Locks.....	3-12
Door Locks.....	3-12
Liftgate/Boot Lid.....	3-21
 Fuel and Emission.....	3-26
Fuel and Engine Exhaust	
Precautions.....	3-26
Fuel-Filler Flap and Cap.....	3-31
 Mirrors.....	3-34
Mirrors.....	3-34
 Windows.....	3-39
Power Windows.....	3-39
Sunroof*	3-42

 Security System.....	3-45
Modification and Add-On	
Equipment.....	3-45
Immobilizer System.....	3-45
Theft-Deterrent System*	3-47
 Driving Tips.....	3-51
Running-In.....	3-51
Saving Fuel and Protection of the Environment.....	3-51
Hazardous Driving.....	3-52
Floor Mat.....	3-53
Rocking the Vehicle.....	3-54
Winter Driving.....	3-54
Driving In Flooded Area.....	3-57
Turbocharger Information (SKYACTIV-D 1.8).....	3-57
 Towing.....	3-58
Towing Caravans and Trailers (Europe/Russia/Turkey/Israel/South Africa).....	3-58

Keys

▼ Keys

WARNING

Do not leave the key in your vehicle with children and keep them in a place where your children will not find or play with them:

Leaving children in a vehicle with the key is dangerous. This could result in someone being badly injured or even killed. Children may find these keys to be an interesting toy to play with and could cause the power windows or other controls to operate, or even make the vehicle move.

CAUTION

➤ Because the key (transmitter) uses low-intensity radio waves, it may not function correctly under the following conditions:

- The key (transmitter) is carried with communication devices such as cellular phones.
- The key (transmitter) contacts or is covered by a metal object.
- The key (transmitter) is near electronic devices such as personal computers.
- Non-Mazda genuine electronic equipment is installed in the vehicle.
- There is equipment which discharges radio waves near the vehicle.

➤ The key (transmitter) may consume battery power excessively if it receives high-intensity radio waves. Do not place the key (transmitter) near electronic devices such as televisions or personal computers.


➤ To avoid damage to the key (transmitter), DO NOT:

- Drop the key (transmitter).
- Get the key (transmitter) wet.
- Disassemble the key (transmitter).
- Expose the key (transmitter) to high temperatures on places such as the instrument panel or bonnet, under direct sunlight.
- Expose the key (transmitter) to any kind of magnetic field.
- Place heavy objects on the key (transmitter).
- Put the key (transmitter) in an ultrasonic cleaner.
- Put any magnetized objects close to the key (transmitter).

NOTE

The driver must carry the key (transmitter) to ensure the system functions properly.

Transmitter

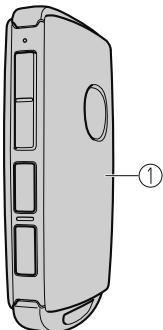


1. Transmitter (page 3-5)

Auxiliary key


There is a removable auxiliary key inside the transmitter.

Removing the auxiliary key

1. Remove the lower cover while pressing the knob in the direction of the arrow.

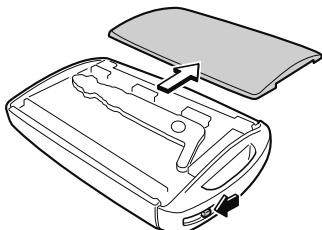


2. Remove the auxiliary key.

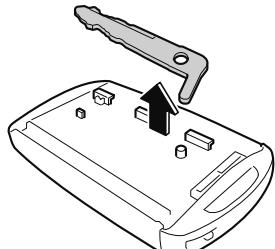


Installing the auxiliary key

1. Install the auxiliary key as the illustration.

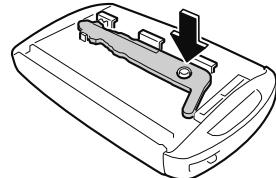

2. Insert the tabs of the lower cover into the slots of the transmitter and install the lower cover.

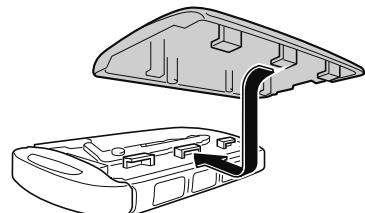

Key code number plate

A code number is stamped on the plate attached to the key set; detach this plate and store it in a safe place (not in the vehicle) for use if you need to make a replacement key (auxiliary key).

Also write down the code number and keep it in a separate safe and convenient place, but not in the vehicle.

If your key (auxiliary key) is lost, consult your Authorised Mazda Repairer and have your code number ready.



1. Key code number plate

Keyless Entry System

▼ Keyless Entry System

This system uses the key buttons to remotely lock and unlock the doors, liftgate/boot lid^{*1}, and fuel-filler flap, and opens the boot lid.

The system can start the engine without having to take the key out of your purse or pocket.

Operating the theft-deterrent system is also possible on theft-deterrent system-equipped vehicles.

System malfunctions or warnings are indicated by the following warning lights or beeps.

Check the displayed message for more information and, if necessary, have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer, according to the indication.

- KEY Warning Indication/Warning Light (Red)
Refer to KEY Warning Indication/Warning Light (Red) on page 7-63.
- Ignition Not Switched Off (STOP) Warning Beep
Refer to Ignition Not Switched Off (STOP) Warning Beep on page 7-75.
- Key Removed from Vehicle Warning Beep
Refer to Key Removed from Vehicle Warning Beep on page 7-75.

If you have a problem with the key, consult an expert repairer, we recommend an Authorised Mazda Repairer.

If your key is lost or stolen, consult an Authorised Mazda Repairer as soon as possible for a replacement and to make the lost or stolen key inoperative.

CAUTION


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

- The keyless entry system operation may vary due to local conditions.
- The keyless entry system is fully operational when the ignition is switched off. The system does not operate if the ignition is switched to any position other than off.
- If the key does not operate when pressing a button or the operational range becomes too small, the battery may be weak. To install a new battery, refer to Key Battery Replacement (page 6-41).
- Battery life is about 1 year. Replace the battery with a new one if the messages are displayed in the instrument cluster. Replacing the battery about once a year is recommended because the KEY warning indication may not display depending on the rate of battery depletion.
- Additional keys can be obtained at an Authorised Mazda Repairer. Up to 6 keys can be used with the keyless functions per vehicle. Bring all keys to an Authorised Mazda Repairer when additional keys are required.

*1 For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.

▼ Transmitter

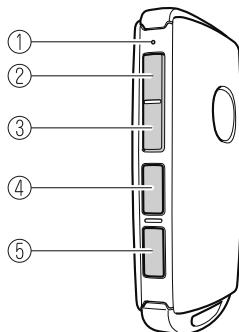

1. Operation indicator light
2. Lock button (LOCK)
3. Unlock button (UNLOCK)
4. Boot button (Saloon) (BOOT or HOLD or UNLOCK)
HOLD or UNLOCK
5. Intrusion sensor cancel button (OFF)*
OFF

NOTE

• The headlights turn on/off by operating the transmitter. Refer to Leaving Home Light on page 4-64.

• **(With theft-deterrent system)**

The hazard warning lights flash when the theft-deterrent system is armed or turned off.

Refer to Theft-Deterrent System on page 3-47.

• **(With the advanced keyless function (European models))**

The setting can be changed so that a beep sound is heard for confirmation when the doors, liftgate/boot lid*1, and fuel-filler flap are locked/unlocked using the key.

(With the advanced keyless function (Except European models))

A beep sound can be heard for confirmation when the doors, liftgate/boot lid*1, and fuel-filler flap are locked/unlocked using the key. If you prefer, the beep sound can be turned off. The volume of the beep sound can also be changed.

Refer to the Settings section in the *MZD Connect Owner's Manual*.

The operation indicator light flashes when the buttons are pressed.

Lock button

To lock the doors, liftgate/boot lid*1, and fuel-filler flap, press the lock button and the hazard warning lights will flash once.

(With the advanced keyless function (Except European models))

A beep sound will be heard once.



Keys

NOTE

- If the lock button is pressed with any door or liftgate/boot lid open, any closed door can be locked. Close any open door and liftgate/boot lid to lock.
- Make sure all the doors, liftgate/boot lid^{*1}, and fuel-filler flap are locked after pressing the button.
- **(With double locking system)**
Pressing the lock button twice within 3 seconds will activate the double locking system.
Refer to Double Locking System on page 3-14.
- **(With theft-deterrent system)**
If the lock button is pressed with all the doors and liftgate closed, the hazard warning lights will flash and the theft-deterrent system is armed.

Unlock button

Type A

To unlock the driver's door and the fuel-filler flap, press the unlock button and the hazard warning lights will flash twice.

(With the advanced keyless function (Except European models))

A beep sound will be heard twice.

To unlock the other doors and liftgate/boot lid^{*1}, press the unlock button again within 5 seconds.

Type B

To unlock the doors, liftgate/boot lid^{*1}, and fuel-filler flap, press the unlock button and the hazard warning lights will flash twice.

(With the advanced keyless function (Except European models))

A beep sound will be heard twice.



NOTE

- **(With 2-step unlocking function)**

- The system can be set to unlock all the doors, liftgate/boot lid^{*1}, and fuel-filler flap when pressing the unlock button once.
- The system can be set to unlock the driver's door and the fuel-filler flap by pressing the unlock button on the transmitter, and to unlock the other doors and liftgate/boot lid^{*1} by pressing the button again within 5 seconds.

Refer to the Settings section in the MZD Connect Owner's Manual.

- **(Auto re-lock function)**

After unlocking with the key, all the doors, liftgate/boot lid^{*1}, and fuel-filler flap will automatically lock if any of the following operations are not performed within about 30 seconds. If your vehicle has a theft-deterrent system, the hazard warning lights will flash for confirmation.

The time required for the doors to lock automatically can be changed.

Refer to the Settings section in the MZD Connect Owner's Manual.

- A door or the liftgate/boot lid is opened.
- The ignition is switched to any position other than off.

· (With theft-deterrent system)

When the doors are unlocked by pressing the unlock button on the transmitter while the theft-deterrent system is turned off, the hazard warning lights will flash twice to indicate that the system is turned off.

Boot button (Saloon)

To open the boot lid, press and hold the boot button until the boot lid opens.

Type A



HOLD

Type B



Intrusion sensor cancel button*

To cancel the intrusion sensor (part of the theft-deterrent system), press the intrusion sensor cancel button within 20 seconds after pressing the lock button and the hazard warning lights will flash 3 times. Refer to Theft-Deterrent System on page 3-47.



OFF

Power saving function

By turning on the transmitter power saving function, the advanced keyless entry^{*2} and push button start system functions turn off and the battery power consumption of the transmitter is restricted.

The remote control function is operational by operating the transmitter switch even while the power saving function is turned on. However, the operation indicator light of the transmitter does not turn on/flash.

Turning on the power saving function

After you have turned on the power saving function according to the following procedure, the hazard warning lights and sound operate^{*2} one time.

1. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light.
2. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5 seconds).
3. Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash.

Turning off the power saving function

After you have turned off the power saving function according to the following procedure, the hazard warning lights and sound operate^{*2} one time.

1. Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash.

2. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light.
3. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5 seconds).

*1 For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.
 *2 With the advanced keyless function

▼ Operational Range


The system operates only when the driver is in the vehicle or within operational range while the key is being carried.

Starting the Engine

NOTE


- Starting the engine may be possible even if the key is outside of the vehicle and extremely close to a door and window, however, always start the engine from the driver's seat.
If the vehicle is started and the key is not in the vehicle, the vehicle will not restart after it is shut off and the ignition is switched to off.
- The luggage compartment is out of the assured operational range, however, if the key (transmitter) is operable the engine will start.

With the advanced keyless function

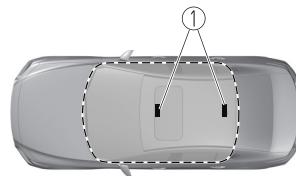

1. Interior aerial
2. Operational range

Without the advanced keyless function

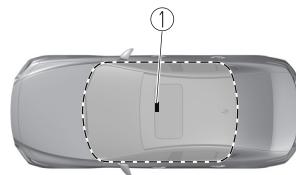

1. Interior aerial
2. Operational range

NOTE

The engine may not start if the key is placed in the following areas:

- Around the instrument panel
- In the storage compartments such as the glove compartment or the centre console
- On the rear parcel shelf (saloon)

▼ Key Suspend Function

If a key is left in the vehicle, the functions of the key left in the vehicle are temporarily suspended to prevent theft of the vehicle.

To restore the functions, press the unlock button on the functions-suspended key in the vehicle.

Advanced Keyless Entry System

Advanced Keyless Entry System*

▼ Advanced Keyless Entry System

WARNING

Radio waves from the key may affect medical devices such as pacemakers:

Before using the key near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the key will affect the device.

The advanced keyless function allows you to lock/unlock the door, liftgate/boot lid*¹, and fuel-filler flap, or open the liftgate/boot lid while carrying the key.

System malfunctions or warnings are indicated by the following warning beeps.

- Touch Sensor Inoperable Warning Beep
Refer to Touch Sensor Inoperable Warning Beep (With the advanced keyless function) on page 7-75.
- Key Left-in-luggage Compartment/Boot Warning Beep
Refer to Key Left-in-luggage Compartment/Boot Warning Beep (With the advanced keyless function) on page 7-76.
- Key Left-in-vehicle Warning Beep
Refer to Key Left-in-vehicle Warning Beep (With the advanced keyless function) on page 7-76.

NOTE

The advanced keyless entry system functions can be deactivated to prevent any possible adverse effect on a user wearing a pacemaker or other medical device. If the system is deactivated, you will be unable to start the engine by carrying the key. Consult an expert repairer, we recommend an Authorised Mazda Repairer for details. If the advanced keyless entry system has been deactivated, you can start the engine by following the procedure indicated when the key battery goes dead.

Refer to Engine Start Function When Key Battery is Dead on page 4-9.

*¹ For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.

Advanced Keyless Entry System

Operational Range


▼ Operational Range

The system operates only when the driver is in the vehicle or within operational range while the key is being carried.

NOTE

When the battery power is low, or in places where there are high-intensity radio waves or noise, the operational range may become narrower or the system may not operate. For determining battery replacement, Refer to Keyless Entry System on page 3-4.

▼ Locking, Unlocking the Doors and the Liftgate/Boot Lid

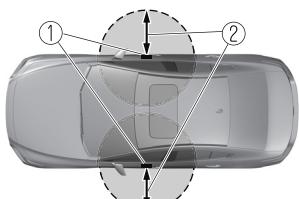

1. Exterior aerial
2. 80 cm (31 in)
3. Operational range

NOTE

- The system may not operate if you are too close to the windows or door handles, or liftgate/boot lid.
- If the key is left in the following areas and you leave the vehicle, the doors may be locked depending on the radio wave conditions even if the key is left in the vehicle.
 - Around the instrument panel
 - In the storage compartments such as the glove compartment or the centre console
 - On the rear parcel shelf (saloon)
 - Next to a communication device such as a mobile phone

▼ Opening the Liftgate/Boot Lid



1. Exterior aerial
2. 80 cm (31 in)
3. Operational range

Doors and Locks

Door Locks

▼ Door Locks

WARNING

Always take all children and pets with you or leave a responsible person with them:

Leaving a child or a pet unattended in a parked vehicle is dangerous. In hot weather, temperatures inside a vehicle can become high enough to cause brain damage or even death.

Do not leave the key in your vehicle with children and keep them in a place where your children will not find or play with them:

Leaving children in a vehicle with the key is dangerous. This could result in someone being badly injured or even killed.

Always close all the windows and sunroof, lock the doors, fuel-filler flap, and liftgate/boot lid and take the key with you when leaving your vehicle unattended:

Leaving your vehicle unlocked is dangerous as children could lock themselves in a hot vehicle, which could result in death. Also, a vehicle left unlocked becomes an easy target for thieves and intruders.

After closing the doors and the liftgate/boot lid, always verify that they are securely closed:

Doors and the liftgate/boot lid not securely closed are dangerous, if the vehicle is driven with a door and the liftgate/boot lid not securely closed, the door and the liftgate/boot lid could open unexpectedly resulting in an accident.

Always confirm the safety around the vehicle before opening a door and the liftgate/boot lid:

Suddenly opening a door and the liftgate/boot lid is dangerous. A passing vehicle or a pedestrian could be hit and cause an accident.

CAUTION

➤ Always confirm the conditions around the vehicle before opening/closing the doors and the liftgate/boot lid and use caution during strong winds or when parked on an incline. Not being aware of the conditions around the vehicle is dangerous because fingers could get caught in the door and the liftgate/boot lid or a passing pedestrian could be hit, resulting in an unexpected accident or injury.

NOTE

- Always stop the engine and lock the doors. In addition, to prevent theft of valuables, do not leave them inside the cabin.
- If the key is left in the following areas and you leave the vehicle, the doors may be locked depending on the radio wave conditions even if the key is left in the vehicle.
 - Around the instrument panel
 - In the storage compartments such as the glove compartment or the centre console
 - On the rear parcel shelf (saloon)
 - Next to a communication device such as a mobile phone

Doors and Locks

When the ignition is switched to ACC or ON, the vehicle lock-out prevention feature prevents you from locking yourself out of the vehicle.

*All doors, fuel-filler flap, and liftgate/boot lid^{*1} will automatically unlock if they are locked using the power door locks with any door or the liftgate open. The vehicle lock-out prevention feature does not operate while the ignition is switched off.*

*When all doors, fuel-filler flap, and liftgate/boot lid^{*1} are locked using the power door lock with any door or the liftgate/boot lid open, the closed doors, fuel-filler flap, and liftgate/boot lid^{*1} are locked. After that, when all doors and the liftgate/boot lid are closed, all doors and the liftgate/boot lid are locked. However, if the key is inside the vehicle, all doors, fuel-filler flap, and liftgate/boot lid^{*1} are automatically unlocked.*

(With the advanced keyless function)

The beep sound is heard for about 10 seconds to notify the driver that the key has been left in the vehicle.

(Without the advanced keyless function)

The horn sound is heard twice to notify the driver that the key has been left in the vehicle.

• (Door unlock (control) system with collision detection)

*This system automatically unlocks the doors, fuel-filler flap, and liftgate/boot lid^{*1} in the event the vehicle is involved in an accident to allow passengers to get out of the vehicle immediately and prevent being trapped inside. While the ignition is switched ON and in the event the vehicle receives an impact strong enough to inflate the air bags, all the doors, fuel-filler flap, and liftgate/boot lid^{*1} are automatically unlocked after about 6 seconds have elapsed from the time of the accident.*

*The doors, fuel-filler flap, and liftgate/boot lid^{*1} may not unlock depending on how an impact is applied, the force of the impact, and other conditions of the accident.*

*If door-related systems or the battery is malfunctioning, the doors and the fuel-filler flap, and liftgate/boot lid^{*1} may not unlock depending on your vehicle type.*

*1 For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.


Doors and Locks

▼ Unlocking with Auxiliary Key

Only the driver's door can be unlocked using the auxiliary key.

Refer to Keys on page 3-2.

Insert the auxiliary key while the driver's door handle is pulled and turn the key to the unlock side. Turn the auxiliary key back to its original position before removing it.

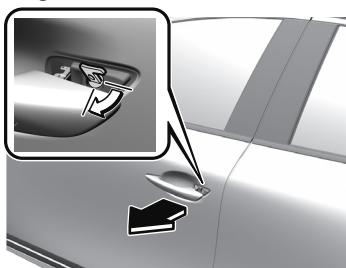

NOTE

If you attempt to open the driver's door using an unauthorised auxiliary key, the key cylinder will spin around but the door will not unlock.

▼ Double Locking System*

The double locking system is designed to prevent someone who has broken into your vehicle from opening the door from the inside.

If you have any problems with the double locking system, consult an expert repairer, we recommend an Authorised Mazda Repairer.

! WARNING

Never activate the double locking system with passengers, especially children, still inside the vehicle:

Activating the system with passengers, especially children, still inside the vehicle is dangerous. The passengers cannot open the doors from inside. They would be trapped and subjected to extreme temperatures. This could result in serious injuries or even death.

How to Activate the system

1. Switch the ignition off and take the key with you.
2. Close all the doors and liftgate/boot lid.
3. Press the lock button on the transmitter twice within 3 seconds. The hazard warning lights operate 1 time each time the button is pressed.

NOTE

- (With the advanced keyless function)*

You can also activate the system by touching the sensing area of the door lock touch sensor twice within 3 seconds. The hazard warning lights operate 1 time each time the sensing area is touched.

4. The indicator light illuminates for about 3 seconds to indicate that the system has been activated.



NOTE

The system cannot be activated when any door or the liftgate is open.

How to Deactivate the System

Unlock the driver's door or start the engine.

 
NOTE

If the power supply is interrupted (fuse blows or the battery is disconnected), the system can only be deactivated by unlocking a door with the auxiliary key.

▼ **Locking, Unlocking with Touch Sensor, Door Handle (With the advanced keyless function)**

By touching the sensing area of the touch sensor, various locking/unlocking operations can be done without taking the key out of a bag or pocket.



There are two types of touch sensors used for locking and unlocking, and each sensor is built into the outer door handle on the driver and front passenger's doors.



1. Sensing area of door lock touch sensor (Depression on outer side of door handle)
2. Sensing area of door release touch sensor (Inner side of door handle)


NOTE

- When locking/unlocking with the transmitter carried, securely touch the sensing area of the touch sensor as follows.

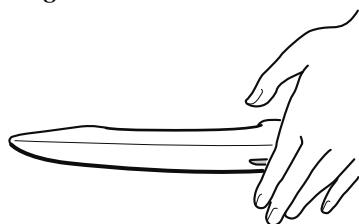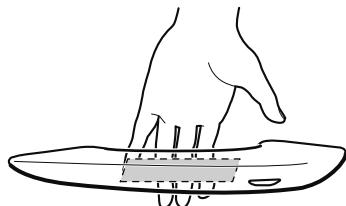Locking***Unlocking***

• The system may not operate normally under the following conditions.

- You touch the sensing area of the door lock touch sensor and the sensing area of the door release touch sensor at the same time.

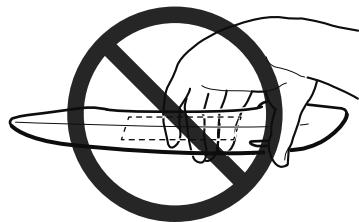

- You touch the sensing area of the touch sensor while wearing gloves.
- Foreign matter such as snow or dirt is stuck on the sensing area of the touch sensor.
- You pull the door handle just after touching the sensing area of the touch sensor.
- The system may operate if the outer side door handle of a front door is splashed with water by a car wash or rain while the transmitter is in the operation range.

Doors and Locks

- If the system does not operate even though you touch the sensing area of the touch sensor correctly, release the touch sensor once, and then touch the sensing area of the touch sensor again after waiting about 3 seconds.

Locking

When locking, touch the sensing area of the door lock touch sensor with all of the following conditions met.

- The ignition is switched OFF.
- All the doors are closed.
- You are carrying the transmitter.

The following locations are locked by touching the sensing area of the door lock touch sensor.

- All doors
- Fuel-filler flap
- Liftgate/boot lid^{*1}

When locking, the hazard warning lights operate one time.

(Except European models)

A beep sound operate one time.

Unlocking

When unlocking, touch the sensing area of the door release touch sensor with all of the following conditions met.

- The ignition is switched OFF.
- The driver's door is locked.
- Three seconds or longer have passed since the doors were locked.
- You are carrying the transmitter.

Type A

(Unlocking from the driver's door)

The following locations are unlocked by touching the sensing area of the door release touch sensor of the driver's door.

- Driver's door
- Fuel-filler flap

NOTE

- The location to be unlocked can be changed.

Refer to the *Settings section in the MZD Connect Owner's Manual*.

When unlocking, the hazard warning lights operate two times.

(Except European models)

A beep sound operate two times.

(Unlocking from the front passenger's door)

The following locations are unlocked by touching the sensing area of the door release touch sensor of the front passenger's door.

- All doors
- Fuel-filler flap
- Liftgate/boot lid^{*1}

When unlocking, the hazard warning lights operate two times.

(Except European models)

A beep sound operate two times.

Type B

The following locations are unlocked by touching the sensing area of the door release touch sensor.

- All doors
- Fuel-filler flap

- Liftgate/boot lid^{*1}

NOTE

- **(With 2-step unlocking function)**

The location to be unlocked can be changed.

Refer to the *Settings section in the MZD Connect Owner's Manual*.

When unlocking, the hazard warning lights operate two times.

(Except European models)

A beep sound operate two times.

NOTE

- Confirm that all the doors and liftgate/boot lid are securely locked.

For the liftgate/boot lid, move it without pressing the electric liftgate/boot lid opener to verify that the liftgate/boot lid has not been left ajar.

- **(European models)**

The setting can be changed so that a beep sound is heard for confirmation when the doors, fuel-filler flap, and liftgate/boot lid^{*1} are locked/unlocked using a touch sensor.

(Except European models)

A beep sound is heard for confirmation when the doors, fuel-filler flap, and liftgate/boot lid^{*1} are locked/unlocked using the touch sensor. If you prefer, the beep sound can be turned off.

The volume of the beep sound can also be changed. Refer to the *Settings section in the MZD Connect Owner's Manual*.

- **(With theft-deterrent system)**

The hazard warning lights flash when the theft-deterrent system is armed or turned off.

Refer to *Theft-Deterrent System on page 3-47*.

- The setting can be changed so that the doors, fuel-filler flap, and liftgate/boot lid^{*1} are locked automatically without touching the sensing area of the touch sensor.

Refer to the *Settings section in the MZD Connect Owner's Manual*.

(Walk-away auto lock function)

A beep sound is heard when all doors and the liftgate/boot lid are closed while the transmitter is being carried. All the doors, fuel-filler flap, and liftgate/boot lid^{*1} are locked automatically when the transmitter is out of the operational range. Also, the hazard warning lights flash once. (Even if the driver is in the operational range, all the doors, fuel-filler flap, and liftgate/boot lid^{*1} are locked automatically after about 30 seconds.) If you are out of the operational range before the doors and the liftgate/boot lid are completely closed or another transmitter is left in the vehicle, the walk-away auto lock function will not work. Always make sure that all doors and the liftgate/boot lid are closed and locked before leaving the vehicle. The walk-away auto lock function does not close the power windows.

- **(Auto re-lock function)**

After unlocking with the touch sensor, all the doors, fuel-filler flap, and liftgate/boot lid^{*1} will automatically lock if any of the following operations are not performed within about 30 seconds.

- Opening a door or the liftgate/boot lid.
- Switching the ignition to any position other than off.

Doors and Locks

If your vehicle has a theft-deterrent system, the hazard warning lights will flash for confirmation.

The time required for the doors to lock automatically can be changed.

Refer to the Settings section in the MZD Connect Owner's Manual.

*1 For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.

▼ Locking, Unlocking with Transmitter

The following locations can be locked/unlocked by operating the keyless entry system transmitter. Refer to Keyless Entry System (page 3-4).

- All doors
- Fuel-filler flap
- Liftgate/Boot lid*1


*1 For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.

▼ Locking, Unlocking with Door-Lock Switch

The following locations are locked/unlocked by pressing the door-lock switch.

- All doors
- Fuel-filler flap
- Liftgate/Boot lid*1

Driver's door

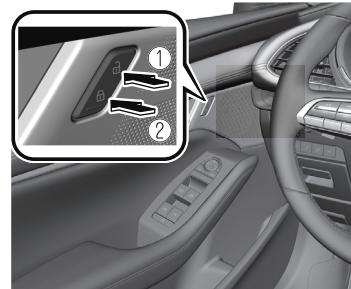

1. Unlock
2. Lock

Liftgate (With the advanced keyless function)

This switch is used only for locking.



Locking the doors from the outside using the door-lock switch

Using the driver's door-lock switch

Press the lock side of the door-lock switch with the door open, and close the door.

Using the door-lock switch of the liftgate

Press the door-lock switch with the liftgate open, and close the liftgate.

NOTE

When any of the following conditions is met, locking from the outside using the door-lock switch is not possible.

(If doors, fuel-filler flap, and liftgate are not locked)

- The ignition is switched to a position other than OFF.
- Doors are closed last with the transmitter left in the vehicle.

(If only liftgate is not locked)

- Liftgate is closed last with the transmitter left in the vehicle.

- *1 For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.

▼ Auto Lock/Unlock Function

WARNING

Do not pull the inner handle on a front door:

Pulling the inner handle on a front door while the vehicle is moving is dangerous. Passengers can fall out of the vehicle if the door opens accidentally, which could result in death or serious injury.

- When the vehicle speed exceeds 20 km/h (12 mph), all the doors, fuel-filler flap, and liftgate/boot lid^{*1} lock automatically.
- When the ignition is switched off, all the doors, fuel-filler flap, and liftgate/boot lid^{*1} unlock automatically.

The auto lock/unlock function settings can be changed.

Refer to the Settings section in the MZD Connect Owner's Manual.

- *1 For vehicles with the boot lid release button, the boot lid cannot be locked/unlocked using this method.

Doors and Locks


▼ Locking, Unlocking with Door-Lock Knob

Operation from inside

To lock any door from the inside, press the door-lock knob.

To unlock, pull it outward.

This does not operate the other door locks.


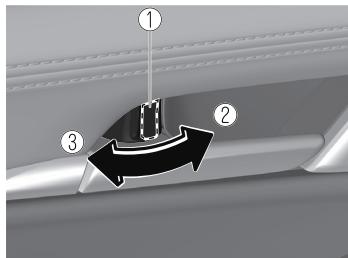


1. Unlocked: Red indicator
2. Lock
3. Unlock

Operation from outside

To lock any door using its door-lock knob from the outside, press the door-lock knob to the lock position and close the door (holding the door handle in the open position is not required).

This does not operate the other door locks.

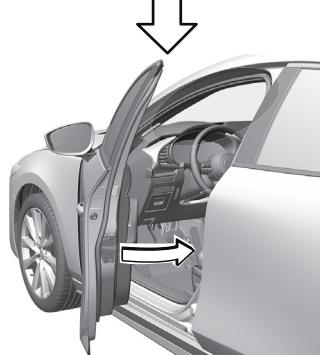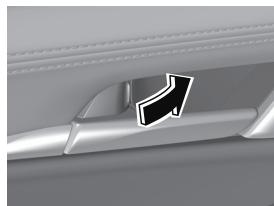


NOTE

When locking the door this way:

- Be careful not to leave the key inside the vehicle.
- The doors cannot be locked using the driver's door lock knob if any door is open when the ignition is switched to ACC or ON.

▼ Rear Door Child Safety Locks

Rear doors that have been locked using the child safety lock switched to the lock side cannot be opened from inside the vehicle. For child safety, switch the child safety lock on both rear doors to the lock side. When opening a rear door with the child safety lock switched to the lock side, pull the outer door handle with the lock knob inside the vehicle switched to the unlock side.

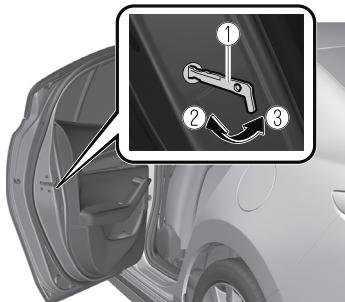

1. Auxiliary key (page 3-2)
2. Lock
3. Unlock

Liftgate/Boot Lid

▼ Liftgate/Boot Lid

⚠ WARNING

Never allow a person to ride in the luggage compartment/boot:

Allowing a person to ride in the luggage compartment/boot is dangerous. The person in the luggage compartment/boot could be seriously injured or killed during sudden braking or a collision.

Do not drive with the liftgate/boot lid open:

Exhaust gas in the cabin of a vehicle is dangerous. An open liftgate/boot lid in a moving vehicle will cause exhaust gas to be drawn into the cabin. This gas contains CO (carbon monoxide), which is colourless, odourless, and highly poisonous, and it can cause loss of consciousness and death. Moreover, an open liftgate/boot lid could cause occupants to fall out in an accident.

Do not stack or leave loaded luggage unsecured in the luggage compartment:


Otherwise, the luggage may move or collapse, resulting in injury or an accident. In addition, do not load luggage higher than the seatbacks. It may affect the side or rear field of view.

⚠ CAUTION

➤ *Before opening the liftgate/boot lid, remove any snow and ice accumulation on it. Otherwise, the liftgate/boot lid could close under the weight of the snow and ice resulting in injury.*

Doors and Locks

- Be careful when opening/closing the liftgate/boot lid during strong winds. If a strong gust blows against the liftgate/boot lid, it could close suddenly resulting in injury.
- Fully open the liftgate/boot lid and make sure that it stays open. If the liftgate/boot lid is only opened partially, it could slam shut by vibration or wind gusts resulting in injury.
- When loading or unloading luggage in the luggage compartment/boot, turn off the engine. Otherwise, you could get burned by the heat of the exhaust gas.
- Be careful not to apply excessive force to the damper stay on the liftgate such as by putting your hand on the stay. Otherwise, the damper stay may bend and affect the liftgate operation.

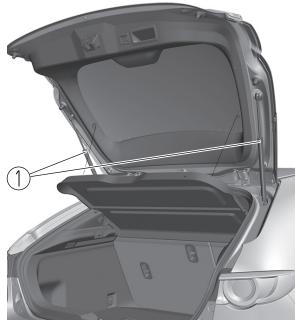

1. Damper stay


- Do not modify or replace the liftgate damper stay. Consult an expert repairer, we recommend an Authorised Mazda Repairer if a liftgate damper stay is deformed or damaged for reasons such as a collision or if there is some other problem.

▼ Opening and Closing the Liftgate/Boot Lid

Opening the liftgate (Hatchback)

Using the electric liftgate opener

Unlock the doors and liftgate, then press the electric liftgate opener on the liftgate and raise it when the latch releases.

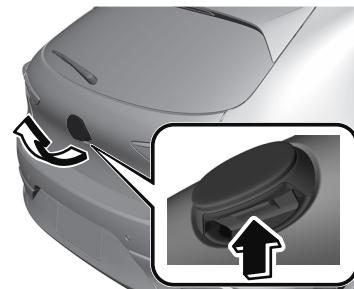

NOTE

(With the advanced keyless function)

- A locked liftgate can also be opened while the key is being carried.
- When opening the liftgate with the doors and the liftgate locked, it may require a few seconds for the liftgate latch to release after the electric liftgate opener is pressed.
- The liftgate can be closed when the doors are locked with the key left in the vehicle. However, to prevent locking the key in the vehicle, the liftgate can be opened by pressing the electric liftgate opener. If the liftgate cannot be opened despite doing this procedure, first push the liftgate completely closed, then press the electric liftgate opener to fully open the liftgate.

- When the liftgate latch is released by pressing the electric liftgate opener, the liftgate raises slightly. If the liftgate is not operated for a certain period of time, the liftgate cannot be raised.*

To open

Press the electric liftgate opener again.

To close


To close the liftgate from its slightly raised position, open it first by pressing the electric liftgate opener, then close it after waiting at least 1 second.

- If the liftgate is not fully closed, the driver is notified by a warning indicated in the instrument cluster.
- If the vehicle battery is dead or there is a malfunction in the electrical system and the liftgate cannot be unlocked, the liftgate can be opened by performing the emergency procedure.


Refer to When Liftgate/Boot Lid Cannot be Opened on page 7-81.

Opening the boot lid (Saloon)**Using the boot lid release button***

Push the boot lid release button.

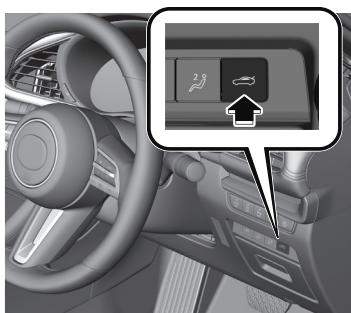**Using the electric boot lid opener***

Unlock the doors and boot lid, then press the electric boot lid opener on the boot lid and raise it when the latch releases.*¹

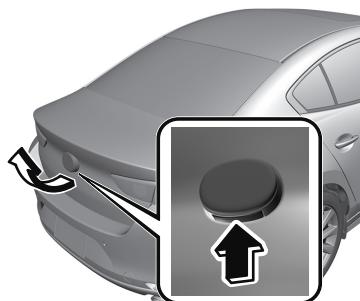**NOTE**

(With the advanced keyless function)

- A locked boot lid can also be opened while the key is being carried.
- When opening the boot lid with the doors locked, it may require a few seconds for the boot lid latch to release after the electric boot lid opener is pressed.
- The boot lid can be closed when the doors are locked with the key left in the vehicle. However, to prevent locking the key in the vehicle, the boot lid can be opened by pressing the electric boot lid opener. If the boot lid cannot be opened despite doing this procedure, press the electric boot lid opener to fully open the boot lid after pushing the boot lid completely closed.
- If the vehicle battery is dead or there is a malfunction in the electrical system and the boot lid cannot be unlocked, the boot lid can be opened by performing the emergency procedure.

Doors and Locks

Refer to When Liftgate/Boot Lid Cannot be Opened on page 7-81.

Closing the liftgate/boot lid

Lower the liftgate/boot lid slowly using the liftgate/boot lid grip recess, then push the liftgate/boot lid closed using both hands.

Do not slam it. Pull up on the liftgate/boot lid to make sure it is secure.

(Hatchback)



(Saloon)



NOTE

Confirm that the liftgate/boot lid is securely closed.

The liftgate/boot lid, move it without pressing the electric liftgate/boot lid opener to verify that the liftgate/boot lid has not been left ajar.

*1 For vehicles with the boot lid release button, the boot lid cannot be opened using this method.

▼ Luggage Compartment

Luggage compartment cover (Hatchback)



Do not place anything on top of the cover:

Placing luggage or other cargo on top of the luggage compartment cover is dangerous. During sudden braking or a collision, the cargo could become a projectile that could hit and injure someone. The vehicle has a light weight luggage compartment cover to keep the contents of your luggage area out of sight; it will not retain heavy objects that are not tied down in an accident such as a rollover. Tie down all heavy objects, whether luggage or cargo, using the tie down hooks.

Make sure luggage and cargo are secured before driving:

Not securing cargo while driving is dangerous as it could move or be crushed during sudden braking or a collision and cause injury.



➤ *Make sure the luggage compartment cover is firmly secured. If it is not firmly secured, it could unexpectedly disengage resulting in injury.*


The luggage compartment can be accessed by opening the liftgate when the straps are attached to the sides of the liftgate.



Removing the luggage compartment cover

This cover can be removed for more room.

1. Remove the straps from the hooks.
2. Press the luggage compartment cover upward from near the pins and remove the luggage compartment cover from the pins.

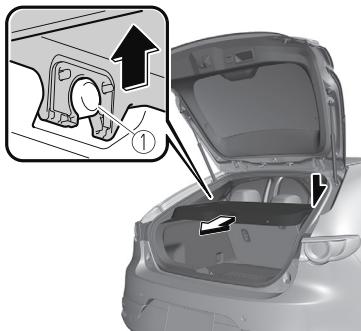

1. Pin
3. Lift the front end of the luggage compartment cover and remove it.

Fuel and Emission

Fuel and Engine Exhaust Precautions

▼ Fuel Requirements (SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5, SKYACTIV-X 2.0)

Vehicles with catalytic converters or oxygen sensors must use ONLY UNLEADED FUEL, which will reduce exhaust emissions and keep spark plug fouling to a minimum.

To achieve maximum engine performance, use the specified fuel.

Fuel	Research Octane Number	Country
Premium unleaded fuel (Conforming to EN 228 and within E10) ^{*1} 	95 or above	Albania, Algeria, Andorra, Antigua, Armenia, Aruba, Austria, Azerbaijan, Barbados, Belarus, Belgium, Bermuda, Bolivia, Bosnia and Herzegovina, Botswana, Brunei, Bulgaria, Canary Islands, Croatia, Cyprus, Czech, Denmark, Estonia, F. Guiana, Faeroe, Finland, France, Georgia, Germany, Greece, Grenada, Guadeloupe, Guatemala, Honduras, Hong Kong, Hungary, Iceland, Iran, Ireland, Israel, Italy, Jamaica, Kazakhstan, Latvia, Lebanon, Lesoto, Libya, Liechtenstein, Lithuania, Luxembourg, Macau, Macedonia, Madagascar, Malaysia, Malta, Martinique, Mauritius, Moldova, Monaco, Mongolia, Montenegro, Morocco, Namibia, New Caledonia, Nicaragua, Norway, Poland, Portugal, Reunion, Romania, Russia, San Marino, Serbia, Seychelles, Singapore, Slovakia, Slovenia, South Africa, Spain, ST. Lucia, St. Martin, ST. Vincent, Surinam, Swaziland, Sweden, Switzerland, Tahiti, Taiwan, The Netherlands, Tunisia, Turkey, UAE, UK, Ukraine, Uruguay, Vanuatu, Vatican
Premium unleaded fuel (within E85) 	95 or above	Thailand

Fuel	Research Octane Number	Country
Regular unleaded fuel	92 or above	Egypt, Myanmar
	90 or above	Angola, B. Virgin, Bahrain, Burundi, Cambodia, Cameroon, Chile, Colombia, Commonwealth of Dominica, Costa Rica, Curacao, Dominican Republic (LHD), Ecuador, El Salvador, Fiji, Gabon, Ghana, Haiti, Indonesia, Iraq, Ivory Coast, Jordan, Kenya, Kuwait, Laos, Marshall Islands, Mozambique, Nepal, Nigeria, Oman, Panama, Papua New Guinea, Peru, Qatar, Saudi Arabia, Sri Lanka, Syria, Tanzania, The Philippines, Trinidad and Tobago, Ustt*2, Zimbabwe

*1 Europe

*2 Republic of Palau & Federated States of Micronesia

Fuel with a lower rating will negatively affect the emission control system performance and could also cause engine knocking and serious engine damage.

⚠ CAUTION

- **USE ONLY UNLEADED FUEL.**
Leaded fuel is harmful to the catalytic converter and oxygen sensors and will lead to deterioration of the emission control system and or failures.
- *The use of E10 fuel with 10 % ethanol in Europe is safe for your vehicle. Damage to your vehicle may occur when ethanol exceeds this recommendation.*
- *Never add fuel system additives, otherwise the emission control system could be damaged. Consult an expert repairer, we recommend an Authorised Mazda Repairer for details.*

NOTE

(Premium unleaded fuel (within E85))

To maintain good engine startability and performance, the following points must be observed.

- *Refuelling using the same-type fuel is recommended.*
- *Add 16 L (4.2 US gal, 3.5 Imp gal) or more of fuel when refuelling.*
- *Drive the vehicle 10 km (6.2 mile) or more just after refuelling to allow the vehicle's engine control system to learn the ethanol concentration accurately.*

Fuel and Emission

▼ Deposit Cleaner

To get the best performance out of our newest-technology SKYACTIV petrol engines, cleaning of deposits adhering to the fuel related system, such as fuel injectors, may be required by using a Mazda genuine deposit cleaner in the specified countries. Refer to SCHEDULED MAINTENANCE for the details.

Refer to Scheduled Maintenance (Europe) on page 6-3.

Refer to Scheduled Maintenance (Except Europe) on page 6-7.

CAUTION

➤ According to the inspection result of scheduled maintenance, Mazda genuine deposit cleaner is to be used. Neglected deposits in the fuel system may cause malfunction indicator light coming on to indicate an engine malfunction, and if the vehicle continues to be driven under this condition, it could result in problems occurring such as idling failure and poor acceleration.

➤ The Mazda genuine deposit cleaner is not a guarantee of engine performance no matter the quality of the fuel used. When a problem occurs even though the specified fuel is used and the Mazda genuine deposit cleaner is used according to the instructions, consult an Authorised Mazda Dealer.

➤ If a deposit cleaner other than the Mazda genuine product is used, it could result in damage to the fuel system or the engine internally; therefore use only the Mazda genuine product. Mazda genuine deposit cleaner: K002 W0 001

➤ If cleaning required according to the inspection result of scheduled maintenance is not done with the Mazda genuine deposit cleaner, repair cost for engine malfunctions caused by deposits are borne by the customer.

How to use the cleaner

With the fuel tank full, infuse 1 bottle of Mazda genuine deposit cleaner directly into the fuel tank.

NOTE

- Infusing the deposit cleaner when the fuel tank is full provides the concentration of cleaner within the range effective for removing the deposits and the best cleaning results can be obtained by the full tank of fuel with the infused deposit cleaner contacting the deposits for a long period of time until the full tank of fuel is nearly used up.

▼ Fuel Requirements (SKYACTIV-D 1.8)

The vehicle will operate efficiently on diesel fuel with specification EN590 or the equivalent.



CAUTION

➤ Never use fuel other than specification EN590 or the equivalent for your vehicle. Use of petrol or paraffin in diesel engines will result in engine damage.

- Never add fuel system additives. Otherwise, the emission control system could be damaged. Consult an expert repairer, we recommend an Authorised Mazda Repairer for details.

NOTE

When refuelling, always add at least 10 L (2.6 US gal, 2.2 Imp gal) of fuel.

▼ **Emission Control System
(SKYACTIV-G 1.5, SKYACTIV-G
2.0, SKYACTIV-G 2.5,
SKYACTIV-X 2.0)**

This vehicle is equipped with an emission control system (the catalytic converter is part of this system) that enables the vehicle to comply with existing exhaust emissions requirements.

**WARNING****Never park over or near anything****flammable:**

Parking over or near anything flammable, such as dry grass, is dangerous. Even with the engine turned off, the exhaust system remains very hot after normal use and could ignite anything flammable. A resulting fire could cause serious injury or death.

**CAUTION**

Ignoring the following precautions could cause lead to accumulate on the catalyst inside the converter or cause the converter to get very hot. Either condition will damage the converter and cause poor performance.

- USE ONLY UNLEADED FUEL.
- Do not drive your Mazda with any sign of engine malfunction.
- Do not coast with the ignition switched off.
- Do not descend steep grades in gear with the ignition switched off.
- Do not operate the engine at high idle for more than 2 minutes.
- Do not tamper with the emission control system. All inspections and adjustments must be made by a qualified technician.
- Do not push-start or pull-start this vehicle.

Fuel and Emission

▼ Emission Control System (SKYACTIV-D 1.8)

This vehicle is equipped with an emission control system (the catalytic converter is part of this system) that enables the vehicle to comply with existing exhaust emissions requirements.



Never park over or near anything flammable:

Parking over or near anything flammable, such as dry grass, is dangerous. Even with the engine turned off, the exhaust system remains very hot after normal use and could ignite anything flammable. A resulting fire could cause serious injury or death.



Ignoring the following precautions could cause lead to accumulate on the catalyst inside the converter or cause the converter to get very hot. Either condition will damage the converter and cause poor performance.

- Do not drive your Mazda with any sign of engine malfunction.
- Do not coast with the ignition switched off.
- Do not descend steep grades in gear with the ignition switched off.
- Do not operate the engine at high idle for more than 2 minutes.
- Do not tamper with the emission control system. All inspections and adjustments must be made by a qualified technician.

- Do not push-start or pull-start this vehicle.

▼ Engine Exhaust (Carbon monoxide)



Do not drive your vehicle if you smell exhaust gas inside the vehicle:

Engine exhaust gas is dangerous. This gas contains carbon monoxide (CO), which is colourless, odourless, and poisonous. When inhaled, it can cause loss of consciousness and death. If you smell exhaust gas inside the vehicle, keep all windows fully open and contact an expert repairer, we recommend an Authorised Mazda Repairer immediately.

Do not run the engine when inside an enclosed area:

Running the engine inside an enclosed area, such as a garage, is dangerous. Exhaust gas, which contains poisonous carbon monoxide, could easily enter the cabin. Loss of consciousness or even death could occur.

Open the windows or adjust the heating or cooling system to draw fresh air when idling the engine:

Exhaust gas is dangerous. When the vehicle is stopped with the windows closed and the engine running for a long time even in an open area, exhaust gas, which contains poisonous carbon monoxide, could enter the cabin. Loss of consciousness or even death could occur.

Clear snow from underneath and around your vehicle, particularly the tail pipe, before starting the engine:

Running the engine when a vehicle is stopped in deep snow is dangerous. The exhaust pipe could be blocked by the snow, allowing exhaust gas to enter the cabin. Because exhaust gas contains poisonous carbon monoxide, it could cause loss of consciousness or even death to occupants in the cabin.

Fuel-Filler Flap and Cap

▼ Fuel-Filler Flap and Cap



When removing the fuel-filler cap, loosen the cap slightly and wait for any hissing to stop, then remove it:

Fuel spray is dangerous. Fuel can burn skin and eyes and cause illness if ingested. Fuel spray is released when there is pressure in the fuel tank and the fuel-filler cap is removed too quickly.

Before refuelling, stop the engine, and always keep sparks and flames away from the filler neck:

Fuel vapour is dangerous. It could be ignited by sparks or flames causing serious burns and injuries.

Additionally, use of the incorrect fuel-filler cap or not using a fuel-filler cap may result in a fuel leak, which could result in serious burns or death in an accident.

Do not continue refuelling after the fuel pump nozzle shuts off automatically:

Continuing to add fuel after the fuel pump nozzle has shut off automatically is dangerous because overfilling the fuel tank may cause fuel overflow or leakage. Fuel overflow and leakage could damage the vehicle and if the fuel ignites it could cause a fire and explosion resulting in serious injury or death.

Fuel and Emission

! CAUTION

- Always use only a designated Mazda fuel-filler cap or an approved equivalent, available at an expert repairer, we recommend an Authorised Mazda Repairer. The wrong cap can result in a serious malfunction of the fuel and emission control systems.
- When using an automatic car wash or a high water pressure car wash, lock the driver's door. Otherwise, the fuel-filler flap may open unexpectedly and could be damaged.

▼ Refuelling

Before refuelling, close all the doors, windows, and liftgate/boot lid, and switch the ignition OFF.

1. Using the following, unlock the driver's door.
 - Transmitter (page 3-18)
 - Touch sensor (page 3-15)
 - Door-lock switch (page 3-18)
 - Auto lock/unlock function (page 3-19)


NOTE

- When the driver's door is locked/unlocked, the fuel flap is also locked/unlocked at the same time.
- The time until the fuel flap is locked after locking the driver's door can be changed.
Refer to the Settings section in the MZD Connect Owner's Manual.
- However, if you change the time until the fuel flap is locked, locking of the fuel flap using the following functions is not applicable.

- Auto lock/unlock function (page 3-19)


- Auto re-lock function (page 3-5, 3-15)

2. Press the location shown in the illustration and open the fuel flap.

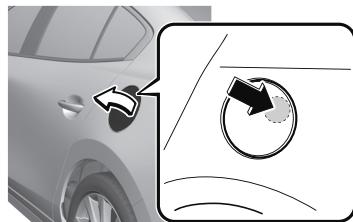


3. To remove the fuel-filler cap, turn it anticlockwise.
4. Attach the removed cap to the inner side of the fuel-filler flap.

Saloon

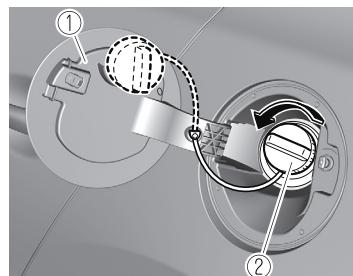


1. Fuel-filler flap
2. Fuel-filler cap

Hatchback

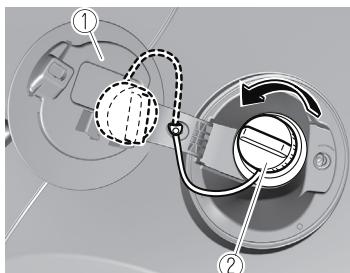


1. Fuel-filler flap
2. Fuel-filler cap
5. Insert the refuelling nozzle all the way and begin refuelling. Pull out the refuelling nozzle after the refuelling stops automatically.
6. To close the fuel-filler cap, turn it clockwise until a click is heard.
7. To close, press the fuel-filler flap until a click sound is heard.

Saloon

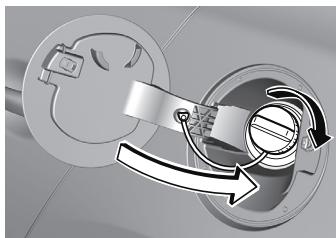

Hatchback

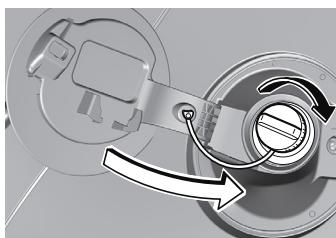

8. Make sure to lock all the doors when leaving the vehicle.

NOTE

Lock the doors after closing the fuel-filler flap.

If the fuel-filler flap is closed after locking the doors, the fuel-filler flap cannot be locked.

Mirrors

▼ Mirrors

Before driving, adjust the inside and outside mirrors.

▼ Outside Mirrors

WARNING


Be sure to look over your shoulder before changing lanes:

Changing lanes without taking into account the actual distance of the vehicle in the convex mirror is dangerous. You could have a serious accident. What you see in the convex mirror is closer than it appears.

NOTE

(Driver's Side Wide Angle Mirror*)

- The wide angle mirror has 2 curvatures on its surface separated by a region line into outer and inner regions. The inner region is a standard convex mirror whereas the outer region allows for a wider range of visibility within the same sweep. This combination allows for better assurance when making lane changes.*

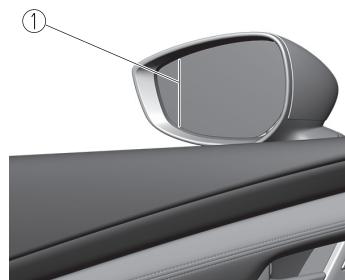

1. Region line

- The perceived distance of objects in the outer and inner regions of the wide angle mirror is different. Objects appearing in the outer region are actually further away than they are in the inner region.*


Power mirror adjustment

The ignition must be switched to ACC or ON position.

To adjust:

1. Press the select switch for the outside mirror to be adjusted to turn on the indicator light.

2. Press the adjustment switch to adjust the angle of the outside mirror.

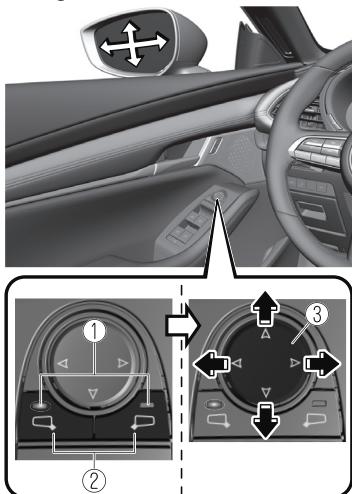

1. Indicator light
2. Select switch
3. Adjustment switch

After adjusting the angle of the outside mirror, press the select switch for the outside mirror to be adjusted to turn off the indicator light.

NOTE

(With driving position memory function)

The on-road outside mirror position can be programmed in conjunction with the driving position memory function.

Refer to Driving Position Memory on page 2-11.

Power mirrors with reverse tilt down function*

The outside mirrors tilt downward to facilitate the view of the lower area on each side of the vehicle.

1. Switch the ignition ON.

2. Press the select switch for the outside mirror to be tilted downward to turn on the indicator light of the select switch.
3. Shift the shift lever/selector lever to the R position to tilt the outer mirror on the side where the select button was pressed downward.

NOTE

When any of the following condition is met, the outer mirrors return to their normal positions.

- The ignition is switched to a position other than ON.
- The shift lever/selector lever is shifted to a position other than R.
- The select switch is pressed again.

Folding outside mirror

WARNING

Always return the outside mirrors to the driving position before you start driving:
Driving with the outside mirrors folded in is dangerous. Your rear view will be restricted, and you could have an accident.

Manual folding outside mirror

Fold the outside mirror rearward until it is flush with the vehicle.



Power folding outside mirror

! WARNING

Do not touch a power folding outside mirror while it is moving:

Touching the power folding outside mirror when it is moving is dangerous. Your hand could be pinched and injured or the mirror could be damaged.

Use the switch to set the mirror to the on-road position:

Setting the power folding outside mirror to the on-road position by hand is dangerous. The mirror will not lock in position and will prevent effective rearview visibility.


Only operate the power folding outside mirror with the vehicle safely parked:

Operating the power folding outside mirror while the vehicle is moving is dangerous. Wind blast on the mirror will cause them to collapse and you will be unable to return it to the on-road position, preventing rearview visibility.

The ignition must be switched to ACC or ON position.

To fold the mirrors, press the outside mirror folding switch.

To return the mirrors to their on-road positions, press the switch again.

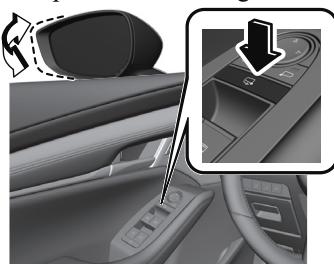**Automatic folding function**

When the ignition is switched to OFF, the outside mirrors automatically fold in and out when the doors are locked and unlocked.

Also, when the ignition is switched ON or the engine is started, the outside mirrors fold out automatically.

NOTE

- The outside mirrors may not fold in and out automatically under cold weather conditions.*

If the outside mirrors do not fold in and out automatically, remove any ice or snow, and then press the outside mirror folding switch to fold the outside mirrors in or out.

- The automatic folding function can be turned on or off.*

Refer to the Settings section in the MZD Connect Owner's Manual.

- In the following cases, the outside mirrors do not fold out automatically. Press the outside mirror folding switch to fold out the outside mirrors.*

- Pressing the outside mirror folding switch to fold in the outside mirrors.*

**1*

- Disconnecting the battery terminals after the outside mirrors fold in automatically.*

**1 When the automatic folding function is changed from off to on after folding in the outside mirrors, the outside mirrors fold out automatically.*

Engine-off outside mirror operation

The outside mirrors can be operated for about 40 seconds after the ignition is switched from ON to off.

Driver's side auto-dimming outside mirror*

The movement of the auto-dimming outside mirror is interlocked with the auto-dimming rearview mirror in the interior to automatically reduce glare from rear on-coming vehicles.

Refer to Rearview Mirror on page 3-37.

NOTE

The front passenger-side outside mirror does not have the auto-dimming feature.

▼ Rearview Mirror




WARNING

Do not stack cargo or objects higher than the seatbacks:

Cargo stacked higher than the seatbacks is dangerous. It can block your view in the rearview mirror, which might cause you to hit another car when changing lanes.

Rearview mirror adjustment

Before driving, adjust the rearview mirror to centre on the scene through the rear window.

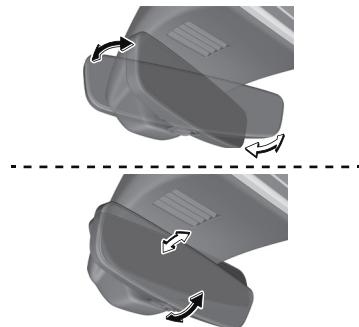


NOTE

For the manual antidazzle mirror, perform the adjustment with the antidazzle lever in the day position.

Reducing glare from headlights

Manual antidazzle mirror

Push the antidazzle lever forward for day driving. Pull it back to reduce glare of headlights from vehicles at the rear.

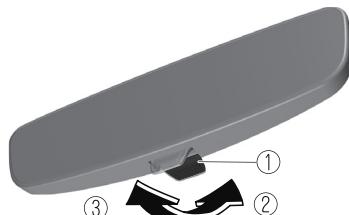

1. Antidazzle lever
2. Day
3. Night


Mirrors

Auto-dimming mirror

The auto-dimming mirror automatically reduces the glare of headlights from vehicles at the rear when the ignition is switched ON.

NOTE

- Do not use glass cleaner or suspend objects on or around the light sensor. Otherwise, light sensor sensitivity will be affected and may not operate normally.*

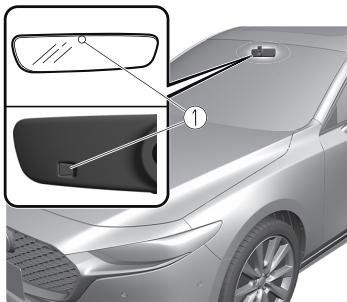

1. Light sensor

- The auto-dimming function is cancelled when the ignition is switched ON and the shift lever/selector lever is in the R position.*

Power Windows

▼ Power Windows

The windows can be opened/closed by operating the power window switches.



WARNING

Make sure the opening is clear before closing a window:

Closing a power window is dangerous. A person's hands, head, or even neck could be caught by the window and result in serious injury or even death. This warning applies especially to children.

Never allow children to play with power window switches:

Power window switches that are not locked with the power window lock switch would allow children to operate power windows unintentionally, which could result in serious injury if a child's hands, head or neck becomes caught by the window.

Make sure nothing blocks the window just before it reaches the fully closed position or while fully holding up the power window switch:

Blocking the power window just before it reaches the fully closed position or while fully holding up the power window switch is dangerous.

In this case, the jam-safe function may not prevent the window from closing all the way. If fingers are caught, serious injuries could occur.

Do not let a child put a hand or head out of the window while driving the vehicle:

If the person's hand or head hits something outside the vehicle, or sudden braking is applied, it could result in serious injury or death.

NOTE


When driving with only 1 of the rear windows open, your ears might experience a resonating sound. However, this does not indicate a problem. The sound can be reduced by slightly opening a front window or by changing the size of the rear window opening.

▼ Opening/Closing Windows

The window opens while the switch is pressed and it closes while the switch is pulled up with the ignition switched ON. Do not open or close 3 or more windows at the same time.

The front passenger's window and rear windows can be opened/closed when the power window lock switch on the driver's door is in the unlocked position. Keep this switch in the locked position while children are in the vehicle.

Master control switches

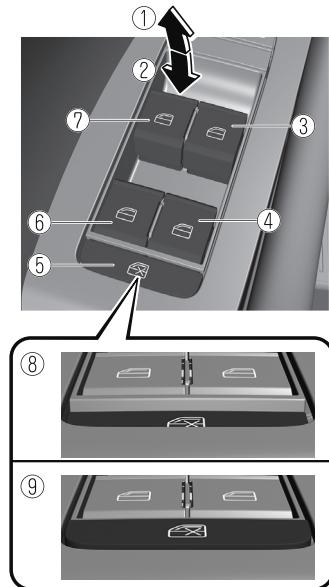

1. Close
2. Open
3. Front passenger's window
4. Right rear window
5. Power window lock switch
6. Left rear window
7. Driver's window

8. Locked position
9. Unlocked position

Front passenger's window switch/Rear window switches



1. Close
2. Open

NOTE

- A power window may no longer open/close if you continue to press the switch for a long time. If the power window does not open/close, wait for a while and then operate the switch again.
- The passenger windows may be opened or closed using the master control switches on the driver's door.
- The power window can be operated for about 40 seconds after the ignition is switched from ON to ACC or off with all doors closed. If any door is opened, the power window will stop operating.

▼ Auto-opening/Closing

To fully open the window automatically, press the switch completely down, then release. The window will fully open automatically.

To fully close the window automatically, pull the switch completely up, then release. The window will fully close automatically.

To stop the window partway, pull or press the switch in the opposite direction and then release it.

NOTE

Power window system initialization procedure

If you operate the switch any number of times with the power window not fully closed, the window may no longer fully open/close automatically.

The power window auto function will only resume on a power window that has been reset.

1. *Switch the ignition ON.*
2. *Make sure that the power window lock switch located on the driver's door is not depressed.*
3. *Press the switch and fully open the window.*
4. *Pull up the switch to fully close the window and continue holding the switch for about 2 seconds after the window fully closed.*
5. *Make sure that the power windows operate correctly using the door switches.*

▼ Jam-safe Window

When the window is closing and a foreign object is detected between the window and the window frame, the window stops closing and automatically opens partway.

NOTE

- *The jam-safe function may operate under the following conditions:*

- *A strong impact is detected while the window is closing.*
- *The window is closing in very low temperatures.*

• (A window cannot be closed)

If the jam-safe function has operated and the window cannot be closed, check around the window frame for a foreign object.

If there is no foreign object around the window frame, forcibly close a window using the following procedure.

1. *After switching the ignition OFF, wait for 45 seconds or longer.*
2. *Switch the ignition ON.*
3. *Operate the switch in the direction to close the window until the jam-safe function operates 5 times.*
4. *Continue pulling up the switch to fully close the window.*

Sunroof*

▼ Sunroof

The sunroof can be opened or closed when operating the overhead tilt/slide switch at the front seats.

⚠ WARNING

Do not let passengers stand up or extend part of the body through the open sunroof while the vehicle is moving:

Extending the head, arms, or other parts of the body through the sunroof is dangerous. The head or arms could hit something while the vehicle is moving. This could cause serious injury or death.

Never allow children to play with the tilt/slide switch:

The tilt/slide switch would allow children to operate the sunroof unintentionally, which could result in serious injury if a child's hands, head or neck becomes caught by the sunroof.

Make sure the opening is clear before closing the sunroof:

A closing sunroof is dangerous. The hands, head, or even neck of a person, especially a child, could be caught in it as it closes, causing serious injury or even death.

Make sure nothing blocks the sunroof just before it reaches the fully closed position:

Blocking the sunroof just before it reaches the closed position is dangerous.

In this case, the jam-safe function cannot prevent the sunroof from closing. If fingers are caught, serious injuries could occur.


⚠ CAUTION

- *Do not sit on or put heavy items on the area where the sunroof opens and closes. Otherwise, the sunroof could be damaged.*
- *Do not open or close the sunroof forcefully during freezing temperatures or snowfall. Otherwise, the sunroof could be damaged.*
- *The sunshade does not tilt. To avoid damaging the sunshade, do not push it up.*
- *Do not close the sunshade while the sunroof is opening. Trying to force the sunshade closed could damage it.*

▼ Tilt/Slide Operation

The sunroof can be opened or closed electrically only when the ignition is switched ON.

- Before leaving the vehicle or washing your Mazda, make sure the sunroof is completely closed so that water does not get inside the cabin area.
- After washing your Mazda or after it rains, wipe the water off the sunroof before operating it to avoid water penetration which could cause rust and water damage to your headliner.

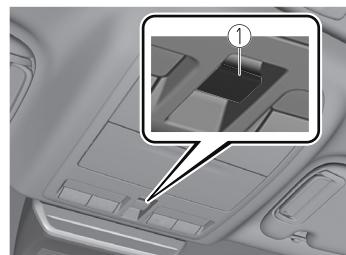

1. Tilt/Slide switch

Tilt Operation


The rear of the sunroof can be tilted open to provide more ventilation.

To fully tilt automatically, momentarily press the tilt/slide switch.

To fully close automatically, momentarily press the tilt/slide switch in the forward direction.

To stop tilting partway, press the tilt/slide switch.

When the sunroof is already slid open and you want to tilt it open, first close the sunroof and then do a tilt operation.

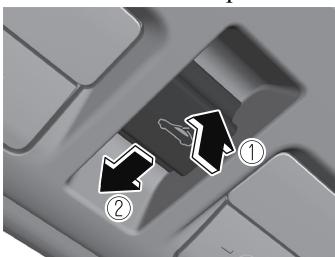

1. Tilt up
2. Close (Tilt down)


Slide Operation

To fully open automatically, momentarily press the tilt/slide switch in the backward direction.

To fully close automatically, momentarily press the tilt/slide switch in the forward direction.

To stop sliding partway, press the tilt/slide switch.

When the sunroof is already tilted open and you want to slide it open, first close the sunroof and then do a slide operation.

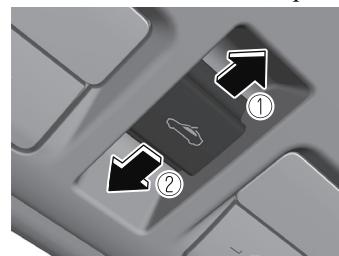

1. Open
2. Close

NOTE

If the sunroof does not operate normally, do the following procedure:

1. Switch the ignition ON.
2. Press the tilt switch, to partially tilt open the rear of the sunroof.
3. Repeat Step 2. The rear of the sunroof tilts open to the fully open position, then closes a little.

If the reset procedure is performed while the sunroof is in the slide position (partially open) it will close before the rear tilt opens.

▼ Jam-safe Sunroof

If a person's hands, head or an object blocks the sunroof while it is closing, the sunroof will stop and move in the open direction.


NOTE

- *The jam-safe function may operate under the following conditions:*
 - *A strong impact is detected while the sunroof is closing automatically.*
 - *The sunroof is closing automatically during very low temperatures.*
- *In the event the jam-safe function activates and the sunroof cannot be closed automatically, press the tilt/slide switch and the sunroof will close.*
- *The jam-safe sunroof function does not operate until the system has been reset.*

▼ Sunshade

The sunshade can be opened and closed by hand.

The sunshade opens at the same time as the sunroof slides open, but it must be closed by hand.

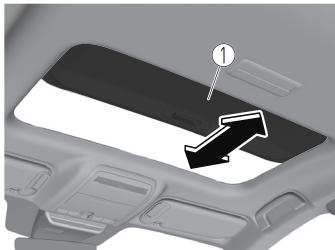

1. Sunshade

Modification and Add-On Equipment

▼ Modification and Add-On Equipment

Mazda cannot guarantee the immobilizer and the theft-deterrent systems' operation if the system has been modified or if any add-on equipment has been installed.



CAUTION

To avoid damage to the vehicle, do not modify the system or install any add-on equipment to the immobilizer and the theft-deterrent systems or the vehicle.

Immobilizer System

▼ Immobilizer System

The immobilizer system allows the engine to start only with a key the system recognises.

If someone attempts to start the engine with an unrecognised key, the engine will not start, thereby helping to prevent vehicle theft.

If you have a problem with the immobilizer system or the key, consult an Authorised Mazda Repairer.



CAUTION

➤ *Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

➤ *To avoid damage to the key, do not:*

➤ *Drop the key.*

➤ *Get the key wet.*

➤ *Expose the key to any kind of magnetic field.*

➤ *Expose the key to high temperatures on places such as the instrument panel or bonnet, under direct sunlight.*

➤ *If the engine does not start with the correct key, and the security indicator light keeps illuminating or flashing, the system may have a malfunction. Consult an Authorised Mazda Repairer.*

Security System

NOTE

- *The keys carry a unique electronic code. For this reason, and to assure your safety, obtaining a replacement key requires some waiting time. They are only available through an Authorised Mazda Repairer.*
- *Always keep a spare key in case one is lost. If a key is lost, consult an Authorised Mazda Repairer as soon as possible.*
- *If you lose a key, an Authorised Mazda Repairer will reset the electronic codes of your remaining keys and immobilizer system. Bring all the remaining keys to an Authorised Mazda Repairer to reset. Starting the vehicle with a key that has not been reset is not possible.*

▼ Operation

NOTE

- *The engine may not start and security indicator light may illuminate or flash if the key is placed in an area where it is difficult for the system to detect the signal, such as on the instrument panel or in the glove compartment. Move the key to a location within the signal range, switch the ignition off, and then restart the engine.*
- *Signals from a TV or radio station, or from a transceiver or mobile telephone could interfere with your immobilizer system. If you are using the proper key and the engine fails to start, check the security indicator light.*

Arming

The system is armed when the ignition is switched from ON to off.

The security indicator light in the instrument cluster flashes every 2 seconds until the system is disarmed.



Disarming

The system is disarmed when the ignition is switched ON with the correct programmed key. The security indicator light illuminates for about 3 seconds and then turns off.

If the engine does not start with the correct key, and the security indicator light remains illuminated or flashing, try the following:

Make sure the key is within the operational range for signal transmission. Switch the ignition off, and then restart the engine. If the engine does not start after 3 or more tries, contact an Authorised Mazda Repairer.

Theft-Deterrent System*

▼ Theft-Deterrent System

If the theft-deterrent system detects an inappropriate entry into the vehicle or the intrusion sensor detects movement in the vehicle which could result in the vehicle (with the intrusion sensor) or its contents being stolen, the alarm alerts the surrounding area of an abnormality by sounding the siren/horn and flashing the hazard warning lights.

The system will not function unless it's properly armed. So when you leave the vehicle, follow the arming procedure correctly.

Intrusion sensor*

The intrusion sensor uses ultrasonic waves to detect movement inside the vehicle and to raise an alert of an intrusion into the vehicle.

The intrusion sensor detects certain kinds of movement inside the vehicle, however, it may also respond to phenomenon outside the vehicle such as vibrations, loud noise, wind, and air currents.




CAUTION

In order for the intrusion sensor to operate appropriately, be aware of the following:

- *Do not hang clothing or objects from a head restraint or a coat hook.*
- *Return the extension sunvisors to their original positions.*
- *Do not blind the intrusion sensor by covering it or placing objects over it.*

- *Do not allow the intrusion sensor to get soiled or wipe it with a liquid.*
- *Do not shock or cause an impact to the intrusion sensor or the intrusion sensor bezel.*
- *Do not install seats that are not Mazda genuine products.*
- *To prevent obstruction of intrusion sensor, do not place objects or cargo near the intrusion sensor that are higher than the head restraints.*

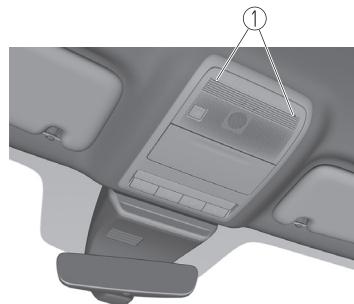

1. *Intrusion sensor and intrusion sensor bezel*

▼ Operation

Siren/Horn triggering conditions

The siren/horn sounds intermittently and the hazard warning lights flash for about 30 seconds when the system is triggered by any one of the following:

With the intrusion sensor

- Unlocking a door with the auxiliary key, door lock switch, or an inside door-lock knob.
- Forcing open a door, the bonnet or the liftgate/boot lid.
- Opening the bonnet by operating the bonnet release handle.

Security System

- Switching the ignition ON without using the push button start.
- The intrusion sensor detects a movement in the vehicle.

The system will be triggered again (up to 10 times) if one of the above conditions remains.

- Disconnecting the battery terminal (the hazard warning lights do not flash).

The system will be triggered about 10 times.

Without the intrusion sensor

- Unlocking a door with the auxiliary key, door lock switch, or an inside door-lock knob.
- Forcing open a door, the bonnet or the liftgate/boot lid.
- Opening the bonnet by operating the bonnet release handle.
- Switching the ignition ON without using the push button start.

If the system is triggered again, the lights and horn will activate until the driver's door or the liftgate/boot lid^{*1} is unlocked with the transmitter.

NOTE

- The liftgate/boot lid does not open while the theft-deterrent system is operating.
- If the battery goes dead while the theft-deterrent system is armed, the siren/horn will activate and the hazard warning lights will flash when the battery is charged or replaced.

^{*1} For vehicles with the boot lid release button, the boot lid cannot be unlocked using this method.

▼ How to Arm the System

1. Close the windows and the sunroof* securely.

NOTE

(With the intrusion sensor)

Even with a window or the sunroof open, the system can be armed, however, leaving the windows or the sunroof* even partially open can invite theft, and wind blowing into the vehicle could trigger the alarm. The intrusion sensor function can also be cancelled.*

Refer to Cancelling the Intrusion Sensor (With Intrusion Sensor) on page 3-49.

2. Switch the ignition OFF.
3. Make sure the bonnet, the doors, and the liftgate/boot lid are closed.
4. Press the lock button on the transmitter.

The hazard warning lights will flash once.

The following method will also arm the theft-deterrent system:

Press the door-lock switch “” while any door is open and then close all of the doors.

(With the advanced keyless function)

Touch the sensing area of the door lock touch sensor.

The security indicator light in the instrument cluster flashes twice per second for 20 seconds.



5. After 20 seconds, the system is fully armed.

NOTE

- *The theft-deterrent system can also be armed by activating the auto relock function with all the doors, the liftgate/boot lid and the bonnet closed.*

Refer to Transmitter on page 3-5.

- *The system will disarm if one of the following operations takes place within 20 seconds after pressing the lock button:*

- *Unlocking any door.*
- *Opening any door.*
- *Opening the bonnet.*
- *Switching the ignition ON.*

To rearm the system, do the arming procedure again.

- *When the doors are locked by pressing the lock button on the transmitter while the theft-deterrent system is armed, the hazard warning lights will flash once to indicate that the system is armed.*

**▼ Cancelling the Intrusion Sensor
(With the Intrusion Sensor)**

If the theft deterrent system has been armed while any of the following conditions are present, cancel the intrusion sensor to prevent the alarm from triggering unnecessarily.

- Leaving the vehicle with a movable object, passengers or pets remaining inside.
- Leaving an object inside the vehicle that can roll around, such as when the vehicle is placed on a tilting, unstable surface when being shipped.
- Hanging small objects/accessories in the vehicle, hanging clothing on a coat hook, or placing other items which can move easily inside the vehicle.
- Parking in an area where there is strong vibration or loud noise.
- When using a high pressure or automatic car wash.
- Continuous shock and vibration from hail or thunder and lightning is transmitted to the vehicle.
- Doors are locked with a window or the sunroof* left open.
- An accessory heater or device that produces moving air and vibration operates while the theft deterrent system is armed.

Security System

NOTE

If any door or the liftgate/boot lid remains closed for 30 seconds, all the doors and the liftgate/boot lid automatically re-lock and the theft deterrent system arms even if a window and the sunroof* is left open.

To cancel the intrusion sensor, press the intrusion sensor cancel button on the transmitter within 20 seconds after pressing the lock button.

The hazard warning lights will flash 3 times.

NOTE

- To reactivate the intrusion sensor, turn off the armed theft-deterrent system and then rearm it.
- The intrusion sensor is operational when the theft-deterrent system is armed. To cancel the intrusion sensor, press the intrusion sensor cancel button each time the theft-deterrent system is armed.

▼ To Turn Off an Armed System

An armed system can be turned off using any one of the following methods:

- Pressing the unlock button on the transmitter.
- Starting the engine with the push button start.
- **(With the advanced keyless function)**
 - Touching the sensing area of the door release touch sensor.

The hazard warning lights will flash twice.

NOTE

When the doors are unlocked by pressing the unlock button on the transmitter while the theft-deterrent system is turned off, the hazard warning lights will flash twice to indicate that the system is turned off.

▼ To Stop the Alarm

A triggered alarm can be turned off using any one of the following methods:

- Pressing the unlock button or the boot button (saloon) on the transmitter.
- Starting the engine with the push button start.
- **(With the advanced keyless function)**
 - Touching the sensing area of the door release touch sensor.
 - Pressing the electric liftgate/boot lid opener while the key is being carried.

The hazard warning lights will flash twice.

Running-In

▼ Running-In

No special running-in is necessary, but a few precautions in the first 1,000 km (600 miles) may add to the performance, economy, and life of the vehicle.

- Do not race the engine.
- Do not maintain one constant speed, either slow or fast, for a long period of time.
- Do not drive constantly at full-throttle or high engine rpm for extended periods of time.
- Avoid unnecessary hard stops.
- Avoid full-throttle starts.
- Do not tow a trailer.

Saving Fuel and Protection of the Environment

▼ Saving Fuel and Protection of the Environment

How you operate your Mazda determines how far it will travel on a tank of fuel. Use these suggestions to help save fuel and reduce CO₂.

- Avoid long warm-ups. Once the engine runs smoothly, begin driving.
- Avoid fast starts.
- Drive at lower speeds.
- Anticipate when to apply the brakes (avoid sudden braking).
- Follow the maintenance schedule and have an expert repairer, we recommend an Authorised Mazda Repairer perform inspections and servicing.
Refer to Europe on page 6-3.
Refer to Except Europe on page 6-7.
- Use the air conditioner only when necessary.
- Slow down on rough roads.
- Keep the tyres properly inflated.
- Do not carry unnecessary weight.
- Do not rest your foot on the brake pedal while driving.
- Keep the wheels in correct alignment.
- Keep windows closed at high speeds.
- Slow down when driving in crosswinds and headwinds.

Driving Tips

WARNING

Never stop the engine when going down a hill:

Stopping the engine when going down a hill is dangerous. This causes the loss of power steering and power brake control, and may cause damage to the drivetrain. Any loss of steering or braking control could cause an accident.

Hazardous Driving

▼ Hazardous Driving

WARNING

Be extremely careful if it is necessary to downshift on slippery surfaces:

Downshifting into lower gear while driving on slippery surfaces is dangerous. The sudden change in tyre speed could cause the tyres to skid. This could lead to loss of vehicle control and an accident.

When driving on ice or in water, snow, mud, sand, or similar hazards:

- Be cautious and allow extra distance for braking.
- Avoid sudden braking and sudden manoeuvring.
- Do not pump the brakes. Continue to press down on the brake pedal. Refer to Antilock Brake System (ABS) on page 4-88.
- If you get stuck, select a lower gear and accelerate slowly. Do not spin the front wheels.
- For more traction in starting on slippery surfaces such as ice or packed snow, use sand, rock salt, chains, carpeting, or other nonslip material under the front wheels.

NOTE

Use snow chains only on the front wheels.

Floor Mat

▼ Floor Mat

We recommend the use of Genuine Mazda floor mats.

! WARNING

Make sure the floor mats are secured with the grommets or the retainers to prevent them from bunching up under the foot pedals (Driver's side):

Using a floor mat that is not secured is dangerous as it will interfere with the accelerator and brake pedal operation (driver's side), which could result in an accident.

Only use a floor mat which conforms to the shape of the floor on the driver's side and make sure it is oriented correctly.

Secure the floor mat using the grommets or retainers.

There are various ways to secure floor mats depending on the type used, therefore secure the mat according to the type.


After installing the floor mat, make sure that it does not slide from side to side or back and forth, and that there is sufficient clearance with the accelerator and brake pedals on the driver's side.

After removing the floor mat for cleaning or some other reason, always securely reinstall it while paying attention to the precautions just mentioned.

Do not install two floor mats, one on top of the other, on the driver's side:

Installing two floor mats, one on top of the other, on the driver's side is dangerous as the retention pins can only keep one floor mat from sliding forward.

Loose floor mat(s) will interfere with the foot pedals and could result in an accident. If using an all-weather mat for winter use always remove the original floor mat.

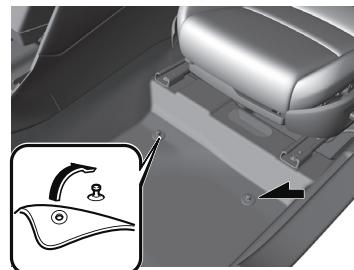

When setting a floor mat, position the floor mat so that its grommets or retainers are inserted over the pointed end of the retention posts.

Driving Tips

Rocking the Vehicle

▼ Rocking the Vehicle

WARNING

Do not spin the wheels at high speed, and do not allow anyone to stand behind a wheel when pushing the vehicle:

When the vehicle is stuck, spinning the wheels at high speed is dangerous. The spinning tyre could overheat and explode. This could cause serious injuries.

CAUTION

Too much rocking may cause engine overheating, transmission failure, and tyre damage.

If you must rock the vehicle to free it from snow, sand or mud, depress the accelerator slightly and slowly move the shift lever/selector lever from 1 (D) to R position.

Winter Driving

▼ Winter Driving

Carry emergency gear, including tyre chains, window scraper, flares, a small shovel, jumper leads, and a small bag of sand or salt.

Ask an expert repairer, we recommend an Authorised Mazda Repairer to check the following:

- Have the proper ratio of antifreeze in the radiator.
Refer to Engine Coolant on page 6-30.
- Inspect the battery and its leads. Cold reduces battery capacity.
- Use an engine oil appropriate for the lowest ambient temperatures that the vehicle will be driven in (page 6-25).
- Inspect the ignition system for damage and loose connections.
- Use washer fluid made with antifreeze—but do not use engine coolant antifreeze for washer fluid (page 6-32).

NOTE

- Remove snow before driving. Snow left on the windscreen is dangerous as it could obstruct vision.
- Do not apply excessive force to a window scraper when removing ice or frozen snow on the mirror glass and windscreen.
- Never use warm or hot water for removing snow or ice from windows and mirrors as it could result in the glass cracking.

• Drive slowly. Braking performance can be adversely affected if snow or ice adheres to the brake components. If this situation occurs, drive the vehicle slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal.

▼ Snow Tyres

WARNING

Use only the same size and type tyres (snow, radial, or non-radial) on all 4 wheels:

Using tyres different in size or type is dangerous. Your vehicle's handling could be greatly affected and result in an accident.

CAUTION

Check local regulations before using studded tyres.

NOTE

If your vehicle is equipped with the tyre pressure monitoring system, the system may not function correctly when using tyres with steel wire reinforcement in the sidewalls (page 4-252).

Use snow tyres on all 4 wheels

Do not exceed the maximum permissible speed for your snow tyres or legal speed limits.

Europe

When snow tyres are used, select the specified size and pressure (page 9-11).

▼ Tyre Chains

Check local regulations before using tyre chains.

CAUTION

- Chains may affect handling.
- Do not go faster than 50 km/h (30 mph) or the chain manufacturer's recommended limit, whichever is lower.
- Drive carefully and avoid bumps, holes, and sharp turns.
- Avoid locked-wheel braking.
- Do not use chains on a temporary spare tyre; it may result in damage to the vehicle and to the tyre.
In some models, the vehicle is not equipped with a factory installed temporary spare tyre.
- Do not use chains on roads that are free of snow or ice. The tyres and chains could be damaged.
- Chains may scratch or chip aluminium wheels.

NOTE


If your vehicle is equipped with the tyre pressure monitoring system, the system may not function correctly when using tyre chains.

Install the chains on the front tyres only.
Do not use chains on the rear tyres.

Driving Tips

Tyre chain selection (Europe)

Mazda recommends hexagon type steel ring chains. Select the proper type according to your tyre size.

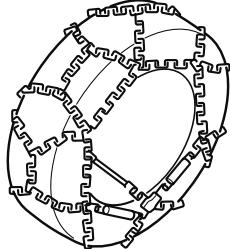

Tyre size	Tyre chain
205/60R16	Hexagon type
215/45R18	Hexagon type

NOTE


Although Mazda recommends hexagon type steel ring chains, all chains within the installation specifications may be used.

Installation specification (Europe)

When installing tyre chains, the distance between the tyre tread and the chain must be within the prescribed limits in the following table.

Distance [Unit: mm (in)]	
A	B
MAX 9 (0.35)	MAX 9 (0.35)

Side view

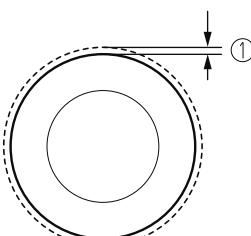

1. A

Cross section view



1. B

Installing the chains

1. If your vehicle is equipped with wheel covers remove them, otherwise the chain bands will scratch them.
2. Secure the chains on the front tyres as tightly as possible. Always follow the chain manufacturer's instructions.
3. Retighten the chains after driving 1/2—1 km (1/4—1/2 mile).

Driving In Flooded Area

▼ Driving In Flooded Area

WARNING

Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal:

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.

CAUTION

Do not drive the vehicle on flooded roads as it could cause short circuiting of electrical/electronic parts, or engine damage or stalling from water absorption. If the vehicle has been immersed in water, consult an expert repairer, we recommend an Authorised Mazda Repairer.

Turbocharger Information (SKYACTIV-D 1.8)

▼ Turbocharger Information (SKYACTIV-D 1.8)

CAUTION

- After driving at freeway speeds or up a long hill, trailer towing for a long time, idle the engine at least 30 seconds before stopping it. Otherwise, the turbocharger could be damaged. However, when i-stop operates, idling is unnecessary.
- Racing or over-revving the engine, particularly after it's just been started, can damage the turbocharger.
- To protect the engine from damage, the engine is designed so that it cannot be raced just after starting it in extremely cold weather.

The turbocharger greatly enhances engine power. Its advanced design provides improved operation and requires minimum maintenance.

To get the most from it, observe the following.

1. Change engine oil and filter according to Scheduled Maintenance (page 6-3).
2. Use only recommended engine oil (page 6-24). Extra additives are NOT recommended.

Towing Caravans and Trailers (Europe/Russia/Turkey/Israel/South Africa)

▼ Towing Caravans and Trailers (Europe/Russia/Turkey/Israel/South Africa)

Your Mazda was designed and built primarily to carry passengers and cargo. If you tow a trailer, follow these instructions because driver and passenger safety depends on proper equipment and safe driving habits. Towing a trailer will affect handling, braking, durability, performance, and economy.

Never overload vehicle or trailer. Consult an Authorised Mazda Dealer if you need further details.

CAUTION

- *Do not tow a trailer during the first 1,000 km (600 miles) of your new Mazda. If you do, you may damage the engine, transmission, differential, wheel bearings, and other power train components.*
- *Damage caused by towing a trailer/caravan in Turkey is not covered by the vehicle's warranty.*
- **(SKYACTIV-G 1.5 (European model))**
Trailers and caravans cannot be towed by vehicles with the i-stop function.

 
NOTE

- *When towing a trailer, do not use the following safety systems (If a Mazda genuine trailer hitch is used, these systems are automatically turned off):*
- *Blind Spot Monitoring (BSM)*
- *Rear Cross Traffic Alert (RCTA)*
- *Smart Brake Support [Rear] (SBS-R)*
- *Smart Brake Support [Rear Crossing] (SBS-RC)*
- *Parking Sensor System (Rear)*

▼ Weight Limits


The total trailer weight, gross combination weight and trailer nose weight must be within the prescribed limits in the Trailer Towing-Load Table.

TOTAL TRAILER WEIGHT:




Sum of weights of the trailer and its load.

 GROSS COMBINATION WEIGHT:



Sum of total trailer weight and towing vehicle weight; including trailer hitch, vehicle passengers, and vehicle load.

TRAILER NOSE WEIGHT:

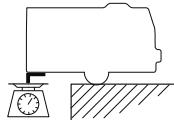

The weight exerted on the trailer tongue. It is varied by changing the weight distribution when loading the trailer.



CAUTION

Be aware of the towing load weight differences when towing at high altitudes. For altitudes exceeding 1,000 meter (3,280 ft 10 in), always reduce the towing load by 10% for every 1,000 meter (3,280 ft 10 in) increase in altitude from the load indicated under the gross combination weight heading in the maximum trailer towing-load table. If the determined maximum total towing load weight is exceeded, the engine and other power train parts may be damaged.

Maximum trailer towing-load table**Europe/Gradient up to 12%**

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmis-sion	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Saloon	SKYAC-TIV-G 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,169 kg (6,986.3 lb)
Saloon	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,202 kg (7,059.1 lb)
Saloon	SKYAC-TIV-X 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,227 kg (7,114.2 lb)
Saloon	SKYAC-TIV-X 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,248 kg (7,160.5 lb)
Saloon	SKYAC-TIV-D 1.8	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,194 kg (7,041.4 lb)
Saloon	SKYAC-TIV-D 1.8	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,214 kg (7,085.5 lb)
Hatchback	SKYAC-TIV-G 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,175 kg (6,999.6 lb)
Hatchback	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,207 kg (7,070.1 lb)
Hatchback	SKYAC-TIV-X 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,229 kg (7,118.6 lb)
Hatchback	SKYAC-TIV-X 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,252 kg (7,169.3 lb)
Hatchback	SKYAC-TIV-X 2.0	Manual transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,280 kg (7,231.0 lb)
Hatchback	SKYAC-TIV-X 2.0	Automatic transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,313 kg (7,303.8 lb)

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmission	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Hatchback	SKYAC-TIV-D 1.8	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,198 kg (7,050.3 lb)
Hatchback	SKYAC-TIV-D 1.8	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,219 kg (7,096.6 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

Germany and Austria/Gradient up to 8%

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmission	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Saloon	SKYAC-TIV-G 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,169 kg (6,986.3 lb)
Saloon	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,202 kg (7,059.1 lb)
Saloon	SKYAC-TIV-X 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,227 kg (7,114.2 lb)
Saloon	SKYAC-TIV-X 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,248 kg (7,160.5 lb)
Saloon	SKYAC-TIV-D 1.8	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,194 kg (7,041.4 lb)
Saloon	SKYAC-TIV-D 1.8	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,214 kg (7,085.5 lb)
Hatchback	SKYAC-TIV-G 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,175 kg (6,999.6 lb)
Hatchback	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,207 kg (7,070.1 lb)

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmission	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Hatchback	SKYAC-TIV-X 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,229 kg (7,118.6 lb)
Hatchback	SKYAC-TIV-X 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,252 kg (7,169.3 lb)
Hatchback	SKYAC-TIV-X 2.0	Manual transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,280 kg (7,231.0 lb)
Hatchback	SKYAC-TIV-X 2.0	Automatic transmission	AWD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,313 kg (7,303.8 lb)
Hatchback	SKYAC-TIV-D 1.8	Manual transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,198 kg (7,050.3 lb)
Hatchback	SKYAC-TIV-D 1.8	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,219 kg (7,096.6 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

Russia/Gradient up to 12%

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmission	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Saloon	SKYAC-TIV-G 1.5	Manual transmission	2WD	600 kg (1,322.7 lb)	1,000 kg (2,204.6 lb)	2,824 kg (6,225.7 lb)
Saloon	SKYAC-TIV-G 1.5	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,045 kg (6,713.0 lb)
Saloon	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,175 kg (6,999.6 lb)
Hatchback	SKYAC-TIV-G 1.5	Manual transmission	2WD	600 kg (1,322.7 lb)	1,000 kg (2,204.6 lb)	2,832 kg (6,243.4 lb)

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmis-sion	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Hatchback	SKYAC-TIV-G 1.5	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,053 kg (6,730.6 lb)
Hatchback	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,173 kg (6,995.1 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

Israel/Gradient up to 12%

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmis-sion	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Saloon	SKYAC-TIV-G 1.5	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,148 kg (6,940.0 lb)
Saloon	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,170 kg (6,988.5 lb)
Hatchback	SKYAC-TIV-G 1.5	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,155 kg (6,955.5 lb)
Hatchback	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,300 kg (2,865.9 lb)	3,170 kg (6,988.5 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

South Africa/Gradient up to 12%

MODEL				TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Body	Engine	Transmission	Drive system	Trailer without brake	Trailer with brake	Trailer with brake
Saloon	SKYAC-TIV-G 1.5	Manual transmission	2WD	600 kg (1,322.7 lb)	1,000 kg (2,204.6 lb)	2,812 kg (6,199.3 lb)
Saloon	SKYAC-TIV-G 1.5	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,000 kg (2,204.6 lb)	2,870 kg (6,327.2 lb)
Saloon	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,070 kg (6,768.1 lb)
Hatchback	SKYAC-TIV-G 1.5	Manual transmission	2WD	600 kg (1,322.7 lb)	1,000 kg (2,204.6 lb)	2,813 kg (6,201.5 lb)
Hatchback	SKYAC-TIV-G 1.5	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,000 kg (2,204.6 lb)	2,870 kg (6,327.2 lb)
Hatchback	SKYAC-TIV-G 2.0	Manual transmission	2WD	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,047 kg (6,717.4 lb)
Hatchback	SKYAC-TIV-G 2.0	Automatic transmission	2WD	600 kg (1,322.7 lb)	1,200 kg (2,645.5 lb)	3,070 kg (6,768.1 lb)

TRAILER NOSE WEIGHT: 80 kg (176.3 lb)

 **WARNING**
Always keep tow loads within specified limits as indicated in the Trailer Towing-Load Table:

Attempting to tow loads greater than those specified is dangerous as it may cause serious handling and performance problems that could result in personal injury or vehicle damage, or both.

Always keep the trailer nose weight within the specified limits in the Trailer Towing-Load Table:

Loading the trailer with more weight in the rear than in the front is dangerous. This could cause loss of vehicle control and an accident.

NOTE


- The total trailer weight and nose weight can be determined by weighing the trailer on platform scales at a highway weighing station or a trucking company.
- Appropriate total trailer weight and nose weight may prevent the danger of trailer sway from crosswinds, rough roads, or other causes.

▼ **Trailer Hitch**

When towing a trailer, use an appropriate trailer hitch. We recommend using a genuine Mazda trailer hitch. Use the original holes drilled by the vehicle manufacture for securing the trailer hitch. Contact your Authorised Mazda Dealer for more information.

Trailer hitch installation area


Hatchback

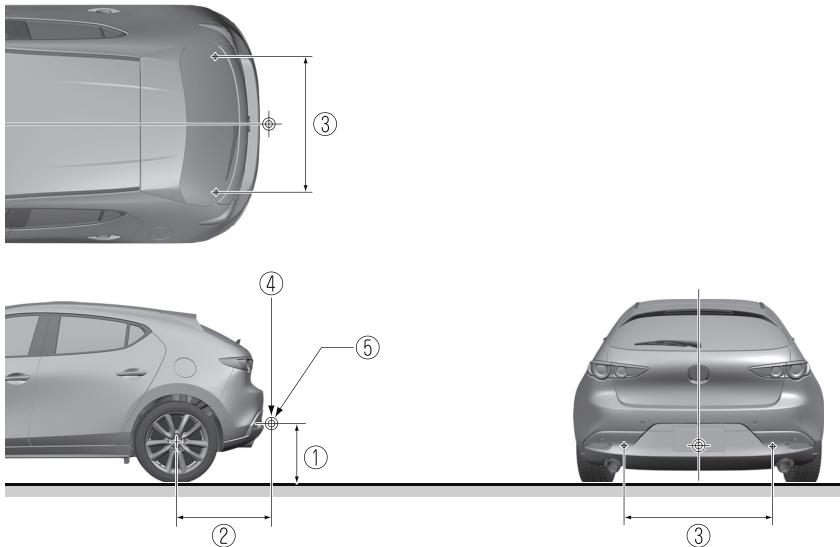

1. 350 — 420 mm (13.8 — 16.5 in)
2. 895.0 mm (35.24 in)
3. 1022.2 mm (40.244 in)
4. MAX. 80 kg (176.3 lb)
5. Hitch coupling point

Before Driving
Towing

Saloon

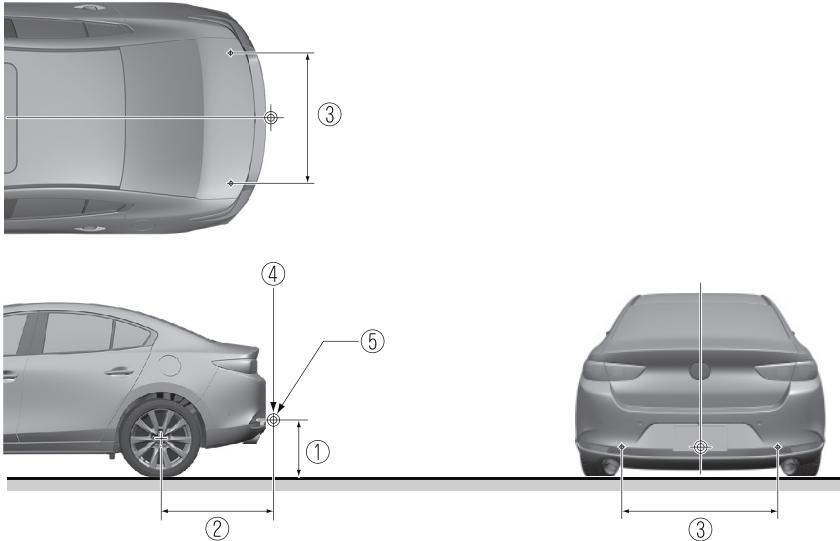

1. 350 — 420 mm (13.8 — 16.5 in)
2. 1103.7 mm (43.453 in)
3. 1022.2 mm (40.244 in)
4. MAX. 80 kg (176.3 lb)
5. Hitch coupling point

▼ Tyres

When towing a trailer, make sure all tyres are inflated to the recommended cold-tyre pressure, as indicated on the tyre pressure chart on the driver's door frame. Trailer tyre size, load rating, and inflation pressures should conform to tyre manufacturer specifications.

WARNING

Never use the temporary spare tyre when towing:

Using the temporary spare tyre on your vehicle when towing a trailer is dangerous as it could result in tyre failure, loss of control, and injury to vehicle occupants.

▼ Safety Chains

Safety chains must be used as a precautionary measure should the trailer become unintentionally unhitched. They should cross under the trailer tongue and attach to the hitch. Leave enough slack to allow full turns. Consult literature published by your trailer or hitch manufacturer for more details.

WARNING

Make sure the safety chain is securely attached to both the trailer and the vehicle prior to departure:

Towing a trailer without using a safety chain securely attached to both the trailer and the vehicle is dangerous. If damage occurs to the coupling unit or hitch ball, the trailer could wander into another lane and cause a collision.

▼ Trailer Lights

CAUTION

Do not connect a trailer lighting system directly to the lighting system of your Mazda. This may damage your vehicle's electrical system and lighting systems. To connect the lighting system, consult an Authorised Mazda Dealer.

▼ Trailer Brakes

Check the Maximum trailer towing-load table in Weight Limits (page 3-59), and if your trailer weight exceeds the value in the TOTAL TRAILER WEIGHT (Trailer without brake), trailer brakes are required. If your trailer has brakes, make sure they meet regulations.

WARNING

Do not connect a hydraulic trailer-brake system to your vehicle's brake system:
Connecting a hydraulic trailer-brake system directly to the vehicle brake system is dangerous and will result in inadequate braking and possible injury.

▼ Trailer Towing Tips

Before driving

- Verify that your Mazda maintains a near-normal attitude when a loaded or unloaded trailer is connected. Do not drive if it has an abnormal front-up or front-down position. Inspect for incorrect nose weight, worn suspension parts, and trailer overloading. Have the vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.
- Make sure the trailer cargo is secure to prevent it from shifting.
- Make sure the mirrors meet all government regulations. Inspect them.
- Before starting out, inspect the operation of all vehicle and trailer lights and all vehicle-to-trailer connections. Stop and re-inspect all lights and connections after driving a short distance.

Driving

- Your Mazda will handle differently with a trailer in tow, so practice turning, backing, and stopping in a traffic-free area.
- Take time to get accustomed to the extra weight and length.
- Do not exceed 100 km/h (62 mph) with a trailer in tow. If the local legal maximum speed with a trailer in tow is less than 100 km/h (62 mph), do not exceed the legal speed.



CAUTION

If the vehicle exceeds 100 km/h (62 mph) with a trailer in tow, the vehicle could be damaged.

- When ascending a hill, shift into a lower gear to reduce the possibility of overloading or overheating the engine, or both.
- When descending a hill, shift into a lower gear and use engine compression as a braking effect. Pay constant attention to speed and use the brakes only as needed. Holding the brake pedal down for a prolonged period may cause the brakes to overheat and lose power.

Parking

Avoid parking on an incline with a trailer. If this must be done, follow these instructions.

Parking on an Incline

1. Set the parking brake and the brakes.
2. Have someone block the wheels of the vehicle and trailer while you apply the brakes.
3. After the wheels are blocked, release the parking brake and the brakes slowly, allowing the blocks to bear the load.
4. Set the parking brake firmly.
5. If the vehicle has an automatic transmission, put the selector lever in P position. If it has a manual transmission, place the gear shift in 1 or R position.

Starting on an Incline

1. Start the engine (page 4-5).
2. Release the parking brake and slowly pull away a short distance from the wheel blocks.
3. Stop on the nearest level ground, set the parking brake, and pick up the wheel blocks.

MEMO

4

When Driving

Information concerning safe driving and stopping.

Start/Stop Engine.....	4-4
Ignition Switch.....	4-4
Starting the Engine.....	4-5
Turning the Engine Off.....	4-11
i-stop*	4-12
Cylinder Deactivation*	4-22
Instrument Cluster and Display	4-23
Instrument Cluster and Display.....	4-23
Instrument Cluster.....	4-23
Active Driving Display.....	4-42
Manual Transmission Operation.....	4-45
Manual Transmission Shift Pattern.....	4-45
Automatic Transmission.....	4-48
Automatic Transmission Controls.....	4-48
Shift-Lock System.....	4-49
Transmission Ranges.....	4-50
Manual Shift Mode.....	4-51
Direct Mode*	4-58
Driving Tips.....	4-59

Switches and Controls.....	4-60
Lighting Control.....	4-60
Rear Fog Light*	4-65
Turn and Lane-Change Signals.....	4-66
Windscreen Wipers and Washer.....	4-67
Rear Window Wiper and Washer*	4-71
Headlight Washer*	4-72
Rear Window Defogger.....	4-72
Horn.....	4-74
Hazard Warning Flasher.....	4-74
Brake.....	4-76
Brake System.....	4-76
AUTOHOLD.....	4-82
Emergency Stop Signal System.....	4-86
Hill Launch Assist (HLA).....	4-87
ABS/TCS/DSC.....	4-88
Antilock Brake System (ABS).....	4-88
Traction Control System (TCS).....	4-89
Dynamic Stability Control (DSC).....	4-90
M Hybrid.....	4-93
M Hybrid*	4-93
Drive Selection.....	4-98
Drive Selection*	4-98

i-ACTIV AWD	4-100
i-ACTIV AWD Operation*	4-100
 Power Steering	4-101
Power Steering.....	4-101
 i-ACTIVSENSE	4-102
i-ACTIVSENSE.....	4-102
High Beam Control System (HBC)*	4-107
Adaptive LED Headlights (ALH)*	4-109
Lane Departure Warning System (LDWS)*	4-112
Blind Spot Monitoring (BSM)*	4-115
Traffic Sign Recognition System (TSR)*	4-121
Distance & Speed Alert (DSA)*	4-128
Driver Attention Alert (DAA)*	4-129
Driver Monitoring (DM)*	4-131
Front Cross Traffic Alert (FCTA)*	4-133
Rear Cross Traffic Alert (RCTA)*	4-136
 Cruise Control	4-247
Cruise Control*	4-247
 Tyre Pressure Monitoring System (TPMS)	4-251
Tyre Pressure Monitoring System (TPMS)*	4-251

Petrol Particulate Filter.....	4-255
Petrol Particulate Filter (SKYACTIV-X 2.0).....	4-255
Diesel Particulate Filter.....	4-256
Diesel Particulate Filter (SKYACTIV-D 1.8).....	4-256
Rear View Monitor.....	4-257
Rear View Monitor*	4-257
Parking Sensor System.....	4-273
Parking Sensor System*	4-273


Start/Stop Engine

Ignition Switch

▼ Push Button Start Positions

The system operates only when the key is within operational range.

Each time the push button start is pressed, the ignition switches in the order of off, ACC, and ON. Pressing the push button start again from ON switches the ignition off.

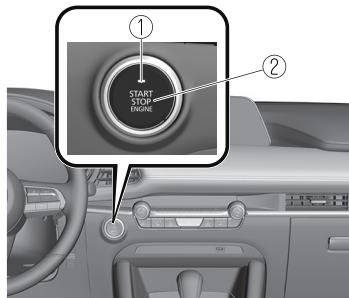

1. Indicator light
2. Push button start

NOTE

- The engine starts by pressing the push button start while depressing the clutch pedal (manual transmission) or the brake pedal (automatic transmission). To switch the ignition position, press the push button start without depressing the pedal.
- Do not leave the ignition switched ON while the engine is not running. Doing so could result in the battery going dead. If the ignition is left in ACC (For automatic transmission, the selector lever is in the P position, and the ignition is in ACC), the ignition switches off automatically after about 25 minutes.

Off

The power supply to electrical devices turns off and the indicator light (amber) also turns off.

In this position the steering wheel is locked.

WARNING

Before leaving the driver's seat, always switch the ignition off, set the parking brake, and make sure the selector lever is in P (automatic transmission) position or in 1st gear or R (manual transmission):

Leaving the driver's seat without switching the ignition off, setting the parking brake, and shifting the selector lever to P (automatic transmission) position or to 1st gear or R (manual transmission) is dangerous. Unexpected vehicle movement could occur which could result in an accident.

In addition, if your intention is to leave the vehicle for even a short period, it is important to switch the ignition off, as leaving it in another position will disable some of the vehicle's security systems and run the battery down.

NOTE

(Locked steering wheel)

If the push button start indicator light (green) is flashing, a message is displayed on the multi-information, and the beep sound is heard, this indicates that the steering wheel is not unlocked. To unlock the steering wheel, press the push button start while moving the steering wheel left and right.

ACC (Accessory)

Some electrical accessories will operate and the indicator light (amber) illuminates. In this position the steering wheel is unlocked.

NOTE

The keyless entry system does not function while the push button start has been pressed to ACC, and the doors will not lock/unlock even if they have been locked manually.

ON

This is the normal running position after the engine is started. The indicator light (amber) turns off. (The indicator light (amber) illuminates when the ignition is switched ON and the engine is not running.)

Some indicator lights/warning lights should be inspected before the engine is started.

Refer to Warning/Indicator Lights on page 4-35.

Refer to Indication/Indicator Lights on page 4-37.

NOTE

(SKYACTIV-G 1.5, SKYACTIV-G 2.0,

SKYACTIV-X 2.0, SKYACTIV-G 2.5)

When the push button start is pressed to ON, the sound of the fuel pump motor operating near the fuel tank can be heard. This does not indicate an abnormality.

Starting the Engine

▼ Starting the Engine



WARNING

Radio waves from the key may affect medical devices such as pacemakers:

Before using the key near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the key will affect the device.

NOTE

• The key must be carried because the key carries an immobilizer chip that must communicate with the engine controls at short range.

• The engine can be started when the push button start is pressed from off, ACC, or ON.

• The push button start system functions (function which can start the engine by only carrying the key) can be deactivated to prevent any possible adverse effect on a user wearing a pacemaker or other medical device. If the system is deactivated, you will be unable to start the engine by carrying the key. Consult an expert repairer, we recommend an Authorised Mazda Repairer for details. If the push button start system functions have been deactivated, you can start the engine by following the procedure indicated when the key battery goes dead.

Refer to Engine Start Function When Key Battery is Dead on page 4-9.

Start/Stop Engine

- After starting a cold engine, the engine speed increases and a whining sound from the engine compartment can be heard.*

This is for improved exhaust gas purification and does not indicate any parts defect.

1. Make sure you are carrying the key.
2. Occupants should fasten their seat belts.
3. Make sure the parking brake is on.
4. Continue to depress the brake pedal firmly until the engine has completely started.

5. (Manual transmission)

Continue to depress the clutch pedal firmly until the engine has completely started.

(Automatic transmission)

Put the vehicle in park (P). If you must restart the engine while the vehicle is moving, shift into neutral (N).

NOTE


• (Manual transmission)

The starter will not operate if the clutch pedal is not depressed sufficiently.

• (Automatic transmission)

The starter will not operate if the selector lever is not in P or N position and the brake pedal is not depressed sufficiently.

6. Make sure that the push button start indicator light (green) turns on.

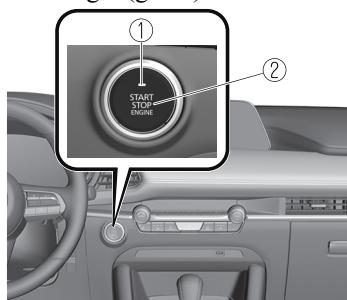

1. Indicator light
2. Push button start

NOTE

- If the push button start indicator light (green) flashes, make sure that the key is being carried.*
- If the push button start indicator light (green) flashes with the key being carried, touch the key to the push button start and start the engine.*

Refer to Engine Start Function When Key Battery is Dead on page 4-9.



CAUTION

If the KEY warning indication (red) is displayed, or the push button start indicator light (amber) flashes, this could indicate a problem with the engine starting system. This may prevent the engine from starting or from switching the ignition to ACC or ON.

Refer to KEY Warning Indication/Warning Light (Red) on page 7-63. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

NOTE

- Under the following conditions, the KEY warning indication (red) is displayed after the push button start is pressed. This informs the driver that the push button start will not switch to ACC, even if it is pressed from off (page 7-63).
 - The key battery is dead.
 - The key is out of operational range.
 - The key is placed in areas where it is difficult for the system to detect the signal (page 3-8).
 - A key from another manufacturer similar to the key is in the operational range.

• **(Forced engine starting method)**
If the KEY warning indication (red) is displayed, or the push button start indicator light (amber) flashes, this could indicate that the engine may not start using the usual starting method (page 7-63). Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible. If this occurs, the engine can be force-started. Press and hold the push button start until the engine starts. Other procedures necessary for starting the engine, such as having the key in the cabin, and depressing the clutch pedal (manual transmission) or the brake pedal (automatic transmission) are required.

• When the engine is force-started, the KEY warning indication (red) remains displayed and the push button start indicator light (amber) remains flashing.

• **(Automatic transmission)**

When the selector lever is in the neutral (N) position, the push button start indicator light (green) does not turn on.

7. Press the push button start after the push button start indicator light (green) turns on.

Start/Stop Engine

NOTE

- After starting the engine, the push button start indicator light (amber) turns off and the ignition switches to the *ON* position.
- **(SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, SKYACTIV-G 2.5)**
After pressing the push button start and before the engine starts, the operation sound of the fuel pump motor from near the fuel tank can be heard, however, this does not indicate a malfunction.
- **(SKYACTIV-D 1.8)**
The starter does not rotate until the glow indicator light turns off.



- If the ignition is left switched *ON* for a long period of time without the engine running after the glow plugs are warmed up, the glow plugs may warm up again which will illuminate the glow indicator light.
- When starting the engine, do not release the clutch pedal (manual transmission) or the brake pedal (automatic transmission) until the glow indicator light in the instrument cluster turns off and the engine starts, after pressing the push button start.

• If the clutch pedal (manual transmission) or the brake pedal (automatic transmission) is released before the engine starts, depress the clutch pedal (manual transmission) or the brake pedal (automatic transmission) again and press the push button start to start the engine.

8. After starting the engine, let it idle for about 10 seconds (Prohibited in Germany).

NOTE

- **(Germany)**
Drive immediately after starting the engine. However do not use high engine speeds until reaching the operating temperature.
- **(SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, SKYACTIV-G 2.5)**
 - Whether the engine is cold or warm, it should be started without the use of the accelerator.
 - If the engine does not start the first time, refer to Starting a Flooded Engine under Emergency Starting. If the engine still does not start, have your vehicle inspected by an Authorised Mazda Repairer (page 7-47).

• **(SKYACTIV-D 1.8)**

If the ambient temperature is lower than about -10°C (14°F), the maximum engine speed may not be attained for about 3 minutes after the engine starts to protect the engine.

• **(Manual transmission vehicle with i-stop function)**

If the engine has stopped due to stalling, it can be restarted by depressing the clutch pedal within 3 seconds of the engine stopping.

The engine cannot be restarted even if the clutch pedal is depressed under the following conditions:

- *The driver's door is open.*
- *The driver's seat belt is unfastened.*
- *The clutch pedal is not released completely after the engine stalled.*
- *The clutch pedal is depressed with the engine not stopped completely.*

▼ **Engine Start Function When Key Battery is Dead**

CAUTION

When starting the engine by holding the transmitter over the push button start due to a dead key battery or a malfunctioning key, be careful not to allow the following, otherwise the signal from the key will not be received correctly and the engine may not start.

➤ *Metal parts of other keys or metal objects touch the key.*



➤ *Spare keys or keys for other vehicles equipped with an immobilizer system touch or come near the key.*



➤ *Devices for electronic purchases, or security passage touch or come near the key.*

If the engine cannot be started due to a dead key battery, the engine can be started using the following procedure:

1. Continue to depress the brake pedal firmly until the engine has completely started.

Start/Stop Engine


2. (Manual transmission)

Continue to depress the clutch pedal firmly until the engine has completely started.

(Automatic transmission)

Put the vehicle in park (P). If you must restart the engine while the vehicle is moving, shift into neutral (N).

3. Make sure that the push button start indication light (green) flashes.
4. Align the centre area of the emblem on the transmitter with the centre area of the push button start while the push button start indicator light (green) flashes.

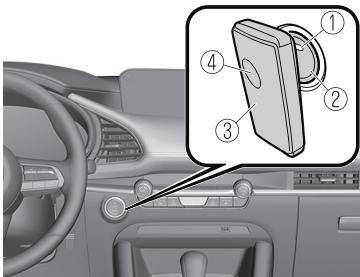

1. Indicator light
2. Push button start
3. Transmitter
4. Emblem

5. Make sure that the push button start indicator light (green) turns on.

6. Press the push button start to start the engine.

NOTE

- *The engine cannot be started unless the clutch pedal is fully depressed (manual transmission) or the brake pedal is fully depressed (automatic transmission).*
- *If there is a malfunction with the push button start function, the push button start indicator light (amber) flashes. In this case, the engine may start, however, have the vehicle checked at an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.*
- *If the push button start indicator light (green) does not illuminate, perform the operation from the beginning again. If it does not illuminate, have the vehicle checked at an expert repairer, we recommend an Authorised Mazda Repairer.*
- *To switch the ignition position without starting the engine, perform the following operations after the push button start indicator light (green) turns on.*
 1. *Release the clutch pedal (manual transmission) or brake pedal (automatic transmission).*

2. Press the push button start to switch the ignition position. The ignition switches in the order of ACC, ON, and off each time the push button start is pressed. To switch the ignition position again, perform the operation from the beginning.

▼ Emergency Operation for Starting the Engine

If the KEY warning indication (red) is displayed, or the push button start indicator light (amber) flashes, this could indicate that the engine may not start using the usual starting method. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible. If this occurs, the engine can be force-started. Press and hold the push button start until the engine starts. Other procedures necessary for starting the engine such as having the key in the cabin, and depressing the clutch pedal (manual transmission) or the brake pedal (automatic transmission) are required.

Turning the Engine Off

▼ Turning the Engine Off

WARNING

Do not stop the engine while the vehicle is moving:

Stopping the engine while the vehicle is moving for any reason other than in an emergency is dangerous. Stopping the engine while the vehicle is moving will result in reduced braking ability due to the loss of power braking, which could cause an accident and serious injury.

1. Stop the vehicle completely.
2. **(Manual transmission)**
Shift into neutral and set the parking brake.
(Automatic transmission)
Shift the selector lever to the P position and set the parking brake.
3. Press the push button start to turn off the engine. The ignition position is off.

CAUTION

➤ *When leaving the vehicle, make sure the push button start is off.*

➤ **(SKYACTIV-D 1.8)**

If the engine is started and stopped repeatedly before it warms up, the engine may speed up while the vehicle is stopped to clean the engine internally. Do not stop the engine until the engine returns to running at its normal speed.

Start/Stop Engine

NOTE

- The cooling fan in the engine compartment could turn on for a few minutes after the ignition is switched from ON to OFF, whether or not the A/C is on or off, to cool the engine compartment quickly.
- If the system detects that the remaining battery power of the key is low when the ignition is switched from ON to ACC or OFF, the following is indicated.
Replace with a new battery before the key becomes unusable.
Refer to Key Battery Replacement on page 6-41.
A message is indicated in the display of the instrument cluster.
Refer to KEY Warning Indication/Warning Light (Red) on page 7-63.
- **(Automatic transmission)**
If the engine is turned off while the selector lever is in a position other than P, the ignition switches to ACC.

▼ Emergency Engine Stop

Continuously pressing the push button start or quickly pressing it any number of times while the engine is running or the vehicle is being driven will turn the engine off immediately. The ignition switches to ACC.

i-stop*


▼ i-stop

The i-stop function automatically stops the engine when the vehicle is stopped at a traffic light or stuck in traffic, and then restarts the engine automatically to resume driving. The system provides improved fuel economy, reduced exhaust gas emissions, and eliminates idling noise while the engine is stopped.

Engine idle stopping and restarting

NOTE

- After parking the vehicle, make sure that the ignition is switched OFF. There is the possibility of the vehicle moving if the vehicle is parked while i-stop is operating.
- The i-stop indicator light (green) turns on under the following conditions:
 - When engine idling is stopped.

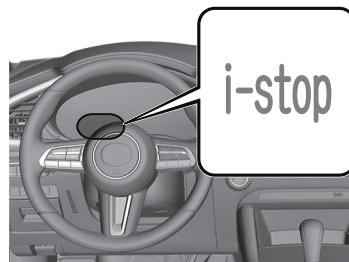

- The i-stop indicator light (green) turns off when the engine is restarted.

Manual transmission

Engine idle stopping and restarting while vehicle is stopped

(AUTOHOLD operation turned off)

1. Stop the vehicle by depressing the brake pedal and then the clutch pedal.

2. While depressing the clutch pedal, shift the shift lever to the neutral position. Engine idling stops after the clutch pedal is released.

(Without M Hybrid)

The engine restarts automatically when the clutch pedal is depressed.

(With M Hybrid)

Depress the clutch pedal and shift the shift lever to a position other than neutral.

The engine restarts automatically after releasing the brake pedal or starting to release the clutch pedal.

(When the vehicle is stopped by the AUTOHOLD function)

1. Bring the vehicle to a complete stop by depressing the brake pedal first and then the clutch pedal.
2. While depressing the clutch pedal, shift the shift lever to neutral. After releasing your foot from the clutch pedal, engine idling stops and continues to be stopped even if the brake pedal is released.

(Without M Hybrid)

The engine restarts automatically when the clutch pedal is depressed.

(With M Hybrid)

The engine restarts automatically when the clutch pedal is depressed with the shift lever in a position other than neutral.

Engine idle stopping and restarting while driving (With M Hybrid)

1. The gear shift indicator (GSI) displays N when engine idling can be stopped while the shift lever is in a position other than neutral.
2. Depress the brake pedal.
3. Shift the shift lever to the neutral position.

4. Engine idling is stopped after releasing the clutch pedal.
5. The engine restarts automatically when the clutch pedal is depressed.

Automatic transmission

Engine idle stopping and restarting while vehicle is stopped

(AUTOHOLD operation turned off and When not using Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)/Cruising & Traffic Support (CTS))

1. Engine idling stops when the brake pedal is depressed while the vehicle is driven (except for driving in the R or M position second gear fixed mode) and the vehicle is stopped.
2. The engine restarts automatically when the brake pedal is released with the selector lever in the D or M position (not in second gear fixed mode).
3. If the selector lever is in the N or P position, the engine does not restart when the brake pedal is released. The engine restarts when the brake pedal is depressed again or the selector lever is shifted to the D, M (not in second gear fixed mode) or the R position. (For the purposes of safety, always keep the brake pedal depressed when shifting the selector lever while engine idling is stopped.)

Start/Stop Engine

(When the vehicle is stopped by the MRCC with Stop & Go function/CTS stop hold control)

1. When the vehicle is stopped by the MRCC with Stop & Go function/CTS, engine idling stops and continues to be stopped without depressing the brake pedal.
2. When the accelerator pedal is depressed or the RES switch is operated while the vehicle is kept stopped by the MRCC with Stop & Go function/CTS, the engine automatically restarts. The engine restarts automatically when the accelerator pedal is depressed with the selector lever in the D/M position (not in second gear fixed mode).

(When the vehicle is stopped by the AUTOHOLD function)

1. When the brake pedal is depressed while the vehicle is being driven (except for driving in the R or M position second gear fixed mode) and the vehicle is brought to a stop, the i-stop function will operate and it continues to operate even if the brake is released.
2. The engine restarts automatically when the accelerator pedal is depressed with the selector lever in the D/M position (not in second gear fixed mode).

3. If the selector lever is in the N or P position, the engine does not restart when the brake pedal is released. The engine restarts when the brake pedal is depressed again or the selector lever is shifted to the D, M (not in second gear fixed mode) or the R position. (For the purposes of safety, always keep the brake pedal depressed when shifting the selector lever while engine idling is stopped.)

Engine idle stopping and restarting while driving (With M Hybrid)

(When not using MRCC with Stop & Go function/CTS)

1. Engine idling stops when the vehicle speed is about 20 km/h (12 mph) or slower after depressing the brake pedal while driving the vehicle (in D position).
2. The engine restarts automatically after releasing the brake pedal with the selector lever in the D position.

(When using MRCC with Stop & Go function/CTS)

1. Engine idling stops when the vehicle speed is about 10 km/h (6.2 mph) or slower after decelerating the vehicle a certain amount or more while in headway control using the MRCC with Stop & Go function/CTS.
2. If it is necessary to accelerate while in headway control using the MRCC with Stop & Go function/CTS, the engine restarts automatically.

Operation conditions

Under the following conditions, engine idling stops and the i-stop indicator light (green) turns on.

- **(SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, SKYACTIV-G 2.5)**

The engine is warmed up.

- **(SKYACTIV-D 1.8)**

The engine is not cold.

- The engine has been started and the vehicle is driven for a certain period.
- The engine is started with the bonnet closed.
- All doors, liftgate/boot lid, and bonnet are closed.
- The driver's seat belt is fastened.
- The air conditioner is not operating with the airflow mode in the  position.
- The temperature setting dial of the air conditioner is in a position other than maximum heating or maximum cooling (A/C ON) position.
- **(Automatic air-conditioning)**
The vehicle's interior temperature and the set temperature for the air conditioner are nearly the same.
- The i-stop warning light (amber) is not turned on/flashing.
- The keyless entry & push button start system functions are normal.

• (With M Hybrid)

- The temperature and charge condition of the M Hybrid battery is good.
- The Integrated Starter-Generator (ISG) is in good condition.

• (Without M Hybrid)

- The brake vacuum is sufficiently high.
- The battery is in good condition.

• (Manual transmission)

While vehicle is stopped

- The vehicle speed is 3 km/h (1.8 mph) or less.
- The shift lever is in the neutral position.
- The clutch pedal is not depressed.

While driving (With M Hybrid)

- The vehicle speed is 10 km/h (6.2 mph) or less.
- The gear shift indicator (GSI) displays N.
- The brake pedal is depressed.
- The shift lever is in the neutral position.
- The clutch pedal is not depressed.

Start/Stop Engine

- The steering wheel is almost in the straight-ahead position (idling may not stop even with the steering wheel in the straight-ahead position if force is applied to the steering wheel). Release the force applied to the steering wheel to stop engine idling).
- The vehicle is not driven on a slope.

• (Automatic transmission)

While vehicle is stopped

- The selector lever is in the D or M position (not in second gear fixed mode).
- The automatic transmission fluid has warmed up sufficiently.
- The automatic transmission fluid temperature is not abnormally high.
- The steering wheel is almost in the straight-ahead position (idling may not stop even with the steering wheel in the straight-ahead position if force is applied to the steering wheel). Release the force applied to the steering wheel to stop engine idling).
- The vehicle is stopped by depressing the brake pedal.
- The vehicle is not on a steep slope.
- The vehicle is not stopped suddenly.

While driving (With M Hybrid)

- The selector lever is in the D position (not in second gear fixed mode).
- The vehicle is driven at a vehicle speed of about 20 km/h (12 mph) or faster after engine idling stops while the vehicle is stopped.
- The vehicle is driven at a vehicle speed of about 30 km/h (19 mph) or faster after engine idling stops while driving.

- The vehicle is not driven in sport mode.
- The automatic transmission fluid has warmed up sufficiently.
- The automatic transmission fluid temperature is not abnormally high.
- The steering wheel is almost in the straight-ahead position (idling may not stop even with the steering wheel in the straight-ahead position if force is applied to the steering wheel). Release the force applied to the steering wheel to stop engine idling).
- The vehicle is stopped by depressing the brake pedal.
- The vehicle is not driven on a slope.
- The vehicle is not stopped suddenly.

NOTE

Under the following conditions, a period of time is required to stop engine idling

- *The battery power is depleted for some reasons such as the vehicle has not been driven for a long period.*
- *The ambient temperature is high or low.*
- *After the battery terminals are disconnected for some reasons such as for battery replacement.*

· **(SKYACTIV-X 2.0)**

After PM removal is performed by the petrol particulate filter.

· **(SKYACTIV-D 1.8)**

After PM removal is performed by the diesel particulate filter.

Engine does not restart

If the following operations are performed while the idling is stopped, the engine will not restart for safety reasons. In such cases, start the engine using the normal method.

· **(European model)**

- The bonnet is opened.
- The driver's seat belt is unfastened and the driver's door is opened.

· **(With M Hybrid)**

· **Automatic transmission**

The driver's seat belt is unfastened and the driver's door is opened.

· **Manual transmission**

The driver's door is opened.

Engine-stop period is short or time until next engine idle stop is long

- The ambient temperature is high or low.
- The battery power is depleted.
- Power consumption by the vehicle's electrical parts is high.

Engine restarts automatically while engine idling is stopped

Under the following conditions, the engine restarts automatically.

- The i-stop OFF switch is pressed until the beep sounds.

- The air conditioner is operated with the airflow mode in the  position.

- The temperature setting dial of the air conditioner is in the maximum heating or maximum cooling (A/C ON) position.

· **(Automatic air-conditioning)**

The cabin temperature is largely different from the set temperature of the air conditioner.

- The brakes are released slightly on a slope and the vehicle begins to move.

- Two minutes have elapsed since the idling was stopped.

- The battery power is depleted.

· **(Automatic transmission)**

Engine idling is stopped while the vehicle is stopped

- The accelerator pedal is depressed with the selector lever in the D or M (not in second gear fixed mode) position.

- The selector lever is shifted to the R position.

Start/Stop Engine

- The selector lever is shifted from N or P position to D or M (not in second gear fixed mode) position.
- The steering wheel is operated with the selector lever in the D or M (not in second gear fixed mode) position.
- The selector lever is in the M position and the second gear fixed mode is selected.
- The steering wheel is operated.

Engine idling is stopped while driving

- The selector lever is in a position other than the D position.
- The accelerator pedal is depressed.
- Sport mode is selected.
- The steering wheel is operated.

(Manual transmission)

- The shift lever is shifted to the R position.
- The brake pedal is depressed with the shift lever in the neutral position.
- The accelerator pedal is depressed.
- The shift lever is shifted to a position other than neutral with the brake pedal released and the clutch pedal depressed.
- The driver's seat belt is unfastened.
(With M Hybrid)

(Except European model)

- **(Manual transmission)**
With the shift lever in the neutral position, the driver's seat belt is unfastened, the driver's door is opened, or the bonnet is opened.

• (Automatic transmission)

With the selector lever in the P or N position, or the D/M range, the driver's seat belt is unfastened, the driver's door is opened, or the bonnet is opened.

Selector lever is operated while engine idling is stopped and the vehicle is stopped (automatic transmission)

If the selector lever is shifted from D or M (not in second gear fixed mode) position to N or P position while engine idling is stopped, the engine does not restart even when the brake pedal is released. The engine will restart if the brake pedal is depressed again or the selector lever is shifted to the D, M (not in second gear fixed mode), or R position. (For the purposes of safety, always keep the brake pedal depressed when shifting the selector lever.)


If the selector lever is shifted from the D or M (not in second gear fixed mode) to the N or P position, and the driver's seat belt is unfastened or the driver's door is opened, the engine restarts.

Battery terminals are disconnected

Engine idling may not stop right after the battery terminals are disconnected. In addition, if the battery is replaced, the i-stop functions must be verified. Consult an expert repairer; we recommend an Authorised Mazda Repairer.

▼ i-stop OFF Switch

When pressing the switch, the i-stop function stops and the i-stop OFF switch indicator light turns on. If the switch is pressed again, the i-stop function becomes operational and the i-stop OFF switch indicator light turns off.

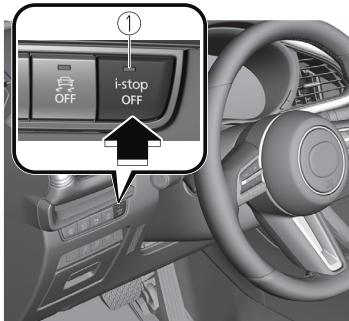

1. Indicator light

NOTE


If the engine is stopped with the i-stop function stopped, the i-stop function becomes operational again when the engine is started the next time.

▼ Vehicle Roll Prevention Function (Automatic transmission)


Vehicles with the i-stop function are equipped with a vehicle roll prevention function. This function prevents the vehicle from rolling, such as when releasing the brake pedal while on a slope under the following conditions:

- While engine idling is stopped (prevents the vehicle from rolling back)
- When the engine restarts after releasing the brake pedal (prevents the vehicle's sudden movement due to vehicle creep), sudden movement of the vehicle is prevented by controlling the brakes.

1. Release foot from brake pedal

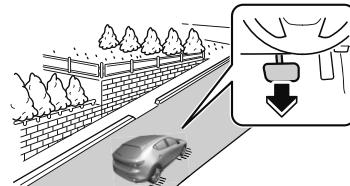


2. Vehicle brake force maintained

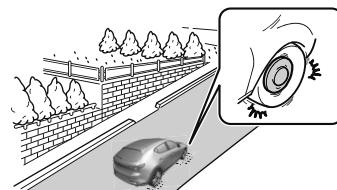


Start/Stop Engine

3. Engine restarted

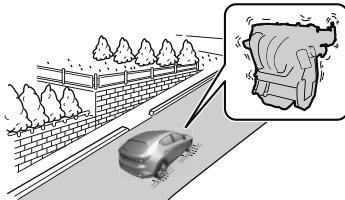

4. Acceleration

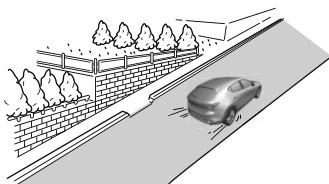

! WARNING

Do not rely completely on the vehicle roll prevention function.

- The vehicle roll prevention function is a supplementary function which operates for a maximum of 2 seconds after releasing the brake pedal and accelerating the vehicle from an engine idling stop condition. Over reliance on the system may result in an unexpected accident if the vehicle were to suddenly accelerate. Before starting to drive the vehicle, always confirm the safety of the surroundings and operate the selector lever, brake pedal, and accelerator pedal appropriately. Note that the vehicle may move suddenly depending on the vehicle's load or if it is towing something.
- Note that the vehicle may move suddenly after the vehicle roll prevention function is released while the vehicle is under the following conditions:
 - The selector lever is in the N position.

➤ If the selector lever is shifted to the N position and the brake pedal is released while the i-stop function is operating, the brake force is gradually released. To accelerate the vehicle, release the brake pedal after the engine restarts and shift the selector lever to a position other than the N position.

NOTE

- When the vehicle is stopped on a steep grade, the vehicle roll prevention function does not operate because engine idling is not stopped.
- The brake pedal response may change, sound may occur from the brakes, or the brake pedal could vibrate from the operation of the vehicle roll prevention function. However, this does not indicate a malfunction.

▼ i-stop Warning Light (Amber)/i-stop Indicator Light (Green)

To ensure safe and comfortable use of the vehicle, the i-stop system constantly monitors the driver's operations, the vehicle's interior and exterior environment, and the operational status of the vehicle, and uses the i-stop warning light (amber) and i-stop indicator light (green) to inform the driver of various cautions and warnings.

NOTE

On vehicles equipped with the centre display, the i-stop operation status is displayed in the fuel efficiency monitor display.

Refer to the Fuel Efficiency Monitor section in the *MZD Connect Owner's Manual*.

i-stop warning light (amber)



When the light is turned on

- The light turns on when the ignition is switched ON and turns off when the engine is started.

• (European model)

The light turns on if the following operations are performed while engine idling is stopped. In such cases, the engine does not restart automatically to ensure safety. Start the engine using the normal method.

- The bonnet is opened.
- The driver's seat belt is unfastened and the driver's door is opened.

• (Except European model)

• (Manual transmission)

A sound is activated when the door is opened while the engine idling is stopped with the shift lever in a position other than neutral. In this case, the engine does not restart automatically to ensure safety. Shift the shift lever to neutral and start the engine.

- If the i-stop warning light (amber) remains on while the engine is running, the battery performance may have decreased. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

A problem in the system may be indicated under the following conditions. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

- *The light does not turn on when the ignition is switched ON.*
- *The light continues to remain on while the engine is running.*

When the light is flashing

The light continues to flash if the system has a malfunction. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

i-stop indicator light (green)



When the light is turned on

- The light turns on while engine idling is stopped and turns off when the engine is restarted.

When the light is flashing

• (Manual transmission)

- The light flashes when the shift lever is shifted to a position other than the neutral while engine idling is stopped to notify the driver that engine idling is stopped.
- By depressing the clutch pedal, the engine restarts automatically and the light turns off.

Start/Stop Engine

· (European model)

The light flashes when the driver's door is opened while engine idling is stopped to notify the driver that engine idling is stopped. It turns off when the driver's door is closed.

Cylinder Deactivation*

▼ Cylinder Deactivation

The cylinder deactivation is a function designed to reduce fuel consumption and improve fuel economy by deactivating 2 out of the 4 cylinders while driving. The function constantly determines which is better for driving; 4 cylinders or 2 cylinders, regardless of the driver's operations, and it performs the switching automatically.


When the cylinder deactivation function does not operate

The cylinder deactivation function does not operate under the following conditions.

- The selector lever is in the P, N, or R position (automatic transmission), or 1st gear (manual transmission).
- The engine oil temperature or engine coolant temperature is low.
- After disconnecting the battery terminals for some reason, such as for battery replacement.

Instrument Cluster and Display


▼ Instrument Cluster and Display

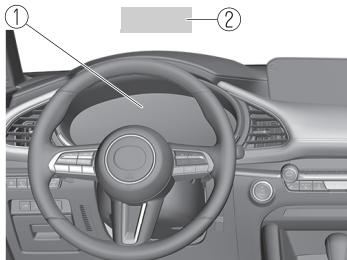

- ① Instrument Cluster..... page 4-23
② Active Driving Display..... page 4-42

Instrument Cluster

▼ Instrument Cluster

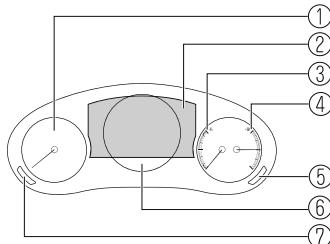

- ① Tachometer.....page 4-24
② Multi-information Display.....page 4-25
③ Engine Coolant Temperature Gauge.....page 4-28
④ Fuel Gauge.....page 4-28
⑤ Instrument Panel Illumination Switch.....page 4-29
⑥ Speedometer.....page 4-23
⑦ TRIP Switch.....page 4-27

▼ Speedometer

The speedometer indicates the speed of the vehicle.

Instrument Cluster and Display


▼ Tachometer

The tachometer shows engine speed in thousands of revolutions per minute (rpm).

CAUTION

Do not run the engine with the tachometer needle in the RED ZONE.

This may cause severe engine damage.

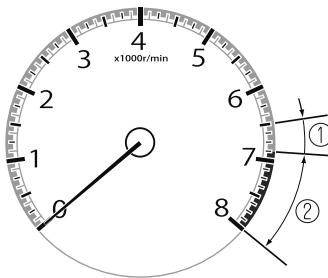


1. STRIPED ZONE*¹

2. RED ZONE*¹

*1 The range varies depending on the type of gauge.

NOTE

When the tachometer needle enters the STRIPED ZONE, this indicates to the driver that the gears should be shifted before entering the RED ZONE.

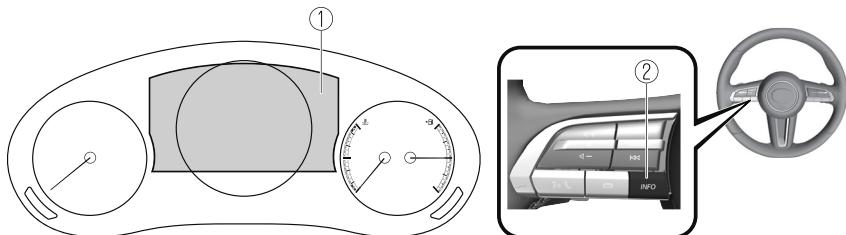▼ Multi-information Display

1. Multi-information Display
2. INFO switch


The multi-information display indicates the following information.

- Speedometer
- Odometer
- Trip meter
- Outside temperature
- Distance-to-empty
- Average fuel economy
- Current fuel economy
- Deceleration Regeneration Charge Display (M Hybrid)
- i-ACTIVSENSE Display
- Vehicle Speed Alarm
- Door-Ajar/Boot lid-Ajar/Liftgate-Ajar Warning Indication^{*1}
- Message Display

^{*1} Displayed when opening door/boot lid/liftgate.

Instrument Cluster and Display

The screen content changes each time the INFO switch is pressed.

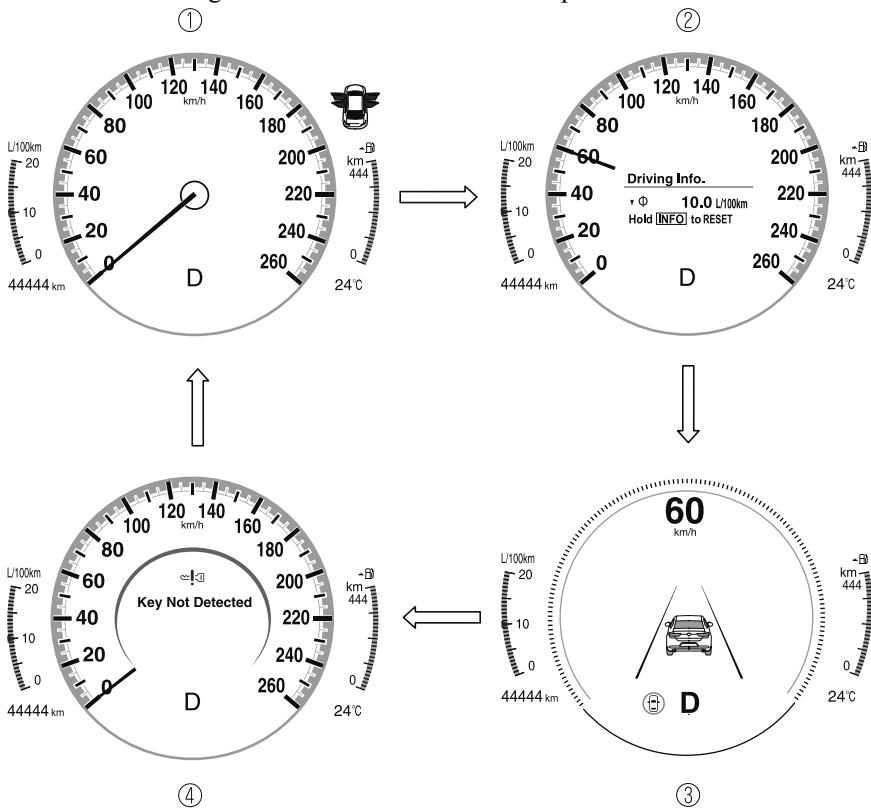

1. Basic display
2. Drive information display
3. i-ACTIVSENSE display
4. Message display*¹

*¹ Displayed only when a warning occurs.


The type of display for the fuel economy and the maximum driving distance can be changed.

Refer to the Settings section in the MZD Connect Owner's Manual.

Instrument Cluster and Display

▼ Odometer, Trip Meter and Trip Meter Selector

You can switch between the odometer and trip meter display using the TRIP switch.

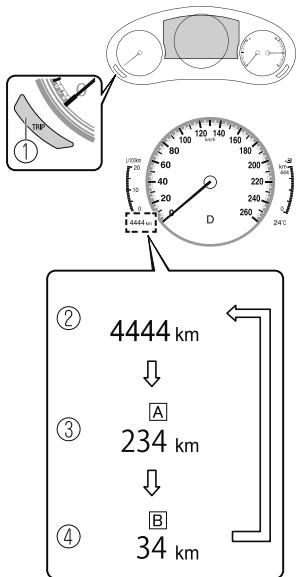

1. TRIP switch
2. Odometer display
3. Trip meter A display
4. Trip meter B display

Odometer

The odometer records the total distance the vehicle has been driven.

Trip meter

The driving distance for a specified interval is indicated. Two types (TRIP A, TRIP B) of interval distance and the average fuel economy for each can be measured.

For instance, trip meter A can record the distance from the point of origin, and trip meter B can record the distance from where the fuel tank is filled.

When trip meter A is selected, TRIP A will be displayed. When trip meter B is selected, TRIP B will be displayed.

The trip meter and average fuel economy can be reset by pressing the TRIP switch for 1.5 seconds or more while in each mode.


NOTE

- Only the trip meters record tenths of kilometres (miles).
- The trip record will be erased when:
 - The power supply is interrupted (blown fuse or the battery is disconnected).
 - The vehicle is driven over 9999.9 km (mile).

Instrument Cluster and Display

▼ Engine Coolant Temperature Gauge

Displays the engine coolant temperature. The blue range of the gauge indicates that the engine coolant temperature is low, and the red range of the gauge indicates that the engine coolant temperature is high and overheating.

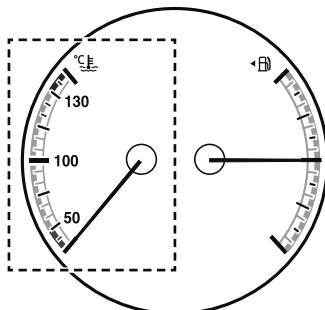

CAUTION

When the engine coolant temperature gauge needle is in the red range, the engine coolant temperature is extremely high. Drive slowly to reduce engine load. If the engine coolant temperature gauge needle is in the red range, there is the possibility of overheating. Park the vehicle in a safe place immediately and take appropriate measures.

Refer to Overheating on page 7-49.




NOTE

- If the engine or engine coolant temperature is high or low, the engine output may be restricted to protect the engine.*

- During normal driving, the engine coolant temperature stabilizes at 100 °C (210 °F) or less, and the gauge indicates a range lower than 100 °C (210 °F).*

▼ Fuel Gauge

The fuel gauge shows approximately how much fuel is remaining in the tank when the ignition is switched ON. We recommend keeping the tank over 1/4 full.

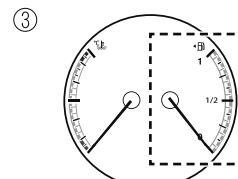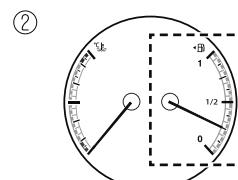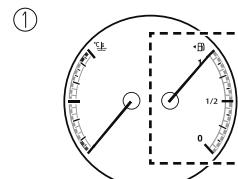

1. Full
2. 1/4 Full
3. Empty

If the low fuel warning light illuminates or the fuel level is very low, refuel as soon as possible.

If inconsistency in engine performance or stalling occurs due to low fuel level conditions, refuel the vehicle as soon as possible and add at least 10 L (2.7 US gal, 2.2 Imp gal) of fuel.

Instrument Cluster and Display

Refer to Low Fuel Warning Indication/Warning Light on page 7-67.

NOTE

- After refuelling, it may require some time for the indicator to stabilize. In addition, the indicator may deviate while driving on a slope or curve since the fuel moves in the tank.
- The direction of the arrow (↗) indicates that the fuel-filler flap is on the left side of the vehicle.

▼ Instrument Panel Illumination


When the lights are turned on with the ignition switched ON, the brightness of the instrument panel illumination is dimmed. However, when the light sensor detects that the surrounding area is bright such as when the lights are turned on in the daytime, the instrument panel illumination does not dim.

NOTE

- When the ignition is switched ON in the early evening or at dusk, the instrument panel illumination is dimmed for several seconds until the light sensor detects the brightness of the surrounding area, however, the dimming may cancel after the brightness is detected.
- When the lights are turned on, the lights-on indicator light in the instrument cluster turns on.
Refer to Headlights on page 4-60.

The brightness of the instrument panel and instrument panel illuminations can be adjusted by pressing the instrument panel illumination switch while the instrument panel illumination is dimmed.

- The brightness increases by pressing the + switch.
- The brightness decreases by pressing the - switch. If you press the - switch while the instrument cluster is at maximum dimness, a sound is activated to notify you that the current dimmer setting is at maximum dimness.

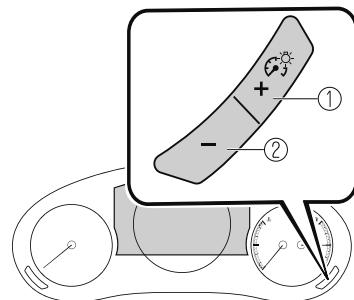

1. Bright
2. Dim

Function for cancelling illumination dimmer

The illumination dimmer can be cancelled by pressing the + switch while the instrument cluster is at maximum dimness and while the ignition is switched ON. If you press the + switch again while the illumination dimmer is cancelled, a sound is activated to notify you that it is cancelled. If the instrument cluster's visibility is reduced due to glare from surrounding brightness, cancel the illumination dimmer.


Instrument Cluster and Display

NOTE

- When the illumination dimmer is cancelled, the instrument cluster cannot be dimmed even if the lights are turned on.
- When the illumination dimmer is cancelled, the screen in the centre display switches to constant display of the daytime screen.

▼ Outside Temperature Display

When the ignition is switched ON, the outside temperature is displayed.

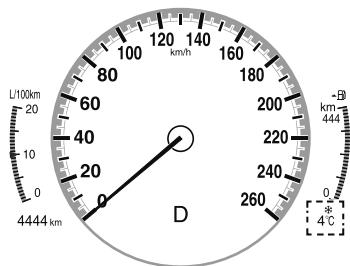

NOTE

- Under the following conditions, the outside temperature display may differ from the actual outside temperature depending on the surroundings and vehicle conditions:
 - Significantly cold or hot temperatures.
 - Sudden changes in outside temperature.
 - The vehicle is parked.
 - The vehicle is driven at low speeds.

Changing the Temperature Unit of the Outside Temperature Display

The outside temperature unit can be switched between Celsius and Fahrenheit. Settings can be changed by operating the centre display screen.

Refer to the Settings section in the **MZD Connect Owner's Manual**.

NOTE

When the temperature unit indicated in the outside temperature display is changed, the temperature unit indicated in the engine coolant gauge display changes in conjunction with it.

Outside Temperature Warning*

When the outside temperature is low, the indication flashes and a beep sound is heard to warn the driver of the possibility of icy roads.

If the outside temperature is lower than about 4 °C (39 °F), the outside temperature display and the mark flashes for about ten seconds and a beep sound is heard once.

NOTE


If the outside temperature is lower than -20 °C (-4 °F), the beep sound does not operate. However, the mark illuminates.

Instrument Cluster and Display

▼ Distance-to-empty

This displays the approximate distance you can travel on the remaining fuel based on the fuel economy.

The distance-to-empty will be calculated and displayed every second.

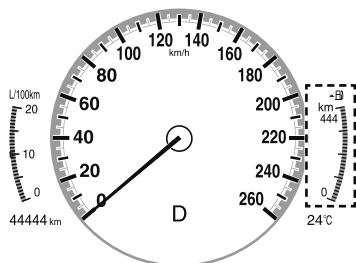


NOTE

- Even though the distance-to-empty display may indicate a sufficient amount of remaining driving distance before refuelling is required, refuel as soon as possible if the fuel level is very low or the low fuel warning light illuminates.
- The display will not change unless you add more than approximately 9 L (2.3 US gal, 1.9 Imp gal) of fuel.
- The distance-to-empty is the approximate remaining distance the vehicle can be driven until all the graduation marks in the fuel gauge indicating the remaining fuel supply disappear.
- If there is no past fuel economy information such as after first purchasing your vehicle or the information is deleted when the battery leads are disconnected, the actual distance-to-empty/range may differ from the amount indicated.

▼ Average Fuel Economy

The average fuel economy is calculated every minute from the total travelled distance on the trip meter and the total fuel consumption, and the average fuel economy for either drive information display is displayed.

The average fuel economy for TRIP A is indicated by a red arrow in the instantaneous fuel economy display.

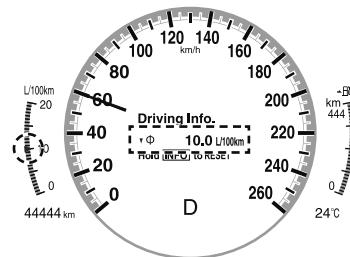


The average fuel economy and trip meters can be reset by pressing the INFO switch for 1.5 seconds or more while in each mode. After the data is cleared, the fuel consumption is recalculated and the - - - L/100 km (- - - mpg) for the 1 minute prior to it being displayed is indicated.

Instrument Cluster and Display


▼ Current Fuel Economy

This displays the current fuel economy by calculating the amount of fuel consumption and the distance travelled. The average fuel economy for TRIP A is indicated by a red arrow.

M Hybrid

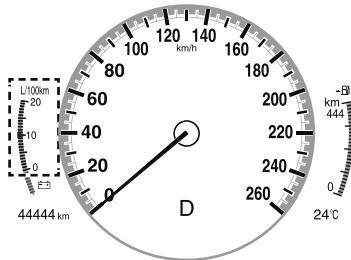

Except M Hybrid

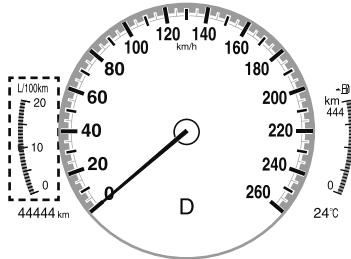


NOTE

Indicates the 0 position when the vehicle speed is about 5 km/h (3 mph) or slower.

▼ Deceleration Regeneration Charge Display (M Hybrid)

This displays the status of the charging produced by deceleration regeneration.

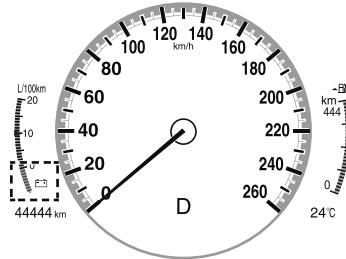


Refer to M Hybrid on page 4-93.

▼ Vehicle Speed Alarm

In this mode, the current setting for the vehicle speed alarm is displayed. You can change the vehicle speed setting at which the warning is triggered.

NOTE

The vehicle speed alarm display is activated at the same time the beep sound is heard.

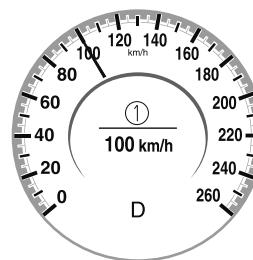

1. "Speed Alert" message is displayed

The vehicle speed alarm can be set using the centre display.


Refer to the Settings section in the **MZD Connect Owner's Manual**.

NOTE

Always set the vehicle speed according to the laws and regulations of the country/city in which the vehicle is driven. In addition, always verify the speed of the vehicle using the speedometer.

▼ i-ACTIVSENSE Display

Displays the system status.

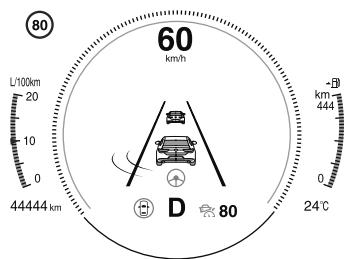

- Refer to Lane Departure Warning System (LDWS) on page 4-114.
- Refer to Blind Spot Monitoring (BSM) on page 4-119.
- Refer to Traffic Sign Recognition System (TSR) on page 4-124.
- Refer to Distance & Speed Alert (DSA) on page 4-129.
- Refer to Driver Attention Alert (DAA) on page 4-131.
- Refer to Driver Monitoring (DM) on page 4-132.
- Refer to Front Cross Traffic Alert (FCTA) on page 4-133.
- Refer to Mazda Radar Cruise Control (MRCC) on page 4-142.
- Refer to Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) on page 4-152.
- Refer to Cruising & Traffic Support (CTS) on page 4-164.
- Refer to Lane-keep Assist System (LAS) on page 4-178.

- Refer to Adjustable Speed Limiter (ASL) on page 4-179.
- Refer to Intelligent Speed Assistance (ISA) on page 4-185.
- Refer to Smart Brake Support (SBS) on page 4-192.
- Refer to Smart Brake Support [Rear] (SBS-R) on page 4-196.
- Refer to Smart Brake Support [Rear Crossing] (SBS-RC) on page 4-201.
- Refer to Cruise Control on page 4-248.

▼ Message Display

A message such as the system operation status, a malfunction, or an abnormality is indicated.

Warning/indicator light in instrument cluster turns on/flashes or symbol is indicated on display at same time as message

Check the information regarding the warning/indicator light or indicated symbol.

Refer to If a Warning Indication/Warning Lights on page 4-35.

Refer to If a Indication/Indicator Lights on page 4-37.

Message only is indicated on display


Follow the instructions indicated on the display. For the display content, refer to the next page.

Refer to If a Message Indicated on Multi-information Display on page 7-71.

Instrument Cluster and Display

▼ Warning/Indicator Lights

Instrument Cluster varies depending on model and specifications.

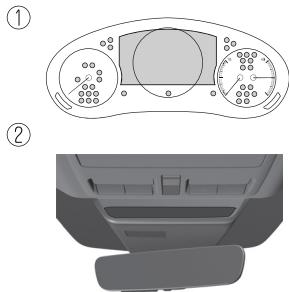

1. Instrument Cluster
2. Front Centre of Headliner

Warning lights will appear in any of the highlighted areas

Instrument Cluster and Display

▼ Warning Indication/Warning Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Warning	Refer to
	Brake System Warning Indication/Warning Light* ¹	7-56
	ABS Warning Indication/Warning Light* ¹	Electronic Brake Force Distribution System Warning 7-57
		ABS warning 7-59
	Charging System Warning Indication/Warning Light* ¹	7-57
	Engine Oil Warning Indication/Warning Light* ¹	7-58
	High Engine Coolant Temperature Warning Indication	7-58
	Power Steering Malfunction Indication/Indicator Light* ¹	7-59
	Master Warning Indication	7-59
	Brake Control System Warning Indication/Warning Light* ¹	7-60
	Brake Override Warning Indication	7-60
	Check Engine Indication/Light* ¹	7-60
	Petrol Particulate Filter Warning Indication/Warning Light* ¹ (SKYACTIV-X 2.0)	7-61
	Diesel Particulate Filter Warning Indication/Warning Light* ¹ (SKYACTIV-D 1.8)	7-62
	*i-stop Warning Indication/Warning Light* ¹	7-61

Instrument Cluster and Display

Signal	Warning	Refer to
	Automatic Transmission Warning Indication/Warning Light ¹	7-62
	AWD Warning Indication/Warning Light ¹	7-65
	Air Bag/Seat Belt Pretensioner System Warning Indication/Warning Light* ¹	7-63
	Tyre Pressure Monitoring System (TPMS) Warning Indication/Warning Light ¹	Flashing 7-66
		Turns on 7-69
	KEY Warning Indication/Warning Light* ¹	7-63
	High Beam Control System (HBC) Warning Indication/Warning Light ¹	7-66
	Adaptive LED Headlights (ALH) Warning Indication/Warning Light ¹	7-66
	i-ACTIVSENSE Warning Indication/Warning Light* ¹	7-67
	Exterior Light Warning Indication/Warning Light* ¹	7-67
	Low Fuel Warning Indication/Warning Light	7-67
	Engine Oil Level Warning Indication/Warning Light* ¹	7-68
	120 km/h Warning Light ¹	7-65
	Seat Belt Warning Indication/Warning Light (Front seat)	7-68
	Seat Belt Warning Light (Rear seat)	7-69
		7-69
	*Low Washer Fluid Level Warning Indication/Warning Light	7-69
	Door-Ajar Warning Indication	7-69

When Driving
Instrument Cluster and Display

Signal	Warning	Refer to
	*Boot lid-Ajar Warning Indication	7-69
	*Liftgate-Ajar Warning Indication	7-69
	Door-Ajar Warning Light	7-69

*1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains turned on, have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Indication/Indicator Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Indicator	Refer to
REAR  (Green)	Seat Belt Indicator Light (Rear seat)	2-26
PASSENGER AIRBAG  ON  OFF	*Front Passenger Air Bag Deactivation Indicator Light	2-52
	Security Indicator Light	Immobilizer System 3-46
		Theft-Deterrent System 3-48
		Malfunction 7-64
 (Green)	KEY Indicator Light	4-5
i-stop  (Green)	*i-stop Indicator Light	4-20
	Wrench Indication/Indicator Light*1	4-40
	Glow Indicator Light (SKYACTIV-D 1.8)	4-41

Instrument Cluster and Display

Signal	Indicator	Refer to
	*Shift Position Indication	4-51
	Lights-On Indicator Light	4-60
	Headlight High-Beam Indicator Light	Headlight High-Low Beam 4-63
		Flashing the Headlights 4-63
	*Rear Fog Light Indicator Light	4-65
	Direction Indicator/Hazard Warning Indicator Lights	Turn and Lane-Change Signals 4-66
		Hazard Warning Flasher 4-74
	Electric Parking Brake (EPB) Indication/Indicator Light* ^{1,2}	7-60
	AUTOHOLD Active Indicator Light* ¹	4-84
	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) indicator Light	4-159
	*Cruising & Traffic Support (CTS) Indicator Light	4-174
	TCS/DSC Indication/Indicator Light* ¹	Traction Control System (TCS) 4-89
		Dynamic Stability Control (DSC) 4-91
		Turns on 7-63
	DSC OFF Indicator Light* ¹	4-91
	*Select Mode Indicator Light	4-99

Instrument Cluster and Display

Signal	Indicator	Refer to
 (White)		
 (Green)	i-ACTIVSENSE Status Symbol (Warning/Risk Avoidance Support System)	4-104
 (Amber)		
 (Green)	*High Beam Control System (HBC) Indicator Light	4-108
	*Adaptive LED Headlights (ALH) Indicator Light	4-111
 (White)	*Mazda Radar Cruise Control (MRCC) Standby Indication	4-144
	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Standby Indication	4-154
	*Cruising & Traffic Support (CTS) Standby Indication	4-167
 (Green)	*Mazda Radar Cruise Control (MRCC) Set Indication	4-144
	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Set Indication	4-154
	*Cruising & Traffic Support (CTS) Set Indication	4-167
		
	Smart Brake Support (SBS) OFF Indicator Light ¹	Smart Brake Support (SBS) 4-193
		Smart Brake Support [Rear] (SBS-R) 4-197
		Smart Brake Support [Rear Crossing] (SBS-RC) 4-201

Instrument Cluster and Display

Signal	Indicator	Refer to
LIM (White)	*Intelligent Speed Assistance (ISA) Standby Indication	4-187
	*Adjustable Speed Limiter (ASL) Standby Indication	4-181
LIM (Green)	*Intelligent Speed Assistance (ISA) Set Indication	4-187
	*Adjustable Speed Limiter (ASL) Set Indication	4-181
 (White)	*Cruise Standby Indication	4-247
 (Green)	*Cruise Set Indication	4-247

- *1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains turned on, have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.
- *2 The light turns on continuously when the parking brake is applied.

▼ Wrench Indication/Indicator Light



The wrench indication/indicator light is displayed/turns on under the following conditions.

- When the preset maintenance period has arrived.
Refer to the Information section in the MZD Connect Owner's Manual.

CAUTION

- *When the maintenance period arrives, have your vehicle inspected by an Authorised Mazda Dealer as soon as possible. If maintenance is neglected, a decrease in vehicle performance may occur which could cause damage. Have your vehicle inspected before the maintenance period arrives.*
- *If the vehicle continues to be driven after the engine oil replacement period has passed, it could cause damage to the engine. Replace the engine oil before the maintenance period arrives.*

➤ (SKYACTIV-D 1.8)

Depending on the vehicle use conditions, engine oil replacement is required due to engine oil deterioration from fuel penetrating the engine oil. If "Excessive Oil Level. Have the Vehicle Inspected" is displayed on the multi-information display in the instrument cluster, have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

• (SKYACTIV-D 1.8)

- When fuel filter (sedimentor) draining is required. Consult an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

- The wrench indication/indicator light may display/turn on earlier than the preset period depending on vehicle usage conditions.
- Whenever the engine oil is replaced, a reset of the vehicle engine control unit is necessary.
Refer to the Information section in the MZD Connect Owner's Manual.

▼ Glow Indicator Light (SKYACTIV-D 1.8)



When the ignition is switched ON, the glow indicator light turns on. The glow indicator light turns off when preheating is finished.

A problem in the system might be indicated under the following conditions. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

- The glow indicator light does not turn on when the ignition is switched ON or it remains on.
- The glow indicator light is flashing.


NOTE

If the vehicle is left with the ignition switched ON without starting the engine and a long period of time has elapsed since preheating finished, the preheating may be performed again and the glow indicator light may turn on.

Instrument Cluster and Display

Active Driving Display

▼ Active Driving Display

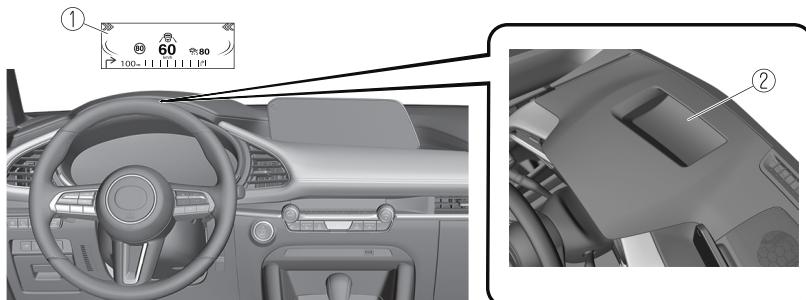

1. Display
2. Dust-proof sheet

⚠ WARNING

Always adjust the display brightness and position with the vehicle stopped:

Adjusting the display brightness and position while driving the vehicle is dangerous as doing so could distract your attention from the road ahead and lead to an accident.

⚠ CAUTION

- Do not place beverages near the dust-proof sheet of the active driving display. If water or other liquids are splashed on the dust-proof sheet, it could cause damage.
- Do not place objects or apply stickers above the active driving display or to the dust-proof sheet as they will cause interference.

NOTE

- Wearing polarized sunglasses will reduce the visibility of the active driving display due to the characteristics of the display.
- If the battery has been removed and re-installed or the battery voltage is low, the adjusted position may deviate.
- The display may be difficult to view or temporarily affected by weather conditions such as rain, snow, light, and temperature.
- If the audio system is removed, the active driving display cannot be operated.

Instrument Cluster and Display

The active driving display indicates the following information:

- Lane Departure Warning System (LDWS) Warnings
Lane Departure Warning System (LDWS) on page 4-114.
- Blind Spot Monitoring (BSM) Operation Conditions and Warnings
Refer to Blind Spot Monitoring (BSM) on page 4-115.
- Traffic Sign Recognition System (TSR) traffic signs and Warnings
Refer to Traffic Sign Recognition System (TSR) on page 4-121.
- Front Cross Traffic Alert (FCTA) Operation Conditions and Warnings
Refer to Front Cross Traffic Alert (FCTA) on page 4-133.
- Mazda Radar Cruise Control (MRCC) Operation Conditions and Warnings
Refer to Mazda Radar Cruise Control (MRCC) on page 4-140.
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
Operation Conditions and Warnings
Refer to Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) on page 4-149.
- Cruising & Traffic Support (CTS) Operation Conditions and Warnings
Refer to Cruising & Traffic Support (CTS) on page 4-160.
- Lane-keep Assist System (LAS) Warnings
Lane-keep Assist System (LAS) on page 4-176.
- Intelligent Speed Assistance (ISA) Operation Conditions and Warnings
Refer to Intelligent Speed Assistance (ISA) on page 4-185.
- Adjustable Speed Limiter (ASL) Operation Conditions and Warnings
Refer to Adjustable Speed Limiter (ASL) on page 4-179.
- Smart Brake Support (SBS) Operation Conditions and Warnings
Refer to Smart Brake Support (SBS) on page 4-191.
- Smart Brake Support [Rear] (SBS-R) Operation Conditions and Warnings
Refer to Smart Brake Support [Rear] (SBS-R) on page 4-193.
- Smart Brake Support [Rear Crossing] (SBS-RC) Operation Conditions and Warnings
Refer to Smart Brake Support [Rear Crossing] (SBS-RC) on page 4-197.
- Cruise Control Operation Conditions
Refer to Cruise Control on page 4-247.
- Navigation Guidance (vehicles with navigation system)
- Intersection Name (vehicles with navigation system)
- Street name (vehicles with navigation system)
- Lane Guidance (vehicles with navigation system)
- Speed limit indicator (vehicles with navigation system)
- Vehicle Speed

The active driving display settings can be changed or adjusted.

Refer to the Settings section in the MZD Connect Owner's Manual.


Instrument Cluster and Display

NOTE

- *The desired driving position (display position, brightness level, display information) can be called up after programming the position.
Refer to Driving Position Memory on page 2-11.*
- *The street name may not be displayed depending on the market and region.*

Manual Transmission Shift Pattern

▼ Manual Transmission Shift Pattern

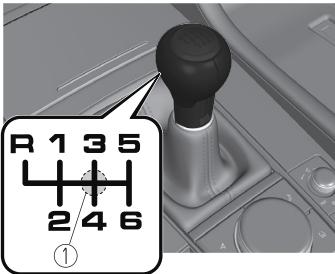


- Neutral position

The shift pattern of the transmission is conventional, as shown.

Depress the clutch pedal all the way down while shifting; then release it slowly.

Your vehicle is equipped with a device to prevent shifting to R (reverse) by mistake. Push the shift lever downward and shift to R.

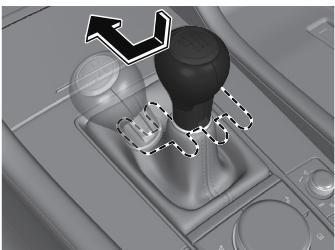

WARNING

Do not use sudden engine braking on slippery road surfaces or at high speeds:
Shifting down while driving on wet, snowy, or frozen roads, or while driving at high speeds causes sudden engine braking, which is dangerous. The sudden change in tyre speed could cause the tyres to skid. This could lead to loss of vehicle control and an accident.

Always leave the shift lever in 1 or R position and set the parking brake when leaving the vehicle unattended:

Otherwise the vehicle could move and cause an accident.

CAUTION

➤ Keep your foot off the clutch pedal except when shifting gears. Also, do not use the clutch to hold the vehicle on an upgrade. Riding the clutch will cause needless clutch wear and damage.

➤ Do not apply any excessive lateral force to the shift lever when changing from 5th to 4th gear. This could lead to the accidental selection of 2nd gear, which could result in damage to the transmission.

➤ Make sure the vehicle comes to a complete stop before shifting to R. Shifting to R while the vehicle is still moving may damage the transmission.


Manual Transmission Operation

NOTE

- If shifting to R is difficult, shift back into neutral, release the clutch pedal, and try again.
- **(With M Hybrid)**
The parking brake may be applied automatically to prevent the vehicle from moving if the engine stalls while the vehicle is on a slope.
- **(With i-stop function)**
If the engine has stopped due to stalling, it can be restarted by depressing the clutch pedal within 3 seconds of the engine stopping.
The engine cannot be restarted even if the clutch pedal is depressed under the following conditions:
 - The driver's door is open.
 - The driver's seat belt is unfastened.
 - The clutch pedal is not released completely after the engine stalled.
 - The clutch pedal is depressed with the engine not stopped completely.

▼ Gear Shift Indicator (GSI)

The GSI supports you to obtain optimum fuel economy and smooth driving. It displays the selected gear position in the instrument cluster as well as notifies the driver to change to the most suitable gear position corresponding to the actual driving condition.

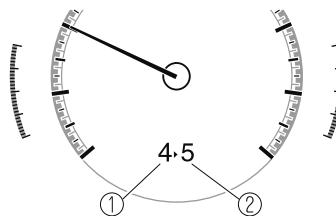

1. Selected gear position
2. Suitable gear position

Indication	Condition
Numeral	The selected gear position is displayed.
► and numeral	Shift up or down to the indicated gear position is recommended.

CAUTION

Do not rely solely on the shift-up/shift-down recommendations by indications. The actual driving situation might require shift operations different from indication. To avoid the risk of accidents, the road and traffic conditions have to be judged correctly by the driver before shifting.

Manual Transmission Operation

NOTE


The GSI turns off when the following operations are performed.

- The vehicle is stopped.*
- The vehicle is put in neutral.*
- The vehicle is driven in reverse.*
- The clutch is not fully engaged when accelerating from a stop.*
- The clutch pedal remains depressed for 2 seconds or longer while driving.*


Automatic Transmission

Automatic Transmission Controls

▼ Automatic Transmission Controls

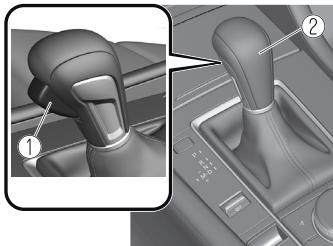

1. Lock-release button
2. Selector lever

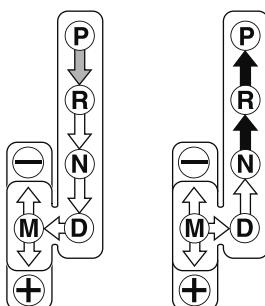

Indication	Various Lockouts
→	Indicates that you must depress the brake pedal and hold in the lock-release button to shift (The ignition must be switched ON).
→	Indicates the selector lever can be shifted freely into any position.
→	Indicates that you must hold in the lock-release button to shift.

NOTE

The Sport AT has an option that is not included in the traditional automatic transmission that gives the driver the option of selecting each gear instead of leaving it to the transmission to shift gears. Even if you intend to use the automatic transmission functions as a traditional automatic, you should also be aware that you can inadvertently shift into manual shift mode and an inappropriate gear may be retained as the vehicle speed increases. If you notice the engine speed going higher or hear the engine racing, confirm you have not accidentally slipped into manual shift mode (page 4-51).

Shift-Lock System

▼ Shift-Lock System

The shift-lock system prevents shifting out of P unless the brake pedal is depressed.

To shift from P:

1. Depress and hold the brake pedal.
2. Start the engine.
3. Press and hold the lock-release button.
4. Move the selector lever.

NOTE


- When the ignition is switched to ACC or the ignition is switched off, the selector lever cannot be shifted from P position.
- The ignition cannot be switched to OFF if the selector lever is not in P position.

▼ Shift-Lock Override

If the selector lever will not move from P position using the proper shift procedure, continue to hold down the brake pedal.

Type A

1. Remove the shift-lock override cover using a cloth-wrapped flat head screwdriver.
2. Insert a flat screwdriver and push it down.

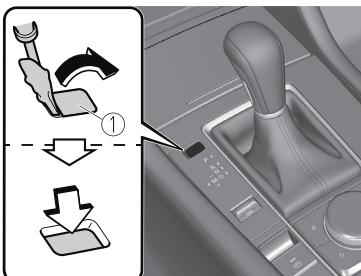

1. Cover

3. Press and hold the lock-release button.
4. Move the selector lever.

Take the vehicle to an expert repairer, we recommend an Authorised Mazda Repairer to have the system checked.

Type B

1. Press the lock-release button with the button pressed.



1. Button

2. Move the selector lever.

Take the vehicle to an expert repairer, we recommend an Authorised Mazda Repairer to have the system checked.

Automatic Transmission

Transmission Ranges

▼ Transmission Ranges

- The shift position indication in the instrument cluster illuminates. Refer to Shift Position Indication on page 4-51.
- Shift the selector lever to the P or N position to start the engine.

P (Park)

P locks the transmission and prevents the front wheels from rotating.



Always set the selector lever to P position and set the parking brake:

Only setting the selector lever to the P position without using the parking brake to hold the vehicle is dangerous. If P fails to hold, the vehicle could move and cause an accident.



- *Shifting into P, N or R while the vehicle is moving can damage your transmission.*
- *Shifting into a driving gear or reverse when the engine is running faster than idle can damage the transmission.*

R (Reverse)

In position R, the vehicle moves only backward. You must be at a complete stop before shifting to or from R, except under rare circumstances as explained in Rocking the Vehicle (page 3-54).

N (Neutral)

In N, the wheels and transmission are not locked. The vehicle will roll freely even on the slightest incline unless the parking brake or brakes are on.



If the engine is running faster than idle, do not shift from N or P into a driving gear:
It's dangerous to shift from N or P into a driving gear when the engine is running faster than idle. If this is done, the vehicle could move suddenly, causing an accident or serious injury.

Do not shift into N when driving the vehicle:

Shifting into N while driving is dangerous. Engine braking cannot be applied when decelerating which could lead to an accident or serious injury.



Do not shift into N when driving the vehicle. Doing so can cause transmission damage.

NOTE


Apply the parking brake or depress the brake pedal before moving the selector lever from N position to prevent the vehicle from moving unexpectedly.

D (Drive)

D is the normal driving position. From a stop, the transmission will automatically shift through a 6-gear sequence.

M (Manual)

M is the manual shift mode position. Gears can be shifted up or down by operating the selector lever. Refer to Manual Shift Mode on page 4-51.

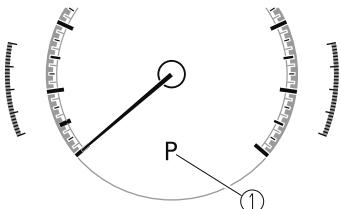▼ Shift Position Indication**1. Shift position indication**

The selector position is indicated when the ignition is switched ON.

Gear position indication

In manual shift mode, the "M" of the shift position indication illuminates and the numeral for the selected gear is displayed.

▼ Active Adaptive Shift (AAS)

Active Adaptive Shift (AAS) automatically controls the transmission shift points to best suit the road conditions and driver input. This improves driving feel. The transmission may switch to AAS mode when driving up and down slopes, cornering, driving at high elevations, or depressing the accelerator pedal quickly while the selector lever is in the D position. Depending on the road and driving conditions/vehicle operations, gear shifting could be delayed or not occur, however, this does not indicate a problem because the AAS mode will maintain the optimum gear position.

Manual Shift Mode**▼ Manual Shift Mode**

The manual shift mode gives you the feel of driving a manual transmission vehicle by allowing you to operate the selector lever manually. This allows you to control engine rpm and torque to the drive wheels much like a manual transmission when more control is desired.

To change to manual shift mode, shift the lever from D to M.


**NOTE**

- *Changing to manual shift mode while driving will not damage the transmission.*
- *If you change to manual shift mode when the vehicle is stopped, the gear will shift to M1.*
- *If you change to manual shift mode without depressing the accelerator pedal when driving in D range, 5th gear/6th gear; the gear will shift to M4/M5.*

To return to automatic shift mode, shift the lever from M to D.

Automatic Transmission

▼ Indicators

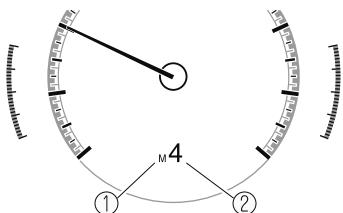

1. Manual shift mode indication
2. Gear position indication

Manual shift mode indication

In manual shift mode, the “M” of the shift position indication in the instrument panel illuminates.

Gear position indication

The numeral for the selected gear illuminates.

NOTE


- If the gears cannot be shifted down when driving at higher speeds, the gear position indication will flash twice to signal that the gears cannot be shifted down (to protect the transmission).
- If the automatic transmission fluid (ATF) temperature becomes too high, there is the possibility that the transmission will switch to automatic shift mode, cancelling manual shift mode and turning off the gear position indication illumination. This is a normal function to protect the AT. After the ATF temperature has decreased, the gear position indication illumination turns back on and driving in manual shift mode is restored.

• (SKYACTIV-D 1.8 (European model))

If the engine oil temperature becomes too high, there is the possibility that the transmission will switch to automatic shift mode, cancelling manual shift mode and turning off the gear position indicator illumination. After the engine oil temperature has decreased, the gear position indicator illumination turns back on and driving in manual shift mode is restored.

▼ Gear Shift Indicator (GSI)*

The GSI supports you to obtain optimum fuel economy and smooth driving. It displays the selected gear position in the instrument cluster as well as notifies the driver to change to the most suitable gear position corresponding to the actual driving condition.

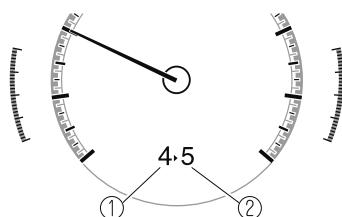

1. Selected gear position
2. Suitable gear position

Indication	Condition
Numeral	The selected gear position is displayed.
► and numeral	Shift up or down to the indicated gear position is recommended.

CAUTION

Do not rely solely on the shift-up/shift-down recommendations by indications. The actual driving situation might require shift operations different from indication. To avoid the risk of accidents, the road and traffic conditions have to be judged correctly by the driver before shifting.

NOTE

The GSI turns off when the following operations are performed.

- The vehicle is stopped.
- Manual shift mode is cancelled.

▼ Manually Shifting Up

You can shift gears up by operating the selector lever or the steering shift switches*.

M1 → M2 → M3 → M4 → M5 → M6


Using selector lever

To shift up to a higher gear, tap the selector lever back + once.



Using steering shift switch*

To shift up to a higher gear with the steering shift switches, pull the UP switch (+/OFF) toward you once with your fingers.

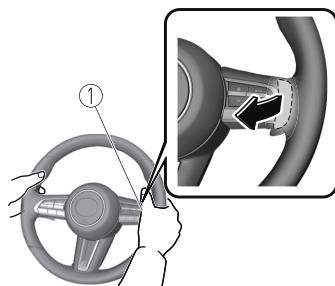

1. UP switch (+/OFF)

WARNING

Keep your hands on the steering wheel rim when using fingers on the steering shift switches:

Putting your hands inside the rim of the steering wheel when using the steering shift switches is dangerous. If the driver's air bag were to deploy in a collision, your hands could be impacted causing injury.

NOTE

- When driving slowly, the gears may not shift up.
- Do not drive the vehicle with the tachometer needle in the RED ZONE while in manual shift mode. In addition, manual shift mode switches to automatic shift mode while the accelerator pedal is completely depressed.

Automatic Transmission

This function is cancelled while the DSC is turned off. However, if the vehicle is continuously driven at a high rpm, the gears may automatically shift up to protect the engine.

- The steering shift switch can be used temporarily even if the selector lever is in the D position while driving. In addition, it returns to automatic shift mode when the UP switch (+/OFF) is pulled rearward for a sufficient amount of time.

▼ Manually Shifting Down

You can shift gears down by operating the selector lever or the steering shift switches*.

M6 → M5 → M4 → M3 → M2 → M1


Using selector lever

To shift down to a lower gear, tap the selector lever forward – once.



Using steering shift switch*

To shift down to a lower gear with the steering shift switches, pull the DOWN switch (–) toward you once with your fingers.

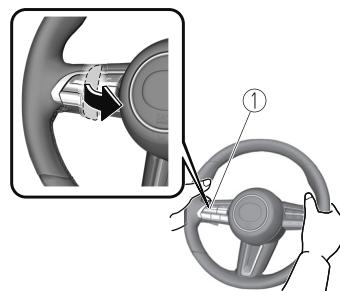

1. DOWN switch (–)

! WARNING

Do not use engine braking on slippery road surfaces or at high speeds:

Shifting down while driving on wet, snowy, or frozen roads, or while driving at high speeds causes sudden engine braking, which is dangerous. The sudden change in tyre speed could cause the tyres to skid. This could lead to loss of vehicle control and an accident.

Keep your hands on the steering wheel rim when using fingers on the steering shift switches:

Putting your hands inside the rim of the steering wheel when using the steering shift switches is dangerous. If the driver's air bag were to deploy in a collision, your hands could be impacted causing injury.

NOTE

- *When driving at high speeds, the gear may not shift down.*
- *During deceleration, the gear may automatically shift down depending on vehicle speed.*
- *When depressing the accelerator fully, the transmission will shift to a lower gear, depending on vehicle speed. However, the gears do not kickdown while the DSC is turned off.*

▼ Second Gear Fixed Mode


When the selector lever is moved back + while the vehicle speed is about 10 km/h (6.2 mph) or less, the transmission is set in the second gear fixed mode. The gear is fixed in second while in this mode for easier acceleration from a stop and driving on slippery roads such as snow-covered roads.

If the selector lever is moved back + or forward – while in the second gear fixed mode, the mode will be cancelled.

Automatic Transmission

▼ Shift Gear (Shifting) Speed Limit

For each gear position while in the manual mode, the speed limit is set as follows: When the selector lever is operated within the range of the speed limit, the gear is shifted.

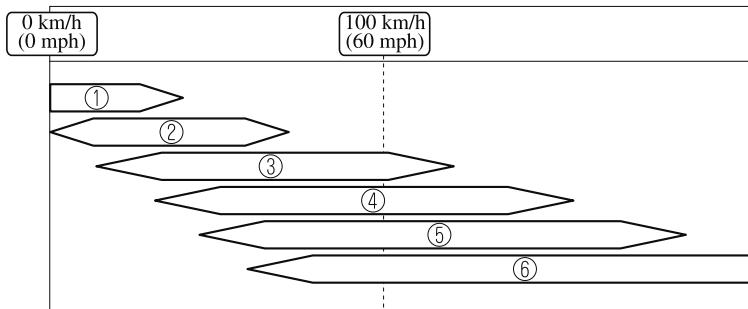

1. 1st
2. 2nd
3. 3rd
4. 4th
5. 5th
6. 6th

Shift up

The gear does not shift up while the vehicle speed is lower than the speed limit.

Shift down

The gear does not shift down while the vehicle speed exceeds the speed limit.

If the vehicle speed exceeds the speed limit and the gear does not shift down, the gear position indication flashes 2 times to notify the driver that the gear cannot be shifted.

Kickdown

When the accelerator pedal is depressed fully while driving, the gear shifts down. However, the gears do not kickdown while the DSC is turned off.

NOTE

The gear also shifts down using kickdown while in the second gear fixed mode.

Auto-shift down

The gear shifts down automatically depending on the vehicle speed during deceleration.

Automatic Transmission

NOTE

If the vehicle comes to a stop while in the second gear fixed mode, the gear remains in second.


Automatic Transmission

Direct Mode*

▼ Direct Mode

Direct mode can be used for temporarily switching gears by operating the steering shift switch while the vehicle is being driven with the selector lever in the D position.

While in direct mode, the D and M indication illuminate and the gear position in use is illuminated.

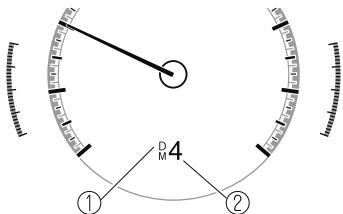

1. Direct mode indication
2. Gear position indication

Direct mode is cancelled (released) under the following conditions.

- The UP switch (+/OFF) is pulled rearward for a certain amount of time or longer.
- The vehicle is driven for a certain amount of time or longer (time differs depending on the driving conditions while operating).
- The vehicle is stopped or moving at a slow speed.

NOTE

Shifting up and down while in direct mode may not be possible depending on the vehicle speed. In addition, because direct mode is cancelled (released) depending on the rate of acceleration or if the accelerator is fully depressed, use of the manual shift mode is recommended if you need to drive the vehicle in a particular gear for long periods.

Driving Tips

▼ Driving Tips



WARNING

Do not let the vehicle move in a direction opposite to the direction selected by the selector lever:

Do not let the vehicle move backward with the selector lever in a forward position, or do not let the vehicle move forward with the selector lever in the reverse position. Otherwise, the engine may stop, causing the loss of the power brake and power steering functions, and make it difficult to control the vehicle which could result in an accident.

Passing

For extra power when passing another vehicle or climbing steep grades, depress the accelerator fully. The transmission will shift to a lower gear, depending on vehicle speed.

NOTE

- The accelerator pedal may initially feel heavy as it is being depressed, then feel lighter as it is depressed further. This change in pedal force aids the engine control system in determining how much the accelerator pedal has been depressed for performing kickdown, and functions to control whether or not kickdown should be performed.*

• While the selector lever is in the M position and the DSC is turned off, manual shift mode does not switch to automatic shift mode even if the accelerator pedal is completely depressed. Operate the selector lever.

Climbing steep grades from a stop

To climb a steep grade from a stopped position:

1. Depress the brake pedal.
2. Shift to D or M1, depending on the load weight and grade steepness.
3. Release the brake pedal while gradually accelerating.

Descending steep grades

When descending a steep grade, shift to lower gears, depending on load weight and grade steepness. Descend slowly, using the brakes only occasionally to prevent them from overheating.

Switches and Controls

Lighting Control

▼ Headlights

Turn the headlight switch to turn the headlights and other exterior lights on or off.


When the tail lights, position lights, and the number plate lights are turned on, the lights-on indicator light in the instrument cluster turns on.



NOTE

- To prevent discharging the battery, do not leave the lights on while the engine is off unless safety requires them.
- Headlights do not blind drivers approaching in the opposite direction no matter what side of the road you must drive your vehicle (left-hand or right-hand traffic). Therefore, it is not necessary to adjust the optical axis of the headlights when switching temporarily to driving on the opposite side of the road (left-hand or right-hand traffic).

Without auto-light control

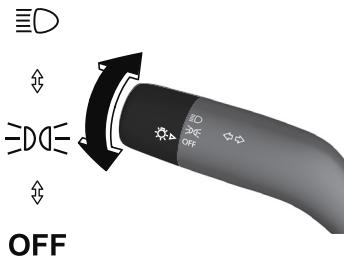

Switch Position	OFF	☰	☰
Headlights	Off	Off	On
Running lights*	On ^{*1}	On ^{*1*2}	Off
Tail lights			
Position lights	Off	On	On
Number plate lights			

*1 When the light switch is switched to a different position from the OFF, **☰** position while the vehicle is stopped, the running lights turn off. When starting to drive the vehicle, the running lights turn on again.

- *2 When the light switch is switched to the OFF position, and then to the --- position again, the running lights turn off directly after starting the engine. The running lights turn on when you begin driving the vehicle.

With auto-light control



Switch Position	OFF ^{*1}	AUTO		---		
		Surroundings are bright ^{*2}	Surroundings are dark ^{*3}	Surroundings are bright ^{*2}	Surroundings are dark ^{*3}	
Headlights	Off	Off	On	Off	On ^{*4*5}	On
Running lights*	Off	On ^{*6}	Off	On ^{*7}	Off	Off
Tail lights Position lights Number plate lights	Off	Off	On	On	On	On

- *1 When the light switch is switched to OFF while the vehicle is stopped, the lights turn off. The light switch returns automatically to the AUTO position and the headlights change to AUTO operation when you start driving the vehicle.
- *2 The level of brightness around the vehicle is of a sufficient level.
- *3 The level of brightness around the vehicle is of an insufficient level.
- *4 If the running lights are disabled or without the running lights, the headlights turn off directly after starting the engine. The headlights turn on when you begin driving the vehicle.
- *5 When the light switch is switched from the OFF, AUTO, or position to the --- position while the vehicle is stopped, the headlights turn off. When starting to drive the vehicle, the headlights turn on again.
- *6 When the light switch is switched to a different position from the AUTO position while the vehicle is stopped, the running lights turn off. When starting to drive the vehicle, the running lights turn on again.
- *7 If one of the following operations is done from the --- position while the vehicle is stopped, the running lights turn off.
 - Switch the light switch to the OFF position.
 - Switch the light switch to the AUTO position, and then to the --- position again.
 - Switch the light switch to the position.

When starting to drive the vehicle, the running lights turn on again.

NOTE

The running lights can be disabled using the personalisation features (page 4-64).

Switches and Controls

Auto-light control

When the headlight switch is in the AUTO,  position and the ignition is switched ON, the light sensor senses the surrounding lightness or darkness and automatically turns the headlights and other exterior lights on or off.

CAUTION

➤ *Do not shade the light sensor by adhering a sticker or a label on the windscreen. Otherwise the light sensor will not operate correctly.*




➤ *The light sensor also works as a rain sensor for the auto-wiper control. Keep hands and scrapers clear of the windscreen when the wiper lever is in the AUTO position and the ignition is switched ON as fingers could be pinched or the wipers and wiper blades could be damaged when the wipers activate automatically. If you are going to clean the windscreen, be sure the wipers are turned off completely when it is particularly tempting to leave the engine running. This is particularly important when clearing ice and snow.*

NOTE

- *The headlights and other exterior lights may not turn off immediately even if the surrounding area becomes well-lit because the light sensor determines that it is night time if the surrounding area is continuously dark for several minutes such as inside long tunnels, traffic jams inside tunnels, or in indoor parking lots.*
- *The sensitivity of the auto-light control may be changed.
Refer to the Settings section in the MZD Connect Owner's Manual.*

▼ Headlight High-Low Beam

The headlights switch between high and low beams by moving the lever forward or backward.

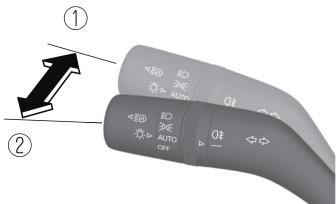

1. High beam
2. Low beam

When the headlight high-beams are on, the headlight high-beam indicator light is turned on.



▼ Flashing the Headlights

The headlights can be flashed with the ignition switched to ON.

To flash the headlights, pull the lever fully towards you (the headlight switch does not need to be on).



1. OFF
2. Headlight flashing

The headlight high-beam indicator light in the instrument cluster illuminates simultaneously. The lever will return to the normal position when released.



▼ Coming Home Light

The coming home light turns on the headlights (low beams) when the lever is operated.

To turn on the lights

When the lever is pulled with the ignition switched to ACC or OFF, the low beam headlights turn on.

The headlights turn off after a certain period of time has elapsed after all of the doors are closed.



NOTE

- The time until the headlights turn off after all of the doors are closed can be changed.

Refer to the Settings section in the *MZD Connect Owner's Manual*.

- If no operations are done for 3 minutes after the lever is pulled, the headlights turn off.

- The headlights turn off if the lever is pulled again while the headlights are illuminated.

Switches and Controls


▼ Leaving Home Light

The leaving home light turns on the lights when the transmitter unlock button is pressed while away from the vehicle. The following lights turn on when the leaving home light is operated.
Low beams, Position lights, Tail lights, Number plate lights.

To turn on the lights

When the ignition switch and the headlight switch are in the following conditions, the headlights will illuminate when the transmitter unlock button is pressed and the vehicle receives the transmitter signal. The headlights turn off after a certain period of time has elapsed (30 seconds).

- Ignition switch: off
- Headlight switch: AUTO, , or 

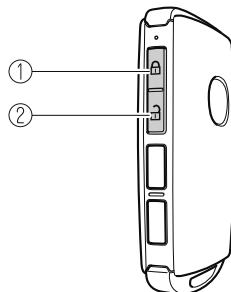

1. Lock button
2. Unlock button

NOTE

- Operation of the leaving home light can be turned on or off.

Refer to the Settings section in the MZD Connect Owner's Manual.

- When the transmitter lock button is pressed and the vehicle receives the transmitter signal, the headlights turn off.
- When the headlight switch is turned to the OFF position, the headlights turn off.

▼ Headlight Levelling

The number of passengers and weight of cargo in the luggage compartment change the angle of the headlights.

The angle of the headlights will be automatically adjusted when turning on the headlights.

A system malfunction or operation conditions are indicated by a warning.

Refer to Exterior Light Warning Indication/Warning Light on page 7-67.

▼ Running Lights*

Some countries require moving vehicles to have their lights on (running lights) during the daytime.

The running lights turn on or off automatically.

NOTE

(Except countries prohibited by law)

The running lights can be deactivated.

Refer to the Settings section in the MZD Connect Owner's Manual.

Rear Fog Light*

▼ Rear Fog Light

The rear fog light can be used when the ignition is switched ON.
The rear fog light helps your vehicle to be seen.
The headlights must be turned on to turn on the rear fog light.

To turn the rear fog light on, rotate the fog light switch to the  position (the fog light switch returns to its original position automatically).



1. Fog light switch

The rear fog light indicator light in the instrument cluster illuminates while the rear fog light is on.



To turn the rear fog light off, do any of the following:

- Rotate the fog light switch to the  position again (the fog light switch returns to its original position automatically).
- Turn the headlight switch to the OFF position.

The rear fog light indicator light in the instrument cluster goes off when the rear fog light is turned off.

NOTE

While the position lights are turned on, the rear fog light remains on even if the headlights are turned off. The rear fog light turns off when the position lights turn off.

Switches and Controls

Turn and Lane-Change Signals


▼ Turn and Lane-Change Signals

The ignition must be switched ON to use the turn and lane-change signals.

▼ Direction Indicators

Move the signal lever down (for a left turn) or up (for a right turn) to the stop position. The signal will self-cancel after the turn is completed.

If the indicator light continues to flash after a turn, manually return the lever to its original position.

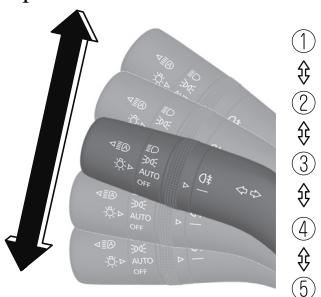

1. Right turn
2. Right lane change
3. OFF
4. Left lane change
5. Left turn

The direction indicators in the instrument cluster flash according to the operation of the direction indicator lever to show which signal is working.



NOTE

- *There may be a problem with the direction indicator lights if they do not flash but remain turned on, or they flash abnormally. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.*
- *A personalised function is available to change the turn indicator sound volume. Refer to the Settings section in the MZD Connect Owner's Manual.*

▼ Lane-Change Signals

Move the lever halfway toward the direction of the lane change—until the indicator flashes—and hold it there. It will return to the off position when released.

▼ Three-Flash Turn Signal

After releasing the direction indicator lever from the halfway point, the direction indicator flashes 3 times. The operation can be cancelled by moving the lever in the direction opposite to which it was operated.

NOTE

The three-flash turn signal function can be switched to on/off using the personalisation function. Refer to the Settings section in the MZD Connect Owner's Manual.

Windscreen Wipers and Washer

▼ Windscreen Wipers and Washer

The ignition must be switched ON to use the wipers.

WARNING

Use only windscreen washer fluid or plain water in the reservoir:

Using radiator antifreeze as washer fluid is dangerous. If sprayed on the windscreen, it will dirty the windscreen, affect your visibility, and could result in an accident.

Only use windscreen washer fluid mixed with anti-freeze protection in freezing weather conditions:

Using windscreen washer fluid without anti-freeze protection in freezing weather conditions is dangerous as it could freeze on the windscreen and block your vision which could cause an accident. In addition, make sure the windscreen is sufficiently warmed using the defroster before spraying the washer fluid.

Switches and Controls


NOTE

If the windscreen wipers are operated under cold weather conditions or during snowfall, they could stop due to accumulated snow on the windscreen. If the windscreen wipers stop due to accumulated snow on the windscreen, park the vehicle in a safe place, turn the wiper switch off, and then remove the accumulated snow. If the wiper switch is turned to another position other than OFF, the wipers will operate. If the wipers do not operate even though the wiper switch is turned to a position other than OFF, consult an expert repairer; we recommend an Authorised Mazda Repairer as soon as possible.

▼ Windscreen Wipers

Turn the wipers on by pressing the lever up or down.

With intermittent wiper

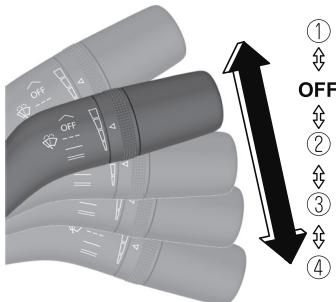


Switch Position	Wiper operation
①	Operation while pulling up lever
OFF	Stop
②	Intermittent
③	Low speed
④	High speed

Variable-speed intermittent wipers


Set the lever to the intermittent position and choose the interval timing by rotating the switch.

Rotate the switch upward to shorten the interval time of the wiper operation, and rotate the switch downward to lengthen it.

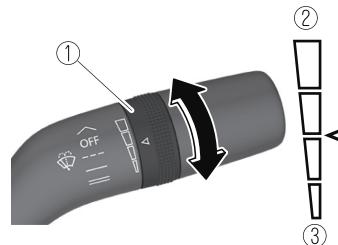

1. Switch
2. Shorten
3. Lengthen

With auto-wiper control

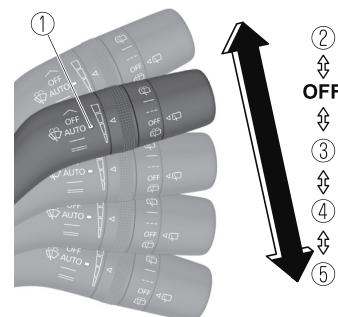

1. Indicator light

Switch Position			Wiper operation
No.	Type A	Type B	
②		MIST	Operation while pulling up lever
			OFF
③	AUTO* ¹	AUTO* ¹	Auto control

Switch Position		Wiper operation	
No.	Type A	Type B	
(4)	—	LO	Low speed
(5)	==	HI	High speed


*1 When the wiper lever is switched to the AUTO position, the indicator light turns on.

Auto-wiper control*

When the wiper lever is in the AUTO position, the rain sensor senses the amount of rainfall on the windscreen and turns the wipers on or off automatically (off—intermittent—low speed—high speed).

The sensitivity of the rain sensor can be adjusted by turning the switch on the wiper lever.

From the centre position (normal), rotate the switch upward for higher sensitivity (faster response) or rotate it downward for less sensitivity (slower response).

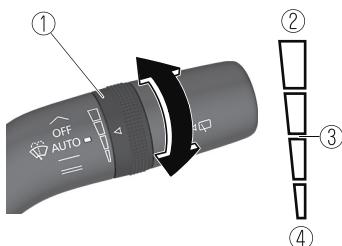

1. Switch
2. Higher sensitivity
3. Centre position
4. Less sensitivity

CAUTION

➤ *Do not shade the rain sensor by adhering a sticker or a label on the windscreen. Otherwise the rain sensor will not operate correctly.*



➤ *When the wiper lever is in the AUTO position and the ignition is switched ON, the wipers may move automatically in the following cases:*

- *If the windscreens above the rain sensor is touched or wiped with a cloth.*
- *If the windscreens is struck with a hand or other object from either outside or inside the vehicle.*

Keep hands and scrapers clear of the windscreens when the wiper lever is in the AUTO position and the ignition is switched ON as fingers could be pinched or the wipers and wiper blades damaged when the wipers activate automatically. If you are going to clean the windscreens, be sure the wipers are turned off completely (when it is most likely that the engine is left running) this is particularly important when clearing ice and snow.

Switches and Controls

NOTE

- Switching the auto-wiper lever from the OFF to the AUTO position while driving activates the windscreens wipers once, after which they operate according to the rainfall amount.
- The auto-wiper control may not operate when the rain sensor temperature is about -10°C (14°F) or lower, or about 85°C (185°F) or higher.
- If the windscreens is coated with water repellent, the rain sensor may not be able to sense the amount of rainfall correctly and the auto-wiper control may not operate properly.
- If dirt or foreign matter (such as ice or matter containing salt water) adheres to the windscreens above the rain sensor, or if the windscreens is iced, it could cause the wipers to move automatically. However, if the wipers cannot remove this ice, dirt or foreign matter, the auto-wiper control will stop operation. In this case, set the wiper lever to the low speed position or high speed position for manual operation, or remove the ice, dirt or foreign matter by hand to restore the auto-wiper operation.
- If the auto-wiper lever is left in the AUTO position, the wipers could operate automatically from the effect of strong light sources, electromagnetic waves, or infrared light because the rain sensor uses an optical sensor. It is recommended that the auto-wiper lever be switched to the OFF position other than when driving the vehicle under rainy conditions.
- The auto-wiper control functions can be turned off.

Refer to the Settings section in the MZD Connect Owner's Manual.

▼ Windscreen Washer

Pull the wiper lever toward you to spray washer fluid and operate the windscreen wipers several times. The washer fluid is sprayed only while the windscreen wipers move out of their stowed positions to the point where they start reversing back.



1. OFF
2. Washer

NOTE

- If the windscreen washer is turned on when the windscreen wipers are not operating, the windscreen wipers operate a few times.
- If you pull the wiper lever while the windscreen wipers are reversing back to their stowed positions, the next time the washer fluid is sprayed is during the next cycle.


If the washer does not work, inspect the fluid level (page 6-32). If the fluid level is normal, consult an expert repairer, we recommend an Authorised Mazda Repairer.

Rear Window Wiper and Washer*

▼ Rear Window Wiper and Washer

The ignition must be switched ON to use the wiper.

▼ Rear Window Wiper

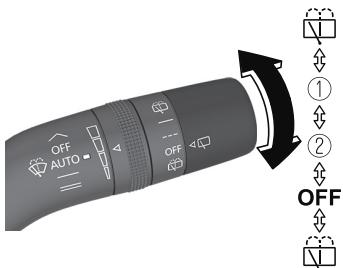

Turn the wiper on by turning the rear wiper/washer switch.

Switch Position	Wiper operation		
	Spray washer fluid and operate the rear wiper		
①	Type A	Type B	Normal
			ON
②	Type A	Type B	Intermittent
	Stop		
	Spray washer fluid and operate the rear wiper		

▼ Rear Window Washer

To spray washer fluid, turn the rear wiper/washer switch to either of the position. After the switch is released, the washer will stop.

NOTE

While the windscreen washers are operating (from the time the wiper lever is pulled until the washer fluid stops spraying), the rear window washer does not spray washer fluid even if you operate the switch.

If the washer does not work, inspect the fluid level (page 6-32). If the fluid level is normal and the washer still does not work, consult an expert repairer, we recommend an Authorised Mazda Repairer.

Switches and Controls

Headlight Washer*

▼ Headlight Washer

The engine must be started and the headlights must be turned on.

If you want to operate headlight washers, double flick the wiper lever.



1. OFF
2. Washer

NOTE

- When the windscreen washer is operated for the first time after turning on the headlights, the headlight washers operate automatically.
- If air enters the headlight washer fluid pipe under conditions such as when the vehicle is brand-new or after an empty washer tank is replenished with washer fluid, washer fluid will not spray even when the wiper lever is operated. If this occurs, perform the following procedure:
 1. Start the engine.
 2. Turn on the headlights.
 3. Double flick the wiper lever several times until the washer fluid sprays.

Rear Window Defogger


▼ Rear Window Defogger

The rear window defogger clears fog from the rear window.

The ignition must be switched ON to use the defogger.

Press the switch to turn on the rear window defogger. The rear window defogger operates for about 15 minutes and then turns off automatically. The indicator light illuminates when the defogger is operating.

To turn off the rear window defogger before the 15 minutes has elapsed, press the switch again.

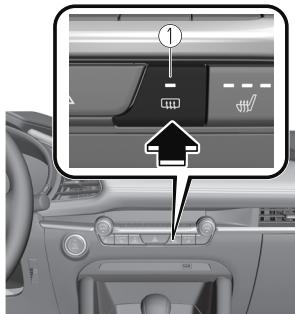

1. Indicator light

CAUTION

- Do not use sharp instruments or window cleaners with abrasives to clean the inside of the rear window surface. They may damage the defogger grid inside the window.


NOTE

- This defogger is not designed for melting snow. If there is an accumulation of snow on the rear window, remove it before using the defogger.
- The rear window defogger operation time can be changed from 15 minutes to continuous operation. When the operation time has been switched to continuous operation, by pressing the switch, the rear window defogger will continue to operate until the ignition is switched OFF.
Refer to the Settings section in the MZD Connect Owner's Manual.


▼ Windscreen Wiper De-icer*

The thermal filaments at the following positions heat up and facilitate the removal of snow accumulated on the windscreen.

Left-Hand Drive Model

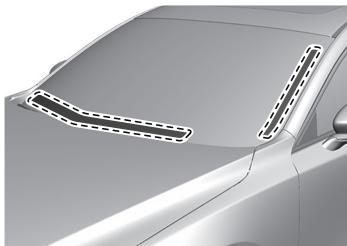


Right-Hand Drive Model

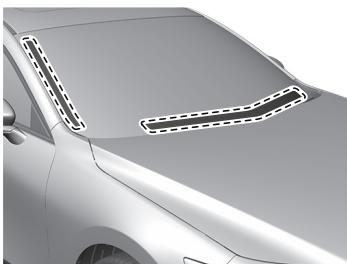

The windscreen wiper de-icer operates in conjunction with the rear window defogger.

To turn on the windscreen wiper de-icer, switch the ignition ON and press the rear window defogger switch (page 4-72).

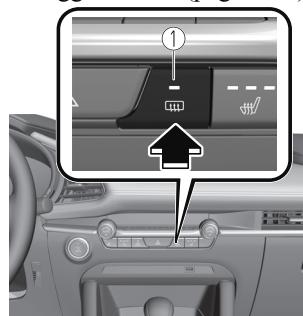


1. Indicator light

▼ Mirror Defogger*

The mirror defoggers defrost the outside mirrors.

The mirror defoggers operate in conjunction with the rear window defogger.

To turn on the mirror defoggers, switch the ignition ON and press the rear window defogger switch (page 4-72).

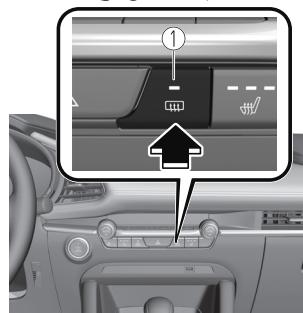

1. Indicator light

Switches and Controls

Horn

▼ Horn

To sound the horn, press the  mark on the steering wheel.

Hazard Warning Flasher

▼ Hazard Warning Flasher

The hazard warning lights should always be used when you stop on or near a roadway in an emergency.



The hazard warning lights warn other drivers that your vehicle is a traffic hazard and that they must take extreme caution when near it.



Depress the hazard warning flasher and all the direction indicators will flash. The hazard warning indicator lights in the instrument cluster flash simultaneously.

NOTE

- *The direction indicators do not work when the hazard warning lights are on.*
- *Check local regulations about the use of hazard warning lights while the vehicle is being towed to verify that it is not in violation of the law.*

- *If the brake pedal is depressed while driving on slippery roads, the emergency stop signal system could operate causing all the turn and lane change signals to flash. Refer to Emergency Stop Signal System on page 4-86.*
- *While the emergency stop signal system is operating, all the direction indicators automatically flash rapidly to caution the driver of a vehicle following behind your vehicle of a sudden braking situation. Refer to Emergency Stop Signal System on page 4-86.*

Brake System

▼ Foot Brake

This vehicle has power-assisted brakes that adjust automatically through normal use.

Should power-assist fail, you can stop by applying greater force than normal to the brake pedal. But the distance required to stop will be greater than usual.

⚠ WARNING

Do not coast with the engine stalled or turned off, find a safe place to stop:

Coasting with the engine stalled or turned off is dangerous. Braking will require more effort, and the brake's power-assist could be depleted if you pump the brake. This will cause longer stopping distances or even an accident.

Shift to a lower gear when going down steep hills:

Driving with your foot continuously on the brake pedal or steadily applying the brakes for long distances is dangerous. This causes overheated brakes, resulting in longer stopping distances or even total brake failure. This could cause loss of vehicle control and a serious accident. Avoid continuous application of the brakes.


Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal:

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.

⚠ CAUTION

➢ Do not drive with your foot held on the clutch pedal or brake pedal, or hold the clutch pedal depressed halfway unnecessarily. Doing so could result in the following:

- The clutch and brake parts will wear out more quickly.
- The brakes can overheat and adversely affect brake performance.
- Always depress the brake pedal with the right foot. Applying the brakes with the unaccustomed left foot could slow your reaction time to an emergency situation resulting in insufficient braking operation.

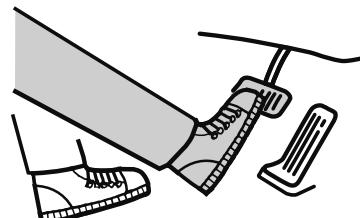

- Wear shoes appropriate for driving in order to avoid your shoe contacting the brake pedal when depressing the accelerator pedal.

▼ Electric Parking Brake (EPB)

The EPB system applies the parking brake using an electric motor. The system can operate automatically and manually. The EPB switch indicator light turns on when applying the parking brake and it turns off when releasing the parking brake.



1. Indicator light

⚠ WARNING

Do not drive the vehicle with the parking brake applied:

If the vehicle is driven with the parking brake applied, the brake parts may generate heat and the brake system may not operate, leading to an accident. Before driving the vehicle, release the parking brake and make sure that the EPB indicator light in the instrument cluster turns off.

Apply the parking brake when leaving the vehicle:

Not applying the parking brake when parking the vehicle is dangerous as the vehicle may move unexpectedly and result in an accident. Before leaving the vehicle, apply the parking brake and make sure that the EPB indicator light in the instrument cluster turns on.

NOTE

- The parking brake cannot be applied or released while the vehicle battery is dead.
Refer to If a Jump-Starting on page 7-44.
- When the charging system warning light in the instrument cluster turns on, the parking brake cannot be applied after switching the ignition OFF. Before switching the ignition OFF, apply the parking brake manually.
- The sound of the parking brake being applied or released can be heard, however, this does not indicate a problem.
- If the EPB is not used for long periods, an automatic inspection of the system is performed while the vehicle is parked. An operation sound can be heard, however, this does not indicate a problem.
- When applying the parking brake and switching OFF the ignition, an operation sound can be heard, however, this does not indicate a problem.
- The brake pedal may move while applying or releasing the parking brake, however, this does not indicate a problem.

- If there is a problem with the brake system (foot brake) while driving the vehicle, continually pulling up the EPB switch will apply the brakes and decelerate or stop the vehicle. The parking brake on-reminder sound is activated while the brake is applied. In addition, when releasing the switch, the brake is released and the sound stops.*
- If the parking brake is applied with the ignition switched OFF or in ACC, the EPB indicator light in the instrument cluster and the indicator light in the switch may turn on for 15 seconds.*
- When using an automatic car wash which moves the vehicle with the front tyres mounted, it is necessary to cancel the parking brake auto operation before the vehicle enters the automatic car wash. For details, refer to Cancelling the parking brake automatic operation.*

Manual operation

Applying the parking brake manually

When the brake pedal is firmly depressed and the EPB switch is pulled up, the parking brake is applied regardless of the ignition position. When the parking brake is applied, the EPB indicator light in the instrument cluster and the EPB switch indicator light turn on.



Releasing the parking brake manually

When the brake pedal is firmly depressed and the EPB switch is pressed while the ignition is switched ON or the engine is running, the parking brake is released. When the parking brake is released, the EPB indicator light in the instrument cluster and the EPB switch indicator light turn off.



If the EPB switch is pressed without depressing the brake pedal, a message is displayed on the multi-information display to notify the driver to depress the brake pedal.

Refer to Message Indicated on Multi-information Display on page 7-71.

Auto operation

Applying the parking brake automatically

When the ignition is switched from ON to ACC or OFF, the parking brake will be applied automatically. When the parking brake is applied, the EPB indicator light in the instrument cluster and the EPB switch indicator light turn on.

NOTE

To release the parking brake when the ignition is switched OFF, it is necessary to cancel the parking brake auto operation. For details, refer to Cancelling the parking brake automatic operation.

Releasing the parking brake automatically

If the accelerator pedal is depressed with the parking brake applied and all of the following conditions met, the parking brake is released automatically. When the parking brake is released, the EPB indicator light in the instrument cluster and the EPB switch indicator light turn off.

- The engine is running.
- The driver's door is closed.
- The driver's seat belt is fastened.

(Manual transmission vehicle)

- The shift lever is in a position other than neutral.
- The clutch pedal is depressed halfway.

(Automatic transmission vehicle)

The selector lever is in the D, M, or R position.

NOTE

If something such as the driver's foot contacts the accelerator pedal with the engine running and the parking brake applied, the parking brake might be released automatically. If you do not intend to start driving the vehicle immediately, shift the shift lever to the neutral position for a manual transmission, or shift the selector lever to the P or N position for an automatic transmission.

Cancelling the parking brake automatic operation

The parking brake automatic operation can be cancelled by doing any of the following after switching the ignition from ON to OFF.

Auto operation cancel method 1

1. Switch the ignition ON.
2. Turn off the AUTOHOLD.
3. Press the EPB switch continuously for 2 seconds or longer (until a sound is activated).
4. Release the EPB switch and switch the ignition OFF within 5 seconds after the sound was activated.

After the auto operation is cancelled, a sound is activated one time, and the EPB switch indicator light switches from illumination to flashing, and then turns off after 3 seconds.

Auto operation cancel method 2

1. Switch the ignition ON.
2. Turn off the AUTOHOLD.
3. Switch the ignition OFF with the EPB switch pressed.

When the auto operation is cancelled, a sound is activated one time, and the EPB switch indicator light from normal flashing to faster flashing, and then turns off after 3 seconds.

NOTE

- When cancelling the parking brake auto operation and parking the vehicle, shift the shift lever to the 1st gear or the R position for a manual transmission, or shift the selector lever to the P position for an automatic transmission, and then use wheel blocks.

- The auto operation may not cancel if the vehicle is parked on a steep slope.*

When the ignition is switched ON, the parking brake auto operation is restored.

▼ Warning Light

The warning light turns on when the system has a malfunction.

Refer to Brake System Warning Indication/Warning Light on page 7-56.

▼ Brake Pad Wear Indicator

When the disc brake pads become worn, the built-in wear indicators contact the disc plates. This causes a screeching noise to warn that the pads should be replaced.



When you hear this noise, consult an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

⚠ WARNING

Do not drive with worn disc pads:

Driving with worn disc pads is dangerous. The brakes could fail and cause a serious accident. As soon as you hear a screeching noise consult an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

In high humidity weather conditions, brake noises, such as brake squeak or brake squeal can be heard. It does not indicate a malfunction.

▼ Brake Assist

During emergency braking situations when it is necessary to depress the brake pedal with greater force, the brake assist system provides braking assistance, thus enhancing braking performance.

When the brake pedal is depressed hard or depressed more quickly, the brakes apply more firmly.

NOTE

- When the brake pedal is depressed hard or depressed more quickly, the pedal will feel softer but the brakes will apply more firmly. This is a normal effect of the brake assist operation and does not indicate a malfunction.*
- When the brake pedal is depressed hard or depressed more quickly, a motor/pump operation noise may be heard. This is a normal effect of the brake assist and does not indicate a malfunction.*
- The brake assist equipment does not supersede the functionality of the vehicle's main braking system.*

▼ Brake Override System

The brake override system applies the brake first for safety if the brake pedal and accelerator pedal are depressed at the same time.

NOTE

*Operation of the brake override system can be turned on or off.
Refer to the Settings section in the MZD Connect Owner's Manual.*

AUTOHOLD

▼ AUTOHOLD

The AUTOHOLD function automatically holds the vehicle stopped, even if you take your foot off the brake pedal. This function can be best used while stopped in traffic or at a traffic light. The brakes are released when you start driving the vehicle.

WARNING

Do not rely completely on the AUTOHOLD function:

The AUTOHOLD function is only designed to assist the brake operation while the vehicle is stopped. Neglecting to operate the brakes and relying only on the AUTOHOLD system is dangerous and could result in an unexpected accident if the vehicle were to suddenly move. Operate the brakes appropriately in accordance with the road and surrounding conditions.

Do not release your foot from the brake pedal while the vehicle is stopped on a steep grade:

Because there is a possibility of the vehicle not being held in the stopped position by the AUTOHOLD function, the vehicle may move unexpectedly and result in an accident.

Do not use the AUTOHOLD function on slippery roads such as icy or snow-covered roads, or unpaved roads:

Even if the vehicle is held in the stopped position by the AUTOHOLD function, the vehicle may move unexpectedly and result in an accident. Operate the accelerator pedal, brakes, or steering wheel appropriately as necessary.

Immediately depress the brake pedal in the following cases:

Because the AUTOHOLD function is cancelled forcibly, the vehicle may move unexpectedly and result in an accident.

➤ "Depress Brake Pedal. Brake Hold Disabled" is displayed in the multi-information display and the warning sound is activated at the same time.

Always apply the parking brake when parking the vehicle:



Not applying the parking brake when parking the vehicle is dangerous as the vehicle may move unexpectedly and result in an accident. When parking the vehicle, shift the selector lever to the P position (automatic transmission vehicle) and apply the parking brake.

CAUTION

If you stop operating the accelerator pedal before the vehicle starts moving, the force holding the vehicle in the stopped position may weaken. Firmly depress the brake pedal or depress the accelerator pedal to accelerate the vehicle.

NOTE

- Under the following conditions, a problem with the AUTOHOLD is occurring. Have your vehicle inspected at an expert repairer; we recommend an Authorised Mazda Repairer as soon as possible.
 - A message is indicated on the multi-information display and a warning sound is activated for about 5 seconds while the AUTOHOLD is operating or when you press the AUTOHOLD switch.
 - If you switch the ignition OFF while the AUTOHOLD is operating, the parking brake is applied automatically to assist you with parking the vehicle.
 - The AUTOHOLD is cancelled when the selector lever/shift lever is shifted to R position while the vehicle is on level ground, or facing up a hill or grade (as shown below).
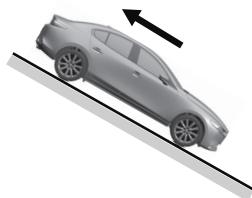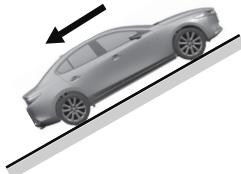
<i>Vehicle posture and road surface gradient</i>	<i>AUTOHOLD operation status</i>
Vehicle tilts forward	 Operates
Level ground	 Does not operate, cancelled
Vehicle tilts rearward	 Does not operate, cancelled



: Reverse driving (selector lever/shift lever in the reverse (R) position)

▼ AUTOHOLD System is Turned On

Press the AUTOHOLD switch and when the AUTOHOLD standby indicator light turns on, the AUTOHOLD function turns on.



1. AUTOHOLD standby indicator light

NOTE

When all of the following conditions are met, the AUTOHOLD standby indicator light turns on when the AUTOHOLD switch is pressed and the AUTOHOLD function turns on.

- The ignition is switched ON (engine is running or stopped by i-stop).
- The driver's seat belt is fastened.
- The driver's door is closed.
- There is no problem with the AUTOHOLD function.

To operate AUTOHOLD and hold the brakes

1. Depress the brake pedal and bring the vehicle to a complete stop.
2. The AUTOHOLD active indicator light in the instrument cluster turns on and the brakes are held.

HOLD

3. The vehicle is held in its stopped position even with the brake pedal released.

NOTE

When all of the following conditions are met, the AUTOHOLD operates and the brakes are held.

- The ignition is switched ON (engine is running or stopped by i-stop).
- The vehicle is stopped.
- The brake pedal is being depressed.
- The AUTOHOLD active indicator light turns on.
- The accelerator pedal is not depressed.
- The driver's seat belt is fastened.
- The driver's door is closed.
- There is no problem with the AUTOHOLD function.
- The parking brake is released.
- There is no problem with the Electric Parking Brake (EPB) function.
- **(Automatic transmission vehicle)**
The selector lever is in a position other than R position or the vehicle tilts forward with the selector lever in the R position.

To release AUTOHOLD and start driving the vehicle

If you do any of the following actions to resume driving the vehicle, the brakes will be released automatically and the AUTOHOLD active indicator light turns off.

- **(Manual transmission vehicle)**
You start to release the clutch pedal with the shift lever shifted to a position other than the neutral position
- **(Automatic transmission vehicle)**
 - The accelerator pedal is depressed.

- The vehicle tilts rearward or the selector lever is shifted to the R position on level ground.

NOTE

- If the Electric Parking Brake (EPB) switch is pulled while the AUTOHOLD is operating, the parking brake is applied and the AUTOHOLD is released. In addition, if the parking brake is released under this condition, the AUTOHOLD operates to hold the brakes.
- Under the following conditions, the parking brake is automatically applied and the AUTOHOLD is released. The AUTOHOLD is re-enabled when the conditions before the AUTOHOLD is released are restored.
 - The driver's seat belt is unfastened.
 - The driver's door is opened.
- When about 10 minutes or longer have passed since the AUTOHOLD operation started, the parking brake is automatically applied. Because the AUTOHOLD is restored when releasing the parking brake, the hold on the brakes by AUTOHOLD function resumes.
- **(Manual transmission vehicle)**
When starting to drive the vehicle forward or in reverse on a down slope, depress the clutch pedal and shift the shift lever to the appropriate position for driving in the desired direction, and then depress the accelerator pedal to release the AUTOHOLD.

- The AUTOHOLD can be cancelled forcibly by fully depressing the accelerator pedal for 1 second or longer while the AUTOHOLD is operating. Forcibly cancel the AUTOHOLD only when the AUTOHOLD cannot be cancelled due to a system malfunction or it is necessary to cancel the AUTOHOLD in an emergency.

▼ **AUTOHOLD System is Turned Off**

Depress the brake pedal and press the AUTOHOLD switch. The AUTOHOLD is turned off and the AUTOHOLD standby indicator light turns off.



1. AUTOHOLD standby indicator light

NOTE

- When the brakes are not held such as while driving the vehicle, the AUTOHOLD can be turned off only by pressing the AUTOHOLD switch.

- If the AUTOHOLD switch is pressed without depressing the brake pedal while AUTOHOLD is operating (AUTOHOLD active indicator light in instrument cluster is turned on), the message “Depress Brake Pedal and Operate Switch to Release” is indicated on the multi-information display to notify the driver to depress the brake pedal.
- If any of the following conditions occurs while the AUTOHOLD function is operating (AUTOHOLD active indicator light is turned on), the parking brake is applied automatically and the AUTOHOLD function turns off. For the Electric Parking Brake (EPB) operation, refer to the Electric Parking Brake (EPB) on page 4-77.
 - The ignition is switched OFF.
 - There is a problem with the AUTOHOLD function.

Emergency Stop Signal System

▼ Emergency Stop Signal System

If you apply the brakes suddenly while driving at a speed of about 55 km/h (34 mph) or faster, the emergency stop signal system automatically and rapidly flashes all the direction indicator lights to caution drivers behind your vehicle of the sudden braking situation.

NOTE

• Flashing

When you bring your vehicle to a complete stop while all the direction indicator lights are flashing rapidly, the rapid flashing of all the direction indicator lights changes back to the normal flashing pattern. The direction indicator lights turn off when you release your foot from the brake pedal.

• Operation

- When the ABS operates, the emergency stop signal system is more likely to operate. Therefore, if the brake pedal is depressed on a slippery road, all of the direction indicator lights may flash.
- The emergency stop signal system does not operate when the hazard warning light switch is pressed.

Hill Launch Assist (HLA)

▼ Hill Launch Assist (HLA)

The HLA functions to assist in accelerating the vehicle from a stop on slopes. When releasing the brake pedal and depressing the accelerator pedal to accelerate the vehicle from a stop while on a slope, the function prevents the vehicle from rolling. The HLA also operates when reversing on a slope.

The braking force is maintained automatically after releasing the brake pedal on a steep slope.

For manual transmission vehicles, the HLA operates when the vehicle is tilted rearward with the shift lever in a forward gear, and operates when the vehicle is tilted forward with the shift lever in the R position.

For automatic transmission vehicles, the HLA operates when the vehicle is tilted rearward with the selector lever in a forward gear, and operates when the vehicle is tilted forward with the selector lever in the R position.



WARNING

Do not rely completely on HLA:

HLA is an auxiliary device for accelerating from a stop on a slope. The system only operates for about 2 seconds and therefore, relying only on the system, when accelerating from a stop is dangerous because the vehicle may move (roll) unexpectedly and cause an accident.

The vehicle could roll depending on the vehicle's load or if it is towing something. In addition, for vehicles with a manual transmission, the vehicle could still roll depending on how the clutch pedal or the accelerator pedal is operated.

Always confirm the safety around the vehicle before starting to drive the vehicle.

NOTE

- HLA does not operate on a gentle slope. In addition, the gradient of the slope on which the system will operate changes depending on the vehicle's load.*
- HLA does not operate if the parking brake is applied, the vehicle has not stopped completely, or the clutch pedal is released.*
- While HLA is operating, the brake pedal may feel stiff and vibrate, however, this does not indicate a malfunction.*
- HLA does not operate while the TCS/DSC indicator light is illuminated. Refer to TCS/DSC Indication/Indicator Light (Turns on) on page 7-63.*
- HLA does not turn off even if the DSC OFF switch is pressed to turn off the TCS/DSC.*

(Automatic Transmission)

Although the HLA does not operate during idling stop, the vehicle roll prevention function operates to prevent vehicle roll.

Antilock Brake System (ABS)

▼ Antilock Brake System (ABS)

The ABS control unit continuously monitors the speed of each wheel. If one wheel is about to lock up, the ABS responds by automatically releasing and reapplying that wheel's brake.

The driver will feel a slight vibration in the brake pedal and may hear a chattering noise from the brake system. This is normal ABS system operation. Continue to depress the brake pedal without pumping the brakes.

The warning light turns on when the system has a malfunction.
Refer to ABS Warning Indication/Warning Light on page 7-59.

WARNING

Do not rely on ABS as a substitute for safe driving:

The ABS cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), driving on ice and snow, and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

NOTE

- Braking distances may be longer on loose surfaces (snow or gravel, for example) which usually have a hard foundation. A vehicle with a normal braking system may require less distance to stop under these conditions because the tyres will build up a wedge of surface layer when the wheels skid.*
- The sound of the ABS operating may be heard when starting the engine or immediately after starting the vehicle, however, it does not indicate a malfunction.*

Traction Control System (TCS)

▼ Traction Control System (TCS)

The Traction Control System (TCS) enhances traction and safety by controlling engine torque and braking. When the TCS detects driving wheel slippage, it lowers engine torque and operates the brakes to prevent loss of traction.

This means that on a slick surface, the engine adjusts automatically to provide optimum power to the drive wheels, limiting wheel spin and loss of traction.

The warning light turns on when the system has a malfunction.

Refer to TCS/DSC Indication/Indicator Light (Turns on) on page 7-63.

⚠ WARNING

Do not rely on the Traction Control System (TCS) as a substitute for safe driving:

The Traction Control System (TCS) cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

Use snow tyres or tyre chains and drive at reduced speeds when roads are covered with ice and/or snow:

Driving without proper traction devices on snow and/or ice-covered roads is dangerous. The Traction Control System (TCS) alone cannot provide adequate traction and you could still have an accident.

NOTE

To turn off the TCS, press the DSC OFF switch (page 4-91).

▼ TCS/DSC Indicator Light



This indicator light stays on for a few seconds when the ignition is switched ON. If the TCS or DSC is operating, the indicator light flashes.

If the light stays on, the TCS, DSC or the brake assist system may have a malfunction and they may not operate correctly. Take your vehicle to an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

- In addition to the indicator light flashing, a slight labouring sound will come from the engine. This indicates that the TCS/DSC is operating properly.*
- On slippery surfaces, such as fresh snow, it will be impossible to achieve high rpm when the TCS is on.*

Dynamic Stability Control (DSC)

▼ Dynamic Stability Control (DSC)

The Dynamic Stability Control (DSC) automatically controls braking and engine torque in conjunction with systems such as ABS and TCS to help control side slip when driving on slippery surfaces, or during sudden or evasive manoeuvring, enhancing vehicle safety.

Refer to ABS (page 4-88) and TCS (page 4-89).

DSC operation is possible at speeds greater than 20 km/h (12 mph).

The warning light turns on when the system has a malfunction.

Refer to TCS/DSC Indication/Indicator Light (Turns on) on page 7-63.

CAUTION

➤ *The DSC may not operate correctly unless the following are observed:*

- *Use tyres of the correct size specified for your Mazda on all 4 wheels.*
- *Use tyres of the same manufacturer, brand and tread pattern on all 4 wheels.*
- *Do not mix worn tyres.*
- *The DSC may not operate correctly when tyre chains are used or a temporary spare tyre is installed because the tyre diameter changes.*

NOTE

If there is a problem with the DSC, the Hill Launch Assist (HLA) may not operate.

Refer to Hill Launch Assist (HLA) on page 4-87.

WARNING

Do not rely on the Dynamic Stability Control as a substitute for safe driving:

The Dynamic Stability Control (DSC) cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

▼ TCS/DSC Indicator Light



This indicator light stays on for a few seconds when the ignition is switched ON. If the TCS or DSC is operating, the indicator light flashes.

If the light stays on, the TCS, DSC or the brake assist system may have a malfunction and they may not operate correctly. Take your vehicle to an expert repairer, we recommend an Authorised Mazda Repairer.

▼ DSC OFF Indicator Light




This indicator light stays on for a few seconds when the ignition is switched ON. It also illuminates when the DSC OFF switch is pressed and TCS/DSC is switched off.

Refer to DSC OFF Switch on page 4-91.

If the light remains illuminated and the TCS/DSC is not switched off, take your vehicle to an expert repairer, we recommend an Authorised Mazda Repairer. The DSC may have a malfunction.

▼ DSC OFF Switch

Press the DSC OFF switch to turn off the TCS/DSC. The DSC OFF indicator light in the instrument cluster and the DSC OFF switch indicator light will illuminate.

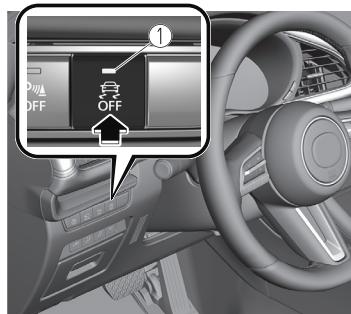

1. DSC OFF switch indicator light

Press the switch again to turn the TCS/DSC back on. The DSC OFF indicator light and the DSC OFF switch indicator light will turn off.

NOTE

- When DSC is on and you attempt to free the vehicle when it is stuck, or drive it out of freshly fallen snow, the TCS (part of the DSC system) will activate.

Depressing the accelerator will not increase engine power and freeing the vehicle may be difficult. When this happens, turn off the TCS/DSC.

- If the TCS/DSC is off when the engine is turned off, it automatically activates when the ignition is switched ON.


ABS/TCS/DSC

- Leaving the TCS/DSC on will provide the best traction.
- If the DSC OFF switch is pressed and held for 10 seconds or more, the DSC OFF switch malfunction detection function operates and the DSC system activates automatically. The DSC OFF indicator light turns off while the DSC system is operative.
- **(Vehicles with Smart Brake Support (SBS))**
If the Smart Brake Support (SBS) operates with the TCS/DSC turned off, the TCS/DSC becomes operational automatically.

M Hybrid*

▼ M Hybrid

M Hybrid uses the Integrated Starter-Generator (ISG) with excellent power generation efficiency to generate electricity from the kinetic energy generated when the vehicle decelerates. The system uses the electrical power stored in the M Hybrid battery, which is a large-capacity battery to improve driveability and fuel economy by reducing engine load and providing motor assist. In addition, the ISG provides quiet engine restarting after the engine is stopped by after the i-stop function (idling stop).

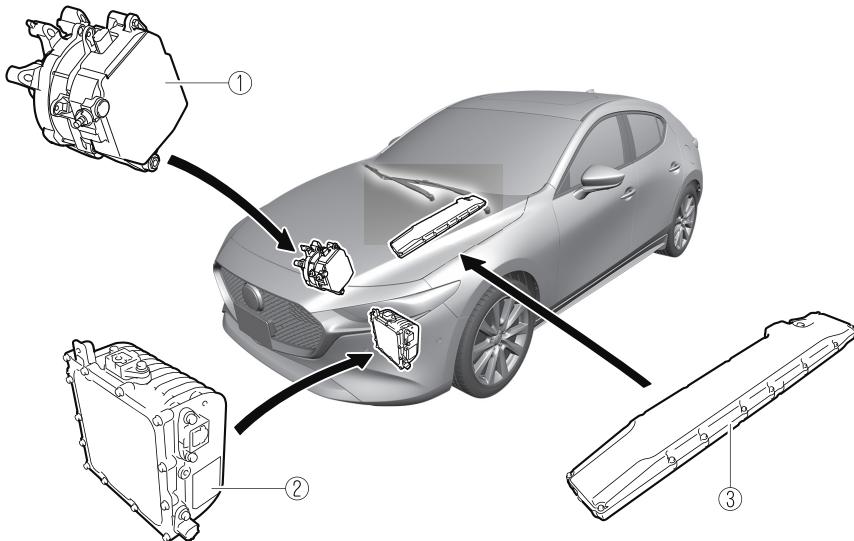

1. ISG
2. DC-DC Converter
3. M Hybrid battery

CAUTION

- The following parts are extremely hot and have high-current electricity flowing through them, therefore do not touch them.
- ISG
➤ DC-DC Converter
➤ M Hybrid battery

M Hybrid

➤ If the driver's door is opened under the following conditions, the vehicle determines that the driver is trying to leave the driver's seat, a warning sound notifying the driver of possible danger is activated, and the warning indication is displayed.

➤ The engine is running.

➤ The selector lever is in a position other than P or N.

➤ If there is a problem with M Hybrid, a warning indication is displayed.

➤ M Hybrid operation status is displayed on the system operation status display of the fuel efficiency monitor.

Refer to the Information section in the MZD Connect Owner's Manual.

▼ Unique M Hybrid Handling

Unique sound and vibration occurring with M Hybrid vehicles

M Hybrid vehicles have a unique sound and vibration which differ from normal vehicles. The following sound or vibration may occur, however, this is unique to M Hybrid and it does not indicate a problem.

Type (sound/vibration)	Occurrence status/location
Vibration of brake pedal	<p>Vibration of the brake pedal might be felt under the following conditions.</p> <ul style="list-style-type: none"> • The ignition is switched ON. • The brake pedal is operated.

Type (sound/vibration)	Occurrence status/location
Operation sound of deceleration regeneration	A droning sound can be heard from the engine compartment during deceleration.
Relay operation sound of M Hybrid battery	A click-clack sound can be heard from the vehicle underfloor when the engine is started and stopped.
Operation sound of brake system	<p>Sound can be heard from the front of the vehicle under the following conditions:</p> <ul style="list-style-type: none"> • The driver's door is opened. • The ignition is switched ON. • The brake pedal is operated. • The brake system operates automatically. • Several minutes have passed since the engine was stopped.

▼ M Hybrid battery

M Hybrid is equipped with a special battery.

WARNING

Heed the following cautions to prevent burns and electrical shock:

- Never remove and disassemble the brackets and connectors securing the terminal part, wiring harness, and the M Hybrid battery.
- Never touch the M Hybrid battery because it becomes extremely hot under direct sunlight or after driving.
- Because the M Hybrid battery is especially dangerous when wet, never touch it.

NOTE

The M Hybrid battery has a certain battery life. Battery life differs depending on how the vehicle is used and the driving conditions.

Charging the M Hybrid battery

The M Hybrid battery is charged automatically by the engine power and deceleration regeneration. Therefore, it is not necessary to charge the battery from outside of the vehicle.

CAUTION

Drive the vehicle for about 30 minutes once every few months because self-discharge occurs gradually if the vehicle is not driven for a long period of time. If the M Hybrid battery becomes completely discharged and M Hybrid cannot be activated, contact an Authorised Mazda Repairer.

▼ M Hybrid Precautions

For vehicle maintenance or repairs, or when scrapping the vehicle, consult an expert repairer, we recommend an Authorised Mazda Repairer.

Handling the M Hybrid battery

Technical knowledge and skill are necessary in handling the M Hybrid battery.

WARNING

To ensure safe and correct handling of the M Hybrid battery, always heed the following precautions:

- Do not remove the M Hybrid battery.
- Do not resell, transfer, or modify the M Hybrid battery.
- Do not use the battery on vehicles other than those equipped with the M Hybrid battery.

If the M Hybrid battery is not handled properly, the following may occur and cause serious injury:

- Touching an unattended or illegally abandoned M Hybrid battery may cause electrocution.
- If the M Hybrid battery is used on a vehicle other than one equipped with M Hybrid (including modified vehicles), accidents such as electrocution, heat generation, smoking, combustion, and explosions, or an electrolyte leakage may occur.

Scraping Your Vehicle and Disposing of the M Hybrid battery

The M Hybrid battery is salvaged to prevent accidents involving it. When scrapping your vehicle, replacing the M Hybrid battery, or disposing of the M Hybrid battery, consult an expert repairer, we recommend an Authorised Mazda Repairer. Please cooperate in ensuring that the vehicle's M Hybrid battery is salvaged.



Dispose of the M Hybrid battery appropriately:

If the M Hybrid battery is not salvaged and disposed of appropriately, such as by leaving it unattended or illegally abandoning it, some other person may touch it which could cause electrocution leading to serious injury.

If an Accident Occurs

If the vehicle receives an impact of a certain level or greater in a collision, M Hybrid may stop. In this case, the charging system warning light turns on and M Hybrid cannot activate. Park the vehicle in a safe place immediately and contact an Authorised Mazda Repairer.



Never touch the areas where high current is flowing:

Never touch a M Hybrid related part. Otherwise, it could lead to an electrical shock or burns causing serious injury.

Never touch electrical wiring that may be protruding into or outside of the cabin:
Otherwise, it could lead to an electrical shock or burns causing serious injury.

Never touch any area where electrolyte is visible or electrolyte is leaking from the area:

If any electrolyte from the M Hybrid battery gets in the eyes or on the skin, it could cause loss of vision or skin reactions. In the unlikely event that electrolyte comes into contact with the eyes or skin, flush with large quantities of water immediately and seek immediate medical attention.

Do not come near the vehicle if electrolyte is leaking from the M Hybrid battery:

Even if the M Hybrid battery is damaged, large quantities of electrolyte will not flow out due to the internal structure of the battery, however, in the unlikely event that it does, it will produce steam. The steam contains properties that can irritate the eyes and skin, and could cause acute poisoning if absorbed.

Never approach objects that are on fire or extremely hot:

Electrolyte in the M Hybrid battery may cause a fire.

If the vehicle catches fire, extinguish the fire using an ABC fire extinguisher:

Only extinguish a fire with water when large amounts of water is available such as from a fire hydrant.

Drive Selection

Drive Selection*

▼ Drive Selection

Drive selection is a system to switch the vehicle's drive mode. When the sport mode is selected, vehicle's response against accelerator operation is enhanced. This provides additional quick acceleration which may be needed to safely make manoeuvres such as lane changes, merging onto freeways, or passing other vehicles.

CAUTION

Do not use the sport mode when driving on slippery roads such as wet or snow-covered roads. It may cause tyre slipping.

NOTE

- When the sport mode is selected, driving at higher engine speeds increases and it may increase fuel consumption. Mazda recommends that you cancel the sport mode on normal driving.
- Drive mode cannot be switched in the following conditions:
 - ABS/TCS/DSC is operating
 - Cruise control* is operating.
 - The Mazda Radar Cruise Control (MRCC) system* is operating.
 - The Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System* is operating.
 - Cruising & Traffic Support (CTS)* is operating.
 - Steering wheel is being operated abruptly

▼ Drive Selection Switch

Press the drive selection switch forward (SPORT) to select the sport mode.

Pull the drive selection switch back (OFF) to cancel the sport mode.




NOTE

- In the following cases, the drive selection is cancelled.
 - The ignition is switched OFF.
 - Cruise Control is set.
 - Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) is set.
 - Cruising & Traffic Support (CTS) is set.
 - Depending on the driving conditions when sport mode is selected, the vehicle may perform shift-down or slightly accelerate.

▼ Select Mode Indicator Light

When the sport mode is selected, the select mode indicator light turns on in the instrument cluster.

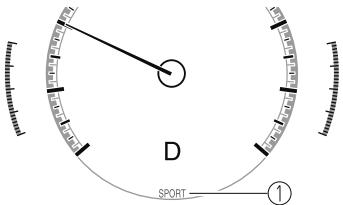

1. Select mode indicator light

NOTE

If the drive selection cannot be switched to sport mode, the select mode indicator light flashes to notify the driver.

i-ACTIV AWD Operation*

▼ i-ACTIV AWD Operation

AWD provides excellent drivability on snow-covered and ice-packed roads, sand and mud, as well as on steep slopes and other slippery surfaces.

A system malfunction or operation conditions are indicated by a warning.

Refer to Contact Authorised Mazda Repairer and AWD Warning Indication/Warning Light on page 7-65.

WARNING

Never spin a wheel that is off the ground:

Spinning a wheel that is off the ground as a result of the vehicle being stuck or in a ditch is dangerous. The drive assembly could be seriously damaged which could lead to an accident or could even lead to overheating, oil leakage, and a fire.

▼ AWD Driving

This vehicle has not been designed for the purpose of off-road driving or rallies. Do not attempt to drive over uneven or rocky surfaces, or across rivers.

Although this vehicle is equipped with AWD, acceleration, steering and braking operations should be conducted in the same manner as with a non-AWD vehicle, with the emphasis placed on safe driving.

▼ Tyres and Tyre Chains

The condition of the tyres plays a large role in the performance of the vehicle. Moreover, to prevent adverse effects to the drive assembly, please note the following:

Tyres

- When replacing tyres, always replace all front and rear tyres at the same time.
- All tyres must be of the same size, manufacture, brand and tread pattern. Pay particular attention when equipping snow or other types of winter tyres.
- Do not mix tread-worn tyres with normal tyres.
- Inspect tyre inflation pressures at the specified periods adjust to the specified pressures.

NOTE

Check the tyre inflation pressure label attached to driver's door frame for the correct tyre inflation pressure.

- Make sure to equip the vehicle with genuine wheels of the specified size, on all wheels. With AWD, the system is calibrated for all 4 wheels being of the same dimensions.

Tyre chains

- Install tyre chains to the front tyres.
- Do not use tyre chains on the rear wheels.
- Do not drive the vehicle faster than 30 km/h (19 mph) with the tyre chains installed.
- Do not drive the vehicle with tyre chains on road conditions other than snow or ice.

▼ Towing

If the vehicle requires towing, have it towed with all 4 wheels completely off the ground.

Refer to Towing Description on page 7-51.

Power Steering

▼ Power Steering

- Power steering is only operable when the engine is running. If the engine is off or if the power steering system is inoperable, you can still steer, but it requires more physical effort.
If the steering feels stiffer than usual during normal driving or the steering vibrates, consult an expert repairer, we recommend an Authorised Mazda Repairer.
- The warning indication notifies the driver of system abnormalities and operation conditions.
Refer to Power Steering Malfunction Indication/Indicator Light on page 7-59.

i-ACTIVSENSE**▼ i-ACTIVSENSE**

i-ACTIVSENSE is a collective term covering a series of advanced safety and driver support systems which make use of cameras and sensors. The systems consist of active safety and pre-crash safety systems.

These systems are designed to assist the driver in safer driving by reducing the load on the driver and helping to avert collisions or reduce their severity.

However, because each system has its limitations, always drive carefully and do not rely solely on the systems.

▼ Active Safety Technology

Active Safety Technology supports safer driving by helping the driver to recognise potential hazards and avert accidents.

Driver awareness support systems**Nighttime visibility**

Adaptive LED Headlights (ALH)
.....page 4-109

High Beam Control System (HBC)
.....page 4-107

Left/right side and rear side detection

Lane Departure Warning System
(LDWS)page 4-112

Blind Spot Monitoring (BSM)
.....page 4-115

Road sign recognition

Traffic Sign Recognition System
(TSR)page 4-121

Inter-vehicle distance recognition

Distance & Speed Alert (DSA)
.....page 4-128

Front obstruction detection when passing cross

Front Cross Traffic Alert (FCTA)
.....page 4-133

Rear obstruction detection when leaving a parking space

Rear Cross Traffic Alert (RCTA)
.....page 4-136

Full-surround recognition

360°View Monitorpage 4-202

Driver fatigue detection

Driver Attention Alert (DAA)
.....page 4-129

Driver Monitoring (DM)page 4-131

Driver support systems**Inter-vehicle distance**

Mazda Radar Cruise Control
(MRCC)page 4-140

Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)page 4-149

Lane departure

Lane-keep Assist System (LAS)
.....page 4-176

Inter-vehicle distance and lane keeping

Cruising & Traffic Support (CTS)
.....page 4-160

Speed control

Adjustable Speed Limiter (ASL)
.....page 4-179

Intelligent Speed Assistance (ISA)
.....page 4-185

▼ Pre-Crash Safety Technology

Pre-crash safety technology is designed to assist the driver in averting collisions or reducing their severity in situations where they cannot be avoided.

Collision damage reduction

Forward driving

Smart Brake Support (SBS).....page 4-191

Reverse driving

Smart Brake Support [Rear]
(SBS-R)..... page 4-193
Smart Brake Support [Rear Crossing]
(SBS-RC).....page 4-197

▼ Camera and Sensors

Forward Sensing Camera (FSC)

The Forward Sensing Camera (FSC) detects lane indications and recognises headlights, tail lights and city lights during nighttime driving. In addition, it also detects the vehicle ahead, pedestrians, or obstructions. The following systems use the Forward Sensing Camera (FSC).

- High Beam Control system (HBC)
- Adaptive LED Headlights (ALH)
- Lane Departure Warning System (LDWS)
- Traffic Sign Recognition System (TSR)
- Distance & Speed Alert (DSA)
- Driver Attention Alert (DAA)
- Driver Monitoring (DM)
- Mazda Radar Cruise Control (MRCC)
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)

- Lane-keep Assist System (LAS)
- Cruising & Traffic Support (CTS)
- Smart Brake Support (SBS)

The Forward Sensing Camera (FSC) is installed at the top of the windscreen near the rearview mirror.

Refer to Forward Sensing Camera (FSC) on page 4-234.

Front radar sensor

The front radar sensor detects radio waves reflected off a vehicle ahead sent from the radar sensor. The following systems use the front radar sensor.

- Distance & Speed Alert (DSA)
- Mazda Radar Cruise Control (MRCC)
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
- Cruising & Traffic Support (CTS)
- Smart Brake Support (SBS)

The front radar sensor is mounted behind the radiator grille.

Refer to Front Radar Sensor on page 4-238.

Front side radar sensor

The front side radar sensors detect radio waves reflected off a vehicle ahead sent from the radar sensor. The following systems use the front side radar sensor.

- Front Cross Traffic Alert (FCTA)

The front side radar sensors are installed inside the front bumper, one on the left side and one on the right side.

Refer to Front Side Radar Sensor on page 4-241.

Rear side radar sensor

The rear side radar sensors detect radio waves reflected off a vehicle approaching from the rear or an obstruction sent from the radar sensors. The following systems use the rear side radar sensor.

- Blind Spot Monitoring (BSM)
- Rear Cross Traffic Alert (RCTA)
- Smart Brake Support [Rear Crossing] (SBS-RC)

The rear side radar sensors are installed inside the rear bumper, one on the left side and one on the right side.

Refer to Rear Side Radar Sensor on page 4-242.

Rear/rear corner/rear side ultrasonic sensor

The ultrasonic sensor detects ultrasonic waves reflected off obstructions at the rear sent from the ultrasonic sensors. The following systems use the ultrasonic sensor.

- Smart Brake Support [Rear] (SBS-R)
- Smart Brake Support [Rear Crossing] (SBS-RC)

The ultrasonic sensors are mounted in the rear bumper.

Refer to Rear/Rear corner/Rear Side Ultrasonic Sensor on page 4-244.

Front camera/side cameras/rear camera

The front camera, side cameras, and rear camera shoot images of the area surrounding the vehicle. The 360°View Monitor uses each camera.

Cameras are installed to the front bumper, door mirrors, and rear bumper.

Refer to Front Camera/Side Cameras/Rear Camera on page 4-244.

Driver monitoring camera

The driver monitoring camera detects changes in the driver's facial features and estimates the amount of accumulated fatigue and sleepiness of the driver. The following systems use the driver monitoring camera.

- Driver Monitoring (DM)

The driver monitoring camera is mounted in the centre display.

Refer to Driver Monitoring Camera on page 4-245.

**▼ i-ACTIVSENSE Status Symbol
(Warning/Risk Avoidance Support System)**

The driver is notified of the status of the following systems using the i-ACTIVSENSE status symbol (warning/risk avoidance support system).

- Lane Departure Warning System (LDWS)
- Blind Spot Monitoring (BSM)
- Distance & Speed Alert (DSA)
- Front Cross Traffic Alert (FCTA)
- Rear Cross Traffic Alert (RCTA)
- Lane-keep Assist System (LAS)

NOTE

The status of the system turned on using the personalisation feature is displayed.

**i-ACTIVSENSE status symbol
(warning/risk avoidance support
system) (white)**



System stand-by status

If none of the systems are activated or if there is a problem with the system, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) is displayed.

NOTE

For example, even when the Blind Spot Monitoring (BSM) is operating normally, if the Lane Departure Warning System (LDWS) has a problem, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) is displayed.

**i-ACTIVSENSE status symbol
(warning/risk avoidance support
system) (green)**



System activated status

If any one of the systems is activated, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (green) is displayed.

NOTE

Even if the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (green) is displayed, systems which do not meet the operation conditions will not operate.

**i-ACTIVSENSE status symbol
(warning/risk avoidance support
system) (amber)**



System warning status

If any system warning is activated, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (amber) is displayed.

**i-ACTIVSENSE status symbol
(warning/risk avoidance support
system) (non-display)**

System OFF status

When all systems are switched off using the personalisation feature or the i-ACTIVSENSE switch, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) does not display.

▼ i-ACTIVSENSE Switch

The operation status of all of the following systems can be changed by operating the i-ACTIVSENSE switch.

- Lane Departure Warning System (LDWS)
- Blind Spot Monitoring (BSM)
- Distance & Speed Alert (DSA)
- Front Cross Traffic Alert (FCTA)

i-ACTIVSENSE

- Rear Cross Traffic Alert (RCTA)
- Lane-keep Assist System (LAS)
- Smart Brake Support (SBS)
- Smart Brake Support [Rear] (SBS-R)
- Smart Brake Support [Rear Crossing] (SBS-RC)



NOTE

- For the systems which can be cancelled using the i-ACTIVSENSE switch, they cannot be cancelled when the following systems are operating, even if you press the i-ACTIVSENSE switch.
 - Mazda Radar Cruise Control (MRCC)
 - Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
 - Cruising & Traffic Support (CTS)
- If you switch the ignition OFF while you have cancelled some or all of the systems using the i-ACTIVSENSE switch, the operational status of each system will vary when the ignition ON is switched again.

Systems which maintain their status before the ignition is switched OFF

- Lane Departure Warning System (LDWS)
- Blind Spot Monitoring (BSM)
- Distance & Speed Alert (DSA)

- Front Cross Traffic Alert (FCTA)
- Rear Cross Traffic Alert (RCTA)
- Lane-keep Assist System (LAS)

Systems which are restored to operational status automatically

- Smart Brake Support (SBS)
- Smart Brake Support [Rear] (SBS-R)
- Smart Brake Support [Rear Crossing] (SBS-RC)
- If a system is cancelled using the personalisation feature, the system remains cancelled even if the i-ACTIVSENSE switch is pressed.

The systems which can be cancelled vary depending on whether the i-ACTIVSENSE switch is short or long-pressed.

When the i-ACTIVSENSE switch is pressed and released immediately

When pressing and immediately releasing the i-ACTIVSENSE switch, the following systems are cancelled and the i-ACTIVSENSE status symbol (warning/risk avoidance support system) turns off.

- Lane Departure Warning System (LDWS)
- Blind Spot Monitoring (BSM)
- Distance & Speed Alert (DSA)
- Front Cross Traffic Alert (FCTA)
- Rear Cross Traffic Alert (RCTA)
- Lane-keep Assist System (LAS)

If the i-ACTIVSENSE switch is pressed again, the systems return to their original status, and the i-ACTIVSENSE status symbol (warning/risk avoidance support system) turns on.

NOTE

You can select systems you want to cancel using the personalisation features.

Refer to the *Settings section in the MZD Connect Owner's Manual*.

When the i-ACTIVSENSE switch is pressed and held

When pressing and holding the i-ACTIVSENSE switch, the following systems are cancelled in addition to the systems which are cancelled by pressing and immediately releasing the switch. The i-ACTIVSENSE status symbol (warning/risk avoidance support system) turns off and the SBS OFF indicator light turn on.

- Smart Brake Support (SBS)
- Smart Brake Support [Rear] (SBS-R)
- Smart Brake Support [Rear Crossing] (SBS-RC)



If the i-ACTIVSENSE switch is pressed again, the systems return to their original status, the SBS OFF indicator light turns off and the i-ACTIVSENSE status symbol (warning/risk avoidance support system) turns on.


High Beam Control System (HBC)*

▼ High Beam Control System (HBC)

The HBC determines the conditions in front of the vehicle using the Forward Sensing Camera (FSC) while driving in darkness to automatically switch the headlights between high and low beams. Refer to Forward Sensing Camera (FSC) on page 4-234.

While driving the vehicle at a speed of about 30 km/h (19 mph) or more, the headlights are switched to high beams when there are no vehicles ahead or approaching in the opposite direction. The system switches the headlights to low beams when one of the following occurs:

- The system detects a vehicle or the headlights/lights of a vehicle approaching in the opposite direction.
- The vehicle is driven on roads lined with streetlamps or on roads in well-lit cities and towns.
- The vehicle is driven at less than about 20 km/h (12 mph).
- The headlight high-beam indicator light turns on while the high beams are on.

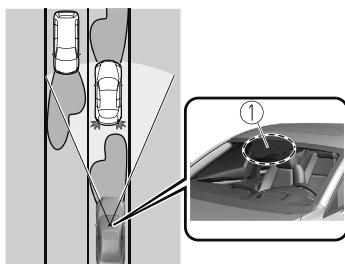

1. Forward Sensing Camera (FSC)*1

*1 The recognition distance of the Forward Sensing Camera (FSC) varies according to the surrounding conditions.

The warning light turns on when the system has a malfunction.

Refer to High Beam Control System (HBC) Warning Indication/Warning Light (Amber) on page 7-66.

CAUTION

- Do not adjust the vehicle height, modify the headlight units, or remove the camera, otherwise the system will not operate normally.
- Do not rely excessively on the HBC and drive the vehicle while paying sufficient attention to safety. Switch the headlights between the high beams and low beams manually if necessary.

NOTE

The timing in which the system switches the headlights changes under the following conditions. If the system does not switch the headlights appropriately, manually switch between high and low beams according to the visibility as well as road and traffic conditions.

- When there are sources of light in the area such as street lamps, illuminated signboards, and traffic signals.
- When there are reflective objects in the surrounding area such as reflective plates and signs.
- When visibility is reduced under rain, snow and foggy conditions.
- When driving on roads with sharp turn or hilly terrain.

- When the headlights/rear lamps of vehicles in front of you or in the opposite lane are dim or not illuminated.

- When there is insufficient darkness such as at dawn or dusk.
- When the luggage compartment is loaded with heavy objects or the rear passenger seats are occupied.
- When visibility is reduced due to a vehicle in front of you spraying water from its tyres onto your windscreen.

▼ To Operate the System

The HBC operates to switch the headlights automatically between high and low beams after the ignition is switched ON and the headlight switch is in the AUTO and low beam position.

The HBC determines that it is dark based on the brightness of the surrounding area. At the same time, the HBC indicator light (green) in the instrument cluster illuminates.



NOTE

Operation of the HBC function can be disabled.

Refer to the Settings section in the MZD Connect Owner's Manual.

▼ Manual Switching

Switching to low beams

Switch the headlight switch to the  position, or press the high beam control switch.

The HBC indicator light (green) turns off.



1. High beam control switch

If the HBC is turned off using the high beam control switch, press the high beam control switch again to turn the HBC back on.

Switching to high beams

Shift the lever to the high beam position. The HBC indicator light (green) turns off and the headlight high-beam indicator light is illuminated.

Adaptive LED Headlights (ALH)*

▼ Adaptive LED Headlights (ALH)

The ALH are a system which uses the Forward Sensing Camera (FSC) to determine the situation of a vehicle ahead or a vehicle approaching in the opposite direction while driving at night to automatically switch the illumination range of the headlights, the illuminated area, or the illumination brightness.


Refer to Forward Sensing Camera (FSC) on page 4-234.

The ALH are controlled between high and low beams as follows to assure the driver's visibility without dazzling a vehicle ahead or a vehicle approaching in the opposite direction.

Glare-Free High Beam

This feature dims only the high-beam light shone on the vehicle ahead.

The high beams will dim while driving at a speed of about 40 km/h (25 mph) or faster. When the vehicle speed is less than about 30 km/h (19 mph), the beams switch to the low beams.

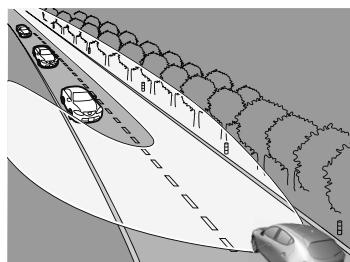


NOTE

The headlight high-beam indicator light turns on while the high beams are on.

Wide-Range Low Beam

This feature extends the illumination range of the light cast by the low beams while driving at a speed less than about 40 km/h (25 mph).

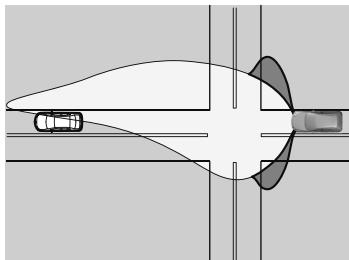

Highway Mode

This feature shifts the illumination angle of the light cast by the headlights upward while driving on highways.



The distance in which the ALH can detect objects varies depending on the surrounding conditions.



CAUTION

- Do not modify the suspensions or headlight units, or remove the camera. Otherwise, the ALH may not operate normally.
- Do not rely excessively on the ALH and drive the vehicle while paying sufficient attention to safety. Switch the headlights between the high beams and low beams manually if necessary.

NOTE

Under the following conditions, the ALH may not operate normally. Manually switch between the high and low beams according to the visibility, and the road and traffic conditions.

- When there are other sources of light in the area such as street lamps, illuminated signboards, and traffic signals.
- When there are reflective objects in the surrounding area such as reflective plates and signs.
- When visibility is reduced under rain, snow and foggy conditions.
- When driving on roads with sharp curves or undulations.
- When the headlights/rear lamps of vehicles ahead or in the opposite lane are dim or not illuminated.
- When there is insufficient darkness such as at dawn or dusk.
- When the luggage compartment is loaded with heavy objects or the rear passenger seats are occupied.
- When visibility is reduced due to a vehicle ahead spraying water from its tyres onto your windscreens.

▼ To Operate the System

The ALH operates to control Glare-Free High Beam, Wide-Range Low Beam and Highway Mode automatically after the ignition is switched ON and the headlight switch is in the **AUTO** and low beam position.

The ALH determines that it is dark based on the brightness of the surrounding area. At the same time, the ALH indicator light (green) in the instrument cluster illuminates.



NOTE

Operation of the ALH function can be disabled.

Refer to the Settings section in the MZD Connect Owner's Manual.

▼ Manual Switching

Switching to low beams

Switch the headlight switch to the  position, or press the ALH switch.

The ALH indicator light (green) turns off.



1. ALH switch

If the ALH is turned off using the ALH switch, press the ALH switch again to turn the ALH back on.

Switching to high beams

Shift the lever to the high beam position. The ALH indicator light (green) turns off and the headlight high-beam indicator light is illuminated.


Lane Departure Warning System (LDWS)*

▼ Lane Departure Warning System (LDWS)

The LDWS alerts the driver that the vehicle may be deviating from its lane. The system detects the white (yellow) lines on the traffic lane using the forward sensing camera (FSC) and if it determines that the vehicle might be deviating from its lane, it notifies the driver by the LDWS.

Refer to Forward Sensing Camera (FSC) on page 4-234.

Use the LDWS when you drive the vehicle on roads with white (yellow) lines.

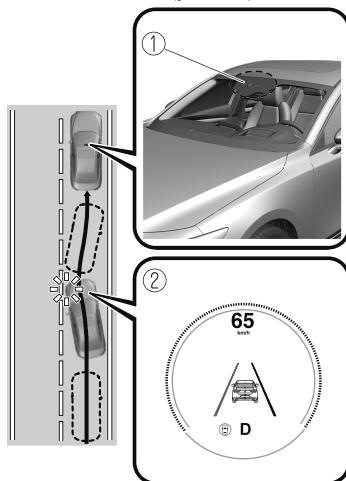

1. Forward sensing camera (FSC)
2. Multi-information display

⚠ WARNING

Do not rely completely on the LDWS:

- The LDWS system is not designed to compensate for a driver's lack of caution and relying too much on the system could lead to an accident.
- The functions of the LDWS have limitations. Always stay on course using the steering wheel and drive with care.

⚠ CAUTION

Heed the following cautions so that the LDWS can operate normally.

- Do not modify the vehicle's suspensions.
- Always use wheels of the specified type and size for the front and rear wheels. Consult an expert repairer, we recommend an Authorised Mazda Repairer for tyre replacement.

NOTE

The system may not operate normally under the following conditions.

- The white (yellow) lane lines are less visible because of dirt or paint flaking.
 - White (yellow) lane lines are less visible because of bad weather (rain, fog, or snow).
 - The vehicle is driven on a temporary lane or section with a closed lane resulting from construction where there might be multiple white (yellow) lane lines, or they are interrupted.
 - The camera picks up an obscure line, such as a temporary line being used for construction, or because of shade, unmelted snow, or grooves filled with water.
 - The surrounding brightness suddenly changes such as when entering or exiting a tunnel.
 - Back-light is reflected off the road surface.
 - The road surface is wet and shiny after rain, or there are puddles on the road.
 - The width of a lane is excessively narrow.
 - The vehicle is driven on roads with tight curves.
 - Heavy luggage is loaded in the luggage compartment or on the rear seat causing the vehicle to tilt.
 - The vehicle is driven through a fork in the road or a junction.
 - The shade of a guardrail parallel to a white (yellow) lane line is cast on the road.
 - The illumination of the headlights is weakened because of dirt or the optical axis is deviated at night.
 - The road is excessively uneven.
- The vehicle is shaken after hitting a road bump.
 - A vehicle in front of your vehicle is running near a white (yellow) lane line making it less visible.
 - The windscreen is dirty or foggy.
 - Strong light is directed from the front of the vehicle (such as sunlight, or headlights (high-beam) of on-coming vehicles).
 - The vehicle is driven through an intersection or a roundabout.

▼ When the System Operates

When the ignition is switched ON, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) turns on and the system goes on standby.

**NOTE**

If the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) does not turn on, the system is cancelled using the i-ACTIVSENSE switch or the personalisation feature.

Operation conditions

When all of the following conditions are met, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) on the multi-information display changes from white to green and the system becomes operational.

- The ignition is switched ON.
- The vehicle speed is about 60 km/h (37 mph) or faster.

i-ACTIVSENSE

- The system detects white (yellow) lane lines.



NOTE

When the system does not detect a white (yellow) lane line on one side only, the system does not operate on the side that is not being detected.

When temporarily cancelling the system

The LDWS becomes operational in the following cases: The LDWS operation is automatically restored when the system's operation conditions are met.

- The system cannot detect white (yellow) lane lines.
- The vehicle speed is less than about 55 km/h (34 mph).
- The direction indicator lever is operated.
- The accelerator pedal is depressed.
- The steering wheel is operated.
- The brake pedal is operated.

The function is temporarily stopped.

The LDWS stops functioning in the following cases:

- The temperature in the forward sensing camera (FSC) is high or low.
- The windscreen around the forward sensing camera (FSC) is foggy.
- The windscreen around the forward sensing camera (FSC) is blocked by an obstruction, causing poor forward visibility.

- Strong light (such as sunlight, or headlights (high-beam) of on-coming vehicles) is directed at the forward sensing camera (FSC).


System malfunction

If there is a problem with the system, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) and the i-ACTIVSENSE warning indication/warning light on the multi-information display turns on and a message is indicated.

Refer to i-ACTIVSENSE Status Symbol (Warning/Risk Avoidance Support System) on page 4-104.

▼ Lane Departure Warning

If the system determines that the vehicle may deviate from its lane, a warning (beep sound, steering wheel vibration) is activated and the direction in which the system determines that the vehicle may deviate is indicated on the multi-information display.

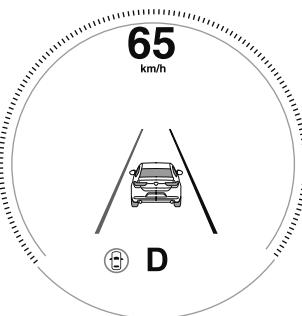

NOTE

- The LDWS settings can be changed. Refer to the Settings section in the *MZD Connect Owner's Manual*.

- You may not be able to hear the LDWS warning sound depending on the surrounding conditions such as outside noise.
- If you set the LDWS to vibrate the steering wheel, you may not feel the vibrations depending on the road surface conditions.

▼ Cancelling the System

The LDWS can be set to inoperable.

- **(If only the LDWS is turned off)**
Refer to the Settings section in the **MZD Connect Owner's Manual**.
- **(If the LDWS is turned off by operating the i-ACTIVSENSE switch)**
Refer to **i-ACTIVSENSE Switch** on page 4-105.

NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the LDWS operable, the LDWS remains operational the next time the ignition is switched ON.

Blind Spot Monitoring (BSM)*

▼ Blind Spot Monitoring (BSM)

The BSM is designed to assist the driver in checking the area to the rear of the vehicle on both sides during lane changes by notifying the driver of the presence of vehicles approaching from the rear in an adjacent lane.


BSM operation

The BSM detects vehicles approaching from the rear while travelling in the forward direction at a speed of 30 km/h (19 mph) or faster and notifies the driver by turning on the BSM warning indicator light and displaying the vehicle detection screen.

If the direction indicator lever is operated to signal a turn in the direction in which the BSM warning indicator light is illuminated while the approaching vehicle is detected, the BSM notifies the driver of possible danger flashing on the BSM warning indicator light, and by activating the warning sound and the warning screen indicator display.

i-ACTIVSENSE

The detection area on this system covers the driving lanes on both sides of the vehicle and from the rear part of the front doors to about 50 m (164 ft) behind the vehicle.

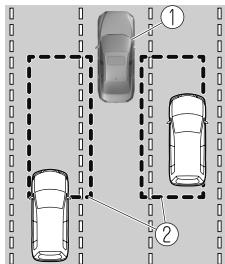

1. Your vehicle
2. Detection areas

! WARNING

Always check the surrounding area visually before making an actual lane change:

The system is only designed to assist you in checking for vehicles at your rear when making a lane change. Due to certain limitations with the operation of this system, the BSM warning indicator light, the warning sound and the warning screen indicator display may not activate or they might be delayed even though a vehicle is in an adjacent driving lane. Always make it your responsibility as a driver to check the rear.


NOTE

- The BSM will operate when all of the following conditions are met:
 - The ignition is switched ON.
 - The i-ACTIVSENSE warning indication/warning light in the instrument cluster is turned off.
 - The vehicle speed is about 30 km/h (19 mph) or faster.
- The BSM will not operate under the following circumstances.
 - The vehicle speed falls below about 25 km/h (15 mph) even though the i-ACTIVSENSE warning indication/warning light is turned off.
 - The shift lever (manual transmission)/selector lever (automatic transmission) is shifted to reverse (R) and the vehicle is reversing.
 - The turning radius is small (making a sharp turn, turning at intersections).
- In the following cases, the i-ACTIVSENSE warning indication/warning light turns on and operation of the system is stopped. If the i-ACTIVSENSE warning indication/warning light remains illuminated, have the vehicle inspected at an expert repairer; we recommend an Authorised Mazda Repairer as soon as possible.
 - Some problem with the system including the BSM warning indicator lights is detected.
 - A large deviation in the installation position of a rear side radar sensor on the vehicle has occurred.
 - There is a large accumulation of snow or ice on the rear bumper near a rear side radar sensor. Remove any snow, ice or mud on the rear bumper.

- Driving on snow-covered roads for long periods.
- The temperature near the rear side radar sensor becomes extremely hot due to driving for long periods on slopes during the summer.
- The battery voltage has decreased.
- Under the following conditions, the rear side radar sensor cannot detect target objects or it may be difficult to detect them.
 - The rear bumper around the rear side radar sensor is deformed.
 - Radio wave interference from a radar sensor equipped on a nearby vehicle.
 - The approaching vehicle is any of the following shapes.
 - a) The size of the vehicle body is extremely small.
 - b) The vehicle height is extremely low or high.
 - c) A special type of vehicle with a complex shape.
 - A vehicle is in the detection area at the rear in an adjacent driving lane but it does not approach. The BSM determines the condition based on radar detection data.
 - A vehicle is travelling alongside your vehicle at nearly the same speed for an extended period of time.
 - Vehicles approaching in the opposite direction.
 - A vehicle in an adjacent driving lane is attempting to pass your vehicle.
 - A vehicle is in an adjacent lane on a road with extremely wide driving lanes. The detection area of the rear side radar sensor is set at the road width of expressways.
- In the following case, the flashing of the BSM warning indicator light, and the activation of the warning sound and the warning screen indicator display may not occur or they may be delayed.
 - A vehicle makes a lane change from a driving lane two lanes over to an adjacent lane.
 - Driving on steep slopes.
 - Crossing the summit of a hill or mountain pass.
 - When there is a difference in the height between your driving lane and the adjacent lane.
 - Directly after the BSM system becomes operable by changing the setting.
 - If the road width is extremely narrow, vehicles two lanes over may be detected. The detection area of the rear side radar sensor is set according to the road width of expressways.


- The BSM warning indicator light may turn on and the vehicle detection screen may be displayed in the display in reaction to stationary objects (guardrails, tunnels, sidewalls, and parked vehicles) on the road or the roadside.

①


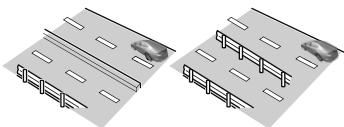


- Objects such as guardrails and concrete walls running alongside the vehicle.

①

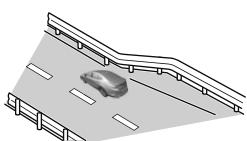

- Places where the width between guardrails or walls on each side of the vehicle narrows.

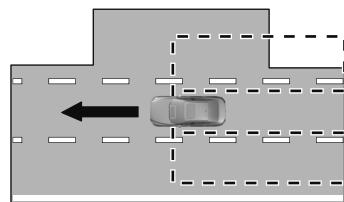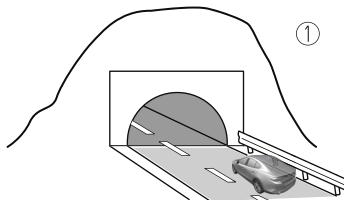

- The walls at the entrance and exits of tunnels, turnouts.

- A BSM warning indicator light may flash or the warning beep may be activated several times when making a turn at a city intersection.
- Turn off the BSM while pulling a trailer or while an accessory such as a bicycle carrier is installed to the rear of the vehicle. Otherwise, the radar's radio waves will be blocked causing the system to not operate normally.
- If a Mazda genuine trailer hitch is used, the BSM is automatically turned off.
- In the following cases, it may be difficult to view the illumination/flashing of the BSM warning indicator lights equipped on the door mirrors.
 - Snow or ice is adhering to the door mirrors.

- *The front door glass is fogged or covered in snow, frost or dirt.*
- *The rear side radar sensor of the BSM may be regulated under the radio wave related laws of the country where the vehicle is driven. If this system is used abroad, it may be necessary to turn off the system.*

Refer to Rear Side Radar Sensor on page 4-242.

- *The system switches to the Rear Cross Traffic Alert (RCTA) function when the shift lever (manual transmission) or the selector lever (automatic transmission) is shifted to the reverse (R) position.*


Refer to Rear Cross Traffic Alert (RCTA) on page 4-136.

▼ Blind Spot Monitoring (BSM) Warning Indicator Lights/Display Indicator/Blind Spot Monitoring (BSM) Warning Beep

The BSM system notifies the driver of the presence of vehicles in adjacent lanes or at the rear of the vehicle using the BSM warning indicator light, the warning sound and the display indicator while the systems are operational.

BSM warning indicator lights

The BSM warning indicator lights are equipped on the left and right door mirrors. The warning indicator lights turn on when a vehicle approaching from the rear in an adjacent lane is detected.

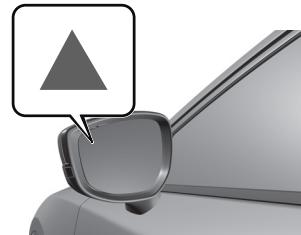

When the ignition is switched ON, the warning indicator light turns on momentarily and then turns off after a few seconds.

Function for cancelling illumination dimmer


If the BSM warning indicator lights turn on when the position lights are turned on, the brightness of the BSM warning indicator lights is dimmed.

If the BSM warning indicator lights are difficult to see due to glare from surrounding brightness when travelling on snow-covered roads or under foggy conditions, press the dimmer cancellation button to cancel the dimmer and increase the brightness of BSM warning indicator lights when they turn on.

Refer to Instrument Panel Illumination on page 4-29.

Display indicator

The detected approaching vehicle and warning are displayed in the multi-information display and active driving display (vehicles with active driving display).

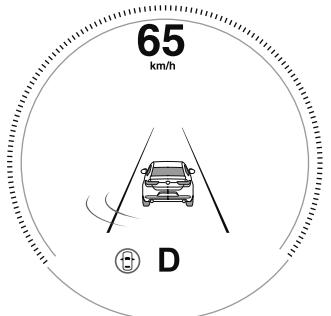Multi-information Display**Active Driving Display (vehicles with active driving display)**

The detected direction is displayed with a detection indicator (white) when an approaching vehicle is detected. In addition, if the direction indicator lever is operated to signal a lane change while the vehicle is detected, the display changes the colour (amber) of the warning indicator.

BSM warning beep

The BSM warning beep is activated simultaneously with the flashing of a BSM warning indicator light.

▼ Cancelling Operation of Blind Spot Monitoring (BSM)

The BSM system can be set to inoperable.

- **(If only the BSM is turned off)**
Refer to the Settings section in the MZD Connect Owner's Manual.
- **(If the BSM is turned off by operating the i-ACTIVSENSE switch)**
Refer to i-ACTIVSENSE Switch on page 4-105.

NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF while the BSM systems are operational, the BSM systems remain operational the next time the ignition is switched ON.

Traffic Sign Recognition System (TSR)*


▼ Traffic Sign Recognition System (TSR)

The TSR helps prevent the driver from overlooking traffic signs, and provides support for safer driving by displaying traffic signs on the active driving display/instrument cluster which are recognised by the Forward Sensing Camera (FSC) or recorded in the navigation system while the vehicle is driven.

The TSR displays the speed limit (including auxiliary signs), do not enter, traffic stop, and passing prohibited* signs.


If the vehicle speed exceeds the speed limit sign indicated in the active driving display/instrument cluster while the vehicle is driven, the system notifies the driver using the indication in the active driving display/instrument cluster and a warning sound.

Speed limit (including auxiliary signs), do not enter and passing prohibited* signs

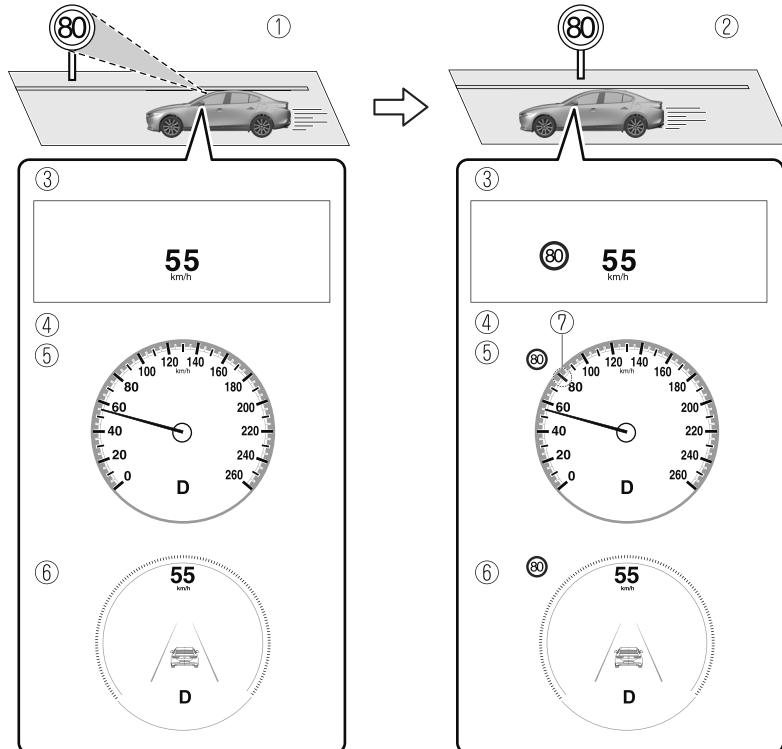

1. Sign recognised
2. Sign displayed

3. Active driving display indication
4. Instrument cluster
5. Basic display
6. i-ACTIVSENSE display
7. Recognized speed limit indication colour changes.

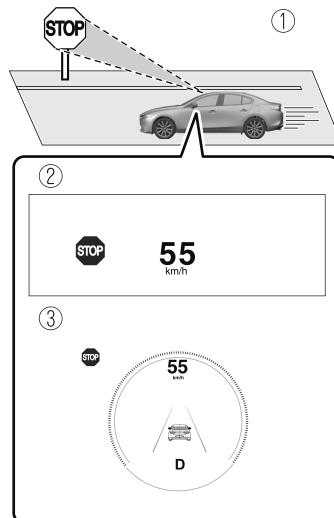Stop sign

1. Sign recognised and displayed at same time
2. Active driving display indication
3. Instrument cluster

! WARNING
Always check the traffic signs visually while driving.

The TSR helps prevent the driver from overlooking traffic signs and provides support for safer driving. Depending on the weather conditions or problems with traffic signs, a traffic sign may not be recognised or a traffic sign different from the actual traffic sign may be displayed. Always make it your responsibility as a driver to check the actual traffic signs. Otherwise, it could result in an accident.

NOTE

 
- The TSR is not supported in some countries or regions. For information concerning the supported countries or regions, consult an expert repairer, we recommend an Authorised Mazda Repairer.

- The TSR operates only if the navigation system SD card (Mazda genuine) is inserted in the SD card slot. Consult an expert repairer; we recommend an Authorised Mazda Repairer for details.*
- The TSR does not operate if there is a malfunction in the Forward Sensing Camera (FSC).
- Under the following conditions, the TSR may not operate normally.
 - An object placed on the instrument panel is reflected in the windscreen and picked up by the camera.
 - Heavy luggage is loaded in the luggage compartment or on the rear seat and the vehicle is tilted.
 - The tyre pressures are not adjusted to the specified pressure.
 - Tyres other than standard tyres are equipped.
 - The vehicle is driven on the ramp and surrounding area to or from a rest area or a tollgate on a highway.
 - When surrounding brightness suddenly changes such as when entering or exiting a tunnel.
 - The illumination of the headlights is weakened because of dirt or the optical axis is deviated.
 - The windscreen is dirty or foggy.
 - The windscreen and camera are fogged (water droplets).
 - Strong light is directed at the front of the vehicle (such as backlight or high-beam headlights of on-coming vehicles).
 - The vehicle is making a sharp turn.
 - Strong light reflects off the road.
 - A traffic sign is in a position which makes it difficult to reflect the light from the vehicle's headlights, such as when the vehicle is driven at night or in a tunnel.
 - The vehicle is driven under weather conditions such as rain, fog, or snow.
 - The stored map data for the navigation system is not current.
 - A traffic sign is obscured by mud or snow.
 - A traffic sign is concealed by trees or a vehicle.
 - A traffic sign is partially shaded.
 - A traffic sign is bent or warped.
 - A traffic sign is too low or too high.
 - A traffic sign is too bright or too dark (including electronic traffic signs).
 - A traffic sign is too big or too small.
 - There is an object similar to the traffic sign being read (such as another traffic sign or other signs resembling it).
 - The TSR can be set to invisible on the active driving display.
Refer to the Settings section in the MZD Connect Owner's Manual.

▼ Traffic Sign Display Indication

The following traffic signs are displayed on the active driving display/instrument cluster.

Speed limit signs (including auxiliary signs)



1. Speed limit signs
2. Auxiliary sign (example)

If the Forward Sensing Camera (FSC) cannot classify an auxiliary sign (such as time restrictions, turning restrictions, end of section) correctly, the following screen is displayed.



Inclement weather speed limit sign*



Do not enter signs



Stop signs



Passing prohibited sign*



The TSR can display a passing prohibited sign and a speed limit sign at the same time.



NOTE

Speed limit signs (including auxiliary signs)

- When the vehicle speed is about 1 km/h (0.6 mph) or faster, the speed limit sign is displayed when any one of the following conditions are met.
 - The Forward Sensing Camera (FSC) recognises a speed limit sign as a sign targeted for your vehicle and the vehicle passes it.
 - The speed limit sign stored in the navigation system is read.
- Inclement weather speed limit signs are displayed when all of the following conditions are met.
 - The vehicle speed is about 1 km/h (0.6 mph) or more.
 - The Forward Sensing Camera (FSC) recognises an inclement weather speed limit sign as a sign targeted for your vehicle and the vehicle passes it.
 - The inclement weather speed limit sign is lower than the currently displayed speed limit sign.
 - The windscreen wipers are operated.
- In the following cases, display of the speed limit sign stops.
 - Each sensor determines that the vehicle has changed direction of travel. (The display of a speed limit sign does not stop even if the vehicle changes lanes while a "ZONE" auxiliary sign is displayed.)
 - The Forward Sensing Camera (FSC) recognises a new speed limit sign which differs from the previous one (displays the new speed limit sign).

- The speed limit sign stored in the navigation system is not read within a certain period of time (if the Forward Sensing Camera (FSC) does not recognise a speed limit sign, the speed limit sign stored in the navigation system is displayed).
- The vehicle speed exceeds the displayed speed limit sign by 30 km/h (19 mph) or more after a certain period of time has elapsed since the speed limit sign was displayed.
(Except when there is information for the speed limit sign in the navigation system)

Do not enter signs

- A do not enter sign is displayed when all of the following conditions are met:
 - The vehicle speed is about 80 km/h (50 mph) or slower.
 - The Forward Sensing Camera (FSC) recognises a do not enter sign as a sign targeted for your vehicle and the vehicle passes it.
- When the Forward Sensing Camera (FSC) recognises the do not enter sign and a certain period of time has elapsed since the vehicle passed the sign, display of the do not enter sign stops.

Stop sign

- A stop sign is displayed when all of the following conditions are met:
 - The vehicle speed is about 40 km/h (25 mph) or slower.
 - The Forward Sensing Camera (FSC) recognises a stop sign as a sign targeted for your vehicle.


- When a certain period of time has elapsed since the stop sign was displayed, display of the stop sign stops.

Passing prohibited sign*

- A passing prohibited sign is displayed when all of the following conditions are met:
 - The vehicle speed is about 1 km/h (0.6 mph) or more.
 - The Forward Sensing Camera (FSC) recognises a passing prohibited sign as a sign targeted for your vehicle and the vehicle passes it.
- In the following cases, the display of the passing prohibited sign stops.
 - The Forward Sensing Camera (FSC) recognises a passing prohibited sign and you drive a certain distance after passing the sign.

▼ Excessive Speed Warning

If the vehicle speed exceeds the speed limit sign displayed in the active driving display/instrument cluster, the area around the speed limit sign flashes in amber and the warning sound is activated at the same time. If the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on. Check the surrounding conditions and adjust the vehicle speed to the legal speed using the appropriate operation such as depressing the brake pedal.

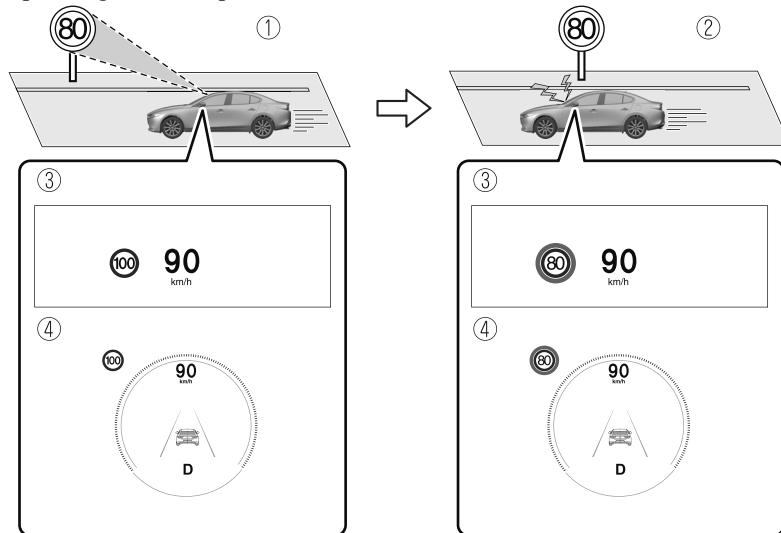

1. Vehicle is doing 90 km/h when 80 km/h speed limit sign is recognised.
2. Vehicle continues to do 90 km/h after 80 km/h speed limit sign is passed.
3. Active driving display indication
4. Instrument cluster

The excessive speed warning is initially set to visual only. If you want to activate the excessive speed warning, change the setting in the personalisation features. In addition, the warning pattern and the warning activation timing differ depending on the setting contents. Refer to the Settings section in the MZD Connect Owner's Manual.

Speed Limit Sign Alert setting

- Off: The excessive speed warning is not activated.
- Visual: The area around the speed limit sign displayed in the display flashes in amber, and if the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on.

- Visual + Audible: The area around the speed limit sign displayed in the display flashes in amber and the warning sound is activated at the same time. If the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on. The warning sound is activated continuously until the vehicle speed decreases below the speed limit sign.

Speed Limit Sign Threshold setting

- + 0: If the vehicle speed exceeds the speed limit sign displayed in the display, the excessive speed warning is activated.
- + 5: If the vehicle speed exceeds the speed limit sign displayed in the display by 5 km/h (3 mph), the excessive speed warning is activated.
- + 10: If the vehicle speed exceeds the speed limit sign displayed in the display by 10 km/h (5 mph), the excessive speed warning is activated.

NOTE

- *In the following cases, the excessive speed warning stops operating.*
 - *The vehicle speed is less than the speed of the displayed speed limit sign. (If the activation timing for the excessive speed warning is changed in the personalisation features, the excessive speed warning stops operating when the vehicle speed is less than the changed vehicle speed.)*
 - *A speed limit sign indication has been updated and the vehicle speed is lower than the updated indication.*
 - *Display of the speed limit sign stops.*
- *The warning indication is displayed at the same time the excessive speed warning sound is activated if the vehicle speed exceeds the speed indicated on the speed limit sign.*
Refer to Excessive Speed Warning on page 7-79.
- *If the Forward Sensing Camera (FSC) or data recorded in the navigation system incorrectly recognises the actual speed limit sign at a lower speed, the excessive speed alarm is activated even if the vehicle is driven at the legal speed.*

Distance & Speed Alert (DSA)*

▼ Distance & Speed Alert (DSA)

The DSA is a system which provides advice for maintaining the appropriate distance between vehicles and notifies the driver of the recommended, safe distance to maintain with a vehicle ahead. The system measures the distance between your vehicle and a vehicle ahead while the vehicle speed is about 30 km/h (19 mph) or faster. If the distance between your vehicle and the vehicle ahead is continuously close, the system alerts the driver of a possible collision using an indication on the display and suppresses your vehicle speed*¹ to prevent it from approaching the vehicle ahead too closely.

*¹ The function which suppresses your vehicle speed is not available in some markets.

WARNING

Do not rely completely on the DSA:

The ability of the system to detect a vehicle ahead is limited depending on the type of vehicle ahead, weather conditions, or traffic conditions. In addition, the system is not for maintaining the distance between your vehicle and a vehicle ahead. If you neglect to operate the accelerator and brake pedals correctly, it could lead to an accident. Always check the safety of the surrounding area and depress the brake pedal or accelerator pedal while keeping a safe distance from vehicles ahead or on-coming vehicles.

Operation conditions

The DSA operates when the following conditions are all met.

- The ignition is switched ON.
- The DSA is turned on.
- The shift lever (manual transmission vehicle) or the selector lever (automatic transmission vehicle) is in a position other than R.
- The vehicle speed is about 30 km/h (19 mph) or faster.
- i-ACTIVSENSE status symbol (warning/risk avoidance support system) (green) is displayed.


NOTE

- *The objects which activate the system are four-wheeled vehicles.*
- *The DSA may also operate in the presence of motorcycles and bicycles.*
- *The DSA may not operate normally when the speed of a vehicle ahead is too slow.*
- *The system does not operate with the following objects.*
 - *Vehicles approaching in the opposite direction.*
 - *Stationary objects (stopped vehicles, obstructions)*
- *The DSA can be set to inoperable.*
 - ***(If only the DSA is turned off)***
Refer to the Settings section in the MZD Connect Owner's Manual.
 - ***(If the DSA is turned off by operating the i-ACTIVSENSE switch)***
Refer to i-ACTIVSENSE Switch on page 4-105.

- When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the DSA operable, the system will be operable when the ignition is switched ON the next time.

▼ Vehicle Ahead Close Proximity Warning

When the system determines that the distance between your vehicle and a vehicle ahead is close, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) changes from green to amber and the warning indication is displayed on the multi-information display. While checking the safety of the surrounding area, depress the brake pedal while keeping a safe distance from the vehicle ahead.

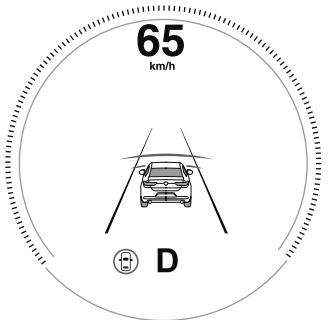

Driver Attention Alert (DAA)*


▼ Driver Attention Alert (DAA)

The DAA is a system which detects driver fatigue and decreased attentiveness, and encourages the driver to take a rest.

When the vehicle is driven inside traffic lane lines at about 65 to 140 km/h (41 to 86 mph), the DAA estimates the amount of accumulated fatigue and decreased attentiveness of the driver based on the information from the Forward Sensing Camera (FSC) and other vehicle information, and encourages the driver to take a rest using an indication on the multi-information display and a warning sound.

Use the DAA on expressways or highways.

Refer to Forward Sensing Camera (FSC) on page 4-234.

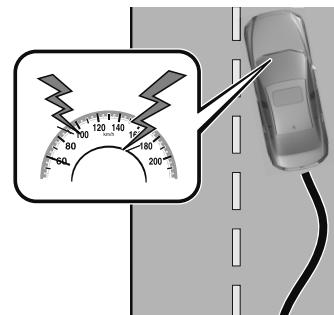

⚠ WARNING***Do not rely completely on DAA and always drive carefully:***

The DAA detects driver fatigue and decreased attentiveness and encourages the driver to take a rest, however, it is not designed to prevent the vehicle from straying. If you rely too much on the DAA it could lead to an accident. Drive carefully and operate the steering wheel appropriately.

In addition, the system may not be able to detect driver fatigue and decreased attentiveness correctly depending on the traffic and driving conditions. The driver must take sufficient rest in order to drive safely.


NOTE

- The DAA operates when all of the following conditions are met.
 - The vehicle speed is about 65 to 140 km/h (41 to 86 mph).
 - The system detects white (yellow) lane lines.
 - The system has completed learning of the driver's driving data after 60 minutes have passed since the driver began driving vehicle.
- The DAA does not operate under the following conditions.
 - The vehicle speed is less than about 65 km/h (41 mph).
 - The vehicle speed exceeds about 140 km/h (86 mph)
 - The vehicle is making a sharp turn.
 - The vehicle is changing lanes.

- The system cannot detect white (yellow) lane lines.
- The DAA may not operate normally under the following conditions.
 - White (yellow) lane lines are less visible because of dirt or fading/patchiness.
 - The vehicle is jolted or swayed continuously by strong winds or rough roads.
 - The vehicle is driven aggressively.
 - When making frequent lane changes.
 - The vehicle is making a curve.
- The DAA detects driver fatigue and decreased attentiveness based on the driving data when the vehicle is driven at about 65 to 140 km/h (41 to 86 mph) for about 20 minutes. The driving data will be reset under the following conditions.
 - The vehicle is stopped for 15 minutes or longer.
 - The vehicle is driven at less than about 65 km/h (41 mph) for about 30 minutes.
 - The ignition is switched off.
- After the DAA has displayed the first message encouraging rest, it does not display the next one until 60 minutes have passed.

▼ Driver Attention Alert (DAA) Display

When the system detects driver fatigue or decreased attentiveness, it activates the warning sound and displays an alert in the multi-information display.

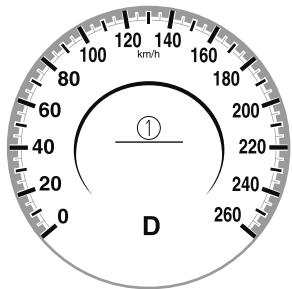

1. “Time for a Break” message is displayed

▼ Cancelling Driver Attention Alert (DAA)

The DAA can be set to not activate. Refer to the Settings section in the *MZD Connect Owner's Manual*.

Driver Monitoring (DM)*


▼ Driver Monitoring (DM)

The DM is a system which detects driver fatigue and sleepiness, and encourages the driver to take a rest.

While driving the vehicle at about 5 km/h (3 mph) or faster, the DM detects changes in the driver's facial features using the driver monitoring camera. The system then estimates the amount of accumulated fatigue and sleepiness of the driver and encourages the driver to take a rest using a warning indication in the instrument cluster and a warning sound.

Two types of warning indication patterns are set for notifying the driver based on the estimated amount of accumulated fatigue and sleepiness of the driver.

- Fatigue and sleepiness are detected: Warning pattern (caution)
- Much more fatigue and sleepiness are detected: Warning pattern (warning)

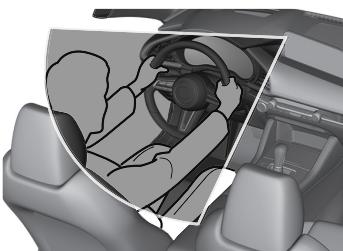

⚠ WARNING

Do not rely completely on the DM and always drive carefully:

The DM is a system which detects driver fatigue and sleepiness, and encourages the driver to take a rest. This is not designed to prevent driver fatigue and sleepiness, and over-reliance on the system could lead to an accident. Drive carefully and turn the steering wheel appropriately.

In addition, the system may not be able to detect driver fatigue and sleepiness correctly depending on the traffic and driving conditions. The driver must take sufficient rest in order to drive safely.

Operation conditions

The DM begins monitoring after 20 minutes have passed since the driver began driving the vehicle and when the vehicle speed is about 5 km/h (3 mph) or faster.

NOTE


- If the vehicle speed decreases to less than about 5 km/h (3 mph) while the DM is monitoring, the DM stops monitoring for 6 minutes even if the vehicle speed returns to about 5 km/h (3 mph) or faster.
- If the driver monitoring camera does not recognise the driver correctly, the DM may not monitor correctly.
Refer to Driver Monitoring Camera on page 4-245.
- After the DM has displayed the first message encouraging the driver to take a rest, it does not display it again during the following periods.

- After displaying the warning pattern (caution), the next warning pattern (caution) is not displayed until 45 minutes have passed.
- After displaying the warning pattern (warning), the next warning pattern (warning) is not displayed until 15 minutes have passed.
- After displaying the warning pattern (warning), the next warning pattern (caution) is not displayed until 45 minutes have passed.

▼ Driver Monitoring (DM) Display


When the Driver Monitoring (DM) detects driver fatigue or sleepiness, it activates the warning sound and displays an alert in the instrument cluster.

Warning pattern (caution) (white)

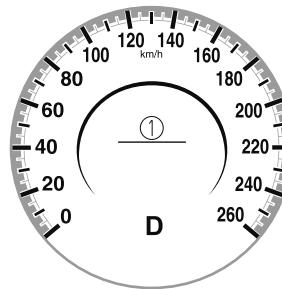

1. “Time for a Break” message is displayed

Warning pattern (warning) (amber)

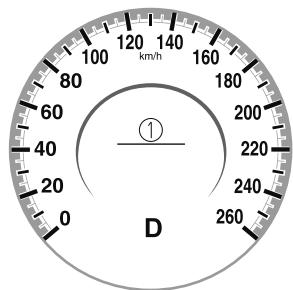

1. “Time for a Break” message is displayed

▼ Cancelling Driver Monitoring (DM)

The Driver Monitoring (DM) can be set to inoperable.


Refer to the Settings section in the **MZD Connect Owner's Manual**.

Front Cross Traffic Alert (FCTA)*

▼ Front Cross Traffic Alert (FCTA)

The FCTA is designed to assist the driver in checking both sides of the vehicle when the vehicle starts to drive at an intersection.

The FCTA detects vehicles approaching from the blind spots on the front left and right sides of the vehicle when the vehicle starts to drive at an intersection, and notifies the driver of possible danger using the warning indication on the display and the warning sound.

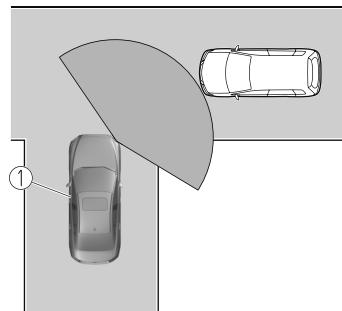

1. Your vehicle

WARNING

Always check the surrounding area visually when the vehicle starts to drive at an intersection:

Due to certain limitations with the operation of this system, the warning indication on the display or the warning sound might be delayed even though there is a vehicle approaching from a blind spot. Always make it your responsibility as a driver to check the left and right sides.


Operation conditions

The system operates when all of the following conditions are met:




- When your vehicle is driven at less than about 10 km/h (6 mph).
- **(Automatic transmission)**
The selector lever is in the D position.
- **(Manual transmission)**
The shift lever is in a position other than N or R.
- When a vehicle approaches from the front side of your vehicle at a vehicle speed of about 5 km/h (3 mph) or faster.

FCTA operation**When your vehicle is stopped**

When a vehicle is approaching, the system notifies the driver that a vehicle is approaching on the following display (white arrow).

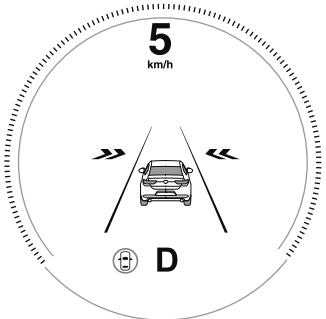Multi-information display**Active driving display (vehicles with active driving display)****360°view monitor (vehicles with 360°view monitor)****When your vehicle is being driven**

If there is a possibility of a collision with an approaching vehicle, a warning indication is displayed on the following display (amber arrow) and the warning sound is activated at the same time.

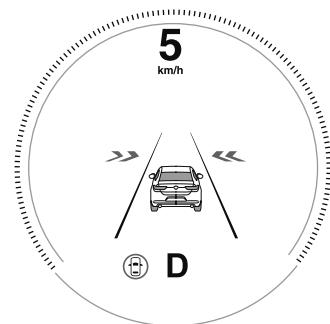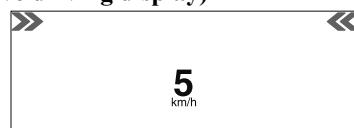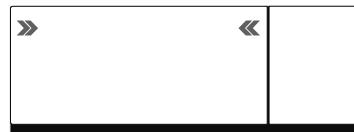Multi-information display**Active driving display (vehicles with active driving display)****360°view monitor (vehicles with 360°view monitor)**

NOTE

- The system may operate under the following conditions even if a vehicle is not approaching.
 - An object that reflects the radio waves of the radar such as a parked vehicle, guardrail, or wall is directly next to your vehicle.
 - Vehicles are stopped in the area around your vehicle such as during heavy traffic.
 - A vehicle approaching from the front or side of your vehicle slows down.
 - A vehicle approaching from the front or left side of your vehicle makes a right or left turn directly in front of your vehicle.
 - A vehicle or pedestrian moves in the parking lot or on the sidewalk in the area surrounding your vehicle.
 - After making a left or right turn, an on-coming vehicle is present.
 - When passing an on-coming vehicle.
 - A vehicle overtakes your vehicle while it is stopped.
 - Your vehicle is in an area where strong radio waves or electrical noise may occur such as near a television tower or power plant.
- Under the following conditions, the front side radar sensor cannot detect approaching vehicles or it might be difficult to detect them, and the system may not operate normally.
 - The front side radar sensor detection area is obstructed by a nearby wall or vehicle.
 - Directly after the system becomes operable.

- Radio wave interference from a radar sensor equipped on a nearby vehicle.
- The approaching vehicle has any of the following shapes.
 - a) The size of the vehicle body is extremely small.
 - b) The vehicle height is extremely low or high.
 - c) A special type of vehicle with a complex shape
- A vehicle suddenly enters the detection area from the front or side of your vehicle.
- A vehicle that has stopped suddenly starts to move.
- Multiple objects move at the same time.
- The vehicle is driven in bad weather conditions such as heavy rain, fog, snow, or sand storms.
- The vehicle is driven on a sharp curve or on bumpy roads.
- An object that reflects the radio waves of the radar such as a parked vehicle, guardrail, or wall is directly next to your vehicle.
- A vehicle approaches while turning (Such as roundabout)
- The vehicle is driven at an extremely slow speed.
- In the following cases, the system turns on the i-ACTIVSENSE warning indication/warning light and operation of the system is stopped. If the i-ACTIVSENSE warning indication/warning light remains on, have the vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.
 - Some problem with the system has occurred.

- The front side radar sensor installation position is greatly deviated.
- There is a large accumulation of snow or ice on the front bumper near a front side radar sensor.
- The temperature near the radar sensors becomes extremely hot due to driving for a long time on slopes during the summer.
- The battery voltage has decreased.
- The front side radar sensor of the FCTA may be regulated under the radio wave related laws of the country where the vehicle is driven. If this system is used abroad, it may be necessary to turn off the system. Refer to Front Side Radar Sensor on page 4-241.

▼ Cancelling Operation of Front Cross Traffic Alert (FCTA)

The FCTA can be set to inoperable.

- **(If only the FCTA is turned off)**
Refer to the Settings section in the MZD Connect Owner's Manual.
- **(If the FCTA is turned off by operating the i-ACTIVSENSE switch)**
Refer to i-ACTIVSENSE Switch on page 4-105.

NOTE


When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the FCTA operable, the system will be operable when the ignition is switched ON the next time.

Rear Cross Traffic Alert (RCTA)*

▼ Rear Cross Traffic Alert (RCTA)

The RCTA system is designed to assist the driver in checking the area to the rear left and right sides of your vehicle while your vehicle is reversing by alerting the driver to the presence of vehicles approaching the rear of your vehicle.

The RCTA system detects vehicles approaching from the rear left and right sides of your vehicle and the rear of your vehicle while your vehicle is being reversed out of a parking space, and notifies the driver of possible danger using the Blind Spot Monitoring (BSM) warning indicator lights and the warning buzzer.

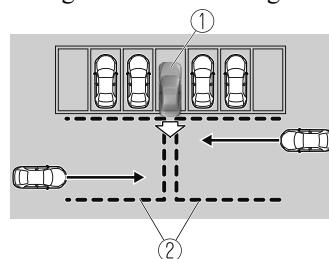

1. Your vehicle
2. Detection areas

⚠️ WARNING

Always check the surrounding area visually before actually putting the vehicle in reverse:

The system is only designed to assist you in checking for vehicles at the rear when putting the vehicle in reverse. Due to certain limitations with the operation of this system, the Blind Spot Monitoring (BSM) warning indicator lights may not flash or it might be delayed even though a vehicle is behind your vehicle. Always make it your responsibility as a driver to check the rear.

RCTA operation


1. The RCTA system operates when the shift lever (manual transmission) or the selector lever (automatic transmission) is shifted to the reverse (R) position.
2. If there is the possibility of a collision with an approaching vehicle, the Blind Spot Monitoring (BSM) warning indicator lights flashes and the warning beep is activated simultaneously.

Rear view monitor (vehicles with Rear view monitor)

The RCTA warning indication in the rearview monitor also synchronizes with the Blind Spot Monitoring (BSM) warning indicator light on the door mirrors.

360°view monitor (vehicles with 360°view monitor)

The RCTA warning indication in the 360°view monitor also synchronizes with the Blind Spot Monitoring (BSM) warning indicator light on the door mirrors.

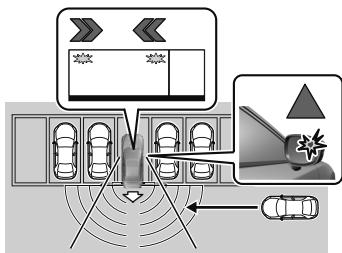

Function for cancelling illumination dimmer

If the BSM warning indicator lights turn on when the position lights are turned on, the brightness of the BSM warning indicator lights is dimmed.

If the BSM warning indicator lights are difficult to see due to glare from surrounding brightness when travelling on snow-covered roads or under foggy conditions, press the dimmer cancellation button to cancel the dimmer and increase the brightness of BSM warning indicator lights when they turn on.

Refer to Instrument Panel Illumination on page 4-29.

NOTE


- The system may operate under the following conditions even if a vehicle is not approaching.
- An object that reflects the radio waves of the radar such as a parked vehicle, guardrail, or wall is directly next to your vehicle.

i-ACTIVSENSE

- A vehicle approaching from the rear left and right side of your vehicle slows down.
- A vehicle approaching from the rear left and right side of your vehicle makes a right or left turn directly in front of your vehicle.
- A vehicle overtakes your vehicle while it is stopped.
- Your vehicle is in an area where strong radio waves or electrical noise may occur such as near a television tower or power plant.
- In the following cases, the i-ACTIVSENSE warning indication/warning light turns on and operation of the system is stopped. If the i-ACTIVSENSE warning indication/warning light remains illuminated, have the vehicle inspected at an expert repairer; we recommend an Authorised Mazda Repairer as soon as possible.
 - Some problem with the system including the Blind Spot Monitoring (BSM) warning indicator lights has occurred.
 - A large deviation in the installation position of a rear side radar sensor on the vehicle has occurred.
 - There is a large accumulation of snow or ice on the rear bumper near a rear side radar sensor.
 - Driving on snow-covered roads for long periods.
 - The temperature near the radar sensors becomes extremely hot due to driving for long periods on slopes during the summer.
 - The battery voltage has decreased.


• Under the following conditions, the rear side radar sensor cannot detect approaching vehicles or it might be difficult to detect them, and the system may not operate normally.

- The vehicle speed when reversing is about 15 km/h (9 mph) or faster.
- The rear side radar sensor detection area is obstructed by a nearby wall or parked vehicle. (Reverse the vehicle to a position where the radar sensor detection area is no longer obstructed.)

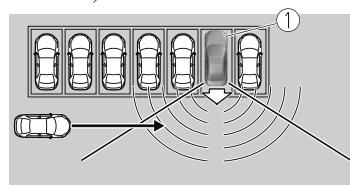


1. Your vehicle

- A vehicle is approaching directly from the rear of your vehicle.

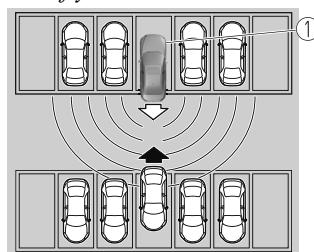

1. Your vehicle

- The vehicle is parked on a slant.

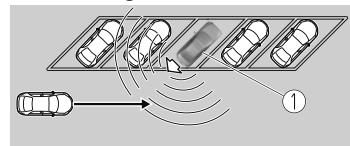

1. Your vehicle

- Directly after the RCTA system becomes operable using the personalisation feature.
- Radio wave interference from a radar sensor equipped on a nearby parked vehicle.
- In the following cases, it may be difficult to view the illumination/flashing of the Blind Spot Monitoring (BSM) warning indicator lights equipped on the door mirrors.
 - Snow or ice adheres to the door mirrors.
 - The front door glass is fogged or covered in snow, frost or dirt.
- Turn off the RCTA system while pulling a trailer or while an accessory such as a bicycle carrier is installed to the rear of the vehicle. Otherwise, the radio waves emitted by the radar will be blocked causing the system to not operate normally.
- The rear side radar sensor of the RCTA may be regulated under the radio wave related laws of the country where the vehicle is driven. If this system is used abroad, it may be necessary to turn off the system.
Refer to Rear Side Radar Sensor on page 4-242.
- If a Mazda genuine trailer hitch is used, the RCTA is automatically turned off.

▼ Cancelling Operation of Rear Cross Traffic Alert (RCTA)

The RCTA can be set to inoperable.

- **(If only the RCTA is turned off)**
Refer to the Settings section in the MZD Connect Owner's Manual.
- **(If the RCTA is turned off by operating the i-ACTIVSENSE switch)**
Refer to i-ACTIVSENSE Switch on page 4-105.

NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the RCTA operable, the system will be operable when the ignition is switched ON the next time.

Mazda Radar Cruise Control (MRCC)*

▼ Mazda Radar Cruise Control (MRCC)

The MRCC system is designed to maintain headway control*¹ with a vehicle ahead according to your vehicle's speed using a front radar sensor to detect the distance to the vehicle ahead and a preset vehicle speed without you having to use the accelerator or brake pedals.

*¹ Headway Control: Control of the distance between your vehicle and the vehicle ahead detected by the MRCC system.

Additionally, if your vehicle starts closing in on the vehicle ahead such as if the vehicle ahead brakes suddenly, a warning sound and a warning indication in the display are activated simultaneously to alert you to maintain a sufficient distance between the vehicles.

Also refer to the following before using the MRCC.

- Front radar sensor (page 4-238)

WARNING

Do not rely completely on the MRCC:

The MRCC system has detection limitations depending on the type of vehicle ahead and its conditions, the weather conditions, and the road conditions. Additionally, the system may be unable to decelerate sufficiently to avoid hitting the vehicle ahead if the vehicle ahead applies the brakes suddenly or another vehicle cuts into the driving lane, which could result in an accident.

Always drive carefully and verify the surrounding conditions and depress the brake pedal or accelerator pedal while keeping a safe distance from vehicles ahead or on-coming vehicles.

Do not use the MRCC system in the following locations. Using the MRCC system at the following locations may result in an unexpected accident:

- *General roads other than highways (Driving under these conditions using the MRCC system is not possible.)*
- *Roads with sharp curves and where vehicle traffic is heavy with insufficient space between vehicles, or roads where frequent and repetitive acceleration and deceleration occur (Driving under these conditions using the MRCC is not possible).*

- When entering and exiting interchanges, service areas, and parking areas of highways (If you exit a highway while headway control is in use, the vehicle ahead will no longer be tracked and your vehicle may accelerate to the set speed.)
- Slippery roads such as ice or snow-bound roads (Tyres could spin causing you to lose vehicle control, or the stop hold control may not operate.)
- Long, descending slopes (to maintain distance between vehicles, the system automatically and continuously applies the brakes which could result in the loss of brake power.)
- Slopes with a steep gradient (The vehicle ahead may not be detected correctly.)
- Two-wheeled vehicles such as motorcycles or bicycles are ahead.

For safety purposes, switch the MRCC system off when it is not being used.

Leaving the MRCC system turned on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.



CAUTION

- Turn the system off when the vehicle is running on a chassis roller.
- If your vehicle is towed or you are towing something, switch the MRCC system off to prevent an unexpected operation.

NOTE

- The MRCC system does not detect the following as physical objects.
 - Vehicles approaching in the opposite direction


- Pedestrians
- Stationary objects (stopped vehicles, obstructions)
- If a vehicle ahead is travelling at an extremely low speed, the system may not detect it correctly.
- If there is a structure on the road or an object (such as a monorail) at a low height off the ground in front of the vehicle, the system may operate. Therefore, do not use the MRCC.
- Do not use the MRCC system under conditions in which close proximity warnings are frequently activated.
- During headway control travel, the system accelerates and decelerates your vehicle in conjunction with the speed of the vehicle ahead. However, if it is necessary to accelerate for a lane change or if the vehicle ahead brakes suddenly causing you to close in on the vehicle rapidly, accelerate using the accelerator pedal or decelerate using the brake pedal depending on the conditions.
- While the MRCC system is in use, it does not cancel even if the selector lever (automatic transmission)/shift lever (manual transmission) is operated and any intended engine braking will not occur. If deceleration is required, lower the vehicle speed setting or depress the brake pedal.
- While braking by the MRCC control is operating, you might hear an operation sound, however, this does not indicate a problem.

- The brake lights turn on while braking by the MRCC control is operating, however, they may not turn on while the vehicle is on a down slope at the set vehicle speed or travelling at a constant speed and following a vehicle ahead.*
- Stop the headway control function to switch the system to the cruise control function.*
Refer to the *Settings* section in the *MZD Connect Owner's Manual*.

▼ Mazda Radar Cruise Control (MRCC) Display Indication


The MRCC setting status and operation conditions are indicated on the multi-information display and the active driving display.

Multi-information display (Basic display)

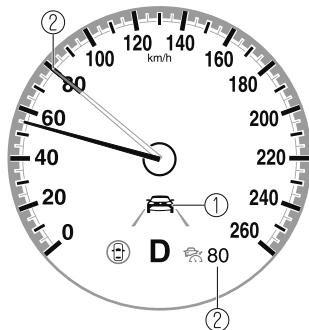


1. Vehicle ahead display
2. MRCC set vehicle speed

Multi-information display (i-ACTIVSENSE display)

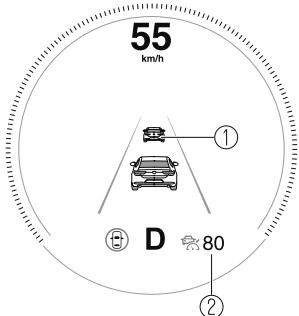

1. Vehicle ahead display
2. MRCC set vehicle speed

Active driving display

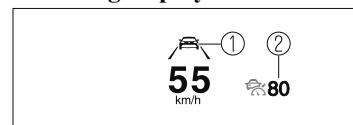


1. Vehicle ahead display
2. MRCC set vehicle speed

If there is a problem with the MRCC system, a message is displayed on the multi-information display. Check the centre display to verify the problem and then have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

Refer to If a Warning Light Turns On or Flashes on page 7-56.

▼ Close Proximity Warning

If your vehicle rapidly closes in on the vehicle ahead because the vehicle ahead applies the brakes suddenly while you are travelling in headway control, the warning sound activates and the brake warning is indicated in the display. Always verify the safety of the surrounding area and depress the brake pedal while keeping a safe distance from the vehicle ahead. Additionally, keep a safe distance from the vehicles behind you.

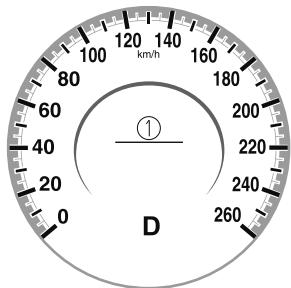

1. “Depress Brake Pedal” message is displayed

NOTE

In the following cases, the warnings and brakes may not operate even if your vehicle starts closing in on the vehicle ahead.

- You are driving your vehicle at the same speed as the vehicle ahead.
- Directly after the MRCC system has been set.
- Directly after the accelerator pedal is released.
- Another vehicle cuts into the driving lane.

▼ Setting the System

The MRCC system operates when all of the following conditions are met.

- The vehicle speed is as follows:
 - **(European models)**
About 30 km/h (19 mph) to 200 km/h (125 mph)
 - **(Except European models)**
About 30 km/h (19 mph) to 145 km/h (90 mph)
- The MRCC is turned on.
- The brake pedal is not depressed.
- The parking brake is released (Electric Parking Brake (EPB) indicator light is turned off).
- There is no problem with the DSC.
- All the doors are closed.
- The driver's seat belt is fastened.
- **(Manual transmission)**
 - The shift lever is in a position other than reverse (R) or neutral (N).
 - The clutch pedal is not depressed.
- **(Automatic transmission)**
 - The selector lever is in the drive (D) position or manual (M) position (manual mode).

NOTE

When the MRCC is operating, Distance & Speed Alert (DSA), and Smart Brake Support (SBS) also turns on automatically.

Turning on the system



1. CANCEL switch
2. RES switch
3. MRCC switch

When the MRCC switch is pressed once, the MRCC system turns on, and the MRCC standby indication (white) turns on and the vehicle speed and the distance between the vehicles while in headway control can be set.



In addition, the MRCC system display indication is displayed on the multi-information display and the active driving display at the same time.

NOTE

 
 
If the ignition is switched off while the MRCC system is operating, the system will be operable when the ignition is switched ON the next time.

How to set the speed

Adjust the vehicle speed to the desired setting using the accelerator pedal and press the RES switch up (SET+) or down (SET-) to start headway control.

The set speed is indicated on the display. At the same time, the MRCC standby indication (white) changes to the MRCC set indication (green).



Travel status	Indication on multi-information display	Indication on active driving display
During travel at constant speed	 ⊕ D  80	80 <small>km/h</small>  80
During travel under headway control	 ⊕ D  80	55 <small>km/h</small>  80

NOTE

- If a vehicle ahead is detected while travelling at a constant speed, the vehicle-ahead indication is displayed and headway control is performed. Additionally, when a vehicle ahead is no longer detected, the vehicle-ahead indication turns off and the system switches back to travel at constant speed.
- The lowest possible speed which can be set on the MRCC system is 30 km/h (19 mph).
- Headway control is not possible if the vehicle ahead is driving faster than your vehicle's set speed. Adjust the system to the desired vehicle speed using the accelerator pedal.

How to set the distance-between-vehicles during headway control

The distance-between-vehicles can be set to 4 levels; Long, medium, short, and extremely short distance.

The distance-between-vehicles is set to a shorter distance by pressing the CANCEL switch down. The distance-between-vehicles is set to a longer distance by pressing the CANCEL switch up.

Distance-between-vehicles guideline (at 80 km/h (50 mph) vehicle speed)	Indication on multi-information display	Indication on active driving display ^{*1}
Long (about 50 m (164 ft))		
Medium (about 40 m (131 ft))		
Short (about 30 m (98 ft))		

Distance-between-vehicles guide-line (at 80 km/h (50 mph) vehicle speed)	Indication on multi-information display	Indication on active driving display*1
Extremely short (about 25 m (82 ft))		

*1 Displays a pop-up image in the active driving display only when the driver operates the switch.

NOTE

- The distance-between-vehicles differs depending on the vehicle speed, and the slower the vehicle speed, the shorter the distance.*
- When the ignition is switched to ACC or OFF and then the engine is started again, the system automatically sets the distance-between-vehicles to the previous setting.*

Changing the Set Vehicle Speed

(To accelerate/decelerate using the RES switch)

When the RES switch is pressed up (SET+), the vehicle accelerates and when the RES switch is pressed down (SET-), it decelerates.

- Press and release immediately: 1 km/h (1 mph)
- Press and hold: 10 km/h (5 mph)

(To increase speed using accelerator pedal)

Depress the accelerator pedal and press the RES switch up (SET+) or down (SET-) at the desired speed. If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

NOTE

- The warnings and brake control do not operate while the accelerator pedal is depressed.*

· (European models)

When switching to a passing lane and operating the direction indicator, the system provides more acceleration automatically if it determines that more acceleration is required. Drive while being careful of the road ahead because you could approach the vehicle ahead too closely.

Cancelling the system

When the following operations are performed, the MRCC system is cancelled, and the MRCC set indication (green) switches to the MRCC standby indication (white) at the same time.

- The CANCEL switch is pressed.
- The brake pedal is depressed.

· (Manual transmission)

The shift lever is in the reverse (R) position.

· (Automatic transmission)

The selector lever is in the P (Park), N (Neutral), or R (Reverse) position.

Under the following conditions, the MRCC cancel indication is displayed in the multi-information display and a single beep sound is heard.

- The DSC has operated.
- The Smart Brake Support (SBS) has operated.
- When travelling on a downslope for a long period of time.
- There is a problem with the system.
- The vehicle speed decreases to less than 25 km (16 mph).

· (Manual transmission)

- The shift lever is shifted to neutral (N) for a certain period of time.
- The clutch is depressed for a certain period of time.
- The engine stalls.
- The front radar sensor cannot detect target objects (during rain, fog, snow or other inclement weather conditions, or when the radiator grille is dirty).
- The parking brake is applied.
- Any of the doors is opened.
- The driver's seat belt is unfastened.
- The operation frequency of the braking by the MRCC control is high.

Resuming control

If the MRCC system is cancelled, you can resume control at the previously set speed by pressing the RES switch and after all of the operation conditions have been met.

NOTE

If the set speed is not indicated in the display, the control does not resume even if the RES switch is pressed.

Turning off the system

When the MRCC switch is pressed while the MRCC is operating, the MRCC turns off.

▼ Shift-up/Shift-down Request Display

The shift-up or shift-down request display might be displayed while the MRCC is operating. When this occurs, shift gears because the gear position is not appropriate.

Request	Indication on display
Shift up	Shift Up to a Higher Gear
Shift down	Shift Down to a Lower Gear

NOTE

- If the gears are not shifted up even though the shift-up request indication is displayed, load will be applied to the engine and the MRCC might be automatically cancelled or engine damage could occur.*
- If the gears are not shifted down even though the shift-down request indication is displayed, the MRCC might be automatically cancelled or engine stalling could occur.*

Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)*

▼ Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)

The MRCC with Stop & Go function system is designed to maintain headway control*¹ with a vehicle ahead according to your vehicle's speed using a front radar sensor to detect the distance to the vehicle ahead and a preset vehicle speed without you having to use the accelerator or brake pedals.

*¹ Headway Control: Control of the distance between your vehicle and the vehicle ahead detected by the Mazda Radar Cruise Control (MRCC) system.

Additionally, if your vehicle starts closing in on the vehicle ahead such as if the vehicle ahead brakes suddenly, a warning sound and a warning indication in the display are activated simultaneously to alert you to maintain a sufficient distance between the vehicles.

If the vehicle ahead stops while you are following behind it, your vehicle will stop and be held stopped automatically (stop hold control), and headway control will resume when you resume driving the vehicle such as by pressing the RES switch.

Also refer to the following before using the MRCC with Stop & Go function.

- i-stop (page 4-12)
- AUTOHOLD (page 4-82)

- Forward Sensing Camera (FSC) (page 4-234)
- Front radar sensor (page 4-238)

! WARNING

Do not rely completely on the MRCC with Stop & Go function:

The MRCC with Stop & Go function system has detection limitations depending on the type of vehicle ahead and its conditions, the weather conditions, and the road conditions. Additionally, the system may be unable to decelerate sufficiently to avoid hitting the vehicle ahead if the vehicle ahead applies the brakes suddenly or another vehicle cuts into the driving lane, which could result in an accident.

Always drive carefully and verify the surrounding conditions and depress the brake pedal or accelerator pedal while keeping a safe distance from vehicles ahead or on-coming vehicles.

Do not use the MRCC with Stop & Go function system in the following locations.

Using the MRCC with Stop & Go function system at the following locations may result in an unexpected accident:

- General roads other than highways
(Driving under these conditions using the MRCC with Stop & Go function system is not possible.)
- Roads with sharp curves and where vehicle traffic is heavy with insufficient space between vehicles, or roads where frequent and repetitive acceleration and deceleration occur (Driving under these conditions using the MRCC with Stop & Go function is not possible).

- When entering and exiting interchanges, service areas, and parking areas of highways (If you exit a highway while headway control is in use, the vehicle ahead will no longer be tracked and your vehicle may accelerate to the set speed.)
- Slippery roads such as ice or snow-bound roads (Tyres could spin causing you to lose vehicle control, or the stop hold control may not operate.)
- Long, descending slopes (to maintain distance between vehicles, the system automatically and continuously applies the brakes which could result in the loss of brake power.)
- Slopes with a steep gradient (The vehicle ahead may not be detected correctly, your vehicle may slide while stopped by the stop hold control, and it may accelerate suddenly after it starts moving.)
- Two-wheeled vehicles such as motorcycles or bicycles are ahead.

For safety purposes, switch the MRCC with Stop & Go function system off when it is not being used.

Leaving the MRCC with Stop & Go function system turned on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.

Do not get out of the vehicle while the stop hold control is operating:

Getting out of the vehicle while the stop hold control is operating is dangerous as the vehicle may move unexpectedly and result in an accident. Before getting out of the vehicle, switch the MRCC with Stop & Go function system off, shift the selector lever to the P position, and apply the parking brake.

**CAUTION**

- If your vehicle is towed or you are towing something, switch the MRCC with Stop & Go function system off to prevent an unexpected operation.
- Turn the system off when the vehicle is running on a chassis roller.

NOTE

- The MRCC with Stop & Go function system does not detect the following as physical objects.
 - Vehicles approaching in the opposite direction
 - Pedestrians
 - Stationary objects (stopped vehicles, obstructions)
- If a vehicle ahead is travelling at an extremely low speed, the system may not detect it correctly.

- If there is a structure on the road or an object (such as a monorail) at a low height off the ground in front of the vehicle, the system may operate. Therefore, do not use the MRCC with Stop & Go function.
- Do not use the MRCC with Stop & Go function system under conditions in which close proximity warnings are frequently activated.
- During headway control travel, the system accelerates and decelerates your vehicle in conjunction with the speed of the vehicle ahead. However, if it is necessary to accelerate for a lane change or if the vehicle ahead brakes suddenly causing you to close in on the vehicle rapidly, accelerate using the accelerator pedal or decelerate using the brake pedal depending on the conditions.
- While the MRCC with Stop & Go function system is in use, it does not cancel even if the selector lever is operated and any intended engine braking does not occur. If deceleration is required, lower the set speed or depress the brake pedal.
- While braking by the MRCC with Stop & Go function control is operating, you might hear an operation sound, however, this does not indicate a problem.
- The brake lights turn on while braking by the MRCC with Stop & Go function control is operating, however, they may not turn on while the vehicle is on a down slope at the set vehicle speed or travelling at a constant speed and following a vehicle ahead.


- Stop the headway control function to switch the system to the cruise control function.*

Refer to the Settings section in the *MZD Connect Owner's Manual*.

▼ Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Display Indication


The MRCC with Stop & Go function setting status and operation conditions are indicated on the multi-information display and the active driving display.

Multi-information Display (Basic display)

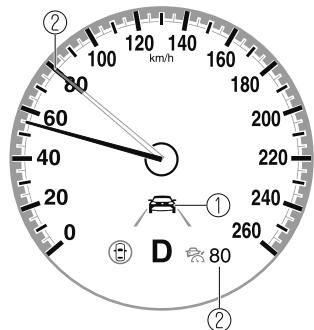


1. Vehicle ahead display
2. MRCC with Stop & Go function set vehicle speed

Multi-information Display (i-ACTIVSENSE display)

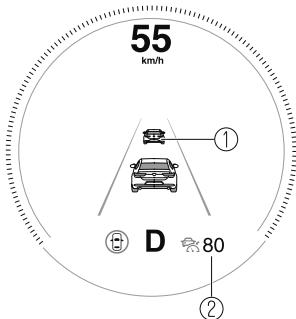

1. Vehicle ahead display
2. MRCC with Stop & Go function set vehicle speed

Active driving display

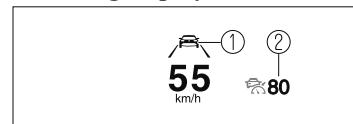

1. Vehicle ahead display
2. MRCC with Stop & Go function set vehicle speed


If there is a problem with the MRCC with Stop & Go function system, a message is displayed on the multi-information display. Check the centre display to verify the problem and then have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

Refer to If a Warning Light Turns On or Flashes on page 7-56.

▼ Close Proximity Warning

If your vehicle rapidly closes in on the vehicle ahead because the vehicle ahead applies the brakes suddenly while you are travelling in headway control, the warning sound activates and the brake warning is indicated in the display. Always verify the safety of the surrounding area and depress the brake pedal while keeping a safe distance from the vehicle ahead.

Additionally, keep a safe distance from the vehicles behind you.

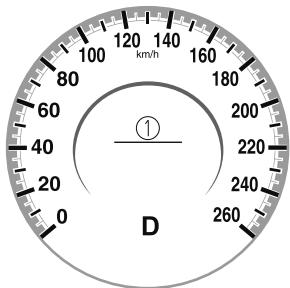

1. “Depress Brake Pedal” message is displayed

NOTE

In the following cases, the warnings and brakes may not operate even if your vehicle starts closing in on the vehicle ahead.

- You are driving your vehicle at the same speed as the vehicle ahead.
- Directly after the MRCC with Stop & Go function system has been set.
- Directly after the accelerator pedal is released.
- Another vehicle cuts into the driving lane.

▼ Setting the System


The MRCC with Stop & Go function system operates when all of the following conditions are met.

- The vehicle speed is as follows:
 - **(European models)**
About 0 km/h (0 mph) to 200 km/h (125 mph)
 - **(Except European models)**
About 0 km/h (0 mph) to 145 km/h (90 mph)
- The MRCC with Stop & Go function is turned on.
- The brake pedal is not depressed.
- The parking brake is released (Electric Parking Brake (EPB) indicator light is turned off).
- There is no problem with the DSC.
- All the doors are closed.
- The driver's seat belt is fastened.
- The selector lever is in the drive (D) position or manual (M) position (manual mode).

NOTE

- In the following cases, the MRCC with Stop & Go function system is cancelled when the vehicle is travelling at 30 km/h (20 mph) or less and "Mazda Radar Cruise Control Disabled Under 30 km/h (20mph)" is displayed in the multi-information display.
 - The Forward Sensing Camera (FSC) cannot detect target objects (There is problem with the Forward Sensing Camera (FSC) or windscreen is dirty).
 - There is a problem with the stop hold control function.
 - There is a problem with the Electric Parking Brake (EPB).
- When the MRCC with Stop & Go function system is operating, Distance & Speed Alert (DSA), and Smart Brake Support (SBS) also turns on automatically.
- It may not be possible to set the MRCC with Stop & Go function system directly after starting the engine, while the DSC operation is being checked.

Turning on the system

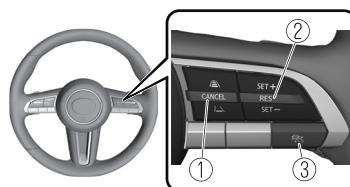

1. CANCEL switch
2. RES switch

3. MRCC switch

When the MRCC switch is pressed once, the MRCC with Stop & Go function system turns on, and the MRCC with Stop & Go function standby indication (white) turns on and the vehicle speed and the distance between the vehicles while in headway control can be set.



In addition, the MRCC with Stop & Go function system display indication is displayed on the multi-information display and the active driving display at the same time.

NOTE

If the ignition is switched off while the MRCC with Stop & Go function system is operating, the system will be operable when the ignition is switched ON the next time.

How to set the speed

Adjust the vehicle speed to the desired setting using the accelerator pedal and press the RES switch up (SET+) or down (SET-) to start headway control.

The set speed is indicated on the display. At the same time, the MRCC standby indication (white) changes to the MRCC set indication (green).



Travel status	Indication on multi-information display	Indication on active driving display
During travel at constant speed		80 km/h
During travel under headway control		55 km/h

NOTE


- If a vehicle ahead is detected while travelling at a constant speed, the vehicle-ahead indication is displayed and headway control is performed. Additionally, when a vehicle ahead is no longer detected, the vehicle-ahead indication turns off and the system switches back to travel at constant speed.
- The lowest possible speed which can be set on the MRCC with Stop & Go function system is 30 km/h (19 mph).
- Headway control is not possible if the vehicle ahead is driving faster than your vehicle's set speed. Adjust the system to the desired vehicle speed using the accelerator pedal.

How to set the distance-between-vehicles during headway control

The distance-between-vehicles can be set to 4 levels; Long, medium, short, and extremely short distance.

The distance-between-vehicles is set to a shorter distance by pressing the CANCEL switch down. The distance-between-vehicles is set to a longer distance by pressing the CANCEL switch up.

Distance-between-vehicles guideline (at 80 km/h (50 mph) vehicle speed)	Indication on multi-information display	Indication on active driving display ^{*1}
Long (about 50 m (164 ft))		
Medium (about 40 m (131 ft))		
Short (about 30 m (98 ft))		

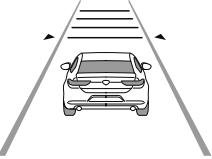Distance-between-vehicles guide-line (at 80 km/h (50 mph) vehicle speed)	Indication on multi-information display	Indication on active driving display ^{*1}
Extremely short (about 25 m (82 ft))		

*1 Displays a pop-up image in the active driving display only when the driver operates the switch.

NOTE

- The distance-between-vehicles differs depending on the vehicle speed, and the slower the vehicle speed, the shorter the distance.*
- When the ignition is switched to ACC or OFF and then the engine is started again, the system automatically sets the distance-between-vehicles to the previous setting.*

Changing the Set Vehicle Speed

(To accelerate/decelerate using the RES switch)

When the RES switch is pressed up (SET+), the vehicle accelerates and when the RES switch is pressed down (SET-), it decelerates.

- Press and release immediately: 1 km/h (1 mph)
- Press and hold: 10 km/h (5 mph)

(To increase speed using accelerator pedal)

Depress the accelerator pedal and press the RES switch up (SET+) or down (SET-) at the desired speed. If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

NOTE

- *The warnings and brake control do not operate while the accelerator pedal is depressed.*

- **(European models)**

When switching to a passing lane and operating the direction indicator, the system provides more acceleration automatically if it determines that more acceleration is required. Drive while being careful of the road ahead because you could approach the vehicle ahead too closely.

Cancelling the system

When the following operations are performed, the MRCC with Stop & Go function system is cancelled, and the MRCC with Stop & Go function set indication (green) switches to the MRCC with Stop & Go function standby indication (white) at the same time.

- The CANCEL switch is pressed.
- The brake pedal is depressed.
- The selector lever is in the P (Park), N (Neutral), or R (Reverse) position.

Under the following conditions, the MRCC with Stop & Go function cancel indication is displayed in the multi-information display and a single beep sound is heard.

- The DSC has operated.
- The Smart Brake Support (SBS) has operated.
- When travelling on a downslope for a long period of time.
- There is a problem with the system.
- The parking brake is automatically applied during stop hold control.
- The front radar sensor cannot detect target objects (during rain, fog, snow or other inclement weather conditions, or when the radiator grille is dirty).
- The parking brake is applied.
- Any of the doors is opened.
- The driver's seat belt is unfastened.
- The operation frequency of the braking by the MRCC with Stop & Go function control is high.

Resuming control

If the MRCC with Stop & Go function system is cancelled, you can resume control at the previously set speed by pressing the RES switch and after all of the operation conditions have been met.

NOTE

If the set speed is not indicated in the display, the control does not resume even if the RES switch is pressed.

Turning off the system

When the MRCC switch is pressed while the MRCC is operating, the MRCC turns off.

▼ Stop Hold Control

While in headway control using the MRCC with Stop & Go function system, your vehicle will stop when a vehicle ahead stops. When the vehicle is stopped and the stop hold control operates, the MRCC with Stop & Go function indicator light turns on.

HOLD

NOTE

- If the MRCC with Stop & Go function system is cancelled during stop hold control, the vehicle is held in its stopped position.*
- The parking brake is automatically applied and the vehicle is held in its stopped position when 10 minutes have elapsed since the stop hold control operated. At this time, the MRCC with Stop & Go function system is cancelled.*

- If the i-stop operation conditions are met during stop hold control, the engine stops even though the brake pedal is not depressed.*

Refer to i-stop on page 4-12.

- The brake lights turn on during stop hold control.*

To resume driving

After the vehicle ahead starts moving while your vehicle is stopped under stop hold control, press the RES switch or depress the accelerator pedal to cancel the stop hold control and resume driving.

NOTE

- When you resume driving by pressing the RES switch, your vehicle does not start moving until the distance between your vehicle and the vehicle ahead lengthens to the specified distance or farther.*

- The engine restarts automatically when any of the actions to resume driving are performed while i-stop is operating.*

- If the MRCC with Stop & Go function is temporarily cancelled during stop hold control, you cannot resume driving by pressing the RES switch when there are no vehicles in front of your vehicle.*

Depress the accelerator pedal and resume driving the vehicle.

- If the vehicle ahead starts moving within 3 seconds after your vehicle is stopped by the stop hold control, headway control will resume even if you do not resume driving your vehicle, such as by depressing the accelerator pedal.*

Resume driving information

If you do not resume driving within a few seconds after the vehicle ahead starts moving, the multi-information display vehicle-ahead indication flashes to urge the driver to resume driving. If you do not resume driving after the indicator light flashes, a sound is activated to urge you to resume driving.

Cruising & Traffic Support (CTS)***▼ Cruising & Traffic Support (CTS)**

The CTS is a system which consists of a headway control function and a steering assist function for reducing driver fatigue during traffic jams when driving on expressways or highways.

This system performs headway control to maintain a constant distance between your vehicle and a vehicle ahead at a preset vehicle speed without you having to use the accelerator or brake pedal. Even further, with the steering assist function, when vehicle lane lines are detected, the function assists the driver in keeping the vehicle within the lane lines. If lane lines are not detected, the function provides the driver driving assistance in keeping the vehicle along the motion path with the vehicle ahead.

***Do not rely completely on CTS:***

- *The CTS is not an automated driving system. In addition, the functions have limitations. Do not rely completely on the system and always stay on course using the steering wheel.*
- *Set a vehicle speed within the speed limit according to the road conditions and the weather conditions.*

➤ The CTS may not be able to detect a vehicle ahead depending on the type of vehicle ahead and its conditions, the weather conditions, and the road conditions. Additionally, the system might be unable to decelerate sufficiently if a vehicle ahead applies the brakes suddenly, another vehicle cuts into the driving lane, or the difference in vehicle speed between your vehicle and the vehicle ahead is larger, which could result in an accident. Check the surrounding conditions and always drive carefully while keeping a safe distance from vehicles ahead and on-coming vehicles.

For the purposes of safety, switch the CTS off when it is not being used.

Leaving the CTS turned on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.

Do not use the CTS under the following conditions. Otherwise, it may result in an accident.

➤ General roads other than expressways or highways (Driving under these conditions using the CTS is not possible.)
➤ Roads with sharp curves and where vehicle traffic is heavy with insufficient space between vehicles, or roads where frequent and repetitive acceleration and deceleration occur (Driving under these conditions using the CTS is not possible).

- When entering and exiting interchanges, service areas, and parking areas of expressways (If you exit an expressway while headway control is in use, the vehicle ahead will no longer be tracked and your vehicle may accelerate to the set speed).
➤ Slippery roads such as icy or snow-covered roads (Tyres could spin causing you to lose vehicle control, or the stop hold control may not operate.)
➤ Long, descending slopes (to maintain distance between vehicles, the system automatically and continuously applies the brakes which could result in the loss of brake power.)
➤ Two-wheeled vehicles such as motorcycles or bicycles are ahead.
➤ **(Automatic transmission vehicle)**
Slopes with a steep gradient (The vehicle ahead may not be detected correctly, your vehicle may slip while stopped by the stop hold control, or it may accelerate suddenly after it starts moving.)
➤ Driving under bad weather conditions (rain, fog, and snow).
➤ The vehicle is driven on slippery roads such as icy or snow-covered roads and unpaved roads (Tyres could spin causing you to lose vehicle control, or the stop hold control may not operate.)
➤ Tyres of a different specified size are used, such as a temporary spare tyre.
➤ Tyres with insufficient tread are used.
➤ The tyre pressures are not adjusted to the specified pressure.
➤ The vehicle is being used to tow a camper or boat trailer.
➤ Tyre chains are used.

- The vehicle is driven on roads with lane lines other than white (yellow) lines, such as an expressway.

Do not get out of the vehicle while the stop hold control is operating.

(Automatic transmission vehicle)

Getting out of the vehicle while the stop hold control is operating is dangerous as the vehicle may move unexpectedly and result in an accident. Before getting out of the vehicle, switch the CTS off, apply the parking brake, and then shift the selector lever to the P position.

⚠ CAUTION

Turn the system off when the vehicle is running on a chassis roller.
Heed the following cautions so that the CTS can operate normally.

- Turn the system off when the vehicle is running on a chassis roller.
➤ Do not modify the vehicle's suspensions.
➤ Always use wheels of the specified size for the front and rear wheels. Consult an expert repairer, we recommend an Authorised Mazda Repairer for tyre replacement.

NOTE

- The headway control does not detect the following as physical objects.
 - Vehicles approaching in the opposite direction

- Pedestrians
- Stationary objects (stopped vehicles, obstructions)
- If a vehicle ahead is travelling at an extremely low speed, the system may not detect it correctly.
- If there is a structure on the road or an object (such as a monorail) at a low height off the ground in front of the vehicle, the system may operate. Therefore, do not use the CTS.
- Do not use the CTS under conditions in which close proximity warnings are frequently activated.
- If it is necessary to accelerate for a lane change or the vehicle ahead brakes suddenly causing you to close in on the vehicle rapidly, accelerate using the accelerator pedal or decelerate using the brake pedal depending on the conditions.
- While the CTS is in use, any intended engine braking does not occur even if you shift the shift lever (manual transmission) or the selector lever (automatic transmission). If deceleration is required, lower the vehicle speed setting or depress the brake pedal.
- While braking by the CTS control is operating, you might hear an operation sound, however, this does not indicate a problem.
- The brake lights turn on while braking by the CTS control is operating, however, they may not turn on while the vehicle is on a down slope at the set vehicle speed or travelling at a constant speed and following a vehicle ahead.

- Under the following conditions, the CTS may not be able to detect white (yellow) lines or vehicles ahead correctly and the CTS may not operate normally.
 - The forward sensing camera (FSC) cannot recognise the area in front of the vehicle due to soiling or fog.
 - The white (yellow) lane lines are less visible because of dirt or paint flaking.
 - White (yellow) lane lines or vehicles ahead are less visible because of bad weather (rain, fog, or snow).
 - The vehicle is driven on a temporary lane or section with a closed lane resulting from construction where there might be multiple white (yellow) lane lines, or they are interrupted.
 - The camera picks up an obscure line, such as a temporary line being used for construction, or because of shade, unmelted snow, or grooves filled with water.
 - The road surface is wet and shiny after rain, or there are puddles on the road.
 - Heavy luggage is loaded in the luggage compartment or on the rear seat causing the vehicle to tilt.
 - A vehicle in front of your vehicle is running near a white (yellow) lane line making it less visible.
 - The windscreen is dirty or foggy.
 - The vehicle is driven through an intersection, a junction, or a fork in the road.
 - While white (yellow) lane lines cannot be detected due to road or weather conditions.

- The surrounding brightness suddenly changes such as when entering or exiting a tunnel.
- The illumination of the headlights is weakened because of dirt or the optical axis is deviated at night.
- Back-light is reflected off the road surface or the road surface is wet and shiny after rain.
- The shade of a guardrail parallel to a white (yellow) lane line is cast on the road.
- The width of a lane is excessively narrow or wide.
- The road is excessively uneven.
- The vehicle is shaken after hitting a road bump.
- There are various road markings or division lines (lane markings) of various shapes near an intersection.
- The area in front of the camera is soiled or an object that obstructs the field of view is installed.
- Exhaust gas from the vehicle in front, sand, snow, and water vapour rising from manholes and grating, and water splashed into the air.
- The surroundings are dark such as during the early evening or early morning.
- A vehicle ahead with a certain tail light shape.
- A vehicle ahead veers off course from your vehicle's line of travel.
- A vehicle ahead is driving erratically.
- The vehicle is driven on roads with tight curves.

Headway control function


If a vehicle ahead is detected while travelling at a constant speed, the vehicle-ahead indication is displayed and headway control is performed.

Steering assist function


When lane lines are detected, the function assists the driver in keeping the vehicle within the lane lines. If lane lines are not detected, the function provides the driver driving assistance in keeping the vehicle along the motion path with the vehicle ahead.

NOTE**Steering assist limit warning**


If the steering assist function cannot keep the vehicle within the lane lines while the steering assist function is operating, a warning sound is activated and a warning is displayed on the multi-information display to urge the driver to operate the steering wheel.

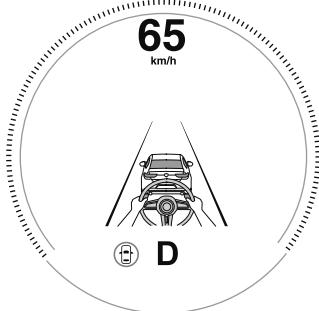
▼ Cruising & Traffic Support (CTS) Display Indication

The CTS setting status and operation conditions are indicated on the multi-information display or the active driving display.

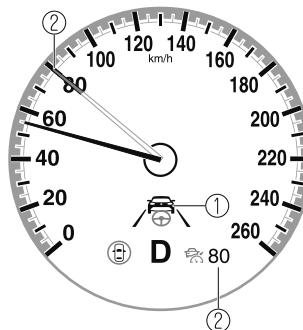
Multi-information display (Basic display)

1. Vehicle ahead display
2. CTS set vehicle speed

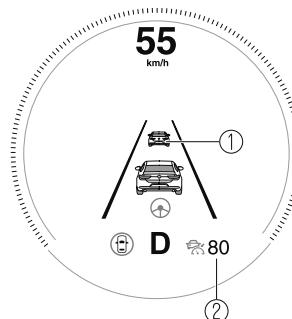Multi-information display (i-ACTIVSENSE display)

1. Vehicle ahead display
2. CTS set vehicle speed

 
Active driving display



1. Vehicle ahead display
2. CTS set vehicle speed

Steering assist function display

 When the steering assist function operates, the steering assist operation display on the display changes from white to green.



NOTE

You can view the multi-information display to check whether the steering assist is performing controls in conjunction with the traffic lane lines or a vehicle ahead.

Inactive



Active (vehicle ahead)



Active (lane line)




If there is a problem with the CTS, a message is displayed on the multi-information display. Check the details of the problem on the centre display and then have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

Refer to If a Warning Light Turns On or Flashes on page 7-56.

▼ Close Proximity Warning

If your vehicle rapidly closes in on the vehicle ahead while you are travelling under headway control, the warning sound is activated and the brake warning is indicated on the display. Keep a safe distance between your vehicle and a vehicle ahead.

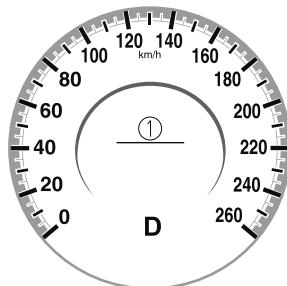

1. “Depress Brake Pedal” message is displayed

NOTE

In the following cases, the warnings and brakes may not operate even if your vehicle starts closing in on the vehicle ahead.

- You are driving your vehicle at the same speed as the vehicle ahead.*
- Directly after the CTS operates.*
- Directly after the accelerator pedal is released.*
- Another vehicle cuts into the driving lane.*

▼ Setting the System

Operation conditions

Headway control function

The CTS operates when all of the following conditions are met.

- **(Automatic transmission vehicle)**

- The vehicle speed is about 0 km/h (0 mph) to 200 km/h (125 mph)^{*1} / 145 km/h (90 mph)^{*2}.
- The selector lever is in the D or M position (manual mode).

- **(Manual transmission vehicle)**

- The vehicle speed is about 30 km/h (19 mph) to 200 km/h (125 mph)^{*1} / 145 km/h (90 mph)^{*2}.
- The shift lever is in a position other than the R or N position.
- The clutch pedal is not depressed.
- The CTS is operating.
- The headway control function of the Mazda Radar Cruise Control (MRCC) or Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) is set to operable (if it was set to inoperable, set it to operable using the personalisation function).
- The brake pedal is not depressed.
- The parking brake is released (Electric Parking Brake (EPB) indicator light is turned off).
- There is no problem with the DSC.
- All the doors are closed.
- The driver's seat belt is fastened.

^{*1} European models

^{*2} Except European models

NOTE

(Automatic transmission vehicle)

- Under the following conditions, the CTS cannot be used when the vehicle speed is 30 km/h (19 mph) or slower.
 - There is a problem with the stop hold control function.
 - There is a problem with the Electric Parking Brake (EPB).
- The CTS may not launch directly after the engine starts.


Steering assist function

The steering assist function operates when all of the following conditions are met.


- Your vehicle is moving and less than about 55 km/h (34 mph).
- White (yellow) lane lines on both sides are detected and you are driving near the centre of the lane, or your vehicle detects a vehicle ahead.
- The steering wheel is not turned sharply.
- The direction indicator lever is not operated.
- The headway control function is operating.
- **(Manual transmission vehicle)**
The vehicle speed is about 30 km/h (19 mph) or faster.

NOTE

The steering assist function operates so that the vehicle remains near the centre of the driving lane, however, depending on conditions such as the road curvature, road slope and undulations, and vehicle speed, the function might not be able to keep the vehicle near the centre of the driving lane.

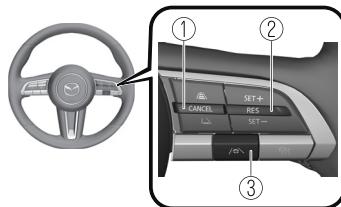Setting method

 1. CANCEL switch
 2. RES switch
 3. CTS switch
-
1. Press the CTS switch.
The CTS standby indication (white) turns on. In addition, the CTS display indication is displayed on the multi-information display at the same time.



2. Adjust the vehicle speed to the desired setting using the accelerator pedal and press the RES switch up (SET+) or down (SET-) to start headway control.

The set speed is indicated on the display. At the same time, the CTS standby indication (white) changes to the CTS set indication (green).



⊕ 80

3. The headway control is operable when all of the conditions for it to operate are met, or the steering assist function is operable when all of the conditions for it to operate are met.

NOTE

- If a vehicle ahead is detected while travelling at a constant speed, the vehicle-ahead indication is displayed and headway control is performed. Additionally, when a vehicle ahead is no longer detected, the vehicle-ahead indication turns off and the system switches back to travel at constant speed.
- Headway control is not possible if the vehicle ahead is driving faster than your vehicle's set speed. Adjust the system to the desired vehicle speed using the accelerator pedal.
- When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the CTS operable, the CTS remains operational the next time the ignition is switched ON.
- When the CTS is operating, the Lane-keep Assist System (LAS), Distance & Speed Alert (DSA), and Smart Brake Support (SBS) also turns on automatically.
- When the CTS switch is pressed while the Mazda Radar Cruise Control (MRCC) or the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) system is operating, the CTS operates. In addition, when the MRCC switch is pressed while the CTS is operating, the Mazda Radar Cruise Control (MRCC) or the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) system operates.

Changing the set vehicle speed

(To accelerate/decelerate using the RES switch)

When the RES switch is pressed up (SET+), the vehicle accelerates and when the RES switch is pressed down (SET-), it decelerates.

- Press and release immediately: 1 km/h (1 mph)
- Press and hold: 10 km/h (5 mph)

(To increase speed using accelerator pedal)

Depress the accelerator pedal and press the RES switch up (SET+) or down (SET-) at the desired speed. If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

NOTE

- The warnings and brake control do not operate while depressing the accelerator pedal.*
- The lowest possible speed which can be set on the CTS is 30 km/h (19 mph).*

• (European models)

When switching to a passing lane and operating the direction indicator, the system provides more acceleration automatically if it determines that more acceleration is required. Drive while being careful of the road ahead because you could approach the vehicle ahead too closely.

• (Automatic transmission vehicle)



The vehicle speed setting can be changed by operating the RES switch during stop hold control.

Changing the distance between vehicles during headway control

The distance-between-vehicles can be set to 4 levels; Long, medium, short, and extremely short distance.

The distance-between-vehicles is set to a shorter distance by pressing the CANCEL switch down. The distance-between-vehicles is set to a longer distance by pressing the CANCEL switch up.

Distance-between-vehicles guide-line (at 80 km/h (50 mph) vehicle speed)	Indication on display	
	Indication on multi-information display	Indication on active driving display ^{*1}
Long (about 50 m (164 ft))		
Medium (about 40 m (131 ft))		

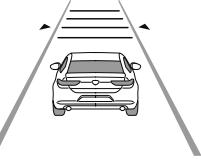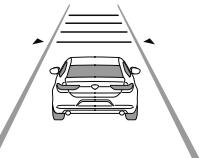Distance-between-vehicles guide-line (at 80 km/h (50 mph) vehicle speed)	Indication on display	
	Indication on multi-information display	Indication on active driving display ^{*1}
Short (about 30 m (98 ft))		
Extremely short (about 25 m (82 ft))		

^{*1} Displays a pop-up image when the CANCEL switch is operated.

NOTE

- The distance-between-vehicles differs depending on the vehicle speed, and the slower the vehicle speed, the shorter the distance.
- When the ignition is switched to ACC or OFF, the set distance-between-vehicles is taken over automatically even when the engine is started again.

The function is temporarily cancelled.

Headway control function

When the following operations are performed, the headway control function is temporarily cancelled and the CTS set indication (green) changes to the CTS standby indication (white) at the same time.

- The CANCEL switch is pressed one time.
- The brake pedal is depressed.
- **(Automatic transmission vehicle)**
The selector lever is in the P, N, or R position.
- **(Manual transmission vehicle)**
The shift lever is in the R position.

i-ACTIVSENSE

In the following cases, the CTS cancel indication is displayed and a sound is activated one time.

- The DSC has operated.
- The Smart Brake Support (SBS) has operated.
- The vehicle is driven on a downslope for a long time.
- There is a problem with the system.
- The front radar sensor cannot detect target objects (during rain, fog, snow or other inclement weather conditions, or when the radiator grille is dirty).
- The parking brake is applied.
- Any of the doors is opened.
- The driver's seat belt is unfastened.
- The operation frequency of the braking by the CTS control is high.

(Automatic transmission vehicle)

The parking brake is automatically applied during stop hold control.

(Manual transmission vehicle)

- The vehicle speed decreases below 25 km/h (15 mph).
- The shift lever is in the neutral position for a certain period of time.
- The clutch pedal is depressed for a certain period of time.
- The engine has stalled.

Steering assist function

If any of the following conditions occurs, the steering assist function is temporarily cancelled.


- The headway control function is cancelled.
- White (yellow) lane lines cannot be detected or a vehicle ahead cannot be recognised.
- Your vehicle speed is more than about 60 km/h (37 mph).
- The accelerator pedal is operated.
- The direction indicator lever is operated.
- The vehicle is making a sharp curve.
- The width of a lane is excessively narrow or wide.
- The vehicle crosses a lane line.

- The driver takes his/her hands off the steering wheel.
- The steering wheel is operated abruptly.
- There is a problem with the system.
- The temperature in the Forward Sensing Camera (FSC) is high or low.
- The windscreen around the Forward Sensing Camera (FSC) is foggy.
- The windscreen around the Forward Sensing Camera (FSC) is blocked by an obstruction, causing poor forward visibility.

NOTE

If you take your hands off the steering wheel (not holding the steering wheel), the warning sound is activated and an alert is indicated on the multi-information display and the active driving display.

Multi-information display

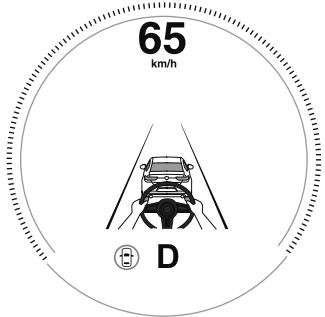

Active driving display



If the steering wheel is held lightly, or depending on the road conditions, the system determines that you have released the steering wheel (not holding the steering wheel) even if you are holding it, and an alert is indicated on the multi-information display and the active driving display.

To resume operation

If the CTS is temporarily cancelled, it will resume operation at the previously set speed by pressing the RES switch after all of the operation conditions have been met.

NOTE

- If the set speed is not indicated on the display, the system does not operate even if the RES switch is pressed.*
- After the operation, the steering assist operation may not operate for a period of 5 seconds at the most until the lane lines are detected or a vehicle ahead is recognised.*

Turning off

When the CTS switch is pressed while the CTS is operating, the CTS turns off.

**▼ Shift-up/Shift-down Request Display
(Manual Transmission)**

The shift-up or shift-down request display might be displayed while the CTS is operating. When this occurs, shift gears because the gear position is not appropriate.

Request	Indication on display
Shift up	Shift Up to a Higher Gear
Shift down	Shift Down to a Lower Gear

NOTE

- If the gears are not shifted up even though the shift-up request indication is displayed, load will be applied to the engine and the CTS might be automatically cancelled or engine damage could occur.*
- If the gears are not shifted down even though the shift-down request indication is displayed, the CTS might be automatically cancelled or engine stalling could occur.*

▼ Stop Hold Control (Automatic Transmission)

While in headway control using the CTS, your vehicle will stop when a vehicle ahead stops. When the vehicle is stopped and the stop hold control operates, the CTS indicator light turns on.


NOTE

- Even if the CTS is temporarily cancelled during stop hold control, the vehicle is held in its stopped position.*
- The parking brake is automatically applied and the vehicle is held in its stopped position when 10 minutes or longer have passed since the stop hold control operated. When this occurs, the CTS is temporarily cancelled.*
- If the i-stop operation conditions are met during stop hold control, the engine stops even though the brake pedal is not depressed.*

- *Refer to i-stop on page 4-12.*
- *The brake lights turn on during stop hold control.*

To resume driving

After the vehicle ahead starts moving while your vehicle is stopped under stop hold control, press the RES switch or depress the accelerator pedal to cancel the stop hold control and start driving.

NOTE

- *When you resume driving by pressing the RES switch, your vehicle does not start moving until the distance between your vehicle and the vehicle ahead lengthens to the specified distance or farther.*
- *The engine restarts automatically when any of the actions to resume driving are performed while i-stop is operating.*
- *If the CTS is temporarily cancelled during stop hold control, you cannot resume driving by pressing the RES switch when there are no vehicles in front of your vehicle. Depress the accelerator pedal and resume driving the vehicle.*
- *If the vehicle ahead starts moving within 3 seconds after your vehicle is stopped by the stop hold control, headway control will continue even if you do not resume driving your vehicle, such as by depressing the accelerator pedal.*

Vehicle departure information


If you do not resume driving within a few seconds after the vehicle ahead starts moving during stop hold control, the multi-information display vehicle-ahead indication flashes to urge the driver to resume driving. If you do not resume driving after the indicator light flashes, a sound is activated to urge you to resume driving.

Lane-keep Assist System (LAS)*

▼ Lane-keep Assist System (LAS)

The LAS provides steering assistance to help the driver stay within the vehicle lane if the vehicle might be deviating.

The forward sensing camera (FSC) detects the white lines (yellow lines) of the vehicle lane in which the vehicle is travelling and if the system determines that the vehicle may deviate from its lane, it operates the electric power steering to assist the driver's steering operation. The system also alerts the driver by displaying an alert on the multi-information display. Use the system when you drive the vehicle on roads with white (yellow) lines such as expressways and highways.

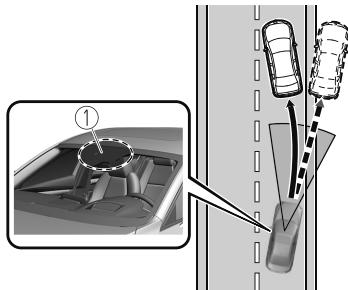

1. Forward sensing camera (FSC)

⚠ WARNING

Do not rely completely on the LAS:

➤ The LAS is not an automated driving system. In addition, the system is not designed to compensate for a driver's lack of caution, and over-reliance on the system could lead to an accident.

- The functions of the LAS have limitations. Always stay on course using the steering wheel and drive with care.
- Do not use the LAS under the following circumstances, otherwise it may result in an accident.
 - The vehicle is driven on slippery roads such as icy or snow-covered roads, and unpaved roads.
 - Tyres of a different specified size are used, such as a temporary spare tyre.
 - Tyres with insufficient tread are used.
 - The tyre pressures are not adjusted to the specified pressure.
 - The vehicle is being used to tow a camper or boat trailer.
 - Tyre chains are used.
 - The vehicle is driven on roads with lane lines other than white (yellow) lines, such as an expressway.

⚠ CAUTION

Heed the following cautions so that the LAS can operate normally.

- Do not modify the vehicle's suspensions.
- Always use wheels of the specified type and size for the front and rear wheels. Consult an expert repairer, we recommend an Authorised Mazda Repairer for tyre replacement.

NOTE

The system may not operate normally under the following conditions.

- The white (yellow) lane lines are less visible because of dirt or paint flaking.
- White (yellow) lane lines are less visible because of bad weather (rain, fog, or snow).

- The vehicle is driven on a temporary lane or section with a closed lane resulting from construction where there might be multiple white (yellow) lane lines, or they are interrupted.
- The camera picks up an obscure line, such as a temporary line being used for construction, or because of shade, unmelted snow, or grooves filled with water.
- The surrounding brightness suddenly changes such as when entering or exiting a tunnel.
- Back-light is reflected off the road surface.
- The road surface is wet and shiny after rain, or there are puddles on the road.
- The width of a lane is excessively narrow.
- The vehicle is driven on roads with tight curves.
- Heavy luggage is loaded in the luggage compartment or on the rear seat causing the vehicle to tilt.
- The vehicle is driven through a fork in the road or a junction.
- The shade of a guardrail parallel to a white (yellow) lane line is cast on the road.
- The illumination of the headlights is weakened because of dirt or the optical axis is deviated at night.
- The road is excessively uneven.
- The vehicle is shaken after hitting a road bump.
- A vehicle in front of your vehicle is running near a white (yellow) lane line making it less visible.
- The windscreen is dirty or foggy.

- Strong light is directed from the front of the vehicle (such as sunlight, or headlights (high-beam) of on-coming vehicles).

▼ System Operation

When the ignition is switched ON, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) turns on and the system goes on standby.



NOTE

If the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) does not turn on, the system is cancelled using the i-ACTIVSENSE switch or the personalisation feature.

Operation conditions

When all of the following conditions are met, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) on the multi-information display changes from white to green and the system becomes operational.

- The vehicle speed is about 60 km/h (37 mph) or faster.
- The system detects white (yellow) lane lines.



NOTE

When the system does not detect a white (yellow) lane line on one side only, the system does not operate on the side that is not being detected.

When temporarily cancelling the system

The LAS goes on standby in the following cases: The LAS operation is automatically restored when the system's operation conditions are met.

- The system cannot detect white (yellow) lane lines.
- The vehicle speed is less than about 55 km/h (34 mph).
- The direction indicator lever is operated.
- The accelerator pedal is depressed abruptly.
- The TCS/DSC is operating.
- The DSC is turned off.
- The steering wheel is operated.
- The brake pedal is operated.

The function is temporarily stopped.

The LAS stops functioning in the following cases:

- The temperature in the forward sensing camera (FSC) is high or low.
- The windscreen around the forward sensing camera (FSC) is foggy.
- The windscreen around the forward sensing camera (FSC) is blocked by an obstruction, causing poor forward visibility.
- Strong light (such as sunlight, or headlights (high-beam) of on-coming vehicles) is directed at the forward sensing camera (FSC).

System malfunction


If there is a problem with the system, the i-ACTIVSENSE status symbol (warning/risk avoidance support system) (white) and the i-ACTIVSENSE warning indication/warning light on the multi-information display turns on and a message is indicated.

Refer to i-ACTIVSENSE Status Symbol (Warning/Risk Avoidance Support System) on page 4-104.

▼ Steering Wheel Operation Assist

When the system determines that the vehicle might be deviating from its lane, the steering wheel operation assist operates.

The system notifies the driver of the direction in which the system provided steering wheel operation assistance on the multi-information display.

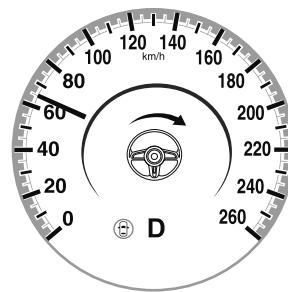**NOTE**

When the driver operates the steering wheel while the steering wheel operation assist is operating, the steering wheel operation assistance is cancelled.

▼ System Cancelling

The LAS can be set to inoperable.

- **(If only the LAS is turned off)**
Refer to the Settings section in the MZD Connect Owner's Manual.
- **(If the LAS is turned off by operating the i-ACTIVSENSE switch)**
Refer to i-ACTIVSENSE Switch on page 4-105.

NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the LAS operable, the LAS remains operational the next time the ignition is switched ON.

Adjustable Speed Limiter (ASL)*

▼ Adjustable Speed Limiter (ASL)

The ASL is a function to prevent the vehicle from being driven at a vehicle speed faster than a set speed. The vehicle speed is controlled to kept it below the set speed even if the accelerator pedal is depressed.

The ASL can be set between 30 km/h (19 mph) and 200 km/h (125 mph). The vehicle speed may exceed the set speed when the vehicle is driven on a down slope, however, the system notifies the driver by flashing the display and operating a warning sound.

⚠ WARNING


Always turn off the system when changing drivers:

If the driver is changed and the new driver is unaware of the ASL function, the vehicle may not accelerate when the driver depresses the accelerator pedal, leading to an accident.

The system consists of the ASL display and the speed limiter switch on the steering wheel.


i-ACTIVSENSE

Multi-information display (Basic display)

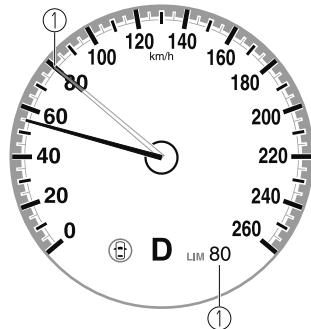


1. ASL set vehicle speed

Multi-information display (i-ACTIVSENSE display)

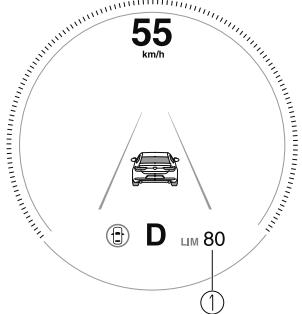


1. ASL set vehicle speed

Active driving display

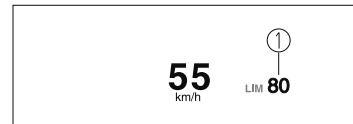

1. ASL set vehicle speed

Speed limiter switch

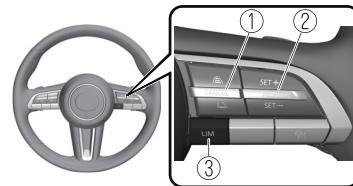

1. CANCEL switch
2. RES switch
3. LIM switch

▼ Adjustable Speed Limiter (ASL)
Standby Indication (White)/
Adjustable Speed Limiter (ASL) Set
Indication (Green)

ASL standby indication (white)

The indication is display in white when the LIM switch is pressed and the ASL is activated.



ASL set indication (green)

The indication is display in green when a speed has been set.



▼ Adjustable Speed Limiter (ASL) Display

The setting status of the ASL is displayed in the active driving display or the display in the instrument cluster.

Status	Indication on multi-information display/active driving display	Explanation
Stand-by display	LIM ----	Displays when the speed limiter switch is operated and the system is turned on. Turns off when the system is turned off.
Setting display	LIM 80	Displays when the SET- or SET+ switch is operated and the speed is set.
Cancel display	LIM 80	Displays when any of the following operations is done and the system is temporarily cancelled. <ul style="list-style-type: none"> • CANCEL switch is operated • Accelerator pedal is strongly depressed
Warning display	LIM 80	If the vehicle speed exceeds the set speed by about 5 km/h (3 mph) or more, the ASL display flashes. The display flashes until the vehicle speed decreases to the set speed or less. A warning beep is activated at the same time as the warning display. Refer to Speed Limiter Warning on page 7-80.

▼ Activation/Deactivation

NOTE

When the ignition is switched off, the system status before it was turned off is maintained.

For example, if the ignition is switched off while the ASL is operating, the system will be operable when the ignition is switched ON the next time.

Activation

Press the LIM switch to activation the system. The ASL screen is displayed, and the ASL standby indication displays in white.

Deactivation

Press the LIM switch again to deactivation the system. The ASL screen is no longer displayed and the ASL indication does not display.

▼ Setting the System

WARNING

Always verify the safety of the surrounding area when setting the ASL:

If the speed is set lower than the current vehicle speed, the vehicle speed is decreased to the set speed. Verify the safety of the surrounding area and keep a safer distance between vehicles ahead and behind you.

1. Press the LIM switch to turn the system on.
2. Press the RES switch up (SET+) or down (SET-) to set the speed. When the current vehicle speed is 30 km/h (19 mph) or more, the speed is set to the current vehicle speed. When the current vehicle speed is less than 30 km/h (19 mph), the speed is set to 30 km/h (19 mph).
3. To increase the set speed, press the RES switch up (SET+) continuously. The set speed can be adjusted in 10 km/h (5 mph) increments. The set speed can also be adjusted in about 1 km/h (1 mph) increments by pressing the RES switch up (SET+) momentary. For example, the set speed increases about 4 km/h (4 mph) by pressing the RES switch up (SET+) 4 times.

4. To decrease the set speed, press the RES down (SET-) continuously. The set speed can be adjusted in 10 km/h (5 mph) increments. The set speed can also be adjusted in about 1 km/h (1 mph) increments by pressing the RES down (SET-) momentary. For example, the set speed decreases about 4 km/h (4 mph) by pressing the RES down (SET-) 4 times.

NOTE

- *When the vehicle set speed is displayed in the instrument cluster, press the RES switch to set the displayed vehicle speed.*
- *The system is temporarily cancelled when the vehicle is accelerated by depressing the accelerator pedal strongly; however, it resumes when the vehicle speed decreases to the set speed or less.*
- *The vehicle speed may exceed the set speed on a down slope.*
- *In the following cases, the system cannot be set.*
 - *Any door is open.*
 - *The driver's seat belt is unfastened.*

▼ Temporarily Cancelling the System

The system is temporarily cancelled (stand-by status) when any of the following operations is done while the ASL is displayed.

- CANCEL switch is pressed
- Accelerator pedal is strongly depressed
- Any door is opened
- The driver's seat belt is unfastened

Press the RES switch to resume the operation at the previous set speed. The ASL display remains displayed.

NOTE

- *The set speed can be set by pressing the RES switch up (SET+) or down (SET-) while the system is in stand-by status.*
- *The ASL is not cancelled by depressing the brake pedal.*

Intelligent Speed Assistance (ISA)*

▼ Intelligent Speed Assistance (ISA)

The ISA is a function which keeps the vehicle speed below the speed limit set from a speed limit sign or an optionally set speed limit. The speed limit can be set between 30 and 200 km/h (19-125 mph), and if the vehicle speed exceeds the set speed limit while driving on steep slopes, the system notifies the driver using the display and a warning sound.

The ISA recognises a speed limit sign based on the Traffic Sign Recognition System (TSR) or the navigation system information.

Refer to Traffic Sign Recognition System (TSR) on page 4-121.

WARNING

Always turn off the system when changing drivers:

If the driver is changed and the new driver is unaware of the ISA function, the vehicle may not accelerate when the driver depresses the accelerator pedal, leading to an accident.

Depending on the weather conditions or problems with traffic signs, a traffic sign may not be recognised or a traffic sign different from the actual traffic sign may be displayed. Always make it your responsibility as a driver to check the actual traffic signs. Otherwise, it could result in an accident.


NOTE

The ISA operates only when the navigation system's SD card (Mazda genuine) is inserted. In addition, the Adjustable Speed Limiter (ASL) operates only when the navigation system's SD card (Mazda genuine) is not inserted. Refer to Adjustable Speed Limiter (ASL) on page 4-179.

i-ACTIVSENSE


The system consists of the ISA display and the speed limiter switch on the steering wheel.

Multi-information display (Basic display)

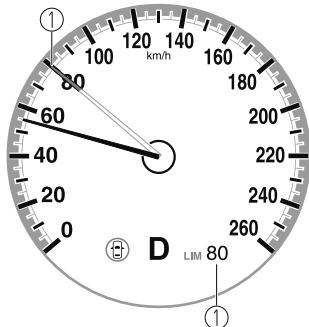

1. set vehicle speed

Multi-information display (i-ACTIVSENSE display)

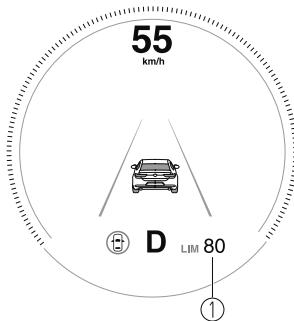


1. set vehicle speed

Active driving display



1. set vehicle speed

Speed limiter switch

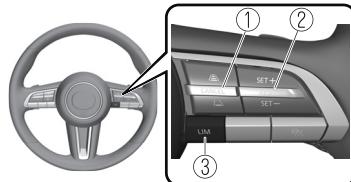

1. CANCEL switch
2. RES switch
3. LIM switch

▼ Intelligent Speed Assistance (ISA) Standby Indication (White)/ Intelligent Speed Assistance (ISA) Set Indication (Green)

ISA standby indication (white)

The indication is displayed in white when the LIM switch is pressed and the ISA is activated.

LIM

ISA set indication (green)

The indication is displayed in green when a speed has been set.

LIM

▼ Intelligent Speed Assistance (ISA) Display

The setting status of the ISA is displayed in the active driving display or the display in the instrument cluster.

Status	Indication on multi-information display/active driving display	Explanation
Stand-by display	LIM ----	Displays when the speed limiter switch is operated and the system is turned on. Turns off when the system is turned off.
Setting display	LIM 80	Displays when the SET- or SET+ switch is operated and the speed is set.
Cancel display	LIM 80	Displays when any of the following operations is done and the system is temporarily cancelled. <ul style="list-style-type: none"> • CANCEL switch is operated • Accelerator pedal is strongly depressed • Any door is opened • The driver's seat belt is unfastened
Warning display	LIM 80	If the vehicle speed exceeds the set speed by about 5 km/h (3 mph) or more, the ISA display flashes. The display flashes until the vehicle speed decreases to the set speed or less. A warning beep is activated at the same time as the warning display. Refer to Speed Limiter Warning Beep on page 7-80.

▼ Activation/Deactivation

NOTE

When the ignition is switched off, the system status before it was turned off is maintained.

For example, if the ignition is switched off while the ISA is operating, the system will be operable when the ignition is switched ON the next time.

Activation

Press the LIM switch to activation the system. The ISA screen is displayed, and the ISA standby indication displays in white.

Deactivation

Press the LIM switch again to deactivation the system. The ISA screen is no longer displayed and the ISA indication does not display.

▼ Setting the System

WARNING

Always verify the safety of the surrounding area when setting the ISA:

If the speed is set lower than the current vehicle speed, the vehicle speed is decreased to the set speed. Verify the safety of the surrounding area and keep a safer distance between vehicles ahead and behind you.

NOTE

- *The system is temporarily cancelled when the vehicle is accelerated by depressing the accelerator pedal strongly, however, it resumes when the vehicle speed decreases to the set speed or less.*
- *The vehicle speed may exceed the set speed on a down slope.*
- *In the following cases, the system cannot be set.*
 - Any door is open.
 - The driver's seat belt is unfastened.
- *The ISA setting can be changed to MANUAL, or OFF^{*1}.*
Refer to the Settings section in the MZD Connect Owner's Manual.

^{*1} When OFF is selected, the Adjustable Speed Limiter (ASL) is set.

Refer to Adjustable Speed Limiter (ASL) on page 4-179

How to set the speed limit using the SET switch

1. Press the LIM switch to turn the system on.
2. Press the RES switch up (SET+) or down (SET-) to set the speed. When the current vehicle speed is 30 km/h (19 mph) or more, the speed is set to the current vehicle speed. When the current vehicle speed is less than 30 km/h (19 mph), the speed is set to 30 km/h (19 mph).
3. To increase the set speed, press the RES switch up (SET+) continuously. The set speed can be adjusted in 10 km/h (5 mph) increments. The set speed can also be adjusted in about 1 km/h (1 mph) increments by pressing the RES switch up (SET+) momentary. For example, the set speed increases about 4 km/h (4 mph) by pressing the RES switch up (SET+) switch 4 times.
4. To decrease the set speed, press the RES switch down (SET-) continuously. The set speed can be adjusted in 10 km/h (5 mph) increments. The set speed can also be adjusted in about 1 km/h (1 mph) increments by pressing the RES switch down (SET-) momentary. For example, the set speed decreases about 4 km/h (4 mph) by pressing the RES switch down (SET-) 4 times.

NOTE

- When the vehicle set speed is displayed in the active driving display/instrument cluster and speed limit sign is not displayed, press the RES switch to set the displayed vehicle speed.

Manually setting the vehicle speed limit from a speed limit sign

- Press the LIM switch to turn the system on.
- Press the RES switch while the ISA set indication is displayed on the active driving display/instrument cluster to set the vehicle speed limit to the speed of the displayed speed limit sign.



- Speed limit sign setting indication

NOTE

- The speed limit cannot be set from the speed limit sign when the speed limit sign indication is displayed in gray.

Excessive speed range setting

The range of speed that can exceed the set speed can be changed.

Refer to the Settings section in the MZD Connect Owner's Manual.

- + 0: The vehicle speed is restricted at the set speed.
- + 5: If the vehicle speed exceeds the set speed by 5 km/h (3mph), the vehicle speed is restricted.
- + 10: If the vehicle speed exceeds the set speed by 10 km/h (5 mph), the vehicle speed is restricted.

▼ Temporarily Cancelling the System

The system is temporarily cancelled (stand-by status) when any of the following operations is done while the ISA is displayed.

- CANCEL switch is pressed
- Accelerator pedal is strongly depressed
- Any door is opened
- The driver's seat belt is unfastened

NOTE

- The set speed can be set by pressing the RES switch up (SET+) or down (SET-) while the system is in stand-by status.
- The ISA is not cancelled by depressing the brake pedal.

Smart Brake Support (SBS)*

▼ Smart Brake Support (SBS)

The SBS alerts the driver of a possible collision using the warning indications in the display and a warning sound if the front radar sensor and Forward Sensing Camera (FSC) determine that there is the possibility of a collision with a vehicle ahead, pedestrian, or a bicycle.

Furthermore, if a collision is unavoidable, the automatic brake control is performed to reduce damage in the event of a collision. In addition, when the driver depresses the brake pedal, the brakes are applied firmly and quickly to assist.

(Vehicles with Driver Monitoring (DM))

When the SBS determines that the driver is not paying attention to the road using the driver monitoring camera and it determines that there is the possibility of a collision with an obstruction, the SBS activates the collision warning earlier than normal.



WARNING

Do not rely completely on the SBS:

The SBS is only designed to reduce damage in the event of a collision.

The ability to detect obstructions is limited depending on the obstructions, weather conditions, or traffic conditions. Over reliance on the system leading to the accelerator pedal or brake pedal being mistakenly operated could result in an accident.

CAUTION

In the following cases, turn the system off to prevent an unexpected operation.

- *The vehicle is being towed or when towing another vehicle.*
 - *The vehicle is on a chassis roller.*
 - *When driving on rough roads such as in areas of dense grass or off-road. See the next page on how to turn off the system.*
- Refer to Stopping the Smart Brake Support (SBS) System Operation on page 4-193.*

Operation conditions

The SBS operates when all of the following conditions are met.

- The ignition is switched ON.
- The SBS is on.
- The i-ACTIVSENSE warning indication/warning light is not turned on.
- **(Object is vehicle ahead)**
The vehicle speed is about 4 km/h (2 mph) or higher.
- **(Object is a pedestrian or bicycle)**
The vehicle speed is between about 10 to 80 km/h (6.2 to 50 mph).
- The DSC does not operate.

NOTE


- *Under the following conditions, the SBS may not operate.*
 - *If there is the possibility of hitting only a part of a vehicle or obstruction ahead.*
 - *You are driving your vehicle at the same speed as the vehicle ahead.*

- When the driver deliberately performs driving operations (accelerator operation, steering wheel operation).
- The accelerator pedal is depressed abruptly.
- The brake pedal is being depressed.
- The steering wheel is being operated.
- The selector lever is being shifted.
- The direction indicator lever is being operated.
- When warnings and messages, such as a dirty windscreen, related to the Forward Sensing Camera (FSC) or front radar sensor are being displayed on the multi-information display.
- The SBS may operate under the following conditions.
 - There is an object in the road at the entrance to a curve (including guardrails and snow banks).
 - Passing an approaching vehicle while rounding a curve.
 - When crossing a narrow bridge, and passing through low gates, narrow gates, car washing machines, or tunnels.
 - When passing through a toll gate.
 - When entering an underground parking area.
 - There is a metal object, bump, or a protruding object on the road.
 - If you suddenly come close to a vehicle ahead.
 - There is an animal, wall, or tree.
 - Notifies the driver with a warning indication on the multi-information display and the active driving display (vehicles with active driving display) while the system is operating.
- If a malfunction is detected or the system temporarily stops the function due to dirty sensors (such as radar sensor or Forward Sensing Camera (FSC)), the i-ACTIVSENSE warning indication/warning light turns on and a message is displayed on the multi-information display.
- On a manual transmission vehicle, the engine stops if the clutch pedal is not depressed when the vehicle is stopped by the SBS brake operation.
- If the vehicle is stopped by the SBS brake operation and the brake pedal is not depressed, the SBS brake is automatically released after about 2 seconds.


▼ Collision Warning

When there is a possibility of a collision with a vehicle ahead, the collision warning sound is activated continuously and a warning is displayed on the multi-information display and the active driving display.

Multi-information display

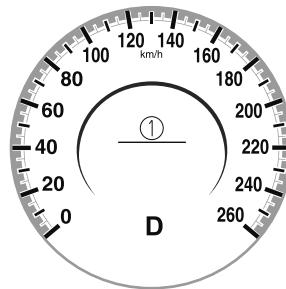

 1. “BRAKE!” message is displayed

Active driving display

1. "BRAKE!" message is displayed

NOTE

- *The collision warning sound is activated intermittently while the SBS brake or brake assist (SBS brake assist) is operating.*
- *The operation distance and volume of the collision warning can be changed. Refer to the Settings section in the MZD Connect Owner's Manual.*

▼ Stopping the Smart Brake Support (SBS) System Operation

The SBS can be changed to inoperable.

- **(If only the SBS is turned off)**
Refer to the Settings section in the MZD Connect Owner's Manual.
- **(If the SBS is turned off by operating the i-ACTIVSENSE switch)**
Refer to i-ACTIVSENSE Switch on page 4-105.




When turning off the SBS, the SBS OFF indicator light turns on.

NOTE

If the engine is stopped with the SBS turned off, the SBS becomes operational when the engine is started the next time.

Smart Brake Support [Rear] (SBS-R)***▼ Smart Brake Support [Rear] (SBS-R)**

The SBS-R is a system which is designed to reduce damage in the event of a collision by operating the brake control (SBS brake) when the system's sensors detect an obstruction at the rear of the vehicle while driving at a speed of about 2 to 8 km/h (2 to 4 mph) and the system determines that a collision is unavoidable.

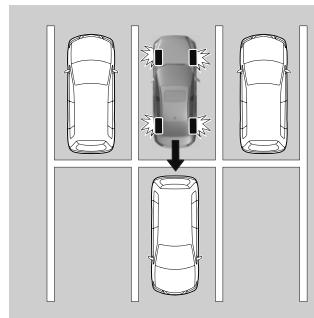**⚠ WARNING*****Do not rely completely on the SBS-R system:***

- *The SBS-R system is only designed to reduce damage in the event of a collision. Over reliance on the system leading to the accelerator pedal or brake pedal being mistakenly operated could result in an accident.*
- *To assure the correct operation of the SBS-R, heed the following cautions.*

- Do not apply a sticker to a rear ultrasonic sensor and rear camera. Otherwise, the rear ultrasonic sensor and rear camera may not be able to detect vehicles or obstructions which could result in an accident.
- Do not disassemble a rear ultrasonic sensor and rear camera.
- If cracks or damage caused by flying gravel or debris is visible around a rear ultrasonic sensor and rear camera, stop using the SBS-R system immediately and have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer. If the vehicle continues to be driven with cracks or scratch marks left around an ultrasonic sensor, the system may operate unnecessarily and cause an unexpected accident. Refer to *Stopping the Smart Brake Support [Rear] (SBS-R) System Operation* on page 4-197.
- Consult an expert repairer, we recommend an Authorised Mazda Repairer for rear bumper replacement.

Do not modify the suspension:

If the vehicle height or inclination is changed, the SBS-R system may not operate correctly because it cannot detect obstructions correctly.

Do not apply a strong force to a rear ultrasonic sensor and rear camera:

When washing the vehicle, do not spray highly pressurised water against a rear ultrasonic sensor and rear camera, or rub it strongly. In addition, do not hit the rear bumper forcefully when loading and unloading cargo. Otherwise, the sensors may not detect obstructions correctly which could cause the SBS-R system to not operate normally, or it could operate unnecessarily.

 **CAUTION**

- When driving off-road in areas where there is grass or foliage, it is recommended that the SBS-R system be turned off.
- Always use tyres of the specified size and the same manufacturer, brand, and tread pattern on all 4 wheels. In addition, do not use tyres with significantly different wear patterns on the same vehicle. Otherwise, the SBS-R system may not operate normally.
- If ice or snow is stuck on the rear ultrasonic sensor and rear camera they may not be able to detect obstructions correctly depending on the conditions. In such cases, the system may not be able to perform controls correctly. Always drive carefully and pay attention to the rear of the vehicle.

NOTE

- The vehicle posture changes depending on the accelerator pedal, brake pedal and steering wheel operations, which could make it difficult for the system to recognise an obstruction, or it could facilitate unnecessary detection. In such cases, the SBS-R may or may not operate.
- The SBS-R system will operate under the following conditions.
 - The engine is running.
 - The shift lever (manual transmission vehicle) or the selector lever (automatic transmission vehicle) is in the R (reverse) position.
 - i-ACTIVSENSE warning indication/warning light is not displayed in the multi-information display.
 - The vehicle speed is between about 2 to 8 km/h (2 to 4 mph).
 - The SBS-R is not turned off.
 - The DSC is not malfunctioning.
- In the following cases, the rear ultrasonic sensor and rear camera cannot detect obstructions and the SBS-R may not operate.
 - The height of the obstruction is low such as low walls or trucks with low loading platforms.
 - The height of the obstruction is high such as trucks with high loading platforms.
 - The obstruction is small.
 - The obstruction is thin such as a signpost.
 - The surface of the obstruction is not pointed vertically relative to the vehicle.


- The obstruction is soft such as a hanging curtain or snow stuck to a vehicle.
- The obstruction is shaped irregularly.
- The obstruction is extremely close.
- In the following cases, the rear ultrasonic sensor and rear camera cannot detect obstructions correctly and the SBS-R may not operate.
 - Something is stuck on the bumper near a rear ultrasonic sensor.
 - The brake or accelerator pedal is operated.
 - There is another obstruction near one obstruction.
 - During inclement weather such as rain, fog and snow.
 - High or low humidity.
 - High or low temperatures.
 - Strong winds.
 - The path of travel is not flat.
 - Heavy luggage is loaded in the luggage compartment or on the rear seat.
 - Objects such as a wireless aerial, fog light, or illuminated number plate is installed near a rear ultrasonic sensor.
 - The orientation of a rear ultrasonic sensor has deviated for reasons such as a collision.
 - The vehicle is affected by other sound waves such as the horn, engine noise, ultrasonic sensor of another vehicle.
- In the following cases, a rear ultrasonic sensor and rear camera may detect something as a target obstruction which could cause the SBS-R system to operate.
 - Driving on a steep slope.
 - Wheel blocks.

- Hanging curtains, gate poles such as at toll gates and railroad crossing.
- When travelling near objects such as foliage, barriers, vehicles, walls, and fences along a road.
- When driving off-road in areas where there is grass and forage.
- When passing through low gates, narrow gates, car washing machines, and tunnels.
- A trailer is connected.
- A bright light source such as sunlight hits the rear camera.
- The surroundings are dark.
- An exterior accessory such as a bicycle carrier is installed around the rear sonar.
- **(Manual transmission)**
If the vehicle is stopped by the SBS-R operation and the clutch pedal is not depressed, the engine stops.
- When the system operates, the user is notified by the multi-information display.
- The collision warning beep sounds intermittently while the SBS-R brake is operating.
- If the vehicle is stopped by the SBS-R operation and the brake pedal is not depressed, displaying in meter “Emergency Braking Activated. Depress Brake Pedal to Hold Stop”, after about 2 seconds and the SBS-R brake is automatically released.
- If a Mazda genuine trailer hitch is used, the SBS-R is automatically turned off.
- Turn off the SBS-R system while pulling a trailer or while an accessory such as a bicycle carrier is installed to the rear of the vehicle.

▼ Collision Warning


If there is a possibility of a collision, the collision warning sound is activated continuously and a warning is displayed on the active driving display and the multi-information display.

Multi-information display

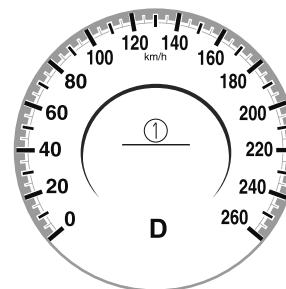

1. “BRAKE!” message is displayed

Active driving display

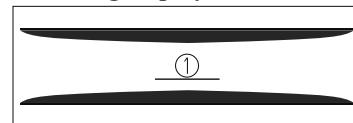

1. “BRAKE!” message is displayed

▼ Stopping the Smart Brake Support [Rear] (SBS-R) System Operation

The SBS-R can be changed to inoperable.

- **(If only the SBS-R is turned off)**

Refer to the Settings section in the MZD Connect Owner's Manual.

- **(If the SBS-R is turned off by operating the i-ACTIVSENSE switch)**

Refer to i-ACTIVSENSE Switch on page 4-105.

When turning off the SBS-R, the SBS OFF indicator light turns on.



When the engine is restarted, the system becomes operational.

NOTE


When the SCB-R system is set to inoperable, Smart Brake Support [Rear Crossing] (SBS-RC) are also set to inoperable.

Smart Brake Support [Rear Crossing] (SBS-RC)*

▼ Smart Brake Support [Rear Crossing] (SBS-RC)

The SBS-RC is a system designed to assist the driver in avoiding collisions and to reduce damage in the event of a collision by applying the brakes if there is the possibility of collision with a vehicle approaching from the rear while you are reversing out of parking space.

The SBS-RC system detects vehicles approaching from the rear left and right sides of the vehicle, and the rear of the vehicle while the vehicle is being reversed out of a parking space, the system reduces damage in the event of a collision by operating the brake control when the system determines that a collision is unavoidable.

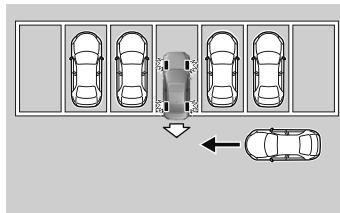

SBS-RC operation

1. The SBS-RC system operates when the shift lever (manual transmission) or the selector lever (automatic transmission) is shifted to the reverse (R) position.

2. If there is the possibility of a collision with an approaching vehicle, the SBS-RC system applies brake and displays “BRAKE!” on the active driving display and the multi-information display.

WARNING

Always check the surrounding area visually before actually putting the vehicle in reverse:

The system is only designed to assist you in backing out of the lot when putting the vehicle in reverse. Due to certain limitations with the operation of this system, the SBS-RC system may not operate brake or it might be delayed even though a vehicle is behind your vehicle. Always make it your responsibility as a driver to check the rear.

Do not rely completely on the SBS-RC system:

- The SBS-RC system is only designed to reduce damage in the event of a collision. Over reliance on the system leading to the accelerator pedal or brake pedal being mistakenly operated could result in an accident.
- The SBS-RC system operates in response to a vehicle. The system does not operate in response to obstructions such as a wall, pedestrians, 2-wheeled vehicles, or animals.

To assure the correct operation of the SBS-RC, heed the following cautions.

- Do not apply a sticker to a rear radar and rear camera. Otherwise, the rear radar and rear camera may not be able to detect vehicles or obstructions which could result in an accident.
- Do not disassemble a rear radar and rear camera.
- If cracks or damage caused by flying gravel or debris is visible around a rear radar and rear camera, stop using the SBS-RC system immediately and have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer. If the vehicle continues to be driven with cracks or scratch marks left around an ultrasonic sensor, the system may operate unnecessarily and cause an unexpected accident.
Refer to Stopping the Smart Brake Support [Rear Crossing] (SBS-RC) System Operation on page 4-201.
- Consult an expert repairer, we recommend an Authorised Mazda Repairer for rear bumper replacement.

Do not modify the suspension:

If the vehicle height or inclination is changed, the SBS-RC system may not operate correctly because it cannot detect obstructions correctly.

Do not apply a strong force to a rear radar and rear camera:

When washing the vehicle, do not spray highly pressurised water against a rear radar and rear camera, or rub it strongly. In addition, do not hit the rear bumper forcefully when loading and unloading cargo. Otherwise, the sensors may not detect obstructions correctly which could cause the SBS-RC system to not operate normally, or it could operate unnecessarily.


NOTE

- The SBS-RC system will operate under the following conditions.

- The engine is running.
- The shift lever (manual transmission vehicle) or the selector lever (automatic transmission vehicle) is in the R (reverse) position.
- i-ACTIVSENSE warning indication/warning light is not displayed in the multi-information display.
- The vehicle speed is under about 10 km/h (6 mph).
- The vehicle speed of an approaching vehicle is about 3 km/h (2 mph) or faster.
- The SBS-R is not turned off.
- The DSC is not malfunctioning.

In the following cases, the i-ACTIVSENSE warning indication/warning light turns on and operation of the system is stopped. If the i-ACTIVSENSE warning indication/warning light remains illuminated, have the vehicle inspected at an expert repairer; we recommend an Authorised Mazda Repairer as soon as possible.


- Some problem with the system including the SBS-RC system.
- A large deviation in the installation position of a rear side radar sensor on the vehicle has occurred.
- There is a large accumulation of snow or ice on the rear bumper near a rear side radar sensor.
- Driving on snow-covered roads for long periods.
- The temperature near the radar sensors becomes extremely hot due to driving for long periods on slopes during the summer.
- The battery voltage has decreased.
- Under the following conditions, the rear side radar sensor cannot detect target objects or it may be difficult to detect them.
 - The rear side radar sensor detection area is obstructed by a nearby wall or parked vehicle. (Reverse the vehicle to a position where the radar sensor detection area is no longer obstructed.)

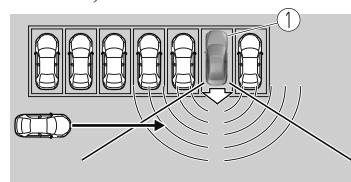

1. Your vehicle


i-ACTIVSENSE

- A vehicle is approaching directly from the rear of your vehicle.*

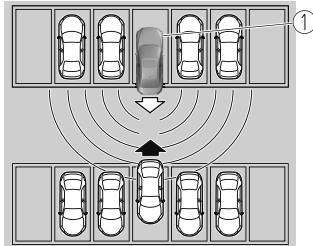


1. Your vehicle

- The vehicle is parked on a slant.*

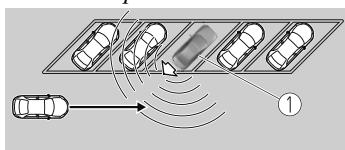

1. Your vehicle

- A vehicle is approaching from the opposite direction on a steep gradient.*

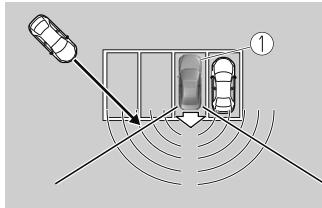

1. Your vehicle

- Directly after the SBS-RC system becomes operable using the personalisation feature.*
- Radio wave interference from a radar sensor equipped on a nearby parked vehicle.*

- Turn off the SBS-RC system while pulling a trailer or while an accessory such as a bicycle carrier is installed to the rear of the vehicle. Otherwise, the radio waves emitted by the radar will be blocked causing the system to not operate normally.*

- In the following cases, a rear radar and rear camera may detect something as a target obstruction which could cause the SBS-RC system to operate.*

- Hanging curtains, gate poles such as at toll gates and railroad crossing.*
- When travelling near objects such as foliage, barriers, vehicles, walls, and fences along a road.*
- When driving off-road in areas where there is grass and forage.*
- When passing through low gates, narrow gates, car washing machines, and tunnels.*
- A trailer is connected.*
- A bright light source such as sunlight hits the rear camera.*
- The surroundings are dark.*

(Manual transmission)

If the vehicle is stopped by the SBS-RC operation and the clutch pedal is not depressed, the engine stops.


- When the system operates, the user is notified by the multi-information display.*
- The collision warning beep sounds intermittently while the SBS-RC brake is operating.*

- If the vehicle is stopped by the SBS-RC operation and the brake pedal is not depressed, displaying in meter “Emergency Braking Activated. Depress Brake Pedal to Hold Stop”, after about 2 seconds and the SBS-RC brake is automatically released.*
- If a Mazda genuine trailer hitch is used, the SBS-RC is automatically turned off.*

▼ Collision Warning


If there is a possibility of a collision, the collision warning sound is activated continuously and a warning is displayed on the active driving display and the multi-information display.

Multi-information display

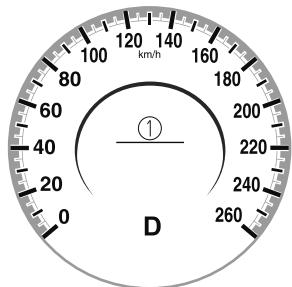

- “BRAKE!” message is displayed

 Active driving display



- “BRAKE!” message is displayed

▼ Stopping the Smart Brake Support [Rear Crossing] (SBS-RC) System Operation

The SBS-RC can be changed to inoperable.

- (If only the SBS-RC is turned off)**
Refer to the Settings section in the MZD Connect Owner's Manual.
- (If the SBS-RC is turned off by operating the i-ACTIVSENSE switch)**
Refer to i-ACTIVSENSE Switch on page 4-105.

When turning off the SBS-RC, the SBS OFF indicator light turns on.



When the engine is restarted, the system becomes operational.

NOTE

When the SCB-RC system is set to inoperable, Smart Brake Support [Rear] (SBS-R) are also set to inoperable.

360° View Monitor*

▼ 360° View Monitor

The 360°View Monitor consists of the following functions which assist the driver in checking the area surrounding the vehicle using various indications in the centre display and a warning sound while the vehicle is being driven at low speeds or while parking.

· Top view

The top view displays an image of the vehicle from directly above on the centre display by combining the images taken from the 4 cameras set on all sides of the vehicle. The top view displays on the right side (left-hand drive)/left side (right-hand drive) of the screen when the front view or rear view screen is being displayed. The top view assists the driver in checking the area surrounding the vehicle when the vehicle is moving forward or in reverse.

· Front view/front wide view

The image from the front of the vehicle is displayed on the centre display. The view from the front assists the driver in checking the front of the vehicle by displaying guide lines on the displayed image taken from the front of the vehicle.

· Side view

The images taken from the front left and right sides of the vehicle are displayed on the centre display.

The side view assists the driver in checking the front sides of the vehicle by displaying guide lines on the displayed image taken from the front left and right sides of the vehicle.

· Rear view/rear wide view

The image from the rear of the vehicle is displayed on the centre display.

The image from the rear assists the driver in checking the rear of the vehicle by displaying guide lines on the displayed image taken from the rear of the vehicle.

· Parking sensor

If there are any obstructions near the vehicle while the top view/side view is displayed, an obstruction detection indication turns on around the bumper in the centre display.

The parking sensors use ultrasonic sensors to detect obstructions around the vehicle when the vehicle is driven at low speeds, such as during garage or parallel parking, and notifies the driver of the approximate distance from the vehicle to the surrounding obstruction using sound and an obstruction detection indication. Refer to Parking Sensor System on page 4-273.

· Front Cross Traffic Alert (FCTA)

If there is the possibility of a collision with an approaching vehicle while the front view/front wide view/side view is displayed, a warning is displayed on the centre display.

The Front Cross Traffic Alert (FCTA) is designed to assist the driver in checking both sides of the vehicle when the vehicle starts to drive at an intersection. Refer to Front Cross Traffic Alert (FCTA) on page 4-133.


· Rear Cross Traffic Alert (RCTA)

If there is the possibility of a collision with an approaching vehicle while the rear view/rear wide view is displayed, a warning is displayed on the centre display.

The Rear Cross Traffic Alert (RCTA) uses rear side radar sensor to detect vehicles approaching from the rear left and right sides of the vehicle, and it assists the driver in checking the rear of the vehicle while reversing by flashing the Blind Spot Monitoring (BSM) warning lights and activating the warning sound.

Refer to Rear Cross Traffic Alert (RCTA) on page 4-136.

360°View Monitor Range

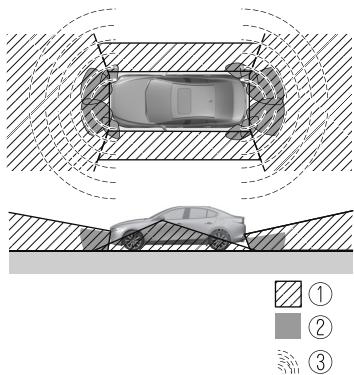

1. Cameras
2. Ultrasonic sensors
3. Front/Rear side radar sensors

! WARNING

Always confirm the safety of the area around the vehicle with the mirrors and directly with your eyes when driving:

The 360°View Monitor is an auxiliary device which assists the driver in checking the safety of the area around the vehicle.

The shooting range of the cameras and detection range of the sensors are limited. For example, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots where an obstruction may not be visible. In addition, the extended vehicle width lines and projected vehicle path lines are only to be used as references, and the images on the screen may differ from the actual conditions.

! CAUTION

- Do not use the 360°View Monitor under any of the following conditions.
 - Icy or snow-covered roads.
 - Tyre chains or a temporary spare tyre is installed.
 - The front doors or the rear doors is not fully closed.
 - The vehicle is on a road incline.
 - The door mirrors are retracted.
- Do not hit the front/rear camera, front/rear bumper, and door mirrors forcefully. The camera position or installation angle may shift.
- The cameras are of a waterproof structure. Do not disassemble, modify, or remove a camera.
- The camera cover is made of hard plastic, therefore do not apply oil film remover, organic solvents, wax, or coating agents. If any such agent gets on the camera cover, wipe it off using a soft cloth immediately.
- Do not rub the camera lens forcefully, or clean it with an abrasive or hard brush. Otherwise, it could scratch the camera lens and negatively affect the images.

- Consult an Authorised Mazda Repairer for repair, painting, or replacement of the front/rear camera, front/rear bumper and door mirrors.
- Heed the following cautions to assure that the 360°View Monitor operates normally.
 - Do not modify the vehicle suspensions or lower/raise the vehicle body, or both.
 - Always use wheels of the specified type and size for the front and rear wheels. Consult an Authorised Mazda Repairer for tyre replacement.
 - When the display is cold, images may leave trails or the screen might be darker than usual, making it difficult to check the vehicle surroundings. Always confirm the safety at the front and around the vehicle visually when driving.
 - The method for parking/stopping the vehicle using the 360°View Monitor differs depending on the road circumstances/conditions and the vehicle conditions. When and how much you turn the steering wheel will differ depending on the situation, therefore always check the vehicle surroundings directly with your eyes while using the system.
Also, before using the system, always make sure that the vehicle can be parked/stopped in the parking/stopping space.

NOTE

- If there are water droplets, snow, or mud on the camera lens, wipe it off using a soft cloth. If the camera lens is especially dirty, wash it off with mild detergent.


- If the camera lens is touched or there is any dirt on it, it could affect the screen image. Wipe the lens using a soft cloth.
- If the area where the camera is installed, such as the front/rear bumper or door mirrors, has been damaged in a vehicle accident, the camera (position, installation angle) may have shifted. Always consult an Authorised Mazda Repairer to have the vehicle inspected.
- If the camera is subjected to excessive changes in temperature such as by pouring hot water on the camera during cold weather, the 360°View Monitor may not operate normally.
- If the battery voltage is low, the screen might be temporarily difficult to view, however, this does not indicate a problem.
- The 360°View Monitor has limitations. Objects under the bumper or near both ends of the bumper cannot be displayed.
- Obstructions above the upper image range of the camera are not displayed.
- Under the following conditions, the screen might be difficult to view, however this does not indicate a problem.
 - The temperature near the lens is high/low.
 - Rainy conditions, water droplets on the camera, or high humidity.
 - Mud or foreign matter near the camera.
 - Extremely bright light such as sunlight or headlights hitting the camera lens directly.
 - The surroundings are illuminated by vehicle lights, fluorescent lights, or LED lights (Display may flicker).

- *Extremely small dark or white dots appear on the screen (dots may flicker).*
- *Because the 360°View Monitor camera uses a special lens, the distance displayed on the screen differs from the actual distance.*
- *Obstructions displayed on the screen may appear differently than in actuality. (Obstructions may appear fallen, larger, or longer than they actually are.)*
- *Do not apply stickers to a camera or the area around it. In addition, do not install accessories or an illuminated number/character number plate to the area around a camera. Otherwise, the camera may not correctly display the surrounding conditions.*
- ***Free/open source software information***
This product includes free/open sources. Information about the licensing and source code is available at the following URL.
<https://www.denso.com/global/en/opensource/svss/mazda/>

▼ Types of Images Displayed on the Screen

Top view/Front view


Displays the image of the area around the vehicle and the vehicle front.

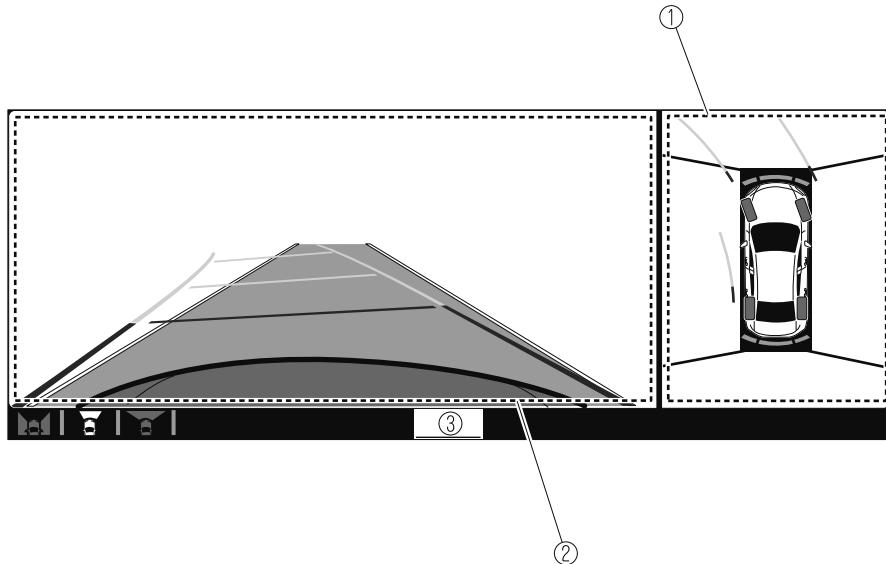

1. Top view screen
2. Front view screen
3. "Check surroundings for safety." message is displayed

Top view/Front wide view


Displays the image of the area around the vehicle and the front of the vehicle (wide-area).

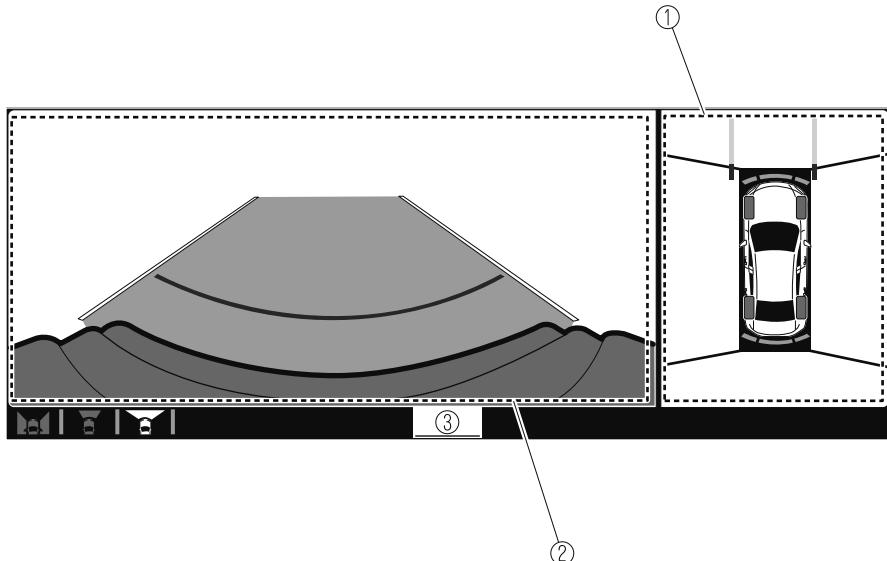

1. Top view screen
2. Front wide view screen
3. "Check surroundings for safety." message is displayed

Side view


Displays the image of the left and right sides of the vehicle.

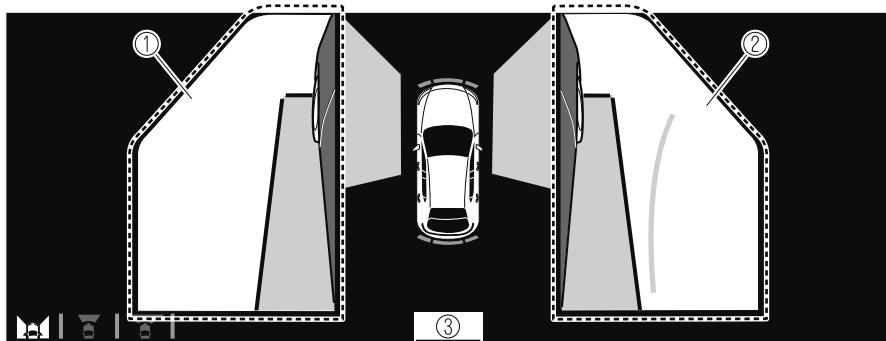

1. Left side view screen
2. Right side view screen
3. "Check surroundings for safety." message is displayed

Top view/Rear view


Displays the image of the area around the vehicle and the rear of the vehicle.

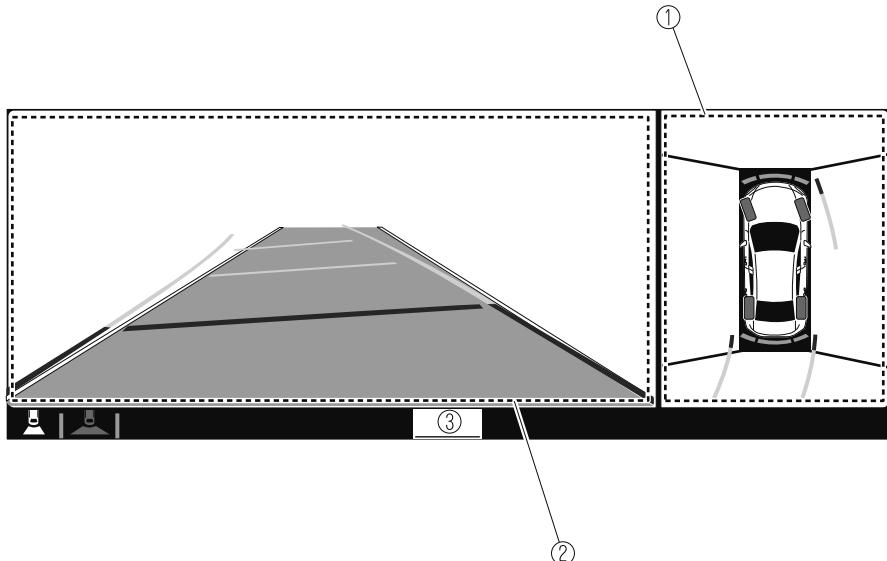

1. Top view screen
2. Rear view screen
3. "Check surroundings for safety." message is displayed

Top view/Rear wide view

Displays the image of the area around the vehicle and the rear of the vehicle (wide-area).

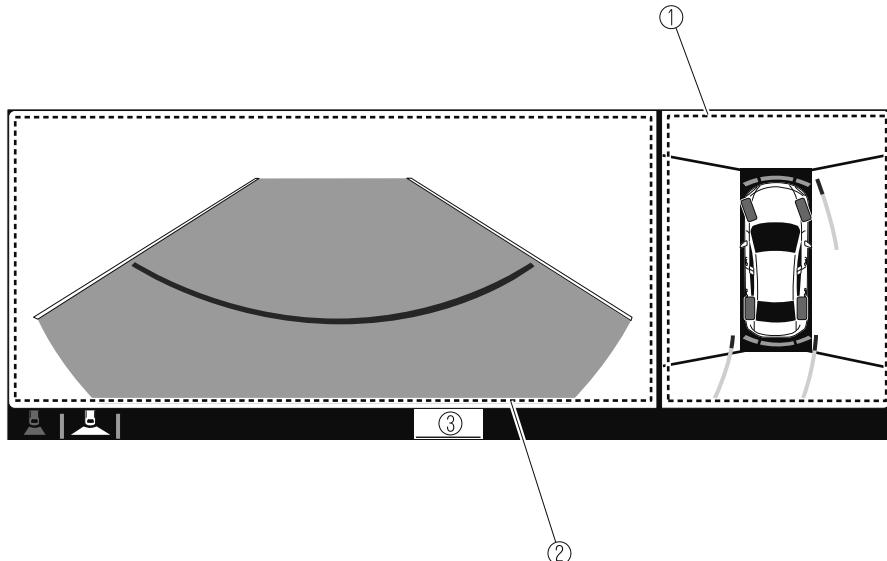

1. Top view screen
2. Rear wide view screen
3. "Check surroundings for safety." message is displayed

▼ How to Use the System


Top view/Front view, Top view/Front wide view, Side view

Indication

Images are displayed on the screen when the 360°View Monitor switch is pressed with all of the following conditions met.


- The ignition is switched ON.

- The shift lever/selector lever is in a position other than R.

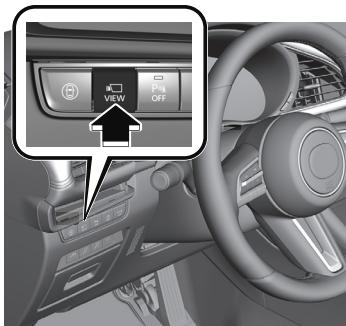

Display switching

The displayed screen can be changed each time the 360°view monitor switch is pressed.

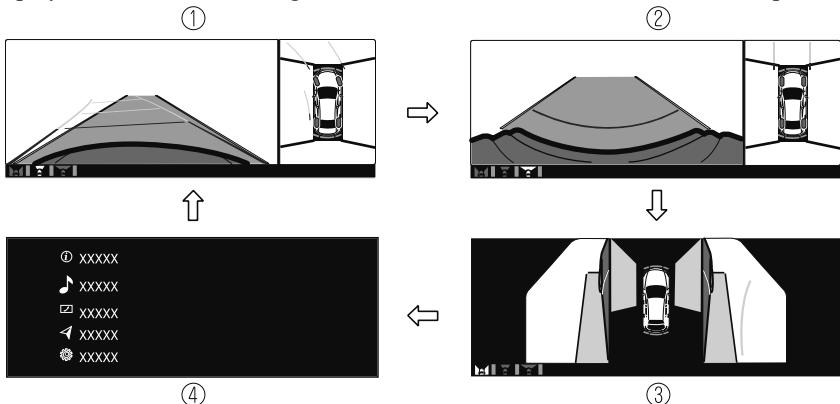

1. Top view/Front view
2. Top view/Front wide view
3. Side view
4. Home screen

NOTE

- When the shift lever/selector lever is in R position, the displayed screen does not switch to the top view/front view, top view/front wide view, or the side view.
- Display of the top view/front view, top view/front wide view, or the side view stops even with the display conditions met if any of the following conditions occurs.
 - When a switch around the commander knob is pressed.
 - (Manual transmission)
The parking brake is applied.

- (Automatic transmission)**

The selector lever is shifted to P position (displayed when the selector lever is in a position other than P).

- (Displayed when vehicle speed is less than 15 km/h (9.3 mph))**

- 4 minutes and 30 seconds have passed.

- The vehicle speed is about 15 km/h (9.3 mph) or faster.

- (Displayed when the vehicle speed is about 15 km/h (9.3 mph) or faster)**

- The vehicle speed is about 15 km/h (9.3 mph) or faster after 8 seconds have passed since pressing the 360°View Monitor switch.

- Four minutes and 22 seconds have passed from the point when the vehicle speed was less than 15 km/h (9.3 mph) after 8 seconds have passed since pressing the 360°View Monitor switch.

- The 360°View Monitor settings can be changed as follows.

Refer to the Settings section in the MZD Connect Owner's Manual.

- Automatic display of the 360°View Monitor when the ultrasonic sensor detects an obstruction.

- Automatic display of the 360°View Monitor when the ignition is switched ON.

- Screen priority level when the system launches


Top view/Rear view, Top view/Rear wide view

The top view/rear view, top view/rear wide view displays when all of the following conditions are met.

- The ignition is switched ON.
- Shift lever/selector lever is in R position.

Display switching

The displayed screen can be changed each time the 360°view monitor switch is pressed.

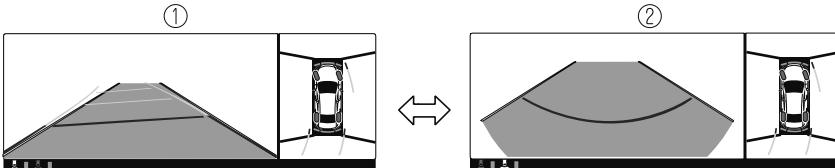

1. Top view/Rear view
2. Top view/Rear wide view

NOTE

- The top view/rear view and top view/rear wide view automatically display whether or not the 360°View Monitor switch is turned on or off when shifting the shift lever/selector lever to R position.


- The top view/rear view and top view/rear wide view displays the previously displayed screen.
- The setting can be changed to display the top view/front view when shifting from reverse to a forward gear without operating the 360°View Monitor switch to check the front of the vehicle while parallel parking.
Refer to the Settings section in the *MZD Connect Owner's Manual*.

Screen operation/icon

WARNING

Always stop the vehicle when adjusting the 360°View Monitor image quality.

Do not adjust the 360°View Monitor image quality while driving. If you adjust the 360°View Monitor image quality (such as brightness, contrast, tone, and colour density) while driving, it could lead to an unexpected accident.


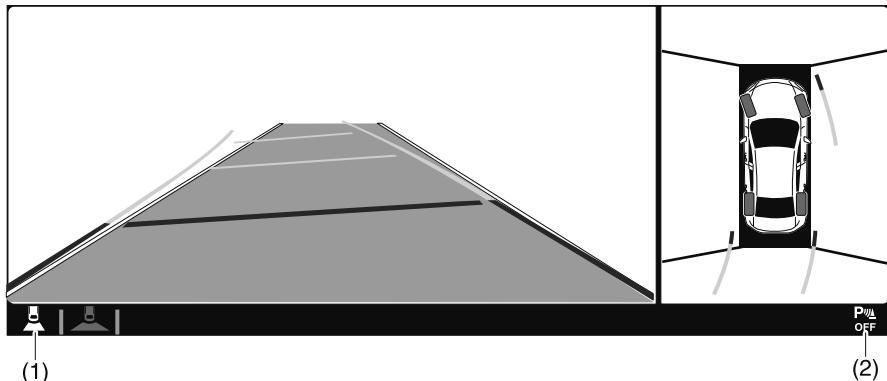


	Display/Icon	Content
(1)	View status icon	Indicates which image is displayed among the front view/front wide view/side view/rear view/rear wide view.
(2)	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.

▼ Top View/Front View

Use the top view/front view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

Display range

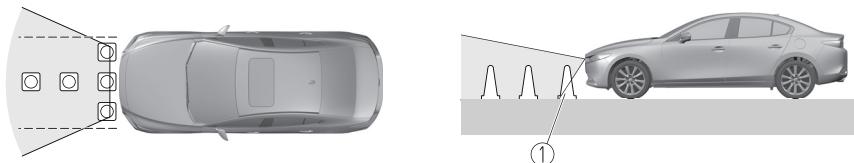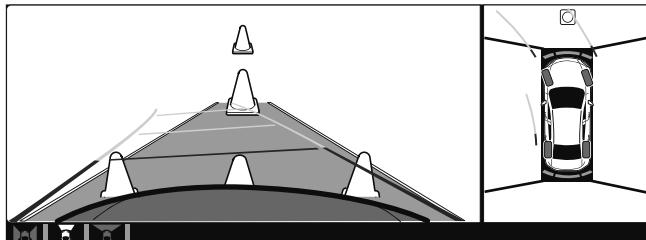


1. Target object

NOTE

- In the top view screen, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots.
- Because images displayed in the top view screen are processed from each camera, the top view screen may display in the following ways.
 - If an image containing an object with a conspicuous colour is picked up by any of the cameras, the screen area for each camera may be affected and it may display in that colour.
 - Obstructions displayed in the front view may not display on the top view screen.
 - If the position or angle of each camera changes due to tilting of the vehicle, the image may appear distorted.
 - Lines on the road may appear distorted at the seams where each of the camera images merge.
 - The screen area for each camera may appear bright/dark depending on the illumination level around any of the cameras.

Viewing the screen

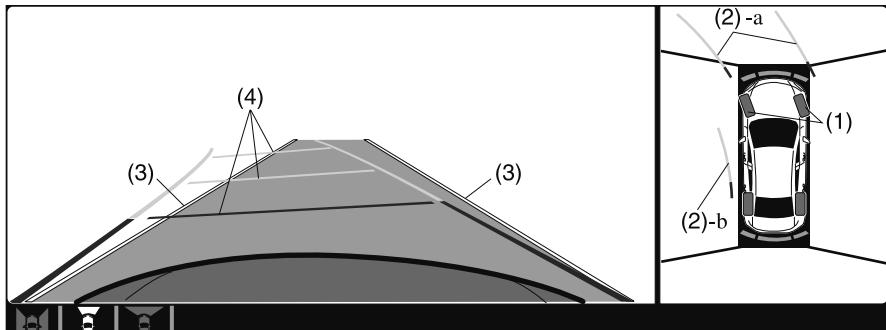

	Display/Icon	Content
(1)	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.
(2)	Projected vehicle path lines (yellow & red)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation. a) Indicates the path where the edge of the front bumper is expected to travel. b) Indicates the path where the inner side of the vehicle is expected to travel.
(3)	Extended vehicle width lines (blue)	Indicates the approximate width of the vehicle.
(4)	Projected vehicle path distance guide lines (yellow & red)	Indicates the distance (from front end of bumper) in front of the vehicle. <ul style="list-style-type: none">• The red line indicates the point about 0.5 m (19 in) from the front end of the bumper.• The yellow lines indicate the points about 1.0 m (39 in) and 2.0 m (78 in) from the front end of the bumper.




CAUTION

The parking sensor detection range has limitations. For example, obstructions closing in from the side and objects short in height may not be detected. Always confirm the safety around the vehicle visually when driving.

For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-273.

NOTE

The setting can be changed so that the projected vehicle path lines are not displayed. Refer to the Settings section in the MZD Connect Owner's Manual.

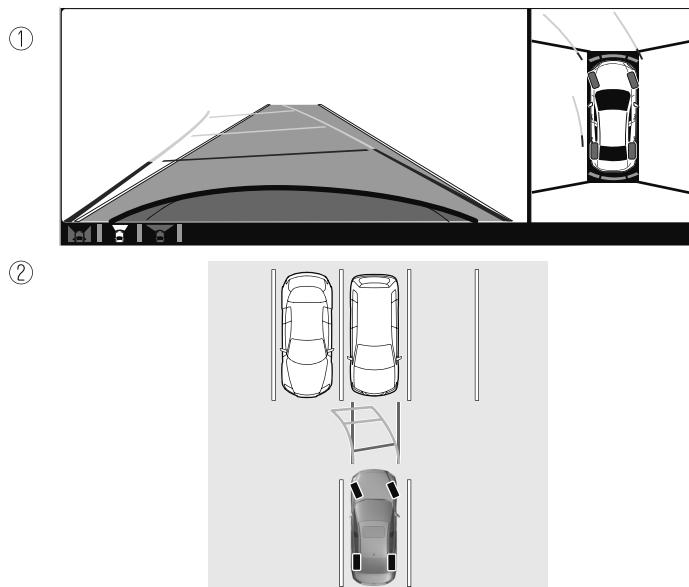How to use the projected vehicle path line function



1. (Screen display)
2. (Actual condition)

Make sure that there are no obstructions within the projected vehicle path lines.
Drive the vehicle forward while turning the steering wheel so that no obstructions come within the projected vehicle path lines.

▼ Top View/Front Wide View

Use the top view/front wide view to assist in checking the safety of the surrounding area when accelerating from a stop or entering a T-shaped intersection and intersection.


Display range

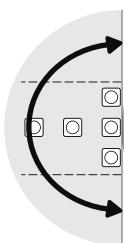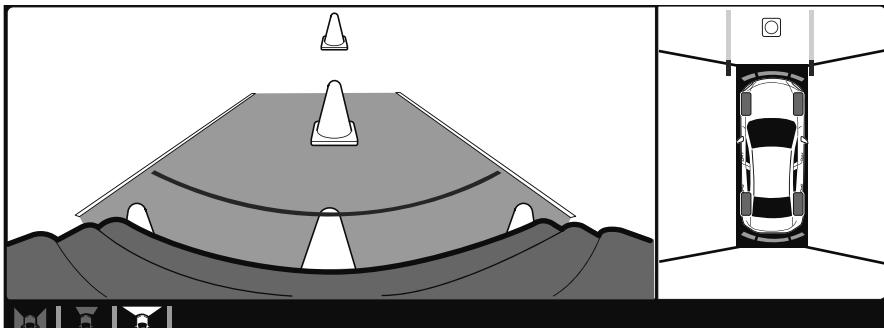

1. Target object

NOTE

- In the top view screen, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots.
- Because images displayed in the top view screen are processed from each camera, the top view screen may display in the following ways.
 - If an image containing an object with a conspicuous colour is picked up by any of the cameras, the screen area for each camera may be affected and it may display in that colour.
 - Obstructions displayed in the front view may not display on the top view screen.
 - If the position or angle of each camera changes due to tilting of the vehicle, the image may appear distorted.
 - Lines on the road may appear distorted at the seams where each of the camera images merge.
 - The screen area for each camera may appear bright/dark depending on the illumination level around any of the cameras.

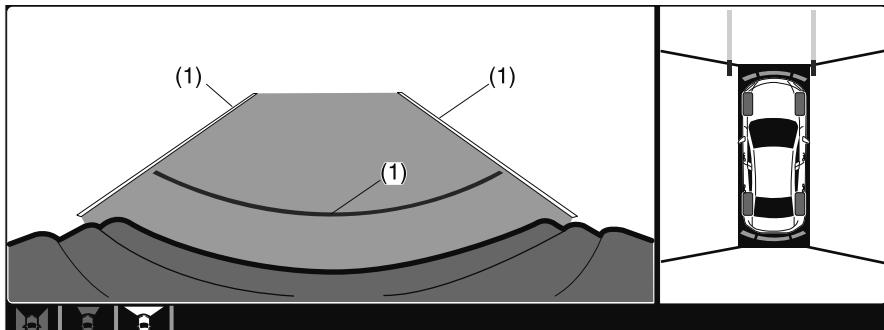Viewing the screen

	Display/Icon	Content
(1)	Extended vehicle width lines and distance guide lines (blue & red)	<p>Indicates the approximate width of the vehicle and the distance (from front end of bumper) in front of the vehicle.</p> <ul style="list-style-type: none">The red lines indicate the points up to about 0.5 m (19 in) from the front end of the bumper.


NOTE

The front wide view screen displays the image in front of the vehicle at a wide angle and corrects the image to help detect approaching obstructions from the side. Therefore, it differs from the actual view.

▼ Side View


Use the side view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

Display range

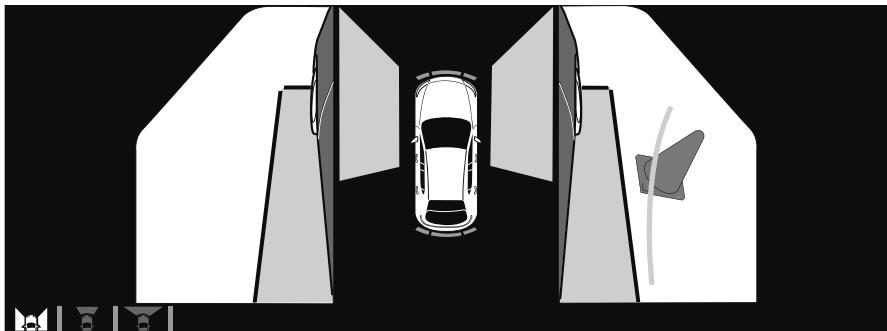

1. Target object

Viewing the screen

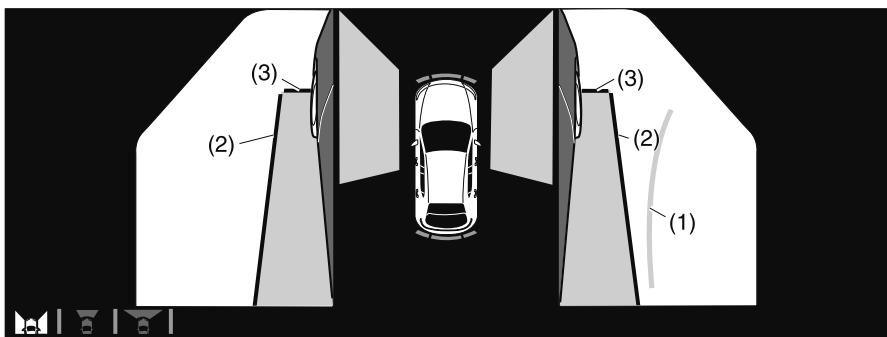


	Display/Icon	Content
(1)	Projected vehicle path lines (yellow)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation. The projected vehicle path lines (yellow) indicate the path the inner side of the vehicle is expected to travel.
(2)	Vehicle parallel guide lines (blue)	Indicates the approximate vehicle width including the door mirrors.

	Display/Icon	Content
(3)	Vehicle front end guide lines (blue)	Indicates the point about 0.25 m (9.84 in) from the front edge of the vehicle (front edge of the bumper).

NOTE

The setting can be changed so that the projected vehicle path lines are not displayed. Refer to the Settings section in the *MZD Connect Owner's Manual*.

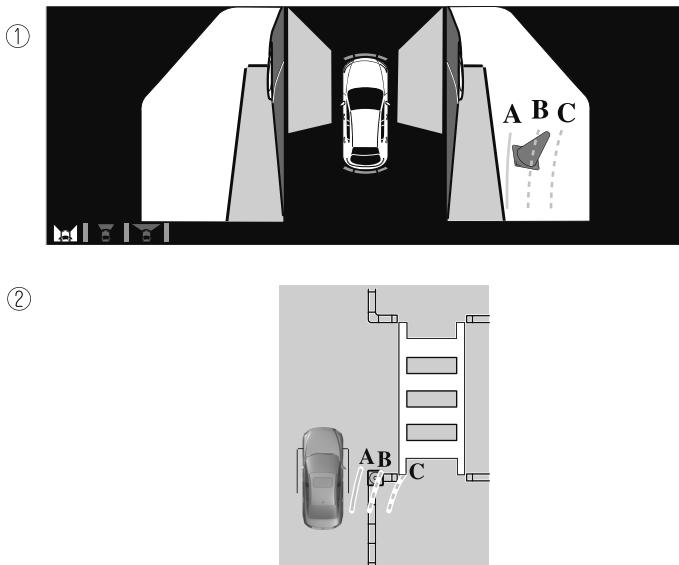How to use the projected vehicle path line function

1. (Screen display)
2. (Actual condition)

Make sure that there are no obstructions within the projected vehicle path lines. Turn the steering wheel so that the projected vehicle path lines travel inside of the obstruction (A), and drive the vehicle forward until it passes the obstruction. If the projected vehicle path lines are on an obstruction (B) or outside of the obstruction (C), the vehicle may contact the obstruction when turning the vehicle sharply.

⚠ CAUTION

➤ The parking sensor detection range has limitations. For example, obstructions closing in from the side and objects short in height may not be detected. Always confirm the safety around the vehicle visually when driving.

For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-273.

- Do not turn the steering wheel any more until the vehicle has passed the obstruction, even if the obstruction is not visible on the side view image. If the steering wheel is turned even more, the vehicle may contact the obstruction if it is turned sharply.


NOTE

- Because there might be a difference between the image displayed on the screen and the actual conditions, always check the safety of the surrounding area using the mirrors and directly with your eyes when driving.
- Even though the object displayed on the screen, such as a road curb or a division line of a parking space, and the vehicle parallel guide lines appear parallel, they may not actually be parallel.

▼ Top View/Rear View

Use the top view/rear view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

Range of displayed screen image

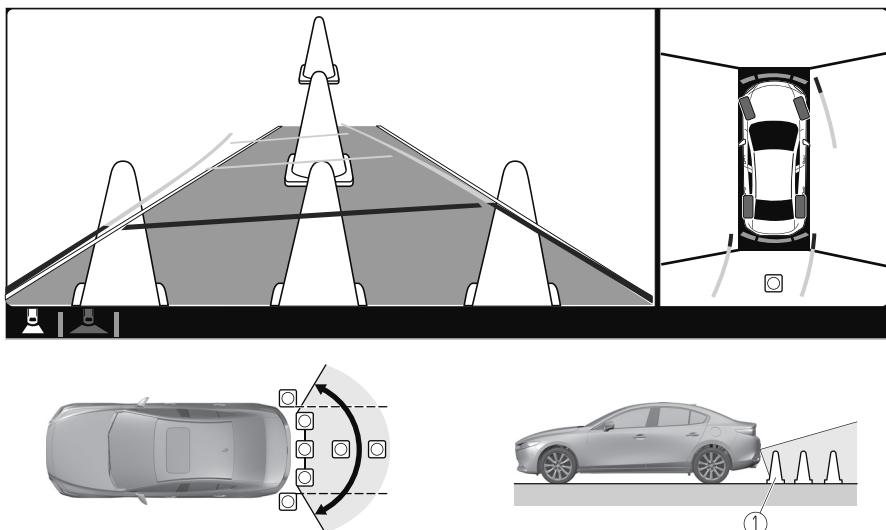


1. Target object

NOTE

- In the top view screen, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots.

i-ACTIVSENSE

- Because images displayed in the top view screen are processed from each camera, the top view screen may display in the following ways.
- If an image containing an object with a conspicuous colour is picked up by any of the cameras, the screen area for each camera may be affected and it may display in that colour.
- Obstructions displayed in the rear view may not display on the top view screen.
- If the position or angle of each camera changes due to tilting of the vehicle, the image may appear distorted.
- Lines on the road may appear distorted at the seams where each of the camera images merge.
- The screen area for each camera may appear bright/dark depending on the illumination level around any of the cameras.

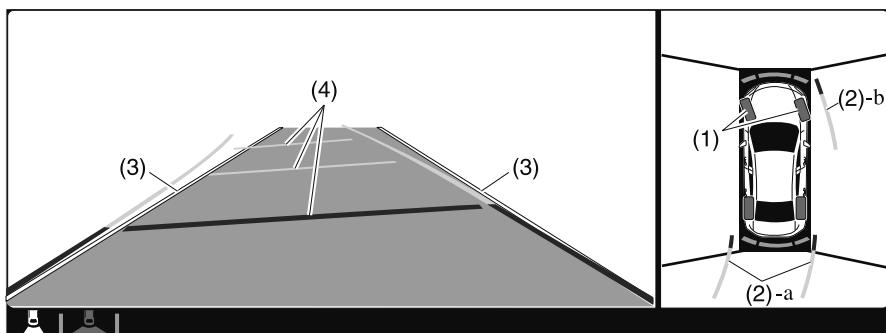Viewing the screen

	Display/Icon	Content
(1)	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.
(2)	Projected vehicle path lines (yellow & red)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation. a) Indicates the path where the edge of the rear bumper is expected to travel. b) Indicates the path where the outer side of the vehicle is expected to travel.
(3)	Extended vehicle width lines (blue)	These guide lines indicate the approximate width of the vehicle.

	Display/Icon	Content
(4)	Projected vehicle path distance guide lines (yellow & red)	<p>These guide lines indicate the approximate distance to a point measured from the rear of the vehicle (from the end of the bumper).</p> <ul style="list-style-type: none">• The red line indicates the point about 0.5 m (19 in) from the rear end of the bumper.• The yellow lines indicate the points about 1.0 m (39 in) and 2.0 m (78 in) from the rear end of the bumper.

NOTE

The setting can be changed so that the projected vehicle path lines are not displayed.
Refer to the Settings section in the *MZD Connect Owner's Manual*.

How to use the projected vehicle path line function**CAUTION**



- *The front of the vehicle swings out wide when turning the steering wheel while reversing. Maintain sufficient distance between the vehicle and an obstruction.*
- *The parking sensor detection range has limitations. For example, obstructions closing in from the side and objects short in height may not be detected. Always confirm the safety around the vehicle visually when driving.*
For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-273.

NOTE

- *Because there might be a difference between the image displayed on the screen, such as indicated in the following, and the actual conditions when parking, always check the safety at the rear of the vehicle and the surrounding area directly with your eyes.*
- *Even though the back end of the parking space (or garage) displayed on the screen and distance guide lines appear parallel, they may not actually be parallel.*
- *When parking in a space with a division line on only one side of the parking space, even though the division line and the vehicle width guide line appear parallel, they may not actually be parallel.*
- *The following shows an example of vehicle parking with the steering wheel turned to the left while backing up the vehicle. When backing into a parking space from the opposite direction, the steering operation is reversed.*


i-ACTIVSENSE

1. Back the vehicle into the parking space by turning the steering wheel so that the vehicle enters the centre of the parking space.

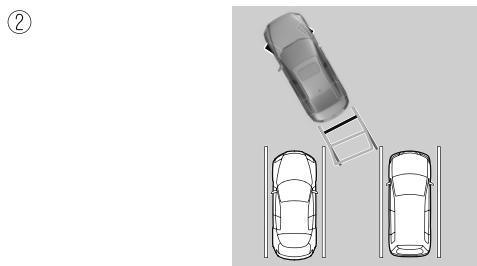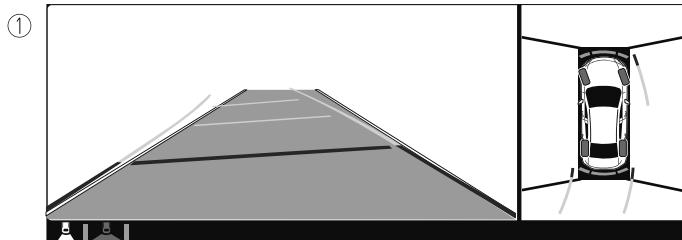

1. (Screen display)
 2. (Actual condition)
2. After the vehicle starts entering the parking space, stop and adjust the steering wheel so that the distance between the vehicle width lines and the sides of the parking space on the left and right are roughly equal, and then continue backing up slowly.

3. Once the vehicle width lines and the sides of the parking space on the left and right are parallel, straighten the wheels and back the vehicle slowly into the parking space. Continue checking the vehicle's surroundings and then stop the vehicle in the best possible position. (If the parking space has division lines, check whether the vehicle width guide lines are parallel to them.)



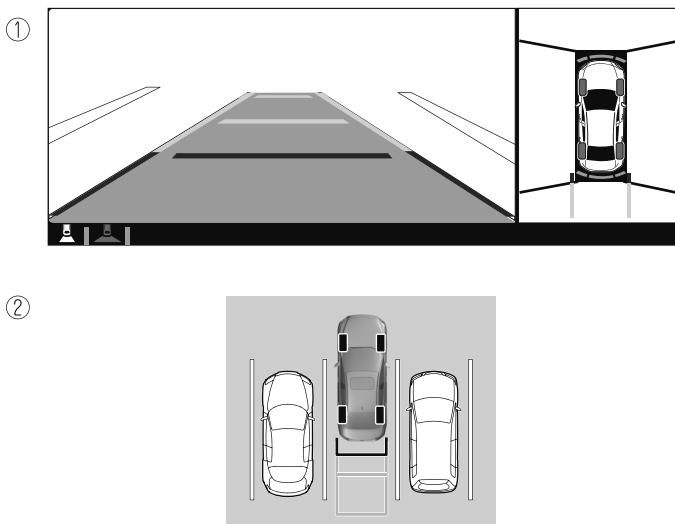


1. (Screen display)
2. (Actual condition)

▼ Top View/Rear Wide View

Use the top view/rear wide view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

Range of displayed screen image

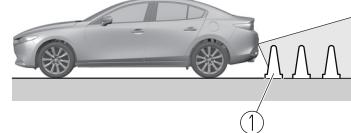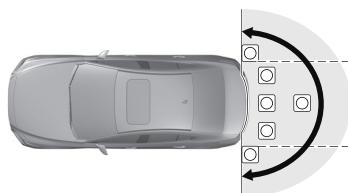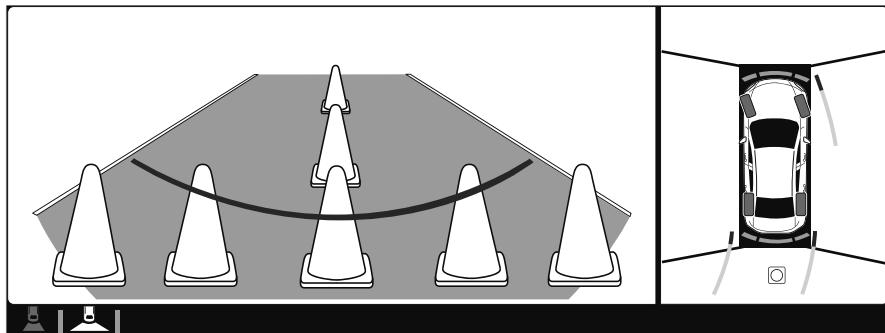


1. Target object

NOTE

- In the top view screen, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots.
- Because images displayed in the top view screen are processed from each camera, the top view screen may display in the following ways.
 - If an image containing an object with a conspicuous colour is picked up by any of the cameras, the screen area for each camera may be affected and it may display in that colour.
 - Obstructions displayed in the front view may not display on the top view screen.
 - If the position or angle of each camera changes due to tilting of the vehicle, the image may appear distorted.
 - Lines on the road may appear distorted at the seams where each of the camera images merge.
 - The screen area for each camera may appear bright/dark depending on the illumination level around any of the cameras.

Viewing the screen

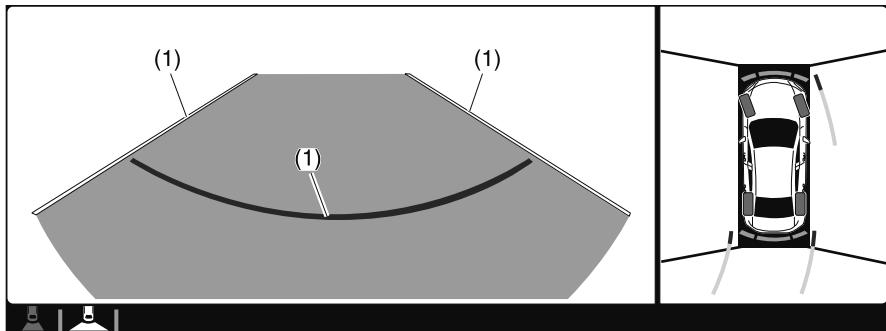

	Display/Icon	Content
(1)	Extended vehicle width lines and distance guide lines (blue & red)	<p>These guide lines indicate the approximate width of the vehicle and distance to a point measured from the rear of the vehicle (from the end of the bumper).</p> <ul style="list-style-type: none"> The red lines indicate the points up to about 0.5 m (19 in) from the rear end of the bumper.

NOTE

The top view/rear wide view screen displays the image at the rear of the vehicle at a wide angle and corrects the image to help detect approaching obstructions from the side.

Therefore, it differs from the actual view.


▼ Margin of Error Between Road Surface on Screen and Actual Road Surface

There might be some margin of error between the road surface appearing on the screen and the actual road surface. A margin of error in the perceived distance could lead to an accident, therefore be aware of the following conditions which can more easily produce errors in the perceived distance.

The vehicle tilts due to weight of passengers and cargo.


If the vehicle is tilted, obstructions picked up by a camera can appear farther or closer than the actual distance from the vehicle.

Front camera

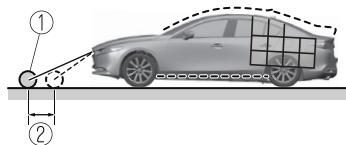


1. Obstruction
2. Margin of error

Side camera

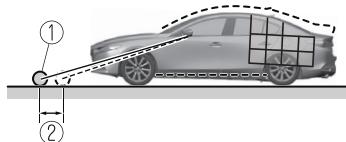

1. Obstruction
2. Margin of error

Rear camera

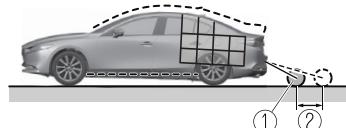


1. Obstruction
2. Margin of error


There is a steep up or down grade in the road at the front or rear of the vehicle

If there is a steep up or down grade in the road at the front or rear of the vehicle, obstructions picked up by the camera can appear farther or closer than the actual distance from the vehicle.


Front camera

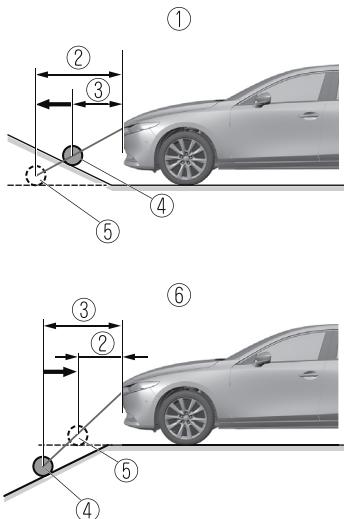

1. Appears further than actual distance
2. Distance of obstruction being viewed on screen
3. Actual distance of obstruction from vehicle
4. Actual obstruction
5. Obstruction appearing on screen
6. Appears closer than actual distance

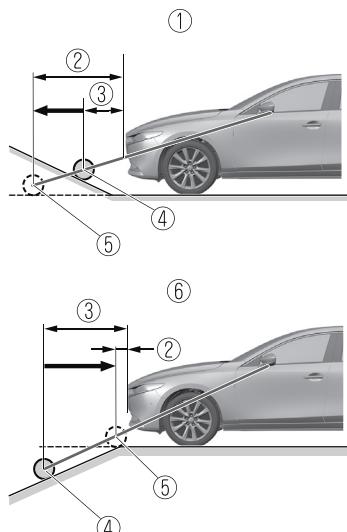Side camera

1. Appears further than actual distance
2. Distance of obstruction being viewed on screen
3. Actual distance of obstruction from vehicle
4. Actual obstruction
5. Obstruction appearing on screen
6. Appears closer than actual distance

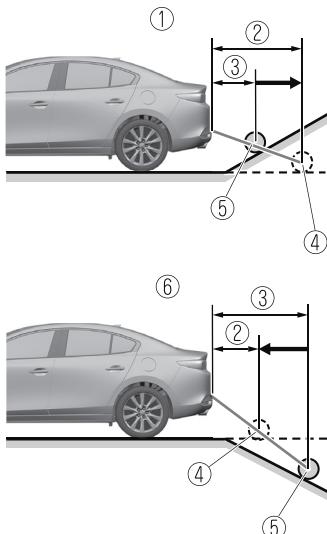Rear camera

1. Appears further than actual distance
2. Distance of obstruction being viewed on screen
3. Actual distance of obstruction from vehicle
4. Obstruction appearing on screen
5. Actual obstruction
6. Appears closer than actual distance

NOTE


If the vehicle is on a slope, obstructions taken by the camera can appear farther or closer than the actual distance from the vehicle.

Three-dimensional object at vehicle front or rear


Because the vehicle front end guide lines (side camera) or the distance guide lines (rear camera) are displayed based on a flat surface, the distance to the three-dimensional object displayed on the screen is different from the actual distance.

Side camera

①

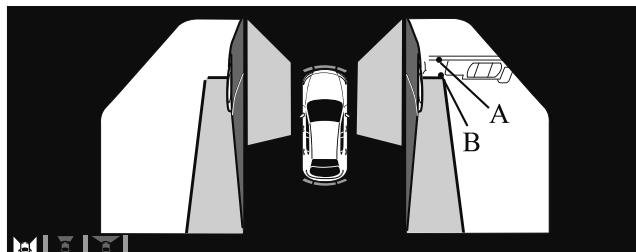


②

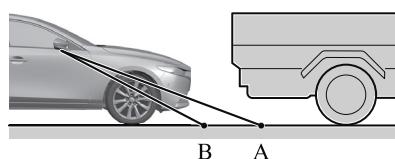

1. (Screen display)
2. (Actual condition)


Rear camera

①

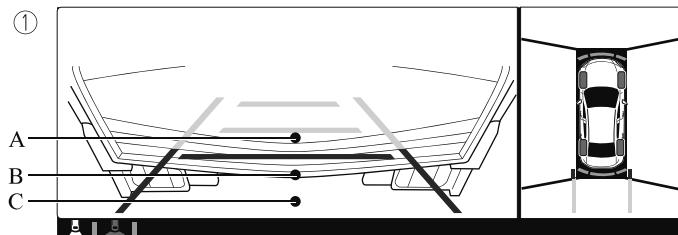

③

②

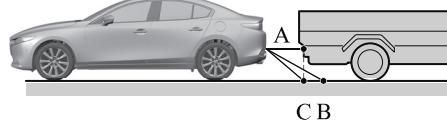

C B

④

1. (Screen display)
2. (Actual condition)
3. Sensed distance on screen A>B>C
4. Actual distance B>C=A

▼ System Problem Indication


Centre display indication	Cause	Action to be taken
“No camera signal.” is displayed	The control unit might be damaged.	Have your vehicle inspected by an Authorised Mazda Repairer.
Screen is pitch-black and blank	The camera might be damaged.	

Forward Sensing Camera (FSC)*

▼ Forward Sensing Camera (FSC)

Your vehicle is equipped with a Forward Sensing Camera (FSC). The Forward Sensing Camera (FSC) is positioned near the rearview mirror and used by the following systems.

- High Beam Control System (HBC)
- Adaptive LED Headlights (ALH)
- Traffic Sign Recognition System (TSR)
- Distance & Speed Alert (DSA)
- Driver Attention Alert (DAA)
- Driver Monitoring (DM)
- Mazda Radar Cruise Control (MRCC)
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
- Lane-keep Assist System (LAS)
- Cruising & Traffic Support (CTS)
- Smart Brake Support (SBS)

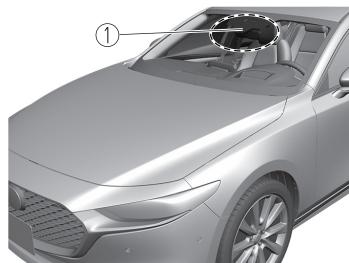

1. Forward Sensing Camera (FSC)

The Forward Sensing Camera (FSC) determines the conditions ahead of the vehicle while travelling at night and detects traffic lanes. The distance in which the Forward Sensing Camera (FSC) can detect objects varies depending on the surrounding conditions.

⚠ WARNING

Do not modify the suspension:

If the vehicle height or inclination is changed, the system will not be able to correctly detect vehicles ahead. This will result in the system not operating normally or mistakenly operating, which could cause a serious accident.

⚠ CAUTION

➤ *Do not apply accessories, stickers or film to the windscreens near the Forward Sensing Camera (FSC).*

If the area in front of the Forward Sensing Camera (FSC) lens is obstructed, it will cause the system to not operate correctly. Consequently, each system may not operate normally which could lead to an unexpected accident.

➤ *Do not disassemble or modify the Forward Sensing Camera (FSC).*
Disassembly or modification of the Forward Sensing Camera (FSC) will cause a malfunction or mistaken operation. Consequently, each system may not operate normally which could lead to an unexpected accident.

➤ *Heed the following cautions to assure the correct operation of the Forward Sensing Camera (FSC).*

➤ *Be careful not to scratch the Forward Sensing Camera (FSC) lens or allow it to get dirty.*

➤ *Do not remove the Forward Sensing Camera (FSC) cover.*

➤ *Do not place objects on the instrument panel which reflect light.*

- Always keep the windscreen glass around the camera clean by removing dirt or fogging. Use the windscreen defroster to remove fogging on the windscreen.
- Consult an expert repairer, we recommend an Authorised Mazda Repairer regarding cleaning the interior side of the windscreen around the Forward Sensing Camera (FSC).
- Consult an expert repairer, we recommend an Authorised Mazda Repairer before performing repairs around the Forward Sensing Camera (FSC).
- The Forward Sensing Camera (FSC) is installed to the windscreen. Consult an expert repairer, we recommend an Authorised Mazda Repairer for windscreen repair and replacement.
- When cleaning the windscreen, do not allow glass cleaners or similar cleaning fluids to get on the Forward Sensing Camera (FSC) lens. In addition, do not touch the Forward Sensing Camera (FSC) lens.
- When performing repairs around the rearview mirror, consult an expert repairer, we recommend an Authorised Mazda Repairer.
- Consult an expert repairer, we recommend an Authorised Mazda Repairer regarding cleaning of the camera lens.
- Do not hit or apply strong force to the Forward Sensing Camera (FSC) or the area around it. If the Forward Sensing Camera (FSC) is severely hit or if there are cracks or damage caused by flying gravel or debris in the area around it, stop using the following systems and consult an expert repairer, we recommend an Authorised Mazda Repairer.
 - High Beam Control System (HBC)
 - Adaptive LED Headlights (ALH)
 - Lane Departure Warning System (LDWS)
 - Traffic Sign Recognition System (TSR)
 - Distance & Speed Alert (DSA)
 - Driver Attention Alert (DAA)
 - Driver Monitoring (DM)
 - Mazda Radar Cruise Control (MRCC)
 - Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
 - Lane-keep Assist System (LAS)
 - Cruising & Traffic Support (CTS)
 - Smart Brake Support (SBS)
- The direction in which the Forward Sensing Camera (FSC) is pointed has been finely adjusted. Do not change the installation position of the Forward Sensing Camera (FSC) or remove it. Otherwise, it could result in damage or malfunction.
- Always use tyres for all wheels that are of the specified size, and the same manufacturer, brand, and tread pattern. In addition, do not use tyres with significantly different wear patterns on the same vehicle as the system may not operate normally.

➤ *The Forward Sensing Camera (FSC) includes a function for detecting a soiled windscreen and informing the driver, however, depending on the conditions, it may not detect plastic shopping bags, ice or snow on the windscreen. In such cases, the system cannot accurately determine a vehicle ahead and may not be able to operate normally. Always drive carefully and pay attention to the road ahead.*

NOTE

- *In the following cases, the Forward Sensing Camera (FSC) cannot detect target objects correctly, and each system may be unable to operate normally.*
 - *The height of the vehicle ahead is low.*
 - *You drive your vehicle at the same speed as the vehicle ahead.*
 - *Headlights are not turned on during the night or when going through a tunnel.*
- *In the following cases, the Forward Sensing Camera (FSC) may not be able to detect target objects correctly.*
 - *Under bad weather condition, such as rain, fog and snow.*
 - *The window washer is being used or the windscreens wipers are not used when it's raining.*
 - *Ice, fog, snow, frost, rainfall, dirt, or foreign matter such as a plastic bag is stuck on the windscreens.*
 - *Trucks with low loading platforms and vehicles with an extremely low or high profile.*
 - *When driving next to walls with no patterning (including fences and longitudinally striped walls).*

- *The tail lights of the vehicle ahead are turned off.*
- *A vehicle is outside the illumination range of the headlights.*
- *The vehicle is making a sharp turn, or ascending or descending a steep slope.*
- *Entering or exiting a tunnel.*
- *Heavy luggage is loaded causing the vehicle to tilt.*
- *Strong light is shone at the front of the vehicle (back light or high-beam light from on-coming vehicles).*
- *There are many light emitters on the vehicle ahead.*
- *When the vehicle ahead is not equipped with tail lights or the tail lights are turned off at nighttime.*
- *Elongated luggage or cargo is loaded onto installed roof rails and covers the Forward Sensing Camera (FSC).*
- *Exhaust gas from the vehicle in front, sand, snow, and water vapour rising from manholes and grating, and water splashed into the air.*
- *When towing a malfunctioning vehicle.*
- *The vehicle is driven with tyres having significantly different wear.*
- *The vehicle is driven on down slopes or bumpy roads.*
- *There are water puddles on the road.*
- *The surroundings are dark such as during the night, early evening, or early morning, or in a tunnel or indoor parking lot.*
- *The illumination brightness of the headlights is reduced or the headlight illumination is weakened due to dirt or a deviated optical axis.*

- The target object enters the blind spot of the Forward Sensing Camera (FSC).
- A person or object bursts onto the road from the shoulder or cuts right in front of you.
- You change lanes and approach a vehicle ahead.
- When driving extremely close to the target object.
- Tyre chains or a temporary spare tyre is installed.
- The vehicle ahead has a special shape. For example, a vehicle towing a trailer house or a boat, or a vehicle carrier carrying a vehicle with its front pointed rearward.
- If the Forward Sensing Camera (FSC) cannot operate normally due to rain, backlight, or fog, the system functions related to the Forward Sensing Camera (FSC) are temporarily stopped and the following warning lights turn on. However, this does not indicate a malfunction.
 - High Beam Control System (HBC) warning indication/warning light (amber)
 - Adaptive LED Headlights (ALH) warning indication/warning light (amber)
 - i-ACTIVSENSE warning indication/warning light
- If the Forward Sensing Camera (FSC) cannot operate normally due to high temperatures, the system functions related to the Forward Sensing Camera (FSC) are temporarily stopped and the following warning lights turn on. However, this does not indicate a malfunction. Cool down the area around the Forward Sensing Camera (FSC) such as by turning on the air conditioner.
 - High Beam Control System (HBC) warning indication/warning light (amber)
 - Adaptive LED Headlights (ALH) warning indication/warning light (amber)
 - i-ACTIVSENSE warning indication/warning light
- If the Forward Sensing Camera (FSC) detects that the windscreen is dirty or foggy, the system functions related to the Forward Sensing Camera (FSC) are temporarily stopped and the following warning lights turn on. However, this does not indicate a problem. Remove the dirt from the windscreen or press the defroster switch and defog the windscreen.
 - High Beam Control System (HBC) warning indication/warning light (amber)
 - Adaptive LED Headlights (ALH) warning indication/warning light (amber)
 - i-ACTIVSENSE warning indication/warning light

- If there are recognizable cracks or damage caused by flying gravel or debris on the windscreen, always have the windscreen replaced. Consult an Authorised Mazda Repairer for replacement.
- The Forward Sensing Camera (FSC) recognises pedestrians when all of the following conditions are met:
 - The height of a pedestrian is about 1 to 2 meters.
 - An outline such as the head, both shoulders, or the legs can be determined.
- In the following cases, the Forward Sensing Camera (FSC) may not be able to detect target objects correctly:
 - Multiple pedestrians are walking, or there are groups of people.
 - A pedestrian is close to a separate object.
 - A pedestrian is crouching, lying, or slouching.
 - A pedestrian suddenly jumps into the road right in front of the vehicle.
 - A pedestrian opens an umbrella, or is carrying large baggage or articles.
 - A pedestrian is in a dark location such as during the night, or blends into the background by wearing clothes matching the background colour.

Front Radar Sensor*

▼ Front Radar Sensor


Your vehicle is equipped with a front radar sensor.

The following systems also use the front radar sensor.

- Distance & Speed Alert (DSA)
- Mazda Radar Cruise Control (MRCC)
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
- Cruising & Traffic Support (CTS)
- Smart Brake Support (SBS)

The front radar sensor functions by detecting the radio waves reflected off a vehicle ahead or an obstruction sent from the radar sensor.

The front radar sensor is mounted behind the front emblem.

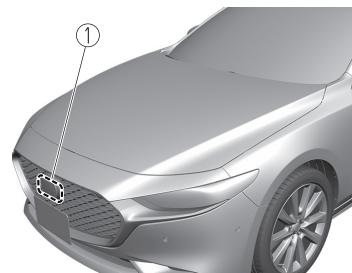

1. Front radar sensor

If “Safety and Driver Support Systems Temporarily Disabled. Front Radar Obscured. Drive Safely” is displayed on the multi-information display of the instrument cluster, clean the area around the front radar sensor.



CAUTION

Heed the following precautions to assure correct operation of each system.

- Do not adhere stickers (including transparent stickers) to the surface of the radiator grille and front emblem in and around the front radar sensor, and do not replace the radiator grille and front emblem with any product that is not a genuine product designed for use with the front radar sensor.
- The front radar sensor includes a function for detecting soiling of the radar sensor's front surface and informing the driver, however, depending on the conditions, it may require time to detect or it may not detect plastic shopping bags, ice or snow. If this occurs, the system may not operate correctly, therefore always keep the front radar sensor clean.
- Do not install a grille guard.
- If the front part of the vehicle has been damaged in a vehicle accident, the position of the front radar sensor may have moved. Stop the system immediately and always have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.
- Do not use the front bumper to push other vehicles or obstructions such as when pulling out of a parking space. Otherwise, the front radar sensor could be hit and its position deviated.
- Do not remove, disassemble, or modify the front radar sensor.

➤ For repairs, replacement or paint work around the front radar sensor, consult an expert repairer, we recommend an Authorised Mazda Repairer.

➤ Do not modify the suspension. If the suspension are modified, the vehicle's posture could change and the front radar sensor may not be able to correctly detect a vehicle ahead or an obstruction.

NOTE

- Under the following conditions, the front radar sensor may not be able to detect vehicles ahead or obstructions correctly and each system may not operate normally.
 - The rear surface of a vehicle ahead does not reflect radio waves effectively, such as an unloaded trailer or an automobile with a loading platform covered by a soft top, vehicles with a hard plastic tailgate, and round-shaped vehicles.
 - Vehicles ahead with low vehicle height and thus less area for reflecting radio waves.
 - Visibility is reduced due to a vehicle ahead casting off water, snow, or sand from its tyres and onto your windscreen.
 - The luggage compartment is loaded with heavy objects or the rear passenger seats are occupied.
 - Ice, snow, or soiling is on the front surface of the front emblem.
 - During inclement weather such as rain, snow, or sand storms.
 - When driving near facilities or objects emitting strong radio waves.

i-ACTIVSENSE

- Under the following conditions, the front radar sensor may not be able to detect vehicles ahead or obstructions.
 - The beginning and end of a curve.
 - Roads with continuous curves.
 - Narrow lane roads due to road construction or lane closures.
 - The vehicle ahead enters the radar sensor's blind spot.
 - The vehicle ahead is running abnormally due to accident or vehicle damage.
 - Roads with repeated up and down slopes
 - Driving on poor roads or unpaved roads.
 - The distance between your vehicle and the vehicle ahead is extremely short.
 - A vehicle suddenly comes close such as by cutting into the lane.
- To prevent incorrect operation of the system, use tyres of the same specified size, manufacturer, brand, and tread pattern on all four wheels. In addition, do not use tyres with significantly different wear patterns or tyre pressures on the same vehicle (Including the temporary spare tyre).
- If the battery power is weak, the system may not operate correctly.
- When driving on roads with little traffic and few vehicles ahead or obstructions for the front radar sensor to detect, "Safety and Driver Support Systems Temporarily Disabled. Front Radar Obscured. Drive Safely" may be temporarily displayed, however, this does not indicate a problem.
- The radar sensors are regulated by the relevant radio wave laws of the country in which the vehicle is driven. If the vehicle is driven abroad, authorization from the country in which the vehicle is driven may be required.

Front Side Radar Sensor*

▼ Front Side Radar Sensor

Your vehicle is equipped with front side radar sensor. The following systems also use the front side radar sensor.

- Front Cross Traffic Alert (FCTA)

The front side radar sensor function by detecting the radio waves reflected off a vehicle approaching from the front or an obstruction sent from the radar sensor.



1. Front side radar sensor

The front side radar sensor are installed inside the front bumper, one each on the left and right sides.

Always keep the surface of the front bumper near the front side radar sensor clean so that the front side radar sensor operate normally. Also, do not apply items such as stickers.

Refer to Exterior Care on page 6-57.



CAUTION

If the front bumper receives a severe impact, the system may no longer operate normally. Stop the system immediately and have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

- The detection ability of the front side radar sensor has limitations. In the following cases, the detection ability may lower and the system may not operate normally.
 - The front bumper near the front side radar sensor has become deformed.
 - Snow, ice or mud adheres to the front side radar sensor on the front bumper.
 - Under bad weather conditions such as rain, snow and fog.
- Under the following conditions, the front side radar sensor cannot detect target objects or it may be difficult to detect them.
 - Small motorcycles, bicycles, pedestrians, animals, shopping carts, and stationary objects on a road or a road side.
 - Vehicle shapes which do not reflect radar waves well such as empty trailers with a low vehicle height and sports cars.
- Vehicles are shipped with the direction of the front side radar sensor adjusted for each vehicle to a loaded vehicle condition so that the front side radar sensor detect approaching vehicles correctly. If the direction of the front side radar sensor has deviated for some reason, have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.
- For repairs or replacement of the front side radar sensor, or bumper repairs, paintwork, and replacement near the radar sensors, consult an expert repairer, we recommend an Authorised Mazda Repairer.

- The radar sensors are regulated by the relevant radio wave laws of the country in which the vehicle is driven. If the vehicle is driven abroad, authorization from the country in which the vehicle is driven may be required.*

Rear Side Radar Sensor*

▼ Rear Side Radar Sensor

Your vehicle is equipped with rear side radar sensor. The following systems also use the rear side radar sensor.

- Blind Spot Monitoring (BSM)
- Rear Cross Traffic Alert (RCTA)
- Smart Brake Support [Rear Crossing] (SBS-RC)

The rear side radar sensor function by detecting the radio waves reflected off a vehicle approaching from the rear or an obstruction sent from the radar sensor.

Saloon



1. Rear side radar sensor

Hatchback



1. Rear side radar sensor

The rear side radar sensor are installed inside the rear bumper, one each on the left and right sides.

Always keep the surface of the rear bumper near the rear side radar sensor clean so that the rear side radar sensor operate normally. Also, do not apply items such as stickers.

Refer to Exterior Care on page 6-57.

CAUTION

If the rear bumper receives a severe impact, the system may no longer operate normally. Stop the system immediately and have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

- *The detection ability of the rear side radar sensor has limitations. In the following cases, the detection ability may lower and the system may not operate normally.*
 - *The rear bumper near the rear side radar sensor has become deformed.*
 - *Snow, ice or mud adheres to the rear side radar sensor on the rear bumper.*
 - *Under bad weather conditions such as rain, snow and fog.*
- *Under the following conditions, the rear side radar sensor cannot detect target objects or it may be difficult to detect them.*
 - *Small motorcycles, bicycles, pedestrians, animals, shopping carts, and stationary objects on a road or a road side.*
 - *Vehicle shapes which do not reflect radar waves well such as empty trailers with a low vehicle height and sports cars.*

• Vehicles are shipped with the direction of the rear side radar sensor adjusted for each vehicle to a loaded vehicle condition so that the rear side radar sensor detect approaching vehicles correctly. If the direction of the rear side radar sensor has deviated for some reason, have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

• For repairs or replacement of the rear side radar sensor, or bumper repairs, paintwork, and replacement near the radar sensors, consult an expert repairer, we recommend an Authorised Mazda Repairer.


• The radar sensors are regulated by the relevant radio wave laws of the country in which the vehicle is driven. If the vehicle is driven abroad, authorization from the country in which the vehicle is driven may be required.

Rear/Rear corner/Rear Side Ultrasonic Sensor*

▼ Rear/Rear corner/Rear Side Ultrasonic Sensor

The ultrasonic sensors function by emitting ultrasonic waves which are reflected off obstructions at the rear and the returning ultrasonic waves are picked up by the ultrasonic sensors.

Saloon

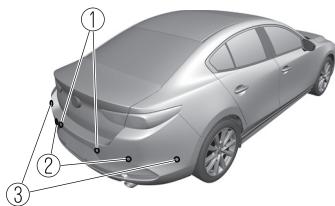

1. Rear ultrasonic sensor
2. Rear corner ultrasonic sensor
3. Rear side ultrasonic sensor

Hatchback



1. Rear ultrasonic sensor
2. Rear corner ultrasonic sensor
3. Rear side ultrasonic sensor

The ultrasonic sensors are mounted in the rear bumper.

Front Camera/Side Cameras/Rear Camera*


▼ Front Camera/Side Cameras/Rear Camera

Your vehicle is equipped with a front camera, side cameras, and a rear camera. The 360°View Monitor uses each camera. Refer to 360°View Monitor on page 4-202.

The front camera, side cameras, and rear camera shoot images of the area surrounding the vehicle.


Each camera is installed to the following positions.

Saloon

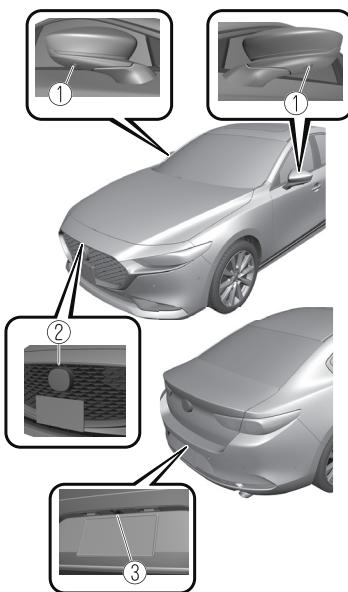

1. Side cameras
2. Front camera
3. Rear camera

Hatchback

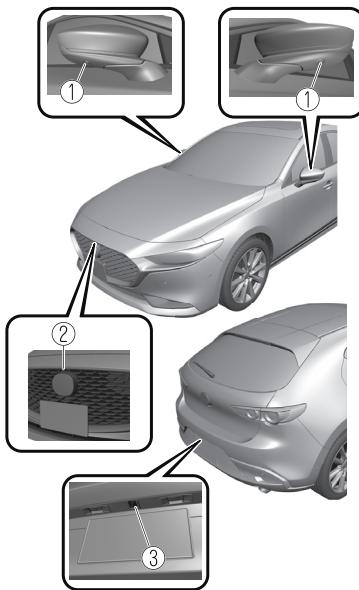


1. Side cameras
2. Front camera
3. Rear camera

Driver Monitoring Camera*

▼ Driver Monitoring Camera

The driver monitoring camera detects changes in the driver's facial features and estimates the amount of accumulated fatigue and sleepiness of the driver.

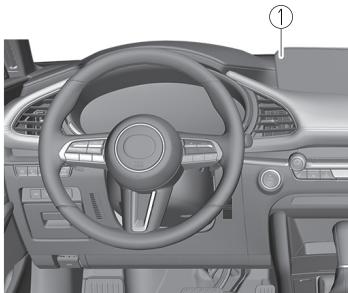

1. Driver monitoring camera

NOTE

• Driver Monitoring (DM) and the earlier collision warning may not operate normally under the following conditions.

- The driver monitoring camera is covered with something.*
- You are driving the vehicle while leaning on the steering wheel.*
- You are wearing glasses or sunglasses.*
- A cap or hat you are wearing partially blocks the driver monitoring camera's view of your eyes, you have long bangs partially covering your eyes, or a part of your face is invisible due to a face mask.*

i-ACTIVSENSE

- *The lighting conditions change significantly (such as backlight, light from the side, or direct light from the setting sun, and the headlights of on-coming vehicles).*
- *You are driving the vehicle with your face largely pointed to the side.*
- *You are moving around extensively.*
- *Your face or your eyes frequently turn in direction other than straight ahead (direction of travel).*
- *Your line of sight moves or directly after it has moved.*
- *There is a large difference between your line of sight and the direction your face is pointed.*
- *You are driving the vehicle with your head largely tilted to one side.*

Cruise Control*

▼ Cruise Control

With cruise control, you can set and automatically maintain any speed of more than about 30 km/h (19 mph).


⚠ WARNING

Do not use the cruise control under the following conditions:

Using the cruise control under the following conditions is dangerous and could result in loss of vehicle control.

- Hilly terrain
- Steep inclines
- Heavy or unsteady traffic
- Slippery or winding roads
- Similar restrictions that require inconsistent speed

▼ Cruise Control Switch

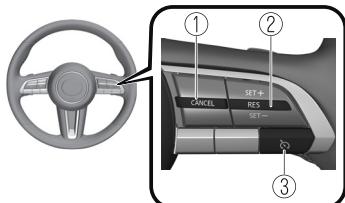

1. CANCEL switch
2. RES switch
3. Cruise switch

NOTE

If your Mazda has the following steering switch, your Mazda is equipped with the **Mazda Radar Cruise Control (MRCC)** system, the **Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)** system.



Refer to **Mazda Radar Cruise Control (MRCC)** on page 4-140.

Refer to **Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)** on page 4-149.

If the **Mazda Radar Cruise Control (MRCC)** or **Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)** is set to inoperable using the personalisation feature, the system switches to the cruise control function. In this case, the MRCC functions as the cruise switch. In addition, this personalisation feature setting is initialized by switching the ignition OFF, and it turns back on when the ignition is switched ON the next time.

▼ Cruise Standby Indication (White)/ Cruise Set Indication (Green)

Cruise standby Indication (White)

The indication turns on (white) when the cruise control system is activated.



Cruise Control

Cruise Set Indication (Green)

The indication turns on (green) when a cruising speed has been set.



▼ Activation/Deactivation

! WARNING

Always turn off the cruise control system when it is not in use:

Leaving the cruise control system in an activation-ready state while the cruise control is not in use is dangerous as the cruise control could unexpectedly activate if the activation button is accidentally pressed, and result in loss of vehicle control and an accident.

NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the cruise control system operable, the system will be operable when the ignition is switched ON the next time.

Activation

To activate the system, press the cruise switch. The cruise standby indication (white) turns on.

Deactivation

To deactivate the system, press the cruise switch again.

The cruise standby indication (white) turns off.

▼ To Set Speed

1. Activate the cruise control system by pressing the cruise switch. The cruise standby indication (white) turns on.
2. Accelerate to the desired speed, which must be more than 25 km/h (16 mph).
3. Adjust the system to the desired vehicle speed using the accelerator pedal. Press the RES switch up (SET+) or down (SET-) to start cruise control. The cruise control indication (green) in the instrument cluster turns on at the same time. Quickly release the switch when the cruise control indication (green) turns on.


NOTE

- If the RES switch is operated up (SET+) or down (SET-) while the vehicle speed is between 25 km/h (16 mph) and 30 km/h (19 mph), the set speed is set to 30 km/h (19 mph).
- The cruise control speed setting cannot be performed under the following conditions:
 - Any of the doors is opened.
 - The driver's seat belt is unfastened.
 - The brake pedal is depressed.
 - The parking brake is applied.
 - (Automatic transmission)
The selector lever is in the P or N position.
 - (Manual transmission)
The shift lever is in the neutral position.
- On a steep grade, the vehicle may momentarily slow down while ascending or speed up while descending.


- The cruise control will cancel if the vehicle speed decreases below 20 km/h (12 mph) when the cruise control is activated, such as when climbing a steep grade.

The vehicle speed preset using the cruise control is displayed in the instrument cluster and the active driving display (vehicles with active driving display).


Instrument cluster (Basic display)

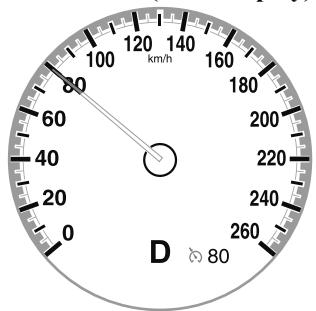

Instrument cluster (i-ACTIVSENSE display)

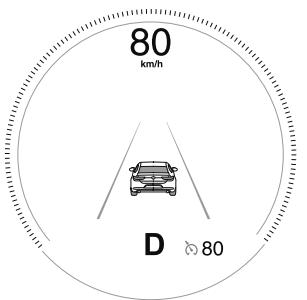

Active driving display

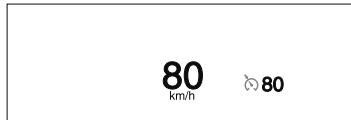

▼ Changing the Set Vehicle Speed

Follow either of these procedures.

To increase/decrease speed using cruise control switch

When the RES switch is pressed up (SET+), the vehicle accelerates and when the RES switch is pressed down (SET-), it decelerates.

- Press and release immediately: 1 km/h (1 mph)
- Press and hold: 10 km/h (5 mph)

NOTE

Even after releasing the RES switch, the cruise control accelerates/decelerates continuously until the set speed displayed in the instrument cluster and on the active driving display is reached. If you want to stop accelerating/decelerating, change the set speed or cancel the system (such as by depressing the brake pedal).

To increase speed using accelerator pedal

Depress the accelerator pedal and press the RES switch up (SET+) or down (SET-) at the desired speed. If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

NOTE

Accelerate if you want to speed up temporarily when the cruise control is on. Greater speed will not interfere with or change the set speed. Take your foot off the accelerator to return to the set speed.

Cruise Control

▼ To Resume Cruising Speed at More Than 30 km/h (19 mph)

If the cruise control system is temporarily cancelled (such as by applying the brake pedal) and the system is still activated, the most recent set speed will automatically resume when the RES switch is pressed. If vehicle speed is below 30 km/h (19 mph), increase the vehicle speed up to 30 km/h (19 mph) or more and press the RES switch.

▼ To Temporarily Cancel

To temporarily cancel the system, use one of these methods:

- Slightly depress the brake pedal.
- Press the CANCEL switch.
- **(Manual transmission)**
Depress the clutch pedal.

If the RES switch is pressed when the vehicle speed is 30 km/h (19 mph) or higher, the system reverts to the previously set speed.

NOTE

- *If any of the following conditions occur, the cruise control system is temporarily cancelled.*
 - Even when the brake pedal is slightly depressed.
 - The DSC is operating.
 - There is a problem in the system.
 - Any of the doors is opened.
 - The driver's seat belt is unfastened.
 - The parking brake is applied.
- **(Automatic transmission)**
The selector lever is in the P or N position.

· **(Manual transmission)**

The shift lever is in the neutral position.

- *When the cruise control system is temporarily cancelled by even one of the applicable cancel conditions, the speed cannot be re-set.*

· **(Automatic transmission)**

The cruise control cannot be cancelled while driving in manual mode (selector lever shifted from D to M position).

Therefore, engine braking will not be applied even if the transmission is shifted down to a lower gear. If deceleration is required, lower the set speed or depress the brake pedal.

▼ To Deactivate

Press the cruise switch again.

Tyre Pressure Monitoring System (TPMS)

Tyre Pressure Monitoring System (TPMS)*

▼ Tyre Pressure Monitoring System (TPMS)

The TPMS monitors the air pressure of each tyre and if it decreases below the specified value, the system notifies the driver by turning on the TPMS warning light in the instrument cluster and indicating a message on the multi-information display.

For the TPMS, the air pressure data sent from the tyre pressure sensors installed on each wheel via radio signal is received by the receiver unit in the vehicle to monitor the tyre pressures.



1. Tyre pressure sensors

In addition, the current tyre pressures can be checked using the centre display. Refer to the Vehicle Status Monitor section in the MZD Connect Owner's Manual.

NOTE

- When the ambient temperature is low, the tyre temperatures also decrease. If the tyre temperatures decrease, the air pressure in the tyres will also decrease which could turn on the TPMS warning light.*

Before driving, visually inspect the tyres for abnormalities. Additionally, inspect the tyre pressures monthly. A digital type air pressure gauge is recommended for inspecting the tyre pressures.

The TPMS is not a substitute for your own periodic inspection of the tyres. Always inspect the tyres yourself periodically.

CAUTION

➤ Each tyre, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tyre inflation pressure label. (If your vehicle has tyres of a different size than the size indicated on the vehicle placard or tyre inflation pressure label, you should determine the proper tyre inflation pressure for those tyres.) As an added safety feature, your vehicle has been equipped with a tyre pressure monitoring system (TPMS) that illuminates a low tyre pressure telltale when one or more of your tyres is significantly under-inflated. Accordingly, when the low tyre pressure telltale illuminates, you should stop and check your tyres as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability.

Tyre Pressure Monitoring System (TPMS)

Please note that the TPMS is not a substitute for proper tyre maintenance, and it is the driver's responsibility to maintain correct tyre pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tyre pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tyre pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tyre pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tyres or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tyres or wheels on your vehicle to ensure that the replacement or alternate tyres and wheels allow the TPMS to continue to function properly.

➤ *To avoid false readings, the system samples for a little while before indicating a problem. As a result it will not instantaneously register a rapid tyre deflation or blow out.*

▼ If there is a problem with the Tyre Pressure Monitoring System (TPMS)

If the TPMS warning light flashes, there may be a problem with the system.

Consult an Authorised Mazda Dealer to have the system inspected.

Refer to Tyre Pressure Monitoring System (TPMS) Warning Indication/Warning Light (Flashing) on page 7-66.

In the following cases, the system cannot recognise the tyre pressures correctly and the TPMS warning light may flash.

- There is equipment or a device nearby emitting radio signals the same as a tyre pressure sensor.
- A metallic object such as a non-genuine electronic device is installed near the centre of the instrument panel (obstructs the radio signals from the tyre pressure sensors to the receiver).
- A device such as one of the following is used in the cabin.
 - Electronic devices such as a computer.
 - Converter devices such as a DC-AC converter.
- There is a large accumulation of snow or ice around the vehicle tyres.
- The battery in a tyre pressure sensor is dead.
- A wheel not equipped with a tyre pressure sensor is used.
- Tyres employing steel in the sidewall of the tyre are installed.
- Tyre chains are used.

Tyre Pressure Monitoring System (TPMS)

▼ When a tyre pressure decreases

If the TPMS warning light turns on, a tyre pressure may be low. Inspect the tyre pressures and adjust them to the correct inflation pressure.

Refer to Tyre Pressure Monitoring System (TPMS) Warning Indication/Warning Light (Turns on) on page 7-69.

▼ Tyres and Wheels

CAUTION

When inspecting/adjusting the tyre pressures, do not apply excessive force to the air valve of the tyre pressure sensor. Otherwise, the tyre pressure sensor could be damaged.

When changing tyres and wheels

When changing the tyres or wheels (such as installing winter tyres), it will be necessary to register the ID signal code of the tyre pressure sensor to the TPMS.

Have an Authorised Mazda Dealer do the registration or register the ID signal codes of the tyre pressure sensors using the following procedure.

NOTE

The tyre pressure sensors on each wheel have a unique ID signal code. For the TPMS to operate correctly, the ID signal codes of the tyre pressure sensors need to be registered to the system.

1. Wait more than 19 minutes after changing a tyre or wheel.
2. After more than 19 minutes have passed, drive the vehicle at a speed of about 25 km/h (16 mph) or faster for 3 minutes or longer. While driving, the ID signal codes of the tyre pressure sensors are automatically registered.

NOTE

If you drive the vehicle within 15 minutes of changing a tyre or wheel, the TPMS warning light will flash because the ID signal codes for the tyre pressure sensors were not registered. In this case, stop the vehicle and register the ID signal codes of the tyre pressure sensors following the procedure.

Tyre Pressure Monitoring System (TPMS)

When replacing tyres and wheels

CAUTION

- When replacing the tyres and wheels, consult an Authorised Mazda Dealer. Otherwise, the tyre pressure sensors could be damaged when replacing them.
- Do not install non-genuine wheels. If wheels other than genuine ones are installed, it may not be possible to install the tyre pressure sensors.

When replacing a tyre or wheel, always install the tyre pressure sensor. The following combinations of tyres, wheels, or tyres and wheels are possible.

- The tyre pressure sensor from the old wheel is removed and it is installed to the new wheel.
- Only a tyre is replaced without replacing the tyre pressure sensor and wheel.
- A new tyre pressure sensor is installed to a new wheel.

NOTE

When installing a new tyre pressure sensor, the ID signal code for the tyre pressure sensor needs to be registered. For details on purchasing a tyre pressure sensor and registering the ID signal of the tyre pressure sensor, consult an Authorised Mazda Dealer.

Petrol Particulate Filter (SKYACTIV-X 2.0)

▼ Petrol Particulate Filter

The petrol particulate filter collects and removes most of the particulate matter (PM) in the exhaust gas of a petrol engine. PM collected by the petrol particulate filter is cleared during normal driving, however, PM may not be removed and the petrol particulate filter warning indication/warning light may illuminate under the following conditions:

- If the vehicle is repeatedly driven for a short period of time (5 minute or less) or driven while the engine is cold.

Refer to Petrol Particulate Filter Warning Indication/Warning Light on page 7-61.

Diesel Particulate Filter

Diesel Particulate Filter (SKYACTIV-D 1.8)

▼ Diesel Particulate Filter

The diesel particulate filter collects and removes most of the particulate matter (PM) in the exhaust gas of a diesel engine. PM collected by the diesel particulate filter is cleared during normal driving, however, PM may not be removed and the diesel particulate filter warning indication/warning light may illuminate under the following conditions:

- If the vehicle is driven at 15 km/h (9 mph) or less continuously.
- If the vehicle is repeatedly driven for a short period of time (10 minute or less) or driven while the engine is cold.
- If the vehicle is idled for a long time.

Refer to Diesel Particulate Filter on page 7-62.

Rear View Monitor*

▼ Rear View Monitor

The rear view monitor provides visual images of the rear of the vehicle when reversing.

WARNING

Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes:

Reversing the vehicle by only looking at the screen is dangerous as it may cause an accident or a collision with an object. The rear view monitor is only a visual assist device when reversing the vehicle. The images on the screen may be different from the actual conditions.

CAUTION

- Do not use the rear view monitor under the following conditions: Using the rear view monitor under the following conditions is dangerous and could result in injury or vehicle damage or both.
 - Icy or snow-covered roads.
 - Tyre chains or a temporary spare tyre is installed.
 - The vehicle is on a road incline.

➤ When the display is cold, images may course across the monitor or the screen and may be dimmer than usual, which could cause difficulty in confirming the surrounding conditions of the vehicle. Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes.

- Do not apply excessive force to the camera. The camera position and angle may deviate.
- Do not disassemble, modify, or remove it as it may no longer be waterproof.
- The camera cover is made of plastic. Do not apply degreasing agents, organic solvents, wax, or glass coating agents to the camera cover. If any are spilled on the cover, wipe off with a soft cloth immediately.
- Do not rub the camera cover forcefully with an abrasive or hard brush. The camera cover or lens may be scratched which might affect the images.

NOTE

- If water, snow, or mud is stuck on the camera lens, wipe it off using a soft cloth. If it cannot be wiped off, use a mild detergent.
- If the camera temperature changes rapidly (Hot to cold, cold to hot), the rear view monitor may not operate correctly.
- When replacing the tyres, consult an expert repairer, we recommend an Authorised Mazda Repairer. Replacing the tyres could result in deviation of the guide lines which appear on the display.

Rear View Monitor

- If the vehicle's front, side, or rear has been involved in a collision, the alignment of the rear view parking camera (location, installation angle) may have deviated. Always consult an expert repairer, we recommend an Authorised Mazda Repairer to have the vehicle inspected.
- If "No camera signal." is indicated in the display, there could be a problem with the camera. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.
- **(Predicted vehicle path assist lines display type)**
If force is applied to the steering wheel, the guide lines may not display. Loosen your grip on the steering wheel to allow the guide lines to display.

▼ Rear View Parking Camera Location

Saloon



1. Rear view parking camera

Hatchback



1. Rear view parking camera

▼ Switching to the Rear View Monitor Display

Shift the shift lever (manual transmission) or the selector lever (automatic transmission) to reverse (R) position with the ignition switched ON to switch the display to the rear view monitor display.


NOTE

When the shift lever (manual transmission) or the selector lever (automatic transmission) is shifted from reverse (R) position to another shift lever (manual transmission) or the selector lever (automatic transmission) position, the screen returns to the previous display.

Rear View Monitor

▼ Displayable Range on the Screen

The images on the screen may be different from the actual conditions.

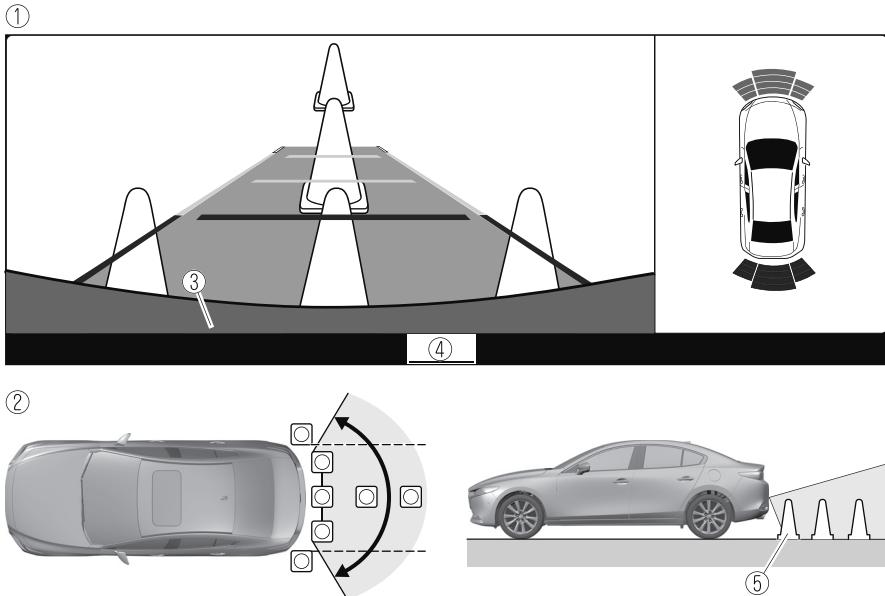

1. (Screen display)
2. (Actual view)
3. Bumper
4. "Check surroundings for safety." message is displayed
5. Object

NOTE

- The displayable range varies depending on the vehicle and road conditions.
- If the camera lens is touched or there is any dirt on it, it could affect the screen image. Wipe the lens using a soft cloth.
- The displayable range is limited. Objects under the bumper or around the bumper ends cannot be displayed.
- The distance appearing in the displayed image is different from the actual distance because the rear view parking camera is equipped with a specific lens.
- Images displayed on the monitor from the rear view parking camera are reversed images (mirror images).
- Some optionally installed vehicle accessories may be picked up by the camera. Do not install any optional parts that can interfere with the camera view, such as illuminating parts or parts made of reflective material.


- It may be difficult to see the display under the following conditions, however, it does not indicate a malfunction.
 - In darkened areas.
 - When the temperature around the lens is high/low.
 - When the camera is wet such as on a rainy day or during periods of high humidity.
 - When foreign material such as mud is stuck around the camera.
 - When the camera lens reflects sunlight or headlight beams.
 - The surroundings are illuminated by vehicle lights, fluorescent lights, or LED lights (Display may flicker).
 - Extremely small dark or white dots appear on the screen (dots may flicker).
- Image display may be delayed if the temperature around the camera is low.

▼ Viewing the Display

Predicted vehicle path assist lines display type

The projected path guidance mode displays the predicted path of the vehicle after you turn the steering wheel.

Use this mode for parking your vehicle in a parking space or garage.

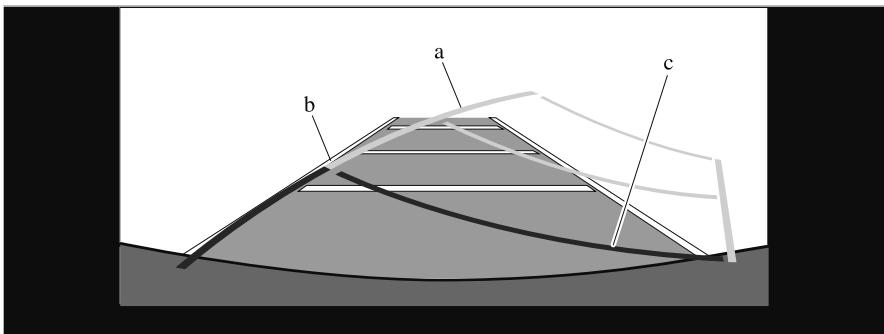

a) Projected vehicle path (yellow)

These lines are displayed as a reference for the projected path of the vehicle.

The lines displaying the projected vehicle path change after you turn the steering wheel.

b) Extended vehicle width lines (blue)

These lines indicate the vehicle's extended width.

These lines are not displayed when the vehicle's wheels are in the straight-ahead position.

c) Distance guide lines

These lines indicate the approximate distance to a point measured from the vehicle's rear (from the end of the bumper).

The blue line indicates the point about 50 cm (19 in) from the rear bumper.

The red and yellow lines, which change position after you turn the steering wheel, indicate the points about 50 cm (19 in) for the red line and 100 cm (39.3 in) for the yellow lines from the rear bumper (at the centre point of each of the lines).

Rear View Monitor

A degree of error occurs when the wheels are not in the straight-ahead position.

In the above illustration, the right side of the vehicle is in a position closer to the actual distance displayed by the distance guide lines (red: about 50 cm (19 in) point, yellow: about 100 cm (39.3 in) point behind the rear bumper), whereas the left side is in a position farther away.

⚠ CAUTION


The indicated position of the guide lines on the display changes depending on the vehicle conditions (such as the number of occupants/cargo load) and the road conditions (such as a steep gradient to the rear of the vehicle).

Always check the area to the vehicle's rear and the surrounding area directly with your eyes while backing up.

Fixed assist lines display type

Guide lines which indicate the width of the vehicle (yellow) are displayed on the screen as a reference to the approximate width of the vehicle in comparison to the width of the parking space you are about to back into.

Use this display view for parking your vehicle in a parking space or garage.

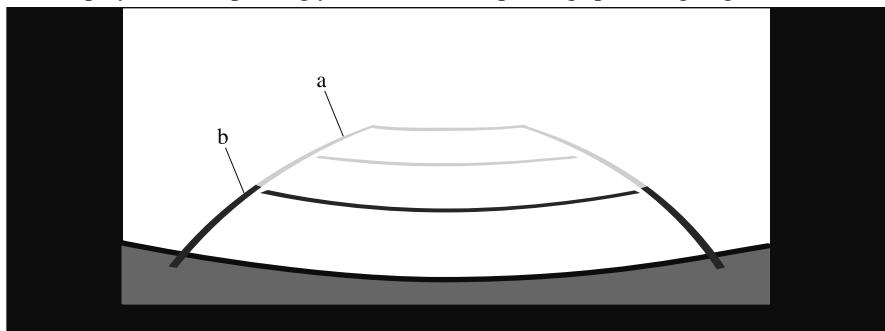

a) Vehicle width guide lines (yellow)

Guide lines serve as a reference to the approximate width of the vehicle.

b) Distance guide lines

These guide lines indicate the approximate distance to a point measured from the vehicle's rear (from the end of the bumper).

The red and yellow lines indicate the points about 50 cm (19 in) for the red line and 100 cm (39.3 in) for the yellow lines from the rear bumper (at the centre point of each of the lines).



CAUTION

The guide lines on the screen are fixed lines. They are not synced to the driver's turning of the steering wheel. Always be careful and check the area to the vehicle's rear and the surrounding area directly with your eyes while backing up.

▼ Rear View Monitor Operation

The operation of the rear view monitor when reversing the vehicle varies depending on the traffic, road, and vehicle conditions. The amount of steering and the timing also varies depending on conditions, so confirm the surrounding conditions directly with your eyes and steer the vehicle in accordance with the conditions.

Be well aware of the above cautions prior to using the rear view monitor.

Predicted vehicle path assist lines display type


NOTE

The following shows an example of vehicle parking in which the steering wheel is turned to the right when backing up the vehicle. The operation is reversed when backing up the vehicle from the opposite direction.


1. Shift the shift lever (manual transmission) or the selector lever (automatic transmission) to reverse (R) position to switch the display to the rear view monitor display.

Rear View Monitor

2. Before backing the vehicle into the parking space, turn the steering wheel while referring to the projected vehicle path display so that the vehicle enters the centre of the parking space.


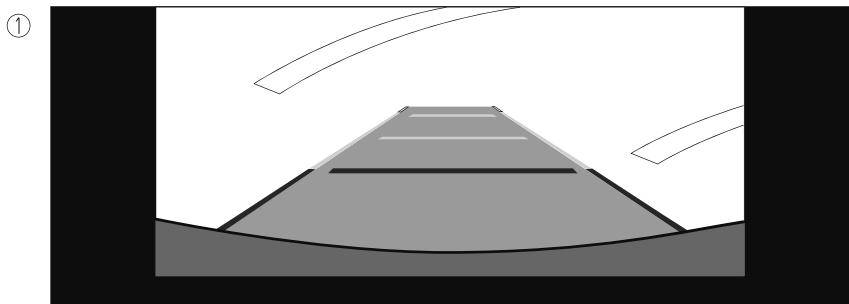


②

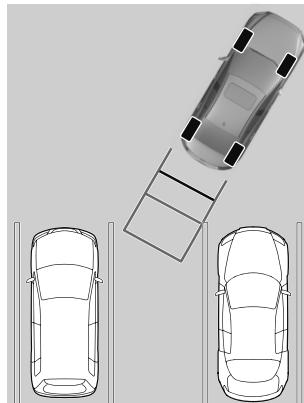

1. (Display condition)
2. (Vehicle condition)


3. After your vehicle begins entering the parking space, continue backing up slowly so that the distance between the vehicle width lines and the sides of the parking space on the left and right are roughly equal.

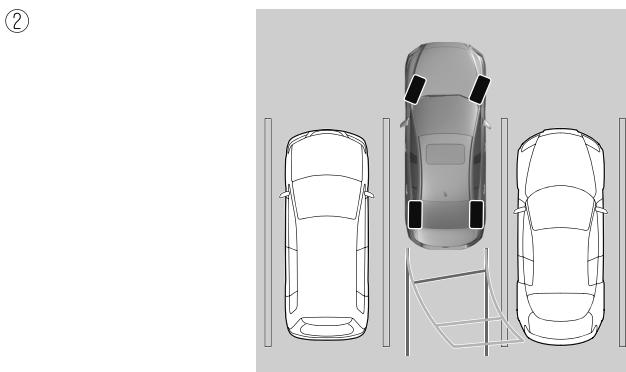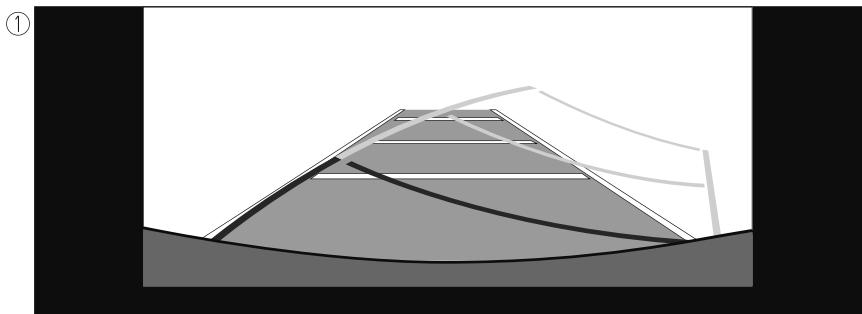


1. (Display condition)
2. (Vehicle condition)

Rear View Monitor

4. Continue to adjust the steering wheel until the vehicle width guide lines are parallel to the left and right sides of the parking space.
5. Once they are parallel, straighten the wheels and back your vehicle slowly into the parking space. Continue checking the vehicle's surroundings and then stop the vehicle in the best possible position. (If the parking space has division lines, check whether the vehicle width guide lines are parallel to them.)

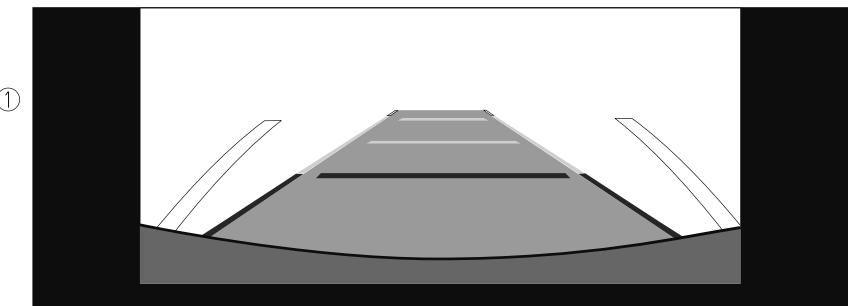

②

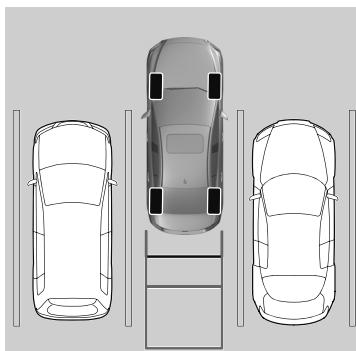


1. (Display condition)
 2. (Vehicle condition)
6. When the shift lever (manual transmission) or the selector lever (automatic transmission) is shifted from reverse (R) position to another shift lever (manual transmission) or the selector lever (automatic transmission) position, the screen returns to the previous display.

NOTE

Because there may be a difference between the displayed image, such as indicated below, and the actual conditions when parking, always verify the safety at the rear of the vehicle and the surrounding area directly with your eyes.

- In the image of the parking space (or garage) displayed on the screen, the back end and distance guide lines may appear aligned in the monitor, but they may not actually be aligned on the ground.
- When parking in a space with a division line on only one side of the parking space, the division line and the vehicle width guide line appear aligned in the monitor, but they may not actually be aligned on the ground.

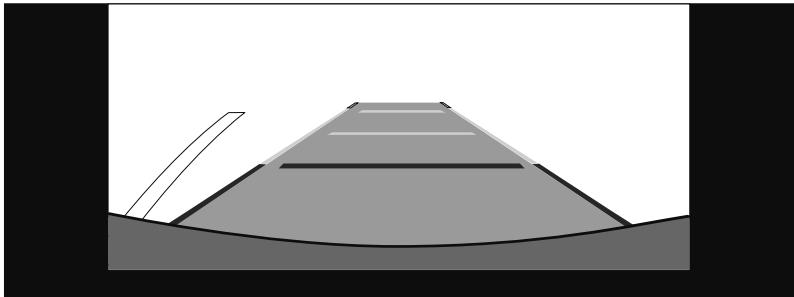

Fixed assist lines display type


NOTE

Images displayed on the monitor from the rear view parking camera are reversed images (mirror images).


1. Shift the shift lever (manual transmission) or the selector lever (automatic transmission) to reverse (R) position to switch the display to the rear view monitor display.

Rear View Monitor

2. Confirming the surrounding conditions, reverse the vehicle.

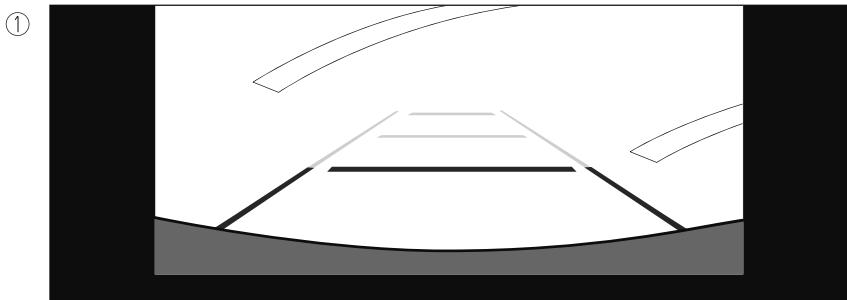


②

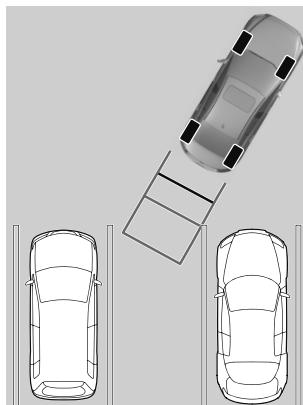


1. (Display condition)
2. (Vehicle condition)
3. After your vehicle begins entering the parking space, continue backing up slowly so that the distance between the vehicle width lines and the sides of the parking space on the left and right are roughly equal.
4. Continue to adjust the steering wheel until the vehicle width guide lines are parallel to the left and right sides of the parking space.

5. Once they are parallel, straighten the wheels and back your vehicle slowly into the parking space. Continue checking the vehicle's surroundings and then stop the vehicle in the best possible position. (If the parking space has division lines, check whether the vehicle width guide lines are parallel to them.)

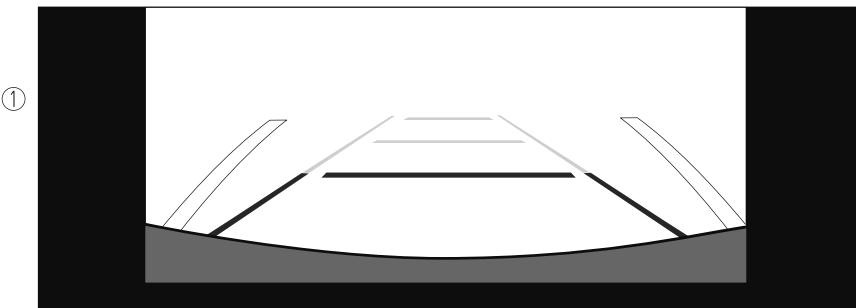

②

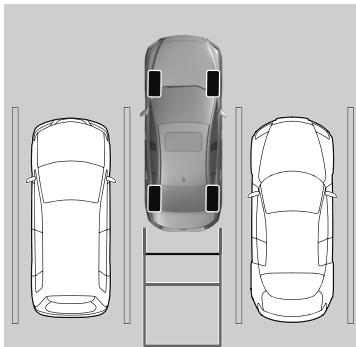

1. (Display condition)
 2. (Vehicle condition)
6. When the shift lever (manual transmission) or the selector lever (automatic transmission) is shifted from reverse (R) position to another shift lever (manual transmission) or the selector lever (automatic transmission) position, the screen returns to the previous display.


NOTE

Because there may be a difference between the displayed image, such as indicated below, and the actual conditions when parking, always verify the safety at the rear of the vehicle and the surrounding area directly with your eyes.

- In the image of the parking space (or garage) displayed on the screen, the back end and distance guide lines may appear aligned in the monitor, but they may not actually be aligned on the ground.*

Rear View Monitor

- When parking in a space with a division line on only one side of the parking space, the division line and the vehicle width guide line appear aligned in the monitor, but they may not actually be aligned on the ground.

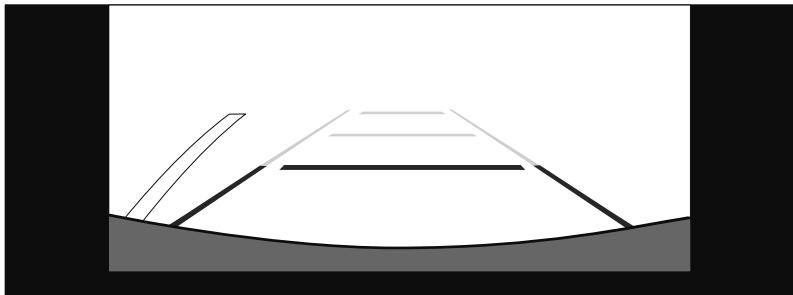


▼ Variance Between Actual Road Conditions and Displayed Image

Some variance occurs between the actual road and the displayed road. Such variance in distance perspective could lead to an accident. Note the following conditions that may cause a variance in distance perspective.

When the vehicle is tilted due to the weight of passengers and load


When the vehicle rear is lowered, the object displayed on the screen appears farther than the actual distance.

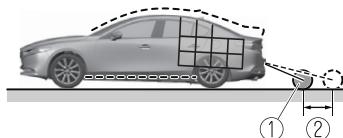

1. Object
2. Variance

When there is a steep grade behind the vehicle


When there is a steep upgrade (downgrade) behind the vehicle, the object displayed on the screen appears farther (downgrade: closer) than the actual distance.

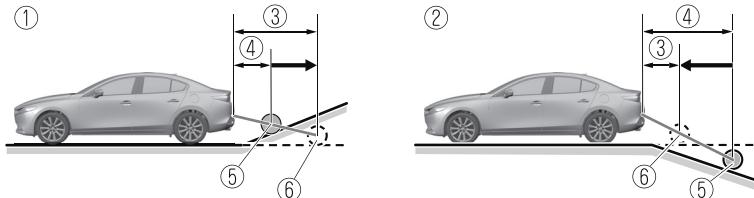

1. Appears farther than actual distance
2. Appears closer than actual distance
3. Distance between the vehicle and object displayed on the screen.
4. Actual distance between the vehicle and object.
5. Object at actual position
6. Object on screen

Three-dimensional object on vehicle rear

Because the distance guide lines are displayed based on a flat surface, the distance to the three-dimensional object displayed on the screen is different from the actual distance.

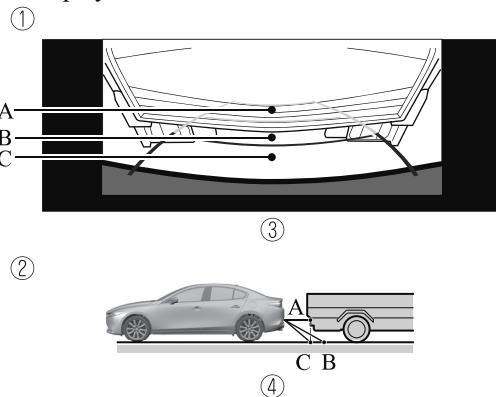

1. (Screen display)
2. (Actual condition)
3. Sensed distance on screen $A > B > C$
4. Actual distance $B > C = A$


Rear View Monitor

(Predicted vehicle path assist lines display type)

When reversing near a three-dimensional object

When reversing near an overhanging object, the vehicle may hit the object even if the anticipated course line does not contact the object on the screen. The position of the object displayed on the screen is different from the actual position because the anticipated course lines on the screen are displayed based on a horizontal road surface. When backing up near an overhanging object, confirm the rear and surrounding conditions directly with your eyes.

①

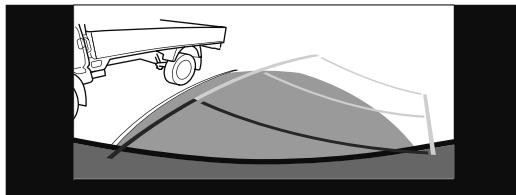

②






1. (Screen display)
2. (Actual view)

Parking Sensor System*

▼ Parking Sensor System

The parking sensors use ultrasonic sensors which detect obstructions around the vehicle when the vehicle is driven at low speeds, such as during garage or parallel parking, and a buzzer sound and detection indicator notify the driver of the approximate distance from the vehicle to the surrounding obstruction.

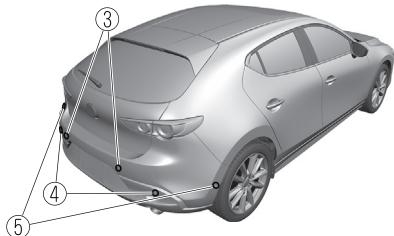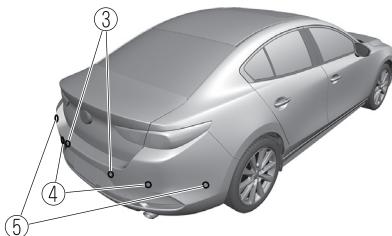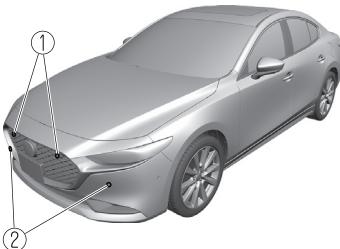

1. Front ultrasonic sensor*
2. Front corner ultrasonic sensor*
3. Rear ultrasonic sensor
4. Rear corner ultrasonic sensor
5. Rear side ultrasonic sensor*



WARNING

Do not rely completely on the parking sensor system and be sure to confirm the safety around your vehicle visually when driving:

This system can assist the driver in operating the vehicle in the forward and backward directions while parking. The detection ranges of the sensors are limited, therefore, driving the vehicle while relying only on the system may cause an accident. Always confirm the safety around your vehicle visually when driving.

Parking Sensor System

CAUTION

- Do not install any accessories within the detection ranges of the sensors. It may affect the system operation.
- Depending on the type of obstruction and the surrounding conditions, the detection range of a sensor may narrow, or the sensors may not be able to detect obstructions.


NOTE

- The system may not operate normally under the following conditions:
 - Mud, ice, or snow is adhering to the sensor area (Returns to normal operation when removed).
 - The sensor area is frozen (Returns to normal operation when the ice is thawed).
 - The sensor is covered by a hand.
 - The sensor is excessively shocked.
 - The vehicle is excessively tilted.
 - Under extremely hot or cold weather conditions.
 - The vehicle is driven on bumps, inclines, gravel, grating, or grass covered roads.
 - Anything which generates ultrasonic waves such as another vehicle's horn, the engine sound of a motorcycle, the air brake sound of a large-sized vehicle, or another vehicle's sensors approaches the vehicle.
 - The vehicle is driven in heavy rain or in road conditions causing water-splash.
 - A commercially-available wing pole or an aerial for a radio transmitter is installed to the vehicle.
 - The vehicle is moving towards a tall or square curbstone, or a steep grade.
 - An obstruction is too close to the sensor.
 - The vehicle is moving towards an uneven wall or stairs.
 - There are multiple obstructions.
 - The vehicle is driven in a place with low ceilings.
- Obstructions under the bumper cannot be detected. Obstructions which are lower than the sensor or thin may not be detected even though they were detected once.
- The following types of obstructions may not be detected:
 - Thin objects such as wire, rope or poles
 - Things which absorb sonic waves easily such as cotton or snow
 - Angular shaped objects
 - Very tall objects, and those which are wide at the top
 - Small, short objects
- Always have the system inspected at an expert repairer, we recommend an Authorised Mazda Repairer if any shock is applied to the bumpers, even in a minor accident. If the sensors are deviated, they cannot detect obstructions.

- The system may have a malfunction if the indicator light does not turn on even when the parking sensor switch is turned on. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.
- The system may have a malfunction if a message indicating a system malfunction is displayed. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.
- A message may be displayed even when the ambient temperature is extremely cold, or mud, ice, or snow adheres to the sensor area. Remove any foreign matter from the sensor area.
- When installing a trailer hitch, consult an expert repairer, we recommend an Authorised Mazda Repairer.
- If a Mazda genuine trailer hitch is used, the rear side of the parking sensor system is automatically turned off.

▼ Sensor Detection Range

The sensors detect obstructions within the following range.

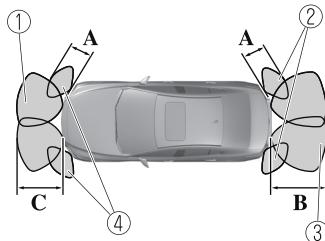

1. Front ultrasonic sensor detection range
 2. Rear corner/Rear side ultrasonic sensor detection range
 3. Rear ultrasonic sensor detection range
 4. Front corner ultrasonic sensor detection range
- A: About 55.0 cm (About 21.6 in)
B: About 150 cm (About 59.0 in)
C: About 100 cm (About 39.3 in)

Viewing distance display

Parking Sensor System


Display		Distance between vehicle and obstruction		
Without 360° view monitor		With 360° view monitor	Front ultrasonic sensor*/Front corner ultrasonic sensor*	Rear ultrasonic sensor/Rear corner ultrasonic sensor/Rear side ultrasonic sensor*
Without front ultrasonic sensor and front corner ultrasonic sensor	With front ultrasonic sensor and front corner ultrasonic sensor		Front ultrasonic sensor*/Front corner ultrasonic sensor*	Rear ultrasonic sensor/Rear corner ultrasonic sensor/Rear side ultrasonic sensor*
		Green	Front ultrasonic sensor: Approx. 100—60.0 cm (39.3—23.6 in)	Rear ultrasonic sensor: Approx. 150—60.0 cm (59.0—23.6 in)
		Yellow	Front ultrasonic sensor: Approx. 60.0—45.0 cm (23.6—17.7 in) Front corner ultrasonic sensor: Approx. 55.0—38.0 cm (21.6—14.9 in)	Rear ultrasonic sensor: Approx. 60.0—45.0 cm (23.6—17.7 in) Rear corner ultrasonic sensor/Rear side ultrasonic sensor: Approx. 55.0—38.0 cm (21.6—14.9 in)
		Amber	Front ultrasonic sensor: Approx. 45.0—35.0 cm (17.7—13.7 in) Front corner ultrasonic sensor: Approx. 38.0—25 cm (14.9—9.8 in)	Rear ultrasonic sensor: Approx. 45.0—35.0 cm (17.7—13.7 in) Rear corner ultrasonic sensor/Rear side ultrasonic sensor: Approx. 38.0—25 cm (14.9—9.8 in)
		Red	Front ultrasonic sensor: Within approx. 35.0 cm (13.7 in) Front corner ultrasonic sensor: Within approx. 25 cm (9.8 in)	Rear ultrasonic sensor: Within approx. 35.0 cm (13.7 in) Rear corner ultrasonic sensor/Rear side ultrasonic sensor: Within approx. 25 cm (9.8 in)

▼ Park Assist Sensor System Operation

When the parking sensor switch is pressed with the ignition switched ON, the indicator light turns on.

When the ignition is switched ON with the parking sensor activated, the indicator light turns on.

Press the switch again to stop the operation.

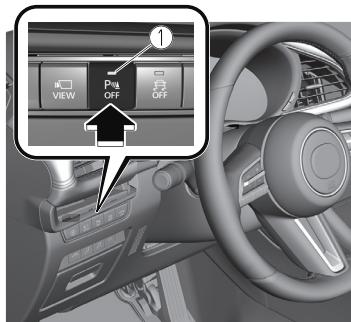

1. Indicator light

NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF while the parking sensor is activated, the system will be activated when the ignition is switched ON the next time.

Operation conditions

The parking sensor system can be used when all of the following conditions are met:

- The ignition is switched ON.
- The parking sensor switch is turned on.

NOTE

• (Automatic vehicle)

The detection indicator and buzzer of the front sensors/front corner sensors do not operate when the selector lever is in the P position.


The detection indicator and buzzer sound do not activate when the parking brake is applied.

▼ Obstruction Detection Indication

The position of a sensor which has detected an obstruction is indicated. The gauge illuminates in different areas depending on the distance to an obstruction detected by the sensor.

As the vehicle approaches closer to an obstruction, the zone in the gauge closer to the vehicle illuminates.

Without 360°view monitor

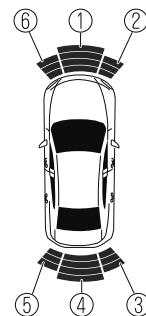


1. Front ultrasonic sensor gauge*
2. Right front corner ultrasonic sensor gauge*
3. Right rear corner ultrasonic sensor gauge/Right rear side ultrasonic sensor gauge*
4. Rear ultrasonic sensor gauge

*Some models.

Parking Sensor System

5. Left rear corner ultrasonic sensor gauge/Left rear side ultrasonic sensor gauge*
6. Left front corner ultrasonic sensor gauge*

 With 360°view monitor



1. Front ultrasonic sensor gauge
2. Right front corner ultrasonic sensor gauge
3. Right rear corner ultrasonic sensor gauge/Right rear side ultrasonic sensor gauge*
4. Rear ultrasonic sensor gauge
5. Left rear corner ultrasonic sensor gauge/Left rear side ultrasonic sensor gauge*
6. Left front corner ultrasonic sensor gauge

NOTE

The detection indicator can switch between display and non-display.

Refer to the Settings section in the MZD Connect Owner's Manual.

System problem notification

The indication displays if the system has a malfunction.

Without 360°view monitor



With 360°view monitor











Check the reason for the indication displaying on the centre display or multi-information display.

Refer to If a Warning Light Turns On or Flashes on page 7-56.

▼ Parking Sensor Warning Beep

Informs the driver of the approximate distance from the vehicle to the obstruction using warning beeps depending on the distance. If multiple obstructions are detected at the same time, warning beeps are activated according to the distance to the nearest obstruction. The warning beeps are activated as follows while the system is operating. However, the warning beeps are not activated while the seat belt reminder is operating.


Front ultrasonic sensor*, Rear ultrasonic sensor

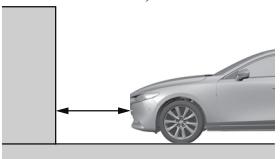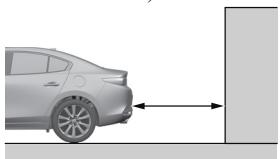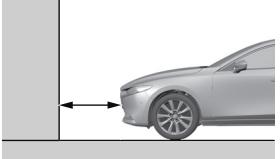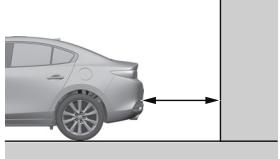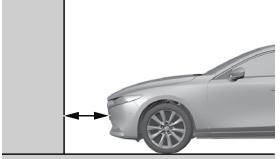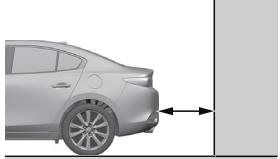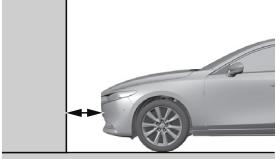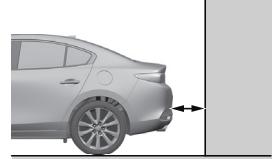Distance Detection area	Distance between vehicle and obstruction		Beeper sound*1
	Front ultrasonic sensor	Rear ultrasonic sensor	
Farthest distance	Approx. 100—60.0 cm (39.3—23.6 in) 	Approx. 150—60.0 cm (59.0—23.6 in) 	Slow intermittent sound
Far distance	Approx. 60.0—45.0 cm (23.6—17.7 in) 	Approx. 60.0—45.0 cm (23.6—17.7 in) 	Medium intermittent sound
Middle distance	Approx. 45.0—35.0 cm (17.7—13.7 in) 	Approx. 45.0—35.0 cm (17.7—13.7 in) 	Fast intermittent sound
Close distance	Within approx. 35.0 cm (13.7 in) 	Within approx. 35.0 cm (13.7 in) 	Continuous sound

Parking Sensor System

*1 The rate at which the intermittent sound beeps increases as the vehicle approaches the obstruction.

Front corner ultrasonic sensor*, Rear corner/Rear side* ultrasonic sensor

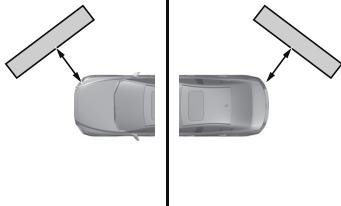Distance Detection area	Distance between vehicle and obstruction	Beeper sound*1
	Front corner ultrasonic sensor/Rear corner, Rear side ultrasonic sensor	
Far distance	Approx. 55.0—38.0 cm (21.6—14.9 in) 	Medium intermittent sound
Middle distance	Approx. 38.0—25 cm (14.9—9.8 in) 	Fast intermittent sound
Close distance	Within approx. 25 cm (9.8 in) 	Continuous sound

*1 The rate at which the intermittent sound beeps increases as the vehicle approaches the obstruction.

NOTE

- If an obstruction in the same area excluding the close area is detected continuously for 6 seconds or longer, only the warning beeps stop activating. (Detection is indicated) If the detection area changes to the close side, the warning beeps resumes. (If the detection area changes to the far side, the warning beeps remain off)
- The sound volume (each of front and rear) can be changed.
Refer to the Settings section in the *MZD Connect Owner's Manual*.

▼ When Warning Indicator/Beep is Activated

The system notifies the driver of an abnormality by activating the beep sound and the indicator light.

Indicator/Beep	How to check
A message indicating a system malfunction or sensor malfunction is displayed.	There may be a problem with the system. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.
A message indicating that the sensor is dirty is displayed.	Remove any foreign matter from the sensor area. If the system does not recover, have the vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.
A certain obstruction detection indication is continuously displayed.	Foreign matter may have gotten on the sensor area corresponding to the detection indicator. If the system does not recover, have the vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

MEMO

5

Interior Features

Use of various features for ride comfort, including air-conditioning system and audio system.

Air-Conditioning System.....	5-2	Interior Equipment.....	5-32
Operating Tips.....	5-2	Sunvisors.....	5-32
Vent Operation.....	5-3	Interior Lights.....	5-33
Manual Type.....	5-5	Accessory Sockets.....	5-36
Fully Automatic Type.....	5-9	Cup Holder.....	5-37
MZD Connect.....	5-14	Bottle Holder.....	5-38
What is MZD Connect ?.....	5-14	Assist Grips.....	5-38
MZD Connect Basic		Rear Coat Hooks.....	5-39
Operations.....	5-17	Storage Compartments.....	5-39
		Removable Ashtray*	5-42


Air-Conditioning System

Operating Tips

▼ Operating Tips

- Operate the air-conditioning system with the engine running.
- To prevent the battery from being discharged, do not leave the fan control switch on for a long period of time with the ignition switched ON when the engine is not running.
- **(With i-stop)**
The airflow amount may decrease slightly while the i-stop function is operating.
- Clear all obstructions such as leaves, snow and ice from the bonnet and the air inlet in the cowl grille to improve the system efficiency.
- Use the air-conditioning system to defog the windows and dehumidify the air.
- The recirculate mode should be used when driving through tunnels or while in a traffic jam, or when you would like to shut off outside air for quick cooling of the interior.
- Use the outside air position for ventilation or windscreen defrosting.
- If the vehicle has been parked in direct sunlight during hot weather, open the windows to let warm air escape, then run the air-conditioning system.
- Run the air conditioner about 10 minutes at least once a month to keep internal parts lubricated.
- Have the air conditioner checked before the weather gets hot. Lack of refrigerant may make the air conditioner less efficient.

The refrigerant specifications are indicated on a label attached to the inside of the engine compartment. If the wrong type of refrigerant is used, it could result in a serious malfunction of the air conditioner. Consult a professional, government certified repairer for the inspection or repair because a special device is required for the air conditioner maintenance. For details, consult an expert repairer, we recommend an Authorised Mazda Repairer.

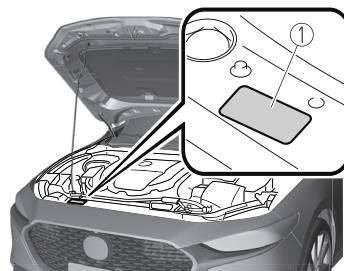

1. Label

Vent Operation

▼ Adjusting the Vents

Directing airflow


To adjust the direction of airflow, move the adjustment knob.

NOTE

- When using the air conditioner under humid ambient temperature conditions, the system may blow fog from the vents. This is not a sign of trouble but a result of humid air being suddenly cooled.
- The air vents can be fully opened and closed by operating the knob.

Driver's Side Vents


Air vent open/close

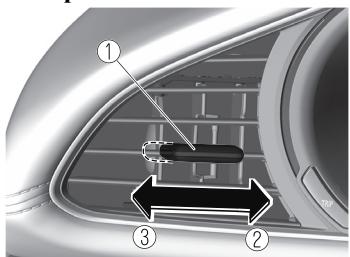

Right side is symmetry.

- Knob
- Open
- Close


Airflow direction adjustment

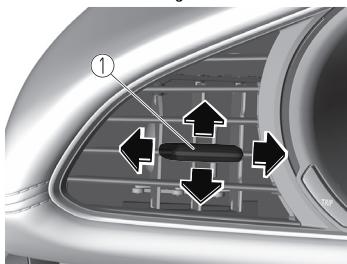

- Knob


Passenger's Side Vents

Air vent open/close

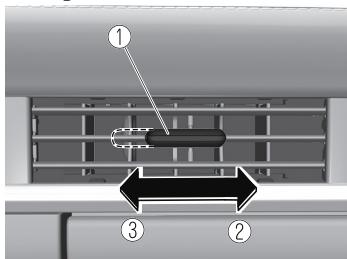

- Knob
- Open
- Close

Airflow direction adjustment

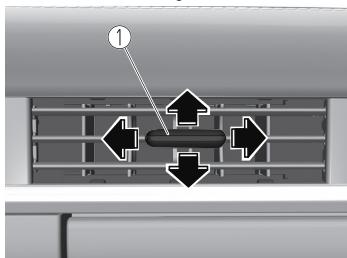


- Knob

Air-Conditioning System


Rear Vents*

Air vent open/close

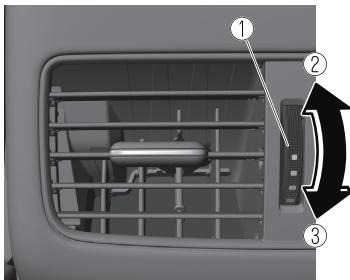

1. Dial
2. Open
3. Close


Airflow direction adjustment

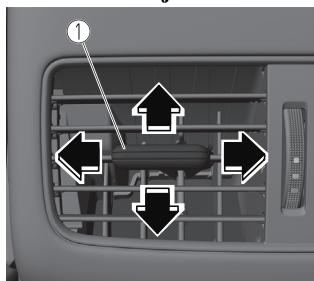

1. Knob


▼ Selecting the Airflow Mode

Instrument panel Vents

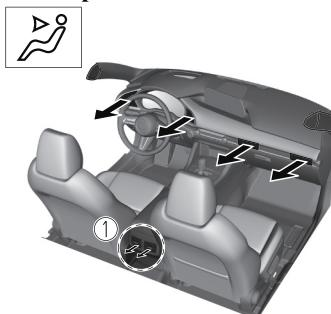


1. With rear vents

Defroster and Floor Vents

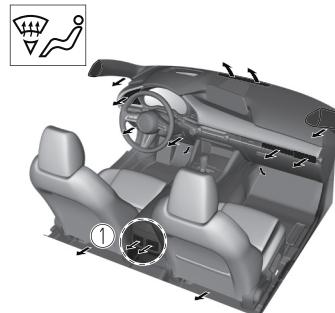

1. With rear vents


Instrument panel and Floor Vents

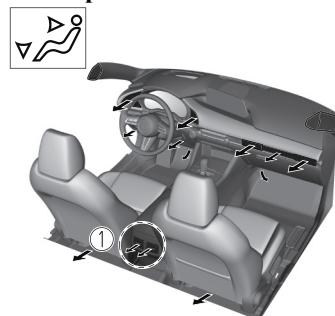


1. With rear vents

Air-Conditioning System

Defroster Vents

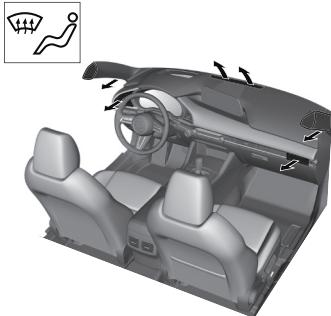

Floor Vents

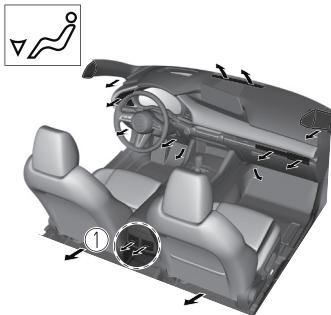


1. With rear vents

NOTE

The location airflow exits the air vents and the airflow amount may change depending on the open or close status of the air vents.

Manual Type

▼ Manual Type

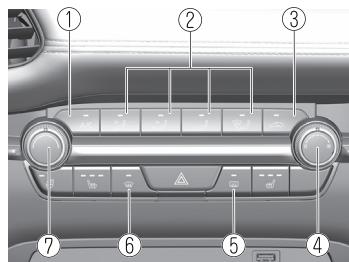

1. A/C switch
2. Mode selector switch
3. Air intake selector switch
4. Fan control dial
5. Rear window defogger switch
6. Windscreen defroster switch
7. Temperature control dial

▼ Control Switches

Temperature control dial

This dial controls temperature. Turn it clockwise for hot and anticlockwise for cold.

Fan control dial

This dial allows variable fan speeds. The fan has seven speeds.

Mode selector switches

The desired airflow mode can be selected (page 5-4).

Air-Conditioning System

A/C switch

Press the A/C switch to turn the air conditioner on. The indicator light on the switch will illuminate when the fan control dial is in any position except OFF.

Press the switch once again to turn the air conditioner off.

NOTE

The air conditioner may not function when the outside temperature approaches 0 °C (32 °F).

Air intake selector switch

This switch controls the source of air entering the vehicle.

Outside or recirculated air positions can be selected. Press the switch to select outside/recirculated air positions.

Recirculated air position (indicator light illuminated)

Outside air is shut off. Use this position when going through tunnels, driving in congested traffic (high engine exhaust areas) or when quick cooling is desired.

Outside air position (indicator light turned off)

Outside air is allowed to enter the cabin. Use this mode for ventilation or windscreens defrosting.



WARNING

Do not use the position (indicator light turns on) in cold or rainy weather:

Using the position (indicator light turns on) in cold or rainy weather is dangerous as it will cause the windows to fog up. Your vision will be hampered, which could lead to a serious accident.

Windscreen defroster switch

Press the switch to defrost the windscreen and front door windows.

Refer to Windscreen Defrosting and Defogging on page 5-8.

Rear window defogger switch

Press the rear window defogger switch to defrost the rear window.

Refer to Rear Window Defogger on page 4-72.

▼ Heating

1. Press the switch.
2. Set the air intake selector to the outside air position (indicator light turns off).
3. Set the temperature control dial to the hot position.
4. Set the fan control dial to the desired speed.
5. If dehumidified heating is desired, turn on the air conditioner.

NOTE

- If the windscreen fogs up easily, press the  switch.
- If cooler air is desired at face level, press the  switch and adjust the temperature control dial to maintain maximum comfort.
- The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).

▼ Cooling

1. Press the  switch.
2. Set the temperature control dial to the cold position.
3. Set the fan control dial to the desired speed.
4. Turn on the air conditioner by pressing the A/C switch.
5. After cooling begins, adjust the fan control dial and temperature control dial as needed to maintain maximum comfort.



CAUTION

If the air conditioner is used while driving up long hills or in heavy traffic, monitor the high engine coolant temperature warning indication to see if it is displayed (page 7-58).

The air conditioner may cause engine overheating. If the warning indication is displayed, turn the air conditioner off (page 7-49).

NOTE

- When maximum cooling is desired, set the temperature control dial to the extreme cold position and set the air intake selector to the recirculated air position, then turn the fan control dial fully clockwise.
- If warmer air is desired at floor level, press the  switch and adjust the temperature control dial to maintain maximum comfort.
- The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).

▼ Ventilation

1. Press the  switch.
2. Set the air intake selector to the outside air position (indicator light turns off).
3. Set the temperature control dial to the desired position.
4. Set the fan control dial to the desired speed.

Air-Conditioning System

▼ Windscreen Defrosting and Defogging

1. Press the  switch.
2. Set the temperature control dial to the desired position.
3. Set the fan control dial to the desired speed.
4. If dehumidified heating is desired, turn on the air conditioner.

WARNING

Do not defog the windscreen using the  switch with the temperature control set to the cold position:

Using the  switch with the temperature control set to the cold position is dangerous as it will cause the outside of the windscreen to fog up. Your vision will be hampered, which could lead to a serious accident. Set the temperature control to the hot or warm position when using the  switch.

NOTE

- Fogging on the windows clears up more easily while the air conditioner is on, but they will fog up more easily if the air conditioner is turned off.
- Be careful that the windows do not fog up when doing any of the following:
 - Switching to recirculate mode
 - Turning off the air conditioner
- For maximum defrosting, turn on the air conditioner; set the temperature control dial to the extreme hot position, and turn the fan control dial fully clockwise.
- If warm air is desired at the floor, press the  switch.

- With the  switch, the outside air position is automatically selected to defrost the windscreen. The air intake selector cannot be changed to the recirculated air position.

▼ Dehumidifying

Operate the air conditioner in cool or cold weather to help defog the windscreen and side windows.


1. Press the desired mode switch you want to set.
2. Set the air intake selector to the outside air position (indicator light turns off).
3. Set the temperature control dial to the desired position.
4. Set the fan control dial to the desired speed.
5. Turn on the air conditioner by pressing the A/C switch.

NOTE

One of the functions of the air conditioner is dehumidifying the air and, to use this function, the temperature does not have to be set to cold. Therefore, set the temperature control dial to the desired position (hot or cold) and turn on the air conditioner when you want to dehumidify the cabin air.

Fully Automatic Type**▼ Fully Automatic Type**

Air-conditioning system information is displayed on the display.

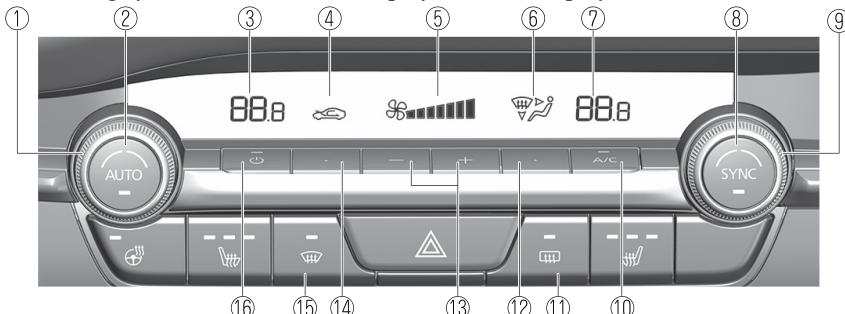

1. Driver temperature control dial
2. AUTO switch
3. Temperature setting display (driver's side)
4. Air intake display
5. Airflow display
6. Mode selector display
7. Temperature setting display (passenger's side)
8. SYNC (synchronized temperature) switch
9. Passenger temperature control dial
10. A/C switch
11. Rear window defogger switch
12. Mode selector switch
13. Fan control switch
14. Air intake selector switch
15. Windscreen defroster switch
16. Power switch

▼ Control Switches**AUTO switch**

By pressing the AUTO switch the following functions will be automatically controlled in accordance with the selected set temperature:

- Airflow temperature
- Amount of airflow

- Selection of airflow mode
- Outside/Recirculated air selection
- Air conditioner operation
- Seat warmer level selection*
- Heated steering wheel operation*

Air-Conditioning System

NOTE

AUTO switch indicator light

- When the AUTO switch indicator light is on, it indicates auto operation, and the system will function automatically.
- If any of the following switches are operated while in auto control, the AUTO switch indicator turns off.
 - Mode selector switch
 - Fan control switch
 - Windscreen defroster switch

The functions for switches other than those operated continue to operate in auto control.

Power switch (System On/Off)

The air-conditioning system turns on or off by pressing the power switch.

Temperature control dial

This dial controls temperature. Turn it clockwise for hot and anticlockwise for cold.

Turn the temperature control dial to adjust the temperature between 15 °C (60 °F) and 29 °C (84 °F).

- When the SYNC switch is on:
Turn the driver temperature control dial to control the temperature throughout the entire cabin.
- When the SYNC switch is off:
Turn the driver or front passenger temperature control dial to independently control the temperature on each side of the cabin.

NOTE

- The air-conditioning system changes to the individual operation mode (SYNC switch indicator light turns off) by turning the front passenger temperature control dial even when the SYNC switch is on, which allows individual control of the set temperature for the driver and front passenger.
- When you set the temperature to the lower or upper limit, “Lo” or “Hi” is displayed.
- The temperature units for the temperature setting display can be changed in conjunction with the temperature units for the outside temperature display.
Refer to Outside Temperature Display on page 4-30.

Fan control switch

The fan has 7 speeds. The selected speed will be displayed.

Mode selector switch

The desired airflow mode can be selected (page 5-4).

NOTE

- With the airflow mode set to the  position and the temperature control dial set at a medium temperature, heated air is directed to the feet and air at a comparably lower temperature will flow through the central, left and right vents.
- To set the air vent to , press the windscreens defroster switch.
- In the  position, the outside air position is automatically selected.

A/C switch

Pressing the A/C switch while the AUTO switch is turned on will turn off the air conditioner (cooling/dehumidifying functions).

The on/off of the air conditioner switches each time the A/C switch is pressed.

NOTE

- The air conditioner operates when the A/C switch is pressed while the air conditioner is turned off.*
- The air conditioner may not function when the outside temperature approaches 0 °C (32 °F).*

Air intake selector switch

Outside or recirculated air positions can be selected. Press the switch to select outside/recirculated air positions.

Recirculated air position (➡)

Outside air is shut off. Use this position when going through tunnels, driving in congested traffic (high engine exhaust areas) or when quick cooling is desired.

Outside air position (➡)

Outside air is allowed to enter the cabin. Use this mode for ventilation or windscreens defrosting.



WARNING

Do not recirculate the air in the cabin during cold or rainy weather:

Recirculating the air in the cabin during cold and rainy weather is dangerous as it will cause the windows to fog up. Your vision will be hampered, which could lead to a serious accident.

SYNC (Synchronized Temperature) switch

Use the SYNC switch to change the mode between the individual operation (driver and passenger) and interconnection (simultaneous) modes.

Interconnection mode (indicator light turns on)

The set temperature for the driver and front passenger is controlled simultaneously.

Individual operation mode (indicator light turns off)

The set temperature can be controlled individually for the driver and front passenger.

Windscreen defroster switch

Press the switch to defrost the windscreens and front door windows.

Refer to Windscreen Defrosting and Defogging on page 5-12.

Rear window defogger switch

Press the rear window defogger switch to defrost the rear window.

Refer to Rear Window Defogger on page 4-72.

Air-Conditioning System

▼ Operation of Automatic Air Conditioner

1. Press the AUTO switch. Selection of the airflow mode, air intake selector and amount of airflow will be automatically controlled.
2. Use the temperature control dial to select a desired temperature.

If you want to set the temperature on the front passenger's side separately from the driver's side, turn the front passenger temperature control dial to switch the mode automatically to the individual operation mode and set the temperature for the front passenger's side.

To turn off the system, press the power switch.

NOTE

- Set the control dial to the recommended temperature of 22 °C (72 °F), and then adjust it as desired.
- Setting the temperature to maximum hot or cold will not provide the desired temperature at a faster rate.
- When selecting heat, the system will restrict airflow until the engine has warmed to prevent cold air from blowing out of the vents.

▼ Windscreen Defrosting and Defogging

Press the windscreen defroster switch. In this position, the outside air position is automatically selected, and the air conditioner automatically turns on. The air conditioner will directly dehumidify the air to the front windscreen and side windows on page 5-4. Airflow amount will be increased.

WARNING

Set the temperature control to the hot or warm position when defogging (取暖) position:

Using the取暖 position with the temperature control set to the cold position is dangerous as it will cause the outside of the windscreen to fog up. Your vision will be hampered, which could lead to a serious accident.

NOTE

- Fogging on the windows clears up more easily while the air conditioner is on, but they will fog up more easily if the air conditioner is turned off.
- Be careful that the windows do not fog up when doing any of the following:
 - Switching to recirculate mode
 - Turning off the air conditioner
 - Use the temperature control dial to increase the air flow temperature and defog the windscreen more quickly.

▼ Sunlight/Temperature Sensor


The air-conditioning system measures inside and outside temperatures, humidity and sunlight using the sunlight/temperature sensor. It sets temperatures inside the cabin accordingly.



CAUTION


Do not obstruct both sensors, otherwise the air-conditioning system will not operate properly.

Sunlight sensor

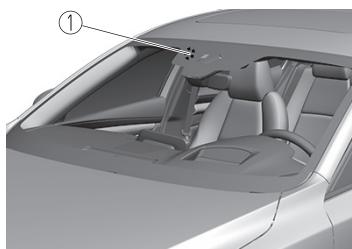

1. Sunlight sensor

Interior temperature sensor

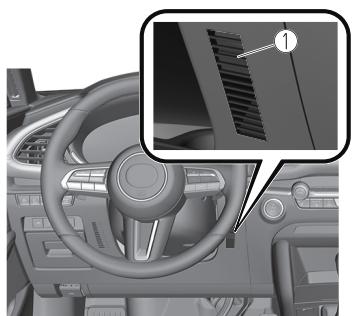


1. Interior temperature sensor

What is MZD Connect ?

▼ What is MZD Connect ?

This manual only indicates a part of the information for MZD Connect. For details, check the Web owner's manual at the Mazda site for each country and region.

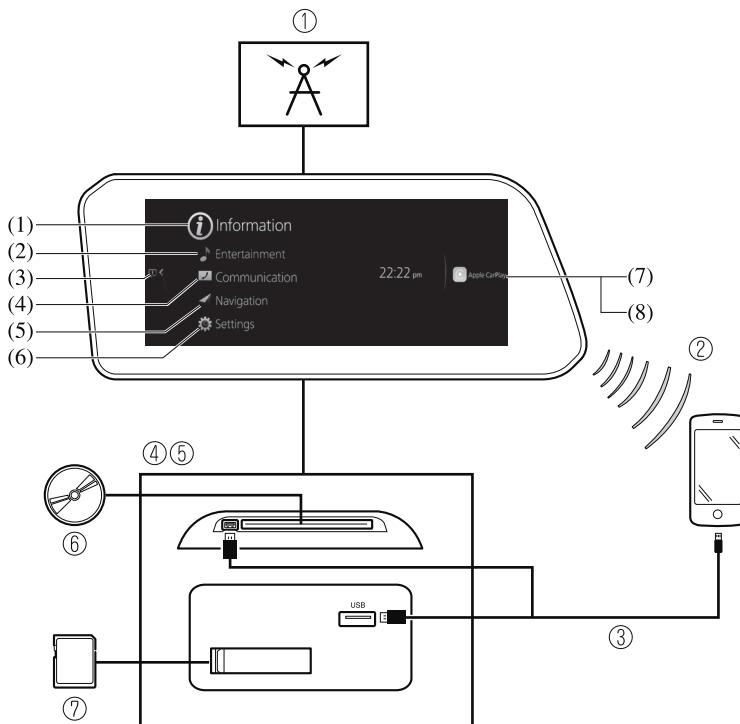

1. Radio
 2. Bluetooth® Audio/Hands-Free Call/SMS (Short Message Service)
 3. USB Audio/USB Video
 4. USB port^{*1}/SD card slot^{*2}
 5. CD/DVD player*
 6. CD/DVD
 7. SD card (Navigation system)*
- *1 The location of the USB slot differs depending on the vehicle model.
- *2 The SD card slot is for the navigation system only. For vehicles with the navigation system, the SD card (Mazda genuine) with stored map data is inserted into the SD card slot and used.

No.	Menu	Explanation
(1)	Information	Fuel Efficiency Monitor: Monitor fuel efficiency in real time and view fuel efficiency history. Vehicle Status Monitor: View important vehicle maintenance messages, information, and intervals. Owner's Manual*: Learn about Mazda features, safety information, maintenance, and more.
(2)	Entertainment	FM AM DAB* Bluetooth USB1 Audio/USB2 Audio USB1 Video/USB2 Video Disc*/CD*/DVD*
(3)	Notifications	Displays notifications from the vehicle.
(4)	Communication	By connecting your mobile device, such as a Smartphone, to MZD Connect via Bluetooth®, you can use the hands-free call and short message functions.
(5)	Navigation	The navigation system (vehicles with navigation system) can be used when the SD card for the navigation system is inserted. If the SD card for the navigation system is not inserted, the compass indicating the direction in which the vehicle is moving is displayed. The compass may not indicate the correct bearing when the vehicle is stopped or travelling at a slow speed. For the navigation system operation, refer to the navigation system manual.
(6)	Settings	You can change the settings for the MZD Connect screen, sound settings, and the vehicle functions. In-Vehicle Displays: Configures settings and content for all in-vehicle displays. Sound Settings: Configures the in-vehicle listening experience. Safety Settings: Configures safety and driver assistance features. Vehicle Settings: Configures vehicle convenience features. Connectivity Settings: Configures Bluetooth and other device connectivity settings. System Settings: Configures language, time, and other general settings.
(7)	Apple CarPlay	You can use Apple CarPlay by connecting an iPhone compatible with Apple CarPlay to the USB slot.
(8)	Android Auto	You can use Android Auto™ by connecting an Android™ Smartphone compatible with Android Auto™ to the USB slot.

WARNING

Always adjust the audio while the vehicle is stopped:

Do not adjust the audio remote control switch while driving the vehicle. Adjusting the audio while driving the vehicle is dangerous as it could distract your attention from the vehicle operation which could lead to a serious accident.

Even if the audio control switches are equipped on the steering wheel, learn to use the switches without looking down at them so that you can keep your maximum attention on the road while driving the vehicle.

Do not allow the connection plug cord to get tangled with the shift lever (manual transmission)/selector lever (automatic transmission):

Allowing the plug cord to become tangled with the shift lever (manual transmission)/selector lever (automatic transmission) is dangerous as it could interfere with driving, resulting in an accident.

Do not adjust the portable audio unit or a similar product while driving the vehicle:

Adjusting the portable audio unit or a similar product while driving the vehicle is dangerous as it could distract your attention from the vehicle operation which could lead to a serious accident. Always adjust the portable audio unit or a similar product while the vehicle is stopped.

CAUTION

For the purposes of safe driving, adjust the audio volume to a level that allows you to hear sounds outside of the vehicle including car horns and particularly emergency vehicle sirens.

NOTE

- Do not use MZD Connect for a long time with the engine stopped. Otherwise, the battery power could be depleted.*
- If a mobile phone or CB radio is used in or near the vehicle, it could cause noise to occur from the audio system. However, this does not indicate a problem.*

MZD Connect Basic Operations

▼ MZD Connect Basic Operations

NOTE

The explanation of functions described in this manual may differ from the actual operation, and the shapes of screens and buttons and the letters and characters displayed may also differ from the actual appearance.

Additionally, depending on future software updates, the content may successively change without notice.


▼ Commander Switch Operation

The commander switch can be used to switch to each function and to operate each function. Set the palm of your hand on the commander knob so that your fingers can touch each of the switches.

You can switch the screens without having to look down at your hand.

NOTE

For safety reasons, some operations are disabled while driving the vehicle.

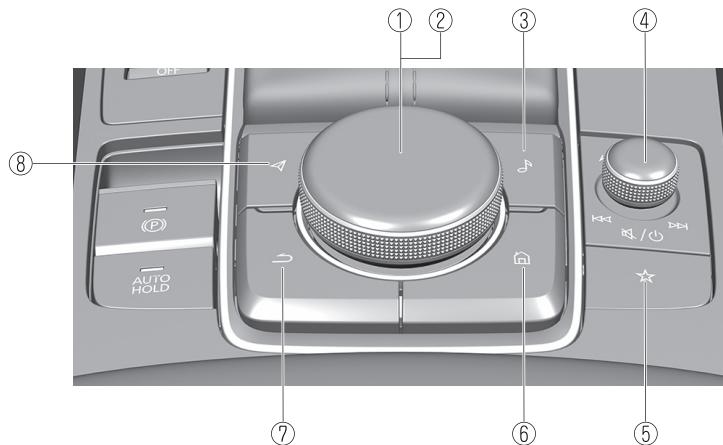

MZD Connect

The shape of the switches varies depending on the vehicle model.

No.	Item	Explanation
1		Commander knob (selection): Rotate or slide the commander knob to select the functions you want to use.
2		Commander knob (select): Press the commander knob to select the function you want to use.
3		Entertainment button: The audio source screen last used is displayed. (During Apple CarPlay or Android Auto™ music playback) Displays the Apple CarPlay or Android Auto™ playback screen.


No.	Item	Explanation
4		<p>Volume knob:</p> <p>Volume adjustment Adjust the volume by turning the volume knob. If you adjust the volume during a voice guidance, the volume of the voice guidance changes. If you adjust the volume while making a hands-free call, the conversation volume changes. Press the volume knob to mute the audio. Press the knob again to cancel.</p> <p>Power off Press and hold the volume knob to turn the MZD Connect power off.</p> <p>NOTE <i>If you press the volume knob to mute an audio source which can be paused, such as Apple CarPlay, USB audio, or Bluetooth® audio, while it is playing, the song playback pauses. Press the volume knob again to cancel the mute and the pause at the same time.</i></p> <p>Selecting a radio station (FM/AM radio) You can call up radio stations registered to your favourites by sliding the volume knob left/right while listening to FM/AM radio. The radio stations change each time you slide the volume knob. In addition, press and hold the volume knob until you hear a beep to start automatic station selection. It stops when a radio broadcast is tuned in.</p> <p>(DAB radio)* You can call up radio stations registered to your Favourites by sliding the volume knob left/right while listening to DAB radio. The radio stations change each time you slide the volume knob. In addition, the service switches to the next service when you continue sliding the knob to the right until you hear a beep, and it switches to the previous service when you continue sliding the knob to the left. If there is no next or previous service in the selected Ensemble, Ensemble switches.</p> <p>Cuing Music and video files can be cued by operating the button while audio or video is playing. Slide the volume knob to the right to cue to the beginning of the next song and slide it to the left to cue to the beginning of the previous song. (The order of the songs is in the order of the selected file list.)</p>
5		<p>Favourites button: Displays the favourites screen. Press and hold to register contacts, radio stations, or navigation points which are displayed on the screen at that time.</p>

MZD Connect

No.	Item	Explanation
6		<p>Home button: Displays the home screen.</p> <p>(While Apple CarPlay or Android Auto™ is displayed) Displays the Apple CarPlay or Android Auto™ home screen.</p> <p>(While Apple CarPlay or Android Auto™ is connected) Press and hold while the MZD Connect screen is displayed to switch the screen from MZD Connect to Apple CarPlay or MZD Connect to Android Auto™. In addition, press and hold while the Apple CarPlay or Android Auto™ screen is displayed to switch to the MZD Connect screen.</p>
7		<p>Back button: Returns to previous screen.</p>
8		<p>Map button: Displays the navigation screen (vehicles with navigation system). In order for the navigation system to function, the SD card for the navigation system is required. If the SD card for the navigation system is not inserted, the compass indicating the direction in which the vehicle is moving is displayed. For the navigation system operation, refer to the navigation system manual.</p> <p>(During Apple CarPlay or Android Auto™ route guidance) Displays the Apple CarPlay or Android Auto™ map screen.</p>

▼ Audio Remote Control Switch Operation

The audio remote control switch is on the left side of the steering wheel. You can operate the audio unit from the steering wheel.

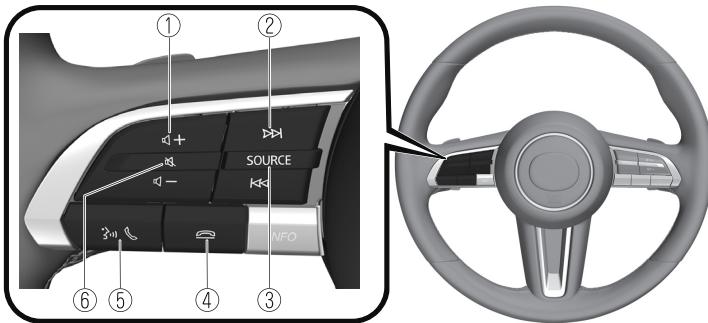

The shape of the switches differs depending on the vehicle model.


No.	Item	Explanation
1	+	Volume adjustment button: Press the (+) or (-) button to adjust the volume. If you adjust the volume during a voice guidance, the volume of the voice guidance changes. If you adjust the volume while making a hands-free call, the conversation volume changes.
	-	
2	➤➤	Seek Switch: Selecting a radio station (FM/AM radio) You can call up radio stations registered to your favourites by pressing the seek switch while listening to FM/AM radio. The radio stations change each time you press the switch. In addition, press and hold the seek switch until you hear a beep to start automatic station selection. It stops when a radio broadcast is tuned in. (DAB radio)* You can call up radio stations registered to your Favourites by pressing the seek switch while listening to DAB radio. The radio station changes each time you press the seek switch. In addition, if you press and hold the seek switch until you hear a beep, the service switches to the next or previous service. If there is no next or previous service in the selected Ensemble, Ensemble switches.
	➤➤	Cuing Music and video files can be cued by operating the button while audio or video is playing. Press the (➤➤) to cue to the beginning of the next song and press the (➤➤) to cue to the beginning of the previous song. (The order of the songs is in the order of the selected file list.)

MZD Connect

No.	Item	Explanation
3	SOURCE	<p>SOURCE button: The audio source can be switched each time the button is pressed. In addition, when the button is pressed and held, the audio currently being played is turned off and the audio source selection screen is displayed.</p> <p>(During Apple CarPlay or Android Auto™ playback) Press and hold the SOURCE button to turn off the audio currently being played.</p>
4		<p>Hang-up button*1 : (During a call) Press the button to end the call.</p> <p>(While receiving a call) Press the button to refuse a call.</p>
5		<p>Talk/Pick-up button*1 : (While receiving a call) Press the button to answer the call.</p>
6		<p>Mute button: Press the button to mute. Press it again to cancel the mute.</p> <p>NOTE <i>If you press the mute button to mute an audio source which can be paused, such as Apple CarPlay, USB audio, or Bluetooth® audio, while it is playing, the song playback pauses. Press the mute button again to cancel the mute and the pause at the same time.</i></p>

*1 You can also use the voice recognition for the talk/pick-up button, and hang-up button.
For details, refer to Operation Using Voice Recognition Function (page 5-22).

▼ Operation Using Voice Recognition Function

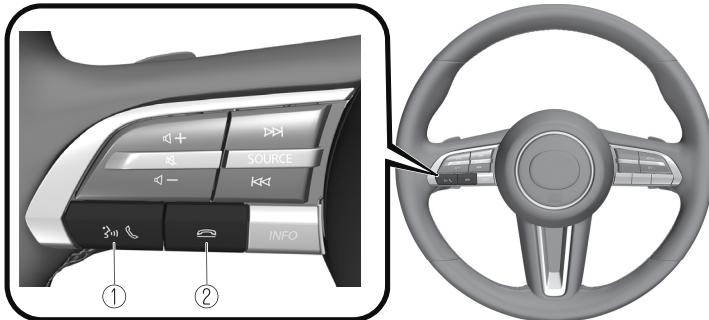

The shape of the switches differs depending on the vehicle model.

No.	Item	Explanation
1		Talk/Pick-up button : When the button is pressed, the voice recognition top screen is displayed and the voice recognition is activated. (While voice guidance is being announced) Press the button to skip the voice guidance.
2		Hang-up button: Press the button to end the voice recognition.

Voice recognition activation

When the talk/pick-up button on the audio remote control switch is pressed, the voice recognition top screen is displayed.

NOTE

While Apple CarPlay or Android Auto™ is connected, Siri or Android Auto™ voice recognition is activated.

At this time MZD Connect voice recognition is not activated.

Commands usable at any time

“Help” - Can be used to check for usable voice commands.

“Back” - Returns to the previous screen. When a voice command is spoken while on the telephone number input screen, the content that was previously input is deleted.

“Cancel”- The voice recognition is ended.

To learn more on how to operate MZD Connect

“Owner's Manual” - The operation guide screen is displayed.

Ending voice recognition

Do any one of the following operations:


- Press the hang-up button.
- Press and hold the talk/Pick-up button.
- Say the word, “Cancel”.

Convenient operating tips for using the voice recognition function

Examples of effective voice commands in various categories are displayed on top screen of the voice recognition.

MZD Connect

It would be convenient to know these usable voice commands in advance.

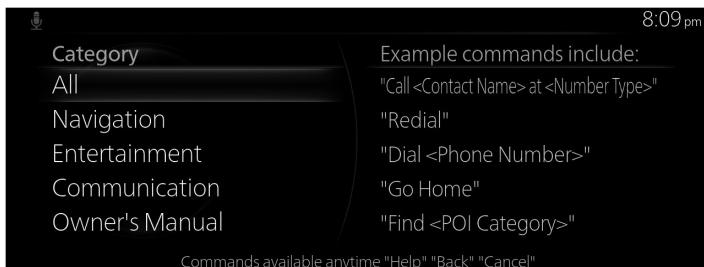

NOTE

- The voice commands indicated in this manual are some examples of usable voice commands. Some voice commands may be unusable depending on the vehicle model.
- When the Barge-In setting is on, voice commands can be made even while the voice guidance is being announced. For details on Barge-In, refer to the Settings section in the MZD Connect Owner's Manual.
- For details on voice commands which can be used on the navigation screen, refer to the navigation system manual.

To prevent mistaken voice recognition, be aware of the following points:

- When you are using a mobile phone connected via Bluetooth®, the commands relevant to the mobile phone can be used. Connect your mobile phone to Bluetooth® before operating the mobile phone using voice recognition.
- Speaking in a slightly louder voice will improve voice recognition, but an excessively loud voice is unnecessary. Try to speak in a slightly louder voice than when talking to other passengers in the vehicle.
- You do not need to speak slowly. Speak at a normal speed.
- When calling a person in the device's phone book, the recognition rate increases the longer the name is. Errors may occur with names that are short such as "Mama", "Home", or "wife".
- Speak clearly, without pausing between words or numbers.
- Voice commands other than those specified, cannot be recognised. Speak in the wording specified by the voice commands.
- It is not necessary to face the microphone or approach it. Speak the voice commands while maintaining a safe driving position.
- Close the windows and the sunroof to reduce loud noises from outside the vehicle and to prevent the airflow of the air-conditioning system from being a disturbance when using Bluetooth® Hands-Free.
- Make sure that the air flow from the air conditioner is not blowing on the microphone.
- When making voice commands during a voice guidance, speak in a slightly louder voice. But, an excessively loud voice is unnecessary.

- If the voice recognition is poor with the guidance volume set to high, set the Barge-In to OFF.

Some voice command examples corresponding to the voice recognition function

The specified name and number are put into the {}.

Common

- Back
- Help (You can listen to help guidance at each screen.)
- {Line Number} (You can select the line number on the screen.)
- Next Page
- Previous Page
- Cancel

Menu

- All
- Navigation
- Entertainment
- Communication
- Owner's Manual (the In-vehicle Digital Owner's Manual voice recognition can be displayed.)

Setting

- Voice Recognition Settings
- Owner's Manual (the In-vehicle Digital Owner's Manual voice recognition can be displayed.)
- Display Off

Music

- Play Artist (You can also use “Play Artist {Artist name}”.)
- Play Album (You can also use “Play Album {Album Name}”.)
- Play Playlist (You can also use “Play Playlist {Playlist Name}”.)
- Play Song (You can also use “Play Song {Song Name}”.)
- Play Audiobook (You can also use “Play Audiobook {Audiobook Name}”.)
- Play Podcast (You can also use “Play Podcast {Podcast Name}”.)

Radio

- Tune to {Frequency} AM
- Tune to {Frequency} FM
- Tune to DAB {DAB Station Name}

Source

- Change Source (You can also use “Change Source to USB”*1 and “USB”*1.)
- Audio OFF (You can also use “Change Source to Audio OFF”.)

Phone

- Dial Phone Number (You can also use “Dial {Phone Number}”.)
- Call History
- Call a Contact (You can also use “Call {Contact Name}” and “Call {Contact Name} at {Number Type}”.)
- Redial

*1 : Audio source names other than “USB” can also be used as follows:

Bluetooth/AM/FM/DAB/Disc/USB1 Audio/USB2 Audio/USB1 Video/USB2 Video

NOTE

- *Some commands may not be usable depending on the region and equipment.*
- *Some commands cannot be used depending on the device connection conditions and the use conditions.*

▼ Appendix

Gracenote® Database

When audio CDs are played, the unit searches the database stored in the vehicle for the album name, artist name, genre, title, and album art, and if there is a match in the vehicle's database compilation to the music being played, each type of music information is automatically added (Album art only for MP3/WMA/AAC CDs and when playing USB audio and Bluetooth® audio). The database information stored in this device uses database information in the Gracenote® music recognitions service.

Apple CarPlay**CAUTION**

➤ YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY ("THE APPLICATION") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND THAT THE APPLICATION AND INFORMATION ON THE APPLICATION IS PROVIDED "AS IS" AND "AS AVAILABLE", WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND MAZDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATION AND INFORMATION ON THE APPLICATION, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS.

AS EXAMPLES, AND WITHOUT LIMITATION, MAZDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATION, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, ITS AFFILIATES, OR THIRD PARTY PROVIDERS; MAZDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA, WHICH MAY BE LOST AT ANY TIME; MAZDA DOES NOT GUARANTEE THAT THE APPLICATION OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC.

IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL MAZDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATION OR YOUR USE OF OR INABILITY TO USE THE APPLICATION OR INFORMATION ON THE APPLICATION.

➤ When using Apple CarPlay, please avoid distraction and use Apple CarPlay responsibly. Stay fully aware of driving conditions and always obey applicable laws.

NOTE

- Apple CarPlay is provided by Apple and its use is subject to your agreement to the Apple CarPlay terms of use, which are included as part of the Apple iOS terms of use.
- When using Apple CarPlay, location, speed, and other vehicle data is transferred to your iPhone. For further details, refer to Apple's Privacy Policy.

Android Auto™**CAUTION**

➤ YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF ANDROID AUTO™ ("THE APPLICATION") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND THAT THE APPLICATION AND INFORMATION ON THE APPLICATION IS PROVIDED "AS IS" AND "AS AVAILABLE," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND MAZDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATION AND INFORMATION ON THE APPLICATION, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS.

AS EXAMPLES, AND WITHOUT LIMITATION, MAZDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATION, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY GOOGLE, ITS AFFILIATES, OR THIRD PARTY PROVIDERS; MAZDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA, WHICH MAY BE LOST AT ANY TIME; MAZDA DOES NOT GUARANTEE THAT THE APPLICATION OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC.

IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL MAZDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATION OR YOUR USE OF OR INABILITY TO USE THE APPLICATION OR INFORMATION ON THE APPLICATION.

- *When using Android Auto™, please avoid distraction and use Android Auto™ responsibly. Stay fully aware of driving conditions and always obey applicable laws.*

NOTE

- *Android Auto™ is provided by Google and its use is subject to your agreement to the Android Auto™ terms of use.*
- *When using Android Auto™, location, speed, and other vehicle data is transferred to your smart phone. For further details, refer to Google Privacy Policy.*

Trademark

- Manufactured under license by Dolby Laboratories, Inc.. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- iPhone, iPod touch, iPod nano, Siri and Apple Music are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple CarPlay is trademarks of Apple Inc.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- “Made for iPhone” and “Made for iPod” mean that an accessory has been designed to connect specifically to iPhone or iPod, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPhone or iPod may affect wireless performance.

Made for
iPhone 7 Plus
iPhone 7
iPhone SE
iPhone 6s Plus
iPhone 6s

MZD Connect

iPhone 6 Plus
iPhone 6
iPhone 5s
iPhone 5c
iPhone 5
iPhone 4s
iPod touch (6th generation)
iPod touch (5th generation)
iPod nano (7th generation)



- Google, Android, Android Auto and other related marks are trademarks of Google LLC.
- AudioPilot is a registered trademark of Bose Corporation.
- Centerpoint is a registered trademark of Bose Corporation.
- Windows Media and Microsoft are registered trademarks of Microsoft Corporation U.S. in the United States and other countries.
This product is protected by certain intellectual property rights of Microsoft Corporation and third parties.
Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorised Microsoft subsidiary and third parties.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.



- SDHC Logo is a trademark of SD-3C, LLC.



- Gracenote, the Gracenote logo and logotype are either a registered trademark or a trademark of Gracenote, Inc. in the United States and/or other countries.



Regarding the license for the audio amplifier (except vehicles with Bose audio)

License for CMSIS-RTOS RTX Implementation

Copyright (c) 1999-2009 KEIL, 2009-2015 ARM Germany GmbH, 2013-2016 ARM Ltd
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of ARM nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.


IN NO EVENT SHALL COPYRIGHT HOLDERS AND CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Interior Equipment

Sunvisors

▼ Sunvisors

When you need a sunvisor, lower it for use in front or swing it to the side.

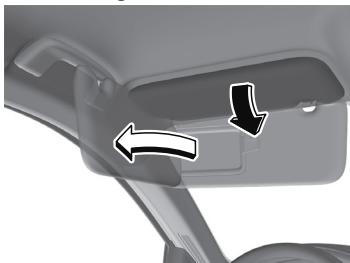


▼ Vanity Mirrors

To use the vanity mirror, lower the sunvisor.

If your vehicle is equipped with a vanity mirror light, it will illuminate when you open the cover.

The vanity mirror will only illuminate in the tilt range shown in the figure.

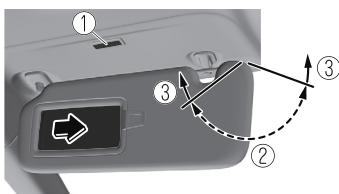

1. Vanity mirror light
2. On
3. Off

NOTE

If a vanity mirror light is left on with the ignition switched OFF, the light is turned off automatically to prevent the battery from being discharged.

The vanity mirror light can be turned on again by doing any of the following operations:

- Opening/closing any door.
- Unlocking any door.
- Switching the ignition to ACC or ON.
- Switching an overhead light/front map light on.

Interior Lights


▼ Interior Lights

NOTE

Do not leave the lights on for long periods while the engine is turned off. Otherwise the battery power could be depleted.

Overhead lights

Front

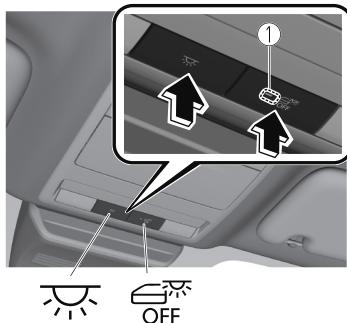

1. Indicator light

Switch	Overhead Lights
ON/OFF	Press the switch to turn it on. Press the switch again to turn off the lights.

Switch	Overhead Lights
OFF DOOR OFF	<p>The door interlock can be switched ON/OFF.</p> <p>When the door interlock is OFF, the indicator light in the switch turns on.</p> <p>Door interlock ON (indicator light in switch is off)</p> <ul style="list-style-type: none"> • The lights turn on when any of the doors is opened. • The lights turn on/off in conjunction with the illuminated entry system. <p>Door interlock OFF (indicator light in switch is on)</p> <ul style="list-style-type: none"> • The lights do not turn on even if any of the doors is opened. • The lights do not turn on/off in conjunction with the illuminated entry system.

Interior Equipment

Rear




NOTE

The rear overhead light also turns on and off when the front overhead light switch is operated.

Map lights

Front

Press the switch to illuminate the front map lights, and then press the switch again to turn them off.

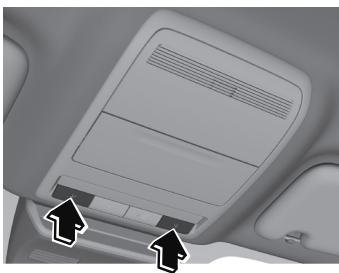

NOTE


The front map lights will not turn off even if the switch is pressed in the following cases:

- The overhead lights turn on by operating the overhead light ON/OFF switch ().
- The overhead lights turn on in conjunction with a door opening/closing.

- The illuminated entry system is on.

Rear*

When the overhead light ON/OFF switch () is off, press the switch to illuminate the rear map lights, and then press the switch again to turn them off.

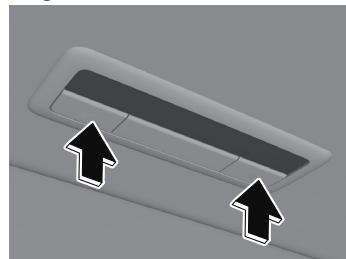

NOTE

- Once the rear map lights have been turned off, they will turn on and off in conjunction with the overhead light operation.
- The rear map lights will not turn off even if the switch is pressed in the following cases:
 - The overhead lights turn on by operating the overhead light ON/OFF switch (.
 - The overhead lights turn on in conjunction with a door opening/closing.
 - The illuminated entry system is on.

Boot light (Saloon)

The boot light is on when the boot is open and off when it is closed.



NOTE

Do not leave the boot open for long periods while the engine is turned off. Otherwise the battery power could be depleted.

Luggage compartment light (Hatchback)

The luggage compartment light is on when the liftgate is open and off when it is closed.



NOTE

Do not leave the liftgate open for long periods while the engine is turned off. Otherwise the battery power could be depleted.

▼ Illuminated Entry System

The overhead lights turn on when any of the following operations is done with the overhead light switch in the DOOR position.

- The driver's door is unlocked with the ignition is switched OFF.
- The ignition is switched OFF with all doors closed.

NOTE

- *The illumination time differs depending on the operation.*
- *The vehicle is equipped with a battery saver. If an interior light is left on with the ignition switched OFF, the light is turned off automatically after about 15 minutes to prevent battery depletion.*
- *The operation of the illuminated entry system can be changed. Refer to the Settings section in the MZD Connect Owner's Manual.*
- *The illuminated entry system does not operate in conjunction with the overhead lights when the overhead lights are turned on using the overhead light ON/OFF switch.*

Interior Equipment

Accessory Sockets

▼ Accessory Sockets

Only use genuine Mazda accessories or the equivalent requiring no greater than 120 W (DC 12 V, 10 A).

The ignition must be switched to ACC or ON.



CAUTION

- To prevent accessory socket damage or electrical failure, pay attention to the following:
- Do not use accessories that require more than 120 W (DC 12 V, 10 A).
- Do not use accessories that are not genuine Mazda accessories or the equivalent.
- Close the cover when the accessory socket is not in use to prevent foreign objects and liquids from getting into the accessory socket.
- Correctly insert the plug into the accessory socket.
- Do not insert the cigarette lighter into the accessory socket.
- Noise may occur on the audio playback depending on the device connected to the accessory socket.


➤ Depending on the device connected to the accessory socket, the vehicle's electrical system may be affected, which could cause the warning light to illuminate. Disconnect the connected device and make sure that the problem is resolved. If the problem is resolved, disconnect the device from the socket and switch the ignition off. If the problem is not resolved, consult an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

To prevent discharging of the battery, do not use the socket for long periods with the engine off or idling.

Connecting the accessory socket

1. Open the lid.
2. Pass the connection plug cord through the cutout of the console and insert the plug into the accessory socket.

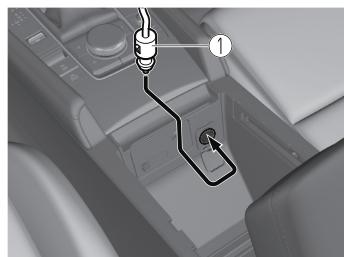

1. Plug

Cup Holder

▼ Cup Holder

WARNING

Never use a cup holder to hold hot liquids while the vehicle is moving:

Using a cup holder to hold hot liquids while the vehicle is moving is dangerous. If the contents spill, you could be scalded.

Do not put anything other than cups or drink cans in cup holders:

Putting objects other than cups or drink cans in a cup holder is dangerous.

During sudden braking or manoeuvring, occupants could be hit and injured, or objects could be thrown around the vehicle, causing interference with the driver and the possibility of an accident. Only use a cup holder for cups or drink cans.

Front

Type A



Type B

To use the cup holder, push the release button.



Rear*

The rear cup holder is on the rear centre armrest.




*Some models.

Interior Equipment

Bottle Holder

▼ Bottle Holder

Bottle holders are on the inside of the doors.

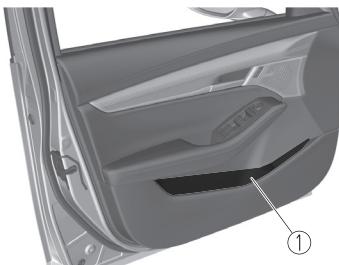

1. Bottle holder

⚠ CAUTION

Do not use the bottle holders for containers without caps. The contents may spill when opening/closing the door or while driving the vehicle.

Assist Grips

▼ Assist Grips

⚠ WARNING

Never hang heavy or sharp objects on the assist grips and coat hooks:

Hanging heavy or sharp-ended objects such as a coat hanger from the assist grips or coat hooks is dangerous as they can fly off and hit an occupant in the cabin if a curtain air bag was to deploy, which could result in serious injury or death.

Do not use the assist grips when getting in and out of the vehicle or getting out of a seat:

An assist grip could break under a heavy load resulting in injury.

Use the assist grips to support your body while seated in the vehicle and while the vehicle is moving.



Rear Coat Hooks

▼ Rear Coat Hooks

WARNING

Never hang heavy or sharp objects on the assist grips and coat hooks:

Hanging heavy or sharp-ended objects such as a coat hanger from the assist grips or coat hooks is dangerous as they can fly off and hit an occupant in the cabin if a curtain air bag was to deploy, which could result in serious injury or death.

Always hang clothes on the coat hooks and the assist grips without hangers.



Storage Compartments

▼ Storage Compartments

WARNING

Keep storage boxes closed when driving:

Driving with the storage boxes open is dangerous. To reduce the possibility of injury in an accident or a sudden stop, keep the storage boxes closed when driving.

Do not put articles in storage spaces with no lid:

Putting articles in storage spaces with no lid is dangerous as they could be thrown around the cabin during sudden braking, manoeuvring, or acceleration and cause an accident depending on how the article is stored.

CAUTION

Do not leave lighters or eyeglasses in the storage boxes while parked under the sun.
A lighter could explode or the plastic material in eyeglasses could deform and crack from high temperature.

Interior Equipment


▼ Overhead Console*

This console box is designed to store eyeglasses or other accessories. Push and release to open.



▼ Storage Pocket

To use, open the lid.

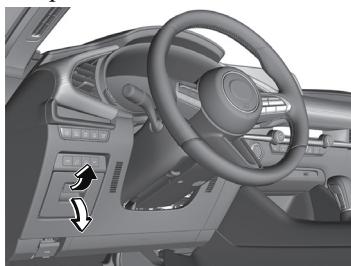

▼ Glove Compartment


To open the glove compartment, pull the latch toward you.




To close the glove compartment, firmly press in the centre of the glove compartment lid.

▼ Centre Console

To slide the console lid, pull the knob and slide it rearward.

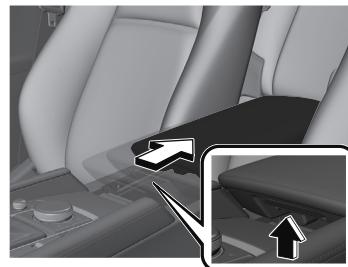

To open the lid, pull the knob, slide the lid rearward, and then lift up the lid.

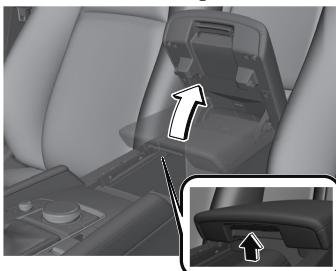

CAUTION

Do not put your hands or fingers around the moving parts of the lid when using the lid. Otherwise, your hand or finger could get caught, resulting in an injury.

NOTE

The lid can be opened/closed while it is slid to the 1st and 2nd stages, but if the rear seatback is folded, the lid cannot be opened/closed while it is slid to the 2nd stage because the rear seat (head restraint) will contact it.

Centre console divider




Small items can be placed using the centre console divider.

▼ Luggage Compartment

Cargo Sub-Compartment*

(Saloon)


Lift the boot mat.

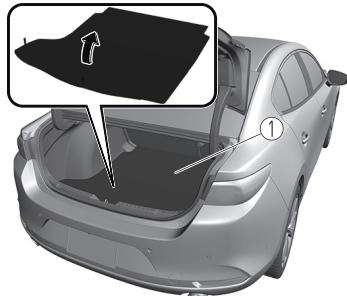

1. Boot mat

(Hatchback)

1. Lift the luggage mat.

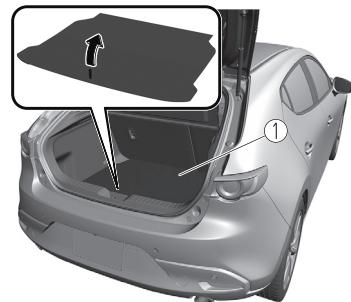

1. Luggage mat

Interior Equipment

NOTE



Loading golf bags (Saloon)

(Some golf bags may not fit using the following methods depending on their sizes.)

Up to two golf bags can be carried in the boot.

First golf bag: Place the golf bag in the luggage compartment with its bottom pointed to the left and fit it into the front of the compartment.

Second golf bag: Place the golf bag in the luggage compartment with its bottom pointed to the left and fit it into the back of the compartment.

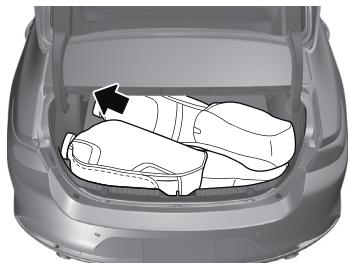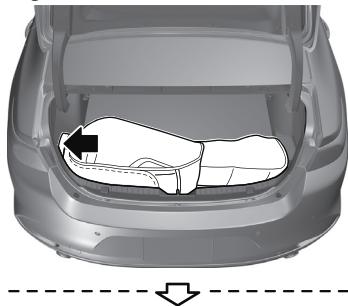

The arrows indicate the bottoms of the golf bags.

Removable Ashtray*

▼ Removable Ashtray

The removable ashtray can be fixed and used in either of the front cup holders.



Only use the removable ashtray in its fixed position, and make sure it is completely inserted:


Using an ashtray removed from its fixed position or not completely inserted is dangerous. Cigarettes could roll around or spill out of the ashtray into the vehicle and start a fire. Moreover, cigarette stubs will not extinguish themselves completely even if the ashtray lid is closed.



Do not use the ashtray for rubbish. You might start a fire.

To use the ashtray, insert it straight into the cup holder.

To remove the ashtray, pull it upward.

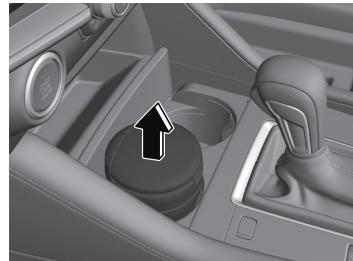

6

Maintenance and Care

How to keep your Mazda in top condition.

Essential Information.....	6-2
Introduction.....	6-2

Scheduled Maintenance.....	6-3
Scheduled Maintenance.....	6-3

Owner Maintenance.....	6-16
Owner Maintenance	
Precautions.....	6-16
Bonnet.....	6-17
Engine Compartment	
Overview.....	6-19
Engine Oil.....	6-24
Engine Coolant.....	6-30
Brake/Clutch Fluid.....	6-31
Window and Headlight Washer Fluid.....	6-32
Body Lubrication.....	6-33
Wiper Blades.....	6-33
Battery.....	6-39
Key Battery Replacement.....	6-41
Tyres.....	6-43
Light Bulbs.....	6-47
Fuses.....	6-51

Appearance Care.....	6-57
Exterior Care.....	6-57
Interior Care.....	6-63

Essential Information

Introduction

▼ Introduction

Be careful not to hurt yourself when inspecting your vehicle, replacing a tyre, or doing some kind of maintenance such as car washing.

In particular, wear thick work gloves such as cotton gloves when touching areas that are difficult to see while inspecting or working on your vehicle. Doing inspections or procedures with your bare hands could cause injury.

If you are unsure about any procedure this manual describes, we strongly urge you to have a reliable and qualified technician perform the work, we recommend an Authorised Mazda Repairer.

Authorised Mazda technicians and genuine Mazda parts are dedicated to your vehicle. Without this expertise and the parts that have been designed and made especially for your Mazda, inadequate, incomplete, and insufficient servicing may result in problems. This could lead to vehicle damage or an accident and injuries.


For expert advice and quality service, consult an expert repairer, we recommend an Authorised Mazda Repairer.

The owner should retain evidence that proper maintenance has been performed as prescribed.

A claim against a warranty will not qualify if it results from lack of maintenance and not from defective material or authorised workmanship.

The malfunction diagnosis connector is designed exclusively for connecting the specially designed device to perform on-board diagnosis.

Do not connect any devices other than the specially designed malfunction diagnosis devices for servicing. If any device other than the malfunction diagnosis device is connected, it may affect the vehicle's electrical devices or lead to damage such as battery depletion.

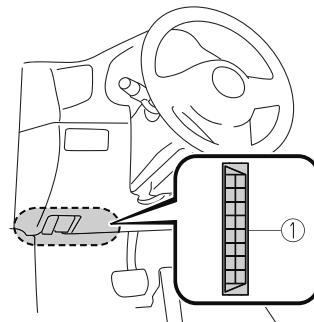

1. Malfunction diagnosis connector

Scheduled Maintenance

Scheduled Maintenance

▼ Scheduled Maintenance

NOTE

After the prescribed period, continue to follow the described maintenance at the recommended intervals.

Emission control and related systems

The ignition and fuel systems are highly important to the emission control system and to efficient engine operation. Do not tamper with them.

All inspections and adjustments must be made by an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Europe

Vehicles utilizing the vehicle status monitor feature (My Mazda Service):

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Vehicles, using in European countries except SKYACTIV-D 1.8 in Ukraine.

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval, 20,000 km (12,500 miles) or 12 months, whichever comes first. (after the previous maintenance)

Vehicles, using in Ukraine for SKYACTIV-D 1.8.

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval, 10,000 km (6,250 miles) or 12 months, whichever comes first. (after the previous maintenance)

Maintenance item	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
SKYACTIV-G 1.5, SKYACTIV-G 2.0, AND SKYACTIV-X 2.0												
Engine oil & filter *1*2	R	R	R	R	R	R	R	R	R	R	R	R
Spark plugs *4	SKYACTIV-G 1.5, SKYACTIV-G 2.0	Replace every 120,000 km (75,000 miles).										
	SKYACTIV-X 2.0	Replace every 64,000 km (40,000 miles).										
Air filter *5		R		R		R		R		R		R
Fuel lines and hoses	I	I	I	I	I	I	I	I	I	I	I	I

Scheduled Maintenance

Maintenance item	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
Hoses and tubes for emission		I			I			I			I	
SKYACTIV-D 1.8												
Engine oil & filter *1*3	R	R	R	R	R	R	R	R	R	R	R	R
Air filter *5	C	C	R	C	C	R	C	C	R	C	C	R
Fuel filter		R			R			R			R	
Fuel lines and hoses	Except Ukraine		I		I		I		I		I	
	Ukraine	I	I	I	I	I	I	I	I	I	I	I
SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, AND SKYACTIV-D 1.8												
Drive belts *6			I			I			I			I
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I
Engine coolant *7	Replace at first 200,000 km (125,000 miles) or 10 years; after that, every 100,000 km (62,500 miles) or 5 years.											
Battery *8*9	I	I	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I	I	I
Vacuum brake booster and hose	With vacuum booster		I		I		I		I		I	
Brake fluid *10		R		R		R		R		R		R
Disc brakes	I	I	I	I	I	I	I	I	I	I	I	I
Manual transmission oil	Replace every 180,000 km (112,500 miles).											
Steering operation and linkages		I		I		I		I		I		I
Rear differential oil	*11											
Transfer oil	*11											
Front and rear suspension, ball joints and wheel bearing axial play		I		I		I		I		I		I
Driveshaft dust boots	I		I		I		I		I		I	
Exhaust system and heat shields	Inspect every 100,000 km (62,500 miles) or 8 years.											
Bolts and nuts on chassis and body		T		T		T		T		T		T
Body condition (for rust, corrosion and perforation)	I	I	I	I	I	I	I	I	I	I	I	I
Cabin air filter (if installed)		R		R		R		R		R		R
Tyre inflation pressure and tyre wear *12*13	I	I	I	I	I	I	I	I	I	I	I	I
Emergency flat tyre repair kit (if installed)*14	I	I	I	I	I	I	I	I	I	I	I	I
Self-test with Mazda Modular Diagnostic System (M-MDS)*15*16	Ukraine (SKYACTIV-G 1.5, SKYACTIV-G 2.0)	I	I	I	I	I	I	I	I	I	I	I

Scheduled Maintenance

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

C: Clean

T: Tighten

R: Replace

Remarks:

- *1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- *2 Except SKYACTIV-D 1.8 in Ukraine, if you drive your vehicle under any of the following conditions, replace the engine oil & filter every 10,000 km (6,250 miles) or shorter.
 - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
 - b) Driving under dusty conditions.
 - c) Driving for long periods in cold temperatures or driving regularly for short distances only.
 - d) Driving under extremely high temperature conditions.
 - e) Driving continuously in mountainous regions.
- *3 For SKYACTIV-D 1.8 in Ukraine, if you drive your vehicle under any of the following conditions, replace the engine oil & filter every 5,000 km (3,125 miles) or shorter.
 - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
 - b) Driving under dusty conditions.
 - c) Driving for long periods in cold temperatures or driving regularly for short distances only.
 - d) Driving under extremely high temperature conditions.
 - e) Driving continuously in mountainous regions.
- *4 In the countries below, inspect the spark plugs at every 10,000 km (6,250 miles) or 12 months before replacing them at the said interval.
Albania, Bosnia and Herzegovina, Bulgaria, Croatia, Latvia, Macedonia, Moldova, Montenegro, Romania, Serbia, Slovakia, Ukraine
- *5 If the vehicle is operated in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- *6 Also inspect the air conditioner drive belts, if installed.
If the vehicle is operated primarily under any of the following conditions, inspect the drive belts at every 20,000 km (12,500 miles) or 12 months.
 - a) Driving under dusty conditions.
 - b) The vehicle is idled for long periods or driven at low speeds.
 - c) Driving for long periods in cold temperatures or driving regularly for short distances only.
 - d) Driving under extremely high temperature conditions.
 - e) Driving continuously in mountainous regions.
 - f) Driving for long period in extremely wet or heavy rain condition.
- *7 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *8 Inspect the battery electrolyte level, specific gravity and outer appearance. The sealed battery only requires an outer appearance inspection.
- *9 Inspection is only subjected for lead-acid battery.
- *10 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- *11 If this component has been submerged in water, the oil should be replaced.
- *12 Tyre rotation is recommended every 10,000 km (6,250 miles).
- *13 Inspect a spare tyre if installed.

Scheduled Maintenance

- *14 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- *15 If DTC P1200 is stored, clean the fuel system by Mazda genuine deposit cleaner.
If the required tool (M-MDS) is not available, clean the fuel system by Mazda genuine deposit cleaner without performing self-test.
Using non-genuine deposit cleaner would cause an internal failure in the fuel system.
- *16 If the vehicle is operated primarily under any of the following conditions, perform "Self-test with Mazda Modular Diagnostic System (M-MDS)" at every 10,000 km (6,250 miles).
 - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
 - b) Driving under extremely high temperature conditions.

Scheduled Maintenance

▼ Except Europe

Israel

Vehicles utilizing the vehicle status monitor feature:

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval.

Maximum interval 15,000 km or 12 months, whichever comes first

Manually set Next Service Distance of Vehicle Status Monitor to 10,000 km or shorter if the vehicle is driven primarily under any of the following conditions:

Refer to the Information section in the MZD Connect Owner's Manual about the manual setting procedure.

1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
2. Driving under dusty conditions.
3. Driving for long periods in cold temperatures or driving regularly for short distances only.
4. Driving under extremely high temperature conditions.
5. Driving continuously in mountainous regions.

Maintenance Item	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
Engine oil & oil filter *1	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts *2	I	I	I	I	I	I	I	I	I	I	I	I
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I
Battery *3*4	I	I	I	I	I	I	I	I	I	I	I	I
Vacuum brake booster and hose	I	I	I	I	I	I	I	I	I	I	I	I
Brake and clutch fluid level	I	I	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes	I	I	I	I	I	I	I	I	I	I	I	I
Bolts and nuts on chassis and body	T	T	T	T	T	T	T	T	T	T	T	T
Front and rear suspension, ball joints and wheel bearing axial play	I	I	I	I	I	I	I	I	I	I	I	I
Body condition (for rust, corrosion and perforation)	I	I	I	I	I	I	I	I	I	I	I	I
Tyre inflation pressure and tyre wear *5*6	I	I	I	I	I	I	I	I	I	I	I	I
Emergency flat tyre repair kit (if instal- led)*7	I	I	I	I	I	I	I	I	I	I	I	I

Scheduled Maintenance

Maintenance Item	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
Fuel lines and hoses	I		I		I		I		I		I	
Steering operation and linkages	I		I		I		I		I		I	
Brake fluid *8	R		R		R		R		R		R	
Cabin air filter (if installed)	R		R		R		R		R		R	
Hoses and tubes for emission			I				I				I	
Driveshaft dust boots		I			I			I			I	
Air filter *9			R				R				R	
Exhaust system and heat shields				I					I			
Manual transmission oil												Replace every 100,000 km or 5 years.
Spark plugs												Replace every 120,000 km.
Fuel filter												Replace every 135,000 km.
Engine coolant *10												Replace at first 195,000 km or 10 years; after that, every 90,000 km or 5 years.

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

T: Tighten

R: Replace

Remarks:

- *1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- *2 Also inspect the air conditioner drive belts, if installed.
If the vehicle is driven primarily under any of the following conditions, inspect the drive belts at every 10,000 km or shorter.
 - a) Driving for long period in extremely wet or heavy rain condition.
- *3 Inspect the battery electrolyte level, specific gravity and outer appearance. The sealed battery only requires an outer appearance inspection.
- *4 Inspection is only subjected for lead-acid battery.
- *5 Tyre rotation is recommended every 15,000 km.
- *6 Inspect a spare tyre if installed.
- *7 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- *8 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is driven in extremely humid climates, replace the brake fluid annually.
- *9 If the vehicle is driven in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- *10 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.

Scheduled Maintenance

Russia/Belarus/Azerbaijan/Kazakhstan/Armenia

Vehicles utilizing the vehicle status monitor feature:

Russia/Belarus/Kazakhstan

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval.

Refer to Table A to identify the required maintenance items.

Maximum interval 15,000 km or 12 months, whichever comes first

Manually set Next Service Distance and Date of Vehicle Status Monitor to 7,500 km and 6 months if the vehicle is driven primarily under any of the following conditions:

Refer to the Information section in the MZD Connect Owner's Manual about the manual setting procedure.

1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
2. Driving under dusty conditions.
3. Driving for long periods in cold temperatures or driving regularly for short distances only.
4. Driving under extremely high temperature conditions.
5. Driving continuously in mountainous regions.

Refer to Table B to identify the required maintenance items.

Azerbaijan/Armenia

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval.

Refer to Table B to identify the required maintenance items.

Maximum interval 5,000 km or 6 months, whichever comes first

Manually set Next Service Distance of Vehicle Status Monitor to a shorter mileage than 5,000 km if the vehicle is driven primarily under any of the following conditions:

Refer to the Information section in the MZD Connect Owner's Manual about the manual setting procedure.

1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
2. Driving under dusty conditions.

Scheduled Maintenance

3. Driving for long periods in cold temperatures or driving regularly for short distances only.

4. Driving under extremely high temperature conditions.

5. Driving continuously in mountainous regions.

Refer to Table B to identify the required maintenance items.

Table A

Maintenance item		1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
Engine oil & filter *1		R	R	R	R	R	R	R	R	R	R	R	R
Spark plug		I	I	I	I	I	I	I	R	I	I	I	I
Drive belts *2		I	I	I	I	I	I	I	I	I	I	I	I
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I
Battery *3*4		I	I	I	I	I	I	I	I	I	I	I	I
Vacuum brake booster and hose	With vacuum booster		I		I		I		I		I		I
Brake lines, hoses and connections		I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes		I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages		I	I	I	I	I	I	I	I	I	I	I	I
Bolts and nuts on chassis and body		T	T	T	T	T	T	T	T	T	T	T	T
Front and rear suspension, ball joints and wheel bearing axial play		I	I	I	I	I	I	I	I	I	I	I	I
Driveshaft dust boot		I	I	I	I	I	I	I	I	I	I	I	I
Exhaust system and heat shields		I	I	I	I	I	I	I	I	I	I	I	I
Function of all lights		I	I	I	I	I	I	I	I	I	I	I	I
Body condition (for rust, corrosion and perforation)		I	I	I	I	I	I	I	I	I	I	I	I
Tyre inflation pressure and tyre wear *5*6		I	I	I	I	I	I	I	I	I	I	I	I
Emergency flat tyre repair kit (if instal- led)*7		I	I	I	I	I	I	I	I	I	I	I	I
Fuel lines & hoses			I		I		I		I		I		I
Brake fluid *8			R		R		R		R		R		R
Cabin air filter (if installed)			R		R		R		R		R		R
Hoses and tubes for emission				I				I				I	
Air filter *9				R			R			R			R
Manual transmission oil					R					R			R
Fuel filter	Except below countries	Replace every 120,000 km.											
	Azerbaijan/ Armenia	Replace every 60,000 km.											

Scheduled Maintenance

Maintenance item		1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	
Engine coolant * ¹⁰		Replace at first 195,000 km or 120 months; after that, every 90,000 km or 60 months.												
Self-test with Mazda Modular Diagnostic System (M-MDS)* ¹¹	Kazakhstan	I	I	I	I	I	I	I	I	I	I	I	I	

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

T: Tighten

R: Replace

Remarks:

- *¹ Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- *² Also inspect the air conditioner drive belts, if installed.
If the vehicle is driven primarily under any of the following conditions, inspect the drive belts at every 7,500 km or 6 months.
 - a) Driving for long period in extremely wet or heavy rain condition.
- *³ Inspect the battery electrolyte level, specific gravity and outer appearance. The sealed battery only requires an outer appearance inspection.
- *⁴ Inspection is only subjected for lead-acid battery.
- *⁵ Tyre rotation is recommended every 15,000 km.
- *⁶ Inspect a spare tyre if installed.
- *⁷ Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- *⁸ If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- *⁹ If the vehicle is operated in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- *¹⁰ Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *¹¹ If DTC P1200 is stored, clean the fuel system by Mazda genuine deposit cleaner.
If the required tool (M-MDS) is not available, clean the fuel system by Mazda genuine deposit cleaner without performing self-test.
Using non-genuine deposit cleaner would cause an internal failure in the fuel system.

Scheduled Maintenance

Table B

Maintenance item		1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
Engine oil & filter *1		R	R	R	R	R	R	R	R	R	R	R	R
Self-test with Mazda Modular Diagnostic System (M-MDS)*2	Kazakhstan	I	I	I	I	I	I	I	I	I	I	I	I
Drive belts	Russia/ Belarus/ Kazakhstan	I	I	I	I	I	I	I	I	I	I	I	I
	Azerbaijan/ Armenia		I		I		I		I		I		I
Maintenance items other than above*3		1st		2nd		3rd		4th		5th		6th	

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

R: Replace

Remarks:

*1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.

*2 If DTC P1200 is stored, clean the fuel system by Mazda genuine deposit cleaner. If the required tool (M-MDS) is not available, clean the fuel system by Mazda genuine deposit cleaner without performing self-test.

Using non-genuine deposit cleaner would cause an internal failure in the fuel system.

*3 Refer to Table A to identify the required maintenance items.

Except Israel/Russia/Belarus/Azerbaijan/Kazakhstan/Armenia**Vehicles utilizing the vehicle status monitor feature**

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on. The display/wrench indication will come on before reaching the maximum interval.

Burundi, Cambodia, Cameroon, Gabon, Georgia, Ghana, Mongolia, Mozambique and Tanzania.

Maximum interval 5,000 km (3,250 miles) or 6 months, whichever comes first.

Scheduled Maintenance

Except Burundi, Cambodia, Cameroon, Gabon, Georgia, Ghana, Mongolia, Mozambique and Tanzania.

Maximum interval 10,000 km (6,250 miles) or 6 months, whichever comes first.

Manually set Next Service Distance of Vehicle Status Monitor to a shorter mileage than maximum interval (50 % of maximum mileage is recommended) if the vehicle is driven primarily under any of the following conditions: Refer to the Information section in the MZD Connect Owner's Manual about the manual setting procedure.

1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
2. Driving under dusty conditions.
3. Driving for long periods in cold temperatures or driving regularly for short distances only.
4. Driving under extremely high temperature conditions.
5. Driving continuously in mountainous regions.

Maintenance item	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th	16th
SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5, AND SKYACTIV-X 2.0																
Engine oil & filter *1	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Air filter *2						R						R				
Fuel filter	Except Tai-wan	Replace every 60,000 km (37,500 miles).														
	Taiwan	Replace every 80,000 km (50,000 miles).														
Spark plugs *3	SKYAC-TIV-X 2.0	Replace every 64,000 km (40,000 miles).														
	SKYAC-TIV-G 1.5, SKYAC-TIV-G 2.0, SKYAC-TIV-G 2.5	Replace every 120,000 km (75,000 miles).														

SKYACTIV-D 1.8

Engine oil & filter *1	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Air filter *2		C		C		R		C		C		R		C		C
Fuel filter			R				R			R		R				R

SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5, SKYACTIV-X 2.0, AND SKYACTIV-D 1.8

Drive belts*4	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake & Clutch fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Bonnet striker	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Function of all lights	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

Scheduled Maintenance

Maintenance item	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	15th	16th
Fuel lines and hoses	I		I		I		I		I		I		I		I	
Battery*5*6	I		I		I		I		I		I		I		I	
Vacuum brake booster and hose	With vacuum booster	I		I		I		I		I		I		I		I
Brake lines, hoses and connections		I		I		I		I		I		I		I		I
Steering operation and linkages		I		I		I		I		I		I		I		I
Front and rear suspension, ball joints and wheel bearing axial play		I		I		I		I		I		I		I		I
Bolts and nuts on chassis and body	T		T		T		T		T		T		T		T	
Body condition (for rust, corrosion and perforation)		I		I		I		I		I		I		I		I
Tyre inflation pressure and tyre wear *7	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Tyre rotation	Rotate every 10,000 km (6,250 miles).															
Emergency flat tyre repair kit (if installed)*8		I		I		I		I		I		I		I		I
Cabin air filter (if installed)	R		R		R		R		R		R		R		R	
Hoses and tubes for emission			I				I				I					I
Driveshaft dust boots			I				I				I					I
Brake fluid *9			R				R				R					R
Exhaust system and heat shields	Inspect every 80,000 km (50,000 miles).															
Manual transmission oil	Replace every 100,000 km or 60 months.															
Engine coolant *10	Replace at first 200,000 km (125,000 miles) or 10 years; after that, every 100,000 km (62,500 miles) or 5 years.															
Rear differential oil	*11															
Transfer oil	*11															
	Except below countries	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Self-test with Mazda Modular Diagnostic System (M-MDS)*12*13*14	Burundi, Cambodia, Cameroon, Gabon, Ghana, Mongolia and Tanzania	I		I		I		I		I		I		I		I

Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

C: Clean

T: Tighten

Scheduled Maintenance

R: Replace

Remarks:

- *1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- *2 If the vehicle is driven in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- *3 In the countries below, inspect the spark plugs at every 10,000 km (6,250 miles) or 1 year before replacing them at the said interval.
Algeria, Armenia, Angola, Bahrain, Bolivia, Burundi, B.Virgin, Cambodia, Cameroon, Chile, Costa Rica, Cote d'Ivoire, Curacao, El Salvador, Gabon, Georgia, Ghana, Guatemala, Haiti, Honduras, Hong Kong, Jordan, Kenya, Macau, Madagascar, Malaysia, Mongolia, Mozambique, Myanmar, Nigeria, Nicaragua, Oman, Panama, Papua New Guinea, Peru, Philippines, Senegal, Seychelles, Syria, Tanzania, UAE, Vietnam, Zaire, Zimbabwe
- *4 Also inspect the air conditioner drive belts, if installed.
If the vehicle is driven primarily under any of the following conditions, inspect the drive belts more often than the recommended intervals.
 - a) Driving for long period in extremely wet or heavy rain condition.
- *5 Inspect the battery electrolyte level, specific gravity and outer appearance. The sealed battery only requires an outer appearance inspection.
- *6 Inspection is only subjected for lead-acid battery.
- *7 Inspect a spare tyre if installed.
- *8 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- *9 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is driven in extremely humid climates, replace the brake fluid annually.
- *10 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *11 If this component has been submerged in water, the oil should be replaced.
- *12 If DTC P1200 is stored, clean the fuel system by Mazda genuine deposit cleaner.
If the required tool (M-MDS) is not available, clean the fuel system by Mazda genuine deposit cleaner without performing self-test.
Using non-genuine deposit cleaner would cause an internal failure in the fuel system.
- *13 If the vehicle is driven primarily under any of the following conditions, perform "Self-test with Mazda Modular Diagnostic System (M-MDS)" at every 5,000 km.
 - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
 - b) Driving under extremely high temperature conditions.
- *14 Applicable countries are as follows:
SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5: Algeria, Angola, Antigua, Aruba, Bahrain, Barbados, Bermuda, Bolivia, Botswana, Brunei, Burundi, Cambodia, Cameroon, Colombia, Common Wealth of Dominica, Curacao, Ecuador, El Salvador, Gabon, Ghana, Grenada, Haiti, Honduras, Indonesia, Iraq, Ivory coast, Jordan, Kenya, Kuwait, Laos, Lesotho, Libya, Macau, Madagascar, Malaysia, Marshall islands, Mongolia, Morocco, Myanmar, Namibia, Nicaragua, Nigeria, Oman, Peru, Qatar, Seychelles, South Africa, Srilanka, St. Lucia, St. Martin, St. Vincent, Syria, Tanzania, Thailand, Philippines, Trinidad and Tobago, Tunisia, USTT, Vanuatu, Vietnam, Zimbabwe
SKYACTIV-X 2.0: New Caledonia

Owner Maintenance

Owner Maintenance Precautions

▼ Owner Maintenance Precautions

Routine Service

We highly recommend that these items be inspected daily, or at least every week.

- Engine Oil Level (page 6-28)
- Engine Coolant Level (page 6-30)
- Brake and clutch Fluid Level (page 6-31)
- Washer Fluid Level (page 6-32)
- Battery Maintenance (page 6-40)
- Tyre Inflation Pressure (page 6-44)

Improper or incomplete service may result in problems. This section gives instructions only for items that are easy to perform.

As explained in the Introduction (page 6-2), several procedures can be done only by a qualified service technician with special tools.

Improper do-it yourself maintenance during the warranty period may affect warranty coverage. For details, read the separate Mazda Warranty statement provided with the vehicle. If you are unsure about any servicing or maintenance procedure, have it done by an expert repairer, we recommend an Authorised Mazda Repairer.

There are strict environmental laws regarding the disposal of waste oil and fluids. Please dispose of your waste properly and with due regard to the environment.

We recommend that you entrust the oil and fluid changes of your vehicle to an Authorised Mazda Repairer.



Do not perform maintenance work if you lack sufficient knowledge and experience or the proper tools and equipment to do the work. Have maintenance work done by a qualified technician:

Performing maintenance work on a vehicle is dangerous if not done properly. You can be seriously injured while performing some maintenance procedures.

If you must run the engine while working under the bonnet, make certain that you remove all jewellery (especially rings, bracelets, watches, and necklaces) and all neckties, scarves, and similar loose clothing before getting near the engine or cooling fan which may turn on unexpectedly:

Working under the bonnet with the engine running is dangerous. It becomes even more dangerous when you wear jewellery, loose clothing or have long hair or a long beard.

Either can become entangled in moving parts and result in injury.



Pull over to a safe location, then switch the ignition off and make sure the fan is not running before attempting to work near the cooling fan:

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.

Do not leave items in the engine compartment:

After you have finished checking or doing servicing in the engine compartment, do not forget and leave items such as tools or rags in the engine compartment.

Tools or other items left in the engine compartment could cause engine damage or a fire leading to an unexpected accident.

Bonnet

▼ Bonnet


⚠ WARNING

Always check that the bonnet is closed and securely locked:


A bonnet that is not closed and securely locked is dangerous as it could fly open while the vehicle is moving and block the driver's vision which could result in a serious accident.

▼ Opening the Bonnet

- With the vehicle parked, pull the release handle to unlock the bonnet.

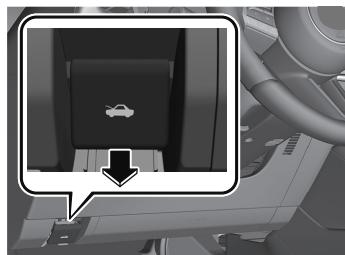


- Insert your hand into the bonnet opening, slide the latch lever to the left, and lift up the bonnet.

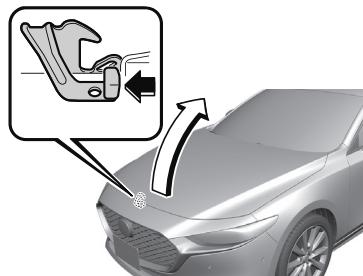

Owner Maintenance

3. Grasp the support rod in the padded area and secure it in the support rod hole indicated by the arrow to hold the bonnet open.

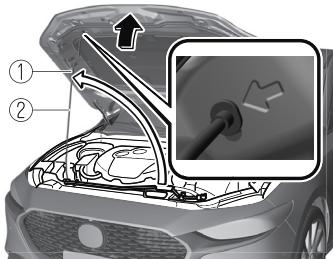


1. Pad
2. Support rod

▼ Closing the Bonnet

1. Check under the bonnet area to make certain all filler caps are in place and all loose items (e.g. tools, oil containers, etc.) have been removed.

2. Lift the bonnet, grasp the padded area on the support rod, and secure the support rod in the clip. Verify that the support rod is secured in the clip before closing the bonnet.

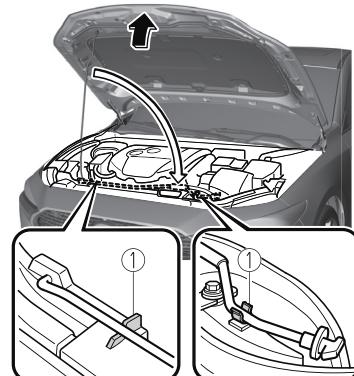

1. Clip

3. Lower the bonnet slowly to a height of about 20 cm (7.9 in) above its closed position and then let it drop.


CAUTION

When closing the bonnet, do not push it excessively such as by applying your weight. Otherwise, the bonnet could be deformed.

Engine Compartment Overview

▼ Engine Compartment Overview


SKYACTIV-G 1.5, SKYACTIV-G 2.0, and SKYACTIV-G 2.5

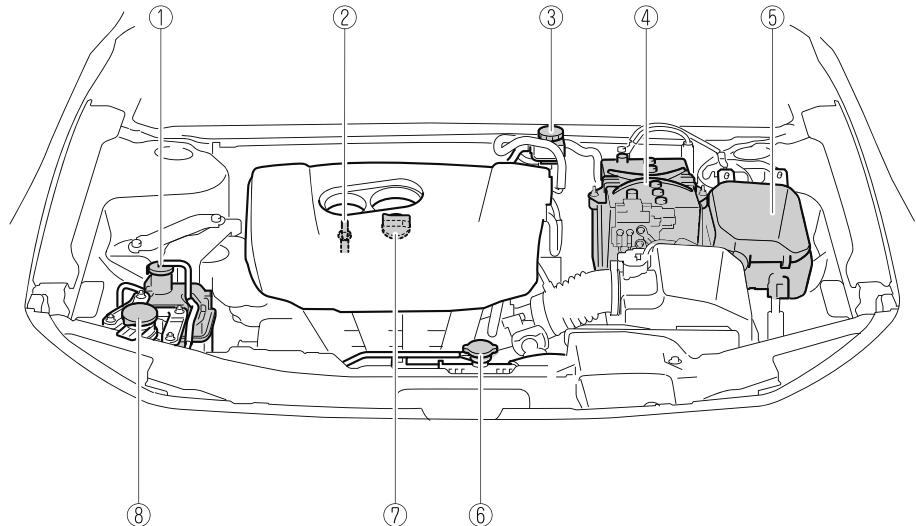

1. Engine coolant reservoir
2. Engine oil dipstick
3. Brake/Clutch fluid reservoir
4. Battery
5. Fuse block
6. Cooling system cap
7. Engine oil-filler cap
8. Windscreens washer fluid reservoir

Owner Maintenance


SKYACTIV-X 2.0

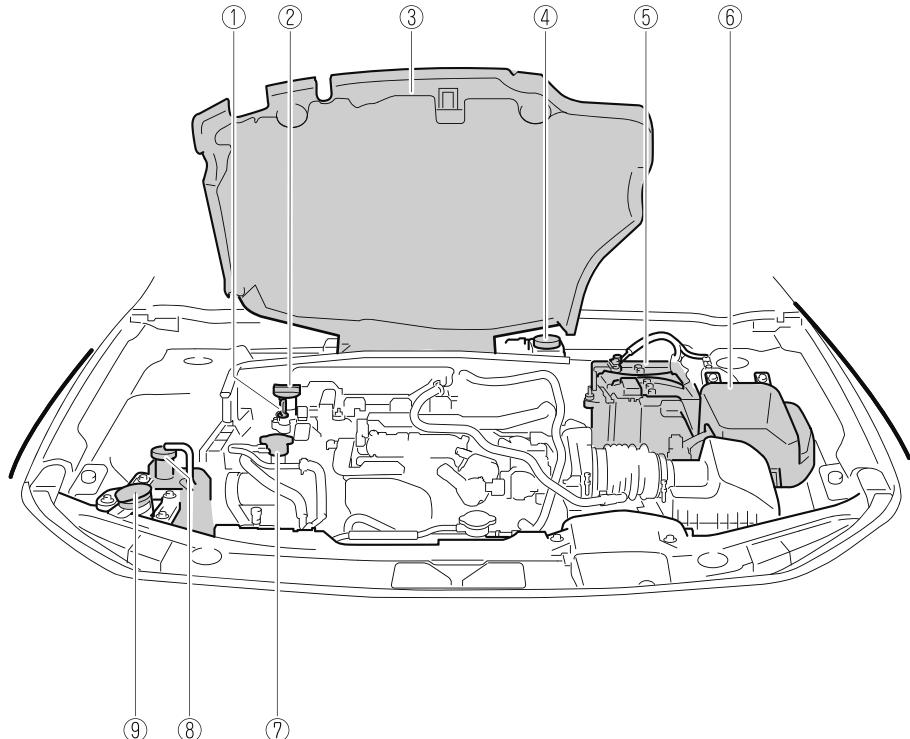


1. Engine oil dipstick
2. Engine oil-filler cap
3. Engine cover
4. Brake/Clutch fluid reservoir
5. Battery
6. Fuse block
7. Cooling system cap
8. Engine coolant reservoir
9. Windscreen washer fluid reservoir

Opening the engine cover


1. Turn the engine cover knob to unlock.

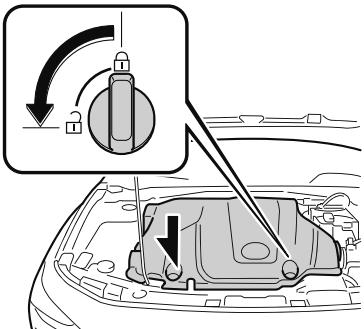


2. Lift up the engine cover.

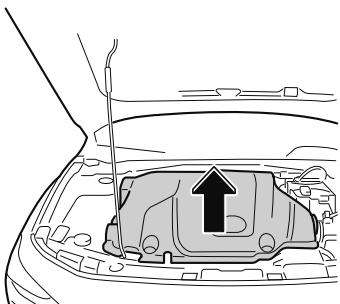

3. Pinch the strap and remove it from the holder.

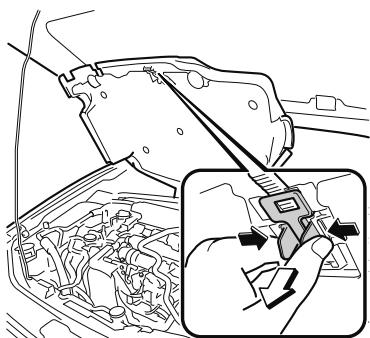


4. Hook the strap onto the bonnet hook to secure the cover.

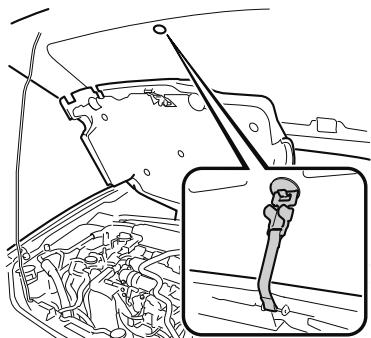


Closing the engine cover

1. Unhook the strap from the bonnet hook.

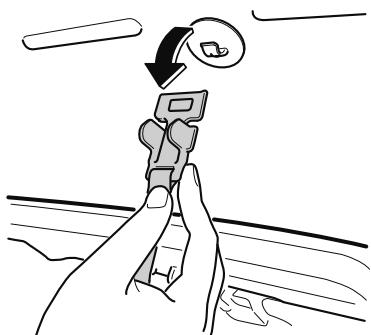


2. Pinch the strap and press it in until a click sound is heard, and store.

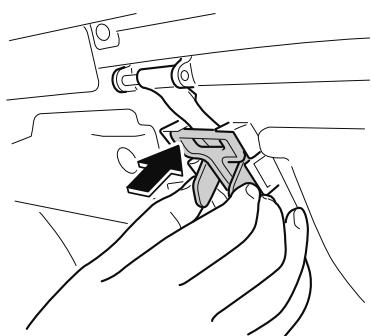


Owner Maintenance

3. Close the engine cover, turn the knob, and then lock the cover.

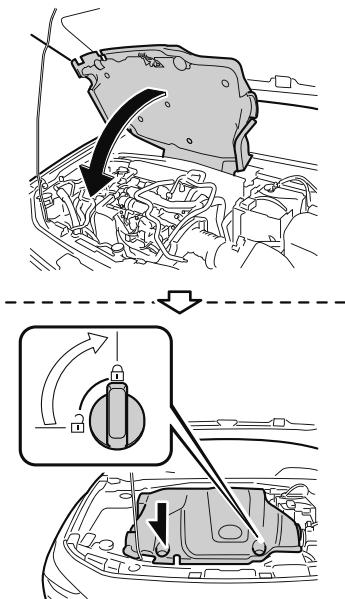

4. Make sure that the engine cover is securely closed.

SKYACTIV-D 1.8

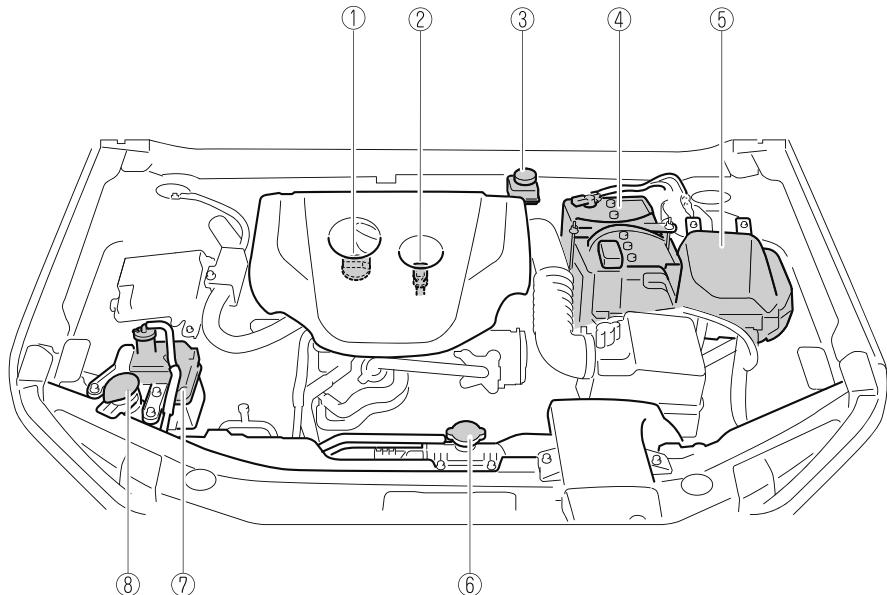

1. Engine oil-filler cap
2. Engine oil dipstick
3. Brake/Clutch fluid reservoir
4. Battery
5. Fuse block
6. Cooling system cap
7. Engine coolant reservoir
8. Windscreen washer fluid reservoir

Engine Oil

▼ Engine Oil

 
 
 
 
NOTE

Changing the engine oil should be done by an expert repairer; we recommend an Authorised Mazda Repairer.

▼ Recommended Oil




In order to keep the maintenance interval (page 6-3) and to protect the engine from damage caused by poor lubrication, it is vitally important to make use of engine oil with the correct specification. Do not use oils which do not meet the following specifications or requirements. Use of unsuitable oil may lead to engine damage which is not covered by the Mazda Warranty.

SKYACTIV-G 1.5, SKYACTIV-G 2.0, and SKYACTIV-G 2.5 (Europe and Taiwan)

Temperature Range SAE Viscosity Numbers		
Grade		
Recommended oils		
Mazda Original Oil Supra-X 0W-20		
Mazda Original Oil Ultra 5W-30		
Alternative Oil Quality		
*1 API SN or higher, or ACEA A5/B5	0W-20	
	5W-30	




*1 Use API SM or higher in Kazakhstan.

   (Except Europe and Taiwan)




Temperature Range SAE Viscosity Numbers	
Grade	
API SL or higher, or ILSAC GF-III or higher	  

Owner Maintenance



 
 
 
SKYACTIV-X 2.0 (Europe and Taiwan)

Temperature Range SAE Viscosity Numbers	
Grade	
Recommended oils	
Mazda Original Oil Supra-X 0W-20	
Alternative Oil Quality	
API SN or higher	

 
 
 
(Except Europe and Taiwan)

Temperature Range SAE Viscosity Numbers	
Grade	
API SN or higher	 

     SKYACTIV-D 1.8 (Europe and Taiwan)

Temperature Range SAE Viscosity Numbers	
Grade	
Recommended oils	
Mazda Original Oil Supra DPF 0W-30	
Mazda Original Oil Ultra DPF 5W-30	
Alternative Oil Quality	
ACEA C3	 

   (Except Europe and Taiwan)

Temperature Range SAE Viscosity Numbers	
Grade	
ACEA C3	 

Engine oil viscosity, or thickness, has an effect on fuel economy and cold-weather operation (starting and oil flow).

Low-viscosity engine oils can provide improved fuel economy and cold-weather performance.

When choosing an oil, consider the temperature range your vehicle will operate in before the next oil change.

Then select the recommended viscosity from the chart.

! CAUTION

- *Using oils of viscosity besides those recommended for specific temperature ranges could result in engine damage.*
- **(SKYACTIV-D 1.8)**
SKYACTIV-D 1.8 uses specified oil. Please confirm the specification in owner's manual. If engine oil other than the specified oil is used, the Diesel Particulate Filter effective period of use will be shortened or the Diesel Particulate Filter may be damaged.

 
NOTE

(SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5, and SKYACTIV-X 2.0)

- *It is normal for all engines to consume engine oil under normal driving conditions. Engine oil consumption may be as high as 0.8 L/1,000 km (1 L/800 miles). This may be as a result of evaporation, internal ventilation or burning of the lubricating oil in the working engine. Oil consumption may be higher when the engine is new due to the running-in process. Oil consumption is also dependant on engine speed and engine load. Under extreme driving conditions, oil consumption may be higher.*

(SKYACTIV-D 1.8)

- *Inspect the engine oil level periodically. When inspecting the engine oil, if the engine oil level is exceeds the "X" mark on the dipstick, replace the engine oil. When replacing the engine oil, inspect the oil level using the oil dipstick and refill so that the engine oil level is within the range between MIN and MAX as shown in the figure.*



1. MIN
2. MAX
3. X Mark

Owner Maintenance

- Whenever the engine oil is replaced, the vehicle's engine control unit needs to be reset as soon as possible. Otherwise the wrench indicator light or engine oil warning light may turn on. To reset the engine control unit, consult an expert repairer; we recommend an Authorised Mazda Repairer or refer to the vehicle status monitor section in the *MZD Connect Owner's Manual*.


▼ Inspecting Engine Oil Level

NOTE

- If the engine oil level warning indication/warning light turns on, add 1 L (0.3 US gal, 0.2 Imp gal) of engine oil.
- (SKYACTIV-D 1.8)**
If "Excessive Oil Level. Have the Vehicle Inspected" is displayed on the multi-information display in the instrument cluster, have your vehicle inspected at an Authorised expert repairer; we recommend an Authorised Mazda Repairer.


- Be sure the vehicle is on a level surface.
- Warm up the engine to normal operating temperature.
- Turn it off and wait at least 5 minutes for the oil to return to the sump.
- NOTE**
(SKYACTIV-X 2.0)
Open the engine cover (page 6-19).
Pull out the dipstick, wipe it clean, and reinser it fully.

SKYACTIV-G 1.5, SKYACTIV-G 2.0, and SKYACTIV-G 2.5

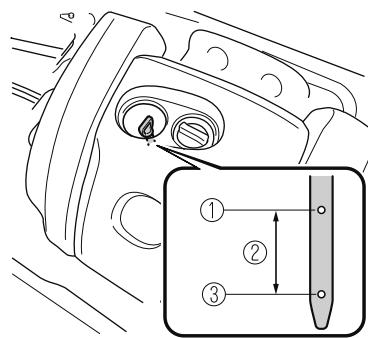


- MAX
- OK
- MIN

SKYACTIV-X 2.0

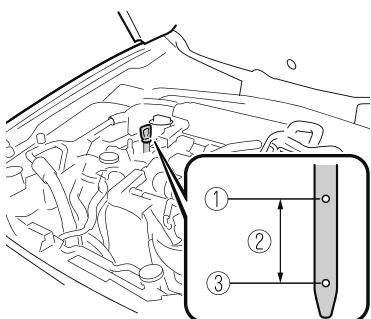

1. MAX
2. OK
3. MIN

SKYACTIV-D 1.8

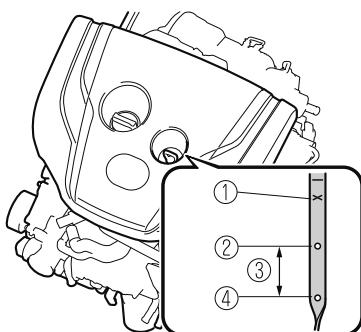

1. X Mark
2. MAX
3. OK
4. MIN

NOTE

(SKYACTIV-D 1.8)

When inspecting the engine oil level, pull out the dipstick straight without twisting. In addition, when inserting the dipstick, always insert it without twisting so that the "X" mark faces the front of the vehicle.

5. Pull it out again and examine the level. The level is normal if it is between the MIN and MAX marks. If it is near or below MIN, add enough oil to bring the level to MAX.

CAUTION

Do not overfill the engine oil. This may cause engine damage.

6. Make sure the O-ring on the dipstick is positioned properly before reinserting the dipstick.
7. Reinsert the dipstick fully.

Engine Coolant

▼ Inspecting Coolant Level

WARNING

Do not use a match or live flame in the engine compartment. DO NOT ADD COOLANT WHEN THE ENGINE IS HOT:
 A hot engine is dangerous. If the engine has been running, parts of the engine compartment can become very hot. You could be burned. Carefully inspect the engine coolant in the coolant reservoir, but do not open it.



Pull over to a safe location, then switch the ignition off and make sure the fan is not running before attempting to work near the cooling fan:

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.



Do not remove either cooling system cap when the engine and radiator are hot:

When the engine and radiator are hot, scalding coolant and steam may shoot out under pressure and cause serious injury.


NOTE

If the replacement is not done using the correct procedure indicated in the service manual, it could cause an engine malfunction. Consult an expert repairer for details. We recommend an Authorised Mazda Repairer.

Inspect the antifreeze protection and coolant level in the coolant reservoir at least once a year—at the beginning of the winter season—and before travelling where temperatures may drop below freezing.

Inspect the condition and connections of all cooling system and heater hoses. Replace any that are swollen or deteriorated.

The coolant should be at full in the radiator and between the FULL and LOW marks on the coolant reservoir when the engine is cool.

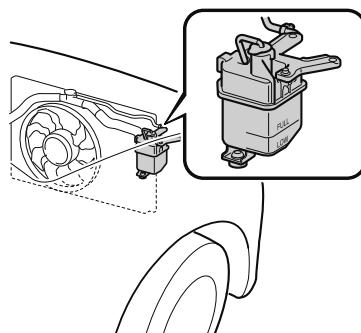


If it is at or near LOW, add enough coolant to the coolant reservoir to provide freezing and corrosion protection and to bring the level to FULL.

Securely tighten the coolant reservoir tank cap after adding coolant.

! CAUTION

- *Radiator coolant will damage paint. Rinse it off quickly if spilled.*
- *If the "FL22" mark is shown on or near the cooling system cap, use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.*

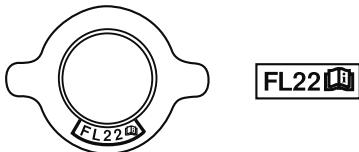

If the coolant reservoir is empty or new coolant is required frequently, consult an expert repairer, we recommend an Authorised Mazda Repairer.

Brake/Clutch Fluid

▼ **Inspecting Brake/Clutch Fluid Level**

! WARNING

If the brake/clutch fluid level is low, have the brakes inspected:

A low brake/clutch fluid level is dangerous. A low level could indicate brake lining wear or a brake system leak which could cause the brakes to fail and lead to an accident.


The brakes and clutch draw fluid from the same reservoir.

Inspect the fluid level in the reservoir regularly. It should be kept between the MAX and MIN lines.

The level normally drops with accumulated distance, a condition associated with wear of brake and clutch linings. If it is excessively low, have the brake/clutch system inspected by an expert repairer, we recommend an Authorised Mazda Repairer.


Left-hand drive model

Without M Hybrid

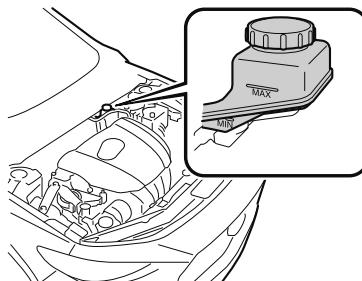


Owner Maintenance

With M Hybrid

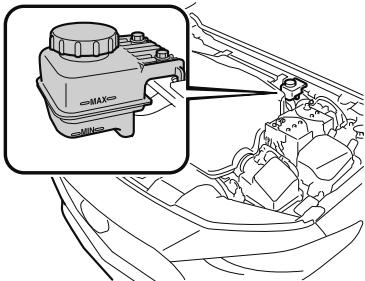


Right-hand drive model

Without M Hybrid

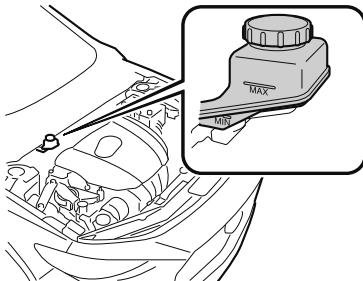

With M Hybrid

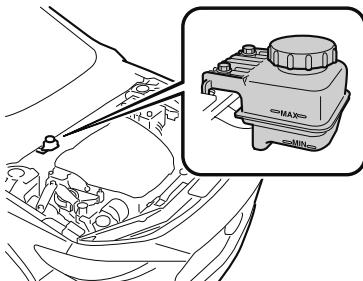

Window and Headlight Washer Fluid


▼ Inspecting Washer Fluid Level

⚠ WARNING

Use only windscreen washer fluid or plain water in the reservoir:

Using radiator antifreeze as washer fluid is dangerous. If sprayed on the windscreen, it will dirty the windscreen, affect your visibility, and could result in an accident.

Inspect fluid level in the washer fluid reservoir; add fluid if necessary.

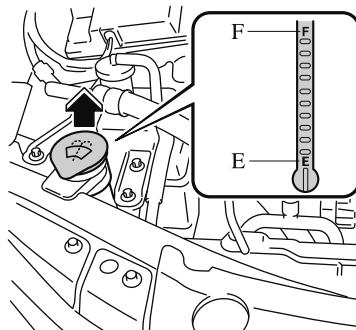

The top of the float should be between F and E.

Use plain water if washer fluid is unavailable.

But use only washer fluid in cold weather to prevent it from freezing.

NOTE

Front and rear washer fluid is supplied from the same reservoir.

Body Lubrication

▼ Body Lubrication

All moving points of the body, such as door and bonnet hinges and locks, should be lubricated each time the engine oil is changed. Use a nonfreezing lubricant on locks during cold weather.

Make sure the bonnet's secondary latch keeps the bonnet from opening when the primary latch is released.

Wiper Blades

▼ Wiper Blades

CAUTION

- Hot waxes applied by automatic car washers have been known to affect the wiper's ability to clean windows.
- To prevent damage to the wiper blades, do not use petrol, paraffin, paint thinner, or other solvents on or near them.
- When the wiper lever is in the AUTO position and the ignition is switched ON, the wipers may move automatically in the following cases:
 - If the windscreen above the rain sensor is touched.
 - If the windscreen above the rain sensor is wiped with a cloth.
 - If the windscreen is struck with a hand or other object.
 - If the rain sensor is struck with a hand or other object from inside the vehicle.

Be careful not to pinch hands or fingers as it may cause injury, or damage the wipers. When washing or servicing the vehicle, make sure the wiper lever is in the OFF position.

- Before lifting the windscreen wiper blades off the windscreen, always follow the procedure for moving the windscreen wiper blades. Otherwise, a wiper blade, wiper arm, or the bonnet could be damaged.
Refer to the Replacing Windscreen Wiper Blades (page on 6-34) section for the procedure on how to move the windscreen wiper blades to the service position.

Owner Maintenance

Contamination of either the windscreen or the blades with foreign matter can reduce wiper effectiveness. Common sources are insects, tree sap, and hot wax treatments used by some commercial car washes.

If the blades are not wiping properly, clean the window and blades with a good cleaner or mild detergent; then rinse thoroughly with clean water. Repeat if necessary.

▼ Replacing Windscreen Wiper Blades

When the wipers no longer clean well, the blades are probably worn or cracked. Replace them.

CAUTION

- To prevent damaging a windscreen wiper blade, wiper arm, or the bonnet, perform the following procedure.
- Before lifting the windscreen wiper blades off the windscreen, always move them to the service position. Refer to the Replacing Windscreen Wiper Blades (page on 6-34) section for the procedure on how to move the windscreen wiper blades to the service position.
- When putting the windscreen wiper blades back on the windscreen, make sure that they are in the service position before switching the ignition ON and operating the windscreen wipers.

- Replace with Mazda genuine wiper blades. If they are replaced with wiper blades other than a Mazda genuine product, they may not wipe with the same efficiency as the genuine product.
- To prevent damage to the wiper arms and other components, do not try to sweep the wiper arm by hand.
- Do not bend the blade rubber unnecessarily when replacing it. Otherwise, the metal stiffener in the blade may deform and the windscreen wiper operation may be adversely affected.
- Do not hold a wiper blade by its end when raising the wiper arm. Otherwise, the part may deform and the wiping performance may lower.

NOTE

- You can replace the wiper blades yourself, however you cannot replace the wiper arms.
If you want to replace the wiper arms, consult an expert repairer; we recommend an Authorised Mazda Repairer.

- Forcefully lowering the wiper arms could damage the wiper arm and blade, and may scratch or crack the windscreens.*


Replace the wiper blades using the following procedure.

1. Move the wipers to the service positions using the following procedure.
 - a) Switch the ignition ON.
 - b) Switch the ignition OFF.
 - c) Press up the wiper switch to the MIST position 2 times within 30 seconds after switching the ignition OFF.
When the procedure is completed, the wipers operate and they stop at the service positions.
2. Raise the wiper arms.


! CAUTION

To prevent damage to the windscreens let the wiper arm down easily, do not let it slap down on the windscreens.

3. Slide the blade component in the direction of the arrow while pressing the wiper arm tab to remove the blade component from the wiper arm.

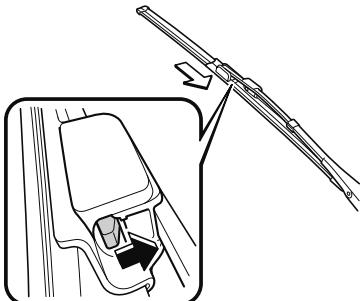


4. Pull the blade rubber in the direction of the arrow and slide it to a position where the blade holder groove can be checked.

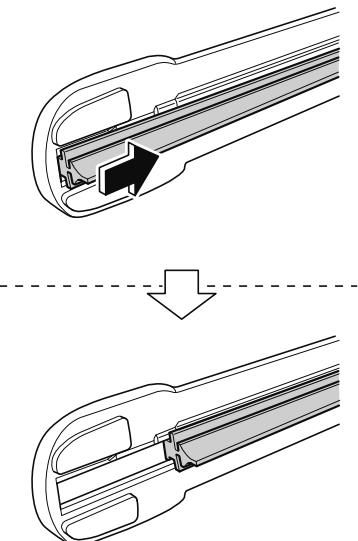


Owner Maintenance


5. Pull the end of the blade rubber from the blade holder groove in the direction of the arrow and remove the blade rubber from the blade holder.

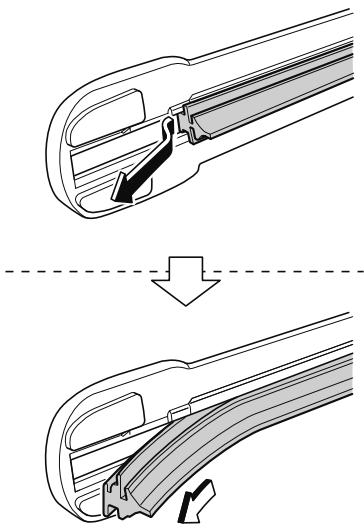


6. Insert the end of the new blade rubber into the groove of the blade holder until it contacts the end of the blade holder.

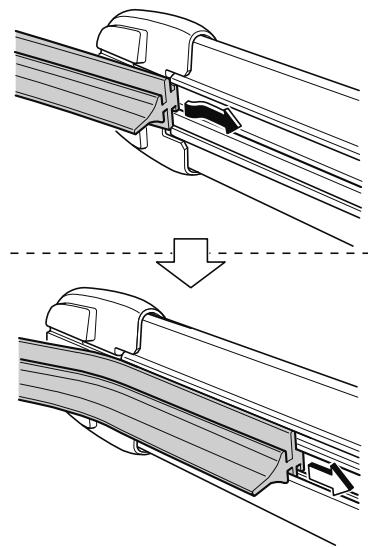

- After pulling the blade rubber in the direction of the arrow and sliding the blade rubber to a position to check the blade holder groove, slide the blade rubber end in the opposite direction.

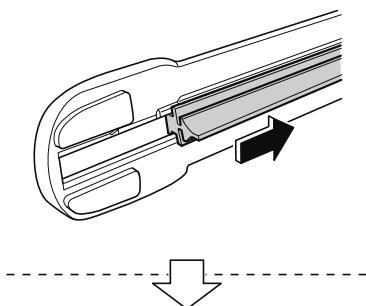

- Make sure that the blade rubber is correctly installed to the blade holder.
- Slide the blade component and install it to the wiper arm.

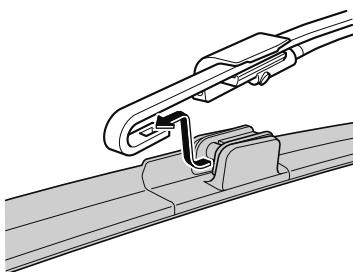

- Slowly lower the wiper arms onto the windscreen.

- Move the wipers to their initial positions using the following procedure.
 - Make sure that the wipers are set on the windscreen.
 - Switch the ignition ON.
 - Press up the wiper switch to the MIST position 1 time.When the procedure is completed, the wipers operate and they stop at the initial positions.


▼ Replacing Rear Window Wiper Blade (Hatchback)

When the wiper no longer cleans well, the blade is probably worn or cracked. Replace it.

CAUTION

To prevent damage to the wiper arm and other components, do not move the wiper by hand.

- Raise the wiper arm and rotate the wiper blade to the right until it unlocks, then remove the blade.

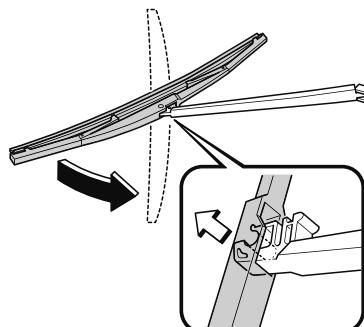


Owner Maintenance


CAUTION

*To prevent damage to the rear window,
do not let the wiper arm fall on it.*

2. Pull down the blade rubber and slide it out of the blade holder.

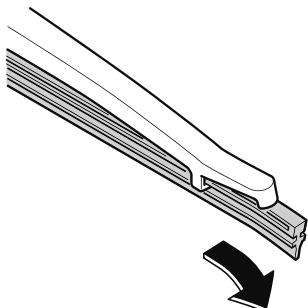


3. Remove the metal stiffeners from the blade rubber and install them in the new blade.

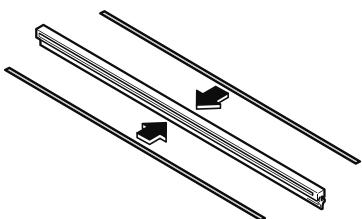

CAUTION

*Do not bend or discard the stiffeners.
You need to use them again.*

4. Carefully insert the new blade rubber. Then install the blade assembly in the reverse order of removal.

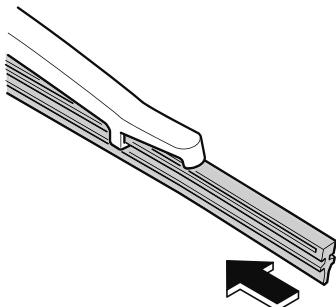

Battery

▼ Battery

WARNING



Read the following precautions carefully before using the battery or inspecting to ensure safe and correct handling:



Always wear eye protection when working near the battery:

Working without eye protection is dangerous. Battery fluid contains SULPHURIC ACID which could cause blindness if splashed into your eyes. Also, hydrogen gas produced during normal battery operation, could ignite and cause the battery to explode.



Wear eye protection and protective gloves to prevent contact with battery fluid:

Spilled battery fluid is dangerous. Battery fluid contains SULPHURIC ACID which could cause serious injuries if it gets in eyes, or on the skin or clothing. If this happens, immediately flush your eyes with water for 15 minutes or wash your skin thoroughly and get medical attention.



Always keep batteries out of the reach of children:

Allowing children to play near batteries is dangerous. Battery fluid could cause serious injuries if it gets in the eyes or on the skin.



Keep flames and sparks away from open battery cells and do not allow metal tools to contact the positive (+) or negative (-) terminal of the battery when working near a battery. Do not allow the positive (+) terminal to contact the vehicle body:

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.




Keep all flames and sparks away from open battery cells because hydrogen gas is produced from open battery cells while charging the battery or adding battery fluid:

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.


Owner Maintenance

NOTE

Before performing battery maintenance, remove the battery cover.

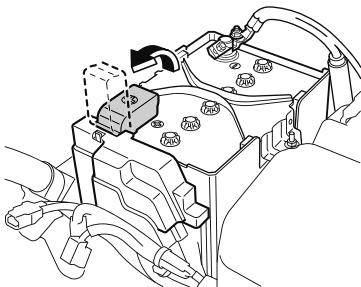

▼ Battery Maintenance

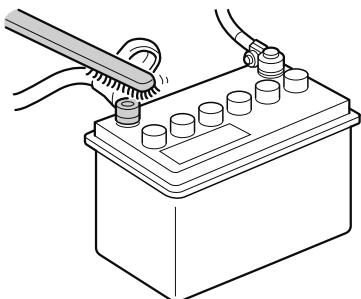


To get the best service from a battery:

- Keep it securely mounted.
- Keep the top clean and dry.
- Keep terminals and connections clean, tight, and coated with petroleum jelly or terminal grease.
- Rinse off spilled electrolyte immediately with a solution of water and baking soda.
- If the vehicle will not be used for an extended time, disconnect the battery leads and charge the battery every 6 weeks.

▼ Inspecting Electrolyte Level

A low level of electrolyte fluid will cause the battery to discharge quickly.

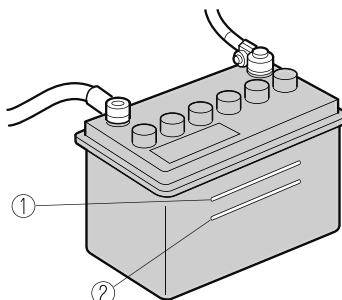

1. Upper level
2. Lower level

Inspect the electrolyte level at least once a week. If it is low, remove the caps and add enough distilled water to bring the level between the upper and lower level (illustration).

Do not overfill.

Examine the specific gravity of the electrolyte with a hydrometer, especially during cold weather. If it is low, recharge the battery.

▼ Battery Recharging

NOTE

- Before performing maintenance or recharging the battery, turn off all accessories and stop the engine.
- To disconnect the battery, remove the negative lead first. Install it last when connecting the battery.
- Be sure to remove the caps before recharging the battery.
- **(With i-stop system)**
Do not quick-charge the battery.

- If the battery quickly discharges because, for example, the lights were left on too long with the engine off, slow-charge it as required by battery size and charger capacity.
- If the battery gradually discharges because of high electric load while the vehicle is being used, recharge it as required by battery size and charger capacity.

▼ Battery Replacement

Contact an Authorised Mazda Repairer for a battery replacement purchase.

Key Battery Replacement

▼ Key Battery Replacement

If the buttons on the transmitter are inoperable and the operation indicator light does not flash, the battery may be dead.

Replace with a new battery before the transmitter becomes unusable.

CAUTION

- Make sure the battery is installed correctly. Battery leakage could occur if it is not installed correctly.
- When replacing the battery, be careful not to touch any of the internal circuitry and electrical terminals, bend the electrical terminals, or get dirt in the transmitter as the transmitter could be damaged.
- There is the danger of explosion if the battery is not correctly replaced.
- Dispose of used batteries according to the following instructions.
 - Insulate the plus and minus terminals of the battery using cellophane or equivalent tape.
 - Never disassemble.
 - Never throw the battery into fire or water.
 - Never deform or crush.
- Replace only with the same type battery (CR2032 or equivalent).

The following conditions indicate that the battery power is low:

- The KEY warning indication/warning light (red) in the instrument cluster turns on and a message, “Low Key Fob

Owner Maintenance


Battery. Replace Battery”, is displayed on the multi-information display when the ignition is switched OFF.

- The system does not operate and the operation indicator light on the transmitter does not flash when the buttons are pressed.
- The system's operational range is reduced.


Replacing the battery at an Authorised Mazda Repairer is recommended to prevent damage to the key. If replacing the battery by yourself, follow the instruction.

Replacing the key battery


1. Remove the lower cover while pressing the knob in the direction of the arrow.

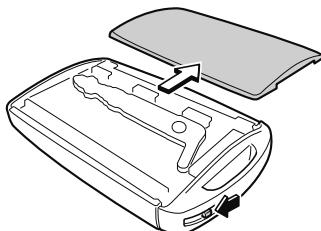


2. Press in the tab to unlock the upper cover.

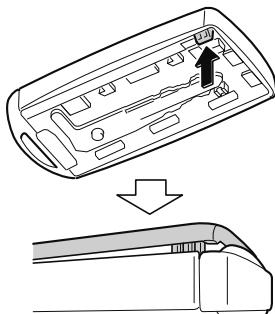


3. Insert a tape-wrapped flathead screwdriver into the gap and slide it in the direction of the arrow.

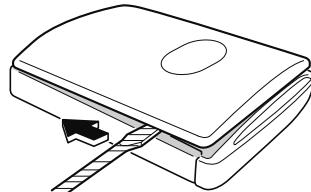


4. Twist the flathead screwdriver in the direction of the arrow and remove the upper cover.

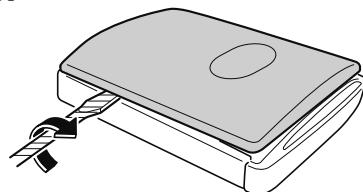


5. Remove the cap using the tape-wrapped flathead screwdriver.

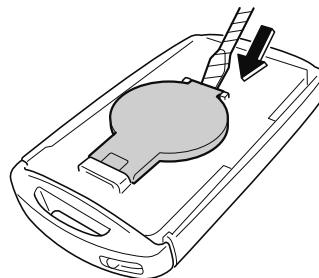


6. Remove the battery using tape-wrapped flathead screwdriver.

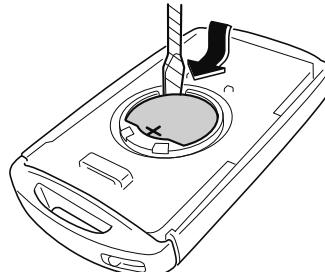


7. Insert a new battery into the transmitter so that the positive pole is facing up.
8. Install the cap.

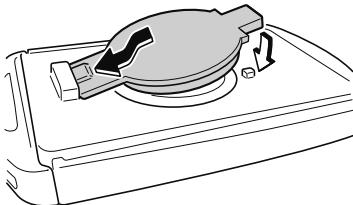

9. Install the upper cover.

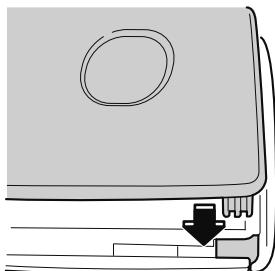

10. Insert the tabs of the lower cover into the slots of the transmitter and install the lower cover.

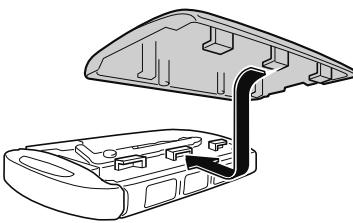

Tyres

▼ Tyres

For reasons of proper performance, safety, and better fuel economy, always maintain recommended tyre inflation pressures and stay within the recommended load limits and weight distribution.

WARNING

Using Different Tyre Types:

Driving your vehicle with different types of tyres is dangerous. It could cause poor handling and poor braking; leading to loss of control.

Except for the limited use of the temporary spare tyre, use only the same type tyres (radial, bias-belted, bias-type) on all four wheels.

Using Wrong-Sized Tyres:

Using any other tyre size than what is specified for the vehicle (page 9-11) is dangerous. It could seriously affect ride, handling, ground clearance, tyre clearance, and speedometer calibration. This could cause you to have an accident. Use only tyres that are the correct size specified for the vehicle.

Owner Maintenance

▼ Tyre Inflation Pressure

WARNING

Always inflate the tyres to the correct pressure:

Overinflation or underinflation of tyres is dangerous. Adverse handling or unexpected tyre failure could result in a serious accident.

Refer to Tyres on page 9-11.

Use only a Mazda-genuine tyre valve cap:

Use of a non-genuine part is dangerous as the correct tyre air pressure cannot be maintained if the tyre valve becomes damaged. If the vehicle is driven under this condition, the tyre air pressure will decrease which could result in a serious accident. Do not use any part for the tyre valve cap that is not a Mazda-genuine part.

Inspect all tyre pressures monthly (including the spare*) when the tyres are cold. Maintain recommended pressures for the best ride, handling, and minimum tyre wear.

Refer to the specification charts (page 9-11).

NOTE

- Always check tyre pressure when tyres are cold.
 - Warm tyres normally exceed recommended pressures. Do not release air from warm tyres to adjust the pressure.
 - Underinflation can cause reduced fuel economy, uneven and accelerated tyre wear, and poor sealing of the tyre bead, which will deform the wheel and cause separation of tyre from rim.
 - Overinflation can produce a harsh ride, uneven and accelerated tyre wear, and a greater possibility of damage from road hazards.
- Keep your tyre pressure at the correct levels. If one frequently needs inflating, have it inspected.

▼ Tyre Rotation



WARNING

Rotate tyres periodically:

Irregular tyre wear is dangerous. To equalize tread wear for maintaining good performance in handling and braking, rotate the tyres periodically or sooner if irregular wear develops.


Please refer to Scheduled maintenance for your tyre rotation interval.

During rotation, inspect them for correct balance.

NOTE

(Without temporary spare tyre)

Because your vehicle is not equipped with a spare tyre, you cannot do a tyre rotation safely with the jack that comes with your vehicle. Have an expert repairer; we recommend an Authorised Mazda Repairer perform tyre rotation.

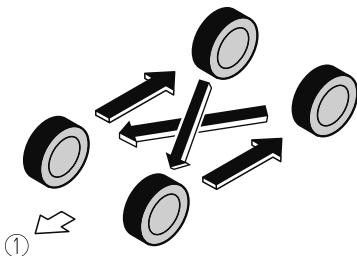

1. Forward

Do not include (TEMPORARY USE ONLY) spare tyre in rotation.

Also, inspect them for uneven wear and damage. Abnormal wear is usually caused by one or a combination of the following:

- Incorrect tyre pressure
- Improper wheel alignment
- Out-of-balance wheel
- Severe braking

After rotation, inflate all tyre pressures to specification (page 9-11) and inspect the wheel nuts for tightness.



CAUTION

Rotate unidirectional tyres and radial tyres that have an asymmetrical tread pattern or studs only from front to rear, not from side to side. Tyre performance will be reduced if rotated from side to side.

▼ Replacing a Tyre



WARNING

Always use tyres that are in good condition:

Driving with worn tyres is dangerous. Reduced braking, steering, and traction could result in an accident.


Replace all four tyres at the same time:

Replacing just one tyre is dangerous. It could cause poor handling and poor braking resulting in loss of vehicle control. Mazda strongly recommends that you replace all four tyres at the same time.

Owner Maintenance

If a tyre wears evenly, a wear indicator will appear as a solid band across the tread.

Replace the tyre when this happens.

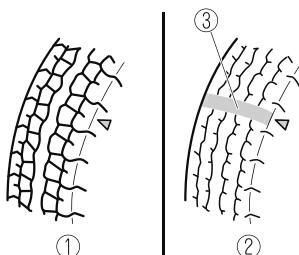

1. New tread
2. Worn tread
3. Tread wear indicator

You should replace the tyre before the band crosses the entire tread.

▼ Temporary Spare Tyre*

Inspect the temporary spare tyre at least monthly to make sure it is properly inflated and stored.

NOTE

The temporary spare tyre condition gradually deteriorates even if it has not been used.

The temporary spare tyre is easier to handle because of its construction which is lighter and smaller than a conventional tyre. This tyre should be used only for an emergency and only for a short distance.

Use the temporary spare tyre only until the conventional tyre is repaired, which should be as soon as possible.

Refer to Tyre on page 9-11.

CAUTION

- Do not use your temporary spare tyre rim with a snow tyre or a conventional tyre. Neither will properly fit and could damage both tyre and rim.
- The temporary spare tyre has a tread life of less than 5,000 km (3,000 miles). The tread life may be shorter depending on driving conditions.
- The temporary spare tyre is for limited use, however, if the tread wear solid-band indicator appears, replace the tyre with the same type of temporary spare (page 6-45).

▼ Replacing a Wheel

WARNING

Always use wheels of the correct size on your vehicle:

Using a wrong-sized wheel is dangerous. Braking and handling could be affected, leading to loss of control and an accident.

CAUTION

A wrong-sized wheel may adversely affect:

- Tyre fit
- Wheel and bearing life
- Ground clearance
- Snow-chain clearance
- Speedometer calibration
- Headlight aim
- Bumper height
- Tyre Pressure Monitoring System*

NOTE

- When replacing a wheel, make sure the new one is the same as the original factory wheel in diameter, rim width, and offset (inset/outset).
- For details, contact an expert repairer; we recommend an Authorised Mazda Repairer.


Proper tyre balancing provides the best riding comfort and helps reduce tread wear. Out-of-balance tyres can cause vibration and uneven wear, such as cupping and flat spots.

Light Bulbs

▼ Light Bulbs


Front

Type A

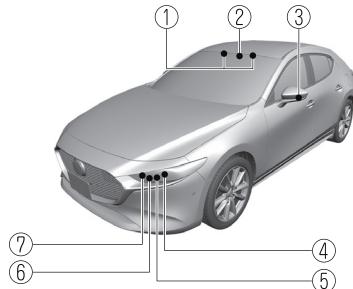


1. Vanity mirror lights*
2. Front overhead lights/Front map lights
3. Side direction indicator lights
4. Headlights (High/Low beam)
5. Running lights/Position lights
6. Headlights (Wide-range low beam)
7. Front direction indicator lights

Type B

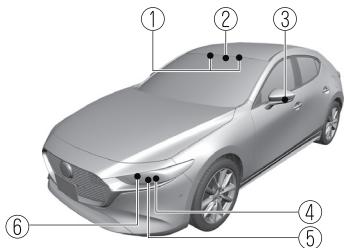


1. Vanity mirror lights*
2. Front overhead lights/Front map lights
3. Side direction indicator lights
4. Headlights (High/Low beam)
5. Running lights/Position lights
6. Front direction indicator lights

*Some models.

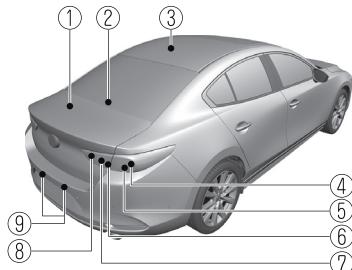Rear**Saloon**

1. Boot light
2. High-mount brake light
3. Rear overhead light
4. Brake lights/Tail lights
5. Rear direction indicator lights
6. Tail lights*
7. Reverse lights
8. Rear fog light*
9. Number plate lights

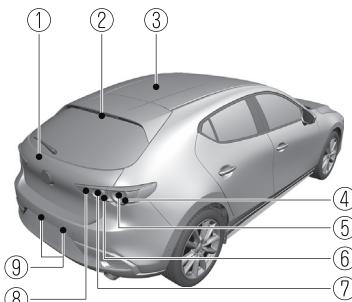Hatchback

1. Luggage compartment light
2. High-mount brake light
3. Rear overhead light
4. Brake lights/Tail lights
5. Rear direction indicator lights
6. Tail lights*
7. Reverse lights
8. Rear fog light*

9. Number plate lights
CAUTION

When removing the lens or lamp unit using a flathead screwdriver, make sure that the flathead screwdriver does not contact the interior terminal. If the flathead screwdriver contacts the terminal, a short circuit may occur.

NOTE

- When replacing a bulb, contact an expert repairer; we recommend an Authorised Mazda Repairer if necessary.
- Use the protective cover and carton for the replacement bulb to dispose of the old bulb promptly and out of the reach of children.
- For details regarding the installation positions of the interior lights, refer to the following:
 - Vanity mirror lights
Refer to Vanity Mirrors on page 5-32.
 - Front overhead lights/front map lights, rear overhead light, and luggage compartment light
Refer to Interior Lights on page 5-33.

▼ Replacing Exterior Light Bulbs

The exterior lights have either LEDs or normal bulbs.

Only the bulb for a running lights/position lights (type B) can be replaced.

LED type


- Headlights
- Running lights (Type A)
- Position lights (Type A)
- Front direction indicator lights
- Side direction indicator lights
- High-mount brake light
- Rear direction indicator lights
- Brake lights
- Tail lights
- Reverse lights
- Rear fog lights
- Number plate lights

The LED bulb cannot be replaced as a single unit because it is an integrated unit. The LED bulb has to be replaced with the unit. We recommend an Authorised Mazda Repairer if the replacement is necessary.


Bulb type

Running lights/Position lights (Type B)

1. Make sure the ignition is switched off, and the headlight switch is off.
2. If you are changing the left bulb, start the engine, turn the steering wheel all the way to the right, and turn off engine. If you are changing the right bulb, turn the steering wheel to the left.
3. Pull the centre of each plastic retainer and remove the retainers.

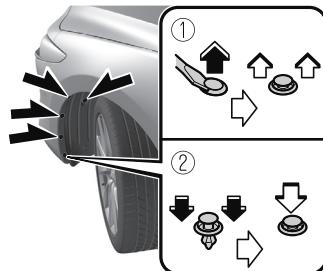


1. Removal
2. Installation
4. Pull the centre of each plastic retainer and remove the retainers.

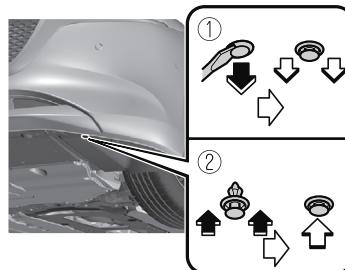


1. Removal
2. Installation

5. Turn the screw anticlockwise and remove it, and then partially peel back the mudguard.

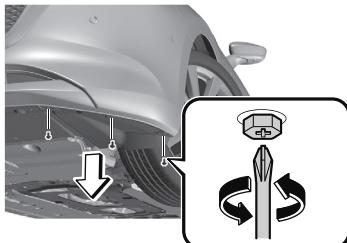

6. Turn the socket and bulb assembly anticlockwise and remove it.

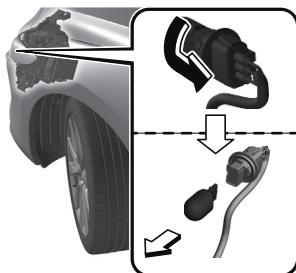

7. Disconnect the bulb from the socket.
8. Install the new bulb in the reverse order of the removal procedure.

▼ Replacing Interior Light Bulbs

LED type


- Front overhead lights/Front map lights
- Rear overhead light
- Vanity mirror lights*
- Luggage compartment light

The LED bulb cannot be replaced as a single unit because it is an integrated unit. The LED bulb has to be replaced with the unit. We recommend an Authorised Mazda Repairer if the replacement is necessary.

Bulb type

Boot light (Saloon)

1. Press both sides of the lens cap to remove it.
2. Disconnect the bulb by pulling it out.

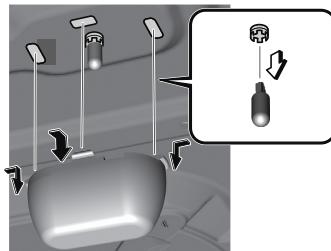

3. Install the new bulb in the reverse order of the removal procedure.

Fuses

▼ Fuses

Your vehicle's electrical system is protected by fuses.

If any lights, accessories, or controls do not work, inspect the appropriate circuit protector. If a fuse has blown, the inside element will be melted.


If the same fuse blows again, avoid using that system and consult an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

▼ Fuse Replacement


Replacing the fuses on the vehicle's left side

If the electrical system does not work, first inspect the fuses on the vehicle's left side.


1. Make sure the ignition is switched off, and other switches are off.
2. Open the fuse panel cover.

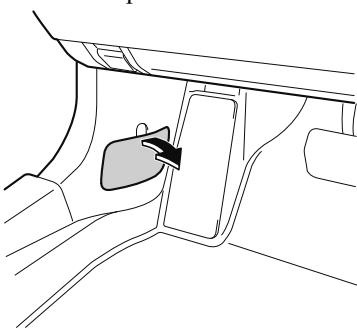

3. Pull the fuse straight out with the fuse puller provided on the fuse block located in the engine compartment.

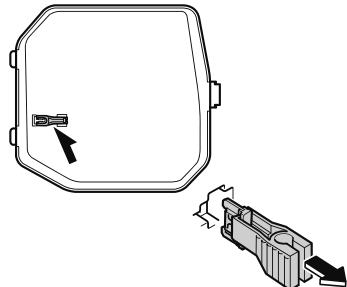

4. Inspect the fuse and replace it if it is blown.

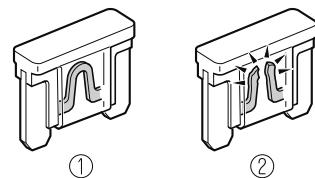

1. Normal
2. Blown
5. Insert a new fuse of the same amperage rating, and make sure it fits tightly. If it does not fit tightly, have an expert install it. We recommend an Authorised Mazda Repairer. If you have no spare fuses, borrow one of the same rating from a circuit not essential to vehicle operation, such as the audio or accessory socket circuit.

CAUTION

Always replace a fuse with a genuine Mazda fuse or equivalent of the same rating. Otherwise you may damage the electric system.

6. Reinstall the cover and make sure that it is securely installed.

Owner Maintenance


Replacing the fuses under the bonnet

If the headlights or other electrical components do not work and the fuses in the cabin are normal, inspect the fuse block under the bonnet.


If a fuse is blown, it must be replaced.

Follow these steps:


1. Make sure the ignition is switched off, and other switches are off.
2. Remove the fuse block cover.

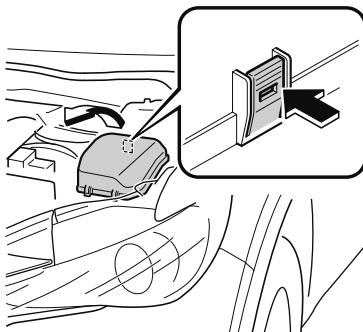

3. If any fuse but the MAIN fuse is blown, replace it with a new one **of the same amperage rating**.

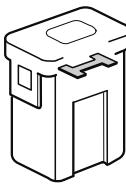

①

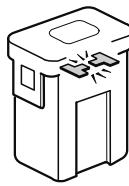

②

1. Normal
2. Blown

WARNING


Do not replace the main fuse by yourself. Have an Authorised Mazda Repairer perform the replacement:

Replacing the fuse by yourself is dangerous because the MAIN fuse is a high current fuse. Incorrect replacement could cause an electrical shock or a short circuit resulting in a fire.

4. Reinstall the cover and make sure that it is securely installed.

▼ Fuse Panel Description

Fuse block (Engine compartment)

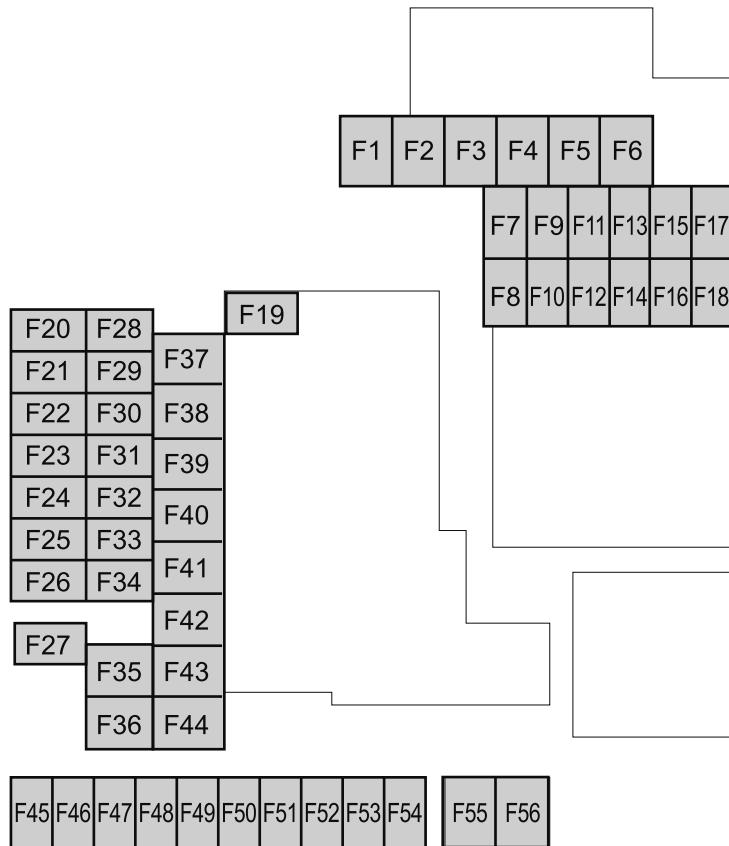

No.	FUSE RAT- ING	PROTECTED COMPONENT
F1	—	—
F2	20 A	Windscreen wiper de-icer*
F3	30 A	Engine control system*
	20 A	Injector*
F4	20 A	S-VT*
F5	40 A	Engine control system
F6	20 A	S-VT*


*Some models.

Owner Maintenance

No.	FUSE RATING	PROTECTED COMPONENT
F7	15 A	Fuel warmer*
	20 A	Fuel pump*
F8	15 A	Engine control system
F9	15 A	Transmission control system*
F10	15 A	Engine control system
F11	7.5 A	Air conditioner
F12	15 A	Engine control system
F13	15 A	NOx sensor*
F14	20 A	Front seat warmer*
F15	20 A	Headlight washer*
F16	15 A	For protection of various circuits
F17	—	—
F18	15 A	Accessory sockets
F19	60 A	Power steering system
F20	15 A	Headlight (LH) 1
F21	15 A	Headlight (RH) 1
F22	15 A	Keyless system
F23	30 A	ABS, Dynamic stability control system
F24	15 A	Headlight (LH) 2
F25	15 A	Headlight (RH) 2
F26	7.5 A	On board diagnostics
F27	25 A	For protection of various circuits
F28	25 A	For protection of various circuits
F29	15 A	Windscreen washer
F30	—	—
F31	15 A	Horn
F32	—	—
F33	—	—
F34	—	—
F35	50A	ABS, Dynamic stability control system
F36	—	—
F37	40 A	Rear window defogger
F38	50 A	For protection of various circuits
F39	—	—
F40	40 A	Air conditioner

No.	FUSE RATING	PROTECTED COMPONENT
F41	—	—
F42	20 A	Windscreen wiper
F43	30 A	Cooling fan*
F44	30 A	For protection of various circuits
F45	10 A	Engine control system
F46	15 A	Audio
F47	15 A	For protection of various circuits
F48	7.5 A	Air bag
F49	15 A	Instrument cluster
F50	15 A	Room lamp
F51	25 A	Audio system
F52	10 A	Sunroof*
F53	15 A	Engine control system
F54	15 A	i-ACTIVSENSE
F55	50 A	For protection of various circuits*
F56	50 A	PTC heater*

Fuse block (Left side)

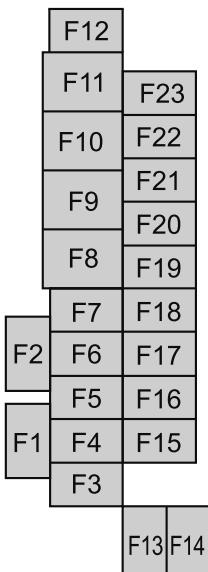

Owner Maintenance

No.	FUSE RATING	PROTECTED COMPONENT
F1	—	—
F2	—	—
F3	—	—
F4	15 A	Power door locks (Driver)
F5	15 A	Power door locks (Passenger)
F6	—	—
F7	—	—
F8	—	—
F9	30 A	Power windows (Driver)
F10	30 A	Power windows (Passenger)
F11	30 A	Power seat (Driver)*
F12	—	—
F13	15 A	Audio
F14	—	—
F15	15 A	Back door lock
F16	15 A	Illumination
F17	10 A	Brake lights
F18	10 A	Back lights
F19	10 A	Rear direction indicator lights
F20	10 A	Tail lights
F21	10 A	Tail lights
F22	7.5 A	Electric steering lock
F23	—	—

Exterior Care

▼ Exterior Care

The paintwork on your Mazda represents the latest technical developments in composition and methods of application.

Environmental hazards, however, can harm the paint's protective properties, if proper care is not taken.

Here are some examples of possible damage, with tips on how to prevent them.

Etching Caused by Acid Rain or Industrial Fallout

Occurrence

Industrial pollutants and vehicle emissions drift into the air and mix with rain or dew to form acids. These acids can settle on a vehicle's finish. As the water evaporates, the acid becomes concentrated and can damage the finish.

And the longer the acid remains on the surface, the greater the chance is for damage.

Prevention

It is necessary to wash and wax your vehicle to preserve its finish according to the instructions in this section. These steps should be taken immediately after you suspect that acid rain has settled on your vehicle's finish.

Damage Caused by Bird Dropping, Insects, or Tree Sap

Occurrence

Bird droppings contain acids. If these are not removed they can eat away the clear and colour base coat of the vehicle's paintwork.

When insects stick to the paint surface and decompose, corrosive compounds form. These can erode the clear and colour base coat of the vehicle's paintwork if they are not removed.

Tree sap will harden and adhere permanently to the paint finish. If you scratch the sap off while it is hard, some vehicle paint could come off with it.

Prevention

It is necessary to have your Mazda washed and waxed to preserve its finish according to the instructions in this section. This should be done as soon as possible.

Bird droppings can be removed with a soft sponge and water. If you are travelling and these are not available, a moistened tissue may also take care of the problem. The cleaned area should be waxed according to the instructions in this section.

Insects and tree sap are best removed with a soft sponge and water or a commercially available chemical cleaner.

Another method is to cover the affected area with dampened newspaper for 1 to 2 hours. After removing the newspaper, rinse off the loosened debris with water.

Appearance Care

Water Marks

Occurrence

Rain, fog, dew, and even tap water can contain harmful minerals such as salt and lime. If moisture containing these minerals settles on the vehicle and evaporates, the minerals will concentrate and harden to form white rings. The rings can damage your vehicle's finish.

Prevention

It is necessary to wash and wax your vehicle to preserve its finish according to the instructions in this section. These steps should be taken immediately after you find water marks on your vehicle's finish.

Paint Chipping

Occurrence

Paint chipping occurs when gravel thrown in the air by another vehicle's tyres hits your vehicle.

How to avoid paint chipping

Keeping a safe distance between you and the vehicle ahead reduces the chances of having your paint chipped by flying gravel.

NOTE

- *The paint chipping zone varies with the speed of the vehicle. For example, when travelling at 90 km/h (56 mph), the paint chipping zone is 50 m (164 ft).*
- *In low temperatures a vehicle's finish hardens. This increases the chance of paint chipping.*

- *Chipped paint can lead to rust forming on your Mazda. Before this happens, repair the damage by using Mazda touch-up paint according to the instructions in this section. Failure to repair the affected area could lead to serious rusting and expensive repairs.*

Follow **all** label and container directions when using a chemical cleaner or polish. Read all warnings and cautions.

▼ Maintaining the Finish

Washing

CAUTION

➤ *Before lifting the windscreen wiper blades off the windscreen, always follow the procedure for moving the windscreen wiper blades. Otherwise, a wiper blade, wiper arm, or the bonnet could be damaged.*
Refer to the *Replacing Windscreen Wiper Blades* (page on 6-34) section for the procedure on how to move the windscreen wiper blades to the service position.

- *When the wiper lever is in the AUTO position and the ignition is switched ON, the wipers may move automatically in the following cases:*
- *If the windscreen above the rain sensor is touched or wiped with a cloth.*
 - *If the windscreen is struck with a hand or other object from either outside or inside the vehicle.*

Keep hands and scrapers clear of the windscreen when the wiper lever is in the AUTO position and the ignition is switched ON as fingers could be pinched or the wipers and wiper blades damaged when the wipers activate automatically. If you are going to clean the windscreen, be sure the wipers are turned off completely (when it is most likely that the engine is left running) this is particularly important when clearing ice and snow.

- *Do not spray water in the engine compartment. Otherwise, it could result in engine-starting problems or damage to electrical parts.*
- *When washing and waxing the vehicle, be careful not to apply excessive force to any single area of the vehicle roof. Otherwise, you could dent the vehicle.*
- *Make sure that the fuel-filler flap is closed and lock the doors. Otherwise, the fuel-filler flap may be forcefully opened by water pressure causing damage to the vehicle or fuel-filler flap.*

To help protect the finish from rust and deterioration, wash your Mazda thoroughly and frequently, at least once a month, with lukewarm or cold water.

If the vehicle is washed improperly, the paint surface could be scratched. Here are some examples of how scratching could occur.

Scratches occur on the paint surface when:

- The vehicle is washed without first rinsing off dirt and other foreign matter.
- The vehicle is washed with a rough, dry, or dirty cloth.

- The vehicle is washed at a car wash that uses brushes that are dirty or too stiff.
- Cleansers or wax containing abrasives are used.

NOTE

- *Mazda is not responsible for scratches caused by automatic car washes or improper washing.*
- *Scratches are more noticeable on vehicles with darker paint finishes.*

To minimize scratches on the vehicle's paint finish:

- Rinse off any dirt or other foreign matter using lukewarm or cold water before washing.
- Use plenty of lukewarm or cold water and a soft cloth when washing the vehicle. Do not use a nylon cloth.
- Rub gently when washing or drying the vehicle.
- Take your vehicle only to a car wash that keeps its brushes well maintained.
- Do not use abrasive cleansers or wax that contain abrasives.

Appearance Care

CAUTION

➤ Do not use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodised aluminium parts. This may damage the protective coating; also, cleaners and detergents may discolour or deteriorate the paint.

Pay special attention to removing salt, dirt, mud, and other foreign material from the underside of the wings, and make sure the drain holes in the lower edges of the doors and rocker panels are clean.

Insects, tar, tree sap, bird droppings, industrial fallout, and similar deposits can damage the finish if not removed immediately. When prompt washing with plain water is ineffective, use a mild soap made for use on vehicles.

Thoroughly rinse off all soap with lukewarm or cold water. Do not allow soap to dry on the finish.

After washing the vehicle, dry it with a clean chamois to prevent water spots from forming.

WARNING

Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal:

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.

When using an automatic car wash

- Retract the door mirrors.
- The automatic car wash brushes could reduce the paint lustre or hasten paint deterioration.

When using a high water pressure car wash

High water temperature and high water pressure car washers are available depending on the type of car wash machine. If the car washer nozzle is put too close to the vehicle, the force of the spray could damage or deform the molding, affect the sealability of parts, and allow water to penetrate the interior. Keep a sufficient space (30 cm (12 in) or more) between the nozzle and the vehicle. In addition, do not spend too much time spraying the same area of the vehicle, and be very careful when spraying between gaps in doors and around windows.

Waxing

Your vehicle needs to be waxed when water no longer beads on the finish. Always wash and dry the vehicle before waxing it. In addition to the vehicle body, wax the metal trim to maintain its lustre.

1. Use wax which contains no abrasives. Waxes containing abrasive will remove paint and could damage bright metal parts.
2. Use a good grade of natural wax for metallic, mica, and solid colours.
3. When waxing, coat evenly with the sponge supplied or a soft cloth.
4. Wipe off the wax with a soft cloth.

NOTE

A spot remover to remove oil, tar, and similar materials will usually also take off the wax. Rewax these areas even if the rest of the vehicle does not need it.

▼ Paint Damage Touch-up

Repair damage to the finish caused by stone chipping, damage during parking etc., by using Mazda touch-up paint before rust begins to form. First, remove the dirt and grease with a clean soft cloth.

If rust has already begun to form:

1. Remove rust completely with sandpaper.
2. Wipe with a clean soft cloth.
3. Apply rust preventive primer to the area.
4. After drying it completely, apply a suitable top coat material to the area.

Of course there will be no problem if you assign the work to an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Cavity Protection

Cavities are treated for protection at the factory, but additional protective treatment after the vehicle has been put into use will extend the life of the body.

We recommend that you consult an expert repairer, we recommend an Authorised Mazda Repairer concerning this additional precaution.

Appearance Care

▼ Bright-Metal Maintenance

- Use tar remover to remove road tar and insects. Never do this with a knife or similar tool.
- To prevent corrosion on bright-metal surfaces, apply wax or chrome preservative and rub it to a high lustre.
- During cold weather or in coastal areas, cover bright-metal parts with a coating of wax or preservative heavier than usual. It would also help to coat them with noncorrosive petroleum jelly or some other protective compound.

▲ CAUTION

Do not use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodised aluminium parts. This may result in damage to the protective coating and cause discolouration or paint deterioration.

▼ Undercoating

This special coating is applied to the critical parts of the underside to protect vehicles from damage caused by chemicals or stones. This coating is liable to be damaged with time. Check this coating periodically.

Should repairs be necessary, consult an expert repairer, we recommend an Authorised Mazda Repairer. They are well informed on how repairs should be made.

▼ Aluminium Wheel Maintenance*

A protective coating is provided over the aluminium wheels. Special care is needed to protect this coating.

▲ CAUTION

Do not use any detergent other than mild detergent. Before using any detergent, verify the ingredients. Otherwise, the product could discolour or stain the aluminium wheels.

NOTE

- Do not use a wire brush or any abrasive cleaner, polishing compound, or solvent on aluminium wheels. They may damage the coating.
- Always use a sponge or soft cloth to clean the wheels. Rinse the wheels thoroughly with lukewarm or cold water. Also, be sure to clean the wheels after driving on dusty or salted roads to help prevent corrosion.
- Avoid washing your vehicle in an automatic car wash that uses high-speed or hard brushes.

▼ Plastic Part Maintenance

- When cleaning the plastic lenses of the lights, do not use petrol, paraffin, rectified spirit, paint, thinner, highly acidic detergents, or strongly alkaline detergents. Otherwise, these chemical agents can discolour or damage the surfaces resulting in a significant loss in functionality. If plastic parts become inadvertently exposed to any of these chemical agents, flush with water immediately.

- If plastic parts such as the bumpers become inadvertently exposed to chemical agents or fluids such as petrol, oil, engine coolant, or battery fluid, it could cause discolouration, staining, or paint peeling. Wipe off any such chemical agents or fluids using a soft cloth immediately.
- High water temperature and high water pressure car washers are available depending on the type of high pressure car washer device. If the car washer nozzle is put too close to the vehicle or aimed at one area for an extended period of time, it could deform plastic parts or damage the paint.
- Do not use wax containing compounds (polish). Otherwise, it could result in paint damage.
- In addition, do not use an electrical or air tool to apply wax. Otherwise, the frictional heat generated could result in deformation of plastic parts or paint damage.

Interior Care

▼ Interior Care



WARNING

Do not spray water into the vehicle cabin:

Spraying water into the vehicle cabin is dangerous as electrical devices such as the audio and switches could get wet resulting in a malfunction or vehicle fire.

NOTE

- *Do not wipe the interior using alcohol, chlorine bleach, or organic solvents such as thinner, benzene, and petrol. Otherwise, it may cause discolouration or stains.*
- *Rubbing hard with a stiff brush or cloth may cause damage.*

If the vehicle interior becomes soiled by any of the following, wipe it off immediately using a soft cloth.

Leaving it uncleared could cause discolouration, stains, cracks, or peeling of the coating, and it will make it hard to wipe off later.

- Beverage or fragrance
- Grease or oil
- Soiling

▼ Seat Belt Maintenance

1. Clean the soiled area by lightly dabbing it with a soft cloth soaked in a mild detergent (approx. 5%) diluted with water.
2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

Appearance Care

3. Before retracting seat belts which have been pulled out for cleaning, dry them off thoroughly and make sure there is no remaining moisture on them.

WARNING

If a seat belt appears frayed or has abrasions, have it replaced by an Authorised Mazda Repairer:

If a seat belt is used under such a condition, it cannot function at its full capacity which could result in serious injury or death.

Use a mild detergent to remove soiling from a seat belt:

If organic solvents are used for cleaning the seat belts or they become stained or bleached, there is the possibility of them becoming weakened and as a result, they may not function at their full capacity which could cause serious injury or death.

NOTE

Clean seat belts diligently if they get dirty. Leaving them uncleared will make it difficult to clean them later, and it may affect the smooth retracting of the seat belt.

▼ Vinyl Upholstery Maintenance

Remove dust and dirt from the vinyl upholstery using a brush or vacuum. Remove soiling from vinyl upholstery using a leather and vinyl upholstery cleaner.

▼ Upholstery Maintenance

1. Clean the soiled area by lightly dabbing it with a soft cloth soaked in a mild detergent (approx. 5%) diluted with water.
2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

▼ Leather Upholstery Maintenance*

1. Remove dust and sand using a vacuum cleaner.
2. Wipe off the soiled area with a soft cloth and a suitable, special cleaner or a soft cloth soaked in a mild detergent (about 5%) diluted with water.
3. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.
4. Remove moisture with a dry, soft cloth and allow the leather to further dry in a well-ventilated, shaded area. If the leather gets wet such as from rain, remove the moisture and dry it as soon as possible.

NOTE

- Because genuine leather is a natural material, its surface is not uniform and it may have natural scars, scratches, and wrinkles.
- To maintain the quality for as long as possible, periodical maintenance, about twice a year, is recommended.
- If the leather upholstery comes into contact with any of the following, clean it immediately.
Leaving it uncleared could cause premature wear, mold, or stains.
 - Sand or dirt
 - Grease or oil, such as hand cream

- Alcohol, such as in cosmetic or hair dressing items
- If the leather upholstery gets wet, promptly remove moisture with a dry cloth. Remaining moisture on the surface may cause deterioration such as hardening and shrinkage.
- Exposure to direct sunlight for long periods may cause deterioration and shrinkage. When parking the car under direct sunlight for long periods, shade the interior using sunshades.
- Do not leave vinyl products on the leather upholstery for long periods. They may affect the leather quality and colouring. If the cabin temperature becomes hot, the vinyl may deteriorate and adhere to the genuine leather.

▼ Plastic Part Maintenance



CAUTION

Do not use polishing agents.

Depending on the product ingredients, they could cause discolouration, stains, cracks or peeling of the coating.

▼ Instrument Panel Top (Soft pad) Maintenance

Extremely soft material is used for the soft pad surface. If the soft pad surface is rubbed harshly with a dry cloth, it could result in the surface being damaged and leaving white scratch marks.

1. Wipe the soiled area with a soft cloth soaked in a mild detergent (approx. 5%) diluted with water.
2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

▼ Active Driving Display Maintenance

The dust-proof sheet has a coating. When cleaning, do not use a hard or rough-surface cloth, or cleaning detergent. In addition, if a chemical solvent gets on the active driving display, wipe it off immediately. The dust-proof sheet could be damaged and the surface coating could be scratched. Use a fine, soft cloth such as those used for cleaning eyeglasses.

NOTE

Use of compressed air when cleaning the dust-proof sheet is recommended.

▼ Panel Maintenance

If a panel becomes soiled, wipe it off with a soft cloth soaked in clean water and thoroughly wrung out.

If some areas require further cleaning, use the following procedure:

1. Wipe the soiled area with a soft cloth soaked in a mild detergent (approx. 5 %) diluted with water.
2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

NOTE

Be particularly careful when cleaning shiny surface panels and metallic parts such as plating as they can be scratched easily.

▼ Cleaning the Window Interiors

If the windows become covered with an oily, greasy, or waxy film, clean them with glass cleaner. Follow the directions on the container.

Appearance Care

CAUTION

- *Do not scrape or scratch the inside of the window glass. It could damage the thermal filaments and the aerial lines.*
- *When washing the inside of the window glass, use a soft cloth dampened in lukewarm water, gently wiping the thermal filaments and the aerial lines. Use of glass cleaning products could damage the thermal filaments and the aerial lines.*

7

If Trouble Arises

Helpful information on what to do if a problem arises with the vehicle.

Emergency call system.....	7-2
Emergency call system*	7-2
Mazda ERA-GLONASS.....	7-12
Mazda ERA-GLONASS*	7-12
Parking in an Emergency.....	7-23
Parking in an Emergency.....	7-23
Roadside Emergency Triangle	
Retaining Strap*	7-23
Flat Tyre.....	7-24
Spare Tyre and Tool Storage.....	7-24
Emergency Flat Tyre Repair Kit*	
.....	7-30
Changing a Flat Tyre (With Spare Tyre).....	7-37
Battery Runs Out.....	7-44
Jump-Starting.....	7-44
Emergency Starting.....	7-47
Starting a Flooded Engine	
(SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, and SKYACTIV-G 2.5).....	7-47
Push-Starting.....	7-47
Running Out of Fuel (SKYACTIV-D 1.8).....	7-48
Overheating.....	7-49
Overheating.....	7-49
Emergency Towing.....	7-51
Towing Description.....	7-51
Towing Hooks.....	7-53
Warning/Indicator Lights and Warning Sounds.....	7-56
If a Warning Light Turns On or Flashes.....	7-56
Message Indicated on Multi- information Display.....	7-71
Warning Sound is Activated.....	7-74
When Liftgate/Boot Lid Cannot be Opened.....	7-81
When Liftgate/Boot Lid Cannot be Opened.....	7-81
Active Driving Display Does Not Operate.....	7-83
If the Active Driving Display Does Not Operate.....	7-83
Windscreen Wipers Operate at High Speed.....	7-84
Windscreen Wipers Operate at High Speed.....	7-84

*Some models.

Emergency call system

Emergency call system*


▼ Emergency call system

When an emergency situation such as an accident or sudden illness occurs, the Emergency call system dials the call centre automatically or the user can make a call to the call centre manually to enable a voice call.

The system operates automatically when the vehicle receives an impact of a certain level or more in a collision, or it can be operated manually using the Emergency call switch if an emergency situation arises such as sudden illness.

The call centre operator confirms the status via the voice call, confirms the vehicle's position information using the GNSS^{*1}, and calls the police or emergency services.

*1 GNSS, short for “Global Navigation Satellite System”, is a system that obtains the vehicle's current location by receiving radio waves emitted from the GNSS satellites to the ground.

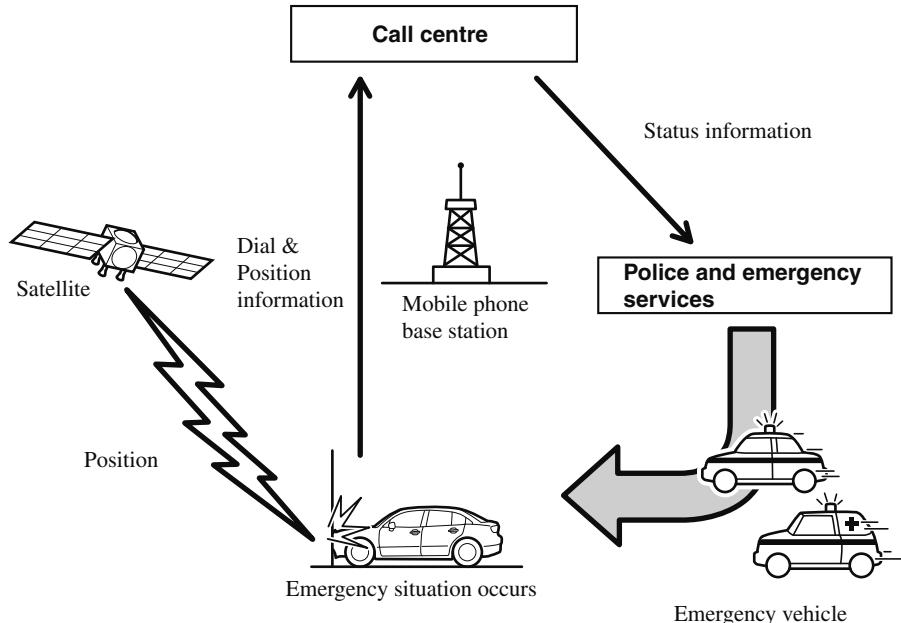

▼ Handling of data in accordance with laws and regulations

DESCRIPTION OF THE Emergency call system IN-VEHICLE SYSTEM

- Overview of the 112-based Emergency call system in-vehicle system, its operation and functionalities:

Emergency call system

- The 112-based Emergency call system service is a public service of general interest and is accessible free of charge.
- The 112-based Emergency call system in-vehicle system is activated by default. It is activated automatically by means of in-vehicle sensors in the event of a severe accident.
- The 112-based Emergency call system in-vehicle system can also be triggered manually.
- In the event of a critical system failure that would disable the 112-based Emergency call system in-vehicle system, the following warning will be given to the occupants of the vehicle:

INFORMATION ON DATA PROCESSING

- Any processing of personal data through the 112-based Emergency call system in-vehicle system shall comply with the personal data protection rules provided for in Directives 95/46/EC(1) and 2002/58/EC(2) of the European Parliament and of the Council, and in particular, shall be based on the necessity to protect the vital interests of the individuals in accordance with Article 7(d) of Directive 95/46/EC(3).
- Processing of such data is strictly limited to the purpose of handling the Emergency call system to the single European emergency number 112.

Types of data and its recipients

- The 112-based Emergency call system in-vehicle system may collect and process only the following data:
 - Vehicle Identification Number
 - Vehicle type (passenger vehicle or light commercial vehicle)
 - Vehicle propulsion storage type (petrol/diesel/CNG/LPG/electric/hydrogen)
 - Vehicle last three locations and direction of travel
 - Log file of the automatic activation of the system and its timestamp
- Recipients of data processed by the 112-based Emergency call system in-vehicle system are the relevant public safety answering points designated by the respective public authorities of the country on which territory they are located, to first receive and handle emergency calls (Emergency call system) to the single European emergency number 112.

Arrangements for data processing

- The 112-based Emergency call system in-vehicle system is designed in such a way as to ensure that the data contained in the system memory is not available outside the system before an Emergency call system is triggered.
- The 112-based Emergency call system in-vehicle system is designed in such a way as to ensure that it is not traceable and not subject to any constant tracking in its normal operation status.
- The 112-based Emergency call system in-vehicle system is designed in such a way as to ensure that data in the system internal memory is automatically and continuously removed.

Emergency call system

- The vehicle location data is constantly overwritten in the internal memory of the system so as always to keep maximum of the last three up-to-date locations of the vehicle necessary for the normal functioning of the system.
- The log of activity data in the 112-based Emergency call system in-vehicle system is kept for no longer than necessary for attaining the purpose of handling the Emergency call system and in any case not beyond 13 hours from the moment an Emergency call system was initiated.

Modalities for exercising data subject's rights

- The data subject (the vehicle's owner) has a right of access to data and as appropriate to request the rectification, erasure or blocking of data, concerning him or her, the processing of which does not comply with the provisions of Directive 95/46/EC. Any third parties to whom the data have been disclosed have to be notified of such rectification, erasure or blocking carried out in compliance with this Directive, unless it proves impossible or involves a disproportionate effort.
- The data subject has a right to complain to the competent data protection authority if he or she considers that his or her rights have been infringed as a result of the processing of his or her personal data.


(For Europe)

Contact service responsible for handling access requests:

Please contact your local Mazda Organisation for data protection requests. Contact details related thereto are listed in the Privacy Statement which you find on your country-specific webpage.

Please visit "<https://www.mazdamotors.eu>" to find your country-specific webpage.

▼ Component Parts of Emergency call system

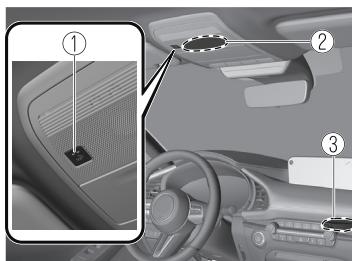


1. Emergency call switch
2. Microphone, Speaker
3. Aerial

WARNING

When using the emergency call system, keep medical devices such as an implanted heart pacemaker or defibrillator about 22 cm (8.7 in) or more away from the vehicle's aerial:

Otherwise, the operation of the medical device may be affected by radio waves.

▼ Flow of Emergency call system

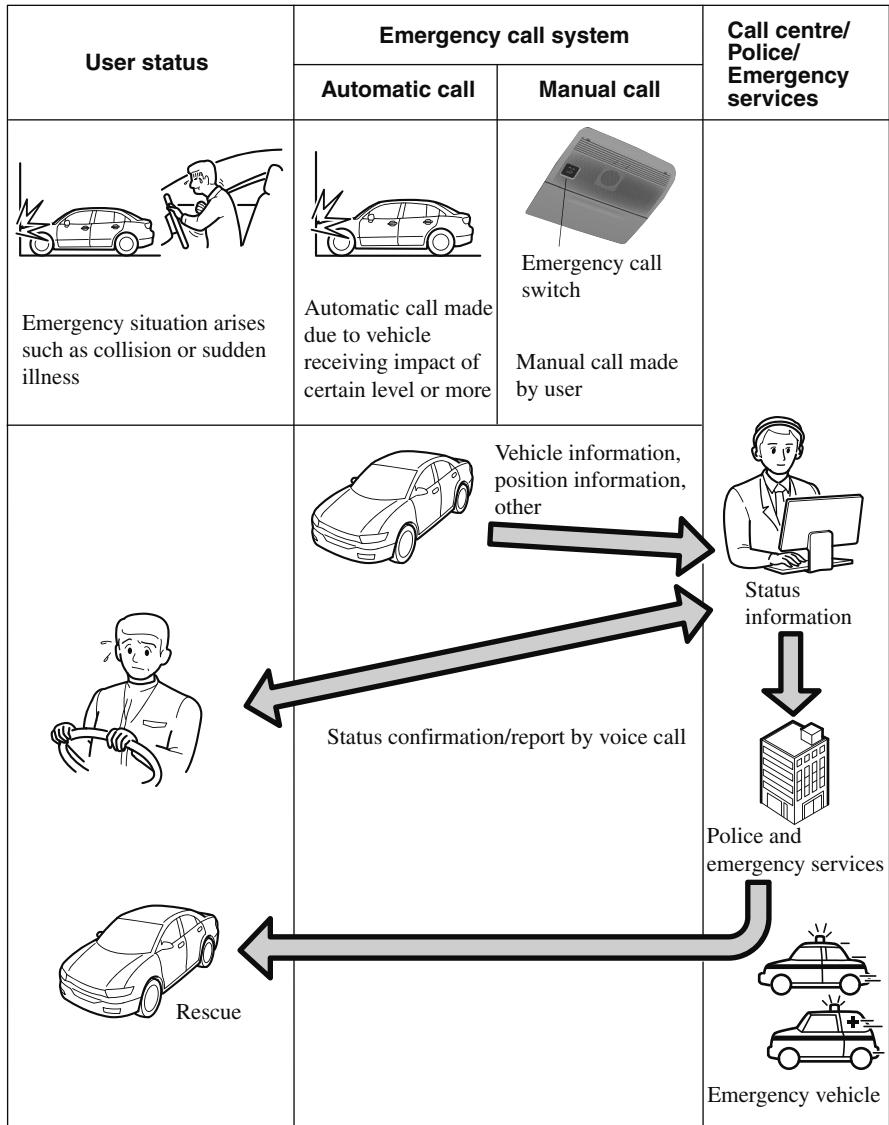

Emergency call system

CAUTION

- Do not disassemble the Emergency call system. Otherwise, it could become damaged and may not function in an emergency.
- The Emergency call system has a special built-in battery so that it can operate even if the power supply from the vehicle is cut such as in an accident.
Heed the following cautions. If the Emergency call system is not used correctly it may not operate.
 - The built-in battery is not a rechargeable type battery. Do not attempt to recharge the battery.
 - The built-in battery life is 3 years. Have the built-in battery replaced at an Authorised Mazda Repairer periodically.
 - If the built-in battery power is low due to natural discharge and the system determines that there is a problem, the Emergency call system cannot be used. If the system determines that there is a problem, the indicator light (red) in the Emergency call switch turns on to notify the driver. Have the vehicle inspected at an Authorised Mazda Repairer. Refer to Indicator light/Beep sound on page 7-10.

NOTE

- The Emergency call system can be used when the ignition is switched ON.
- There are two ways the Emergency call system makes calls; automatically or manually.
- The Emergency call system may not make a connection under the following conditions or depending on the use environment. If the Emergency call system does not connect, make a call from another telephone such as the nearest available public telephone.
 - The vehicle is outside of a mobile phone network area
 - The vehicle is in a weak radio wave transmission environment (such as inside tunnels, underground parking areas, shadow of buildings, and mountain areas)
 - The vehicle does not receive an impact of a certain level or more even if an accident has occurred.
 - An extremely serious collision occurs resulting in damage to the Emergency call system.
 - The position information cannot be obtained when signals cannot be received from the GNSS satellites, however, voice calls are possible.
- When a voice call is made by the Emergency call system, the audio system is muted so that it does not interfere with the call.
- It may take some time for the call centre to respond after the Emergency call system first starts operating.
- If you are unable to respond to an operator's questions after the voice call begins, the operator may proceed with emergency procedures at their own discretion.
- Even if it is difficult for you to hear the operator's voice, your voice may be heard by the call centre. Continue explaining your circumstances.

Emergency call system

- If the Emergency call system operates while you are making a call with your mobile phone using Bluetooth® Hands-Free, the call may be interrupted.
- It may not be possible to receive a call using the Bluetooth® Hands-Free normally while the Emergency call system is operating.
- A voice call with an operator may not be possible if the speaker or microphone is broken. If the speaker or microphone is broken, always have the vehicle inspected at an Authorised Mazda Repairer.
- The Emergency call system may not operate normally outside of the following temperature range: If the Emergency call system does not operate normally, make a call from another telephone such as the nearest available public telephone.
Operation temperature range: -40 °C (-40 °F) to 85 °C (185 °F)
- There may be a difference between the position information sent to the call centre and the actual position of the vehicle where the call was made. Indicate landmarks around the position of the vehicle where the call is being made to the operator during the voice call.

Automatic emergency calls

If the vehicle receives an impact of a certain level or more in a collision, vehicle information is automatically sent to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.



CAUTION

If an automatic call is made, the built-in battery power may be depleted and emergency calls may not be possible in the event that an emergency occurs again. After an automatic emergency call has been made, have the built-in battery replaced by an Authorised Mazda Repairer.


NOTE

- Automatic emergency calls cannot be cancelled by the user.
- The call centre will end an emergency call. The user cannot end the emergency call.
- If the vehicle receives an impact of a certain level or more in a collision, an automatic call is made even if the air bags do not deploy.
- If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. Redialing cannot be cancelled.


1. If the vehicle receives an impact of a certain level or more in a collision, the Emergency call system begins operating automatically.

Emergency call system

2. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

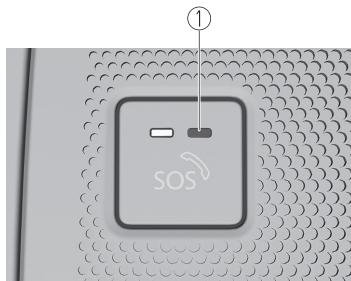

1. Green
 3. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the transmission of the vehicle information begins.
 4. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.
 5. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals) and the beep sounds simultaneously.
- In this case, make a manual connection using the Emergency call switch because an automatic connection is not possible.

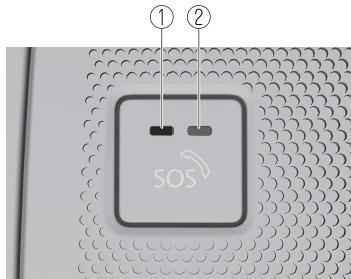

1. Red (Turns on)
2. Green (Flashes)

Manual emergency calls

With the ignition switched ON, long-press the Emergency call switch and after releasing your finger from the switch, the vehicle information is automatically transmitted to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.


Emergency call system

NOTE

- Only make calls manually for conditions requiring urgent treatment such as illness or serious injury.
 - When making emergency calls manually, stop the vehicle in a safe location before making the call.
 - The call centre will end an emergency call. The user cannot end the emergency call.
 - If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre.
1. Make sure that the ignition is switched ON.
 2. Long-press the Emergency call switch on the overhead console and then release your finger from the switch.




1. Emergency call switch
3. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

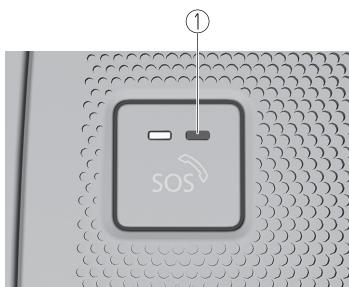

1. Green
4. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the transmission of the vehicle information begins.
5. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.

Emergency call system

6. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals), and the beep sounds simultaneously.
Make a manual emergency call again.

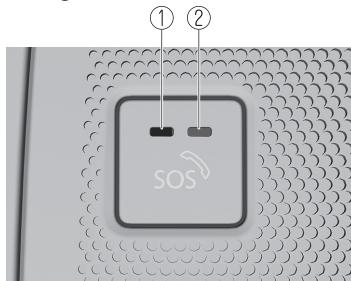

1. Red (Turns on)
2. Green (Flashes)

NOTE

If a call to the call centre does not connect even though the indicator light shows a call is possible, make a call to the police or other authority by means other than the Emergency call system.

▼ Indicator Light/Beep Sound

The indicator light turns on/flashes and beep sounds are activated to notify the driver of the system operation status or if there is a problem with the system.

Status	Indicator light			Beep sound status	On/flashing conditions
	Green	Red	Flash interval		
Diagnosis	Turns on	Turns on	—	—	When the ignition is switched ON, it turns on and then turns off after a few seconds. NOTE <i>A manual emergency call is not possible during diagnosis.</i>
Normal	Turns off	Turns off	—	—	The system is operating normally.

If Trouble Arises
Emergency call system

Status	Indicator light			Beep sound status	On/flashng conditions
	Green	Red	Flash interval		
Malfunction	Turns off	Turns on	—	3 beeps (Slow intermittent sound)	<ul style="list-style-type: none"> A system malfunction is detected. The remaining power of the built-in battery is low. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> CAUTION </div> <p><i>If the indicator light (red) remains on constantly, the system will not operate normally. Have the vehicle inspected at an Authorised Mazda Repairer as soon as possible.</i></p>
Call being made with call centre	Flashes	Turns off	Slow (0.5 second intervals)	The beep does not sound, but the ringback tone can be heard.	An emergency call is being made by the Emergency call system.
Vehicle information is being transmitted	Flashes	Turns off	Somewhat quick (0.3 second intervals)	—	Vehicle information is being transmitted to the call centre.
Start of voice call	Turns on	Turns off	—	1 beep	During a voice call with the call centre.
During voice call	Turns on	Turns off	—	—	
Connection failure	Flashes	Turns on	Quick (0.15 second intervals)	3 beeps (Fast intermittent sound)	When an emergency call fails to connect.

Mazda ERA-GLONASS

Mazda ERA-GLONASS*


▼ Mazda ERA-GLONASS

When an emergency situation such as an accident or sudden illness occurs, the Mazda ERA-GLONASS dials the call centre automatically or the user can make a call to the call centre manually to enable a voice call.


The system operates automatically when the vehicle receives an impact of a certain level or more in a collision, or it can be operated manually using the Emergency call switch if an emergency situation arises such as sudden illness.

The call centre operator confirms the status via the voice call, confirms the vehicle's position information using the GNSS*¹, and calls the police or emergency services.

*1 GNSS, short for “Global Navigation Satellite System”, is a system that obtains the vehicle's current location by receiving radio waves emitted from the GNSS satellites to the ground.

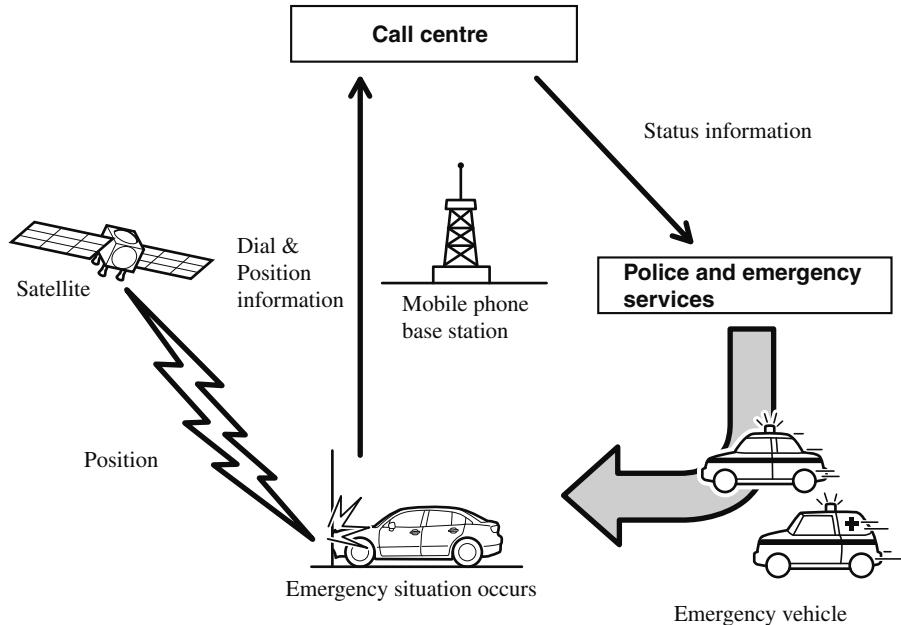

▼ Component Parts of Mazda ERA-GLONASS

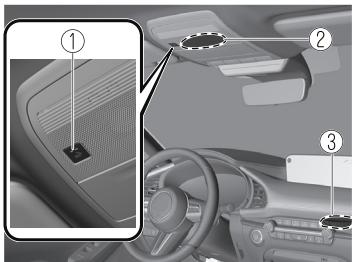

1. Emergency call switch

2. Microphone, Speaker
3. Aerial


⚠ WARNING

When using the Mazda ERA-GLONASS, keep medical devices such as an implanted heart pacemaker or defibrillator about 22 cm (8.7 in) or more away from the vehicle's aerial:

Otherwise, the operation of the medical device may be affected by radio waves.

Mazda ERA-GLONASS

▼ Flow of Mazda ERA-GLONASS

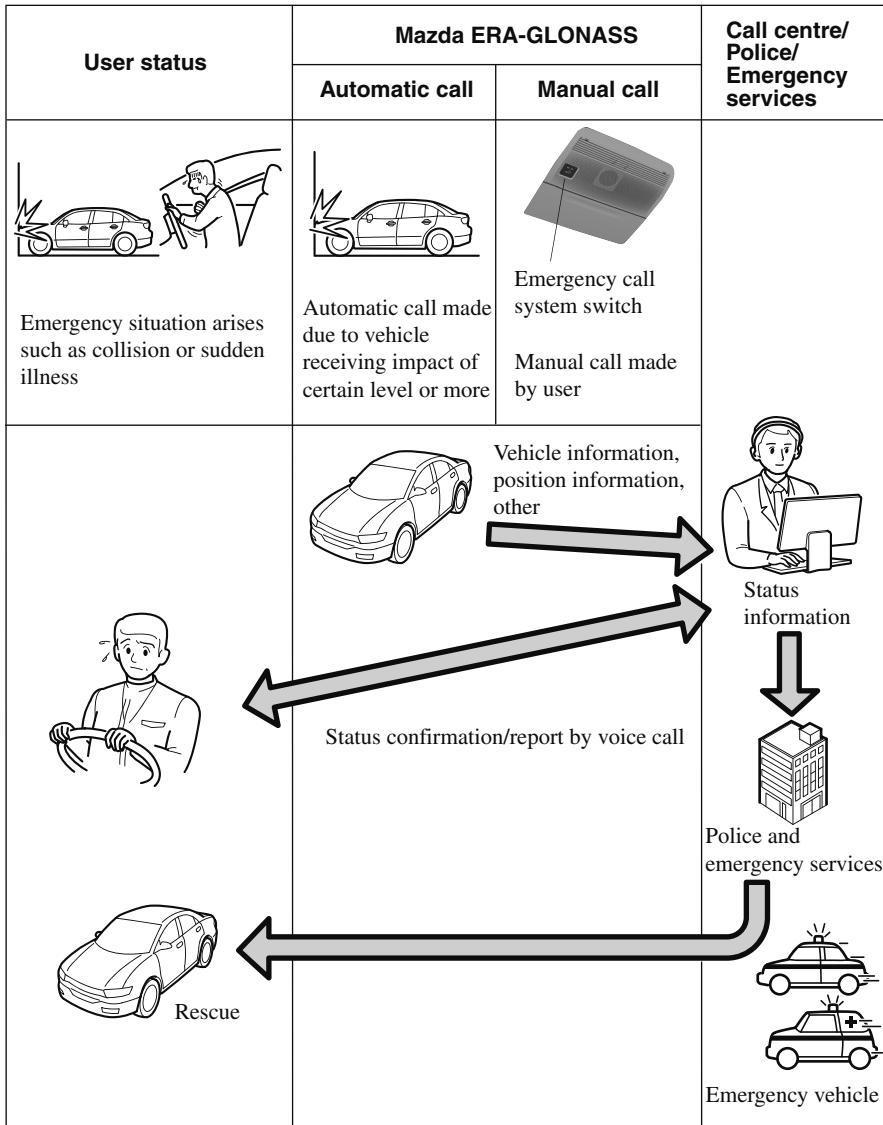

⚠ CAUTION

- *Do not disassemble the Mazda ERA-GLONASS. Otherwise, it could become damaged and may not function in an emergency.*
- *The Mazda ERA-GLONASS has a special built-in battery so that it can operate even if the power supply from the vehicle is cut such as in an accident.*
Heed the following cautions. If the Mazda ERA-GLONASS is not used correctly it may not operate.
- *The built-in battery is not a rechargeable type battery. Do not attempt to recharge the battery.*
- *The built-in battery life is 3 years. Have the built-in battery replaced at an Authorised Mazda Repairer periodically.*
- *If the built-in battery power is low due to natural discharge and the system determines that there is a problem, the Mazda ERA-GLONASS cannot be used. If the system determines that there is a problem, the indicator light (red) in the Emergency call switch turns on to notify the driver. Have the vehicle inspected at an Authorised Mazda Repairer. Refer to Indicator light/Beep sound on page 7-19.*

NOTE

- *The Mazda ERA-GLONASS can be used when the ignition is switched ON.*
- *There are two ways the Mazda ERA-GLONASS makes calls; automatically or manually.*
- *The Mazda ERA-GLONASS may not make a connection under the following conditions or depending on the use environment. If the Mazda ERA-GLONASS does not connect, make a call from another telephone such as the nearest available public telephone.*
 - *The vehicle is outside of a mobile phone network area*
 - *The vehicle is in a weak radio wave transmission environment (such as inside tunnels, underground parking areas, shadow of buildings, and mountain areas)*
 - *The vehicle does not receive an impact of a certain level or more even if an accident has occurred.*
 - *An extremely serious collision occurs resulting in damage to the Mazda ERA-GLONASS.*
 - *The position information cannot be obtained when signals cannot be received from the GNSS satellites, however, voice calls are possible.*
- *When a voice call is made by the Mazda ERA-GLONASS, the audio system is muted so that it does not interfere with the call.*
- *It may take some time for the call centre to respond after the Mazda ERA-GLONASS first starts operating.*
- *If you are unable to respond to an operator's questions after the voice call begins, the operator may proceed with emergency procedures at their own discretion.*

Mazda ERA-GLONASS

- Even if it is difficult for you to hear the operator's voice, your voice may be heard by the call centre. Continue explaining your circumstances.
- If the Mazda ERA-GLONASS operates while you are making a call with your mobile phone using Bluetooth® Hands-Free, the call may be interrupted.
- It may not be possible to receive a call using the Bluetooth® Hands-Free normally while the Mazda ERA-GLONASS is operating.
- A voice call with an operator may not be possible if the speaker or microphone is broken. If the speaker or microphone is broken, always have the vehicle inspected at an Authorised Mazda Repairer.
- The Mazda ERA-GLONASS may not operate normally outside of the following temperature range: If the Mazda ERA-GLONASS does not operate normally, make a call from another telephone such as the nearest available public telephone.
Operation temperature range: -40 °C (-40 °F) to 85 °C (185 °F)
- There may be a difference between the position information sent to the call centre and the actual position of the vehicle where the call was made. Indicate landmarks around the position of the vehicle where the call is being made to the operator during the voice call.

Automatic emergency calls

If the vehicle receives an impact of a certain level or more in a collision, vehicle information is automatically sent to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.


CAUTION

If an automatic call is made, the built-in battery power may be depleted and emergency calls may not be possible in the event that an emergency occurs again. After an automatic emergency call has been made, have the built-in battery replaced by an Authorised Mazda Repairer.


NOTE

- Automatic emergency calls cannot be cancelled by the user.
 - The call centre will end an emergency call. The user cannot end the emergency call.
 - If the vehicle receives an impact of a certain level or more in a collision, an automatic call is made even if the air bags do not deploy.
 - If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. Redialing cannot be cancelled.
1. If the vehicle receives an impact of a certain level or more in a collision, the Mazda ERA-GLONASS begins operating automatically.

2. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

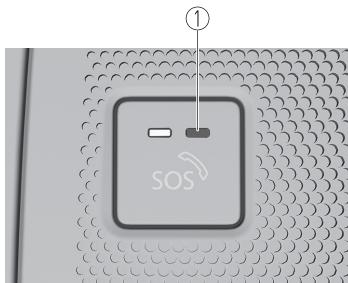

1. Green
3. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the beep sounds simultaneously, and the transmission of the vehicle information begins.
4. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.
5. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals) and the beep sounds simultaneously.
In this case, make a manual connection using the Emergency call switch because an automatic connection is not possible.

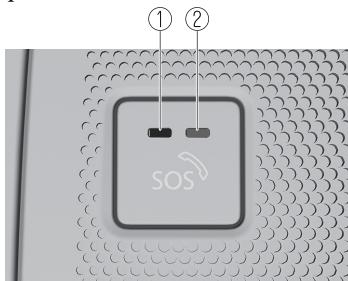

1. Red (Turns on)
2. Green (Flashes)

Manual emergency calls

With the ignition switched ON, long-press the Emergency call switch and after releasing your finger from the switch, the vehicle information is automatically transmitted to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.


Mazda ERA-GLONASS

NOTE

- Only make calls manually for conditions requiring urgent treatment such as illness or serious injury.
 - When making emergency calls manually, stop the vehicle in a safe location before making the call.
 - The call centre will end an emergency call. The user cannot end the emergency call.
 - If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. To cancel the redialing, refer to Manual emergency call cancellation.
1. Make sure that the ignition is switched ON.
 2. Long-press the Emergency call switch on the overhead console and then release your finger from the switch.




1. Emergency call switch
3. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

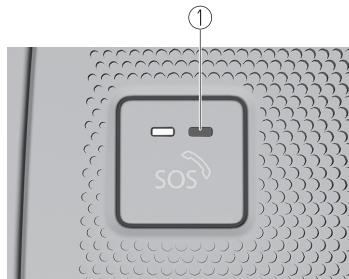

1. Green
4. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the beep sounds simultaneously, and the transmission of the vehicle information begins.

5. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.
6. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals), and the beep sounds simultaneously.
Make a manual emergency call again.

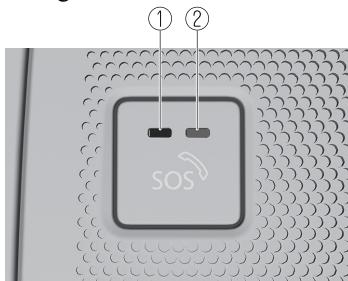

1. Red (Turns on)
2. Green (Flashes)

NOTE

If a call to the call centre does not connect even though the indicator light shows a call is possible, make a call to the police or other authority by means other than the Mazda ERA-GLONASS.

Manual emergency call cancellation

A manual emergency call can be cancelled even after the Emergency call switch has been pressed by pressing the switch again, as long as the call with the call centre has not begun. If the call cannot be cancelled and the call with the call centre has begun, tell the operator that the call is mistaken.

▼ Indicator Light/Beep Sound

The indicator light turns on/flashes and beep sounds are activated to notify the driver of the system operation status or if there is a problem with the system.

Status	Indicator light			Beep sound status	On/flashng conditions
	Green	Red	Flash interval		
Diagnosis	Turns on	Turns on	—	—	When the ignition is switched ON, it turns on and then turns off after a few seconds. NOTE <i>A manual emergency call is not possible during diagnosis.</i>

Mazda ERA-GLONASS

Status	Indicator light			Beep sound status	On/flashing conditions
	Green	Red	Flash interval		
Normal	Turns off	Turns off	—	—	The system is operating normally.
Malfunction	Turns off	Turns on	—	3 beeps (Slow intermittent sound)	<ul style="list-style-type: none"> A system malfunction is detected. The remaining power of the built-in battery is low. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  CAUTION </div> <p><i>If the indicator light (red) remains on constantly, the system will not operate normally. Have the vehicle inspected at an Authorised Mazda Repairer as soon as possible.</i></p>
Call being made with call centre	Flashes	Turns off	Slow (0.5 second intervals)	The beep does not sound, but the ringback tone can be heard.	An emergency call is being made by the Mazda ERA-GLO-NASS.
Vehicle information is being transmitted	Flashes	Turns off	Somewhat quick (0.3 second intervals)	Continuous intermittent sound	Vehicle information is being transmitted to the call centre.
Start of voice call	Turns on	Turns off	—	1 beep	During a voice call with the call centre.
During voice call	Turns on	Turns off	—	—	
Connection failure	Flashes	Turns on	Quick (0.15 second intervals)	3 beeps (Fast intermittent sound)	When an emergency call fails to connect.

▼ Test Mode

The test mode function makes sure that the Mazda ERA-GLONASS can operate normally. Have your vehicle tested at an Authorised Mazda Repairer when performing the test mode.

Method to start test mode


Switch the ignition ON while the parking brake is applied, and wait 2 minutes with the vehicle stopped.

After that, perform the following procedure.


Turn on the hazard warning lights.




Within 5 seconds
Move the signal lever up to right turn

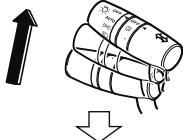


Within 1 second
Return the signal lever to off

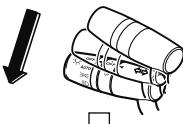


Within 1 second
Move the signal lever up to right turn

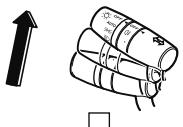


Within 1 second
Return the signal lever to off

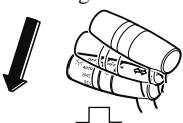


Within 1 second
Move the signal lever up to right turn

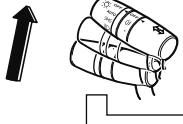

 
Within 1 second
Return the signal lever to off




Within 1 second
Move the signal lever down to left turn

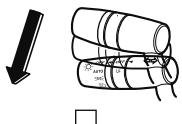


Within 1 second
Return the signal lever to off

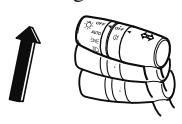

Within 1 second
Move the signal lever down to left turn

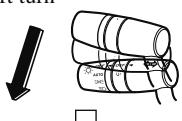

Within 1 second
Return the signal lever to off

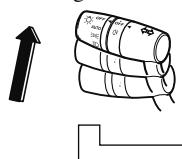

Within 5 seconds
Turn off the hazard warning lights.



Both red and green Emergency call switch indicator lights turn on.



Within 5 seconds
Press the Emergency call switch for one second or longer and release it.



After the procedure is completed, the test mode is performed in the following order automatically.

1. Procedure is completed

Mazda ERA-GLONASS

2. Switch to test mode
3. Call is placed to call centre
4. Vehicle information is sent
5. Start of voice call
6. Voice guidance from the call centre is played

NOTE

Communication with the call centre may fail if the reception is poor. Perform the test mode in a location with good reception.


The test mode finishes automatically.

Parking in an Emergency

Parking in an Emergency

▼ Parking in an Emergency

The hazard warning lights should always be used when you stop on or near a roadway in an emergency.

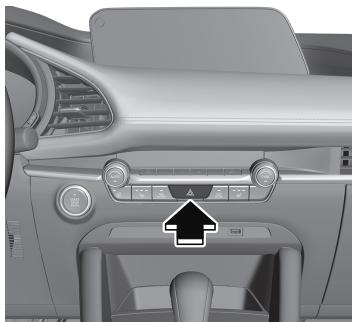

The hazard warning lights warn other drivers that your vehicle is a traffic hazard and that they must take extreme caution when near it.



Depress the hazard warning flasher and all the direction indicators will flash. The hazard warning indicator lights in the instrument cluster flash simultaneously.

NOTE


- *The direction indicators do not work when the hazard warning lights are on.*
- *Check local regulations about the use of hazard warning lights while the vehicle is being towed to verify that it is not in violation of the law.*

Roadside Emergency Triangle Retaining Strap*

▼ Roadside Emergency Triangle Retaining Strap

Saloon


Keep the roadside emergency triangle in the right side trim and secure it with the strap.

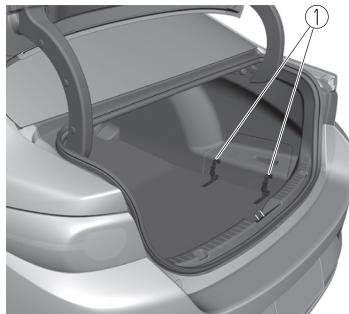

1. Strap

Hatchback

Keep the roadside emergency triangle in the right side trim and secure it with the strap.

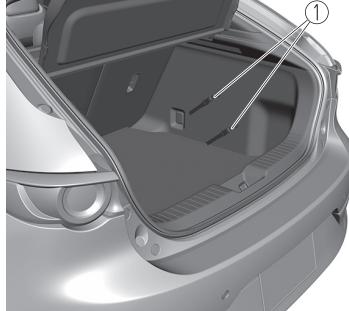

1. Strap

Flat Tyre

Spare Tyre and Tool Storage

▼ Spare Tyre and Tool Storage


NOTE

Your vehicle may or may not be equipped with a spare tyre, jack, wheel brace, and tool bag. For details, consult an Authorised Mazda Repairer.

Spare tyre and tools are stored in the locations illustrated in the diagram.


Saloon

Type A

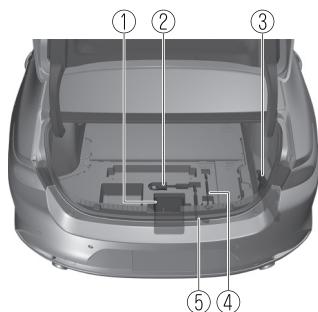


1. Emergency flat tyre repair kit
2. Towing eyelet
3. Jack*
4. Jack lever
5. Wheel brace*

Type B

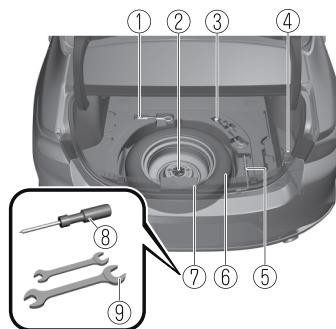

1. Towing eyelet
2. Spare tyre hold-down bolt
3. Jack lever
4. Jack
5. Wheel brace
6. Spare tyre
7. Tool bag*
8. Screwdriver*
9. Wrench*


Type C

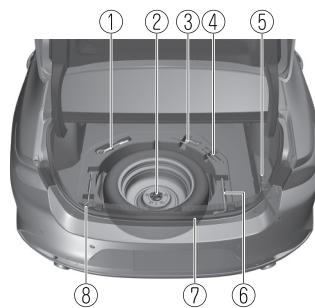

1. Towing eyelet
2. Spare tyre hold-down bolt
3. Screwdriver
4. Wrench
5. Jack
6. Wheel brace
7. Spare tyre
8. Jack lever


Hatchback

Type A

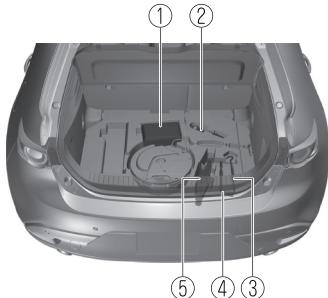


1. Emergency flat tyre repair kit
2. Towing eyelet
3. Jack lever
4. Wheel brace*
5. Jack*

Type B

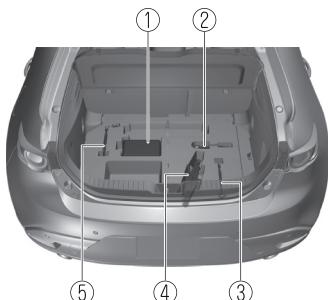


1. Emergency flat tyre repair kit
2. Towing eyelet
3. Jack lever
4. Jack*
5. Wheel brace*

Type C

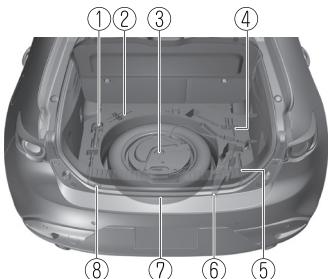

1. Towing eyelet
2. Wrench*
3. Spare tyre hold-down bolt
4. Screwdriver*
5. Jack lever
6. Jack
7. Spare tyre
8. Wheel brace

Type D

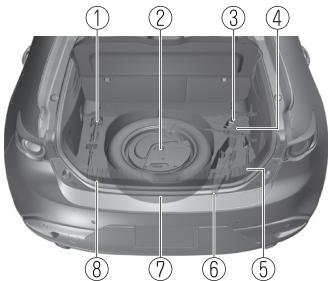


1. Towing eyelet
2. Spare tyre hold-down bolt
3. Wrench
4. Screwdriver
5. Jack lever
6. Jack
7. Spare tyre
8. Wheel brace

*Some models.

Flat Tyre

Type E

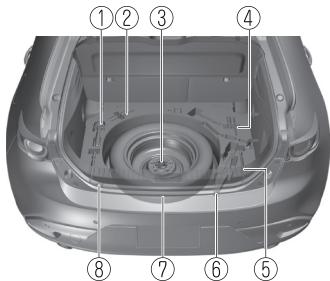

1. Towing eyelet

2. Wrench*

3. Spare tyre hold-down bolt

4. Screwdriver*


5. Jack lever

6. Jack

7. Spare tyre

8. Wheel brace

Type F

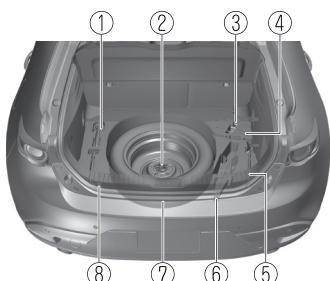

1. Towing eyelet

2. Spare tyre hold-down bolt

3. Wrench

4. Screwdriver

5. Jack lever

6. Jack

7. Spare tyre

8. Wheel brace

▼ Jack*

To remove the jack

Saloon


1. Remove the boot mat.



2. Remove the cover.



3. Turn the wing bolt and jack screw anticlockwise.

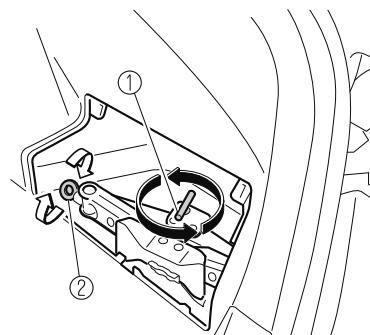

1. Wing bolt

2. jack screw

Hatchback

1. Remove the luggage mat.



2. Remove the jack.




To secure the jack

Saloon

1. Insert the wing bolt into the jack with the jack screw pointing to the front and turn the wing bolt clockwise to temporarily tighten it.

2. Turn the jack screw clockwise.

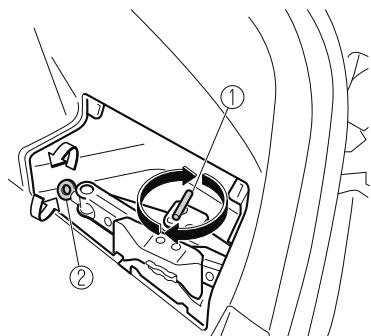

1. Wing bolt
2. jack screw

3. Turn the wing bolt completely to secure the jack.

NOTE

If the jack is not completely secured, it could rattle while driving. Make sure the jack screw is sufficiently tightened.

Hatchback

Perform the removal procedure in reverse.

Maintenance

- Always keep the jack clean.
- Make sure the moving parts are kept free from dirt or rust.
- Make sure the screw thread is adequately lubricated.

Flat Tyre

▼ Spare Tyre*

Your Mazda has a temporary spare tyre. The temporary spare tyre is lighter and smaller than a conventional tyre, and is designed only for emergency use and should be used only for VERY short periods. Temporary spare tyres should NEVER be used for long drives or extended periods.

⚠ WARNING

Do not install the temporary spare tyre on the front wheels (driving wheels):

Driving with the temporary spare tyre on one of the front driving wheels is dangerous. Handling will be affected. You could lose control of the vehicle, especially on ice or snow bound roads, and have an accident. Move a regular tyre to the front wheel and install the temporary spare tyre to the rear.

⚠ CAUTION

- When using the temporary spare tyre, driving stability may decrease compared to when using only the conventional tyre. Drive carefully.
- To avoid damage to the temporary spare tyre or to the vehicle, observe the following precautions:

➤ Do not exceed 80 km/h (50 mph).

➤ Avoid driving over obstacles. Also, do not drive through an automatic car wash. This tyre's diameter is smaller than a conventional tyre, so the ground clearance is reduced.

➤ Do not use a tyre chain on this tyre because it will not fit properly.

➤ Do not use your temporary spare tyre on any other vehicle, it has been designed only for your Mazda.

➤ Use only one temporary spare tyre on your vehicle at the same time.

To remove the spare tyre

Saloon

1. Remove the boot mat.



2. Turn the spare tyre hold-down bolt anticlockwise and remove the spare tyre.




1. Spare tyre hold-down bolt

Hatchback

1. Remove the luggage mat.



2. **(Vehicles with sub-woofer)**
Uncouple the sub-woofer connector.

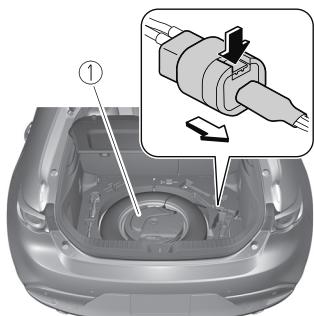

1. Sub-woofer

NOTE

Extra strength may be required to uncouple the connector. Be sure to squeeze the tab firmly.

3. **(Vehicles with sub-woofer)**

Turn the spare tyre hold-down bolt anticlockwise and remove the sub-woofer and the spare tyre.



- ### **(Vehicles without sub-woofer)**
- Turn the spare tyre hold-down bolt anticlockwise and remove the spare tyre.



1. Spare tyre hold-down bolt

To secure the spare tyre

Store the spare tyre in the reverse order of removal. After storing, verify that the spare tyre is stored securely.

Flat Tyre

Emergency Flat Tyre Repair Kit*

▼ Emergency Flat Tyre Repair Kit

The emergency flat tyre repair kit included with your Mazda is for a temporary repair of a slightly damaged flat tyre resulting from running over nails or similar sharp objects on the road surface.


Perform the emergency flat tyre repair without removing the nail or similar sharp object which punctured the tyre.

NOTE

Your vehicle is not equipped with a spare tyre. In the event of a flat tyre, use the emergency flat tyre repair kit to repair the tyre temporarily. When doing the repair, refer to the instructions included in the emergency flat tyre repair kit. If an emergency repair was performed on a flat tyre using the emergency flat tyre repair kit, have an , repair or replace the tyre as soon as possible.

▼ About the Emergency Flat Tyre Repair Kit

The emergency flat tyre repair kit includes the following items.

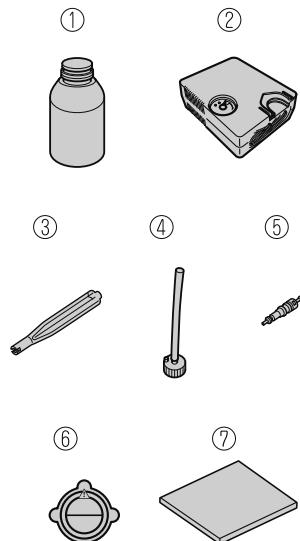

1. Tyre sealant
2. Compressor
3. Valve core tool
4. Injection hose
5. Spare valve core
6. Speed restriction sticker
7. Instructions

⚠ WARNING

Do not allow children to touch the tyre sealant:

➤ *Ingestion of tyre sealant is dangerous. In the event tyre sealant is accidentally swallowed, drink large amounts of water immediately and seek medical assistance.*

➤ *Tyre sealant that comes into contact with the eyes and skin is dangerous. If tyre sealant enters the eyes or contacts the skin, flush immediately with large amounts of water and seek medical assistance.*

NOTE



- *The tyre sealant cannot be reused. Purchase new tyre sealant at an Authorised Mazda Repairer.*
- *The emergency flat tyre repair kit cannot be used in the following cases. Consult an expert repairer, we recommend an Authorised Mazda Repairer.*
 - *The period of effective use for the tyre sealant has expired. (The period of effectiveness is indicated on the bottle label.)*
 - *The tear or puncture exceeds about 4 mm (0.16 in).*
 - *The damage has occurred to an area of the tyre other than the tread.*
 - *The vehicle has been driven with nearly no air remaining in the tyre.*
 - *The tyre has come off the wheel rim.*
 - *Damage to the wheel rim has occurred.*
 - *The tyre has 2 or more punctures.*

▼ Using the Emergency Flat Tyre Repair Kit

1. Park on a level surface off the right-of-way and set the parking brake.
2. Put a vehicle with an automatic transmission in Park (P), a manual transmission in Reverse (R) or 1, and turn off the engine.
3. Turn on the hazard warning flasher.

4. Unload passengers and luggage, and remove the emergency flat tyre repair kit.

Saloon

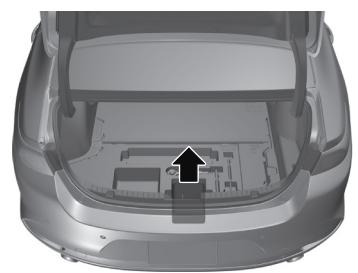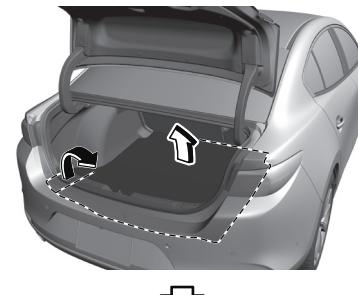


Hatchback

Type A




Flat Tyre

Type B

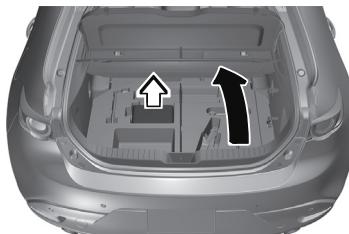

5. Shake the tyre sealant well.

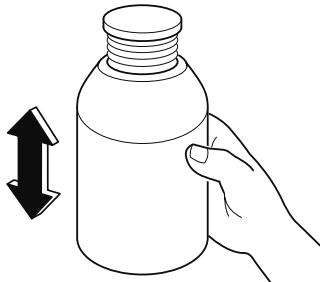


CAUTION

If the bottle is shaken after the injection hose is screwed on, tyre sealant could spray out from the injection hose. Tyre sealant contacting clothing or other objects may be impossible to remove. Shake the bottle before screwing on the injection hose.

NOTE


The tyre sealant can be used at outside temperatures down to -30°C (-22°F). In extremely cold temperatures (0°C (32°F) or below), the tyre sealant hardens easily and injection of the sealant will be difficult. Warm the sealant inside the vehicle before doing the injection work.

6. Remove the cap from the bottle. Screw on the injection hose with the bottle's inner cap left on to break the inner cap.

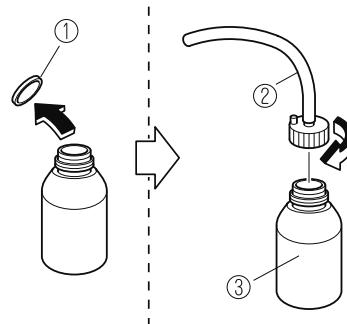

1. Cap
2. Injection hose
3. Tyre sealant

7. Remove the valve cap from the flat tyre. Press the back of a valve core tool to the core of the tyre valve and bleed all the remaining air.

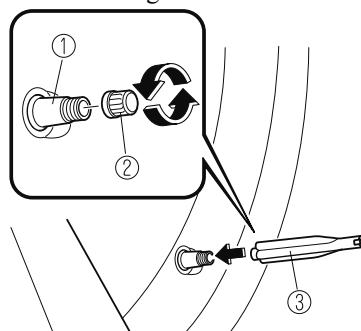


1. Valve
2. Valve cap
3. Valve core tool

CAUTION

If there is air remaining in the tyre when the valve core is removed, the valve core could fly out. Remove the valve core carefully.

8. Turn the valve core anticlockwise with the valve core tool and remove the valve core.

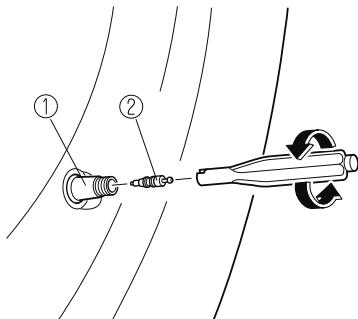


1. Valve
2. Valve core

NOTE


Store the valve core in a place where it will not get dirty.

9. Insert the injection hose into the valve.

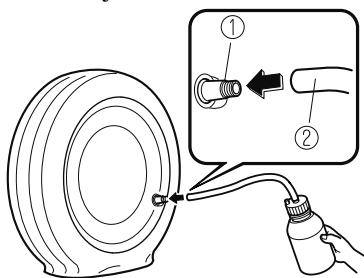

1. Valve
2. Injection hose

10. Hold the bottom of the bottle upright, squeeze the bottle with your hands, and inject the entire amount of tyre sealant into the tyre.

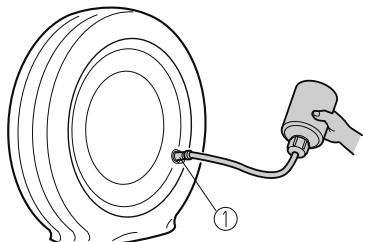


1. Valve

11. Pull out the injection hose from the valve.

NOTE

*The tyre sealant cannot be reused.
Purchase a new tyre sealant kit at an Authorised Mazda Repairer.*

12. Reinsert the valve core into the valve and turn it clockwise to install it.

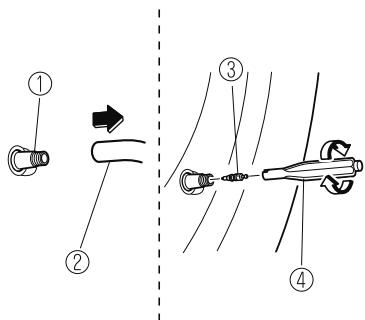


1. Valve
2. Injection hose
3. Valve core
4. Valve core tool

Flat Tyre

NOTE


Do not throw away the empty tyre sealant bottle after use. Return the empty tyre sealant bottle to an Authorised Mazda Repairer when replacing the tyre. The empty tyre sealant bottle will need to be used to extract and dispose of the used sealant from the tyre.

13. After that, install the injection hose to the tab of the bottle to prevent leakage of any remaining sealant.

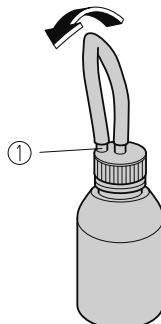

1. Tab

14. Attach the vehicle speed restriction sticker in a place where the driver can easily see it.

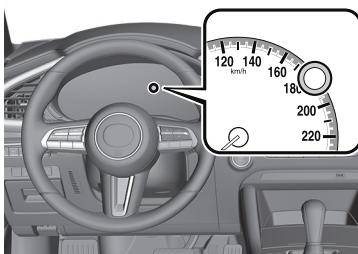


WARNING

Do not attach the vehicle speed restriction sticker to the instrument panel, as it would obstruct vision of areas such as warning light indicators or the speedometer:

Attaching the vehicle speed restriction sticker to the steering wheel pad is dangerous. The sticker could interfere with air bag inflation and cause serious injury.


15. Install the compressor hose to the tyre valve.

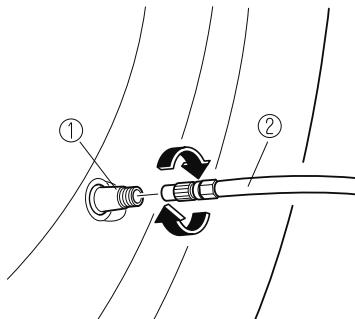

1. Valve

2. Compressor hose

16. Insert the compressor plug into the interior accessory socket and switch the ignition to ACC.

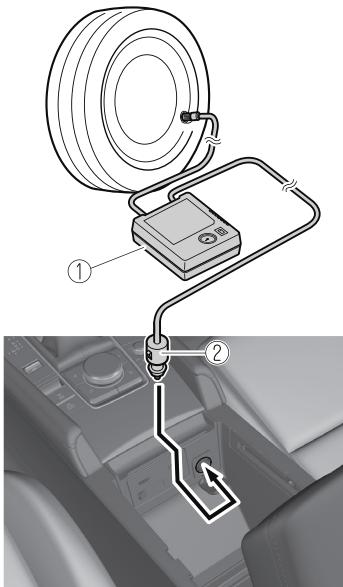

1. Compressor
2. Compressor plug

⚠ CAUTION

- Before pulling out the compressor plug from the electrical socket, make sure the compressor power switch is off.
- The compressor turns on and off with the push-button switch.

17. Turn the compressor switch on and inflate the tyre carefully to the correct inflation pressure.

⚠ WARNING

Never operate the compressor above 300 kPa (3.1 kgf/cm², 3 bar, 43.5 psi):
Operating the compressor above 300 kPa (3.1 kgf/cm², 3 bar, 43.5 psi) is dangerous. When the inflation pressure rises above 300 kPa (3.1 kgf/cm², 3 bar, 43.5 psi), heated air will be exhausted from the back of the compressor and you could be burned.

NOTE

- Check the tyre inflation pressure label (driver's door frame) for the correct tyre inflation pressure.
- Do not use the compressor for longer than 10 minutes because using the compressor for long periods could damage it.
- If the tyre does not inflate, repair of the tyre may not be possible. If the tyre does not reach the correct inflation pressure within a 10-minute period, it probably has received more extensive damage.

When this happens, the emergency flat tyre repair kit cannot be used to repair the tyre. Contact an expert repairer; we recommend an Authorised Mazda Repairer.

- If the tyre has been over-inflated, loosen the screw cap on the compressor and bleed some of the air out.

18. When the tyre has been inflated to the proper inflation pressure, turn the compressor switch off and remove the compressor hose from the tyre valve.
19. Install the tyre valve cap.

Flat Tyre

20. Put the emergency flat tyre repair kit in the boot/luggage compartment and continue driving.

CAUTION

- Drive carefully to an expert repairer, we recommend an Authorised Mazda Repairer and keep the vehicle speed below 80 km/h (50 mph).
- If the vehicle is driven 80 km/h (50 mph) or higher, the vehicle might begin to vibrate.

NOTE

If the tyre is not properly inflated, the tyre pressure monitoring system warning light will illuminate.

21. After driving the vehicle for 10 minutes or 5 km (3 miles), check the tyre pressure with the tyre pressure gauge equipped with the compressor. If the tyre pressure has fallen below the correct tyre pressure, inflate the tyre to the correct pressure again following the steps from number 16.

CAUTION

- If the tyre inflation pressure falls below 130 kPa (1.3 kgf/cm² or bar, 18.9 psi), repair cannot be done with the repair kit. Park the vehicle on a level surface off the right-of-way and contact an expert repairer, we recommend an Authorised Mazda Repairer.

➤ If the tyre inflation pressure continues to remain low after repeating steps 15 to 21, park the vehicle on a level surface off the right-of-way and contact an expert repairer, we recommend an Authorised Mazda Repairer.

NOTE

When checking the tyre inflation pressure with the tyre pressure gauge on the compressor unit, make sure the compressor switch is turned off.

22. If the tyre inflation pressure remains stable, the tyre repair is complete. Drive the vehicle with care to an expert repairer, we recommend an Authorised Mazda Repairer to have the tyre replaced.

CAUTION

- A tyre that has been temporarily repaired with the tyre sealant cannot be reused. Mazda recommends replacing the tyre with a new one.
- The wheel can be reused after any sealant adhering to it is wiped off and carefully inspected. However, replace the tyre valve with a new one.

▼ Inspecting the Emergency Flat Tyre Repair Kit

Inspect the emergency flat tyre repair kit at regular intervals.

- Check the tyre sealant period of effective use.
- Check the operation of the tyre compressor.

NOTE

The tyre sealant has a period of effective use. Check the period of effective use indicated on the bottle label and do not use it if it has expired. Have the tyre sealant replaced at an Authorised Mazda Repairer before the period of effective use has expired.

Changing a Flat Tyre (With Spare Tyre)

▼ Changing a Flat Tyre

NOTE

If the following occurs while driving, it could indicate a flat tyre.

- Steering becomes difficult.
- The vehicle begins to vibrate excessively.
- The vehicle pulls in one direction.

If you have a flat tyre, drive slowly to a level spot that is well off the road and out of the way of traffic to change the tyre. Stopping in traffic or on the shoulder of a busy road is dangerous.

WARNING

Be sure to follow the directions for changing a tyre:

Changing a tyre is dangerous if not done properly. The vehicle can slip off the jack and seriously injure someone.

No person should place any portion of their body under a vehicle that is supported by a jack.

Never allow anyone inside a vehicle supported by a jack:

Allowing someone to remain in a vehicle supported by a jack is dangerous. The occupant could cause the vehicle to fall resulting in serious injury.

Flat Tyre

NOTE

Make sure the jack is well lubricated before using it.

1. Park on a hard, level surface off the right-of-way and firmly set the parking brake.
2. Put a vehicle with an automatic transmission in Park (P), a manual transmission in Reverse (R) or 1, and turn off the engine.
3. Turn on the hazard warning flasher.
4. Have everyone get out of the vehicle and away from the vehicle and traffic.
5. Remove the jack, tool, and spare tyre (page 7-24).
6. Block the wheel diagonally opposite the flat tyre. When blocking a wheel, place a tyre block both in front and behind the tyre.



NOTE

When blocking a tyre, use rocks or wood blocks of sufficient size if possible to hold the tyre in place.

▼ Removing a Flat Tyre

⚠ WARNING

When jacking-up a vehicle, always shift the shift lever to 1st or R position (manual transmission vehicle) or shift the selector lever to P position (automatic transmission vehicle), apply the parking brake, and place wheel blocks in the position diagonally opposed to the jack:

Changing a flat tyre without using wheel blocks is dangerous because the vehicle may move and fall off the jack even with the shift lever in 1st or R position, or the selector lever is in P position, which could result in an accident.

1. If your vehicle is equipped with a wheel cover, pry off the wheel cover with the bevelled end of the jack lever.



NOTE

Force the end of the jack lever firmly between wheel and cover, or removal will be difficult.

CAUTION


Align the notch on the wheel cover with the valve stem when installing it.




1. Notch
2. Tyre valve

Damage could occur during installation if the wheel cover is not properly aligned.

2. Loosen the wheel nuts by turning them anticlockwise one turn each, but do not remove any wheel nuts until the tyre has been raised off the ground.

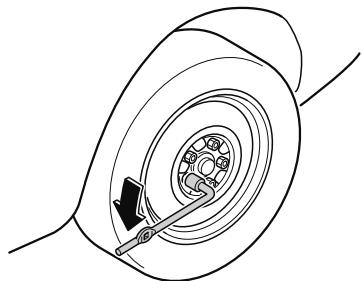


3. Place the jack on the ground.
4. Turn the jack screw in the direction shown in the figure and adjust the jack head so that it is close to the jack-up position.

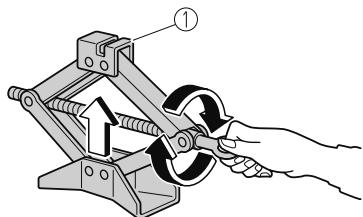


1. Jack head

Flat Tyre

- Place the jack under the jack-up position closest to the tyre being changed with the jack head squarely under the jack-up point.

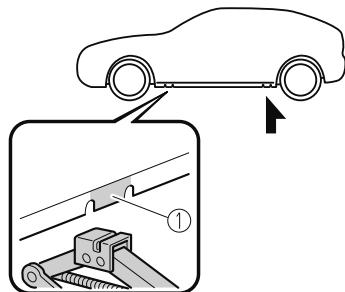

- Jacking position
- Continue raising the jack head gradually by rotating the screw with your hand until the jack head is inserted into the jack-up position.

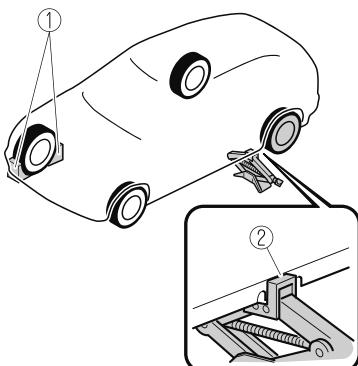

- Tyre blocks
- Jacking position

WARNING

Use only the front and rear jacking positions recommended in this manual:
Attempting to jack the vehicle in positions other than those recommended in this manual is dangerous. The vehicle could slip off the jack and seriously injure or even kill someone. Use only the front and rear jacking positions recommended in this manual.

Do not jack up the vehicle in a position other than the designated jack-up position or place any objects on or under the jack:

Jacking up the vehicle in a position other than the designated jack-up position or placing objects on or under the jack is dangerous as it could deform the vehicle body or the vehicle could fall off the jack resulting in an accident.

Use only the jack provided with your Mazda:

Using a jack that is not designed for your Mazda is dangerous. The vehicle could slip off the jack and seriously injure someone.


Never place objects under the jack:

Jacking the vehicle with an object under the jack is dangerous. The jack could slip and someone could be seriously injured by the jack or the falling vehicle.


NOTE

When raising the jack head into the jacking position and aligning the groove in the jack head with the rail under the vehicle body, the top of the jack head contacts the vehicle's underbody without the rail contacting the bottom of the groove.

7. Insert the jack lever and attach the wheel brace to tyre jack.

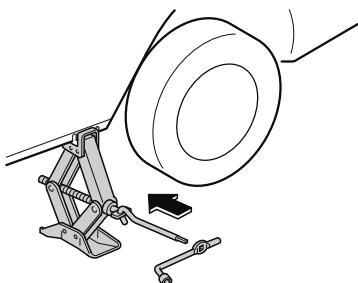

8. Turn the jack handle clockwise and raise the vehicle high enough so that the spare tyre can be installed. Before removing the wheel nuts, make sure your Mazda is firmly in position and that it cannot slip or move.

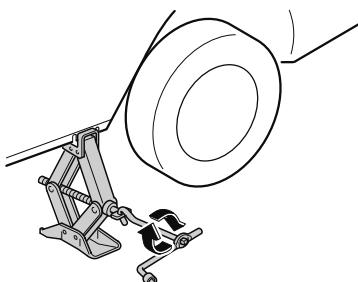

WARNING

Do not jack up the vehicle higher than is necessary:

Jacking up the vehicle higher than is necessary is dangerous as it could destabilize the vehicle resulting in an accident.

Do not start the engine or shake the vehicle while it is jacked up:

Starting the engine or shaking the vehicle while it is jacked up is dangerous as it could cause the vehicle to fall off the jack resulting in an accident.


Never go under the vehicle while it is jacked up:

Going under the vehicle while it is jacked up is dangerous as it could result in death or serious injury if the vehicle were to fall off the jack.

9. Remove the wheel nuts by turning them anticlockwise; then remove the wheel and centre cap.

▼ Mounting the Spare Tyre

1. Remove dirt and grime from the mounting surfaces of the wheel and hub, including the hub bolts, with a cloth.

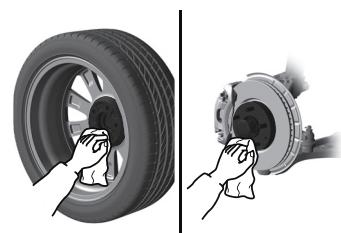


Flat Tyre

⚠ WARNING

Make sure the mounting surfaces of the wheel, hub and wheel nuts are clean before changing or replacing tyres:

When changing or replacing a tyre, not removing dirt and grime from the mounting surfaces of the wheel, hub and hub bolts is dangerous. The wheel nuts could loosen while driving and cause the tyre to come off, resulting in an accident.

2. Mount the spare tyre.
3. Install the wheel nuts with the bevelled edge inward; tighten them by hand.

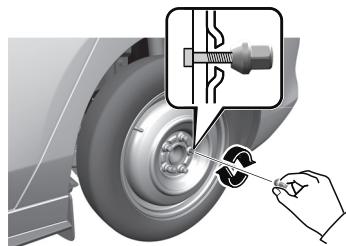

⚠ WARNING

Do not apply oil or grease to wheel nuts and bolts and do not tighten the wheel nuts beyond the recommended tightening torque:

Applying oil or grease to wheel nuts and bolts is dangerous. The wheel nuts could loosen while driving and cause the tyre to come off, resulting in an accident. In addition, wheel nuts and bolts could be damaged if tightened more than necessary.

4. Turn the jack handle anticlockwise using the wheel brace and lower the vehicle.
5. Use the wheel brace to tighten the nuts in the order shown.



If you are unsure of how tight the nuts should be, have them inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

Nut tightening torque	
N·m (kgf·m, ft·lbf)	108—147 (12—14, 80—108)

⚠ WARNING

Always securely and correctly tighten the wheel nuts:

Improperly or loosely tightened wheel nuts are dangerous. The wheel could wobble or come off. This could result in loss of vehicle control and cause a serious accident.

Be sure to reinstall the same nuts you removed or replace them with metric nuts of the same configuration:

Because the wheel studs and wheel nuts on your Mazda have metric threads, using a non-metric nut is dangerous. On a metric stud, it would not secure the wheel and would damage the stud, which could cause the wheel to slip off and cause an accident.

6. Remove the tyre blocks and store the tools and jack.
7. Store the damaged tyre in the boot/luggage compartment.
8. Check the inflation pressure. Refer to Tyres on page 9-11.
9. Have the flat tyre repaired or replaced as soon as possible.

WARNING

Do not drive with any tyres that have incorrect air pressure:

Driving on tyres with incorrect air pressure is dangerous. Tyres with incorrect pressure could affect handling and result in an accident. When you check the regular tyres' air pressure, check the spare tyre, too.

NOTE

To prevent the jack and tool from rattling, store them properly.

Battery Runs Out

Jump-Starting

▼ Jump-Starting

Jump-starting is dangerous if done incorrectly. So follow the procedure carefully. If you feel unsure about jump-starting, we strongly recommend that you have a competent service technician do the work.

WARNING



Follow These Precautions Carefully:

To ensure safe and correct handling of the battery, read the following precautions carefully before using the battery or inspecting it.



Keep flames and sparks away from open battery cells and do not allow metal tools to contact the positive (+) or negative (-) terminal of the battery when working near a battery. Do not allow the positive (+) terminal to contact the vehicle body:

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.



Keep all flames and sparks away from open battery cells because hydrogen gas is produced from open battery cells while charging the battery or adding battery fluid:

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.

Do not jump-start a frozen battery or one with a low fluid level:

Jump-starting a frozen battery or one with a low fluid level is dangerous. It may rupture or explode, causing serious injury.

Connect the negative lead to a good ground point away from the battery:

Connecting the end of the second jumper lead to the negative (-) terminal of the discharged battery is dangerous.

Battery Runs Out

A spark could cause the gas around the battery to explode and injure someone.

Route the jumper leads away from parts that will be moving:


Connecting a jumper lead near or to moving parts (cooling fans, belts) is dangerous. The lead could get caught when the engine starts and cause serious injury.



CAUTION

Use only a 12 V booster system. You can damage a 12 V starter, ignition system, and other electrical parts beyond repair with a 24 V power supply (two 12 V batteries in series or a 24 V motor generator set).

1. Move the booster vehicle so that its battery is as close as possible to your vehicle's battery.
2. Make sure that the power such as for the headlights and air conditioner is turned off.
3. Remove the battery cover.

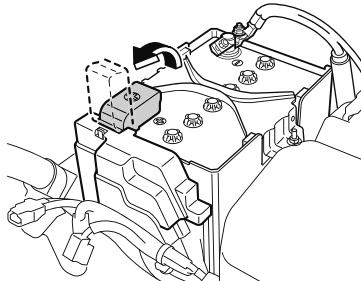

4. Turn off the booster vehicle's engine and connect the jumper leads in the following order.

Make sure that the jumper leads are securely connected so that they do not disconnect due to engine vibrations.

1st lead


- ① Positive (+) terminal on the discharged battery
- ② Positive (+) terminal on booster vehicle's battery

2nd lead

- ③ Negative (-) terminal on booster vehicle's battery

Battery Runs Out

- ④ Location shown in the figure (do not connect to the negative (-) terminal of the battery)

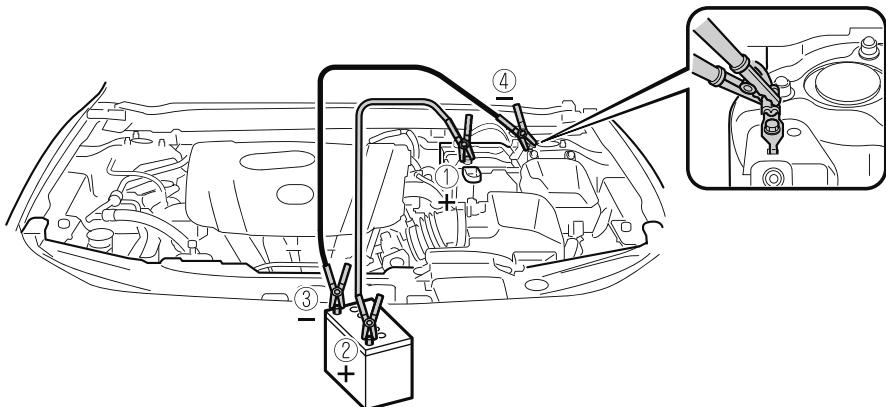

5. Start the booster vehicle's engine and rev the engine.
6. Start the engine of your vehicle. Run the engines for about 3 minutes to temporarily charge the battery of your vehicle.
7. Disconnect the jumper leads in the reverse order of their connection.
8. Install the battery cover.
9. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

Starting a Flooded Engine (SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, and SKYACTIV-G 2.5)

▼ Starting a Flooded Engine (SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, and SKYACTIV-G 2.5)

If the engine fails to start, it may be flooded (excessive fuel in the engine).

Follow this procedure:

1. If the engine does not start within 5 seconds on the first try, wait 10 seconds and try again.
2. Make sure the parking brake is on.
3. Depress the accelerator all the way and hold it there.
4. Depress the clutch pedal (manual transmission) or the brake pedal (automatic transmission), then press the push button start. If the engine starts, release the accelerator immediately because the engine will suddenly rev up.
5. If the engine fails to start, crank it without depressing the accelerator.

If the engine still does not start using the previous procedure, have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

Push-Starting

▼ Push-Starting

Do not push-start your Mazda.



WARNING

Never tow a vehicle to start it:

Towing a vehicle to start it is dangerous. The vehicle being towed could surge forward when its engine starts, causing the 2 vehicles to collide. The occupants could be injured.



Do not push-start a vehicle that has a manual transmission. It can damage the emission control system.

NOTE

You cannot start a vehicle with an automatic transmission by pushing it.

Emergency Starting

Running Out of Fuel (SKYACTIV-D 1.8)

▼ Running Out of Fuel (SKYACTIV-D 1.8)

CAUTION

Do not try starting the engine for more than 10 seconds at a time. Doing so, could damage the starter. If the engine does not start on the first try wait about 20 seconds before trying again.

If your vehicle runs out of fuel, add at least 10 L (2.6 US gal, 2.2 Imp gal) of diesel fuel, and try to restart the engine. Because air can get into fuel lines when a vehicle runs out of fuel, your engine may take longer to start. If the engine does not start the first time, try starting it several more times. If it still does not start, contact an expert repairer, we recommend an Authorised Mazda Repairer.

Overheating

▼ Overheating

 
If the engine coolant temperature gauge indicates overheating and the high engine coolant temperature warning indication is displayed, the vehicle loses power or you hear a loud knocking or pinging noise, the engine is probably too hot.

WARNING



Pull over to a safe location, then switch the ignition off and make sure the fan is not running before attempting to work near the cooling fan:

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.



Do not remove either cooling system cap when the engine and radiator are hot:

When the engine and radiator are hot, scalding coolant and steam may shoot out under pressure and cause serious injury.

Open the bonnet ONLY after steam is no longer escaping from the engine:

Steam from an overheated engine is dangerous. The escaping steam could seriously burn you.

If the engine coolant temperature gauge indicates overheating and the high engine coolant temperature warning indication is displayed:

1. Drive safely to the side of the road and park off the right-of-way.
2. Put a vehicle with an automatic transmission in park (P), a manual transmission in neutral.
3. Apply the parking brake.
4. Turn off the air conditioner.
5. Check whether coolant or steam is escaping from the engine compartment.

If steam is coming from the engine compartment:

Do not go near the front of the vehicle. Stop the engine. Wait until the steam dissipates, then open the bonnet and start the engine.

If neither coolant nor steam is escaping:

Open the bonnet and idle the engine until it cools.

CAUTION

If the cooling fan does not operate while the engine is running, the engine temperature will increase. Stop the engine and call an expert repairer, we recommend an Authorised Mazda Repairer.


6. Make sure the cooling fan is operating, then turn off the engine after the temperature has decreased.

Overheating

7. When cool, check the coolant level.
If it is low, look for coolant leaks from the radiator and hoses.

If you find a leak or other damage, or if coolant is still leaking:

Stop the engine and call an expert repairer, we recommend an Authorised Mazda Repairer.

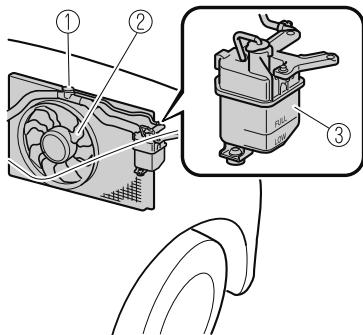

1. Cooling system cap
2. Cooling fan
3. Coolant reservoir

If you find no problems, the engine is cool, and no leaks are obvious:

Carefully add coolant as required (page 6-30).

CAUTION


If the engine continues to overheat or frequently overheats, have the cooling system inspected. The engine could be seriously damaged unless repairs are made. Consult an expert repairer, we recommend an Authorised Mazda Repairer.

Towing Description

▼ Towing Description

We recommend that towing be done only by an expert repairer, we recommend an Authorised Mazda Repairer or a commercial tow-truck service.

Proper lifting and towing are necessary to prevent damage to the vehicle. Particularly when towing an AWD vehicle, where all the wheels are connected to the drive train, proper transporting of the vehicle is absolutely essential to avoid damaging the drive system. Government and local laws must be followed.

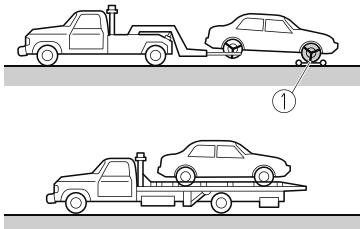

1. Wheel dollies

A towed 2WD vehicle should have its drive wheels (front wheels) off the ground. If excessive damage or other conditions prevent this, use wheel dollies.

When towing a 2WD vehicle with the rear wheels on the ground, release the parking brake.

Refer to Electric Parking Brake (EPB) on page 4-77.

A towed AWD vehicle must have all its wheels off the ground.

⚠ WARNING

Always tow an AWD vehicle with all four wheels off the ground:

Towing an AWD vehicle with either the front or rear wheels on the ground is dangerous as the drive train could be damaged, or the vehicle could trail away from the tow truck and cause an accident. If the drive train has been damaged, transport the vehicle on a flatbed truck.



⚠ CAUTION

➤ *Do not tow the vehicle pointed backward with driving wheels on the ground. This may cause internal damage to the transmission.*




Emergency Towing

- *Do not tow with sling-type equipment. This could damage your vehicle. Use wheel-lift or flatbed equipment.*



- *If the parking brake cannot be released when towing the vehicle, transport the vehicle with all front and rear wheels raised off the ground as shown in the figure. If the vehicle is towed without raising the wheels off the ground, the brake system could be damaged.*

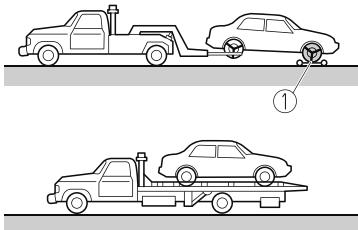

1. Wheel dollies

If towing service is not available in an emergency, the vehicle may be towed with all four wheels on the ground using the towing hook at the front of the vehicle. Only tow the vehicle on paved surfaces for short distances at low speeds.

CAUTION

Follow these instructions when towing the vehicle with all wheels on the ground.

1. Shift to neutral (Manual transmission), or the N position (Automatic transmission).
2. Switch the ignition to ON.
3. Release the parking brake.
Refer to Electric Parking Brake (EPB) on page 4-77.

Remember that power assist for the brakes and steering will not be available when the engine is not running.

Towing Hooks

▼ Towing Hooks

CAUTION


- The towing eyelet should be used in an emergency (to get the vehicle out of a ditch or a snow bank, for example).
- When using the towing eyelets, always pull the lead or chain in a straight direction with respect to the eyelet. Never apply a sideways force.

NOTE


When towing with chain or lead, wrap the chain or lead with a soft cloth near the bumper to prevent damage to the bumper.

1. Remove the towing eyelet, wheel brace, and the jack lever or equivalent from the boot/luggage compartment (page 7-24).
2. Wrap a flathead screwdriver or jack lever or a similar tool with a soft cloth to prevent damage to a painted bumper, and open the cap located on the front or rear bumper.


Front (Saloon)

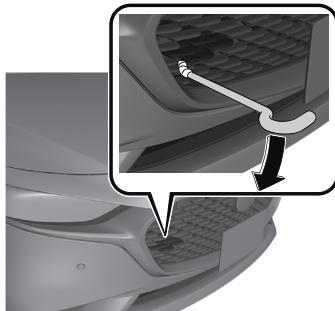


(Hatchback)

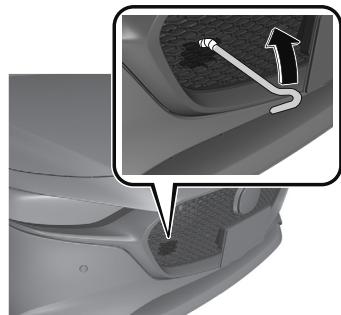

Rear (Saloon)

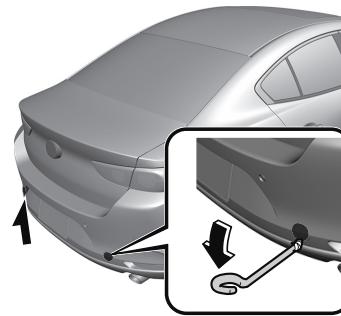

(Hatchback)

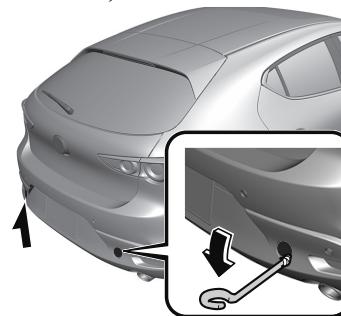

Emergency Towing

CAUTION

Do not use excessive force as it may damage the cap or scratch the painted bumper surface.

NOTE

Remove the cap completely and store it so as not to lose it.

3. Securely install the towing eyelet using the wheel brace or equivalent. Consult an Authorised Mazda Repairer.

Front (Saloon)




1. Wheel brace
 2. Towing eyelet
- (Hatchback)**




1. Wheel brace
2. Towing eyelet

Rear (Saloon)

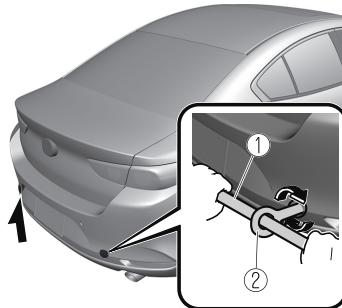

1. Wheel brace
 2. Towing eyelet
- (Hatchback)**

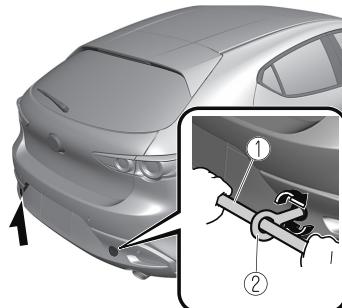

1. Wheel brace
 2. Towing eyelet
4. Hook the towing rope to the towing eyelet.

CAUTION

➤ If the towing eyelet is not securely tightened, it may loosen or disengage from the bumper when towing the vehicle. Make sure that the towing eyelet is securely tightened to the bumper.

Emergency Towing

- Be careful not to damage the towing eyelet and towing hook, vehicle body, or transmission system when towing under the following conditions:
 - Do not tow a vehicle heavier than yours.
 - Do not suddenly accelerate your vehicle as it will apply a severe shock to the towing eyelet and towing hook or rope.
 - Do not attach any rope other than to the towing eyelet and towing hook.

Warning/Indicator Lights and Warning Sounds

If a Warning Light Turns On or Flashes

▼ If a Warning Light Turns On or Flashes

If any warning light turns on/flashes, take appropriate action for each light. There is no problem if the light turns off, however if the light does not turn off or turns on/flashes again, consult an Authorised Mazda Repairer.

The details for some warnings can be viewed on the centre display or multi-information display in the instrument cluster.

Centre display

1. Select “Information” on the home screen.
2. Select “Vehicle Status Monitor”.
3. Select the applicable warning to view the warning details.

NOTE

You can also display the currently occurring warning by sliding the commander knob to the left while on the home screen of the centre display.

Multi-information display

1. Press the INFO switch on the steering switch to display the warning indication screen.
Refer to Multi-information Display on page 4-25.

▼ Brake System Warning Indication/Warning Light (Red)



This warning has the following functions:

Warning light inspection

For an operation check, make sure that the light turns on when the ignition is switched on, and turns off a few seconds later or when the engine is started.

When the light turns on

If the brake system warning light remains illuminated the brake fluid may be low or there could be a problem with the brake system. Park the vehicle in a safe place immediately and contact an expert repairer, we recommend an Authorised Mazda Repairer.

Refer to Inspecting Brake/Clutch Fluid Level on page 6-31.



Do not drive with the brake system warning light illuminated. Contact an expert repairer, we recommend an Authorised Mazda Repairer to have the brakes inspected as soon as possible:

Driving with the brake system warning light illuminated is dangerous. It indicates that your brakes may not work at all or that they could completely fail at any time. If this light remains illuminated, after checking that the parking brake is fully released, have the brakes inspected immediately.

Warning/Indicator Lights and Warning Sounds

! CAUTION

- In addition, the effectiveness of the braking may diminish so you may need to depress the brake pedal more strongly than normal to stop the vehicle.
- (With M Hybrid)
When starting the engine, the brake system warning light may turn on and the warning indication may be displayed. In this case, park the vehicle in a safe location and release the brake pedal.
If the brake system warning light/warning indication does not turn off even after parking the vehicle, have the vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Electronic Brake Force Distribution System Warning



If the electronic brake force distribution control unit determines that some components are operating incorrectly, the control unit may illuminate the brake system warning light and the ABS warning light simultaneously. The problem is likely to be the electronic brake force distribution system.

 
! WARNING

Do not drive with both the brake system warning light and ABS warning light illuminated. Have the vehicle towed to an expert repairer, we recommend an Authorised Mazda Repairer to have the brakes inspected as soon as possible:

Driving when the brake system warning light and ABS warning light are illuminated simultaneously is dangerous.

When both lights are illuminated, the rear wheels could lock more quickly in an emergency stop than under normal circumstances.

▼ Charging System Warning Indication/Warning Light



If the warning light illuminates while driving, it indicates a malfunction of the alternator or of the charging system. Drive to the side of the road and park off the right-of-way. Consult an expert repairer, we recommend an Authorised Mazda Repairer.

! CAUTION

Do not continue driving when the charging system warning light is illuminated because the engine could stop unexpectedly.

Warning/Indicator Lights and Warning Sounds

▼ Engine Oil Warning Indication/ Warning Light



This warning light indicates low engine oil pressure.

⚠ CAUTION

Do not run the engine if the oil pressure is low. Otherwise, it could result in extensive engine damage.

If the light illuminates or the warning indication is displayed while driving:

1. Drive to the side of the road and park off the right-of-way on level ground.
2. Turn off the engine and wait 5 minutes for the oil to drain back into the sump.
3. Inspect the engine oil level (page 6-28). If it's low, add the appropriate amount of engine oil while being careful not to overfill.

⚠ CAUTION

Do not run the engine if the oil level is low. Otherwise, it could result in extensive engine damage.

4. Start the engine and check the warning light.

If the light remains illuminated even though the oil level is normal or after adding oil, stop the engine immediately and have your vehicle towed to an expert repairer, we recommend an Authorised Mazda Repairer.

▼ High Engine Coolant Temperature Warning Indication



Displays if the engine coolant temperature has increased excessively.

Elevated Engine Coolant Temp. Drive Slowly” displayed

Drive slowly to reduce engine load until you can find a safe place to stop the vehicle and wait for the engine to cool down.

“Excessive Engine Coolant Temp. Stop the Vehicle in a Safe Location” displayed

This indicates the possibility of overheating. Park the vehicle in a safe place immediately and stop the engine. Refer to Overheating on page 7-49.

⚠ CAUTION

Do not drive the vehicle with the high engine coolant temperature warning light illuminated. Otherwise, it could result in damage to the engine.

Warning/Indicator Lights and Warning Sounds

▼ Power Steering Malfunction Indication/Indicator Light



The message is displayed if the electric power steering has a malfunction. If the message is displayed, stop the vehicle in a safe place and do not operate the steering wheel. There is no problem if the message in the display turns off after a while or when ignition is turned off and on. Contact an expert repairer, we recommend an Authorised Mazda Repairer if the message is displayed continuously.

NOTE

- *If the message is displayed, the power steering will not operate normally. In this case, the steering wheel can still be operated, however, the operation may feel heavy compared to normal, or the steering wheel could vibrate when turning.*
- *Repeatedly jerking the steering wheel left and right while the vehicle is stopped or moving extremely slowly will cause the power steering system to go into protective mode which will make the steering feel heavy, but this does not indicate a problem. If this occurs, park the vehicle safely and wait several minutes for the system to return to normal.*

▼ ABS Warning Indication/Warning Light



If the ABS warning light stays on while you're driving, the ABS control unit has detected a system malfunction. If this occurs, your brakes will function normally as if the vehicle had no ABS. Should this happen, consult an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

NOTE

- *When the engine is jump-started to charge the battery, uneven rpm occurs and the ABS warning light may illuminate. If this occurs, it is the result of the weak battery and does not indicate an ABS malfunction. Recharge the battery.*
- *The brake assist system does not operate while the ABS warning light is illuminated.*

▼ Master Warning Indication



The indication displays if the system has a malfunction.

Check the reason for the indication displaying on the centre display or multi-information display.

Refer to If a Warning Light Turns On or Flashes on page 7-56.

Warning/Indicator Lights and Warning Sounds

▼ Brake Control System Warning Indication/Warning Light (Amber)



The warning light illuminates when the system has a malfunction. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Electric Parking Brake (EPB) Indication/Indicator Light



This warning has the following functions:

Parking brake warning/Indicator light inspection

The light illuminates when the parking brake is applied with the ignition switched to START or ON. It turns off when the parking brake is released.

When the light is flashing

The light flashes if the Electric Parking Brake (EPB) has a malfunction. If the light remains flashing even if the Electric Parking Brake (EPB) switch is operated, consult an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

▼ Brake Override Warning Indication



This message is displayed when the accelerator pedal and brake pedal are depressed at the same time while driving. Release the accelerator pedal and depress the brake pedal.

▼ Check Engine Indication/Light



If this light illuminates while driving, the vehicle may have a problem. It is important to note the driving conditions when the light illuminated and consult an expert repairer, we recommend an Authorised Mazda Repairer.

The check engine light may illuminate in the following cases:

- The engine's electrical system has a problem.
- The emission control system has a problem.
- (Except SKYACTIV-D 1.8)
 - The fuel tank level being very low or approaching empty.
 - The fuel-filler cap is missing or not tightened securely.

If the check engine light remains on, or it flashes continuously, do not drive at high speeds and consult an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

Warning/Indicator Lights and Warning Sounds



WARNING

If the check engine light turns on, do not disconnect the battery leads.

If the battery leads are disconnected and then reconnected, the engine could be damaged and catch on fire.

▼ i-stop Warning Indication/Warning Light (Amber)*



When the light is turned on

- A problem in the system may be indicated under the following conditions. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.
- The light does not turn on when the ignition is switched ON.
- **(Except European model)**

If the i-stop warning light (amber) remains on while the engine is running, the battery performance may have decreased. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

When the light is flashing

The light continues to flash if the system has a malfunction. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Petrol Particulate Filter Warning Indication/Warning Light (SKYACTIV-X 2.0)



"Excessive Soot Levels in Filter. Drive Until Warning Light Turns Off" is displayed/When the light is turned on

The particulate matter (PM) cannot be removed automatically and the amount of collected PM reaches a specified amount. After the engine has sufficiently warmed up (engine coolant temperature of 80 °C (176 °F) or more), depress the accelerator pedal and drive the vehicle at a speed of 20 km/h (12 mph) or more for about 30 minutes to eliminate the PM.

"Abnormal Soot Levels in Filter. Have the Vehicle Inspected." is displayed/When the light is flashing

Contact an expert repairer, we recommend an Authorised Mazda Repairer.



If the vehicle is continually driven as usual with the petrol particulate filter warning light illuminated, PM increases and the warning light may start flashing. If the petrol particulate filter warning light starts flashing, have the vehicle inspected immediately at an expert repairer, we recommend an Authorised Mazda Repairer. If the vehicle is not inspected and continues to be driven, the engine may malfunction.

Warning/Indicator Lights and Warning Sounds

NOTE

- When the petrol particulate filter warning light flashes, the engine output is restricted to protect the petrol particulate filter.
- The engine sound and exhaust gas smell may change when PM is being removed while driving.

▼ Diesel Particulate Filter Warning Indication/Warning Light (SKYACTIV-D 1.8)



"Excessive Soot Levels in Filter. Drive Until Warning Light Turns Off" is displayed/When the light is turned on

The particulate matter (PM) cannot be removed automatically and the amount of collected PM reaches a specified amount. After the engine has sufficiently warmed up (engine coolant temperature of 80 °C (176 °F) or more), depress the accelerator pedal and drive the vehicle at a speed of 15 km/h (9.3 mph) or more for about 15 to 20 minutes to eliminate the PM.

"Abnormal Soot Levels in Filter. Have the Vehicle Inspected" is displayed/When the light is flashing

Contact an expert repairer, we recommend an Authorised Mazda Repairer.



CAUTION

If the vehicle is continually driven as usual with the diesel particulate filter warning light turned on, PM increases and the warning light may start flashing. If the diesel particulate filter warning light starts flashing, have the vehicle inspected immediately at an expert repairer, we recommend an Authorised Mazda Repairer. If the vehicle is not inspected and continues to be driven, the engine may malfunction.

NOTE

- When the diesel particulate filter warning light flashes, the engine output is restricted to protect the diesel particulate filter.
- The engine sound and exhaust gas smell may change when PM is being removed while driving.

▼ Automatic Transmission Warning Indication/Warning Light*



The indication/light illuminates when the transmission has a problem.

Warning/Indicator Lights and Warning Sounds

CAUTION

If the automatic transmission warning indication/light illuminates, the transmission has an electrical problem. Continuing to drive your Mazda in this condition could cause damage to your transmission. Consult an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

▼ TCS/DSC Indication/Indicator Light (Turns on)



If the light stays on, the TCS, DSC or the brake assist system may have a malfunction and they may not operate correctly. Take your vehicle to an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Air Bag/Seat Belt Pretensioner System Warning Indication/Warning Light



A system malfunction is indicated if the warning light constantly flashes, constantly illuminates or does not illuminate at all when the ignition is switched ON. If any of these occur, consult an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible. The system may not operate in an accident.

WARNING

Never tamper with the air bag/pretensioner systems and always have an expert repairer, we recommend an Authorised Mazda Repairer perform all servicing and repairs:

Self-servicing or tampering with the systems is dangerous. An air bag/pretensioner could accidentally activate or become disabled causing serious injury or death.

▼ KEY Warning Indication/Warning Light (Red)



“Keyless Entry System Malfunc. Have the Vehicle Inspected” is displayed

This message is displayed if the advanced keyless entry & push button start system has a problem.

Contact an expert repairer, we recommend an Authorised Mazda Repairer.

CAUTION

If the message is indicated, or the push button start indicator light (amber) flashes, the engine may not start. If the engine cannot be started, try starting it using the emergency operation for starting the engine, and have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

Refer to Emergency Operation for Starting the Engine on page 4-11.

Warning/Indicator Lights and Warning Sounds

"Low Key Fob Battery. Replace Battery" is displayed

When the key battery is low, the indication is displayed when the ignition is switched OFF.

"Key Not Detected" is displayed

- If the presence of the key cannot be detected (dead battery, battery malfunction, no key), it is displayed when the driver attempts to start the engine (push button start operation, brake pedal depression).
- Displayed when it is determined that a key that was in the vehicle has been removed from the vehicle. (Key taken out warning. Other than IG-OFF)

▼ Security Indicator Light



If the security indicator light flashes continuously while you are driving, do not shut off the engine. Go to an Authorised Mazda Repairer and have it checked. If the engine is shut off while the indicator light is flashing, you will not be able to restart it.

Make sure the key is within the operational range for signal transmission. Switch the ignition off, and then restart the engine. If the engine does not start after 3 or more tries, contact an Authorised Mazda Repairer.

NOTE

Because the electronic codes are reset when the immobilizer system is repaired, the keys are needed. Make sure to bring all the keys to an Authorised Mazda Repairer so that they can be programmed.

Warning/Indicator Lights and Warning Sounds

▼ AWD Warning Indication/Warning Light

AWD

“AWD Malfunction. Front Wheel Drive Only. Have the Vehicle Inspected” is displayed/When the light is turned on

The indication is displayed/the light turns on under the following conditions. The system may have a malfunction. Have the vehicle checked at an expert repairer, we recommend an Authorised Mazda Repairer.

- When there is a malfunction in the AWD system.

“Excessive AWD System Load. Drive Slowly Until Warning Light Turns Off. Vehicle Now in Front Wheel Drive” is displayed/When the light is flashing

The indication is displayed/the light flashes under the following conditions. Park the vehicle in a safe place and check that the warning indication light turns off/the warning light stops flashing, and then drive the vehicle. Contact an expert repairer, we recommend an Authorised Mazda Repairer if the indication is continuously displayed.

- When the differential oil temperature is excessively high.
- When there is a large difference between the front and rear wheel rotation, such as when trying to remove the vehicle from mud.

“Mismatched Tyre Diameters. Vehicle Now in Front Wheel Drive” is displayed/When the light is turned on

The indication is displayed/the light turns on under the following conditions. Inspect the tyre sizes or tyre pressures on all 4 wheels. Contact an expert repairer, we recommend an Authorised Mazda Repairer if the indication remains on or the warning light remains illuminated.

- When any of the tyre diameter is different.
- When any of the tyre pressure is incorrect.

▼ 120 km/h Warning Light*

120
km/h

The 120 km/h warning light illuminates when the vehicle speed exceeds 120 km/h.

Action to be taken

Lower the vehicle speed..

Warning/Indicator Lights and Warning Sounds

▼ Tyre Pressure Monitoring System (TPMS) Warning Indication/Warning Light (Flashing)*



If there is a problem with the TPMS or the voltage of a tyre pressure sensor decreases, the TPMS warning light flashes and a message is displayed on the multi-information display. Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

! WARNING

Do not drive the vehicle at high speeds if the TPMS warning light turns on or flashes:

Driving the vehicle at high speeds while the TPMS warning light is turned on or flashing is dangerous because the brake performance and the steering wheel operability will be reduced. If the vehicle is driven at high speeds or the brakes are suddenly applied, it could lead to an accident. Gradually apply the brakes to lower the vehicle's speed.

Do not ignore the TPMS warning light when it is turned on or flashing:

Continuing to drive the vehicle while ignoring the illumination/flashing of the TPMS warning light is dangerous because a tyre may burst which could lead to an accident. Take appropriate measures as soon as possible.

▼ High Beam Control System (HBC) Warning Indication/Warning Light (Amber)*



The light remains turned on if there is a problem with the system. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Adaptive LED Headlights (ALH) Warning Indication/Warning Light (Amber)*



The light remains turned on if there is a problem with the system. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

Warning/Indicator Lights and Warning Sounds

▼ i-ACTIVSENSE Warning Indication/Warning Light*



The indication displays if the system has a malfunction.

Check the reason for the indication displaying on the centre display or multi-information display.

Refer to If a Warning Light Turns On or Flashes on page 7-56.

▼ Exterior Light Warning Indication/Warning Light



This light illuminates if there is a malfunction in the exterior lights (except number plate lights). Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

CAUTION

Do not drive the vehicle while an exterior light has a malfunction. Poor visibility, and not being able to signal braking and turns may cause an accident. In addition, if the vehicle is driven with the lights not turned on, it may conflict with laws and regulations due to poor maintenance.

▼ Low Fuel Warning Indication/Warning Light



The light turns on when the remaining fuel is about 9.0 L (2.3 US gal, 1.9 Imp gal). If you continue to drive after the light turns on without refuelling and the fuel gauge reaches nearly empty, the light flashes.

NOTE

The light illumination timing may vary because fuel inside the fuel tank moves around according to the driving conditions and the vehicle posture.

Action to be taken

Add fuel. If the light is flashing, refuel as soon as possible.

Warning/Indicator Lights and Warning Sounds

▼ Engine Oil Level Warning Indication/Warning Light



This warning light indicates that the engine oil level is around the MIN mark (page 6-28).

CAUTION

Do not continue to drive the vehicle with the engine oil level warning indication/warning light displayed/turned on. If the vehicle continues to be driven with an insufficient amount of engine oil, it could cause damage to the engine.

Action to be taken

Add 1 L (0.3 US gal, 0.2 Imp gal) of engine oil (page 6-25).

▼ Seat Belt Warning Indication/Warning Light (Front seat)



The seat belt warning light turns on if the driver or front passenger's seat is occupied and the seat belt is not fastened with the ignition switched ON.

If the driver or front passenger's seat belt is unfastened (only when the front passenger's seat is occupied) and the vehicle is driven at a speed faster than about 20 km/h (12 mph), the warning light flashes. After a short time, the warning light stops flashing, but remains illuminated. If a seat belt remains unfastened, the warning light flashes again for a given period of time.

NOTE

- If the driver or front passenger's seat belt is unfastened after the warning light turns on, and the vehicle speed exceeds 20 km/h (12 mph), the warning light flashes again.*
- Placing heavy items on the front passenger's seat may cause the front passenger's seat belt warning function to operate depending on the weight of the item.*
- To allow the front passenger seat weight sensor to function properly, do not place and sit on an additional seat cushion on the front passenger's seat. The sensor may not function properly because the additional seat cushion could cause sensor interference.*

Warning/Indicator Lights and Warning Sounds

- If a small child is seated on the front passenger's seat, the warning light may not operate.*

Action to be taken

Fasten the seat belts.

▼ Seat Belt Warning Light (Rear seat) (Red)

REAR



If the rear seat belts are not fastened while the ignition is switched ON, the driver and the passenger are alerted by the warning light.

The warning light operates even if there is no passenger on the rear seat.

NOTE

If a rear seat belt is not fastened by a certain period of time after the engine has been started, the warning light turns off.

Action to be taken

Fasten the seat belts.

▼ Low Washer Fluid Level Warning Indication/Warning Light*



This warning light indicates that little washer fluid remains.

Action to be taken

Add washer fluid (page 6-32).

▼ Door-Ajar/Boot lid-Ajar/Liftgate-Ajar Warning Indication/Warning Light



The light turns on if any door/boot lid/liftgate is not closed securely.

Action to be taken


Close the door/boot lid/liftgate securely.

▼ Tyre Pressure Monitoring System (TPMS) Warning Indication/Warning Light (Turns on)*



If a tyre pressure decreases below the specified air pressure, the TPMS warning light turns on.

At the same time, a message and the tyre pressure of each tyre are displayed on the multi-information display alternately. In addition, the tyre(s) with low air pressure is displayed in yellow.

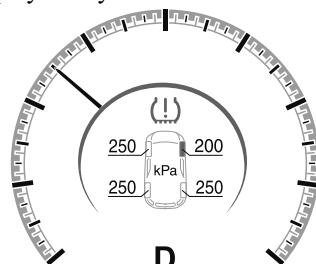

Warning/Indicator Lights and Warning Sounds

WARNING

Do not drive the vehicle at high speeds if the TPMS warning light turns on or flashes:
Driving the vehicle at high speeds while the TPMS warning light is turned on or flashing is dangerous because the brake performance and the steering wheel operability will be reduced. If the vehicle is driven at high speeds or the brakes are suddenly applied, it could lead to an accident. Gradually apply the brakes to lower the vehicle's speed.

Do not ignore the TPMS warning light when it is turned on or flashing:

Continuing to drive the vehicle while ignoring the illumination/flashing of the TPMS warning light is dangerous because a tyre may burst which could lead to an accident. Take appropriate measures as soon as possible.

NOTE

While the TPMS is learning the tyre positions, such as immediately after a tyre position has been changed, the tyre pressure at the tyre position prior to it being changed is displayed until the system completes the learning. For this reason, the tyre pressures displayed for the tyre positions may be different from the actual tyre pressures at the tyre positions.

Action to be taken

Adjust the tyre pressures to the appropriate pressures.

Refer to Tyre Inflation Pressure on page 6-44.

CAUTION

- Adjust the tyre pressures while the tyres are cool. Because the air pressure in the tyres fluctuates depending on the temperature, before adjusting the tyre pressures, let the vehicle sit for an hour or drive it only within a 1.6 km (1 mile) distance. If the tyre pressures are adjusted while the tyres are warm, the tyre pressures may decrease below the specified air pressure after cooling down which could turn on the warning light. In addition, because the air pressure in the tyres decreases when the ambient temperature is low, if the ambient temperature increases, an illuminated TPMS warning light may turn off. Under any circumstances, always adjust the tyre pressures while the tyres are cool.
- After adjusting the tyre pressures, the TPMS warning light turns off. If the TPMS warning light does not turn off, drive the vehicle at a speed of about 25 km (16 mph) or faster for 3 minutes or longer and make sure the warning light turns off.


If the TPMS warning light remains on even after adjusting the tyre pressures, one of the tyres may have a puncture.

Warning/Indicator Lights and Warning Sounds

Message Indicated on Multi-information Display

▼ Message Indicated on Multi-information Display

If there is a notification from the vehicle, a message is displayed on the multi-information display. Check the information and take the necessary action.

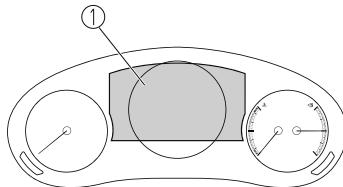

1. Multi-information display

If the warning light turns on/flashes simultaneously or a symbol is indicated on the display, check the information regarding the warning light or symbol.

Refer to If a Warning Light Turns On or Flashes on page 7-56.

Display* ^{1*2}	Content	Action to be taken
Depress Brake Pedal. Brake Hold Disabled	This message is indicated when there is a problem with the brake related system while the vehicle is being held in a stop position by the AUTOHOLD function.	Depress the brake pedal. Cancel the AUTOHOLD function and have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.
Steep Slope. Continue Pressing Brake Pedal to Hold Stopped Position	This message indicates the possibility of the vehicle not being held in the stopped position by the AUTOHOLD function, such as on steep slopes.	Depress and hold your foot on the brake pedal.
Depress Brake Pedal and Operate Switch to Release EPB	This message is indicated when the Electric Parking Brake (EPB) switch is operated without depressing the brake pedal.	Operate the Electric Parking Brake (EPB) switch while depressing the brake pedal.
Depress Brake Pedal and Operate Switch to Release	This message is indicated when the cancel operation is done without depressing the brake pedal while the vehicle is being held in the stopped position by the AUTOHOLD function.	Cancel the AUTOHOLD function stop hold control while depressing the brake pedal.
Mazda Radar Cruise Control Cancelled. Drive Safely	This message is indicated when the Mazda Radar Cruise Control (MRCC), Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function), and the Cruising & Traffic Support (CTS) have been cancelled other than by the driver.	Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

Warning/Indicator Lights and Warning Sounds

Display ^{*1*2}	Content	Action to be taken
Distance & Speed Alert Operation Cancelled Drive Safely	This message is indicated when the Distance & Speed Alert (DSA) have been cancelled other than by the driver.	Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.
Cruise Control Operation Cancelled. Drive Safely	This message is indicated when the Cruise Control have been cancelled other than by the driver.	Have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.
Emergency Braking Activated. Depress Brake Pedal to Hold Stop	This message is indicated after the Smart Brake Support (SBS) brakes operate and when the Smart Brake Support (SBS) is cancelled.	Depress the brake pedal.
Engine Stopped. Restart Engine Normally	<p>This message is indicated under the following conditions while the i-stop function is operating.</p> <p>(With M Hybrid)</p> <ul style="list-style-type: none"> • (Manual transmission) The driver's door is opened. • (Automatic transmission) The driver's seat belt is unfastened and the driver's door is opened. <p>(Without M Hybrid)</p> <ul style="list-style-type: none"> • The driver's seat belt is unfastened and the driver's door is opened. 	Press the push button start again to start the engine. For automatic transmission vehicles, shift the selector lever to the P position before starting the engine.)
Continue to Depress Brake Pedal While i-stop Is Active	This message is indicated when the driver's door is opened while the i-stop function is operating.	Depress the brake pedal. Stop the engine before leaving the vehicle.
Touch Key Fob to Push Button Start Switch	This message is indicated when the key battery is weak (battery dead or damaged key).	<p>Touch the key against push button start to start the engine.</p> <p>Refer to Engine Start Function When Key Battery is Dead on page 4-9.</p>
Depress Brake Pedal to Start Engine	This message is indicated when the push button start is pressed without depressing the brake pedal.	Depress the brake pedal and press the push button start.
Depress Clutch Pedal to Start Engine	This message is indicated when the push button start is pressed without depressing the clutch pedal.	Depress the clutch pedal and press the push button start.
Press Push Button Start Switch While Turning Steering Wheel Left or Right	This message is indicated while the steering wheel is locked.	Release the steering lock.
Check Gear Selector Lever Position	This message is indicated when the selector lever is shifted to the P or R position while driving.	Check the selector lever position.

Warning/Indicator Lights and Warning Sounds

Display*1*2	Content	Action to be taken
Close Door and Fasten Seat Belt	This message is indicated when AUTOHOLD is about to operate and a door is opened or a seat belt is unfastened.	When the AUTOHOLD is turned on, close the doors and fasten seat belts.
Wiper Blades Must Be on Windscreen Before Operating	This message is indicated when the windscreen wipers are operated with the wipers raised off the windscreen.	Lower the windscreen wipers.
Windscreen Wiper Range of Motion Reduced. Remove Obstruction(s)	This message is indicated when there is snow or dirt accumulation on the windscreen and the wiper operation range is narrowed.	Remove foreign matter from the windscreen.
Ignition Not Switched Off	This message is indicated when the driver's door is opened without switching the ignition OFF.	Switch the ignition OFF before leaving the vehicle.
Gear Selector Lever Not in Park	This message is indicated when a door is opened with the selector lever in a position other than the P position.	Shift the selector lever to the P position before leaving the vehicle.
Excessive Transmission Temperature. Drive Slowly	This message is indicated when the internal temperature of the automatic transmission is high.	Drive slowly to reduce load on the automatic transmission.
Excessive Transmission Temperature. Stop Vehicle in a safe Location	This message is indicated when the automatic transmission fluid temperature is abnormally high.	Park the vehicle in a safe place immediately and contact an expert repairer, we recommend an Authorised Mazda Repairer.
Fast Idle Warm Up For Engine Cleaning. Engine Speed Will Return to Normal When Cleaning is Completed	This message is indicated when the engine speed increases because the engine is being cleaned internally.	The engine speed will increase while the engine is running an internal cleaning cycle with the selector lever in the P or N position (automatic transmission) or the shift lever in the N position (manual transmission). Do not stop the engine while the engine speed is high. When the cleaning cycle is completed, the engine speed will return to normal.
Shift Into Park Before Exiting Vehicle	This message is indicated when the driver's door is opened with the shift lever in a position other than the P position.	Close the driver's door or shift the shift lever to the P position.

*1 A pop-up is displayed when a warning occurs.

*2 One screen displays four rows. If the entire message cannot be displayed on the screen, it switches to another screen.

Warning/Indicator Lights and Warning Sounds

Warning Sound is Activated

▼ Lights-On Reminder

If lights are on and the ignition is switched to ACC or off, a continuous beep sound will be heard when the driver's door is opened.

NOTE

- When the ignition is switched to ACC, the "Ignition Not Switched Off (STOP) Warning Beep" (page 7-75) overrides the lights-on reminder.
- A personalised function is available to change the sound volume for the lights-on reminder.

Refer to the Settings section in the MZD Connect Owner's Manual.

▼ Air Bag/Seat Belt Pretensioner System Warning Beep

If there is a problem with the air bag/seat belt pretensioner systems and the warning light illumination, a warning beep sound will be heard for about 5 seconds every minute.

The air bag and seat belt pretensioner system warning beep sound will continue to be heard for approximately 35 minutes. Have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.



WARNING

Do not drive the vehicle with the air bag/seat belt pretensioner system warning beep sounding:

Driving the vehicle with the air bag/seat belt pretensioner system warning beep sounding is dangerous. In a collision, the air bags and the seat belt pretensioner system will not deploy and this could result in death or serious injury. Contact an expert repairer, we recommend an Authorised Mazda Repairer to have the vehicle inspected as soon as possible.

▼ Seat Belt Warning Beep

Front seat

If the vehicle speed exceeds about 20 km/h (12 mph) with the driver or front passenger's seat belt unfastened, a warning beep sounds continuously. If the seat belt remains unfastened, the beep sound stops once and then continues for about 90 seconds. The beep stops after the driver or front passenger's seat belt is fastened.

NOTE

- Placing heavy items on the front passenger seat may cause the front passenger seat belt warning function to operate depending on the weight of the item.
- To allow the front passenger seat weight sensor to function properly, do not place and sit on an additional seat cushion on the front passenger seat. The sensor may not function properly because the additional seat cushion could cause sensor interference.

Warning/Indicator Lights and Warning Sounds

- When a small child sits on the front passenger seat, it is possible that the warning beep will not operate.

Rear seat

The warning beep only sounds if a seat belt is unfastened after being fastened.

▼ Ignition Not Switched Off (STOP) Warning Beep

European models

If the driver's door is opened with the ignition switched to ACC, a beep will be heard 6 times in the cabin to notify the driver that the ignition has not been switched OFF (STOP). Under this condition, the keyless entry system will not operate, the vehicle cannot be locked, and the battery voltage will be depleted.

Except European models

If the driver's door is opened with the ignition switched to ACC, a beep will be heard continuously in the cabin to notify the driver that the ignition has not been switched OFF (STOP). Under this condition, the keyless entry system will not operate, the vehicle cannot be locked, and the battery voltage will be depleted.

▼ Key Removed from Vehicle Warning Beep

Vehicles with advanced keyless function

If the key is taken out of the vehicle while the ignition is not switched OFF and all the doors are closed, the beep which sounds outside of the vehicle will be heard 6 times, and after that, the beep which sounds inside the vehicle will be heard 1 times.

Vehicles without advanced keyless function

If the key is taken out of the vehicle while the ignition is not switched OFF and all the doors are closed, a beep will be heard in the cabin 1 times.

NOTE

Because the key utilizes low-intensity radio waves, the Key Removed From Vehicle Warning may activate if the key is carried together with a metal object or it is placed in a poor signal reception area.

▼ Touch Sensor Inoperable Warning Beep (With the advanced keyless function)

A warning beep is activated to notify the driver that the doors are not locked when all of the following conditions are met:

- The ignition is switched OFF.
- All the doors and liftgate/boot lid are not fully closed.
- The lock is operated 3 times within 5 seconds.

Check the ignition and whether the doors and liftgate/boot lid are open or closed, and then operate the lock again.

Warning/Indicator Lights and Warning Sounds

▼ Key Left-in-luggage Compartment/Boot Warning Beep (With the advanced keyless function)

If the key is left in the luggage compartment/boot with all the doors locked and the liftgate/boot lid closed, a beep will be heard outside for about 10 seconds to notify the driver that the key is in the luggage compartment/boot. In this case, take out the key by pressing the electric liftgate/boot lid opener and opening the liftgate/boot lid. The key taken out of the luggage compartment/boot may not operate because its functions have been temporarily stopped. To restore the key's functions, perform the applicable procedure (page 3-9).

▼ Key Left-in-vehicle Warning Beep (With the advanced keyless function)

If all the doors and luggage compartment/boot are locked using another key while the key is left in the cabin, the beep which sounds outside of the vehicle will be heard for about 10 seconds to notify the driver that the key is in the cabin. In this case, take out the key by opening the door. A key taken out of the vehicle using this method may not operate because its functions have been temporarily stopped. To restore the key's functions, perform the applicable procedure (page 3-9).

▼ Low Fuel Warning Beep

When the low fuel warning light flashes, a warning beep is activated once at the same time.

▼ Electronic Steering Lock Warning Beep

The warning beep operates if the steering wheel is not unlocked after the push button start is pressed. (page 4-4)

▼ Brake System Warning Beep (With M Hybrid)

A warning beep is activated if a problem with the brake system occurs and the brakes may not work as intended. Decelerate the vehicle while checking the safety of the surrounding area, and park the vehicle in a safe place. After stopping the vehicle, contact an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Brake Override Warning Beep

A warning beep is activated when the accelerator pedal and brake pedal are depressed at the same time while driving. Only depress the brake pedal.

▼ Vehicle Problem Warning Beep

If any of the following problems occur, a warning beep is activated. Check the information regarding the warning indication in the instrument cluster or on the centre display.

- Automatic transmission problem
- Increase in automatic transmission internal temperature
- M Hybrid problem
- Brake fluid amount decrease
- Engine oil level sensor problem
- Electric Parking Brake (EPB) problem
- Engine hydraulic pressure decrease
- Engine coolant temperature increase
- Engine system problem

Warning/Indicator Lights and Warning Sounds

▼ Shift Position Warning Beep

A warning beep is activated continuously if the driver's door is opened with the selector lever in a position other than the P position. Shift the selector lever to the P position, or close the driver's door.

▼ Ignition Not Off Reminder Warning Beep (With M Hybrid)

A warning beep is activated continuously if the driver's door is opened with the selector lever in a position other than the P or N position. Shift the selector lever to the P or N position, or close the driver's door.

▼ i-stop Warning Beep*

- If the driver's door is opened while engine idling is stopped, the warning sound operates to notify the driver that engine idling is stopped. It stops when the driver's door is closed.
- The warning sound operates if the following operations are performed while the engine idling is stopped. In such cases, the engine does not restart automatically to ensure safety. Start the engine using the normal method.

(With M Hybrid)

· (Manual transmission)

With the shift lever in a position other than neutral, the driver's door is opened.

· (Automatic transmission)

With the selector lever in the D or M (not in second gear fixed mode) position, the driver's seat belt is unfastened and the driver's door is opened.

(Without M Hybrid)

· (Manual transmission)

With the shift lever in a position other than neutral, the driver's seat belt is unfastened and the driver's door is opened.

· (Automatic transmission)

With the selector lever in the D or M (not in second gear fixed mode) position, the driver's seat belt is unfastened and the driver's door is opened.

▼ Electric Parking Brake (EPB) Warning Beep

The warning buzzer is activated under the following conditions:

- The vehicle is driven with the parking brake applied.
- The Electric Parking Brake (EPB) switch is pulled while the vehicle is driven.
- You attempt to start driving the vehicle while the conditions for releasing the Electric Parking Brake (EPB) automatically have not been met.

▼ AUTOHOLD Warning Beep

Message is displayed and beep sound is activated simultaneously for about 5 seconds when using AUTOHOLD function or when AUTOHOLD switch is operated.

Because a problem with AUTOHOLD function has occurred, AUTOHOLD function does not operate even if AUTOHOLD switch is operated.

Warning/Indicator Lights and Warning Sounds

If the message is displayed and the beep sound is activated simultaneously, have your vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

▼ Outside Temperature Warning Beep*

Warns the driver of the possibility of icy roads when the outside temperature is low. If the outside temperature is lower than about 4 °C (39 °F), a beep sound is heard once and the outside temperature display flashes for about 10 seconds.
Refer to Outside Temperature Display on page 4-30.

▼ Vehicle Speed Alarm*

The vehicle speed alarm function is designed to alarm the driver via a single beep sound and a warning indication in the instrument cluster that the previously set vehicle speed has been exceeded. You can change the vehicle speed setting at which the warning is triggered.

▼ 120 km/h Warning Beep*

If the vehicle speed exceeds 120 km/h, a chime sounds for 5 seconds.

▼ Blind Spot Monitoring (BSM) Warning Beep*

The Blind Spot Monitoring (BSM) warning beep operates when the direction indicator lever is operated to the side where the Blind Spot Monitoring (BSM) warning light is illuminated.

▼ Front Cross Traffic Alert (FCTA) Warning Beep*

The Front Cross Traffic Alert (FCTA) warning beep is activated if there is a possibility of collision with a vehicle approaching from the front on the left and right sides of the vehicle.

▼ Rear Cross Traffic Alert (RCTA) Warning Beep*

The Rear Cross Traffic Alert (RCTA) warning beep is activated if there is a possibility of collision with a vehicle approaching from behind and from the rear on the left and right sides of the vehicle.

▼ Lane Departure Warning Sound*

While the system is operating, if the system determines that the vehicle may depart from the lane, it sounds a warning sound.

NOTE

The volume of the Lane Departure Warning System (LDWS) warning sound can be changed.

Refer to the Settings section in the MZD Connect Owner's Manual.

Warning/Indicator Lights and Warning Sounds

▼ Mazda Radar Cruise Control (MRCC) System Warnings*

The Mazda Radar Cruise Control (MRCC) system warnings notify the driver of system malfunctions and cautions on use when required.

Check based on the beep sound.

Warning beep type	Notification content
The beep sounds 1 time while the Mazda Radar Cruise Control (MRCC) is operating	The vehicle speed is slower than 25 km/h (16 mph) and the Mazda Radar Cruise Control (MRCC) system has been cancelled.
(European models) The beep sounds 5 times while driving (Except European models) The beep continues to sound while the vehicle is being driven.	The distance between your vehicle and the vehicle ahead is too close. Check the safety of the surrounding area and reduce vehicle speed.

▼ Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System Warnings*

The Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) system warnings notify the driver of system problems and precautions on use when required. Check after hearing a warning beep sound.

Warning beep type	Notification content
The beep sounds 1 time while the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) is operating	If a malfunction occurs in the system, make sure that the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) has been cancelled.
(European models) The beep sounds 3 times while driving. (Except European models) The beep sounds intermittently while the vehicle is being driven.	The distance between your vehicle and the vehicle ahead is too close. Check the safety of the surrounding area and reduce vehicle speed.

▼ Excessive Speed Warning*

If the vehicle speed exceeds the speed limit sign displayed in the active driving display/instrument cluster, the area around the speed limit sign flashes in amber and the warning sound is activated at the same time. If the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on.

Warning/Indicator Lights and Warning Sounds

▼ Speed Limiter Warning Beep*

If the vehicle speed exceeds the set speed by about 5 km/h (3 mph) or more, a warning beep operates continuously. The warning beep operates until the vehicle speed decreases to the set speed or less.

CAUTION

If the set speed is set lower than the current vehicle speed by pressing the SET- or RES switch, the warning beep is not activated for about 30 seconds even if the vehicle speed is faster than the newly set speed by 5 km/h (3 mph). Be careful not to drive over the set speed.

NOTE

When the system is temporarily cancelled by depressing the accelerator pedal fully, the ISA/ASL display shows the cancel display. Even if the vehicle speed exceeds the set speed by about 5 km/h (3 mph) or more while the cancel display is displayed, the warning sound is not operated.

▼ Collision warning*

If there is a possibility of a collision with a vehicle ahead or an obstruction at the rear of the vehicle, a warning sound is activated intermittently at the same time as the warning indications are displayed in the instrument cluster or active driving display.

▼ Door-ajar Warning Beep

A warning beep is activated if the vehicle is driven with any door or liftgate ajar. Drive the vehicle after closing the doors and liftgate.

When Liftgate/Boot Lid Cannot be Opened

When Liftgate/Boot Lid Cannot be Opened

▼ When Liftgate/Boot Lid Cannot be Opened

If the battery is dead, the liftgate/boot lid cannot be unlocked and opened.

In this case, the liftgate/boot lid can be unlocked by taking care of the dead battery situation.


Refer to Jump-Starting on page 7-44.

If the liftgate/boot lid cannot be unlocked even if the dead battery situation has been resolved, the electrical system may have a malfunction.


In this case, the liftgate/boot lid can be opened using the following procedure as an emergency measure.

(Hatchback)

1. Wrap the end of a flathead screwdriver in a cloth and remove the cover on the interior surface of the liftgate using it.

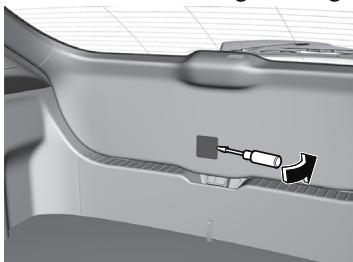


2. Turn the lever to the right to unlock the liftgate.

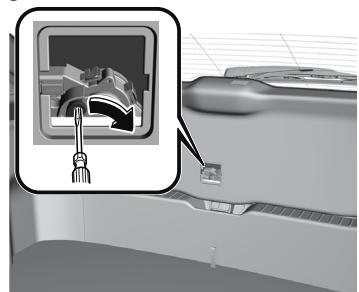


(Saloon)

1. Open the cover.

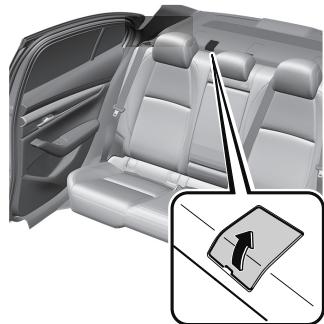


2. (With theft-prevention cover) Open the cap.

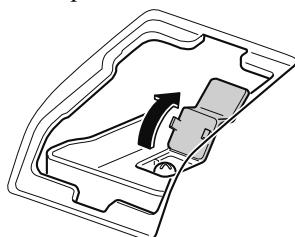

When Liftgate/Boot Lid Cannot be Opened


3. (With theft-prevention cover)

Turn the screw anticlockwise and remove it.

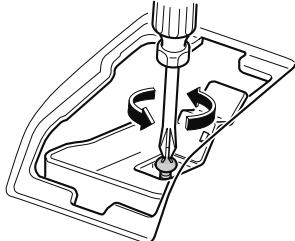


4. (With theft-prevention cover)


Remove the theft-prevention cover.

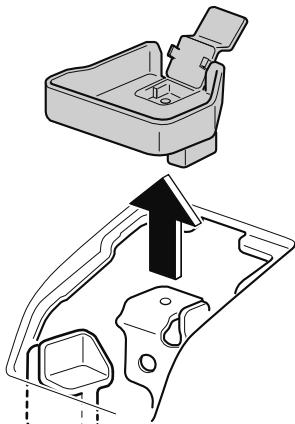

5. Move the lever to the left to fold the seatback.

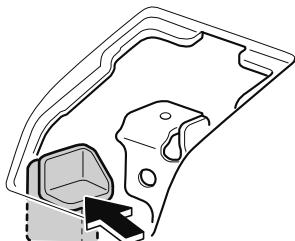

6. Move the lever to the left to open the boot lid.

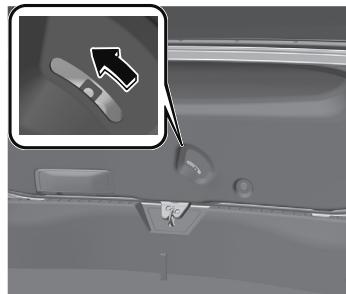

After performing this emergency measure, have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer as soon as possible.

Active Driving Display Does Not Operate

If the Active Driving Display Does Not Operate

▼ If the Active Driving Display Does Not Operate

If the active driving display does not operate, switch the ignition off and then restart the engine. If the active driving display does not operate even with the engine restarted, have the vehicle inspected at an expert repairer, we recommend an Authorised Mazda Repairer.

Windscreen Wipers Operate at High Speed

Windscreen Wipers Operate at High Speed

▼ Windscreen Wipers Operate at High Speed

The windscreen wipers may operate at high speed if there is a problem with the wiper control. If the windscreen wipers operate at high speed regardless of the wiper switch operation, have your vehicle inspected by an expert repairer, we recommend an Authorised Mazda Repairer.

Important consumer information including warranties and add-on equipment.

Warranty.....	8-2
Registering Your Vehicle in A Foreign Country.....	8-2
Add-On Non-Genuine Parts and Accessories.....	8-2
Cell Phones.....	8-4
Cell Phones Warning.....	8-4
Collection and Processing of Data in the Vehicle.....	8-5
Collection and Processing of Data in the Vehicle.....	8-5

Declaration of Conformity.....	8-10
Declaration of Conformity.....	8-10
Electromagnetic Compatibility.....	8-63
Electromagnetic Compatibility.....	8-63
Collection/Disposal of Old Equipment/ Used Battery.....	8-64
Information for Users on Collection and Disposal of Old Equipment and Used Batteries.....	8-64

Registering Your Vehicle in A Foreign Country

▼ Registering Your Vehicle in A Foreign Country

Registering your vehicle in a foreign country may be problematic depending on whether it meets the specific emission and safety standards of the country in which the vehicle will be driven. Consequently, your vehicle may require modifications at personal expense in order to meet the regulations.

In addition, you should be aware of the following issues:

Satisfactory vehicle servicing may be difficult or impossible in another country.

The fuel specified for your vehicle may be unavailable.

Parts, servicing techniques, and tools necessary to maintain and repair your vehicle may be unavailable.

There might not be an Authorised Mazda Dealer in the country you plan to take your vehicle.

The Mazda warranty is valid only in certain countries.

Add-On Non-Genuine Parts and Accessories

▼ Add-On Non-Genuine Parts and Accessories

Please note that technical alterations to the original state of your Mazda vehicle can affect the safety of the vehicle. Such technical alterations include not only the use of unsuitable spare parts, but also accessories, fittings or attachments, including rims and tyres.

Genuine Mazda Parts and Genuine Mazda Accessories have been specifically designed for Mazda vehicles.

Other parts and accessories than those mentioned above have not been examined and approved by Mazda unless explicitly stated by Mazda. We cannot certify the suitability of such products. Mazda is not liable for any damage caused by the use of such products.

WARNING

Be very careful in choosing and installing add-on electrical equipment, such as mobile telephones, two-way radios, stereo systems, and car alarm systems:

Incorrectly choosing or installing improper add-on equipment or choosing an improper installer is dangerous. Essential systems could be damaged, causing engine stalling, air-bag (SRS) activation, ABS/TCS/DSC inactivation, or a fire in the vehicle.

Mazda assumes no responsibility for death, injury, or expenses that may result from the installation of add-on non-genuine parts or accessories.

Cell Phones Warning

▼ Cell Phones Warning



Please comply with the legal regulations concerning the use of communication equipment in vehicles in your country:

Use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous. Dialing a number on a cell phone while driving also ties-up the driver's hands. Use of these devices will cause the driver to be distracted and could lead to a serious accident. If a passenger is unable to use the device, pull off the right-of-way to a safe area before use. If use of a cell phone is necessary despite this warning, use a hands-free system to at least leave the hands free to drive the vehicle. Never use a cell phone or other electrical devices while the vehicle is moving and, instead, concentrate on the full-time job of driving.

Collection and Processing of Data in the Vehicle

Collection and Processing of Data in the Vehicle

▼ Collection and Processing of Data in the Vehicle

In-vehicle data processing

Electronic control units are installed in your vehicle. These control units process data they, for example, receive from vehicle sensors, generate themselves or exchange with each other. Some control units are required for the safe operation of your vehicle, others provide you with support while driving (driver assistance systems) or enable comfort or infotainment functions.

General information on in-vehicle data processing is provided below. Further information regarding which specific data is collected and stored in your vehicle and transmitted to third parties, and for what purpose, can be found under the heading 'data protection' in the respective operating instructions where direct links are made to the affected functional specifications. These operating instructions are also available online and, depending on the vehicle configurations, in digital format on the vehicle.

Personal references

Every vehicle is identified by means of a unique vehicle identification number. This vehicle identification number is traceable to the current and former owners of the vehicle. Data collected from the vehicle also can be traced back to the owner or driver of the vehicle by other means, e.g., the number plate.

The data generated or processed by the control units therefore may be personal data or may, under certain circumstances, be personally identifiable data. Depending on what vehicle data is available, it may be possible to draw conclusions with regard to, for example, your driving behaviour, your location or your route, or consumption patterns.

Your rights with regard to data protection
Under current data protection law, you have certain rights with regard to companies which process your personal data.

Accordingly, you are entitled to request the comprehensive disclosure of information, free of charge, vis-a-vis the manufacturer and third parties (e.g., commissioned breakdown services or workshops, providers of online services on the vehicle), provided that these have stored personal data relating to you. You may request information regarding what data is stored about you, for what purpose and the origination of that data. Your right to information also extends to the transfer of data to other third parties.

Collection and Processing of Data in the Vehicle

For more information on your legal rights relating to Mazda (for example, your right to the deletion and correction of data), please refer to the applicable Data Protection Policy on the country-specific Mazda website, where contact details are also provided.

Data, which is exclusively stored locally on the vehicle, may be viewed with expert assistance, e.g., in a vehicle workshop, in return for payment if appropriate.

Legal requirements regarding the disclosure of data

To the extent that legal regulations exist, manufacturers are obliged to release information stored by them, at the request of public authorities, to the extent required on a case-by-case basis (e.g., when a criminal offence is being investigated).

Public authorities are also permitted to read the data from vehicles in specific cases, within the scope of applicable law. For example, in the event of an accident, information can be read from the air bag control unit to help clarify the circumstances of the accident.

Operational data on the vehicle
Control units process data in order to operate the vehicle.

These include, for example:

- vehicle status information (e.g., speed, deceleration, lateral acceleration, wheel speed, seatbelt usage indicator),

- environmental conditions (e.g., temperature, rain sensor, distance sensor).

These data are generally volatile and are not stored beyond the operating time, and only processed on the vehicle itself. Control units frequently contain data storage media. These can be used to document, either temporarily or permanently, information about the condition of the vehicle, component stress, maintenance requirements and technical events and failures.

The following information may be stored, depending on the technical configuration:

- operating conditions of system components (e.g., fill levels, tyre pressures and battery status),
- malfunctions and defects in important system components (e.g., lighting and brakes),
- response of the system to extraordinary driving situations (e.g., deployment of an air bag, activation of stability control systems),
- information on events in which the vehicle is damaged,
- for electric vehicles, the state of charge of the high-voltage battery and the vehicle's estimated range.

In particular cases (e.g., if the vehicle has detected a malfunction), it may be necessary to store data which would normally be volatile.

Collection and Processing of Data in the Vehicle

If you make use of services (e.g., repair and maintenance services), it may be possible, if necessary, to read out and use the stored operating data together with the vehicle identification number. The data from the vehicle may be read out by employees of the Mazda Network (e.g. authorised workshops, manufacturer) or by third parties (e.g., breakdown services, independent repair shops). The same applies in the case of warranty cases and quality assurance measures.

The data is usually read out via the mandatory OBD (on-board diagnostics) connection on the vehicle. The operating data read out document the technical conditions of the vehicle or individual components and help with fault diagnostics, compliance with warranty obligations and quality improvement. These data, in particular information regarding component stress, technical events, operating errors and other errors are transmitted to the manufacturer, if necessary, together with the vehicle identification number. In addition, product liability falls under the responsibility of the manufacturer. For this purpose, the manufacturer uses operating data external to the vehicles, for example, recall campaigns. These data also may be used to verify the customer's statutory warranty and manufacturer warranty claims.

Error memory on the vehicle can be reset by a service operator within the course of repair and maintenance work or at your request.

Comfort and infotainment functions
You can store comfort settings and customisations on the vehicle, and change/reset these at any time.

Depending on the particular vehicle configurations, these may include:

- seat and steering wheel position settings,
- chassis adjustments and air-conditioning settings,
- customisations such as interior lighting.

You are also able to incorporate data into the vehicle's infotainment functions yourself within the context of the selected configuration.

Depending on the particular vehicle configurations, these may include:

- multimedia data, e.g., music, films or photos for playback in an integrated multimedia system,
- address book data for use in conjunction with an integrated hands-free system or integrated navigation system,
- navigation destinations entered,
- data relating to the use of internet services.

This data for comfort and infotainment functions may be stored locally on the vehicle or it may be located on a device that you have connected to your vehicle (e.g., smartphone, USB stick or MP3 player). Provided that you have entered this data yourself, you will be able to delete it at any time.

Collection and Processing of Data in the Vehicle

Transmission of this data from the vehicle is exclusively at your request, in particular, relating to the settings you have selected when using online services.

Smartphone integration, for example, Android Auto or Apple car play

If your vehicle is equipped accordingly, you will be able to connect your smartphone or another mobile device to the vehicle so that you can control it using the integrated control elements within the vehicle. Smartphone images and sounds can be output via the vehicle's multimedia system. At the same time, specific information is transferred to your smartphone. Depending on the type of integration, this may include location data, antidazzle mode and other general vehicle information. Please familiarise yourself with the operating instructions for the vehicle/infotainment system.

Integration enables selected smartphone apps to be used, for example, navigation or music playback. Further interaction between the smartphone and the vehicle does not take place, in particular, active access to vehicle data. The nature of any further data processing is determined by the app provider. Whether and which settings can be used depends on the particular app and the operating system of your smartphone.

Online services

If your vehicle is equipped with a wireless network connection, this enables the exchange of data between your vehicle and other systems. The wireless connection is enabled by means of a transmission and receiving unit which is specific to the vehicle or via a mobile terminal (e.g., smartphone) that you have installed. Online functions can be used via this network connection. These include online services and applications (apps) provided to you by the manufacturer or another provider.

Services provided by the manufacturer
For our online services, the respective functions are described by Mazda in an appropriate place (e.g., in the operating instructions and/or on the country-specific Mazda website) and provided together with the associated data protection information. Personal data may be used to provide online services. The exchange of data for this purpose takes place via a protected connection, for example, using the IT systems intended for this. In addition to the provision of services, the collection, processing and use of personal data takes place exclusively on the basis of a legal permission, for example, in the case of emergency call systems required by law, by means of a contractual agreement or approval.

Collection and Processing of Data in the Vehicle

You can activate or deactivate the (sometimes chargeable) services and functions in the vehicle, and sometimes even the entire wireless connection. Functions and services required by law, such as emergency call systems, are excluded from this.

Third-party services

If you choose to make use of the online services of other providers (third parties), these services shall come under the responsibility of the respective provider and be subject to their data protection conditions and terms of use. The manufacturer generally has no influence with regard to the content exchanged in this way.

Please inform yourself about the nature, scope and purpose with regard to the collection and use of personal data within the context of third-party services by the respective service provider.

(For Europe)

Further information regarding data protection can be found on the Mazda website.

Please visit “<https://www.mazdamotors.eu>” to find your country-specific webpage.

Declaration of Conformity

Declaration of Conformity

▼ Keyless Entry System/Immobilizer System

[EN] English	Hereby, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, declares that the radio equipment type Keyless System (SKE11E-01, SKE114-01, SKE116-01) is in compliance with Directive 2014/53/EU.
[BG] Bulgarian	С настоящото MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS декларира, че този тип радиосъоръжение Keyless System (SKE11E-01, SKE114-01, SKE116-01) е в съответствие с Директива 2014/53/EC.
[ES] Spanish	Por la presente, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS declara que el tipo de equipo radioeléctrico Keyless System (SKE11E-01, SKE114-01, SKE116-01) es conforme con la Directiva 2014/53/UE.
[CS] Czech	Tímto MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS prohlašuje, že typ rádiového zařízení Keyless System (SKE11E-01, SKE114-01, SKE116-01) je v souladu se směrnicí 2014/53/EU.
[DA] Danish	Hermed erklærer MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, at radioudstyrstypen Keyless System (SKE11E-01, SKE114-01, SKE116-01) er i overensstemmelse med direktiv 2014/53/EU.
[DE] German	Hiermit erklärt MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, dass der Funkanlagentyp Keyless System (SKE11E-01, SKE114-01, SKE116-01) der Richtlinie 2014/53/EU entspricht.
[ET] Estonian	Käesolevaga deklareerib MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, et käesolev raadioseadme tüüp Keyless System (SKE11E-01, SKE114-01, SKE116-01) vastab direktiivi 2014/53/EL nõuetele.
[EL] Greek	Με την παρούσα ο/η MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, δηλώνει ότι ο ραδιοεξοπλισμός Keyless System (SKE11E-01, SKE114-01, SKE116-01) πληροί την οδηγία 2014/53/ΕΕ.
[FR] French	Le soussigné, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, déclare que l'équipement radioélectrique du type Keyless System (SKE11E-01, SKE114-01, SKE116-01) est conforme à la directive 2014/53/UE.
[HR] Croatian	MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS ovime izjavljuje da je radijska oprema tipa Keyless System (SKE11E-01, SKE114-01, SKE116-01) u skladu s Direktivom 2014/53/EU.
[IT] Italian	Il fabbricante, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, dichiara che il tipo di apparecchiatura radio Keyless System (SKE11E-01, SKE114-01, SKE116-01) è conforme alla direttiva 2014/53/UE.
[LV] Latvian	Ar šo MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS deklarē, ka radioiekārta Keyless System (SKE11E-01, SKE114-01, SKE116-01) atbilst Direktīvai 2014/53/ES.
[LT] Lithuanian	Aš, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, patvirtinu, kad radijo įrenginių tipas Keyless System (SKE11E-01, SKE114-01, SKE116-01) atitinka Direktyvą 2014/53/ES.
[HU] Hungarian	MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS igazolja, hogy a Keyless System (SKE11E-01, SKE114-01, SKE116-01) típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
[MT] Maltese	B'dan, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, niddikjara li dan it-tip ta' tagħmir tar-radju Keyless System (SKE11E-01, SKE114-01, SKE116-01) huwa konformi mad-Direttiva 2014/53/UE.
[NL] Dutch	Hierbij verklaar ik, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS, dat het type radioapparatuur Keyless System (SKE11E-01, SKE114-01, SKE116-01) conform is met Richtlijn 2014/53/EU.
[PL] Polish	MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS niniejszym oświadcza, że typ urządzenia radiowego Keyless System (SKE11E-01, SKE114-01, SKE116-01) jest zgodny z dyrektywą 2014/53/UE.
[PT] Portuguese	O abaixo assinado MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS declara que o presente tipo de equipamento de rádio Keyless System (SKE11E-01, SKE114-01, SKE116-01) está em conformidade com a Diretiva 2014/53/UE.
[RO] Romanian	Prin prezență, MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS declară că tipul de echipamente radio Keyless System (SKE11E-01, SKE114-01, SKE116-01) este în conformitate cu Directiva 2014/53/UE.

Declaration of Conformity

[SK] Slovak	MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS týmto vyhlasuje, že rádiové zariadenie typu Keyless System (SKE11E-01, SKE114-01, SKE116-01) je v súlade so smernicou 2014/53/EÚ.
[SL] Slovenian	MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS potrjuje, da je tip radijske opreme Keyless System (SKE11E-01, SKE114-01, SKE116-01) skladen z Direktivo 2014/53/EU.
[FI] Finnish	MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS vakuuttaa, että radiolaiteetyyppi Keyless System (SKE11E-01, SKE114-01, SKE116-01) on direktiivin 2014/53/EU mukainen.
[SV] Swedish	Härmed försäkrar MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS att denna typ av radioutrustning Keyless System (SKE11E-01, SKE114-01, SKE116-01) överensstämmer med direktiv 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:<http://www.mitsubishielectric.com/bu/automotive/doc/re.html>

Manufacturer:

MITSUBISHI ELECTRIC CORPORATION, HIMEJI WORKS
840, Chiyoda-machi, Himeji, Hyogo 670-8677, Japan

Hand Unit: SKE11E-01

Frequency band in which the radio equipment operates: 433.92 MHz

Maximum radio-frequency power transmitted in the frequency band in which the radio equipment operates: 10mW

LFU: SKE114-01

Frequency band in which the radio equipment operates:125 kHz

Maximum radio-frequency power transmitted in the frequency band in which the radio equipment operates: 107dB μ V/m at. 10 meters

Receiver: SKE116-01

Frequency band in which the radio equipment operates: 433.92 MHz

CAUTION - Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

CAUTION - Do not expose Hand Unit to excessive heat such as sunshine, fire or the like.

WARNING

Do not ingest the battery, Chemical Burn Hazard

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The caution mark of ISO 7000-0434 is located on the internal case.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been Type Approved by Jamaica: SMA -SKE11D-01 / SKE114-01 / SKE115-01.

Declaration of Conformity

Keyless System Radio approval Marking

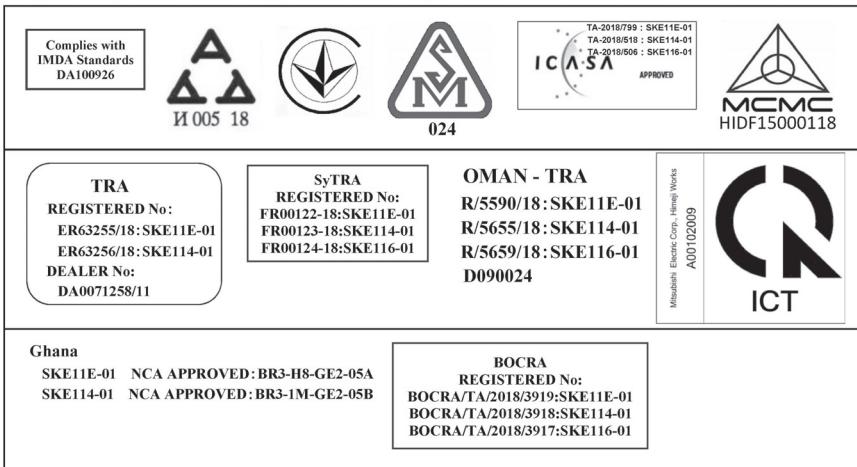

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

Israel

51-64114(SKE11E-01)/51-64113(SKE114-01)/51-64112(SKE116-01)
מספר אישור אלחוטי של משרד התקשורת הוא
אפשר להחליפה את האנטנה המקורית של המכשיר ולא
לעשות בו כל שינוי טכני אחר

Thailand

"This telecommunication equipment is in compliance with NBTC requirements."

▼ Tyre Pressure Monitoring System



Interior

Continental Automotive GmbH, Siemensstraße 12, 93055 Regensburg, Deutschland

Adresse

Rene Spanel
I B&S RD CFRF WM
Tel: +49-941-790-8694
Fax: +49-941-79099-8694
Rene.Spanel@continental-corporation.com

Datum
08.09.2017

Ihre Nachricht vom
Datum

Unser Zeichen
TIS-15

Ihr Zeichen
Zeichen

EU Declaration of Conformity in accordance with Directive 2014/53/EU

Manufacturer: Continental Automotive GmbH
Address: Siemensstrasse 12
D-93055 Regensburg
Germany

Product type designation: TIS-15

Intended use: Tire pressure monitoring sensor

The product mentioned above complies with the essential requirements and other relevant provisions of Directive 2014/53/EU, when used for its intended purpose:

Health and safety pursuant to Art. 3(1)(a): *Applied standard(s):*
EN 60950-1:2006 + A11:2009 +
A1:2010 + A12:2011+A2:2013

Electromagnetic compatibility pursuant to Art. 3(1)(b): *Applied standard(s):*
DRAFT EN 301 489-3 V2.1.1

Efficient use of spectrum pursuant to Art. 3(2): *Applied standard(s):*
EN 300 220-2 V3.1.1

The following marking applies to the above mentioned product:



Continental Automotive GmbH
Regensburg, 08.09.2017

Andreas Wolf

Executive Vice President
Body & Security

Norbert Müller
Director Research & Development
Body & Security.

1/1

Continental Automotive GmbH | Siemensstraße 12, 93055 Regensburg | Postfach: 10 09 43 | 93009 Regensburg
www.continental-corporation.com
Sitz der Gesellschaft: Hannover | Registergericht: Amtsgericht Hannover
HRB 1033 | USt-Ident: DE 81960965
Vorsitzender des Aufsichtsrates: Helmut Matschi
Geschäftsführer: Georg Sistermann
Bankverbindung: Deutsche Bank AG, Frankfurt am Main | BIC / SWIFT: DEUTDEFXXX | IBAN: DE07 5007 0010 0096 5103 00

Declaration of Conformity

[Taiwan]

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或 變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善 至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受 合 法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

[Moldova]



024

[Jordan]

Manufacturer Name : Continental Automotive GmbH
Model, Type Number : TIS-15
Serial Number
TRC type approval's number : TRC/LPD/2017/560

Declaration of Conformity

[UAE]

[Indonesia]

**TRA
REGISTERED No:
ER59583/17
DEALER No:
DA36975/14**

**55266/SDPPI/2018
2684**

[Russia]



Декларация о соответствии ТР ТС 020/2011 ЕАЭС № RU Д-ДЕ.ЭМ03.В.00148 от 05.03.2018, действительна по 04.03.2023, зарегистрирована органом по сертификации продукции ФГУП Ордена Трудового Красного Знамени научно-исследовательский институт радио «Испытательный центр «Омега»

[Israel]

- .א. השימוש במכשיר הוא על בסיס "משני" ופטור מרישון הפעלה אלחוטי.
- .ב. כלומר - לא מוגן מההפרעת, ולא הפר למערכות אחרות רק "בפועלות בזק" לשימוש עצמי של הלוקוח בלבד, החיזוד פטור מרישון הפעלה אלחוטי.
- .ג. מתן "שירות בזק" לצד ג' מה"ב רישון מיוחד ממשרד התקשרות אסור להחליף את האנטנה המקורית של המכשיר, ולא לעשות בו כל שינוי טכני אחר.

Declaration of Conformity

▼ Mazda Radar Cruise Control (MRCC)

Date: 22/03/2017 Page 3 (9) DocID: RED_UserGuideReference_AR54-B_v4.0.docx	User Guide Reference ARS 4-B Advanced Radar Sensor	 Advanced Driver Assistant Systems
---	---	--

A) Generic information:

Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Straße 10, 88131 Lindau, Germany
--

B) Language Text:

01_RED_BG_Bulgarian

ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ	С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение ARS 4-B е в съответствие с Директива 2014/53/EU. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/
	радиочестотна лента или ленти, в която или които работи радиосъоръжението: 76–77 GHz
	максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението.. 3.16W (35dBm RMS EIRP)

02_RED_ES_Spanish

DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA	Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico ARS 4-B es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/
	Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 76–77 GHz
	Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 3.16W (35dBm RMS EIRP)

03_RED_CS_Czech

ZJEDNODŮSENÉ EU PROHLÁŠENÍ O SHODE	Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádiového zařízení ARS 4-B je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://continental.automotive-approvals.com/
	Kmitočtové pásmo (kmitočtová pásmá), v němž (v nichž) rádiové zařízení pracuje: 76–77 GHz
	Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno. 3.16W (35dBm RMS EIRP)

04_RED_DA_Dansih

FORENLIGT EU-OVERENSSTEMMELSE SERKLÆRING	Herved erklærer ADC Automotive Distance Control Systems GmbH, at radioudstyrstypen ARS 4-B er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental.automotive-approvals.com/
--	---

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany
Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Declaration of Conformity

Date: 22/03/2017 Page 4 (9) DocID: RED_UserGuideReference_AR54-B_v4.0.docx	User Guide Reference ARS 4-B Advanced Radar Sensor	 Advanced Driver Assistant Systems
	Frekvensbånd, som radioudstyret fungerer på: 76–77 GHz	
	Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 3.16W (35dBm RMS EIRP)	

05_RED_DE_German

VEREINFACHTE EU-KONFORMITÄTSEKRÄRUNG	Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp ARS 4-B der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://continental.automotive-approvals.com/
	Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 76–77 GHz
	Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 3.16W (35dBm RMS EIRP)

06_RED_ET_Estonian

LIIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON	Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev radioseadme tüüp ARS 4-B vastab direktivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: http://continental.automotive-approvals.com/
	Sagedusriba(d), millel radioseade töötab: 76–77 GHz
	Radioseadme töosagedus(t)el edastatav maksimaalne saatevõimsus: 3.16W (35dBm RMS EIRP)

07_RED_EL_Greek

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ	Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεπιλογές ARS 4-B πληροί την οδηγία 2014/53/EU. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθα στοιχεία στο διαδίκτυο: http://continental.automotive-approvals.com/
	Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεπιλογισμός: 76–77 GHz
	η μέντητη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεπιλογές: 3.16W (35dBm RMS EIRP)

08_RED_EN_English

SIMPLIFIED EU DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type ARS 4-B is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/
	Frequency band(s) in which the radio equipment operates: 76–77 GHz
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 3.16W (35dBm RMS EIRP)

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Domier-Straße 10, D-88131 Lindau, Germany
Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Declaration of Conformity

Date: 22/03/2017 Page 5 (9) DocID: RED_UserGuideReference_ARS4-B_v4.0.docx	User Guide Reference ARS 4-B Advanced Radar Sensor	 Advanced Driver Assistant Systems
---	---	--

09_RED_FR_French

DECLARATION UE DE CONFORMITE SIMPLIFIEE	Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type ARS 4-B est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/
	Bandes de fréquences utilisées par l'équipement radioélectrique: 76–77 GHz
	Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 3.16W (35dBm RMS EIRP)

10_RED_GA_empty_no_text

Related RED Directive not released.

11_RED_HR_Croatian

POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI	ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa ARS 4-B u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://continental.automotive-approvals.com/
	Frekvencijski pojas (frekvencijski pojas) u kojem (kojima) radijska oprema radi: 76–77 GHz
	Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 3.16W (35dBm RMS EIRP)

12_RED_IT_Italian

DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA	Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio ARS 4-B è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://continental.automotive-approvals.com/
	Bandi di frequenza di funzionamento dell'apparecchiatura radio: 76–77 GHz
	Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 3.16W (35dBm RMS EIRP)

13_RED_LV_Latvian

VIENĀKRĀŠOTA ES ATBILSTĪBAS DEKLARĀCIJA	Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārtā ARS 4-B atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://continental.automotive-approvals.com/
	Frekvenču joslā(-as), kurā(-ās) radioiekārtas darbojas: 76–77 GHz
	Frekvenču joslā(-as), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu: 3.16W (35dBm RMS EIRP)

Declaration of Conformity

Date: 22/03/2017 Page 6 (9) DocID: RED_UserGuideReference_ARSA-B_v4.docx	User Guide Reference ARS 4-B Advanced Radar Sensor	 Advanced Driver Assistant Systems
--	---	--

14_RED_LT_Lithuanian

SUPÄPRASTINTA ES ATITIKTIES DEKLARACIJA	Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas ARS 4-B atitinka Direktyvą 2014/53/EU. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/
	Dažnių juosta (-os), kuriuoje (-ose) veikia radijo įrenginiai: 76–77 GHz
	Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juoste (-ose), kuriuoje (-ose) veikia radijo įrenginiai: 3.16W (35dBm RMS EIRP)

15_RED_HU_Hungarian

EGYSZERŰSÍTETT EU-MEGFELELŐSÉGI NYILATKOZAT	ADC Automotive Distance Control Systems GmbH igazolja, hogy a ARS 4-B típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szovege elérhető a következő internetes címen:: http://continental.automotive-approvals.com/
	Az(ok) a frekvenciasáv(ok), amely(ekben) a rádióberendezés működik: 76–77 GHz
	Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximális jelerősség, amely(ekben) a rádióberendezés üzemel: 3.16W (35dBm RMS EIRP)

16_RED_MT_Maltese

DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL-UE	B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju ARS 4-B huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarrazzjoni ta' konformità tal-UE huwa disponibbli fuan l-indirizz tal-internet li ġej: http://continental.automotive-approvals.com/
	Il-medda/meded tal-frekwenza li jaħdem fihorn it-tagħmir tar-radju: 76–77 GHz
	Il-potenza massima tal-frekwenza tar-radju trazmessu fil-medda/meded tal-frekwenza li jaħdem fihorn it-tagħmir tar-radju: 3.16W (35dBm RMS EIRP)

17_RED_NL_Dutch

VEREENVOUDIGDE EU-CONFORMITEITSVERKLARING	Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur ARS 4-B conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/
	Frequentieband(en) waarin de radioapparatuur functioneert: 76–77 GHz
	Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 3.16W (35dBm RMS EIRP)

18_RED_PL_Polish

UPROSZCZONA DEKLARACJA ZGODNOŚCI UE	ADC Automotive Distance Control Systems GmbH niniejszym oświadczyc, że typ urządzenia radiowego ARS 4-B jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/
	Zakres(-ów) częstotliwości, w których (których) pracuje urządzenie radiowe: 76–77 GHz

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany
Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Declaration of Conformity

Date: 22/03/2017 Page 7 (9) DocID: RED_UserGuideReference_AR54-B_v4.0.docx	User Guide Reference ARS 4-B Advanced Radar Sensor	 Advanced Driver Assistant Systems
Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 3.16W (35dBm RMS EIRP)		

19_RED_PT_Portuguese

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA	O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio ARS 4-B está em conformidade com a Directiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://continental.automotive-approvals.com/
	A(s) banda(s) de frequências em que o equipamento de rádio funciona: 76–77 GHz
	A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 3.16W (35dBm RMS EIRP)

20_RED_RO_Romanian

DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio ARS 4-B este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://continental.automotive-approvals.com/
	Banda (benzile) de frecvențe în care funcționează echipamentul radio: 76–77 GHz
	Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 3.16W (35dBm RMS EIRP)

21_RED_SK_Slovak

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE	ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu ARS 4-B je v súlade so smernicou 2014/53/EU. Uplné EU vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/
	Frekvenčné pásmo resp. pásmá, v ktorých rádiové zariadenie pracuje: 76–77 GHz
	Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 3.16W (35dBm RMS EIRP)

22_RED_SL_Slovenian

PONOSTAVLJENA IZJAVA EU O SKLADNOSTI	ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme ARS 4-B skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://continental.automotive-approvals.com/
	Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 76–77 GHz
	Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 3.16W (35dBm RMS EIRP)

Declaration of Conformity

Date: 22/03/2017 Page 8 (9) <small>DocID: RED_UserGuideReference_AR54-B_v4.docx</small>	User Guide Reference ARS 4-B Advanced Radar Sensor	 <small>Advanced Driver Assistant Systems</small>
---	--	---

23_RED_FI_Finnish

YKSINKERTAISTETTU EU- VAATIMUSTENMUKAISU USVAKUUTUS	ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaite yppi ARS 4-B on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://continental.automotive-approvals.com/
	Radiotaajaudet, joilla radiolaitte toimii: 76–77 GHz
	Suurin mahdollinen lähetysteho radiotaajuuskisilla, joilla radiolaitte toimii: 3.16W (35dBm RMS EIRP)

24_RED_SV_Swedish

FÖRENKLAD EU- FÖRSÄKRA OM ÖVERENSSTÄMMELSE	Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning ARS 4-B överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmele finns på följande webbadress: http://continental.automotive-approvals.com/
	Det eller de frekvensband där radioutrustningen arbetar: 76–77 GHz
	Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband där radioutrustningen arbetar: 3.16W (35dBm RMS EIRP)

Declaration of Conformity

Date: 22/03/2017 Page 9 (9) DocID: RED_UserGuideReference_AR54-B_v4.0.docx	User Guide Reference ARS 4-B Advanced Radar Sensor	 Advanced Driver Assistant Systems
---	---	--

C) Language Text (EFTA Countries):

01_RED_IS_Icelandic

EINFÖLDUD ESB SAMRÆMISYFIRLÝSING	Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjar-skiftabúnaðurinn að gerð ARS 4-B er í samræmi við tilskipun 2014/53/Esb. Textinn í fullri lengd um Samræmisyfirlýsing ESB er aðgengilégur á eftirfarandi veffangi: http://continental.automotive-approvals.com/
	Bandbreidd(ir), sem fjarþiptabúnaðurinn starfar í: 76-77 GHz
	Hámarks fjarþiptatiðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjarþiptabúnaðurinn starfar í: 3.16W (35dBm RMS EIRP)

D) Language Text (Custom Union Agreement between EU and Turkey):

01_RED_TR_Turkish

BASITLEŞTİRİLMİŞ AB UYGUNLUK BEYANI	İşbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi ARS 4-B tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduğunu beyan eder. AB uygunluk beyannın tam metni aşağıdaki Internet adresinde mevcuttur: http://continental.automotive-approvals.com/
	Radyo cihazının çalıştığı frekans bandı/bantları: 76-77 GHz
	Radyo ekipmanın çalıştığı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 3.16W (35dBm RMS EIRP)

--- End of Document ---

Declaration of Conformity

Russia



Serbia



Morocco

AGREE PAR L'ANRT MAROC
Numéro d'agrément : MR 9778 ANRT 2014
Date d'agrément : 2014-11-11

Bahrain

The Equipment Identified hereon is approved for use under the following rules

- 1- This equipment must not cause harmful interference to other services.
- 2- This equipment is subject to harmful interference, and the owner of this equipment must not claim for protection.

Indonesia

38132/SDPPI/2017
2130

Moldova



Jordan

TRC No. TRC/LPD/2014/248

Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

Ukraine

справжнім (найменування виробника ADC Automotive Distance Control Systems GmbH) заявляє, що тип радіообладнання (позначення типу ARS4-B) відповідає Технічному регламенту радіообладнання;

зареєстровано в протоколі ООВ sa Ne UA.TR.109.R.0174-18
повний текст декларації про відповідність доступний на веб-сайті за такою адресою: <http://continental.automotive-approvals.com/>

sDoC_RED_Ukrainian

СПРОЩЕНА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ	Цим ADC Automotive Distance Control Systems GmbH заявляє, що радіообладнання типу ARS4-B відповідає вимогам Директиви 2014/53/EU. Повний текст декларації ЄС про відповідність доступний за наступною адресою в мережі Інтернет: http://continental.automotive-approvals.com/
	Частотний діапазон(-и), в якому працює радіообладнання: 76–77 ГГц
	Максимальна потужність радіочастотного сигналу, що передається у частотному діапазоні(-ах), в якому працює радіообладнання: 3.16 Вт (35 дБм середньоквадратична ефективна потужність випромінювання)

Declaration of Conformity

Singapore

Complies with
IMDA Standards
DA100926

South Africa



TA-2014/1783

APPROVED

UAE

TRA
REGISTERED No:
ER61136/18

DEALER No:
DA40068

Taiwan



第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Thailand

เครื่อง%ของโทรศัพท์มือถือและอุปกรณ์นี้ มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดของ กสทช.

เครื่อง%ของวิทยุคมนาคมนี้มีระดับการແຜคลี%น้อยกว่าหลักไฟฟ้าสอดคล้องตามมาตรฐานความ ปลดภัยต่อสุขภาพของมนุษย์จากการใช้

เครื่อง%ของวิทยุคมนาคมที่%คณาจารย์กิจการโทรศัพท์มือถือและภาคีประชุมกำหนด

Botswana

BTA

REGISTERED No:
BOCRA/TA/2018/2026

Declaration of Conformity

Model: ARS4-B
IC: 4135A-ARS4B
FCC ID: OAYARS4B

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiofrequency radiation exposure information:

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

FCC Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

▼ Blind Spot Monitoring (BSM) System

Date: 23/03/2017 Page 3 (9) DocID: RED_UserGuideReference_SRR3-A_v2.0.docx	User Guide Reference SRR 3-A Short Range Radar	 Advanced Driver Assistant Systems
---	---	--

A) Generic information:

Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany

B) Language Text:

01_RED_BG_Bulgarian

ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ	С настоящото ADC Automotive Distance Control Systems GmbH декларира, че този тип радиосъоръжение SRR 3-A е в съответствие с Директива 2014/53/EС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/
	радиочестотната лента или ленти, в която или които работи радиосъоръжението: 24.05–24.25 GHz
	максималната радиочестотна мощност, излъчвана в радиочестотната лента или ленти, в която или които работи радиосъоръжението.: 100mW (20 dBm) Peak EIRP

02_RED_ES_Spanish

DECLARACION UE DE CONFORMIDAD SIMPLIFICADA	Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR 3-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/ Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 24.05–24.25 GHz
	Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 100mW (20 dBm) Peak EIRP

03_RED_CS_Czech

ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ	Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádiového zařízení SRR 3-A je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://continental.automotive-approvals.com/
	Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 24.05–24.25 GHz
	Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových pásmech), v němž (v nichž) je rádiové zařízení provozováno: 100mW (20 dBm) Peak EIRP

04_RED_DA_Danish

FORENKLET EU-OVERENSSTEMMELSE LSESERKLÆRING	Herved erklærer ADC Automotive Distance Control Systems GmbH, at radioudstyrstypen SRR 3-A er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental.automotive-approvals.com/
---	---

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany
Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Customer Information
Declaration of Conformity

Date: 23/03/2017 Page 4 (9) DocID: RED_UserGuideReference_SRR3-A_v2.docx	User Guide Reference SRR 3-A Short Range Radar	Continental Advanced Driver Assistant Systems
---	---	---

	Frekvensbånd, som radioudstyret fungerer på: 24.05–24.25 GHz
	Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 100mW (20 dBm) Peak EIRP

05_RED_DE_German

VEREINFACHTE EU-KONFORMITÄTSERKLÄRUNG	Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagenotyp SRR 3-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: http://continental.automotive-approvals.com/
	Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 24.05–24.25 GHz
	Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 100mW (20 dBm) Peak EIRP

06_RED_ET_Estonian

LIIHTSUSTATUD ELI VASTAVUSDEKLAATSIKOON	Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev radioseadme tüüp SRR 3-A vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetaadressil: http://continental.automotive-approvals.com/
	Sagedusribad(d), millel radioseade töötab: 24.05–24.25 GHz
	Radioseadme töösagedus(e)el edastatav maksimaalne saatevõimsus: 100mW (20 dBm) Peak EIRP

07_RED_EL_Greek

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΛΜΟΡΦΩΣΗΣ ΕΕ	Με την παρούσα α/ν ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξπολιαμός SRR 3-A πληρών την οδηγία 2014/53/ΕΕ. Το πήρες κέμενο της δηλώσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://continental.automotive-approvals.com/
	Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξπολιαμός: 24.05–24.25 GHz
	η μέγιστη ραδιολεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξπολιαμός: 100mW (20 dBm) Peak EIRP

08_RED_EN_English

SIMPLIFIED EU DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR 3-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/
	Frequency band(s) in which the radio equipment operates: 24.05–24.25 GHz
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 100mW (20 dBm) Peak EIRP

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany
Tel: +49.8283.9699-0, Fax: +49.8362.9699-57; Internet: www.continental-corporation.com

Declaration of Conformity

Date: 23/03/2017 Page 5 (9) DocID: RED_UserGuideReference_SRR3-A_v2.0.docx	User Guide Reference SRR 3-A Short Range Radar	 Advanced Driver Assistant Systems
--	---	--

09_RED_FR_French

DECLARATION UE DE CONFORMITE SIMPLIFIEE	Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR 3-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/
	Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz
	Puissance de radiofréquence maximale transmise sur les bandes de fréquences utilisées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP

10_RED_GA_empty_no_text

Related RED Directive not released.

11_RED_HR_Croatian

POJEDNOSTAVLJE NA EU IZJAVA O SUKLADNOSTI	ADC Automotive Distance Control Systems GmbH izjavljuje da je radijska oprema tipa SRR 3-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://continental.automotive-approvals.com/
	Frekvenčni pojas (frekvenčni pojas) u kojem (kojima) radijska oprema radi: 24.05–24.25 GHz
	Najveća radiofrekvenčna snaga koja se prenosi u frekvenčnom pojasu (frekvenčnim pojasima) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP

12_RED_IT_Italian

DICHIARAZIONE DI CONFORMITA UE SEMPLIFICATA	Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo d'apparecchiatura radio SRR 3-A è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://continental.automotive-approvals.com/
	Bandi di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz
	Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP

13_RED_LV_Latvian

VIENĀKĀŠOTA ES ATBILSTĪBAS DEKLARĀCIJA	Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārtā SRR 3-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://continental.automotive-approvals.com/
	Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 24.05–24.25 GHz
	Frekvenču joslā(-as), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā signāla jaudu: 100mW (20 dBm) Peak EIRP

Declaration of Conformity

Date: 23/03/2017 Page 6 (9) DocID: RED_UserGuideReference_SRR3-A_v2.docx	User Guide Reference SRR 3-A Short Range Radar	 Advanced Driver Assistant Systems
---	---	--

14_RED_LT_Lithuanian

SUPAPRASINTA ES ATITIKTIES DEKLARACIJA	Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radiojo įrenginių tipas SRR 3-A atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/
	Dažnių juosta (-os), kurioje (-ose) veikia radiojo įrenginiai: 24.05–24.25 GHz
	Didžiausia radio dažnių galia, perduodama toje (-ose) dažnių juoste (-ose), kurioje (-ose) veikia radiojo įrenginiai: 100mW (20 dBm) Peak EIRP

15_RED_HU_Hungarian

EGYSZERŰSÍTETT EU- MEGFELELŐSÉGI NYILATKOZAT	ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR 3-A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:: http://continental.automotive-approvals.com/
	Az(ok) a frekvenciasáv(ok), amely(ek)ben a rádióberendezés működik: 24.05–24.25 GHz
	Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított maximumi jelentőség, amely(ek)ben a rádióberendezés üzemel: 100mW (20 dBm) Peak EIRP

16_RED_MT_Maltese

DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL- UE	B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju SRR 3-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni tal-konformità tal-UE huwa disponibbli f'dan. I-ndirizz tal-Internet li ġej: http://continental.automotive-approvals.com/
	Il-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz
	Il-potenza massima tal-frekwenza tar-radju trażmessha fil-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 100mW (20 dBm) Peak EIRP

17_RED_NL_Dutch

VEREENVOUDIGDE EU- CONFORMITEITSV ERKLARING	Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR 3-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/
	Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz
	Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 100mW (20 dBm) Peak EIRP

18_RED_PL_Polish

UPROSZCZONA DEKLARACJA ZGODNOŚCI UE	ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR 3-A jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/
	Zakres(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany
Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Declaration of Conformity

Date: 23/03/2017 Page 7 (9) DocID: RED_UserGuideReference_SRR3-A_v2.0.docx	User Guide Reference SRR 3-A Short Range Radar	 Advanced Driver Assistant Systems
Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotliwości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP		

19_RED_PT_Portuguese

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA	O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR 3-A está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço da Internet: http://continental.automotive-approvals.com/
	A(s) banda(s) de frequências em que o equipamento de rádio funciona: 24.05–24.25 GHz
	A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm) Peak EIRP

20_RED_RO_Romanian

DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR 3-A este în conformitate cu Directiva 2014/53/EU. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://continental.automotive-approvals.com/
	Banda (benzile) de frecvențe în care funcționează echipamentul radio: 24.05–24.25 GHz
	Poterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 100mW (20 dBm) Peak EIRP

21_RED_SK_Slovak

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE	ADC Automotive Distance Control Systems GmbH týmto vyhlašuje, že rádiové zariadenie typu SRR 3-A je v súlade so smernicou 2014/53/EÚ. Uplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/
	Frekvenčné pásmo resp. pásmá, v ktorých rádiové zariadenie pracuje: 24.05–24.25 GHz
	Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásmi, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm) Peak EIRP

22_RED_SL_Slovenian

POENOSTAVLJENA IZJAVA EU O SKLADNOSTI	ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR 3-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://continental.automotive-approvals.com/
	Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz
	Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 100mW (20 dBm) Peak EIRP

23_RED_FI_Finnish

YKSINKERTAISTETTU EU-	ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyppi SRR 3-A on direktiivin 2014/53/EU mukainen. EU-
	A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Declaration of Conformity

Date: 23/03/2017 Page 8 (9) <small>DocID: RED_UserGuideReference_SRR3-A_v2.0.docx</small>	User Guide Reference SRR 3-A Short Range Radar	 <small>Advanced Driver Assistant Systems</small>
---	--	---

VAATIMUSTENMUKAISUUSVAKUUTUS	vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://continental.automotive-approvals.com/
	Radiotaajaudet, joilla radiolaite toimii: 24.05–24.25 GHz
	Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 100mW (20 dBm) Peak EIRP

24_RED_SV_Swedish

FÖRENLAD EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE	Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR 3-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://continental.automotive-approvals.com/
	Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz
	Den maximala radiofrekvenseffekten som överförs inom det eller de frekvensband där radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany
 Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Declaration of Conformity

Date: 23/03/2017 Page 9 (9) DocID: RED_UserGuideReference_SRR3-A_v2.0.docx	User Guide Reference SRR 3-A Short Range Radar	 Advanced Driver Assistant Systems
---	---	--

C) Language Text (EFTA Countries):

01_RED_IS_Icelandic

EINFÖLDUB ESB SAMRÆMISYFIRLÝ SING	Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjarskip- tabúnaðurinn að gerð SRR 3-A er í samræmi við tilskipun 2014/53/ ESB. Textinn í fullri lengd um Samræmisyfirlýsingu ESB er aðgengilegur á eftirfarandi veffangi: http://continental.automotive-approvals.com/
	Bandbreidd(ir), sem fjarskipabúnaðurinn starfar í: 24.05–24.25 GHz
	Hámarks fjarskipatíðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjar- skipabúnaðurinn starfar í: 100mW (20 dBm) Peak EIRP

D) Language Text (Custom Union Agreement between EU and Turkey):

01_RED_TR_Turkish

BASITLEŞTİRİLMİŞ AB UYGUNLUK BEYANI	İşbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi SRR 3-A tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduğunu beyan eder. AB uy- gunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur: http://continental.automotive-approvals.com/
	Radyo cihazının çalıştığı frekans bandı/bantları: 24.05–24.25 GHz
	Radyo ekipmanının çalıştığı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 100mW (20 dBm) Peak EIRP

--- End of Document ---

Declaration of Conformity

Russia



Serbia



Moldova

**Bahrain**

The Equipment Identified hereon is approved for use under the following rules

1- This equipment must not cause harmful interference to other services.

2- This equipment is subject to harmful interference, and the owner of this equipment must not claim for protection.

Indonesia

37739/I/SDPPI/2017

Jordan

TRC No. TRC/LPD/2014/254

2130

Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

Singapore

Complies with
IMDA Standards
DA100926

South Africa

TA-2014/2260



APPROVED

Declaration of Conformity

United Arab Emirates



Ukraine



справжнім (найменування виробника ADC Automotive Distance Control Systems GmbH) заявляє, що тип радіообладнання (позначення типу радіообладнання SRR3-A) відповідає Технічному регламенту радіообладнання;

зареєстровано в протоколі ООВ sa Ne UA.TR.109.R.0233-18
повний текст декларації про відповідність доступний на веб-сайті за такою адресою: <http://continental.automotive-approvals.com/>

sDoC_RED_Ukrainian

СПРОЦЕНДА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ	Цим ADC Automotive Distance Control Systems GmbH заявляє, що радіообладнання типу SRR3-A відповідає вимогам Директиви 2014/53/EU. Повний текст декларації ЄС про відповідність доступний за наступною адресою в мережі Інтернет: http://continental.automotive-approvals.com/
	Частотний діапазон(-и), в якому працює радіообладнання: 24.05–24.25 ГГц
	Максимальна потужність радіочастотного сигналу, що передається у частотному діапазон(-ах), в якому працює радіообладнання: 100 мВт (20 дБм) Пікова ефективна потужність випромінювання

Taiwan



第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Declaration of Conformity

Model: SRR3-A
FCC ID: OAYSRR3A

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Frequency bands: 24.05 – 24.25 Ghz

The field strength of SRR3-A is below 250 millivolts/m measured at 3 metres with an average detector.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Band de fréquence: 24.05 – 24.25 GHz

L'intensité du champ de SRR3-A est en dessous de 250 mV / m à 3 mètres mesuré avec un détecteur à valeur moyenne

Radiofrequency radiation exposure Information:

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

FCC Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

▼ Audio System

French Guiana, Guadeloupe, Virgin Islands, St. Martin, Martinique, Austria, Greece, Italy, Switzerland, Belgium, Denmark, Finland, Norway, Portugal, Spain, Sweden, Hungary, Germany, Poland, Bulgaria, Croatia, Slovenia, Luxembourg, Slovakia, Latvia, Lithuania, France, Czech, Estonia, Faroe Islands, Iceland, Romania, Netherlands, Malta, Ireland, UK, Liechtenstein, Cyprus, Reunion, Canary Islands

[*] : CL-MM28E0JT, CL-MM29E0TT, CL-MM29E0GQ, CL-MM28A0JT, CL-MM29A0TT, CL-MM29Z0GQ

Manufacturer
•Name : Panasonic Corporation Automotive & Industrial Systems company •Address : 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan
Importer, Address: Mazda Motor Logistics Europe NV Blaasveldstraat 162, 2830 Willebroek, België
Model No. [*]
Specifications of Bluetooth Frequency band: 2402-2480MHz Maximum radio-frequency power: 100mW Max
Specifications of WLAN Frequency band: 2412-2472MHz Maximum radio-frequency power: 100mW Max
Hereby, Panasonic Corporation declares that the radio equipment type Listed above is in compliance with Directive 2014/53/EU. Access to http://www.ptc.panasonic.eu/ , click "Declaration of Conformity", enter the below Keyword into the keyword search box, you can download the latest "DECLARATION of CONFORMITY" (DoC). Keyword:: [*]
Me anë të këtij dokumenti, "Panasonic Corporation" deklaron se radiopajisia e tipit të listuar më lart është në përporthshmëri me Direktivën 2014/53/BE. Hyti në http://www.ptc.panasonic.eu/ , klikoni "Declaration of Conformity (Deklarata e përporthshmërisë)", shkruani termin kyç në kutinë e kërkimit të termave kyç dhe mund të shkarkoni versionin e fundit të "DECLARATION OF CONFORMITY (DEKLARATËN E PËRPUTHSHMËRISË)" (DoC). Termi kyç: [*]

Declaration of Conformity

С настоящото Panasonic Corporation декларира, че радиооборудването от типа, посочен по-горе, е в съответствие с Директива 2014/53/EU.

Отидете на <http://www.ptc.panasonic.eu/>, щракнете върху „Declaration of Conformity (Декларация за съответствие)“, въведете ключовата дума, дадена по-долу, в полето за търсене по ключова дума и ще можете да изтеглите най-новата „DECLARATION OF CONFORMITY (ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ)“ (DoC).

Ключова дума: [*]

Tímto společnost Panasonic Corporation prohlašuje, že výše uvedené rádiové zařízení typu CQ-SM63F0JMA,CQ-SM63F0GXA je v souladu se směrnicí 2014/53/EU.

Když přejdete na stránky <http://www.ptc.panasonic.eu/>, klikněte na „Declaration of Conformity (Prohlášení o shodě)“ a zadáte číslo modelu [*] do pole pro vyhledávání podle klíčového slova, budete si moci stáhnout nejnovější verzi „DECLARATION OF CONFORMITY (PROHLÁŠENÍ O SHODĚ)“ (DoC).

Herved erklaerer Panasonic Corporation, at radioudstyret af typen nævnt ovenfor er i overensstemmelse med direktiv 2014/53/EU.

Du kan hente den seneste „DECLARATION OF CONFORMITY (OVERENSSTEMMELSESERKLÆRING)“ (DoC) ved at besøge <http://www.ptc.panasonic.eu/>, klikke på "Declaration of Conformity (Overensstemmelseserklæring)" og indtaste nedenstående nøgleord i feltet til nøgleordsøgning.

Nøgleord: [*]

Hiermit erklärt Panasonic Corporation, dass der obengenannte Funkanlagenotyp der Richtlinie 2014/53/EU entspricht.

Klicken Sie unter <http://www.ptc.panasonic.eu/> auf „Declaration of Conformity“ (Konformitätserklärung), geben Sie das nachstehende Schlüsselwort in die Schlüsselwortsuche ein und laden Sie die aktuelle „DECLARATION OF CONFORMITY (Konformitätserklärung)“ (DoC) herunter.

Schlüsselwort: [*]

Με την παρούσα, η Panasonic Corporation δηλώνει ότι ο ραδιοεξοπλισμός που παραγίθεται ανωτέρω συμμορφύνεται με την οδηγία 2014/53/ΕΕ.

Επισκεφθείτε τον ιστότοπο <http://www.ptc.panasonic.eu/>, κάντε κλικ στο «Declaration of Conformity (Δήλωση συμμόρφωσης)», καταχωρίστε την παρακάτω λέξη-κλειδί στο πλαίσιο αναζήτησης λέξης-κλειδιού για να μπορέσετε να κατεβάσετε την πιο τρόφιμη «DECLARATION of CONFORMITY (ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ)» (DoC).

Λέξη-κλειδί: [*]

Declaration of Conformity

Por la presente, Panasonic Corporation declara que el equipo de radio del tipo citado más arriba cumple con lo establecido en la Directiva 2014/53/UE.

Acceda a <http://www.ptc.panasonic.eu/>, haga clic en "Declaration of Conformity (Declaración de conformidad)", introduzca la palabra clave indicada a continuación en el cuadro de búsqueda y podrá descargar la última "DECLARATION of CONFORMITY (Declaración de conformidad)" (DoC).

Palabra clave: [*]

Käesolevaga deklareerib Panasonic Corporation, et eelmainitud raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.

Minge veebilehele <http://www.ptc.panasonic.eu/>, klõpsake valikul „Declaration of Conformity“ (Vastavusdeklaratsioon), sisestage alltoodud märksõna spetsiaalsele otsinguväljale ning laadige alla dokumendi „DECLARATION of CONFORMITY“ (VASTAVUSDEKLARATSIOON) (DoC) viimane versioon.

Märksõna: [*]

Panasonic Corporation vakuuttaa, että edellä lueteltu radiolaite on täytäntöönpanostamalla 2014/53/EU asetetut vaatimukset.

Viiimeisin "DECLARATION of CONFORMITY (VAATIMUSTENMUKAISUUSVAKUUTUS)" (DoC) on ladattavissa verkkosivulla <http://www.ptc.panasonic.eu/> valitsemalla kohta "Declaration of Conformity (vaatimustenmukaisuusvakuutus)" ja syöttämällä alla mainittu hakusana hakukenttään.

Hakusana: [*]

Par la présente, Panasonic Corporation déclare que le type d'équipement radio répertorié ci-dessus est en conformité avec la directive 2014/53/UE.

Pour télécharger la dernière « DECLARATION of CONFORMITY (DÉCLARATION DE CONFORMITÉ) » (DoC), rendez-vous sur <http://www.ptc.panasonic.eu/>, cliquez sur « Declaration of Conformity (Déclaration de conformité) », puis saisissez le mot clé ci-dessous dans le champ de recherche par mots clés.

Mot clé : [*]

Ovime Panasonic Corporation izjavljuje da je radijska oprema vrste navedene iznad u skladu s Direktivom 2014/53/EU.

Pristup za: <http://www.ptc.panasonic.eu/>, kliknite „Declaration of Conformity“ (Izjava o sukladnosti), unesite ključnu riječ koja je navedena u nastavku, u okvir za pretraživanje ključne riječi, možete preuzeti najnoviju „DECLARATION of CONFORMITY (IZJAVU O SUKLAĐENOSTI)“ (DoC).

Ključna riječ: [*]

Customer Information
Declaration of Conformity

A Panasonic Corporation ezzel nyilatkozik arról, hogy a fent megadott típusú rádiós berendezés(ek) megfelel(nek) a 2014/53/EU irányelv előírásainak. Lépjön a <http://www.ptc.panasonic.eu/> oldalra, kattintson a „Declaration of Conformity” (Megfelelőségi nyilatkozat) elemre, és írja be az alábbi Kulcsszót a kulcsszó keresőmezőjébe, ha szeretné letölteni a legújabb „DECLARATION OF CONFORMITY” (Megfelelőségi nyilatkozat) dokumentumot (.doc-fájl).

Kulcsszó: [*]

Hér með lýsir Panasonic Corporation því yfir að ofangreindur útvarpsbúnaður er í Samræmi við tilskipun 2014/53/ESB.
Farðu á <http://www.ptc.panasonic.eu/>, smeltu á „Declaration of Conformity (Samræmisýfirlýsing)”, sláðu eftirfarandi tegundarnumer inn í leitartextinn og þá geturðu sott nýjustu „DECLARATION OF CONFORMITY (SAMRÆMISÝFIRLÝSUNGUNA)” (DoC).
Tegundarnúmer: [*]

Il fabbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio elencato sopra è conforme alla direttiva 2014/53/UE.
Accedere al sito <http://www.ptc.panasonic.eu/>, fare clic su "Declaration of Conformity (Dichiarazione di Conformità)" e inserire la parola chiave seguente nella casella di ricerca per parole chiave per poter scaricare la "DECLARATION of CONFORMITY (Dichiarazione di Conformità)" (DoC) più recente.
Parola chiave: [*]

Šiuo dokumentu „Panasonic Corporation“ pareiškia, kad pirmiau pateikta tipo radiojo ryšio įranga atitinka direktyvą 2014/53/ES.
Atverkitė <http://www.ptc.panasonic.eu/>, spustelėkite „Declaration of Conformity“ (atitikties deklaracija), įraktažodžio paleškos laukelį įveskitė toliau pateikta raktažodžių galėsite atsiisiųsti naujausia „DECLARATION of CONFORMITY“ (ATITIKTIES DEKLARACIJA).
Raktažodis: [*]

Ar šo Panasonic Corporation deklarē, ka iepriekš minētā radioiekārtā atbilst Direktīvas 2014/53/ES prasībām.
Dodiejet uz vietni <http://www.ptc.panasonic.eu/>, noklikšķiniet uz sadajas „Declaration of Conformity” (Atbilstības deklarācija) un atslēgvārdū meklēšanas laukā ievadiet turpmāk minēto atslēgvārdu, lai lejupielādētu jaunāko „DECLARATION of CONFORMITY (DoC)” (ATBILSTĪBAS DEKLARĀCIJU).
Atslēgvārds: [*]

B'dan, Panasonic Corporation tiddikkjara li dan it-tip ta' tagħmir tar-radju ellenkat hawn fuq huwa konformi mad-Direttiva 2014/53/UE.
Access għall-<http://www.ptc.panasonic.eu/>, ikklikkja „Declaration of Conformity (Dikjarazzjoni ta' Konformità)”, dāħħal il-Kelma Muftieħ t'hawn taħt fil-parti tar-riċerka tal-kliem muftieħ, tista' tnizzeż id-“DECLARATION of CONFORMITY (DIKJARAZZJONI TA' KONFORMITÀ)” l-aktar riċenti (DoC).
Kelma Muftieħ: [*]

Declaration of Conformity

Panasonic Corporation erklærer herved at radioutstyret av typen nevnt ovenfor er i samsvar med direktiv 2014/53/EU.

Ved å gå til <http://www.ptc.panasonic.eu/>, klikke på "Declaration of Conformity (samsvarserklæring)" og taste inn nedenstående nøkkelord i nøkkelord-søkeboksen, kan du laste ned den nyeste "DECLARATION of CONFORMITY (SAMSVARSERKLÆRINGEN)" (DoC).

Nøkkelord: [*]

Hierbij verklaar ik, Panasonic Corporation, dat de radioapparatuur van het hierboven vermelde type conform is met Richtlijn 2014/53/EU.

Ga naar <http://www.ptc.panasonic.eu/>, klik op "Declaration of Conformity (conformiteitsverklaring)", vul in het vak Keyword Search de onderstaande code in en dan kunt u de recentste "DECLARATION of CONFORMITY (conformiteitsverklaring)" (DoC) downloaden.

Code: [*]

Niniejszym firma Panasonic oświadcza, że podany powyżej typ urządzeń radiowych jest zgodny z dyrektywą 2014/53/UE.

Wejdź na stronę <http://www.ptc.panasonic.eu/>, kliknij „Declaration of Conformity (Deklaracja zgodności)”, w polu wyszukiwania słów kluczowych wprowadź podane poniżej słowo kluczowe i pobierz najnowszą wersję „DECLARATION of CONFORMITY (DEKLARACJI ZGODNOŚCI)” (DoC).

Słowo kluczowe: [*]

Pela presente, a Panasonic Corporation declara que o equipamento de rádio do tipo listado acima se encontra em conformidade com a Diretiva 2014/53/UE.

Aceda a <http://www.ptc.panasonic.eu/>, clique em "Declaration of Conformity (Declaração de Conformidade)", introduza a palavra-chave indicada abaixo na caixa de pesquisa de palavras-chave para descarregar a mais recente "DECLARATION of CONFORMITY (DECLARAÇÃO DE CONFORMIDADE)" (DoC).

Palavra-chave: [*]

Prin prezenta, Panasonic Corporation declară că echipamentul radio de tipul enumerat mai sus este în conformitate cu Directiva 2014/53/UE.

Accesați <http://www.ptc.panasonic.eu/>, faceți clic pe „Declaration of Conformity (Declarația de conformitate)”, introduceți cuvântul cheie de mai jos în caseta de căutare după cuvintele cheie și puteți să descărcați cea mai recentă „DECLARATION of CONFORMITY (DECLARAȚIE DE CONFORMITATE)” (DoC). Cuvânt cheie: [*]

Declaration of Conformity

Ovim kompanija Panasonic Corporation izjavljuje da je gore navedena radio oprema u skladu sa odredbama direktive 2014/53/EU.

Pristupite stranici <http://www.ptc.panasonic.eu/>, kliknite na „Declaration of Conformity (Izjava o usklađenosti)”, doljenavedenu kљučnu reč unesite u polje za pretragu kљučnih reči i onda možete da preuzmete najnoviji dokument „DECLARATION of CONFORMITY (Izjava o usklađenosti)” (DoC - izjava o usklađenosti).

Kљučna reč: [*]

Spoločnosť Panasonic Corporation týmto vyhlasuje, že rádiové zariadenie vyššie uvedeného typu je v súlade so smernicou 2014/53/EÚ.

Na lokalite <http://www.ptc.panasonic.eu/> môžete kliknúť na možnosť „Declaration of Conformity (Vyhľásenie o zhode)“, zadat nižšie uvedené kľučové slovo do vyhľadávacieho poľa a prevziať si najnovšie „DECLARATION of CONFORMITY (VYHLÁSENIE O ZHODE)“ (DoC).

Kľučové slovo: [*]

Panasonic Corporation potrjuje, da je zgoraj navedeni tip radijske opreme skladen z Direktivo 2014/53/EU.

Obiščite <http://www.ptc.panasonic.eu/>, kliknite "Declaration of Conformity (Izjava o skladnosti)", v okence za iskanje vnesite spodnjo klijucno besedo in prenesite najnovejšo Izjavo o skladnosti – "DECLARATION of CONFORMITY (IZJAVA O SKLADNOSTI)" (DoC).

Izjavna beseda: [*]

Härmed intygar Panasonic Corporation att radioutrustningen ovan uppfyller direktiv 2014/53/EU.

Gå till <http://www.ptc.panasonic.eu/>, klicka på "Declaration of Conformity (försäkran om överensstämmelse)" och ange nyckelordet nedan i sökrutan. Sedan kan du ladda ned den senaste "DECLARATION of CONFORMITY (försäkran om överensstämmelse)" (DoC).

Nyckelord: [*]

İşbu belge ile Panasonic Corporation, yukarıda listelenen radyo ekipmanı tipinin 2014/53/AB Direktifine uygun olduğunu beyan etmektedir.

<http://www.ptc.panasonic.eu/> adresinden "Declaration of Conformity (Uygunluk beyani)" başlığına tıkıldıkten sonra, aşağıdaki anahtar kelimeyi arama kutusuna girerek en son "DECLARATION of CONFORMITY (UYGUNLUK BEYANI)"nı (DoC) indirebilirsiniz.

Anahtar kelime: [*]

Declaration of Conformity

справжнім Panasonic Corporation заявляє, що тип радіообладнання [*] відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за такою адресою:
<https://service.panasonic.ua/>
(розділ «Технічне регулювання»)
[*] CL-MM28E0JT, CL-MM29E0TT, CL-MM29E0GQ,
CL-MM28A0JT, CL-MM29A0TT, CL-MM29Z0GQ



Local representative
“Uniservis” Ltd.

1st Vladimirovskaya street, building 20A, 1st floor, premises 1, room 17,
Moscow 111123, Russia. OGRN 5107746076873.

ООО «Юнисервис»
Россия, 111123, г. Москва, ул. 1-ая Владими
ровская, д. 20А, этаж 1 пом.1, комн.17, ОГРН
5107746076873.



Declaration of Conformity

This telecommunication equipment is in compliance with NBTC requirements.

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

TRA
REGISTERED No:
ER65894/18
DEALER No:
DA0052708/10

מספר אישור אלאוטי של משרד התקשורת הוא 51-65981-
אסור להחליף את האנטנה המקורי של המכשיר ולא
לעשות בו כל שינוי טכני אחר

NCA APPROVED: BR3-1M-GE2-0C4

Complies with
IMDA Standards
DA107248

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

BOCRA
REGISTERED No :
BOCRA/TA/2018/4117

TRC/LPD/2018/305



Declaration of Conformity

▼ Radio System



Model No. : CQ-TM28E04M / CQ-TM28E14M

Bland : Panasonic

Country of origin : Malaysia

No. 355.2017(Ukraine)

Виробник

назву компанії: Panasonic Corporation Automotive & Industrial Systems company
адресу: 4261 Ikonobetsu-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Японія

Імпортер

назву компанії: Auto Internationale
адресу: 04073, 22-а Stepana Bandery Ave., Kiev, Ukraine

справжнім Panasonic Corporation заявляє, що тип радіообладнання [*]
відповідає Технічному регламенту радіообладнання
повний текст декларації про відповідність доступний на веб-сайті за такою
адресою:
<https://service.panasonic.ua/>
(послідок Технічне регулювання)
[*] CQ-TM28E04M, CQ-TM28E14M

Customer Information
Declaration of Conformity

With DAB radio

Manufacturer, Address:

Panasonic Corporation,
4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-City Kanagawa-ken 224-8520, Japan

Importer, Address:

Mazda Motor Logistics Europe NV
Blaasveldstraat 162, 2830 Willebroek, België

Model NO.: **CQ-TM28E04M**

Albania	Me anë të këtij dokumenti, "Panasonic Corporation" deklaron se radiopajisja e tipit të listuar më lart është në përvitshmëri me Direktivën 2014/53/EU. Hyni në http://www.ptc.panasonic.eu/ , klikoni "Declaration of Conformity (Deklarata e përvitshmërisë)", shkruani termen kyç në kutinë e kësimit të termave kyçë dhe mund të shkrarkoni versionin e fundit të "DECLARATION OF CONFORMITY (DEKLARATËN E PËRVITSHMËRISË)" (DoC). Termi kyç CQ-TM28E04M
Bulgaria	С настоящото Panasonic Corporation декларира че радиооборудването от типа посочен по-горе е в съответствие с Директивата 2014/53/EU. Отидете на http://www.ptc.panasonic.eu/ и скрийте върху "Declaration of Conformity (Декларация за съответствие)", въведете ключовата дума: данена портушка в полето за търсене по ключовата дума и ще можете да изтеглите най-новата "DECLARATION OF CONFORMITY (ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ)" (DoC). Ключова дума CQ-TM28E04M
Czech	Tímto společností Panasonic Corporation prohlašuje, že výše uvedené rádio vě zařízení typu CQ-TM28E04M je v souladu se směrem 2014/53/EU. Když přejdete na stránky http://www.ptc.panasonic.eu/ klikněte na „Declaration of Conformity (Prohlášení o shodě)“ a zadejte číslo modelu CQ-TM28E04M do pole pro vyhledávání podle kódového slova, budete si moci stáhnout nejnovější verzi „DECLARATION OF CONFORMITY (PROHLÁŠENÍ O SHODE)“ (DoC).
Danish	Herved erklærer Panasonic Corporation, at radioudstyret af typen nævnt ovenfor er i overensstemmelse med direktiv 2014/53/EU. Du kan hente den seneste "DECLARATION OF CONFORMITY (OVERENSSTEMMELSESSERKLÆRING)" (DoC) ved at besøge http://www.ptc.panasonic.eu/ , klikke på "Declaration of Conformity (Overensstemmelseserklæring)" og indtaste nedanstående nøgleord i feltet til nøgleord: CQ-TM28E04M .
German	Hiermit erklärt Panasonic Corporation, dass der obengenannte Funkanlag entsprechend der Richtlinie 2014/53/EU entspricht. Klicken Sie unter http://www.ptc.panasonic.eu/euf „Declaration of Conformity“ (Konformitätserklärung), um über die das nachstehende Schließwortschein in die Schließwortsuche ein und laden Sie die aktuelle „DECLARATION OF CONFORMITY (Konformitätserklärung)“ (DoC) herunter. Schlüsselwort: CQ-TM28E04M
Greek	Με την παρούσα την Panasonic Corporation δηλώνεμε ότι το ραδιοεξοπλισμός που παρατίθεται από εμένα είναι συμμετέχει στην οδηγία 2014/53/EU. Επικεφαλής των στοιχείων: http://www.ptc.panasonic.eu/ . Κάντε κλικ στον Declaration of Conformity (Δήλωση συμμόρφωσης), καταχρέστε την παραπάνω Απλέλειτε στη λίστα σας την πλατφόρμα, ή διέλεγετε για να μπετε σε σελίδα στην οποία διαθέτεται η DECLARATION OF CONFORMITY (ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ) (DoC). Νέοτερη: CQ-TM28E04M
English	Hereby, Panasonic Corporation declares that the radio equipment type Listed above is in compliance with Directive 2014/53/EU. Access to http://www.ptc.panasonic.eu/ click "Declaration of Conformity", enter the below Keyword into the keyword search box, you can download the latest "DECLARATION of CONFORMITY" (DoC). Keyword: CQ-TM28E04M
Spanish	Por la presente, Panasonic Corporation declara que el equipo de radio del tipo citado más arriba cumple con lo establecido en la Directiva 2014/53/EU. Acceda a http://www.ptc.panasonic.eu/ , haga clic en "Declaration of Conformity (Declaración de conformidad)", introduzca la palabra clave indicada a continuación en el cuadro de búsqueda y podrá descargar la última "DECLARATION OF CONFORMITY (Declaración de conformidad)" (DoC). Palabra clave: CQ-TM28E04M
Estonia	Käesolevaga deklareerib Panasonic Corporation, et eelmüünud raadioseadme täpselt vastab direktiivi 2014/53/EU nõuetele. Mingi eesilehele http://www.ptc.panasonic.eu/ klõpsake valikul „Declaration of Conformity“ (Vastavusdeklaratsioon), sisestage välitud märksõna spetsiaalse otsing välisse ning leadige selle dokumendi „DECLARATION OF CONFORMITY“ (Vastavusdeklaratsioon) (DoC) viimane versioon. Märksõna: CQ-TM28E04M

Declaration of Conformity

Finnish	Panasonic Corporation vakuuttaa, että edellä lueteltu radiotaustayyppi täytää direktiivissä 2014/53/EU asetut vaatimukset. Vimeisin "DECLARATION OF CONFORMITY (VAATIMUSTENMUKAISUUSVUUTUS)" (DoC) on ladattavissa verkkosivulla http://www.ptc.panasonic.eu/ , valitsemalla kohde "Declaration of Conformity (vaatimusmukaisuusvaatimus)" ja syötäen siihen alla mainittu hakusana hakutarkkailu. Hakusana: CQ-TM28E04M
French	Par la présente, Panasonic Corporation déclare que le type d'équipement radio répertorié ci-dessous est en conformité avec la directive 2014/53/UE. Pour télécharger la dernière « DECLARATION OF CONFORMITY (Déclaration de conformité) » (DoC), rendez-vous sur http://www.ptc.panasonic.eu/ , cliquez sur « Declaration of Conformity (Déclaration de conformité) », puis saisissez le mot clé ci-dessous dans le champ de recherche par mots-clés. Mot clé : CQ-TM28E04M
Croatian	Ovime Panasonic Corporation izjavljuje da je radijska oprema vrste na vedene iznad u skladu s Direktivom 2014/53/EU. Pristup za: http://www.ptc.panasonic.eu/ kliknite "Declaration of Conformity" (izjava o sukladnosti), unesite ključnu riječ koja je navedena u nastavku, u okviru za pretraživanje ključne riječi, može se preuzeti noviju "DECLARATION OF CONFORMITY (IZJAVA O SUKLADNOSTI)"(DoC). Ključna riječ: CQ-TM28E04M
Hungarian	A Panasonic Corporation ezzel nyilatkozik arról, hogy a fent meg adott típusú rádióberendezés(ek) megfelel(ik) a 2014/53/EU irányelvnek (szabályainak). Lépjen a http://www.ptc.panasonic.eu/ oldalra, kattintson a „Declaration of Conformity” (Megfelelősgégi nyilatkozat) elemre, és írja be a zártban Kulcszámot a kulcsnévhez köthetően, ha szeretné leírni a leg újabb „DECLARATION OF CONFORMITY” (Megfelelősgégi nyilatkozat) dokumentumot (doc-fájl). Kulcszám: CQ-TM28E04M
Iceland	Hér með yfir Panasonic Corporation því fyrir að ofngreindur útvarpsþáður er í samræmi við tilskipun 2014/53/ES.B Farðu a http://www.ptc.panasonic.eu/ með tilkostu á „Declaration of Conformity (Samræmyfirlitning)”, staða tilgreindar legg undan örumerfinn (færmetilinn og það að eru óvinnar) rifiustu „DECLARATION OF CONFORMITY (SAMRÆMISYFIRLITNINGUNA)”(DoC). Tegund:undan CQ-TM28E04M
Italian	Il fabbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio elencato sopra è conforme alla direttiva 2014/53/UE. Accedere al sito http://www.ptc.panasonic.eu/ fare clic su "Declaration of Conformity (Dichiarazione di Conformità)" e inserire la parola chiave seg. sotto nella casella di ricerca per parole chiave per poter scaricare la "DECLARATION OF CONFORMITY (Dichiarazione di Conformità)"(DoC) presente. Parola chiave: CQ-TM28E04M
Lithuanian	Šiuo dokumentu „Panasonic Corporation“ pateikia, kad pirmuoju pateikta tipo radio ryšio įanga atitinka direktyvą 2014/53/ES. Atverkite http://www.ptc.panasonic.eu/ puslapis išrinkite „Declaration of Conformity“ (Atitinkties deklaracija), įmatriuodžių paženks laukelių ženklinę ir pateikite į mūsų biudžetinį g. 46000 atsižiūti naujausią „DECLARATION OF CONFORMITY“ (ATITINKIES DEKLARACIJĄ). Raktazodis: CQ-TM28E04M
Latvian	Ar šo Panasonic Corporation deklarē, ka iepriekš minētā radioiekārtā atbilst Direktīvas 2014/53/EU prasībām. Dotiešs uz vietni http://www.ptc.panasonic.eu/ nolikumiet uz sadas "Declaration of Conformity" (Atbilstības deklarācija) un rakstītās šādu mērķis: "Izdevat tāto filiālu tārīceka tālākiem mērķiem", lai lejupielādētu "DECLARATION OF CONFORMITY (DoC)" (ATBILSTĪBAS DEKLARĀCIJU). Atbilstībās: CQ-TM28E04M
Maltese	Údian, Panasonic Corporation iddikara li tiep ta' tagħrifni tar-radiu elenka hawn fuq huwa konformi mad-Direktiva 2014/53/UE. Aħżeξ għalli http://www.ptc.panasonic.eu/ iklikk ja "Declaration of Conformity (Dikjazzjoni ta' Konformità)", dennej iż-żelha Muffieħi thawn ta' fil-piċċa tarr-ġerġa tħaliex mifla, tħalli tħalli "DECLARATION OF CONFORMITY (DIKJARAZZU NIT-TA' KONFORMITA)"-iskar r-ġent (DoC). Kelma Muffieħi: CQ-TM28E04M
Norway	Panasonic Corporation erklærer herved at radioutstyret av typen nevnt ovenfor er i samsvar med direktiv 2014/53/EU. Ved å gå til http://www.ptc.panasonic.eu/ , klikk på "Declaration of Conformity (samsvarserklæring)" og taste inn nedenustående nøkkelord i ørketolkingsfeltet, kan du laste ned den nyeste "DECLARATION OF CONFORMITY (SAMSVARSERKLÆRINGEN)"(DoC). Nøkkelord: CQ-TM28E04M
Dutch	Hierbij verklaar ik, Panasonic Corporation, dat radiotoestuur van het hierboven vermelde type conform is met Richtlijn 2014/53/EU. Ga naar http://www.ptc.panasonic.eu/ , klik op "Declaration of Conformity (conformiteitsverklaring)", vul in het vak Keyword Search de onderstaande code in en dan kunt u de recente "DECLARATION of CONFORMITY (conformiteitsverklaring)"(DoC) downloaden. Code: CQ-TM28E04M

Customer Information
Declaration of Conformity

Polish Niniejszym firma Panasonic oświadczycia, że podany powyżej typ urządzenia radiowych jest zgodny z dyrektywą 2014/53/UE. Wejdź na stronę http://www.ptc.panasonic.eu/ , kliknij „Declaration of Conformity (Deklaracja zg. odnosić)”, w polu wyszukiwania słów kluczowych wprowadź podane poniżej słowo kluczowe i pobierz najnowszą wersję „DECLARATION of CONFORMITY (DEKLARACJA ZGODNOŚCI)” (DoC). Słowo kluczowe: CQ-TM28E04M
Portuguese Pela presente, a Panasonic Corporation declara que o equipamento de rádio do tipo listado acima se encontra em conformidade com a Directiva 2014/53/UE. Acesse a http://www.ptc.panasonic.eu/ , clique em „Declaration of Conformity (Declaração de Conformidade)”, introduza a palavra-chave indicada abaixo na caixa de pesquisa de palavras-chave para descarregar a mais recente „DECLARATION of CONFORMITY (DECLARAÇÃO DE CONFORMIDADE)” (DoC). Palavra-chave: CQ-TM28E04M
Romanian Prin prezentul document, Panasonic Corporation declară că echipamentul radio de tipul enumerate mai sus este în conformitate cu Directiva 2014/53/UE. Accesați http://www.ptc.panasonic.eu/ , faceți clic pe „Declaration of Conformity (Declarația de conformitate)”, introduceți cuvântul cheie de mai jos în caseta de căutare după cuvinte cheie și puteți să descărcați cea mai recentă „DECLARATION of CONFORMITY (DECLARAȚIE DE CONFORMITATE)” (DoC). Cuvânt cheie: CQ-TM28E04M
Serbia Ovim kompanija Panasonic Corporation izjavljuje da je g. oenavedeni radio oprema tipa u skladu sa odredbama direktive 2014/53/EU. Pristupite stranici http://www.ptc.panasonic.eu/ , kliknite na „Declaration of Conformity (Izjava o usklađenosti)”, dolazeći u skladu s uvedenim rečenicom u polje za pretrag uključujući reč i onda možete da preuzmete najnoviji dokument „DECLARATION of CONFORMITY (IZJAVA O USKLAĐENOSTI)” (DoC – izjava o usklađenosti). Ključna reč: CQ-TM28E04M
Slovak Spoločnosť Panasonic Corporation týmto vyhlasuje, že rádiové zariadenie vyššie uvedeného typu je v súlade so smernicou 2014/53/EÚ. Na lokalite http://www.ptc.panasonic.eu/ môžete kliknúť na možnosť „Declaration of Conformity (Vyhľásenie o zhode)”, zadáť tužšie uvedené kľúčové slovo do vyhľadávacího počtu a preziať si najnovšie „DECLARATION of CONFORMITY (VYHĽÁSENIE O ZHODE)” (DoC). Kľúčové slovo: CQ-TM28E04M
Slovene Panasonic Corporation potrjuje, da je zg. omenjeni tip radijske opreme skladen z Direktivo 2014/53/EU. Obiščte http://www.ptc.panasonic.eu/ , kliknite „Declaration of Conformity (Izjava o skladnosti)”, v okviru za iskanje vnesite spodnjo ključno besedo in prenesite najnovšo Izjava o skladnosti – „DECLARATION of CONFORMITY (IZJAVA O SKLADNOSTI)” (DoC). Ključna beseda: CQ-TM28E04M
Swedish Härmed intyg att Panasonic Corporation att radioutrustning är enligt uppfördirektiv 2014/53/EU. Gå till http://www.ptc.panasonic.eu/ , klicka på „Declaration of Conformity (Försäkrand om överensstämelse)” och ang. en nyckelordet nedan i sökrutan. Sedan kan du ladda ned den senaste „DECLARATION of CONFORMITY (Försäkrand om överensstämelse)” (DoC). Nyckelord: CQ-TM28E04M
Turkey İşbu belge elektronik Panasonic Corporation, yukarıda listelenen radyo ekipmanı tipinin 2014/53/AB Direktifine uygun olduğunu beyan etmektedir. http://www.ptc.panasonic.eu/ adresinden „Declaration of Conformity (Uygunluk beyanı)” başlığına tıklandıkten sonra, sesli dildaki anahtar kelimeyi arama kutusuna girerek en son „DECLARATION of CONFORMITY (UYGUNLUK BEYANI)” (DoC) indirebilirsiniz. Anahtar kelime: CQ-TM28E04M

Declaration of Conformity

Without DAB radio

Manufacturer, Address:

Panasonic Corporation
4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-City Kanagawa-ken 224-8520, Japan

Importer, Address:

Mazda Motor Logistics Europe NV
Blaasveldstraat 162, 2830 Willebroek, België

Model NO.: CQ-TM28E14M

Albania	Me anë të këtij dokumenti, "Panasonic Corporation" deklaron se radioaparajt e tijt është në përgjithshëm me Direktivën 2014/53/EU. Hyni në http://www.ptc.panasonic.eu/ klikoni "Declaration of Conformity (Deklaraciya përgjithshëm)", shkruani termin kyç në kutinë e kërkimit të termave kyç dhe mund të shikoni versionin e fundit të "DECLARATION of CONFORMITY (DEKLARATËN E PËRPUTHSHMËRISË EJ)" (DoC). Termi kyç: CQ-TM28E14M
Bulgarian	С настоящото Panasonic Corporation декларира, че радиооборудването от типа посочен по-горе е в съответствие с Директива 2014/53/EU. Отидете на http://www.ptc.panasonic.eu/ , щракнете върху "Declaration of Conformity (Декларация за съответствие)", въведете ключовата дума: дадена по-долу, в полето за търсене по ключова дума и ищете да изтеглите найновата "DECLARATION of CONFORMITY (ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ)" (DoC). Ключова дума: CQ-TM28E14M
Czech	Tímto společností Panasonic Corporation prohlašuje, že uvedené rádiokvázízení typu CQ-TM28E14M je v souladu se směrem 2014/53/EU. Když ráže jste na stránky http://www.ptc.panasonic.eu/ , klikněte na „Declaration of Conformity (Prohlášení o shodě)“ a zadejte do téhož modelu CQ-TM28E14M do pole pro vyhledání podle klíčového slova, budete si moci stáhnout nejnovější verzi „DECLARATION of CONFORMITY (PROHLÁŠENÍ O SHODE)“ (DoC).
Danish	Herved erklaerer Panasonic Corporation, at radioudstyrret af typen nævnt ovenfor er i overensstemmelse med direktiv 2014/53/EU. Du kan hente den seneste "DECLARATION of CONFORMITY (O VERENSSTEMMELSESERKLÆRING)" (DoC) ved at besøge http://www.ptc.panasonic.eu/ , klikke på "Declaration of Conformity (Overensstemmelseserklæring)" og indtaste nedenstående nøgletal i feltet til nøgleordet: CQ-TM28E14M .
German	Hiermit erklärt Panasonic Corporation, dass der obengenannte Funkanlag eifürt der Richtlinie 2014/53/EU entspricht. Klicken Sie unter http://www.ptc.panasonic.eu/ auf „Declaration of Conformity“ (Konformitätserklärung), geben Sie das nachstehende Schluesselwort in die Suchleiste ein und laden Sie die aktuelle „DECLARATION of CONFORMITY“ (Konformitätserklärung) (DoC) herunter. Schluesselwort: CQ-TM28E14M
Greek	Με την παρούσα παρακαλούμε να δηλώσουμε ότι το ραδιοεξοπλισμός που παρατείνουμε είναι συμμορφωτικό με την οδηγία 2014/53/EU. Επι τηρεύεται στην ιστοσελίδα http://www.ptc.panasonic.eu/ , κάτια μέλλον στην "Declaration of Conformity (Δήλωση συμμορφίας)", καταχωρίζεται παρακαλούμε να δηλώσετε ότι έχετε δει την παραπάνω DECLARATION OF CONFORMITY (ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣ) (DoC). Όποια δηλώση: CQ-TM28E14M
English	Hereby, Panasonic Corporation declares that the radio equipment type Listed above is in compliance with Directive 2014/53/EU. Access to http://www.ptc.panasonic.eu/ , click "Declaration of Conformity", enter the below Keyword into the keyword search box, you can download the latest "DECLARATION of CONFORMITY" (DoC). Keyword: CQ-TM28E14M
Spanish	Por la presente, Panasonic Corporation declara que el equipo de radio del tipo citado más arriba cumple con lo establecido en la Directiva 2014/53/EU. Acceda a http://www.ptc.panasonic.eu/ , haga clic en "Declaration of Conformity (Declaración de conformidad)", introduzca la palabra clave indicada a continuación en el cuadro de búsqueda y podrá descargar la última "DECLARATION of CONFORMITY (Declaración de conformidad)" (DoC). Palabra clave: CQ-TM28E14M
Estonia	Käesolevaga adeklareerib Panasonic Corporation, et teelmainitud radioseadme täida vastab direktiivi 2014/53/EU riiklikele. Mõig seevileolehele http://www.ptc.panasonic.eu/ klõpsake valikul „Declaration of Conformity“ (Vastavusdeklaratsioon), sisestage välisbodus märksõna spetsiaalsele otsing väljale ning laadige välja dokumenti „DECLARATION of CONFORMITY“ (Vastavusdeklaratsioon) (DoC) viimase versioon. Märksõna: CQ-TM28E14M

Declaration of Conformity

	Panasonic Corporation vakuuttaa, että edellä lueteltu radioteknityyppi täytää direktiivissä 2014/53/EU asetettut vaatimukset. Viimeisin "DECLARATION OF CONFORMITY (VAATIMUSTENMUKAISUUUSVAKUUTUS)"(DoC) on ladattavissa verkkosivulla http://www.ptc.panasonic.eu/ , valitsemalla kohta "Declaration of Conformity (vaatimustenmukaisuuusvakuutus)" ja syötämällä alla mainittu hakusana hakukenttään. Hakusana: CQ-TM28E14M
French	Par la présente, Panasonic Corporation déclare que le type d'équipement radio énuméré ci-dessous est en conformité avec la directive 2014/53/UE. Pour télécharger la dernière « DECLARATION OF CONFORMITY (DECLARATION DE CONFORMITE) » (DoC), rendez-vous sur http://www.ptc.panasonic.eu/ , cliquez sur « Declaration of Conformity (Déclaration de conformité) », puis saisissez le mot clé ci-dessous dans le champ de recherche par mots-clés. Mot clé : CQ-TM28E14M
Croatian	Ovime Panasonic Corporation izjavljuje da je radijska oprema vrste navedene iznad u skladu s Direktivom 2014/53/EU. Pristup za: http://www.ptc.panasonic.eu/ kliknite "Declaration of Conformity" (Izjava o sukladnosti), unesite ključnu riječ koja je navedena u nastavku, u okviru za pretraživanja ključne riječi, možete preuzeti na noviju "DECLARATION OF CONFORMITY (IZJAVA O SUKLADNOSTI)" (DoC). Ključna riječ: CQ-TM28E14M
Hungarian	A Panasonic Corporation ezenelőtt nyilatkozik arról, hogy a fent megadott típusú rádió berendezésük megfelelnek a 2014/53/EU irányelv elérésének. Lépjen a http://www.ptc.panasonic.eu/ oldalra, kattintson a „Declaration of Conformity” (Megfelelőségi nyilatkozat) elemre, és írja be a zárt körben a külcsöt a keresőmezőbe, ha szeretné leolvasni a leg újabb „DECLARATION OF CONFORMITY” (Megfelelőségi nyilatkozat) dokumentumot (doc-fájlt). Külcs: CQ-TM28E14M
Iceland	Hér með lýsir Panasonic Corporation því yfir að ófangreindur óverðsíðuna eru í lagi samræmi við tilskipun 2014/53/EB. Farið á http://www.ptc.panasonic.eu/ með tiltekinu á „Declaration of Conformity (Samræmisfyrlysing)”, sláðu erfarandi teg undan inn í leitarminn og þá gurðu á höfuði nystu „DECLARATION OF CONFORMITY (SAMRÆMIS YFIRLYSINGUNA)”(DoC). Teg undanúmer: CQ-TM28E14M
Italian	Il fabbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio elencato sopra è conforme alla direttiva 2014/53/UE. Accedere al sito http://www.ptc.panasonic.eu/ fare clic su "Declaration of Conformity (Dichiarazione di Conformità)" e inserire la parola chiave segnata nella casella di ricerca per poter scaricare la "DECLARATION OF CONFORMITY (Dichiarazione di Conformità)" (DoC) più recente. Parola chiave: CQ-TM28E14M
Lithuanian	Šiuo dokumentu „Panasonic Corporation“ pareiškia, kad pirmiau nurodita tipo radio yra šią atitinkamą direktivą 2014/53/ES. Atvertkite http://www.ptc.panasonic.eu/ puslapinėje „Declaration of Conformity“ (Atitinkamasis deklaracija). Įtraukdami paieškos laukelių įveskite toliau nurodymuoti žodį ir išsiųskite atsakymą. naujausia „DECLARATION OF CONFORMITY“ (ATITINKAMAS DEKLARACIJOS) Raktažodis: CQ-TM28E14M
Latvian	Ariðo Panasonic Corporation deklarē, ka iepriekš minētās radioiekārtas atbilst Direktīvai 2014/53/ES prasībām. Dotieties uz http://www.ptc.panasonic.eu/ norādīto līniju "Declaration of Conformity" (Atbilstības deklarācija) un atslepkādu mērķējotās laukumiem ievadiet turpmāk minēto atslēgvārdu, lai lejupielādētu jaunāko "DECLARATION OF CONFORMITY (DoC)" (ATBILSTĪBAS DEKLARĀCIJU). Atbilstībās: CQ-TM28E14M
Maltese	Bidjan, Panasonic Corporation biddik jekk li t-tip ta' tagħmir tar-remu elenkathaw fuq hawn konformi mal-Direttiva 2014/53/UE Access għiha: http://www.ptc.panasonic.eu/ , iklikk ja "Declaration of Conformity (Dikjarazzjoni ta' Konformità)", da fil-ħalli (Hemma Muuħiex iñw), kien luu fil-parti tarr-ċerkxa tal-kien muuħiex tista' in "DECLARATION OF CONFORMITY (DIJKJARAZZU NI TA' KONFORMITÀ)" (Declaracion (DoC)) Kemm Muuħiex: CQ-TM28E14M
Norway	Panasonic Corporation erklaerer herdet at radioapparatet av typen nevnt ovenfor er i samsvar med direktiv 2014/53/UE. Ved å gå til http://www.ptc.panasonic.eu/ klikke på "Declaration of Conformity (samsvarserklæring)" og taste inn nedenstående nøkkelord i nøkkelord-søkeboksen, kan du laste ned den nyeste "DECLARATION OF CONFORMITY (SAMSVARERKLÆRINGEN)"(DoC). Nøkkelord: CQ-TM28E14M
Dutch	Hierbij verklaart Panasonic Corporation, dat de radioapparatuur van het hierboven vermelde type conform is met Richtlijn 2014/53/EU. Ga naar http://www.ptc.panasonic.eu/ , klik op "Declaration of Conformity (conformiteitsverklaring)", vul in het vak Keyword Search de onderstaande code in en kunt u de recentste "DECLARATION OF CONFORMITY (conformiteitsverklaring)"(DoC) downloaden. Code: CQ-TM28E14M

Declaration of Conformity

Polish	<p>Niniejszym firma Panasonic oświadczycza, że podany powyżej typ urządzeń radiowych jest zgodny z dyrektywą 2014/53/UE.</p> <p>Wejdź na stronę http://www.ptc.panasonic.eu/, kliknij „Declaration of Conformity (Deklaracja zg. odn.ści)”, w polu wyszukiwania słowo kluczowe wprowadź podane poniżej słowo kluczowe i pobierz najnowszą wersję „DECLARATION OF CONFORMITY (DEKLARACJA ZGODNOŚCI)” (DoC).</p> <p>Słowo kluczowe: CQ-TM2BE14M</p>
Portuguese	<p>Pela presente, a Panasonic Corporation declara que o equipamento de rádio do tipo listado acima se encontra em conformidade com a Diretiva 2014/53/UE.</p> <p>Acede a http://www.ptc.panasonic.eu/, clique em “Declaration of Conformity (Declaração de Conformidade)”, introduza a palavra-chave indicada abaixo na caixa de pesquisa de palavra-chave para descarregar a mais recente “DECLARATION OF CONFORMITY (DECLARAÇÃO DE CONFORMIDADE)” (DoC).</p> <p>Palavra-chave: CQ-TM2BE14M</p>
Romanian	<p>Prin prezentul document, Panasonic Corporation declară că echipamentul radio de tipul enumerației mai sus este în conformitate cu Directiva 2014/53/UE.</p> <p>Accesați http://www.ptc.panasonic.eu/, faceți clic pe „Declaration of Conformity (Declarația de conformitate)”, introduceți cuvântul cheie de mai jos în caseta de căutare după cuvinte cheie și puteți să descărcați ceea cea mai recentă „DECLARATION OF CONFORMITY (DECLARAȚIE DE CONFORMITATE)” (DoC).</p> <p>Cuvânt cheie: CQ-TM2BE14M</p>
Serbia	<p>Ovim kompanija Panasonic Corporation izjavljuje da je u skladu sa odredbama direktive 2014/53/EU.</p> <p>Pristupite stranicu http://www.ptc.panasonic.eu/, kliknite na „Declaration of Conformity (Izjava o usklađenosti)”, dolenuvadenu klijenu reč unesite u polje za pretragu uklijunjenih reči i onda možete da preuzmete najnoviji dokument „DECLARATION OF CONFORMITY (IZJAVA O USKLAĐENOSTI)“ (DoC – izjava o usklađenosti).</p> <p>Klijenna reč: CQ-TM2BE14M</p>
Slovak	<p>Spoločnosť Panasonic Corporation týmto vylúčne, že rádiové zariadenie vyššie uvedeného typu je v súlade so smernicou 2014/53/EÚ.</p> <p>Na lokalite http://www.ptc.panasonic.eu/, kliknite na „Declaration of Conformity (Vyhľásenie o zhode)“, zadajte nízkej uvedené kľúčové slovo do vyhľávacieho počtu a prevezmite si najnovšie „DECLARATION OF CONFORMITY (VYHLÁSENIE O ZHODE)“ (DoC).</p> <p>Kľúčové slovo: CQ-TM2BE14M</p>
Slovene	<p>Panasonic Corporation potrjuje, da je zg. in navedeni tip radijske opreme skladen z Direktivo 2014/53/EU.</p> <p>Obiščte http://www.ptc.panasonic.eu/, kliknite „Declaration of Conformity (IZJAVA O SKLADNOSTI)“, v okence za iskanje vnesite spodnjeno klijuno besedo in prenesti najnovije Izjava o skladnosti – „DECLARATION OF CONFORMITY (IZJAVA O SKLADNOSTI)“ (DoC).</p> <p>Klijuna beseda: CQ-TM2BE14M</p>
Swedish	<p>Härmed intygar Panasonic Corporation att radioutrustning erövar upp till författnings direktiv 2014/53/EU.</p> <p>Gå till http://www.ptc.panasonic.eu/, klicka på ”Declaration of Conformity (Försläkran om överensstämmeelse)“ och ang. en nyckelord nedan i sökrutan. Sedan kan du ladda ned den senaste ”DECLARATION OF CONFORMITY (Försläkran om överensstämmeelse)“ (DoC).</p> <p>Nyckelord: CQ-TM2BE14M</p>
Turkey	<p>İşbu belge ile Panasonic Corporation, yukarıda listelenen radyo ekipmanı tipinin 2014/53/AB Direktifine uygun olduğunu beyan etmektedir.</p> <p>http://www.ptc.panasonic.eu/ adresinden „Declaration of Conformity (Uyg. uluk beyani)“ başlıklıINA tıklatıldıkten sonra, aşağıdaki anahtar kelimeyi arama kutusuna girerek en son „DECLARATION OF CONFORMITY (UYGUNLUK BEYANINDI)“ (DoC) indirebilirisiniz.</p> <p>Anahtar kelime: CQ-TM2BE14M</p>

Declaration of Conformity

▼ Emergency call system

Iceland, Ireland, England, Italy, Estonia, Netherlands, Austria, Cyprus, Greece, Croatia, Switzerland, Sweden, Spain, Slovakia, Slovenia, Czech, Denmark, Germany, Norway, Hungary, Finland, France, Bulgaria, Belgium, Portugal, Poland, Malta, Latvia, Lithuania, Liechtenstein, Luxembourg, Romania, San Marino, Monaco, Albania, Andorra, Serbia, Bosnia-Herzegovina, Macedonia, Montenegro, Turkey, Canary Islands, Reunion, Guadeloupe Island, French Guiana, Martinique Island

Information of the radio device: Type FT0127A

1. Name and postal address of the manufacturer

Name: DENSO TEN Limited
 Address: 2-28, Goshō-dori 1-chome, Hyogo-ku, Kobe,
 652-8510 Japan

2. Simplified EU declaration of conformity

С настоящото DENSO TEN Limited декларира, че този тип радиосъоръжение FT0127A е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
https://www.denso-ten.com/support/regulation/eu_doc/

Функция	Работна честотна лента	Максимална радиочестотна мощност
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Ovim putem, DENSO TEN Limited izjavljuje da je vrsta radio opreme FT0127A u saglasnosti s Direktivom 2014/53/EU.

Cijeli tekst EC deklaracije o usaglašenosti je dostupan na sljedećoj internetskoj adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna radiofrekvencijska snaga
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Declaration of Conformity

Tímto DENSO TEN Limited prohlašuje, že typ rádiového zařízení FT0127A je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkce	Provozní frekvenční pásmu	Maximální radiofrekvenční výkon
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Hermed erklærer DENSO TEN Limited, at radioudstyrstypen FT0127A er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Driftsfrekvensbandet	Maksimal radio-frekvens effekt
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Hiermit erklärt DENSO TEN Limited, dass der Funkanlagentyp FT0127A der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Betriebsfrequenzband	Maximale Hochfrequenzleistung
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Declaration of Conformity

Με την παρούσα ο/η DENSO TEN Limited, δηλώνει ότι ο ραδιοεξοπλισμός FT0127A πληροί την οδηγία 2014/53/EU.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.denso-ten.com/support/regulation/eu_doc/

Λειτουργία	Ζώνη συχνοτήτων λειτουργίας	Μέγιστη ισχύς ραδιοσυχνότητας
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Hereby, DENSO TEN Limited declares that the radio equipment type FT0127A is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso-ten.com/support/regulation/eu_doc/

Function	Operating frequency band	Maximum radio-frequency power
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Por la presente, DENSO TEN Limited declara que el tipo de equipo radioeléctrico FT0127A es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

https://www.denso-ten.com/support/regulation/eu_doc/

Función	Banda de frecuencia operativa	Potencia máxima de la radiofrecuencia
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Declaration of Conformity

Käesolevaga deklareerib DENSO TEN Limited, et käesolev raadioseadme tüüp FT0127A vastab direktiivi 2014/53/EÜ nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

https://www.denso-ten.com/support/regulation/eu_doc/

Funktsioon	Töösageduse laineala	Maksimaalne raadiosageduslik võimsus
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

DENSO TEN Limited vakuuttaa, että radiolaitetyyppi FT0127A on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetsoitteessa:

https://www.denso-ten.com/support/regulation/eu_doc/

Toiminto	Toimintataajuuskaista	Maksimi radiotaajuusteho
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Le soussigné, DENSO TEN Limited, déclare que l'équipement radioélectrique du type FT0127A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.denso-ten.com/support/regulation/eu_doc/

Fonction	Bandes de fréquence de fonctionnement	Puissance maximale de la radiofréquence
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Declaration of Conformity

Leis seo, dearbhaíonn DENSO TEN Limited go gcomhlíonann an cineál trealaímh raidió FT0127A Treoir 2014/53/EU.

Tá an téacs iomlán den dearbhú comhréireachta AE ar fáil ag an seoladh. Ídirílín seo a leanas:

https://www.denso-ten.com/support/regulation/eu_doc/

Feidhm	Banda minicíochta oibriúcháin	Uaschumhacht radaimhnicíochta
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

DENSO TEN Limited ovime izjavljuje da je radijska oprema tipa FT0127A u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojaz	Maksimalna radiofrekvencijska snaga
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

DENSO TEN Limited igazolja, hogy a FT0127A típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkció	Üzemi frekvencia-tartomány	Maximális rádiófrekvenciás teljesítmény
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Declaration of Conformity

Hér með, lýsir DENSO TEN Limited því yfir að gerð útvarpsbúnaðarins FT0127A samræmist tilskipun 2014/53/EU.

Allur texti ESB-samræmisyfirlýsingarinnar er aðgengilegur á eftirfarandi veggangi:

https://www.denso-ten.com/support/regulation/eu_doc/

Aðgerð	Notkunartíðni hljómsveit	Hámarks útvarp-tíðni vald
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Il fabbricante, DENSO TEN Limited, dichiara che il tipo di apparecchiatura radio FT0127A è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.denso-ten.com/support/regulation/eu_doc/

Funzione	Frequenza operativa	Massima potenza a radiofrequenza
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Aš, DENSO TEN Limited, patvirtinu, kad radijo įrenginių tipas FT0127A atitinka Direktyvą 2014/53/ES.

Visas ES atitinkties deklaracijos tekstas prieinamas šiuo interneto adresu:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Veikimo dažnių juosta	Maksimalus radijo dažnių galimumas
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Declaration of Conformity

Ar šo DENSO TEN Limited deklarē, ka radioiekārta FT0127A atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Darba frekvences josla	Maksimālā radiofrekvences jauda
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Со ова, DENSO TEN Limited изјавува дека радио опремата од типот FT0127A е во согласност со Директивата 2014/53/EU.

Целиот текст на ЕУ изјавата за сообразност е достапен на следната интернет адреса:

https://www.denso-ten.com/support/regulation/eu_doc/

Функција	Работен фреквенциски опсег	Максимална радио-фреквенциска моќ
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Ovim, DENSO TEN Limited izjavljuje da je tip radio opreme FT0127A u skladu sa Direktivom 2014/53/EU.

Cjelokupan tekst EU deklaracije o usklađenosti dostupan je na sljedećoj internet adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Operativni frekvencijski opseg	Maksimalna jačina radio frekvencije
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Declaration of Conformity

B'dan, DENSO TEN Limited, niddikjara li dan it-tip ta' tagħmir tar-radju FT0127A huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

https://www.denso-ten.com/support/regulation/eu_doc/

Funzjoni	Band tal-frekwenza operattiva	I-enerġija massima bi frekwenza tar-radju
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Hierbij verklaar ik, DENSO TEN Limited, dat het type radioapparatuur FT0127A conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

https://www.denso-ten.com/support/regulation/eu_doc/

Functie	Actieve frequentieband	Maximale radiofrequentie
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

DENSO TEN Limited erklærer herved at radioutstyrstypen FT0127A er i samsvar med direktiv 2014/53/EU.

Den fullstendige teksten i EU-erklæringen er tilgjengelig på følgende internettadresse:

https://www.denso-ten.com/support/regulation/eu_doc/

Funksjon	Driftsfrekvensbånd	Maksimal radiofrekvent strøm
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Declaration of Conformity

DENSO TEN Limited niniejszym oświadcza, że typ urządzenia radiowego FT0127A jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcja	Pasmo częstotliwości pracy	Maksymalna moc częstotliwości radiowej
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

O(a) abaixo assinado(a) DENSO TEN Limited declara que o presente tipo de equipamento de rádio FT0127A está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

https://www.denso-ten.com/support/regulation/eu_doc/

Função	Faixa de freqüência operacional	Potência máxima de radiofreqüência
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Prin prezenta, DENSO TEN Limited declară că tipul de echipamente radio FT0127A este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.denso-ten.com/support/regulation/eu_doc/

Funcție	Bandă de frecvență activă	Puterea maximă a radio-frecvenței
GSM	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz	25dBm e.i.r.p.
	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Declaration of Conformity

DENSO TEN Limited týmto vyhlasuje, že rádiové zariadenie typu FT0127A je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
https://www.denso-ten.com/support/regulation/eu_doc/

Funkcia	Prevádzkové frekvenčné pásmo	Maximálny rádiofrekvenčný výkon
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

DENSO TEN Limited potrjuje, da je tip radijske opreme FT0127A skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Delovni frekvenčni pas	Maksimalna radiofrekvenčna moč
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Nepermjet késaj, DENSO TEN Limited deklaron se lloji i aparatit tě radios FT0127A eshtě ně pěrputhje me Direktivěn 2014/53/EU.

Teksti i plotě i deklaratěs sě BE-sě mbi pěrputhshměrině eshtě i disponueshém ně adresén e měposhtme tě internetit:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcion	Banda e frekuencës së punës	Fuqia maksimale e frekuencave radio
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Declaration of Conformity

Ovim, DENSO TEN Limited izjavljuje da je ovaj tip radijske opreme FT0127A u skladu sa odredbama Direktive 2014/53/EU.

Kompletan tekst EU deklaracije o konformitetu je dostupan na sledećoj internet adresi:

https://www.denso-ten.com/support/regulation/eu_doc/

Funkcija	Radni frekvencijski pojas	Maksimalna radiofrekvencijska snaga
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Härmed försäkrar DENSO TEN Limited att denna typ av radioutrustning FT0127A överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

https://www.denso-ten.com/support/regulation/eu_doc/

Funktion	Operationsfrekvensbandet	Maximal radiofrekvenseffekt
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

DENSO TEN Limited, FT0127A türü telsiz ekipmanının 2014/53/EU Direktifine uygun olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşılabilir:

https://www.denso-ten.com/support/regulation/eu_doc/

İşlev	Çalışma frekans bandı	Maksimum radyo-frekans gücü
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Declaration of Conformity

Ukraine

справжнім (DENSO TEN Limited) заявляє, що тип радіообладнання (GSM / UTMS) відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою: https://www.denso-ten.com/support/regulation/ua_doc/.

типу радіообладнання	смузі радіочастот	максимальну потужність випромінювання
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

▼ Mazda ERA-GLONASS

Нотифікація ФСБ № RU0000038263 от 10.07.2018, дійсність до 05.07.2023, зареєстрована ФСБ РФ.

Декларація о соответствии средства связи № Д-МДРТ-11636 от 06.09.2018, действительна до 31.08.2023, зарегистрирована Федеральным агентством связи РФ.

Декларація о соответствии техническому регламенту Таможенного союза 020/2011 № ЕАЭС N RU Д-ЈР МЛ26.В.00626 от 30.08.2018, действительна по 29.08.2023, зарегистрирована органом по сертификации продукции АНО «СЦ Связь-сертификат» (аттестат акредитации RA.RU.11МЛ26, дата регистрации 10.02.2015).

Декларація о соответствии аккумуляторной батареи FT0098A № РОСС RU Д-ЈР АД37 В.01289/18 от 24.10.2018, действительна до 23.10.2023, зарегистрирована органом по сертификации продукции «Красно Дар» ООО «ИД Контроль» (аттестат акредитации RA.RU.11АД37, дата регистрации 03.11.2016).

Electromagnetic Compatibility

▼ Electromagnetic Compatibility

Your Mazda has been tested and certified to the UN-R^{*1} 10 regulation as related to electromagnetic compatibility. Radio Frequency (RF) transmitter equipment (e.g. cellular telephones, amateur radio transmitters, etc.) may only be fitted to your Mazda if they comply with the parameters shown in the table below.

^{*1} UN-R stands for United Nations Regulation.

It is your responsibility to ensure that any equipment you have fitted complies with applicable local legislations. Have any equipment fitted by properly trained technicians.

⚠ CAUTION

- *Do not mount any transceiver, microphones, speakers, or any other item in the deployment path of the air bag system.*
- *Do not fasten aerial lead to original vehicle wiring, fuel pipes or brake pipes. Avoid running the aerial lead parallel with the wire harness to the best extent possible.*
- *Keep the aerial and power leads at least 100 mm (3.9 in) from any electronic modules and the air bags.*

➤ *Avoid using the cigar lighter or accessory socket as a power source for the RF-transmitting equipment.*



Aerial positions:

1. Front right of roof
2. Both sides of liftgate
3. Centre of roof
4. Front left of roof

Frequency Band (MHz)	Maximum output power (Wattage)	Aerial Positions
50 — 54	50	①②③④
68 — 87.5	50	①②③④
142 — 176	50	①②③④
380 — 470	50	①②③④
806 — 940	10	①②③④
1200 — 1300	10	①②③④
1710 — 1885	10	①②③④
1885 — 2025	10	①②③④
2400 — 2500	0.01 ^{*1}	In a cabin ^{*1}

*1 Only for Bluetooth®

NOTE

After the installation of RF transmitters, check for disturbances from and to all electrical equipment in the vehicle, both in the standby and transmit modes.

Check all electrical equipment:

- *with the ignition ON*
- *with the engine running*
- *during a road test at various speeds.*


Collection/Disposal of Old Equipment/Used Battery

Information for Users on Collection and Disposal of Old Equipment and Used Batteries

▼ Information for Users on Collection and Disposal of Old Equipment and Used Batteries

When disposing your old battery, please refer to the information as follows.

▼ Information on Disposal in the European Union

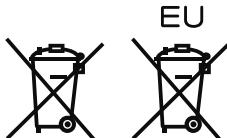

These crossed-out wheeled bin symbols on the products, packaging, and/or accompanying documents mean that used electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sales where you purchased the items.

NOTE



The bottom two letters might be used in combination with the crossed-out wheeled bin symbol. In this case it complies with the requirement established by the Directive for the chemical involved. "Pb" and "Cd" mean lead and cadmium respectively.

▼ Information on Disposal in Other Countries Outside the European Union

The above symbols are only valid in the European Union. If you wish to discard old products and used batteries, please contact your local authorities, your waste disposal service or the point of sales where you purchased the items, and ask for the correct method of disposal.

9

Specifications

Technical information about your Mazda.


Identification Numbers.....	9-2	Specifications.....	9-4
Vehicle Information Labels.....	9-2	Specifications.....	9-4

Identification Numbers

Vehicle Information Labels

▼ Vehicle Identification Number (South Africa, Arab Gulf Cooperation Council, Iraq)

The vehicle identification number legally identifies your vehicle. The number is on a plate attached to the cowl panel located on the left corner of the instrument panel. This plate can easily be seen through the windscreens.

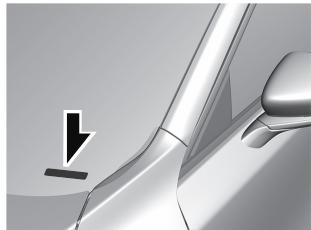


▼ Model Plate




▼ Chassis Number/Vehicle Identification Number (Ireland, UK, Swaziland, Namibia, Botswana, Lesotho, Russian Federation)

Chassis Number

Open the cover shown in the figure to check the chassis number.

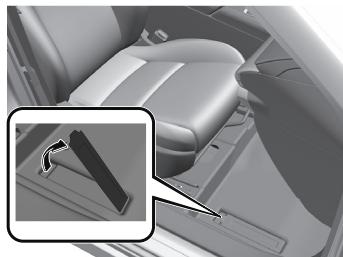

Vehicle Identification Number

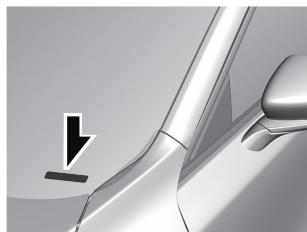

▼ Vehicle Emission Control Information Label (Thailand, Philippines)



▼ Tyre Pressure Label

Left-hand drive model




Right-hand drive model




▼ Engine Number

SKYACTIV-G 1.5, SKYACTIV-G 2.0,
SKYACTIV-G 2.5

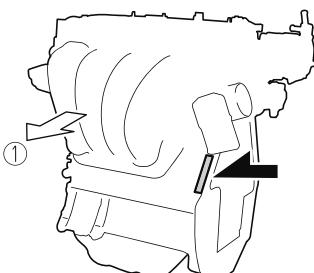


1. Forward

SKYACTIV-X 2.0

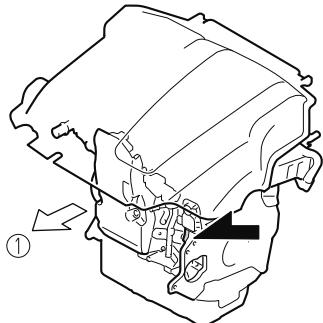

1. Forward

SKYACTIV-D 1.8

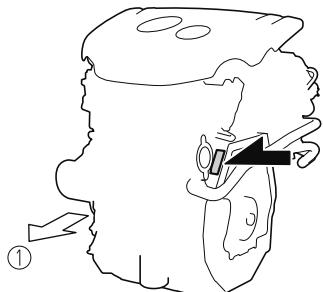

1. Forward

▼ Conformity Plate (Arab Gulf Cooperation Council, Iraq)

Production year and month are shown on this plate.



Specifications

Specifications

▼ Engine

Petrol engine

Item	Specification			
	SKYACTIV-G 1.5	SKYACTIV-G 2.0	SKYACTIV-G 2.5	SKYACTIV-X 2.0
Type	DOHC-16V in-line, 4-cylinder			
Bore × Stroke	74.5 × 85.8 mm (2.93 × 3.38 in)	83.5 × 91.2 mm (3.29 × 3.59 in)	89.0 × 100 mm (3.50 × 3.94 in)	83.5 × 91.2 mm (3.29 × 3.59 in)
Displacement	1,496 ml (1,496 cc)	1,998 ml (1,998 cc)	2,488 ml (2,488 cc)	1,998 ml (1,998 cc)
Compression ratio	13.0/14.0	13.0	13.0	16.3

Arab Gulf Cooperation Council

Item	Specification			
	SKYACTIV-G 1.5		SKYACTIV-G 2.0	
Maximum engine power/revolution	82 kW/6,000 rpm		114 kW/6,000 rpm	
Maximum engine torque/revolution	146 N·m/3,500 rpm		200 N·m/4,000 rpm	
Maximum speed	Saloon	Hatchback	Saloon	Hatchback
	183 km/h (114 mph)	177 km/h (110 mph)	206 km/h (128 mph)	199 km/h (124 mph)

Diesel engine

Item	Specification	
	SKYACTIV-D 1.8	
Type	DOHC-16V in-line, 4-cylinder	
Bore × Stroke	79.0 × 89.7 mm (3.11 × 3.53 in)	
Displacement	1,759 ml (1,759 cc)	
Compression ratio	14.8	

▼ Electrical System

Battery

(With M Hybrid)

Classification	Specification
SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0	12V-60Ah/20HR or 12V-65Ah/20HR

(Without M Hybrid)

Classification	Specification
SKYACTIV-G 1.5, SKYACTIV-TIV-G 2.0, SKYACTIV-G 2.5	With i-stop
	Without i-stop
SKYACTIV-D 1.8	S-95*1

*1 Q-85 or S-95 is designed for i-stop system (FOR STOP & START). Only Q-85 or S-95 should be used to ensure correct operation of i-stop system (FOR STOP & START). Consult an expert repairer, we recommend an Authorised Mazda Repairer for details.

Spark-plug

Classification	Specification	
SKYACTIV-G 1.5, SKYACTIV-G 2.5	Mazda Genuine spark plug*1	PE5R-18-110 or PE5S-18-110
SKYACTIV-G 2.0	Thailand	Mazda Genuine spark plug*1
	Except Thailand	PEHW-18-110
SKYACTIV-X 2.0	Mazda Genuine spark plug*1	PE5R-18-110 or PE5S-18-110
		HF01-18-110

*1 This spark plug provides the SKYACTIV-G engine with optimum performance. Consult an expert repairer, we recommend an Authorised Mazda Repairer for details.

*2 Because the SKYACTIV-X 2.0 is a high compression ratio engine, the piston and plugs are close to each other. If the replacement is not done using the correct procedure or a non-genuine plug is used, the engine could be damaged. Consult an expert repairer, we recommend an Authorised Mazda Repairer for details.



CAUTION

When cleaning the iridium plugs, do not use a wire brush. The fine particulate coating on the iridium alloy and platinum tips could be damaged.

Specifications

▼ Lubricant Quality

Engine oil*1	Europe and Taiwan		Except Europe and Taiwan	
SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5	Recommended Oils*2		Oil Quality	
	Mazda Original Oil Supra-X 0W-20		API SL or higher, or ILSAC GF-III or higher	
	Mazda Original Oil Ultra 5W-30			
	Alternative Oil Quality*3			
	API SN*4 or higher, or ACEA A5/B5	0W-20		
		5W-30		
SKYACTIV-X 2.0	Recommended Oils*2		Oil Quality	
	Mazda Original Oil Supra-X 0W-20		API SN or higher	
	Alternative Oil Quality*3			
	API SN or higher	0W-20		
SKYACTIV-D 1.8	Recommended Oils*2		Oil Quality	
	Mazda Original Oil Supra DPF 0W-30		ACEA C3 0W-30/5W-30	
	Mazda Original Oil Ultra DPF 5W-30			
	Alternative Oil Quality*3			
	ACEA C3	0W-30		
		5W-30		

*1 Refer to Recommended Oil on page 6-25

*2 Mazda Original Oils are specially designed/tested for the respective engine. For optimum performance we recommend to use Mazda Original Oils at all times.

*3 If you are unable to find a Mazda Original Oil, alternative oils meeting the listed specification may also be used.

*4 Use API SM or higher in Kazakhstan.

Do not use oils which do not meet the above specification or requirements. Use of unsuitable oil may lead to engine damage which is not covered by the Mazda Warranty.

Lubricant	Classification	
Coolant	FL-22 type	
Manual transmission oil	Mazda Long Life Gear Oil G7*1	
Automatic transmission fluid	SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5, SKYACTIV-D 1.8	Mazda Original Oil ATF-FZ
	SKYACTIV-X 2.0	Mazda Original Oil ATF-A7
Transfer case oil	Mazda Long Life Hypoid Gear Oil SG1	
Rear differential oil	Mazda Long Life Hypoid Gear Oil SG1	
Brake/Clutch fluid	With M Hybrid	Mazda Genuine Brake Fluid or equivalent
	Without M Hybrid	SAE J1703 or FMVSS116 DOT-3 or DOT-4

*1 Mazda Long Life Gear Oil G7 is superior oil for low fuel cost and optimum shift-feel. Using Mazda Long Life Gear Oil G7 is recommended.

If Mazda Long Life Gear Oil G7 cannot be obtained, use standard oil (API Service GL-4 (SAE 75W-80)).

▼ Cleaner

Cleaner	Classification
Deposit Cleaner*1	Mazda genuine deposit cleaner (K002 W0 001)

*1 Use Mazda genuine deposit cleaner. Using non-genuine deposit cleaner would cause internal failure of the fuel system. Refer to 3-28, 6-3 for the details.

▼ Capacities

(Approximate Quantities)

Item			Capacity
Engine oil	SKYACTIV-G 1.5	With oil filter replacement	4.2 L (4.4 US qt, 3.7 Imp qt)
		Without oil filter replacement	3.9 L (4.1 US qt, 3.4 Imp qt)
	SKYACTIV-G 2.0	With oil filter replacement	4.2 L (4.4 US qt, 3.7 Imp qt)
		Without oil filter replacement	4.0 L (4.2 US qt, 3.5 Imp qt)
	SKYACTIV-G 2.5	With oil filter replacement	4.5 L (4.8 US qt, 4.0 Imp qt)
		Without oil filter replacement	4.3 L (4.5 US qt, 3.8 Imp qt)
	SKYACTIV-X 2.0	With oil filter replacement	4.6 L (4.9 US qt, 4.0 Imp qt)
		Without oil filter replacement	4.4 L (4.6 US qt, 3.9 Imp qt)
	SKYACTIV-D 1.8	With oil filter replacement	5.1 L (5.4 US qt, 4.5 Imp qt)
		Without oil filter replacement	4.7 L (5.0 US qt, 4.1 Imp qt)

Specifications

Item				Capacity		
Coolant	SKYACTIV-G 1.5	Manual transmission	Left-hand drive model	5.7 L (6.0 US qt, 5.0 Imp qt)		
			Right-hand drive model	5.6 L (5.9 US qt, 4.9 Imp qt)		
		Automatic transmission	Left-hand drive model	6.0 L (6.3 US qt, 5.3 Imp qt)		
			Right-hand drive model	5.9 L (6.2 US qt, 5.2 Imp qt)		
	SKYACTIV-G 2.0	Manual transmission	Left-hand drive model	With Cylinder Deactivation 6.2 L (6.6 US qt, 5.5 Imp qt)		
			Without Cylinder Deactivation	6.3 L (6.7 US qt, 5.5 Imp qt)		
		Right-hand drive model	With Cylinder Deactivation	6.1 L (6.4 US qt, 5.4 Imp qt)		
			Without Cylinder Deactivation	6.2 L (6.6 US qt, 5.5 Imp qt)		
		Automatic transmission	Left-hand drive model	6.5 L (6.9 US qt, 5.7 Imp qt)		
			Right-hand drive model	6.4 L (6.8 US qt, 5.6 Imp qt)		
	SKYACTIV-G 2.5	Manual transmission		6.3 L (6.7 US qt, 5.5 Imp qt)		
		Automatic transmission		6.6 L (7.0 US qt, 5.8 Imp qt)		
Manual transmission oil	SKYACTIV-X 2.0	Manual transmission	Left-hand drive model	7.0 L (7.4 US qt, 6.2 Imp qt)		
			Right-hand drive model	6.9 L (7.3 US qt, 6.1 Imp qt)		
		Automatic transmission	Left-hand drive model	7.2 L (7.6 US qt, 6.3 Imp qt)		
			Right-hand drive model	7.1 L (7.5 US qt, 6.2 Imp qt)		
		For water-cooled charge air cooler		1.6 L (1.7 US qt, 1.4 Imp qt)		
	SKYACTIV-D 1.8	Manual transmission	Left-hand drive model	7.0 L (7.4 US qt, 6.2 Imp qt)		
			Right-hand drive model	6.9 L (7.3 US qt, 6.1 Imp qt)		
		Automatic transmission	Left-hand drive model	7.1 L (7.5 US qt, 6.2 Imp qt)		
			Right-hand drive model	7.0 L (7.4 US qt, 6.2 Imp qt)		
		For water-cooled charge air cooler		1.6 L (1.7 US qt, 1.4 Imp qt)		
	SKYACTIV-G 1.5			1.59 L (1.68 US qt, 1.40 Imp qt)		
	SKYACTIV-G 2.0, SKYACTIV-X 2.0			1.70 L (1.80 US qt, 1.50 Imp qt)		
	SKYACTIV-G 2.5, SKYACTIV-D 1.8			1.65 L (1.74 US qt, 1.45 Imp qt)		

Item		Capacity
Automatic transmission fluid	SKYACTIV-G 1.5	7.2 L (7.6 US qt, 6.3 Imp qt)
	SKYAC-TIV-G 2.0, SKYAC-TIV-G 2.5	With Cylinder Deactivation 7.9 L (8.3 US qt, 7.0 Imp qt) Without Cylinder Deactivation 7.6 L (8.0 US qt, 6.7 Imp qt)
	SKYACTIV-X 2.0, SKYACTIV-D 1.8	7.6 L (8.0 US qt, 6.7 Imp qt)
	Transfer case oil	0.35 L (0.37 US qt, 0.31 Imp qt)
Rear differential oil		0.35 L (0.37 US qt, 0.31 Imp qt)
Fuel tank	2WD	51.0 L (13.5 US gal, 11.2 Imp gal)
	AWD	48.0 L (12.7 US gal, 10.6 Imp gal)

Check oil and fluid levels with dipsticks or reservoir gauges.

▼ Dimensions

Saloon

Item		Vehicle specification
Overall length		4,660 mm (183.5 in)
Overall width		1,795 mm (70.7 in)
Overall height	Except Colombia, Ecuador, Uruguay	1,440 mm (56.7 in)
	Colombia, Ecuador, Uruguay	1,445 mm (56.9 in)
Front tread		1,570 mm (61.8 in)
Rear tread		1,580 mm (62.2 in)
Wheelbase		2,725 mm (107.3 in)

Hatchback

Item		Vehicle specification
Overall length		4,460 mm (175.6 in)
Overall width		1,795 mm (70.7 in)
Overall height	Except Colombia, Ecuador, Uruguay	1,435 mm (56.5 in)
	Colombia, Ecuador, Uruguay	1,440 mm (56.7 in)
Front tread		1,570 mm (61.8 in)
Rear tread		1,580 mm (62.2 in)
Wheelbase		2,725 mm (107.3 in)

Specifications

▼ Light Bulbs

Exterior light

Light bulb	Category	
	Wattage	UN-R ^{*1} (SAE)
Headlights	LED ^{*2}	— (—)
Running lights*/Position lights	LED type	LED ^{*2}
	Bulb type	21/5 W21/5W (7444)
• Front direction indicator lights • Side direction indicator lights • High-mount brake light • Rear direction indicator lights • Brake lights • Tail lights • Reverse lights • Rear fog lights* • Number plate lights	LED ^{*2}	— (—)

*1 UN-R stands for United Nations Regulation.


*2 LED is the abbreviation for Light Emitting Diode.

Interior light

Light bulb	Category	
	Wattage	UN-R ^{*1}
• Overhead light (Front)/Map lights (Front) • Overhead light (Rear)/Map lights (Rear)* • Overhead light (Rear)* • Vanity mirror lights*	LED ^{*2}	—
Boot light (Saloon)	5	—
Luggage compartment light (Hatchback)	LED ^{*2}	—

*1 UN-R stands for United Nations Regulation.

*2 LED is the abbreviation for Light Emitting Diode.

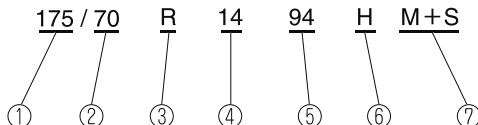▼ Tyres**Sample tyre mark and its meaning**

1. Nominal section width
2. Nominal aspect ratio in %
3. Construction code
4. Nominal rim diameter in inches
5. Load index (not on ZR tyres)
6. Speed symbol
7. Mud and snow

Tyre mark information

Choose the proper tyres for your vehicle using the following tyre mark information.

Speed symbol	Maximum permissible speed
Q	Up to 160 km/h (99 mph)
R	Up to 170 km/h (105 mph)
S	Up to 180 km/h (111 mph)
T	Up to 190 km/h (118 mph)
U	Up to 200 km/h (124 mph)
H	Up to 210 km/h (130 mph)
V	Up to 240 km/h (149 mph)
W	Up to 270 km/h (167 mph)
Y	Up to 300 km/h (186 mph)
ZR	Over 240 km/h (149 mph)

Specifications

Tyre and inflation pressure

NOTE

The tyres have been optimally matched with the chassis of your vehicle.

When replacing tyres, Mazda recommends that you replace tyres of the same type originally fitted to your vehicle. For details, contact an expert repairer, we recommend an Authorised Mazda Repairer.

Check the tyre pressure label for tyre size and inflation pressure.

- Refer to Tyre Inflation Pressure on page 6-44.
- Refer to Tyre Pressure Label on page 9-3.

Standard tyre

Tyre size		Inflation pressure		
		Up to 3 persons		—Full load
205/60R16 92V	Type A ^{*1}	Front	250 kPa (2.5 bar, 36 psi)	260 kPa (2.6 bar, 38 psi)
		Rear	250 kPa (2.5 bar, 36 psi)	290 kPa (2.9 bar, 42 psi)
	Type B ^{*1}	Front	260 kPa (2.6 bar, 38 psi)	260 kPa (2.6 bar, 38 psi)
		Rear	250 kPa (2.5 bar, 36 psi)	290 kPa (2.9 bar, 42 psi)
215/45R18 89W	Type A ^{*1}	Front	250 kPa (2.5 bar, 36 psi)	270 kPa (2.7 bar, 39 psi)
		Rear	250 kPa (2.5 bar, 36 psi)	290 kPa (2.9 bar, 42 psi)
	Type B ^{*1}	Front	260 kPa (2.6 bar, 38 psi)	270 kPa (2.7 bar, 39 psi)
		Rear	250 kPa (2.5 bar, 36 psi)	290 kPa (2.9 bar, 42 psi)

1 person's weight: About 75 kg

^{*1} Check the tyre inflation pressure label (driver's door frame) for the correct tyre inflation pressure.

Refer to Tyre Pressure Label on page 9-3.

Temporary spare tyre*

Tyre size	Inflation pressure
T125/70D16 96M	420 kPa (4.2 bar, 60 psi)
185/55R16 87M	320 kPa (3.2 bar, 46 psi)

Winter tyre

Tyre size		Inflation pressure	
		Up to 3 persons	—Full load
205/60R16 ^{*1} M+S	Front	250 kPa (2.5 bar, 36 psi) ^{*3} 260 kPa (2.6 bar, 38 psi) ^{*4}	260 kPa (2.6 bar, 38 psi)
	Rear	270 kPa (2.7 bar, 39 psi)	310 kPa (3.1 bar, 45 psi)
215/45R18 ^{*2} M+S	Front	250 kPa (2.5 bar, 36 psi) ^{*3} 260 kPa (2.6 bar, 38 psi) ^{*4}	270 kPa (2.7 bar, 39 psi)
	Rear	270 kPa (2.7 bar, 39 psi)	310 kPa (3.1 bar, 45 psi)

1 person's weight: About 75 kg

^{*1} Load index and Speed Symbol: 92Q/92S/92H/92V

^{*2} Load index and Speed Symbol: 89Q/89S/89H/89V/89W

^{*3} SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5

^{*4} SKYACTIV-X 2.0, SKYACTIV-D 1.8

Wheel nut tightening torque

When installing a tyre, tighten the wheel nut to the following torque.

108—147 N·m (12—14 kgf·m, 80—108 ft·lbf)

▼ Fuses

Refer to Fuses on page 6-51.

▼ Brakes

If you require information regarding the wear limit specification for the brake disc plates and the measurement method, please contact an expert repairer, we recommend an Authorised Mazda Repairer. The information is made freely available.

MEMO

10

Index



Index

A

Accessory Socket.....	5-36
Active Driving Display.....	4-42
Adaptive LED Headlights (ALH)....	4-109
Add-On Non-Genuine Parts and Accessories.....	8-2
Adjustable Speed Limiter (ASL)....	4-179
Activation/deactivation.....	4-182
Adjustable Speed Limiter (ASL) display.....	4-182
Adjustable Speed Limiter (ASL) set indication (green).....	4-181
Adjustable Speed Limiter (ASL) standby indication (white).....	4-181
Setting the system.....	4-183
Temporarily cancelling the system.....	4-184
Advanced Key	
Advanced keyless entry system...3-10	
Operational range.....	3-11
Advanced Keyless Entry System.....	3-10
Air Bag/Seat Belt Pretensioner System Warning Beep.....	7-74
Air-Conditioning System	
Fully automatic type.....	5-9
Manual type.....	5-5
Operating tips.....	5-2
Vent operation.....	5-3
Antilock Brake System (ABS).....	4-88
Ashtray.....	5-42
Assist Grips.....	5-38
AUTOHOLD.....	4-82
AUTOHOLD Warning Beep.....	7-77
Automatic Transmission	
Active Adaptive Shift (AAS).....	4-51
Automatic transmission controls.....	4-48
Direct mode.....	4-58
Driving tips.....	4-59
Manual shift mode.....	4-51

Shift-lock system.....	4-49
Transmission ranges.....	4-50

B

Battery.....	6-39
Inspecting electrolyte level.....	6-40
Maintenance.....	6-40
Recharging.....	6-40
Replacement.....	6-41
Specifications.....	9-5
Battery Runs Out.....	7-44
Jump-starting.....	7-44
Blind Spot Monitoring (BSM).....	4-115
Cancelling operation of Blind Spot Monitoring (BSM).....	4-120
Blind Spot Monitoring (BSM) Warning Beep.....	7-78
Body Lubrication.....	6-33
Bonnet Release.....	6-17
Boot Lid.....	3-21
When liftgate/boot lid cannot be opened.....	7-81
Bottle Holder.....	5-38
Brakes	
Brake assist.....	4-80
Brake override system.....	4-80
Electric Parking Brake (EPB).....	4-77
Foot brake.....	4-76
Pad wear indicator.....	4-80
Parking brake.....	4-77
Warning light.....	4-80
Brake Override System.....	4-80
Brake Override Warning Beep.....	7-76
Brake System Warning Beep.....	7-76

C

Capacities.....	9-7
Carbon Monoxide.....	3-30
Cell Phones.....	8-4
Centre Console.....	5-40

Child Restraint	
Categories of child-restraint systems	2-33
Child-restraint precautions	2-29
Child-restraint system installation position	2-33
Child-restraint system suitability for various seat positions table	2-38
Installing child-restraint systems	2-43
Collection and Processing of Data in the Vehicle	8-5
Collision warning	7-80
Coming Home Light	4-63
Cruise Control	4-247
Cruise control switch	4-247
Cruise standby indication (white)/cruise set indication (green)	4-247
Cruising & Traffic Support (CTS)	4-160
Close proximity warning	4-165
Display indication	4-164
Setting the system	4-167
Shift-up/shift-down request display	4-174
Stop hold control	4-174
Cup Holder	5-37
Cylinder Deactivation	4-22
D	
Defogger	4-72
Mirror	4-73
Rear window	4-72
Deposit Cleaner	3-28
Diesel Particulate Filter	4-256
Dimensions	9-9
Direction Indicators	4-66
Display	4-23
Distance & Speed Alert (DSA)	4-128
Indication on display	4-129

Door Locks	3-12
Door-ajar Warning Beep	7-80
Driver Attention Alert (DAA)	4-129
Driver Monitoring Camera	4-245
Driver Monitoring (DM)	4-131
Drive Selection	4-98
Driving In Flooded Area	3-57
Driving Tips	
Automatic transmission	4-59
Driving in flooded area	3-57
Floor mat	3-53
Hazardous driving	3-52
Rocking the vehicle	3-54
Running-in	3-51
Saving fuel and protection of the environment	3-51
Turbocharged vehicles (SKYACTIV-D 1.8)	3-57
Winter driving	3-54
Dynamic Stability Control (DSC)	4-90
DSC OFF indicator light	4-91
DSC OFF switch	4-91
TCS/DSC indicator light	4-91
E	
Electric Parking Brake (EPB)	4-77
Electric Parking Brake (EPB) Warning Beep	7-77
Electronic steering lock warning beep	7-76
Emergency call system	7-2
Emergency Starting	
Push-starting	7-47
Running out of fuel (SKYACTIV-D 1.8)	7-48
Starting a flooded engine (SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-X 2.0, and SKYACTIV-G 2.5)	7-47
Emergency Stop Signal System	4-86

Index

Emergency Towing	
Towing description.....	7-51
Towing hooks.....	7-53
Emission Control System (SKYACTIV-D 1.8).....	3-30
Emission Control System (SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5, SKYACTIV-X 2.0).....	3-29
Engine	
Bonnet release.....	6-17
Coolant.....	6-30
Engine compartment overview....	6-19
Exhaust gas.....	3-30
Oil.....	6-24
Starting.....	4-5
Essential Information.....	6-2
Excessive Speed Warning.....	7-79
Exhaust Gas.....	3-30
Exterior Care.....	6-57
Aluminium wheel maintenance...	6-62
Bright-metal maintenance.....	6-62
Cavity protection.....	6-61
Maintaining the finish.....	6-58
Paint damage touch-up.....	6-61
Plastic part maintenance.....	6-62
Undercoating.....	6-62
F	
Flasher	
Hazard warning.....	4-74
Headlights.....	4-60
Flat Tyre.....	7-24
Changing a flat tyre.....	7-37
Mounting the spare tyre.....	7-41
Removing a flat tyre.....	7-38
Floor Mat.....	3-53
Fluids	
Brake/Clutch.....	6-31
Classification.....	9-6
Washer.....	6-32
Fog Lights	
Rear.....	4-65
Foot Brake.....	4-76
Forward Sensing Camera (FSC)....	4-234
Front Camera/Side Cameras/Rear Camera.....	4-244
Front Cross Traffic Alert (FCTA)...	4-133
Front Cross Traffic Alert (FCTA) Warning Beep.....	7-78
Front Radar Sensor.....	4-238
Front Side Radar Sensor.....	4-241
Fuel	
Filler flap and cap.....	3-31
Requirements (SKYACTIV-D 1.8).....	3-28
Requirements (SKYACTIV-G 1.5, SKYACTIV-G 2.0, SKYACTIV-G 2.5, SKYACTIV-X 2.0).....	3-26
Tank capacity.....	9-7
Fuses.....	6-51
Panel description.....	6-53
Replacement.....	6-51
G	
Gauges.....	4-23
Glove Compartment.....	5-40
H	
Hazardous Driving.....	3-52
Hazard Warning Flasher.....	4-74
Headlights	
Coming home light.....	4-63
Flashing.....	4-63
High-low beam.....	4-63
Leaving home light.....	4-64
Levelling.....	4-64
Running lights.....	4-64
Washer.....	4-72
Headlight Washer.....	4-72
Head Restraint.....	2-17

High Beam Control System (HBC).....	4-107
High Beam Control System (HBC) indicator light (green).....	4-108
Hill Launch Assist (HLA).....	4-87
Horn.....	4-74
I	
If a Warning Light Turns On or Flashes.....	7-56
If the Active Driving Display Does Not Operate.....	7-83
Ignition Not Off Reminder Warning Beep.....	7-77
Ignition Not Switched Off (STOP) Warning Beep.....	7-75
Ignition Switch.....	4-4
Illuminated Entry System.....	5-35
Immobilizer System.....	3-45
Inspecting Brake/Clutch Fluid Level.....	6-31
Inspecting Coolant Level.....	6-30
Inspecting Engine Oil Level.....	6-28
Inspecting Washer Fluid Level.....	6-32
Instrument Cluster.....	4-23
Average fuel economy.....	4-31
Current fuel economy.....	4-32
Deceleration regeneration charge display.....	4-32
Distance-to-empty.....	4-31
Engine coolant temperature gauge.....	4-28
Fuel gauge.....	4-28
Indication/indicator lights.....	4-37
Instrument panel illumination.....	4-29
i-ACTIVSENSE display.....	4-33
Message Display.....	4-33
Message indicated on multi-information display.....	7-71
Multi-information display.....	4-25

Odometer.....	4-27
Outside temperature display.....	4-30
Speedometer.....	4-23
Tachometer.....	4-24
Trip meter.....	4-27
Vehicle speed alarm.....	4-32
Warning indication/warning lights.....	4-35
Intelligent Speed Assistance (ISA)	
Activation/deactivation.....	4-188
Intelligent Speed Assistance (ISA) display.....	4-188
Intelligent Speed Assistance (ISA) set indication (green).....	4-187
Intelligent Speed Assistance (ISA) standby indication (white).....	4-187
Setting the system.....	4-189
Temporarily cancelling the system.....	4-190
Interior Care.....	6-63
Active driving display maintenance.....	6-65
Cleaning the window interiors.....	6-65
Instrument panel top (Soft pad) maintenance.....	6-65
Leather upholstery maintenance.....	6-64
Panel maintenance.....	6-65
Plastic part maintenance.....	6-65
Seat belt maintenance.....	6-63
Upholstery maintenance.....	6-64
Vinyl upholstery maintenance.....	6-64
Interior Lights.....	5-33
Luggage compartment light.....	5-33
Map lights.....	5-33
Overhead lights.....	5-33
i-ACTIVSENSE.....	4-102
Active safety technology.....	4-102
Adaptive LED Headlights (ALH).....	4-109

Index

Adjustable Speed Limiter (ASL).....	4-179
Blind Spot Monitoring (BSM)....	4-115
Camera and sensors.....	4-103
Cruising & Traffic Support (CTS).....	4-160
Distance & Speed Alert (DSA).....	4-128
Driver Attention Alert (DAA)....	4-129
Driver monitoring camera.....	4-245
Driver Monitoring (DM).....	4-131
Forward Sensing Camera (FSC).....	4-234
Front camera/side cameras/rear camera.....	4-244
Front Cross Traffic Alert (FCTA).....	4-133
Front radar sensor.....	4-238
Front side radar sensor.....	4-241
High Beam Control System (HBC).....	4-107
Intelligent Speed Assistance (ISA).....	4-185
i-ACTIVSENSE status symbol (warning/risk avoidance support system).....	4-104
i-ACTIVSENSE switch.....	4-105
Lane Departure Warning System (LDWS).....	4-112
Lane-keep Assist System (LAS).....	4-176
Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function).....	4-149
Mazda Radar Cruise Control (MRCC).....	4-140
Pre-crash safety technology.....	4-103
Rear Cross Traffic Alert (RCTA).....	4-136
Rear side radar sensor.....	4-242
Smart Brake Support (SBS).....	4-191

Smart Brake Support [Rear Crossing] (SBS-RC).....	4-197
Smart Brake Support [Rear] (SBS- R).....	4-193
Traffic Sign Recognition System (TSR).....	4-121
Ultrasonic sensor.....	4-244
360°view monitor.....	4-202
i-ACTIV AWD Operation.....	4-100
i-stop.....	4-12
Indicator light (Green).....	4-20
i-stop OFF switch.....	4-19
Vehicle roll prevention function.....	4-19
Warning light (Amber).....	4-20
i-stop warning beep.....	7-77

J

Jack.....	7-26
Jump-Starting.....	7-44

K

Keyless Entry System.....	3-4
Keys.....	3-2
Key suspend function.....	3-9
Transmitter.....	3-5
Key Left-in-luggage Compartment/Boot Warning Beep (With the advanced keyless function).....	7-76
Key Left-in-vehicle Warning Beep (With the advanced keyless function).....	7-76
Key Removed from Vehicle Warning Beep.....	7-75
Key Suspend Function.....	3-9

L

Label Information	
Chassis number.....	9-2
Conformity plate.....	9-3
Engine number.....	9-3

Model plate.....	9-2
Tyre pressure label.....	9-3
Vehicle emission control information label.....	9-2
Vehicle identification number.....	9-2
Lane Departure Warning sound.....	7-78
Lane Departure Warning System (LDWS).....	4-112
Lane-change Signals.....	4-67
Lane-keep Assist System (LAS)....	4-176
Leaving Home Light.....	4-64
Liftgate.....	3-21
Luggage compartment.....	3-24
When liftgate/boot lid cannot be opened.....	7-81
Lights-on Reminder.....	7-74
Light Bulbs	
Replacement.....	6-47
Specifications.....	9-10
Low Fuel Warning Beep.....	7-76
Lubricant Quality.....	9-6
Luggage Compartment.....	5-41
Cargo sub-compartment.....	5-41
Luggage Compartment Light.....	5-33

M

Maintenance

Information.....	6-2
Scheduled.....	6-3
Manual Transmission Shift Pattern... ..	4-45
Map Lights.....	5-33
Mazda ERA-GLONASS.....	7-12
Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function).....	4-149
Close proximity warning.....	4-153
Display indication.....	4-152
Setting the system.....	4-154
Stop hold control.....	4-159

Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System Warnings.....	7-79
Mazda Radar Cruise Control (MRCC).....	4-140
Close proximity warning.....	4-143
Display indication.....	4-142
Setting the system.....	4-144
Shift-up/shift-down request display.....	4-149
Mazda Radar Cruise Control (MRCC) System Warnings.....	7-79
Message Indicated on Multi-information Display.....	7-71
Meters.....	4-23
Mirrors	
Outside mirrors.....	3-34
Rearview mirror.....	3-37
Mirror Defogger.....	4-73
Multi-information Display.....	4-25
MZD Connect.....	5-14
Appendix.....	5-26
MZD Connect Basic Operations.....	5-17
M Hybrid.....	4-93

O

Outside Mirrors.....	3-34
Outside temperature warning beep....	7-78
Overhead Console.....	5-40
Overhead Lights.....	5-33
Overheating.....	7-49
Owner Maintenance	
Closing the bonnet.....	6-18
Engine compartment overview....	6-19
Key battery replacement.....	6-41
Opening the bonnet.....	6-17
Owner maintenance precautions.....	6-16

Index

P

- Parking Brake..... 4-77
Parking Sensor System..... 4-273
 Park assist sensor system
 operation..... 4-277
 Sensor detection range..... 4-275
Petrol Particulate Filter..... 4-255
Power Steering..... 4-101
Power Windows..... 3-39

R

- Rearview Mirror..... 3-37
Rear Coat Hooks..... 5-39
Rear Cross Traffic Alert (RCTA).... 4-136
Rear Cross Traffic Alert (RCTA)
 Warning Beep..... 7-78
Rear Door Child Safety Locks..... 3-21
Rear Fog Light..... 4-65
Rear Side Radar Sensor..... 4-242
Rear View Monitor..... 4-257
 Displayable range on the
 screen..... 4-260
 Rear view monitor operation..... 4-263
 Rear view parking camera
 location..... 4-258
 Switching to the rear view monitor
 display..... 4-258
 Variance between actual road
 conditions and displayed
 image..... 4-270
 Viewing the display..... 4-261

- Rear window
 Rear Window Defogger..... 4-72
Rear Window Defogger..... 4-72
Rear Window Washer..... 4-71
Rear Window Wiper..... 4-71
Recommended Oil..... 6-25
Registering Your Vehicle in A Foreign
Country..... 8-2

Replacement

- Fuse..... 6-51
Key battery..... 6-41
Light bulbs..... 6-47
Tyres..... 6-45
Wheel..... 6-46
Wiper..... 6-33

- Roadside Emergency Triangle Retaining
Strap..... 7-23
Rocking the Vehicle..... 3-54
Running-In..... 3-51

S

- Saving Fuel and Protection of the
Environment..... 3-51
Scheduled Maintenance..... 6-3
Seats

- Driver's seat..... 2-5
 Driving position memory..... 2-11
 Front passenger's seat..... 2-13
 Front seat..... 2-5
 Head restraint..... 2-17
 Rear seat..... 2-14
 Seat warmer..... 2-19

- Seat Belt System
 Emergency locking..... 2-24
 Pregnant women..... 2-24
 Seat belt precautions..... 2-22
Seat Belt Warning Beep..... 7-74
Security System

- Immobilizer system..... 3-45
 Theft-deterrent system..... 3-47

- Shift Position Warning Beep..... 7-77
Smart Brake Support (SBS)..... 4-191
 Collision warning..... 4-192
 Stopping the Smart Brake Support
 (SBS) system operation..... 4-193
Smart Brake Support [Rear Crossing]
(SBS-RC)..... 4-197
 Collision warning..... 4-201

Stopping the Smart Brake Support [Rear Crossing] (SBS-RC) system operation.....	4-201	Luggage compartment.....	5-41
Smart Brake Support [Rear] (SBS-R).....	4-193	Overhead console.....	5-40
Collision warning.....	4-196	Storage pocket.....	5-40
Stopping the Smart Brake Support [Rear] (SBS-R) system operation.....	4-197	Storage Pocket.....	5-40
Spare Tyre.....	7-28	Sunroof.....	3-42
Spare Tyre and Tool Storage.....	7-24	Sunshade.....	3-44
Specifications		Sunvisors.....	5-32
Brakes.....	9-13		
Capacities.....	9-7		
Cleaner.....	9-7		
Dimensions.....	9-9	Theft-Deterrent System.....	3-47
Electrical system.....	9-5	Three-flash Turn Signal.....	4-67
Engine.....	9-4	Touch Sensor Inoperable Warning Beep (With the advanced keyless function).....	7-75
Light bulbs.....	9-10	Towing	
Lubricant quality.....	9-6	Hook.....	7-53
Tyres.....	9-11	Towing Caravans and Trailers (Europe/Russia/Turkey/Israel/South Africa).....	3-58
Speed Limiter Warning Beep.....	7-80	Towing Description.....	7-51
SRS Air Bags		Traction Control System (TCS).....	4-89
Front passenger air bag deactivation switch.....	2-52	TCS/DSC indicator light.....	4-89
How the SRS air bags work.....	2-56	Traffic Sign Recognition System (TSR).....	4-121
Limitations to SRS air bag.....	2-61	Transmitter.....	3-5
Monitoring.....	2-63	Trouble	
SRS air bag deployment criteria.....	2-59	Battery runs out.....	7-44
Supplementary restraint system components.....	2-55	Emergency starting.....	7-47
Supplementary restraint system (SRS) precautions.....	2-47	Flat tyre.....	7-24
Starting the Engine.....	4-5	Overheating.....	7-49
Steering Wheel		Parking in an emergency.....	7-23
Heated steering wheel.....	2-20	When liftgate/boot lid cannot be opened.....	7-81
Horn.....	4-74	Turn and Lane-Change Signals.....	4-66
Storage Compartments.....	5-39	Tyres.....	6-43
Centre console.....	5-40	Flat tyre.....	7-24
Glove compartment.....	5-40	Replacing a tyre.....	6-45
		Replacing a wheel.....	6-46
		Snow tyres.....	3-55
		Specifications.....	9-11

Index

- Temporary spare tyre.....6-46
- Tyre chains.....3-55
- Tyre inflation pressure.....6-44
- Tyre rotation.....6-45

Tyre Pressure Monitoring System... 4-251

U

Ultrasonic Sensor.....4-244

V

Vanity Mirrors.....5-32

Vehicle Information Labels

- Chassis number.....9-2
- Conformity plate.....9-3
- Engine number.....9-3
- Model plate.....9-2
- Tyre pressure label.....9-3
- Vehicle emission control information label.....9-2
- Vehicle identification number.....9-2

Vehicle Problem Warning Beep..... 7-76

Vehicle Speed Alarm..... 7-78

W

Warning Sound is Activated

- Air bag/seat belt pretensioner system warning beep..... 7-74
- AUTOHOLD warning beep..... 7-77
- Blind Spot Monitoring (BSM) warning beep..... 7-78
- Brake override warning beep..... 7-76
- Brake system warning beep..... 7-76
- Collision warning..... 7-80
- Door-ajar warning beep..... 7-80
- Electric Parking Brake (EPB) warning beep..... 7-77
- Electronic steering lock warning beep..... 7-76
- Excessive speed warning..... 7-79

- Front Cross Traffic Alert (FCTA) Warning Beep..... 7-78
- Ignition Not Off Reminder Warning Beep..... 7-77
- Ignition not switched off (STOP) warning beep..... 7-75
- i-stop warning beep..... 7-77
- Key left-in-luggage compartment/ boot warning beep (With the advanced keyless function)..... 7-76
- Key left-in-vehicle warning beep (With the advanced keyless function)..... 7-76
- Key removed from vehicle warning beep..... 7-75
- Lane departure warning sound.... 7-78
- Lights-on reminder..... 7-74
- Low fuel warning beep..... 7-76
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) system warnings..... 7-79
- Mazda Radar Cruise Control (MRCC) system warnings..... 7-79
- Outside temperature warning beep..... 7-78
- Rear Cross Traffic Alert (RCTA) Warning Beep..... 7-78
- Seat belt warning beep..... 7-74
- Shift position warning beep..... 7-77
- Speed limiter warning beep..... 7-80
- Touch sensor inoperable warning beep (With the advanced keyless function)..... 7-75
- Vehicle problem warning beep.... 7-76
- Vehicle speed alarm..... 7-78
- 120 km/h warning beep..... 7-78

Warranty

- Registering Your Vehicle in A Foreign Country..... 8-2

Windows

Power windows.....	3-39
Windscreen Washer.....	4-70
Windscreen Wipers.....	4-68
Windscreen Wipers Operate at High Speed.....	7-84
Windscreen Wiper De-icer.....	4-73
Winter Driving.....	3-54
Wiper Replacing Rear Window Wiper Blade.....	6-37
Replacing windscreen wiper blades.....	6-34
120 km/h warning beep.....	7-78
360°View Monitor.....	4-202
How to use the system.....	4-210
Margin of error between road surface on screen and actual road surface.....	4-227
Side view.....	4-218
Top view/front view.....	4-214
Top view/front wide view.....	4-216
Top view/rear view.....	4-221
Top view/rear wide view.....	4-226
Types of images displayed on the screen.....	4-206

0-9

