
In-Vehicle Displays

▼ In-Vehicle Displays

Configures settings and content for all in-vehicle displays.

Active Driving Display

Adjusts the content and visibility of the display.

Function	Available setting changes
Height Adjusts the height of the Active Driving Display.	Height (31 levels)
Brightness Adjusts the brightness of the Active Driving Display.	Brightness (11 levels)
Tilt Adjustment Adjusts the rotation of the Active Driving Display.	Tilt (11 levels)
Active Driving Display Content Enables the display and selected content to be shown.	Enable, Disable
Navigation Guidance Displays navigation route guidance information	Enable, Disable
Street Name Displays street names.	Enable, Disable
Lane Guidance Displays navigation lane guidance information.	Enable, Disable
Traffic Sign Recognition Displays stop signs, speed limit signs, and do not enter signs.	Enable, Disable
Speed Limit Displays a speed limit.	Enable, Disable
Restore Factory Settings Restores the Active Driving Display to the original factory settings.	—

Center Display

Adjusts the display brightness, contrast, and more.

Function	Available setting changes
Display Off Turns off the display while still providing audio content.	—
Day/Night Mode Selects the center display brightness mode.	Automatic, Day, Night

Function	Available setting changes
Brightness Adjusts the brightness of the center display.	Brightness (11 levels)
Contrast Adjusts the contrast of the center display.	Contrast (11 levels)
Show Drive Results at Ignition Off Provides energy efficiency results at the end of the drive.	Enable, Disable
Home Screen Clock Selects the clock style displayed on the Home screen.	Analog, Digital
Ambient Display Enables a simplified interface accessible from the Home screen.	Blank, Clock
Restore Factory Settings Restores the display to the original factory settings.	—

Instrument Cluster Display

Selects the content shown on the instrument cluster.

Function	Available setting changes
Fuel Efficiency & Range Display Configures how the fuel efficiency and driving range is shown.	Type 1, Type 2, Off
Restore Factory Settings Restores instrument cluster display settings to factory defaults.	—