



3.1.4 Selecting the destination from your Favorites

1. Press the commander knob with the map screen open to display the menu, and select "Add Destination".
2. Select "More Favorites".
When "More Favorites" is selected, the screen transfers to the Favorites screen. Select your registered favorite.

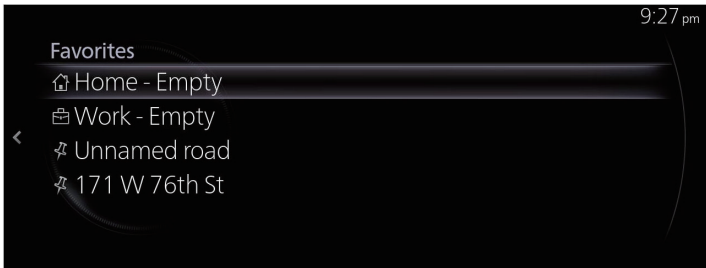

3. Navigation starts if "Start Guidance" is selected, or after 10 seconds of no user interaction.
Additionally, the route can be revised by selecting other options.

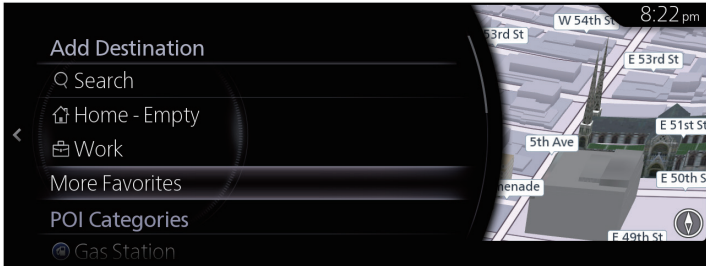