

---

## **Album art displayed during USB audio playback**

When connecting a USB audio device to this unit and playing audio, the unit searches the database stored in the vehicle for the album art. If there is a match in the vehicle's database compilation to the music being played, the album art is displayed. The database information stored in this device uses database information in the Gracenote® music recognitions service.

### **Album art display priority**

You can change the album art display priority to either the album art saved in the USB audio device or the Gracenote® database.

### **Updating the database**

The Gracenote® database can be updated using a USB Audio device. Select “Gracenote Database Update” from the System Settings screen.

## **Music information displayed during CD playback**

When connecting a CD/DVD player to this unit and the audio is played, the unit searches the database stored in the vehicle for the album name, artist name, genre, title, and album art, and if there is a match in the vehicle's database compilation to the music being played, each type of music information is automatically added (for MP3/WMA/AAC CDs, only album art). The database information stored in this device uses database information in the Gracenote® music recognitions service.

### **Updating the database**

The Gracenote® database can be updated using a USB Audio device. Select “Gracenote Database Update” from the System Settings screen.