

Safety Settings

▼ Safety Settings

Configures safety and driver assistance features.

Driver Assistance System

Configures desired level of support and notification for driver assist functions.

Function	Available setting changes
Mazda Radar Cruise Control Enables automatic control of following distance when using cruise control.	Enable, Disable
Audible Cruise Confirmation Enables audible tones when interacting with cruise control.	Enable, Disable
Speed Limit Sign Alert Selects the desired notification type for posted speed limit sign alerts.	Visual, Visual + Audible, Off
Speed Limit Sign Threshold Sets threshold for alert notifications when the posted speed limit is exceeded.	+ 0 km/h (+ 0 mph), + 5 km/h (+ 3 mph), + 10 km/h (+ 5 mph)
Speed Limit Alert Selects the desired notification type for speed limit alerts.	Visual, Visual + Audible, Off
Speed Limit Alert Threshold Selects the desired speed threshold for speed limit alert notifications.	+ 0 km/h (+ 0 mph), + 5 km/h (+ 3 mph), + 10 km/h (+ 5 mph)
Driver Attention Alert Enables driver attention monitoring and provides alerts when fatigue is detected.	Enable, Disable
Driver Monitoring Enables camera-based driver monitoring to detect fatigue and provide alerts.	Enable, Disable
Restore Factory Settings Restores the Driver Assistance System settings to the factory defaults.	—

Safety Alerts

Configures alert notifications used for i-ACTIVSENSE safety features.

Function	Available setting changes
Front Cross Traffic Alert Enables alerts when a moving object may cross into the vehicle's forward path.	Enable, Disable
Rear Cross Traffic Alert Enables alerts when a moving object may cross into the vehicle's rearward path.	Enable, Disable
Lane Departure Warning System Enables Lane Departure Warning System to alert driver of lane departure risks.	Enable, Disable
Lane Departure Warning System Alert Type Sets the desired notification type for Lane Departure Warning System alerts.	Audible, Steering Wheel Vibration, Audible+Steering Wheel Vibration
Blind Spot Monitoring Selects the desired Blind Spot Monitoring alert notification type.	Visual, Visual + Audible, Off
Blind Spot Monitoring Alert Timing Selects the desired alert timing for Blind Spot Monitoring.	Early, Normal, Late
Restore Factory Settings Restores the safety alert settings to the factory defaults.	—

Active Safety

Configures i-ACTIVSENSE active safety features.

Function	Available setting changes
Distance & Speed Alert Enables the vehicle to provide alerts for following distance.	Enable, Disable
Lane-keep Assist System Enables lane-keep steering assistance to help the vehicle stay within the lane.	Enable, Disable
Restore Factory Settings Restores the Active Safety settings to the factory defaults.	—

Collision Avoidance

Configures i-ACTIVSENSE collision avoidance features.

Function	Available setting changes
Smart Brake Support Enables Smart Brake Support to alert and intervene when collision is imminent.	Enable, Disable
Smart Brake Support Alert Timing Selects the desired timing for the Collision Avoidance Alert notification.	Early, Normal, Late
Smart Brake Support [Rear]*¹ Enables Smart Brake Support [Rear] to alert & intervene when collision is imminent.	Enable, Disable
Restore Factory Settings Restores the Collision Avoidance settings to the factory defaults.	—

*1 Including Smart Brake Support [Rear Crossing].

View Monitor

Configures View Monitor camera view angles and display settings.

Function	Available setting changes
Display Priority View at Start Up Enables View Monitor to be displayed after vehicle is started.	Enable, Disable
Priority View Selects the default view to be displayed after vehicle is started.	Side, Front, Front Wide, Last
Automatic Front View Display Enables front view to be automatically displayed after vehicle is taken out of reverse.	Enable, Disable
Dynamic Guidelines Enables dynamic path guidelines to be shown on the rear view display.	Enable, Disable
Restore Factory Settings Restores the View Monitor settings to the factory defaults.	—

Parking Sensor

Configures Parking Sensor settings.

Function	Available setting changes
Parking Sensor Display Guidance Enables Parking Sensor display guidance to be shown on the View Monitor display.	Enable, Disable
Rear Parking Sensor Alert Volume Sets desired volume level for rear parking sensor alerts.	Low, Moderate, High, Off
Front Parking Sensor Alert Volume Sets desired volume level for front parking sensor alerts.	Low, Moderate, High, Off
Restore Factory Settings Restores Parking Sensor settings to the factory defaults.	—

Speed Alert

Configures Speed Alert notifications.

Function	Available setting changes
Speed Alert Enables alerts for when the desired speed is exceeded.	Enable, Disable
Speed Alert Threshold Selects a desired speed that when exceeded will provide an alert notification.	30 km/h — 250 km/h
	20mph — 150mph
Speed Alert Notification Type Selects the type of alert provided when speed threshold is exceeded.	Visual, Audible, Visual + Audible
Restore Factory Settings Restores the speed alert settings to the factory defaults.	—

Pedal Misuse Alert

Alerts the driver when the accelerator and brake pedals are depressed simultaneously.

Available setting changes
Enable, Disable