
SiriusXM®*


▼ SiriusXM®

Displaying the Radio ID


Select channel 0 from the Channel List to display the radio ID.

How to Use SiriusXM®


1. Select “Entertainment” on the home screen.

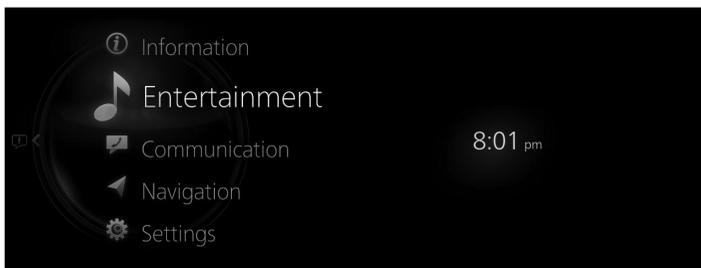

2. Select “SiriusXM” on the Source List screen.

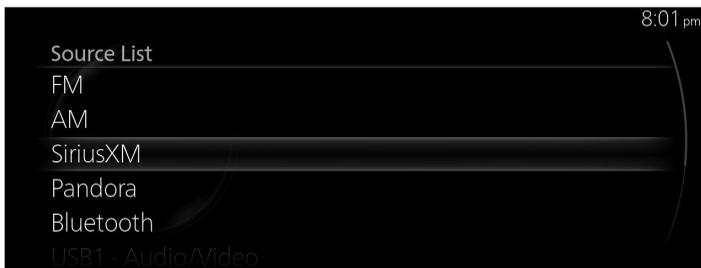

3. The playback screen is displayed.

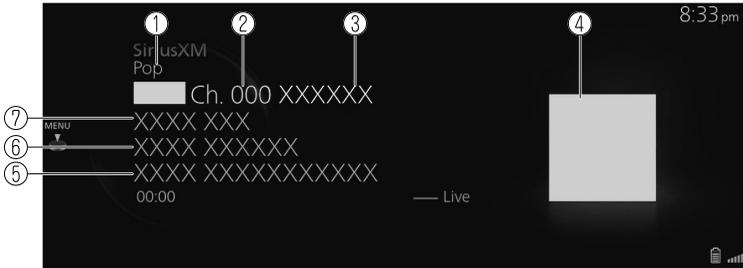


1. Category name
2. Radio station number
3. Radio station name
4. Album art
5. Album name
6. Artist name
7. Song name

Rotate the  to display the Favorites list for SiriusXM®

When the  is displayed, you can display the menu by pressing the .

SiriusXM® menu

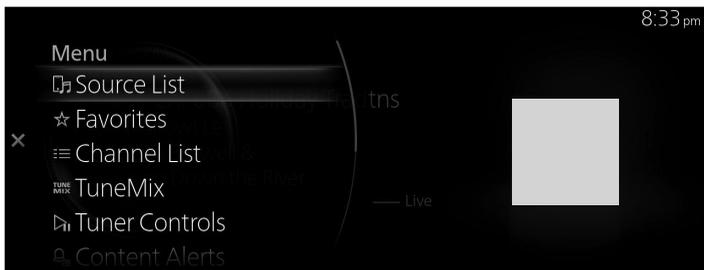


Menu	Explanation
Source List	Displays the Source List screen. You can switch the audio source.
Favorites	Displays the Favorites list for SiriusXM®. The radio station list registered to your Favorites is displayed where you can select the radio station you want to listen to. If you have no registered Favorites, an empty list is displayed.

Menu	Explanation
Channel List	The radio station list is displayed where you can select the radio station you want to listen to. You can narrow down a radio station list to display by selected categories. SiriusXM Featured Displays the recommended radio station list distributed by SiriusXM®. When the list is updated,  is displayed.
TuneMix	Displays the currently created TuneMix list. Select TuneMix Channel to begin playback. In addition, a TuneMix Channel can be created or deleted. For details, refer to TuneMix™.
Tuner Controls	Displays the control screen (icon) on the playback screen. For the operation method for each icon, refer to How to Use the Control Screen (icon).
Content Alerts	The record of content alerts received in the past is displayed in a list. You can select the contents you want to listen to from this list.
Save Artist/Song	You can register the artist or song currently playing. After registering, you can receive alerts when the artist or song is broadcast by SiriusXM®.
SiriusXM Settings	Sets SiriusXM®. For the items you can set, refer to SiriusXM Settings.
Audio Settings	Adjusts the sound quality.

TuneMix™

TuneMix plays songs in a unique mix from user-selected SiriusXM music channels.

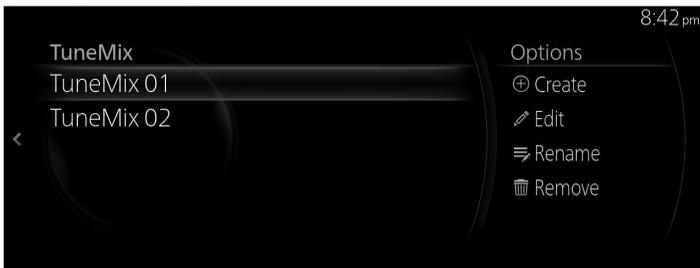

Plays the TuneMix™ Channel selected by pressing the .

You can edit the TuneMix™ Channel selected by sliding the  to the right.

Option	Explanation
Create	Creates a TuneMix™ Channel.
Edit	Changes the radio station registered to the TuneMix™ Channel.
Rename	Changes the TuneMix™ Channel name.

Option	Explanation
Remove	Deletes the registered TuneMix™ Channel.

Creating TuneMix™ Channel

You can select your desired SiriusXM® music channels and create a TuneMix™ Channel.

1. Select “Create”.



2. Select several radio stations you want to register to the TuneMix™ Channel from the SiriusXM® music channel list. A check is placed next to the selected station.



3. Select “Create”.



4. Input the title for the TuneMix™ Channel you are creating.

5. Select ✓.



How to Use the Control Screen (icon)

The displayed icon differs depending on the playback status.



Icon	Explanation
	Cues the next music within the same radio station. If there is no more content, the operation no longer functions. (Other than during scan-play) Press and hold to fast forward.
	Cues the previous music in the same radio station. If there is no previous content, the operation no longer functions. (Other than during scan-play) Press and hold to fast reverse.
	Plays a radio. When selected again, playback is temporarily stopped.

Icon	Explanation
	Plays each channel in the current channel list for 10 seconds. Select again to continue receiving the channel. This icon cannot be selected during playback of TuneMix™, Traffic & Weather Now, or SportsFlash.
	If buffered content is being played, the control switches to real-time playback. It cannot be selected during real time playback and TuneMix™ playback.
	The TuneMix™ broadcast ends when the icon is pressed. Continues playing the selected radio station as it is.
	Plays the Traffic & Weather Now. When it is pressed again, playback is stopped, and playback begins from the previously selected radio station. When there is no playable “Traffic & Weather Now”, the selection cannot be selected.
	(During playback of SportsFlash) Stops playback of SportsFlash and begins playback from the previously selected radio station. When “SportsFlash” is not being played, it cannot be selected.

SiriusXM Settings

Menu	Explanation
Parental Controls	Sets the parental lock and changes the lock code.
Smart Favorites	Selects/changes radio stations registered to Smart Favorites. Up to 10 radio stations can be registered. Smart Favorites Broadcasts of registered stations are buffered. Also, when registering radio stations to Favorites, up to 10 stations are registered to Smart Favorites automatically.
TuneStart	Switches TuneStart on/off. TuneStart Stations registered to Smart Favorites are played from a break point such as the beginning of a song, not in real-time. The break point differs depending on the contents and buffering conditions.
Artist/Song Alerts	You can switch the Artist/Song Alerts on/off and delete registered artists and music. Artist/Song Alerts The function alerts you when an artist or song is played which is registered to “Save Artist/Song”.

Menu	Explanation
SportsFlash	<p>You can switch SportsFlash on/off and register and delete sports teams. Up to 50 teams can be registered.</p> <p>SportsFlash The function notifies you when registered sports team highlights are announced.</p>
Traffic & Weather Now	When you set a city, you can receive notifications regarding traffic and weather for that city.

Parental lock

To use the parental lock function, a lock code must first be set.

The parental lock can be enabled or disabled during the current drive cycle (from when the ignition is switched on to switched off). Parental lock is set when “Enable Channel Lock” is turned on. When it is turned off, the parental lock is canceled.

When a parental lock is set and a locked radio station is selected, the lock code input screen is displayed. If the correct lock code is input, the parental lock is temporarily canceled.

When canceling the parental lock or when changing the Lock code, Lock code input is required.

Lock code reset

If the registered code has been forgotten, reset the code to the default [0000] code.

1. Select “Parental Controls” from the SiriusXM Settings.
2. Select “Edit Lock Code”.
3. Input the default code [0000] on the screen with the current input lock code.
4. Input the new code that you want to set.
5. The confirmation screen is displayed and the lock code reset is completed.

Initialization

To initialize the SiriusXM® settings, you need to return all of the Mazda Connect settings to their default settings.