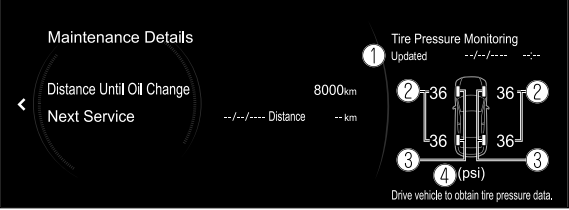

Vehicle Status Monitor

▼ Vehicle Status Monitor

1. Select “Information” on the Home screen to display the vehicle status monitor.
2. Select “Vehicle Status Monitor”.

You can customize settings in the setup display as follows:

Item	Explanation
Vehicle Warning Messages	If there is a problem with the vehicle, information about the problem is displayed.
Next Service	<p>The next maintenance period is displayed.</p> <p><u>Date</u></p> <p>The date manually set by the customer is displayed.</p> <p><u>Distance</u></p> <p>If “Next Service Date” is set to “Automatic”</p> <p>The “Distance Until Oil Change” content is displayed.</p> <p>If “Next Service Date” is set to “Manual”</p> <p>The traveled distance manually set by the customer is displayed. However, when any of the following conditions is met, the “Distance Until Oil Change” content is displayed.</p> <ul style="list-style-type: none">• You have not set the traveled distance.• “Distance Until Oil Change” is shorter than the traveled distance set by the customer.

Item		Explanation
Maintenance De- tails	Distance Until Oil Change	The traveled distance until engine oil needs to be replaced is displayed.
	Next Service	The next maintenance period manually set by the customer is displayed.
	Tire pressure monitor	<p>The current tire pressure can be checked.</p>  <ol style="list-style-type: none"> When tire pressures were last modified Air pressure of each tire <ul style="list-style-type: none"> When air pressure is low: Yellow color When air pressure is correct: Blue color When air pressure cannot be monitored: Black color Condition of each tire Tire pressure units
Vehicle Maintenance Settings	Next Service Date	<p>The method of setting the next maintenance can be selected from the following.</p> <ul style="list-style-type: none"> Automatic Manual
	Set Next Service Date	If “Next Service Date” is set to “Manual”, the next maintenance date can be set.
	Set Next Service Distance	If “Next Service Date” is set to “Manual”, the traveled distance until the next maintenance period can be set.
	Reset Oil Change Distance	<p>The “Distance Until Oil Change” content can be reset.</p> <p>After replacing the engine oil, perform the reset (engine oil data resetting) of the recorded value in this item.</p>