Thank you for choosing a Mazda. We at Mazda design and build vehicles with complete customer satisfaction in mind.

To help ensure enjoyable and trouble-free operation of your Mazda, read this manual carefully and follow its recommendations.

Regular servicing of your vehicle by an expert repairer helps maintain both its roadworthiness and its resale value. A world-wide network of Authorised Mazda Repairers can help you with their professional servicing expertise.

Their specially trained personnel are best qualified to service your Mazda vehicle properly and exactly. Also, they are supported by a wide range of highly specialized tools and equipment specially developed for servicing Mazda vehicles. When maintenance or service is necessary, consult an expert repairer (we recommend an Authorised Mazda Repairer).

We assure you that all of us at Mazda have an ongoing interest in your motoring pleasure and in your full satisfaction with your Mazda product.

#### Mazda Motor Corporation HIROSHIMA, JAPAN

#### Important Notes About This Manual

Keep this manual in the glove compartment as a handy reference for the safe and enjoyable use of your Mazda. Should you resell the vehicle, leave this manual with it for the next owner.

All specifications and descriptions are accurate at the time of printing. Because improvement is a constant goal at Mazda, we reserve the right to make changes in specifications at any time without notice and without obligation.

Please be aware that this manual applies to all models, equipment and options. As a result, you may find some explanations for equipment not installed on your vehicle.

©2021 Mazda Motor Corporation July 2021 (Print1) We want to help you get the most driving pleasure from your vehicle. Your owner's manual, when read from cover to cover, can do that in many ways.

Illustrations complement the words of the manual to best explain how to enjoy your Mazda. By reading your manual, you can find out about the features, important safety information, and driving under various road conditions.

The symbol below in this manual means "Do not do this" or "Do not let this happen".



References to left hand and right hand are made as if facing in the same direction the vehicle faces. Although this manual explains a left-hand-drive model, it also applies to right-hand-drive models.

**Index:** A good place to start is the Index, an alphabetical listing of all information in your manual.

You'll find several WARNINGs, CAUTIONs, and NOTEs in the manual.

# 

A WARNING indicates a situation in which serious injury or death could result if the warning is ignored.

# 

A CAUTION indicates a situation in which bodily injury or damage to your vehicle, or both, could result if the caution is ignored.

#### NOTE

A NOTE provides information and sometimes suggests how to make better use of your vehicle.

The following symbol, located on some parts of the vehicle, indicates that this manual contains information related to the part.

Please refer to the manual for a detailed explanation.



## **Table of Contents**

Pictorial Index	1
Interior, exterior views and part identification of your Mazda.	
<b>Essential Safety Equipment</b> Important information about safety equipment, including seats, seat belt system, child-restraint systems and SRS air bags.	2
<b>Before Driving</b> Use of various features, including keys, doors, mirrors and windows.	3
When Driving Information concerning safer driving and stopping.	4
Interior Features Use of various features for ride comfort, including air-conditioning and audio system.	5
Maintenance and Care How to keep your Mazda in top condition.	6
If Trouble Arises Helpful information on what to do if a problem arises with the vehicle.	7
Customer Information Important consumer information including warranties and add-on equipment.	8
Specifications Technical information about your Mazda.	9
Index	10

# **Pictorial Index**

Interior, exterior views and part identification of your Mazda.

Interior Overview (Left-Hand Drive		
Model)	1-2	
Interior Equipment (View A)	1-2	
Interior Equipment (View B)	1-3	
Interior Equipment (View C)	1-4	
Interior Equipment (View D)	1-5	
· · ·		


Interior Overview (Right-Hand Drive		
Model)1-6		
Interior Equipment (View A)1-6		

Interior Equipment (View B)......1-7 Interior Equipment (View C)......1-8 Interior Equipment (View D)......1-9

Exterior Overview......1-10


#### Pictorial Index Interior Overview (Left-Hand Drive Model)

# Interior Equipment (View A)

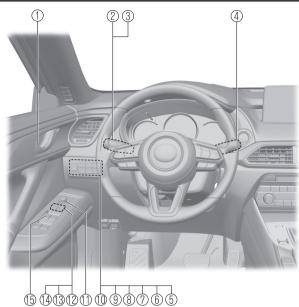


1	Door-lock knob	page 3-15
2	Turn and lane-change signal	page 4-88
3	Lighting control	page 4-80
4	Wiper and washer lever	page 4-89
(5)	TCS OFF switch	.page 4-110
6	Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS)	OFF
	switch	.page 4-176
7	Parking sensor switch	. page 4-265
8	360° View Monitor switch	.page 4-207
9	Off-Road Traction Assist switch	. page 4-114
(10)	Power liftgate switch	page 3-19
11	Outside mirror switch	page 3-32
(12)	Door-lock switch	page 3-15
(13)	Power window lock switch	page 3-37
(14)	Outside mirror folding switch	page 3-32
(15)	Power window switches	page 3-37

# Interior Equipment (View B)

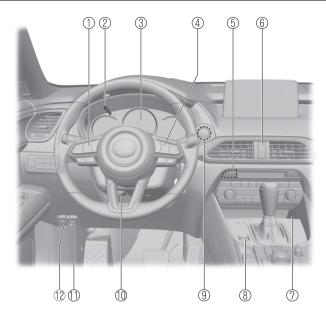

1) Audio control switches	page 5-20
2 Instrument panel illumination knob	page 4-24, 4-42, 4-58
③ Instrument cluster	page 4-18
④ Cruise control switches	page 4-163, 4-240
(5) Heated steering wheel switch	
6 Hazard warning flasher switch	page 4-95
⑦ Wireless Charger (Qi)	page 5-40
(8) Drive selection switch	page 4-115
9 Push button start	page 4-4
10 Lock release lever	page 2-5
1) Bonnet release handle	page 6-16
12 Remote fuel-filler flap release	

# Interior Equipment (View C)

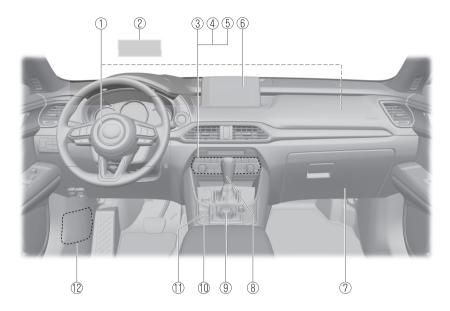


1) SRS air bags	page 2-60
2 Active driving display	page 4-67
③ Air-conditioning system	page 5-2
④ Rear window defogger switch	page 4-93
5 Seat warmer switches	page 2-30
6 Mazda Connect	page 5-14
⑦ Glove compartment	page 5-46
8 Selector lever	page 4-69
(9) Commander switch	page 5-19
10 AUTOHOLD switch	page 4-104
1 Electric parking brake (EPB) switch	
12 Fuse block (Left side)	page 6-49

# Interior Equipment (View D)

① Seat belts	page 2-34
② SRS air bag	
③ Rear door sunshade	page 5-50
④ Bottle holder	page 5-45
(5) Sunvisor	page 5-31
6 Vanity mirror	
⑦ Overhead lights	page 5-31
(8) Sunroof switch	page 3-39
9 Rearview mirror	page 3-34
10 Accessory socket	page 5-36
1 Cup holders	page 5-44
12 Front seat	page 2-5
(13) Centre console	page 5-46
(14) External input terminal	page 5-14
15 Seat warmer switches	
16 Second-row seat	page 2-14
1 USB power outlet	
18 Third-row seat	page 2-25


#### Pictorial Index Interior Overview (Right-Hand Drive Model)

# Interior Equipment (View A)

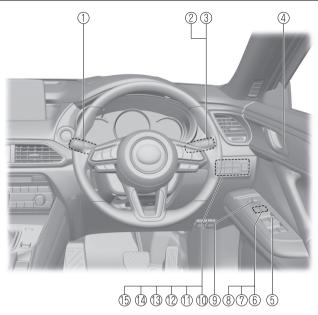


1	Wiper and washer lever	page 4-89
2	Lighting control	page 4-80
3	Turn and lane-change signal	page 4-88
4	Door-lock knob	page 3-15
(5)	Power window switches	page 3-37
6	Power window lock switch	page 3-37
7	Door-lock switch	page 3-15
8	Outside mirror folding switch	page 3-32
9	Outside mirror switch	page 3-32
(10)	TCS OFF switch	page 4-110
11	Lane-keep Assist System (LAS) & Lane Departure Warning System (LDW	S) OFF
	switch	page 4-176
(12)	Parking sensor switch	page 4-265
(13)	360° View Monitor switch	page 4-207
(14)	Off-Road Traction Assist switch	page 4-114
(15)	Power liftgate switch	page 3-19

# Interior Equipment (View B)

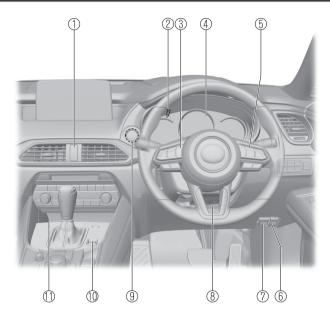


(1) Hazard warning flasher switch	page 4-95
2 Instrument panel illumination knob	page 4-24, 4-42, 4-58
③ Audio control switches	page 5-20
④ Instrument cluster	page 4-18
5 Cruise control switches	page 4-163, 4-240
6 Remote fuel-filler flap release	page 3-30
⑦ Bonnet release handle	page 6-16
8 Lock release lever	page 2-5
9 Push button start	page 4-4
10 Drive selection switch	page 4-115
1) Wireless Charger (Qi)	page 5-40

# Interior Equipment (View C)

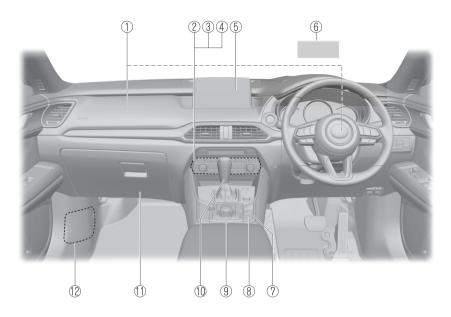


① SRS air bags	page 2-60
2 Air-conditioning system	page 5-2
③ Rear window defogger switch	page 4-93
④ Seat warmer switches	page 2-30
5 Mazda Connect	page 5-14
6 Active driving display	page 4-67
⑦ Electric parking brake (EPB) switch	page 4-98
⑧ AUTOHOLD switch	page 4-104
(9) Commander switch	
10 Selector lever	page 4-69
1) Glove compartment	page 5-46
<sup>1</sup> Fuse block (Left side)	page 6-49

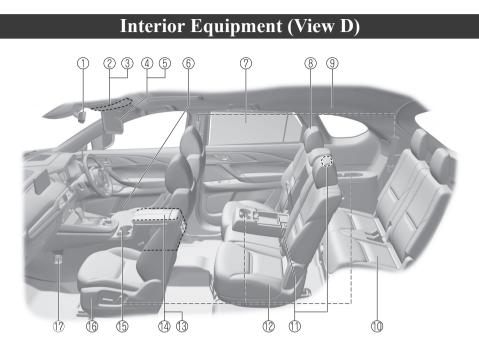

① Rearview mirror	page 3-34
2 Overhead lights	page 5-31
③ Sunroof switch	page 3-39
④ Sunvisor	page 5-31
(5) Vanity mirror	
6 Bottle holder	
⑦ Rear door sunshade	page 5-50
8 Seat belts	page 2-34
(9) SRS air bag	
10 Third-row seat	
1) USB power outlet	page 5-37
12 Second-row seat	page 2-14
3 Centre console	page 5-46
(4) External input terminal	
1 Cup holders	
16 Front seat	
17 Accessory sockets	

#### Pictorial Index Exterior Overview

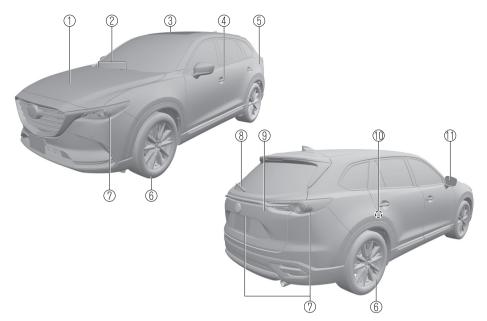

1	Bonnet	page 6-16
	Windscreen wiper blades	
3	Sunroof	page 3-39
4	Door and key	page 3-11
5	Fuel-filler flap	page 3-30
6	Wheels and Tyres	page 6-35
7	Exterior lights	page 6-39
8	Rear window wiper blade	page 6-28
9	Liftgate	page 3-18
(10)	Child safety lock	page 3-16
11	Outside mirror	page 3-32

# 2

# **Essential Safety Equipment**

Important information about safety equipment, including seats, seat belt system, child-restraint systems and SRS air bags.

Seats2-2Seat Precautions2-2Front Seat2-5Second-row Seat (6:4 SplitAdjustable-type Bench SeatType)2-14Second-row Seat (Captain SeatType)2-21Third-row Seat2-25Head Restraints2-27

#### Seat Warmer/Seat Ventilation/Heated

Steering Wheel	2-30
Seat Warmer*	2-30
Seat Ventilation*	
Heated Steering Wheel*	2-33

Seat Belt Systems.....2-34

Seat Belt Precautions2-34
Seat Belt2-37
Seat Belt Warning Systems2-38
Front Seat Belt Pretensioner and
Load Limiting Systems2-39

Ch	ild Restraint	2-41
	Child-Restraint Precautions	2-41
	Child-Restraint System	
	Installation	2-45
	Child-Restraint System Suitabilit	ty
	for Various Seat Positions	•
	Table	2-50
	Installing Child-Restraint	
	Systems	2-56
	-	
SR	S Air Bags	2-60
	Supplementary Restraint System	
	(SRS) Precautions	2-60
	Supplementary Restraint System	
	Components	2 65
	Components	2-05
	How the SRS Air Bags Work	
	1	
	How the SRS Air Bags Work	2-66
	How the SRS Air Bags Work SRS Air Bag Deployment	2-66 2-70

## Seat Precautions



#### Make sure the adjustable components of a seat are locked in place:

Adjustable seats and seatbacks that are not securely locked are dangerous. In a sudden stop or collision, the seat or seatback could move, causing injury. Make sure the adjustable components of the seat are locked in place by attempting to slide the seat forward and backward and rocking the seatback.

#### Never allow children to adjust a seat:

Allowing children to adjust a seat is dangerous as it could result in serious injury if a child's hands or feet become caught in the seat.

#### Do not drive with the seatback unlocked:

All of the seatbacks play an important role in your protection in a vehicle. Leaving the seatback unlocked is dangerous as it can allow passengers to be ejected or thrown around and baggage to strike occupants in a sudden stop or collision, resulting in severe injury. After adjusting the seatback at any time, even when there are no other passengers, rock the seatback to make sure it is locked in place.

#### Adjust a seat only when the vehicle is stopped:

If the seat is adjusted while the vehicle is being driven, the seating posture may become unstable and the seat could move unexpectedly resulting in injury.

#### Do not modify or replace the front seats:

Modifying or replacing the front seats such as replacing the upholstery or loosening any bolts is dangerous. The front seats contain air bag components essential to the supplementary restraint system. Such modifications could damage the supplementary restraint system and result in serious injury. Consult an expert repairer (we recommend an Authorised Mazda Repairer) if there is any need to remove or reinstall the front seats.

#### Do not drive with damaged front seats:

Driving with damaged front seats, such as seat cushions torn or damaged down to the urethane, is dangerous. A collision, even one not strong enough to inflate the air bags, could damage the front seats which contain essential air bag components. If there was a subsequent collision, an air bag may not deploy which could lead to injuries. Always have an expert repairer (we recommend an Authorised Mazda Repairer) inspect the front seats, front seat belt pretensioners and air bags after a collision.

#### Do not drive with either front seats reclined:

Sitting in a reclined position while the vehicle is moving is dangerous because you do not get the full protection from seat belts. During sudden braking or a collision, you can slide under the lap belt and suffer serious internal injuries. For maximum protection, sit well back and upright.

#### Do not recline a second-row seatback when the third-row seat is occupied:

Reclining the second-row seatback when the third-row seat is occupied is dangerous. Because the clearance in the third-row seat is limited, occupants in the third-row seat could be hurt seriously on a reclined second-row seatback.

#### Do not place an object such as a cushion between the seatback and your back:

Putting an object such as a cushion between the seatback and your back is dangerous because you will be unable to maintain a safe driving posture and the seat belt cannot function at its full capacity in a collision, which could result in a serious accident, injury or death.

#### Do not place objects under the seat:

The object could get stuck and cause the seat to not be fixed securely, and result in an accident.

#### Do not stack cargo higher than the seatbacks:

Stacking luggage or other cargo higher than the seatbacks is dangerous. During sudden braking or a collision, objects can fly around and become projectiles that may hit and injure passengers.

#### Make sure luggage and cargo is secured before driving:

Not securing cargo while driving is dangerous as it could move or be crushed during sudden braking or a collision and cause injury.

Additionally, if the air bags deploy, the cargo may scatter which could result in serious injury or death.

#### Never allow a passenger to sit or stand on the folded seatback while the vehicle is moving:

Driving with a passenger on the folded seatback is dangerous. Allowing a child to sit up on the folded seatback while the vehicle is moving is particularly dangerous. In a sudden stop or even a minor collision, a child not in a proper seat or child-restraint system and seat belt could be thrown forward, back or even out of the vehicle resulting in serious injuries or death. The child in the baggage area could be thrown into other occupants and cause serious injury.

# 

- When operating a seat, be careful not to put your hands or fingers near the moving parts of the seat or on the side trim to prevent injury.
- > When moving the seats, make sure there is no cargo in the surrounding area. If the cargo gets caught it could damage the cargo.
- ≻ (Manual Seat)

When moving the seats forward and rearward or returning a rear-reclined seatback to its upright position, make sure you hold onto the seatback with your hand while operating. If the seatback is not held, the seat will move suddenly and could cause injury.

When inserting your hand under the seat to clean the cabin or pick up something you dropped under the seat, be careful not to hurt yourself. If you contact the moving parts of the seat rail or seat frame, it could result in injury.

#### NOTE

• When returning a rear seat to its original position, place the seat belt in its normal position. Verify that the seat belt pulls out and retracts.

#### · (Power Seat)

The seat-bottom power adjustment is operated by motors. Avoid extended operation because excessive use can damage the motors.

- To prevent the battery from running down, avoid using the power adjustment when the engine is stopped. The adjuster uses a large amount of electrical power.
- $\cdot$  Do not use the switch to make more than one adjustment at a time.

#### **Front Seat**


#### ▼ Adjusting the Driver's Seat

Using the driving position set up procedure recommended by Mazda allows you to maintain a relaxed posture, drive the vehicle for longer periods without feeling tired, and make quick operations naturally.

Also, you can be assured of a clear view in the forward direction to help you drive more safely and comfortably.

The adjustments for the driving position recommended by Mazda are done using the following procedures.

- 1. Moving the steering wheel and seat to their default positions.
- 2. Adjusting the seatback angle.
- 3. Adjusting the seat position forward and back.
- 4. Adjusting the seat height.
- 5. Adjusting the steering wheel position.
- 6. Adjusting the head restraint position.

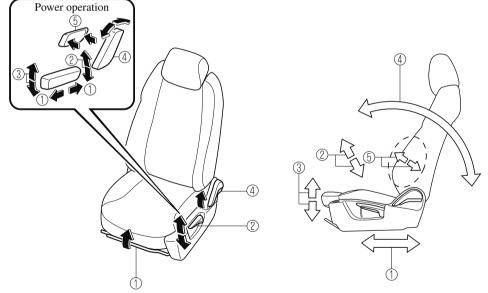

#### ① Seat Slide

#### (Manual Seat)

To move a seat forward or backward, raise the lever and slide the seat to the desired position and release the lever.

Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

(Power Seat)

To slide the seat, move the slide lifter switch on the outside of the seat to the front or back and hold it. Release the switch at the desired position.

#### <sup>(2)</sup> Height Adjustment

(Manual Seat)

To adjust the seat height, move the lever up or down.

(Power Seat)

To adjust the seat height, move the slide lifter switch up or down.

#### 3 Height Adjustment for Front Edge of Seat Bottom (Power Seat)\*

To adjust the front height of the seat bottom, raise or lower the front of the slide lifter switch.

#### (4) Seat Recline

(Manual Seat)

To change the seatback angle, lean forward slightly while raising the lever. Then lean back to the desired position and release the lever.

Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.

(Power Seat)

To change the seatback angle, press the front or rear side of the reclining switch. Release the switch at the desired position.

#### **(5)** Lumbar Support Adjustment (Power Seat)\*

To increase the seat firmness, press and hold the front part of the switch to the desired position, then release it.

Press the rear part of the switch to decrease firmness.

#### Before making adjustments to the driving position recommended by Mazda

Before making adjustments, move the steering wheel and seat to their default positions.

#### How to move the steering wheel to its default position

# 


#### Never adjust the steering wheel while the vehicle is moving:

Adjusting the steering wheel while the vehicle is moving is dangerous. Moving it can very easily cause the driver to abruptly turn to the left or right. This can lead to loss of control or an accident.

# After adjusting the steering wheel position, make sure it is securely locked by trying to move it up and down:

Driving with the steering wheel not securely locked in position is dangerous. If the steering wheel moves unexpectedly while driving, you could lose control of the steering resulting in an accident.

Lower the lever, move the steering wheel to the lowest position, and then push it down and all the way back.

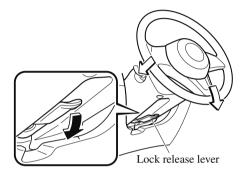

#### How to move a driver's seat to its default position


- 1. Slide the seat all the way back.
- 2. Lower the seat to its lowest height.
- 3. Sit squarely in the seat and rest your back against the seatback.


#### Seat adjustment procedure for the driving position recommended by Mazda

#### Adjusting the seatback angle (reclining)


Adjust the seatback to the angle providing a comfortable seated posture.

1. With your posture slightly slouched, move the seatback forward to the angle where your waist feels slightly cramped.

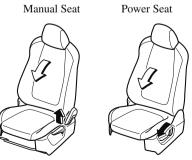

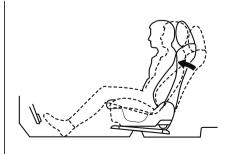


2. Move the seatback backward to a comfortable seated posture without any feeling of cramping in your waist.

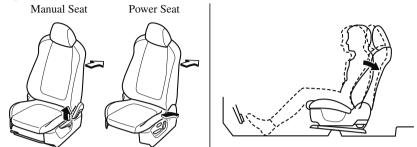

#### Adjusting the seat position forward and back (sliding)


Adjust the seat to the position best for operating the accelerator and brake pedals.

- 1. Place your left foot on the footrest, your right foot between the accelerator and brake pedals, and position your heel to the position allowing easy switching between the pedals.
- 2. With your heel set on the floor, set your right foot on the brake pedal and move the seat forward as far as possible until you feel a slight cramping in your ankle.

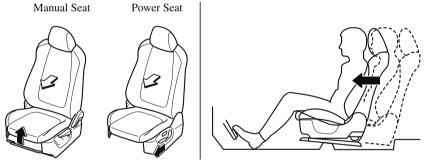

- 3. With your right foot set on the brake pedal, move the seat back until you no longer feel cramping in your ankle.
- 4. With your heel set on the floor, make sure you can move your foot between the brake pedal and accelerator pedal smoothly.

5. Depress the accelerator pedal completely with your heel set on the floor and make sure that your ankle does not feel over-stretched.

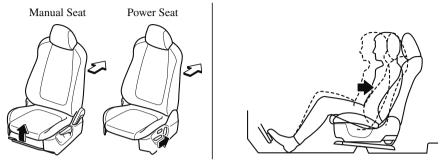


#### Adjusting the seat height

Adjust the seat height to a position where you have a clear forward view and you can drive the vehicle easily.

1. With your back resting against the seatback, raise the seat to the height where you can see the rear edge area of the bonnet surface from the windscreen.

With the manual seat, if you raise the seat height, the seat moves forward. Adjust the seat forward or back again.

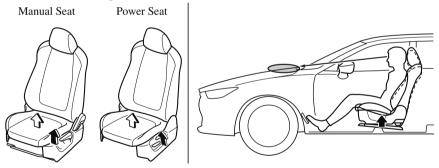

#### Adjusting the steering wheel position

Adjust the steering wheel to the position where it can be operated easily and the gauges can be viewed easily.

1. With your back resting against the seatback, extend both arms, place them on the top of the steering wheel, and pull the steering wheel towards you to the position of your wrists.



- 2. Adjust the steering wheel height so that the gauges can be viewed easily.
- 3. Raise the lever to securely lock the steering wheel.



#### Adjusting the head restraint position

To prevent shock to the head and neck, adjust the head restraints to their correct positions. Refer to Height Adjustment on page 2-27.


#### ▼ Driving Position Memory\*

The desired driving position can be called up after programming the position. The following driving positions can be programmed.

- Driver's seat position (seat slide, height adjustment, front edge of seat bottom, seat recline) Refer to Adjusting the Driver's Seat on page 2-5.
- Active driving display (display position, brightness level, display information) Refer to Active Driving Display on page 4-67.

# 

Do not place fingers or hands around the bottom of the seat while the seat memory function is operating. The seat moves automatically while the seat memory function is operating and fingers or hands could get pinched and injured.

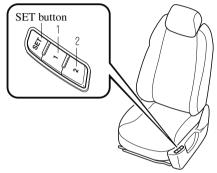

A driving position can be programmed or operated using the buttons on the side of the seat or the key.

#### NOTE

- Lumbar support adjustment cannot be programmed.
- A driving position can be programmed to the buttons on the side of the seat and the key in use for driving the vehicle.
- If the vehicle has been serviced and the battery leads disconnected, the programmed seat positions will have been erased. Re-programme the seat positions.

#### Programming

- 1. Make sure the parking brake is on.
- 2. Make sure the selector lever is in the P position.
- 3. Start the engine.

- 4. Adjust the seat and the active driving display to the desired driving position.
- 5. Press the SET button on the seat until a beep sound is heard 1 time.
- 6. Perform one of the following settings within 5 seconds of completing step 5 above:
  - **Programming using a button on the side of the seat** Press the button you want to

programme, either button 1 or 2, until a beep sound is heard 1 time.

• **Programming using the key** Press the key unlock button until a beep sound is heard 1 time.

#### NOTE

*If a beep sound is heard 3 times, the operation is cancelled.* 

# To move the driving position to a programmed position

#### (Using a button on the side of the seat)

- 1. Make sure the parking brake is on.
- 2. Make sure the selector lever is in the P position.
- 3. Start the engine.
- 4. Press the programming button for the driving position you want to call up (button 1 or 2).
- 5. A beep sound is heard when the driving position adjustment is completed.

#### NOTE

- If the driving position movement is not changed, only the beep sounds.
- A seat position can be called up even with the engine not running.
- The driving position adjustment is cancelled in the following cases:

- Any of the seat adjustment switches is operated.
- The SET button is pressed.
- Programming button 1 or 2 is pressed.
- *The key lock button or unlock button is operated.*
- The vehicle starts moving.
- · The active driving display is adjusted.

#### (Using a programmed key)

- 1. Unlock the doors by pressing a request switch or the key unlock button.
- 2. After unlocking the doors, the seat position adjustment begins within 40 seconds of opening the driver's door, and a beep sounds when the operation is finished.
- 3. Make sure the parking brake is on.
- 4. Make sure the selector lever is in the P position.
- 5. Start the engine.
- 6. The active driving display adjustment begins.

#### NOTE

• If there is no driving position movement, a beep is not heard.

- The driving position adjustment is cancelled in the following cases:
  - Any of the seat adjustment switches is operated.
  - The SET button is pressed.
  - · Programming button 1 or 2 is pressed.
  - The key lock button or unlock button is operated.
  - · The vehicle starts moving.
  - The active driving display is adjusted.


#### Erasing programmed driving positions

# (Erasing the driving positions programmed to the key)

- 1. Switch the ignition OFF.
- 2. Press the SET button on the side of the seat until a beep sound is heard 1 time.
- 3. After the beep sounds, press the key lock button within 5 seconds until a beep sound is heard 1 time.

#### NOTE

*If a beep sound is heard 3 times, the operation is cancelled.* 

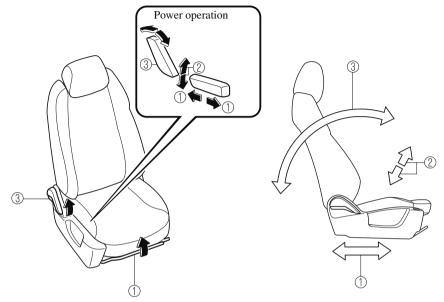

#### ▼ Adjusting the Front Passenger's Seat

#### ① Seat Slide

(Manual Seat)

To move a seat forward or backward, raise the lever and slide the seat to the desired position and release the lever.

Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

(Power Seat)

To slide the seat, move the slide lifter switch on the outside of the seat to the front or back and hold it. Release the switch at the desired position.

#### <sup>(2)</sup>Height Adjustment (Power Seat)\*

To adjust the seat height, move the slide lifter switch up or down.

#### ③ Seat Recline

(Manual Seat)

To change the seatback angle, lean forward slightly while raising the lever. Then lean back to the desired position and release the lever.


Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.

(Power Seat)

To change the seatback angle, press the front or rear side of the reclining switch. Release the switch at the desired position.

## Second-row Seat (6:4 Split Adjustable-type Bench Seat Type)

#### Seat Operation

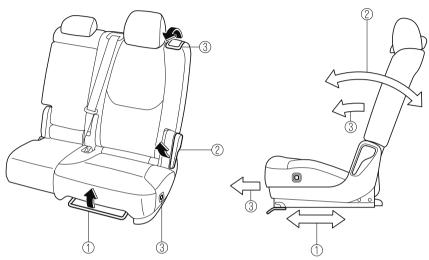

#### ①Seat Slide (Forward-back adjustment)

To move a seat forward or backward, raise the lever and slide the seat to the desired position and release the lever.

Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

#### ②Seat Recline

To change the seatback angle, lean forward slightly while raising the lever. Then lean back to the desired position and release the lever.

The lever can also be used when flattening down the seats.

Refer to Split Folding the Second-row Seats on page 2-19.

Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.

#### **③Third-row Seat Access**

#### (Lever)

Pull up the lever on the side of the head restraint to fold the seatback and slide the seat forward.

Refer to Third-row Seat Access on page 2-15.

Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

#### (Switch)\*

Press the switch to fold the seatback forward and release the seat slide lock. Then slide the seat forward.

Refer to Third-row Seat Access on page 2-15.

Make sure the seat is locked in place by attempting to push it forward and backward.

#### ▼ Armrest

The armrest in the centre of the second-row seatback can be used (no occupant in the centre seat) or placed upright.



# Never put your hands and fingers around the moving parts of the seat and armrest:

Putting your hands and fingers around the moving parts of the seat and armrest is dangerous as they could get injured.

# 

When storing the armrest, make sure that any leads connected to the USB power outlets in the armrest box are stored away in the armrest box. If the leads are not stored away in the armrest box, the leads and connection devices may become damaged when storing the armrest.

Be careful not to apply excessive force to the armrest such as by sitting on it. Otherwise, it could be deformed or damaged.

#### ▼ Third-row Seat Access

Occupants can get into and out of the third-row seats easily by sliding the second-row seats forward.

# 

# Make sure there is nobody in the second-row seat area before operating a lever or pressing a switch:

Not checking the second-row seat area for persons before folding a seatback with a lever or switch is dangerous. The second-row seat area is difficult to see from the rear of the vehicle. Operating a lever or pressing a switch without checking could cause injury to a person when a seatback suddenly flips forward.

#### Do not operate the lever on the side of the head restraint or press the switch on the side of the seat under the following conditions:


Operating the lever on the side of the head restraint or pressing the switch on the side of the seat under the following conditions is dangerous as the seat may move unexpectedly and cause an injury such as a foot getting pinched between the seat and floor.

> Occupant is seated in second-row seat





Second-row seatback is folded forward

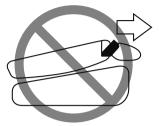



Child is seated on child restraint in second-row seat





# 

- When operating the seat, be careful not to get your hand or foot caught, or hit your head.
- Before moving the second-row seat, make sure that the head restraint is at the lowest position. If the second-row seat is folded forward while the head restraint is pulled up, there will not be enough space for getting in or out of the vehicle which could cause an occupant to trip and fall resulting in injury.
- Check the position of a front seat before folding a second-row seatback. Depending on the position of a front seat, it may not be possible to fold a second-row seatback all the way down because it may hit the seatback of the front seat which could scratch or damage the front seat or its pocket. Remove the head restraint on the second-row outboard seat if necessary.


#### Entering/exiting the third-row seat area

 Lower the head restraint all the way down.
 Refer to Head Restraints on page

Refer to Head Restraints on page 2-27.

#### 2. (Lever)

Pull up the lever on the side of the head restraint to unlock the seat, fold the seatback forward, and slide the seat forward.

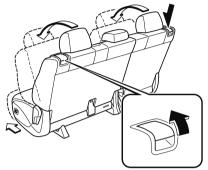

#### (Switch)

To unlock the seat, press the switch continuously until a sound is activated, release it, fold the seatback forward, and slide the seat forward.

#### NOTE

When any of the following conditions is met, a beep sound is activated continuously and the switch operation is cancelled.

- The door on the side where the switch was operated is closed.
- The switch is pressed continuously for 5 s or more.
- The vehicle is being driven.
- The selector lever is in a position other than P, and the parking brake is off.
- · The battery has deteriorated.

• There is a system problem.





- Do not operate the lever on the side of a second-row seat while the seatback is folded down and the seat is slid forward. If the lever is forcefully operated, it could damage the lever.
- After entering/exiting the third-row seat area, return the second-row seatback to its upright position and lock it after sliding it rearward.

Make sure it is locked by attempting to lightly move it back and forth. Otherwise, it could move unexpectedly

and cause injury.

#### After getting in or out of the vehicle

Move the seatback rearward, slide the seat rearward, and lock the seat.

#### Entering/exiting the third-row seat area with child-restraint system installed (Right-side seat only)<sup>\*1</sup>

Access to the third-row seats is possible even when a child-restraint system is installed to the second-row seat. \*1 For left-hand drive models. Only for the left-side seat for right-hand drive models.

#### (Lever)

Pull up the lever on the side of the head restraint to lower the front side of the seat and slide the seat forward.



#### (Switch)


To unlock the seat, press the switch continuously until a sound is activated, release it, fold the seatback forward, and slide the seat forward.

#### NOTE

When any of the following conditions is met, a beep sound is activated continuously and the switch operation is cancelled.

- The door on the side where the switch was operated is closed.
- The switch is pressed continuously for 5 s or more.
- The vehicle is being driven.
- The selector lever is in a position other than P, and the parking brake is off.
- · The battery has deteriorated.

• There is a system problem.

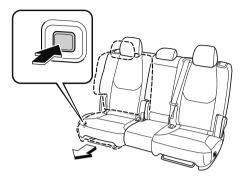



After entering/exiting the third-row seat area, lock the seat after sliding it rearward. Make sure it is locked by attempting to lightly move it back and forth. Otherwise, it could move unexpectedly and cause injury.



- Second-row seat fixed position
- Third-row seat ingress/egress

#### NOTE

The second-row seat cannot be moved forward while the seat belt is securing the child-restraint system.

#### After getting in or out of the vehicle

Move the seatback rearward, slide the seat rearward, and lock the seat.

#### ▼ Split folding the Second-row Seats

To create a flat luggage compartment space, fold the seatbacks forward.

#### Folding the seatbacks



# Make sure the adjustable components of a second-row seat are locked after folding down the seatback:

A second-row seat that is not securely locked is dangerous. In a sudden stop or collision, the second-row seat could move, causing injury.

After folding down the seatback of a second-row seat, make sure the adjustable components of the seat are locked in place by attempting to slide the seat forward and backward.

# 

- When folding the seatback forward, always support the seatback with your hand. If it is not supported by a hand, fingers or the hand raising the lever could be injured.
- Check the position of a front seat before folding a second-row seatback. Depending on the position of a front seat, it may not be possible to fold a second-row seatback all the way down because it may hit the seatback of the front seat which could scratch or damage the front seat or its pocket. Remove the head restraint on the second-row outboard seat if necessary.


#### NOTE

The seats cannot be flattened down while the second-row seats are unlocked even if the lever on the side of the head restraint is operated and the reclining lever is operated. Before folding down the second-row seats, move the seatback forward once, slide the seat rearward, and lock the seat.

1. Lower the head restraint all the way down.

Refer to Head Restraints on page 2-27.

2. Raise the lever on the side of the second-row seat to fold down the seatback.

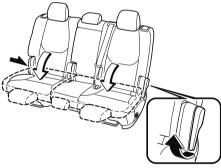

#### NOTE

To create a flat luggage compartment space from the rear of the vehicle to the back of the front seats, fold the second-row and third-row seats (page 2-25).



# To return the seatback to its upright position:

# 

When returning a seatback to its upright position, make sure the 3-point seat belt is not caught in the seatback and the 3-point seat belt is not twisted:

If the seat belt is used while it is twisted and caught in the seatback, the seat belt cannot function at its full capacity, which could cause serious injury or death.

- 1. Make sure that the seat belt is not stuck in the second-row seat and it is not twisted, then raise the seatback while preventing the seat belt from being caught in the seatback.
- 2. Press the seatback rearward and lock it in place. After returning the seatback to its upright position, make sure it is securely locked.

## Second-row Seat (Captain Seat Type)


Armrest type with angle adjustment function (centre walk-through)

Second-row seat console type





▼ Seat Operation

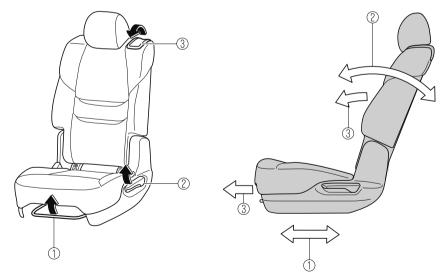

#### ①Seat Slide (Forward-back adjustment)

To move a seat forward or backward, raise the lever and slide the seat to the desired position and release the lever.

Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

#### ②Seat Recline

To change the seatback angle, lean forward slightly while raising the lever. Then lean back to the desired position and release the lever.

The lever can also be used when flattening down the seats.

Refer to How to Split Folding the Second-row Seats on page 2-24.

Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.

#### **③Third-row Seat Access**

To access to the third-row seats, pull up the lever on the side of the head restraint to fold the seatback and slide the seat forward.

Refer to How to Third-row Seat Access on page 2-23.

Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.


#### ▼ Armrest

#### Using the armrest

The armrest on the side of the second-row seatback can be used or placed upright.

#### Adjusting the angle

The angle of the armrest can be adjusted according to the angle of the seatback. To adjust the angle, lower the armrest to the lowest position, pull it up to the desired position, and then lock it. To adjust the angle again, store the armrest once and then lower the armrest to the lowest position again. After adjustment, make sure that the armrest is securely locked by lightly pressing it down.

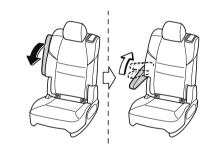

# Never position the shoulder portion of a seat belt over the armrest:

Positioning the shoulder portion of a second-row seat belt over the armrest is dangerous as it cannot provide adequate protection in a collision and could result in serious injuries.

# Never put your hands and fingers around the moving parts of the seat and armrest:

Putting your hands and fingers around the moving parts of the seat and armrest is dangerous as they could get injured.

# 

Be careful not to apply excessive force to the armrest such as by sitting on it. Otherwise, it could be deformed or damaged.

### ▼ Third-row Seat Access

Occupants can get into and out of the third-row seats easily by sliding the second-row seats forward.

## 

#### Make sure there is nobody in the second-row seat area before operating the levers:

Not checking the second-row seat area for persons before folding the seatbacks with the levers is dangerous. The second-row seat area is difficult to see from the rear of the vehicle. Operating the levers without checking could cause injury to a person when a seatback suddenly flips forward.

### 

Before moving the second-row seat, make sure that the head restraint is at the lowest position. If the second-row seat is folded forward while the head restraint is pulled up, there will not be enough space for getting in or out of the vehicle which could cause an occupant to trip and fall resulting in injury.

### NOTE

Occupants can also get in and out of the third-row seat area by passing between the second-row seats with the armrest type having the angle adjustment function. Occupants can pass through easily by tilting the armrest forward.

### Entering/exiting the third-row seat area

 Lower the head restraint all the way down.
 Refer to Head Restraints on page

Refer to Head Restraints on page 2-27.

2. Pull up the lever on the side of the head restraint to unlock the seat, fold the seatback forward, and slide the seat forward.



### NOTE

The seats cannot be flattened down while the second-row seats are unlocked even if the lever on the side of the head restraint is operated and the reclining lever is operated. Before folding down the second-row seats, move the seatback forward once, slide the seat rearward, and lock the seat.

### After getting in or out of the vehicle

Move the seatback rearward, slide the seat rearward, and lock the seat.



After entering/exiting the third-row seat area, return the second-row seatback to its upright position and lock it after sliding it rearward.

Make sure it is locked by attempting to lightly move it back and forth. Otherwise, it could move unexpectedly and cause injury.

### ▼ Split folding the Second-row Seats

To create a flat luggage compartment space, fold the seatbacks forward.

### 

# Make sure the adjustable components of a second-row seat are locked after folding down the seatback:

A second-row seat that is not securely locked is dangerous. In a sudden stop or collision, the second-row seat could move, causing injury. After folding down the seatback of a second-row seat, make sure the adjustable components of the seat are locked in place by attempting to slide the seat forward and backward.

### Do not drive the vehicle with an occupant on a folded down seatback or in the luggage compartment:

During sudden braking or a collision, the person could be seriously injured or killed.

### Tightly secure cargo in the luggage compartment when it is transported with the seatbacks folded down:

Driving without tightly securing cargo and luggage is dangerous as it could move and become an obstruction to driving during emergency braking or a collision resulting in an unexpected accident.

## 

- When folding the seatback forward, always support the seatback with your hand. If it is not supported by a hand, fingers or the hand raising the lever could be injured.
- Check the position of a front seat before folding a second-row seatback. Depending on the position of a front seat, it may not be possible to fold a second-row seatback all the way down because it may hit the seatback of the front seat which could scratch or damage the front seat or its pocket. Remove the head restraint on the second-row outboard seat if necessary.

### NOTE

The seats cannot be flattened down while the second-row seats are unlocked even if the lever on the side of the head restraint is operated and the reclining lever is operated. Before folding down the second-row seats, move the seatback forward once, slide the seat rearward, and lock the seat.

### Folding the seatbacks

 Lower the head restraint all the way down.
 Refer to Head Restraints on page

2-27.

2. (Armrest type with angle adjustment function)

If the armrests are down, fold them back up.

3. Raise the lever on the side of the second-row seat to fold down the seatback.



# To return the seatback to its upright position

Press the seatback rearward and lock it in place. After returning the seatback to its upright position, make sure it is securely locked.

### **Third-row Seat**

### ▼ Split folding the Third-row Seats

To create a luggage compartment space, fold the third-row seats forward.

# 


Do not apply load to the head restraint with it in the upright position and the seatback folded down. Otherwise, it could cause damage to the head restraint.

### NOTE


When folding the seatbacks forward, fold them in two steps.

### Folding the seatbacks (With strap)

- Secure the third-row seat seat belts into their holders. Refer to Unfastening the Seat Belt on page 2-37.
- 2. Slide the second-row seat all the way forward.
- 3. Pull the strap to fold down the head restraint.

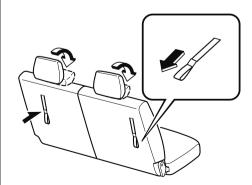

4. Pull the strap further to fold the third-row seat forward.

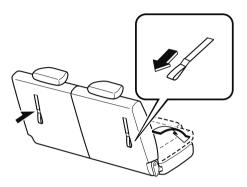


### Folding the seatbacks (With lever)


 Secure the third-row seat seat belts into their holders. Refer to Unfastening the Seat Belt on

page 2-37.2. Slide the second-row seat all the way

- forward.
   Lower the lever to fold down the head
- 3. Lower the lever to fold down the head restraint.

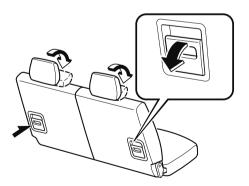

4. Lower the lever further to fold the third-row seat forward.

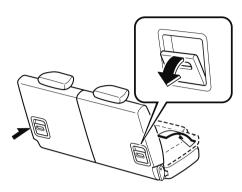

### NOTE

To create a flat luggage compartment space from the rear of the vehicle to the back of the front seats, fold the second-row and third-row seats (page 2-19).



# To return third-row seat to its original position

- Return the seatback to its original position by pulling the strap/lever on the back of the seatback.
   Make sure the seatback is secured by attempting to lightly move it forward and back.
- 2. Lift the head restraint upward to its upright position.

### **Head Restraints**

Your vehicle is equipped with head restraints on all outboard seats and the second-row centre seat. The head restraints are intended to help protect you and the passengers from neck injury.

### 

Always drive with the head restraints installed when seats are being used and make sure they are properly adjusted. In addition, always raise the head restraints on Second-row centre seat when they are being used:


Driving with the head restraints adjusted too low or removed is dangerous. With no support behind your head, your neck could be seriously injured in a collision.

### NOTE

(*Third-row seat*) *The head restraints are non-adjustable.* 

### ▼ Height Adjustment


Adjust the head restraint so that the centre is even with the top of the passenger's ears.

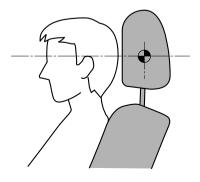

To raise a head restraint, pull it up to the desired position.


To lower the head restraint, press the stop-catch release, then push the head restraint down.

#### Front outboard seat

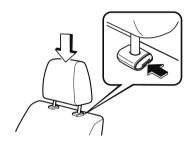


Second-row outboard seat


### (6:4 Split Adjustable-type Bench Seat Type)

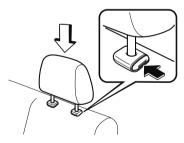

(Captain Seat Type)

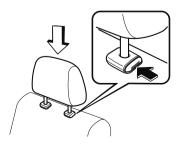

### Second-row centre seat (6:4 Split Adjustable-type Bench Seat Type)

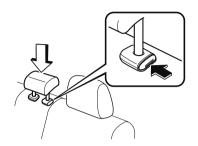

# ▼ Removal/Installation (Front outboard seat/Second-row seat)

To remove the head restraint, pull it up while pressing the stop-catch. To install the head restraint, insert the legs into the holes while pressing the stop-catch.

### 

### Always drive with the head restraints installed when seats are being used and make sure they are properly installed:

Driving with the head restraints not installed is dangerous. With no support behind your head, your neck could be seriously injured in a collision.

# After installing a head restraint, try lifting it to make sure that it does not pull out:

Driving with an unsecured head restraint is dangerous as the effectiveness of the head restraint will be compromised which could cause it to unexpectedly detach from the seat.

# 

- When installing a head restraint, make sure that it is installed correctly with the front of the head restraint facing forward. If the head restraint is installed incorrectly, it could detach from the seat during a collision and result in injury.
- The head restraints on each of the front and second-row seats are specialized to each seat. Do not switch around the head restraint positions. If a head restraint is not installed to its correct seat position, the effectiveness of the head restraint during a collision will be compromised which could cause injury.

### ▼ Foldable Head Restraints (Third-row seat)


The third-row seats are equipped with foldable head restraints.

### NOTE

*The foldable head restraints cannot be adjusted or removed.* 


### (With strap)

To fold the head restraint, pull the strap and fold the head restraint downward.

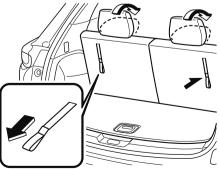

### (With lever)

To fold the head restraint, lower the lever down.

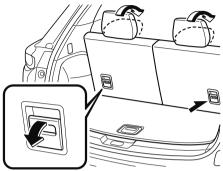

To return the head restraint to its upright position, lift it upward.




#### Always drive with the head restraints in their upright positions when the third-row seats are occupied, and make sure they are securely locked in place:

Driving with the head restraints folded down is dangerous. With no support behind your head, your neck could be seriously injured in a collision.

### Seat Warmer\*


The front/second-row seats are electrically heated. The ignition must be switched ON. Press the seat warmer switch while the ignition is switched ON to operate the seat warmer. The indicator lights turn on to indicate that the seat warmer is operating. The mode changes as follows each time the seat warmer switch is pressed.

### Front

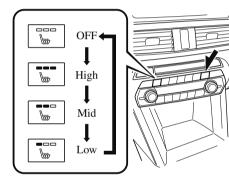


Second-row seat\*


(6:4 Split Adjustable-type Bench Seat Type)

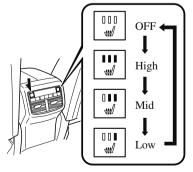

### (Captain Seat Type) Centre Walk-thorough Type

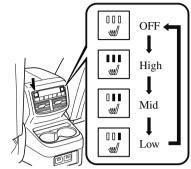

Second-row Console Type

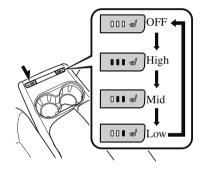

### Be careful when using the seat warmer:

The heat from the seat warmer may be too hot for some people, as indicated as follows, and could cause a low-temperature burn.

- Infants, small children, elderly people, and physically challenged people
- People with delicate skin
- ➢ People who are excessively fatigued
- People who are intoxicated
- People who have taken sleep-inducing medicine such as sleeping pills or cold medicine

#### Do not use the seat warmer with anything having high moisture-retention ability such as a blanket or cushion on the seat:

The seat may be heated excessively and cause a low-temperature burn.

# Do not use the seat warmer even when taking a short nap in the vehicle:

The seat may be heated excessively and cause a low-temperature burn.

### Do not place heavy objects with sharp projections on the seat, or insert needles or pins into it:

This could cause the seat to become excessively heated and result in injury from a minor burn.

### 

### ➤ (Second-row)

Before folding a second-row seatback, make sure that the second-row seat warmer switch is off. If a second-row seatback is folded while the second-row seat warmer is in operation, it may heat the seat excessively and damage the seat surface.

Do not use organic solvents to clean the seat. It may damage the seat surface and the heater.


### NOTE

- Use the seat warmer when the engine is running. Leaving the seat warmer on for long periods with the engine not running could cause the battery power to be depleted.
- When the engine is stopped while the seat warmers are operating and then the ignition is switched ON, the seat warmers will not turn back on automatically. To turn the seat warmers back on, press the switch. In addition, the second-row seat warmer operation stops automatically after the seat warmers have operated for about 90 minutes.
- The temperature of the seat warmer cannot be adjusted beyond High, Mid and Low because the seat warmer is controlled by a thermostat.
- (Vehicles with seat ventilation) The front seat warmer cannot be used at the same time as the seat ventilation.

### Seat Ventilation\*

The seat ventilation uses fans installed in the seats to draw air around the seat surface and ventilate them. The ignition must be switched ON.

Press the seat ventilation switch while the ignition is switched ON to operate the seat ventilation. The indicator lights turn on to indicate that the seat ventilation is operating. The mode changes as follows each time the seat ventilation switch is pressed.

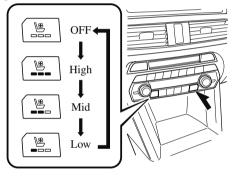

# 


- Do not use organic solvents to clean the seat. It may damage the seat surface and the seat ventilation parts.
- Do not place heavy objects with sharp projections on the seat, or insert needles or pins into it.

### NOTE

- Use the seat ventilation when the engine is running. Leaving the seat ventilation on for long periods with the engine not running could cause the battery power to be depleted.
- When the engine is stopped while the seat ventilations are operating and then the ignition is switched ON, the seat ventilations will not turn back on automatically.
- (Vehicles with front seat warmer) The seat ventilation cannot be used at the same time as the front seat warmer.

### Heated Steering Wheel\*

The grips on the left and right of the steering wheel can be warmed up.

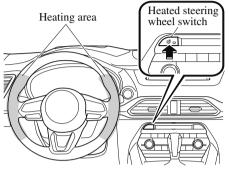

The ignition must be switched ON.

Press the switch to turn on the heated steering wheel. The heated steering wheel operates for about 30 minutes and then turns off automatically. The indicator light illuminates when the

heater is operating.

To turn off the heated steering wheel before the 30 minutes has elapsed, press the switch again.



The following types of persons should be careful not to touch the steering wheel. Otherwise, it could cause a low-temperature burn.

- ➢ Infants, small children, elderly people, and physically challenged people
- People with delicate skin
- People who are excessively fatigued
- People who are intoxicated

People who have taken sleep-inducing medicine such as sleeping pills or cold medicine

### **Seat Belt Precautions**

Seat belts help to decrease the possibility of severe injury during accidents and sudden stops. Mazda recommends that the driver and all passengers always wear seat belts.

All the seats have lap/shoulder belts. These belts also have retractors with inertia locks that keep them out of the way when not in use. The locks allow the belts to remain comfortable on users, but they will lock in position during a collision.

### 

### Always wear your seat belt and make sure all occupants are properly restrained:

Not wearing a seat belt is extremely dangerous. During a collision, occupants not wearing seat belts could hit someone or things inside the vehicle or even be thrown out of the vehicle. They could be seriously injured or even killed. In the same collision, occupants wearing seat belts would be much safer.

#### Do not wear twisted seat belts:

Twisted seat belts are dangerous. In a collision, the full width of the belt is not available to absorb the impact. This puts more force on the bones beneath the belt, which could cause serious injury or death. So, if your seat belt is twisted, you must straighten the seat belt to remove any twists and to allow the full width of the belt to be used.

### Never use one seat belt on more than one person at a time:

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way cannot spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time and always operate the vehicle with each occupant properly restrained.

### Do not operate a vehicle with a damaged seat belt:

Using a damaged seat belt is dangerous. An accident could damage the belt webbing of the seat belt in use. A damaged seat belt cannot provide adequate protection in a collision. Have an expert repairer (we recommend an Authorised Mazda Repairer) inspect all seat belt systems in use during an accident before they are used again.

# Have your seat belts changed immediately if the pretensioner or load limiter has been expended:

Always have an expert repairer (we recommend an Authorised Mazda Repairer) immediately inspect the seat belt pretensioners and air bags after any collision. Like the air bags, the seat belt pretensioners and load limiters will only function once and must be replaced after any collision that caused them to deploy. If the seat belt pretensioners and load limiters are not replaced, the risk of injury in a collision will increase.

### Positioning the Shoulder Portion of the Seat Belt:

Improper positioning of the shoulder portion of the seat belt is dangerous. Always make sure the shoulder portion of the seat belt is positioned across your shoulder and near your neck, but never under your arm, on your neck, or on your upper arm.

### Positioning the Lap Portion of the Seat Belt:

The lap portion of the seat belt worn too high is dangerous. In a collision, this would concentrate the impact force directly on the abdominal area, causing serious injury. Wear the lap portion of the belt snugly and as low as possible.

In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt.

### Instructions for Use of Seat Belt Assemblies:

Seatbelts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seatbelts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.


Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

# 

Belt retraction may become difficult if the belts and rings are soiled, so try to keep them clean. For more details about cleaning the seat belts, refer to "Seat Belt Maintenance" (page 6-61).



### ▼ Pregnant Women and Persons with Serious Medical Conditions

Pregnant women should always wear seat belts. Ask your doctor for specific recommendations.

The lap belt should be worn SNUGLY AND AS LOW AS POSSIBLE OVER THE HIPS. The shoulder belt should be worn across your shoulder properly, but never across the stomach area.

Persons with serious medical conditions also should wear seat belts. Check with your doctor for any special instructions regarding specific medical conditions.




### ▼ Emergency Locking Mode

When the seat belt is fastened, it will always be in the emergency locking mode. In the emergency locking mode, the belt remains comfortable on the occupant and the retractor will lock in position during a collision.

If the belt is locked and cannot be pulled out, retract the belt once, and then try pulling it out slowly. If this fails, pull the belt strongly 1 time and loosen, then pull it out again slowly.

### Seat Belt

### ▼ Fastening the Seat Belt

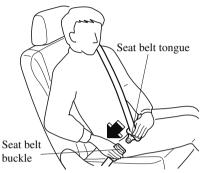


Position the lap belt as low as possible, not on the abdominal area, then adjust the shoulder belt so that it fits snugly against your body.



### ▼ Unfastening the Seat Belt


Depress the button on the seat belt buckle. If the belt does not fully retract, pull it out and check for kinks or twists. Then make sure it remains untwisted as it retracts.

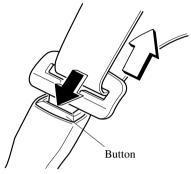


### NOTE

If a belt does not fully retract, inspect it for kinks and twists. If it is still not retracting properly, have it inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

To secure the outboard-third row seat belts when not in use, insert the belts into their seat belt retainers.

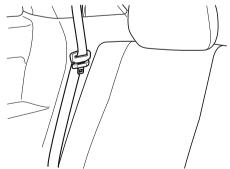

### ▼ Front Shoulder Belt Adjuster

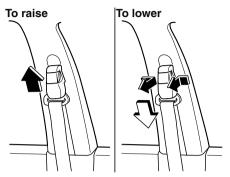

Make sure the adjuster is locked.

### Seat Belt Warning Systems

If it detects that the occupant seat belt is unfastened, the warning light or beep alerts the occupant.

Refer to Taking Action on page 7-47. Refer to Seat Belt Warning Beep on page 7-57.

# Seat belt indicator light (second-row seat/third-row seat) (green)

(Second-row seat) 6:4 Split Adjustable-type Bench Seat Type



Captain Seat Type





(Third-row seat) 3rd ROW

The light turns on when the ignition is switched ON and a second-row seat belt/ third-row seat belt is fastened, and then it turns off after about 60 seconds have elapsed since the engine was started.

### Front Seat Belt Pretensioner and Load Limiting Systems

For optimum protection, the driver and front passenger seat belts are equipped with pretensioner and load limiting systems. For both these systems to work properly you must wear the seat belt properly.

### **Pretensioners:**

When a collision is detected, the pretensioners deploy simultaneously with the air bags.

### (European models)

The pretensioners deploy simultaneously with the air bags when a roll-over is also detected.

For deployment details, refer to the SRS Air Bag Deployment Criteria (page 2-70).

The seat belt retractors remove slack quickly as the air bags are expanding. Any time the air bags and seat belt pretensioners have fired they must be replaced.

A system malfunction or operation conditions are indicated by a warning. Refer to Taking Action on page 7-47. Refer to Air Bag/Front Seat Belt Pretensioner System Warning Beep on page 7-57.

### Load limiter:

The load limiting system releases belt webbing in a controlled manner to reduce belt force on the occupant's chest. While the most severe load on a seat belt occurs in frontal collisions, the load limiter has an automatic mechanical function and can activate in any accident mode with sufficient occupant movement. Even if the pretensioners have not fired, the load limiting function must be checked by an expert repairer (we recommend an Authorised Mazda Repairer).

### 

# Wear seat belts only as recommended in this owner's manual:

Incorrect positioning of the seat belts is dangerous. Without proper positioning, the pretensioner and load limiting systems cannot provide adequate protection in an accident and this could result in serious injury. For more details about wearing seat belts, refer to "Fastening the Seat Belt" (page 2-37).

### Have your seat belts changed immediately if the pretensioner or load limiter has been expended:

Always have an expert repairer (we recommend an Authorised Mazda Repairer) immediately inspect the seat belt pretensioners and air bags after any collision. Like the air bags, the seat belt pretensioners and load limiters will only function once and must be replaced after any collision that caused them to deploy. If the seat belt pretensioners and load limiters are not replaced, the risk of injury in a collision will increase.

### Do not modify the components or wiring, or use electronic testing devices on the pretensioner system:

Modifying the components or wiring of the pretensioner system, including the use of electronic testing devices is dangerous. You could accidentally activate it or make it inoperable which would prevent it from activating in an accident. The occupants or repairers could be seriously injured.

# Properly dispose of the pretensioner system:

Improper disposal of the pretensioner system or a vehicle with non-deactivated pretensioners is dangerous. Unless all safety procedures are followed, injury could result. Have an expert repairer (we recommend an Authorised Mazda Repairer) safely dispose of the pretensioner system or scrap a pretensioner system equipped vehicle.

### NOTE

- The pretensioner system may not operate depending on the type of the collision. For details, refer to the SRS Air Bag Deployment Criteria (page 2-70).
- Some smoke (non-toxic gas) will be released when the air bags and pretensioners deploy. This does not indicate a fire. This gas normally has no effect on occupants, however, those with sensitive skin may experience light skin irritation. If residue from the deployment of the air bags or the pretensioner system gets on the skin or in the eyes, wash it off as soon as possible.

### **Child-Restraint Precautions**

Mazda strongly urges the use of child-restraint systems for children small enough to use them.

Mazda recommends use of a Mazda genuine child-restraint system or one that complies with the UN-R <sup>\*1</sup> 44 or UN-R 129 regulation. If you would like to purchase a Mazda genuine child-restraint system, please contact an expert repairer (we recommend an Authorised Mazda Repairer).

Check your local and state or provincial laws for specific requirements regarding the safety of children riding in your vehicle.

\*1 UN-R stands for United Nations Regulation.

Whatever child-restraint system you consider, please pick the appropriate one for the age and size of the child, obey the law and follow the instructions that come with the individual child-restraint system.

A child who has outgrown child-restraint systems should sit in the rear and use seat belts.

The child-restraint system should be installed on the rear seat.

Statistics confirm that the rear seat is the best place for all children up to 12 years of age-the more so with a supplementary restraint system (air bags).

A rear-facing child-restraint system should **NEVER** be used in the front passenger seat with the air bag system activated. The front passenger's seat is also the least preferred seat for other child-restraint systems.

### 

### Use the correct size child-restraint system:

For effective protection in vehicle accidents and sudden stops, a child must be properly restrained using a seat belt or child-restraint system depending on age and size. If not, the child could be seriously injured or even killed in an accident.

# Follow the manufacturer's instructions and always keep the child-restraint system buckled down:

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure any child-restraint system is properly secured in place according to the child-restraint system manufacturer's instructions. When not in use, remove it from the vehicle or fasten it with a seat belt, or latch it down to BOTH ISOFIX anchors, and attach the corresponding tether anchor.

### Always secure a child in a proper child-restraint system:

Holding a child in your arms while the vehicle is moving is extremely dangerous. No matter how strong the person may be, he or she cannot hold onto a child in a sudden stop or collision and it could result in serious injury or death to the child or other occupants. Even in a moderate accident, the child may be exposed to air bag forces that could result in serious injury or death to the child, or the child may be slammed into an adult, causing injury to both child and adult.

# Extreme Hazard! Never use a rear-facing child-restraint system on the front passenger seat with an air bag that could deploy:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Vehicles with a front passenger air bag have the following warning label. The warning label reminds you not to put a rear-facing child-restraint system on the front passenger seat at any time.

### (Taiwan Only)

依規定前排座椅禁止乘載嬰兒、幼童及兒童。



Even in a moderate collision, the child-restraint system can be hit by a deploying air bag and moved violently backward resulting in serious injury or death to the child.



(Taiwan, except front passenger seat, if equipped with the following label) NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



# Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable:

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.



# Do not allow a child or anyone to lean over to or against the side window of a vehicle with side and curtain air bags:

It is dangerous to allow anyone to lean over to or against the side window, the area of the front passenger seat, the front and rear window pillars and the roof edge along both sides from which the side and curtain air bags deploy, even if a child-restraint system is used. The impact of inflation from a side or curtain air bag could cause serious injury or death to an out of position child. Furthermore, leaning over to or against the door could block the side and curtain air bags of supplementary protection. Because the front seats are equipped with front air bags, the rear seat is always a better location for children. Take special care not to allow a child to lean over to or against the side window, even if the child is seated in a child-restraint system.

### Never use one seat belt on more than one person at a time:

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way cannot spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time and always operate the vehicle with each occupant properly restrained.

### Use the tether and tether anchor only for a child-restraint system:

Child-restraint system anchorages are designed to withstand only those loads imposed by correctly installed child-restraint systems. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

# Always remove the head restraint and install child-restraint system (except when installing a booster seat) (Second-row seat):

Installing a child-restraint system without removing the head restraint is dangerous. The child-restraint system cannot be installed correctly which may result in death or injury to the child in a collision.



A seat belt or child-restraint system can become very hot in a closed vehicle during warm weather. To avoid burning yourself or a child, check them before you or your child touches them.

### NOTE

Your Mazda is equipped with ISOFIX anchors for attachment of ISOFIX child-restraint systems on the second-row seats. When using these anchors to secure a child-restraint system, refer to "Using ISOFIX Anchor" (page 2-57).

### **Child-Restraint System Installation**

### ▼ Categories of Child-Restraint Systems

#### NOTE

When purchasing, ask the manufacturer of the child-restraint system which type of child-restraint system is appropriate for your child and vehicle.

(Europe and countries conforming to the UN-R 44 and UN-R 129 regulation)

Child-restraint systems are classified into the following 5 groups according to the UN-R 44 and UN-R 129 regulation.

Group	Age	Weight	Size Classification/ Fixture (CRF)
			ISO/L1
0	Up to about 9 months old	Up to 10 kg (up to 22 lb)	ISO/L2
			ISO/R1
			ISO/R1
0+	Up to about 2 years old	Up to 13 kg (up to 29 lb)	ISO/R2
			ISO/R3
	About 8 months to 4 years old		ISO/R2
			ISO/R3
1		9 kg — 18 kg (20 lb — 40 lb)	ISO/F2
			ISO/F2X
			ISO/F3
2	About 3 to 7 years old	15 kg — 25 kg (33 lb — 55 lb)	—
3	About 6 to 12 years old	22 kg — 36 kg (48 lb — 79 lb)	—

### (Other countries)

Please comply with the legal regulations concerning the use of child-restraint systems in your country.

▼ Child-Restraint System Types

(Europe and countries conforming to the UN-R 44 and UN-R 129 regulation) In this owner's manual, explanation of child-restraint systems secured with seat belts is provided for the following 3 types of popular child-restraint systems: baby seat, child seat, junior seat.

### NOTE

 Installation position is determined by the type of child-restraint system. Always read the manufacturer's instructions and this owner's manual carefully.

### Essential Safety Equipment Child Restraint


• Due to variations in the design of child-restraint systems, vehicle seats and seat belts, all child-restraint systems may not fit all seating positions. Before purchasing a child-restraint system, it should be tested in the specific vehicle seating position (or positions) where it is intended to be used. If a previously purchased child-restraint system does not fit, you may need to purchase a different one that will.

#### **Baby seat**

Equal to Group 0 and 0+ of the UN-R 44 and UN-R 129 regulation.

#### (Europe)

Recommended child-restraint system: Britax Römer BABY-SAFE PLUS and ISOFIX BASE

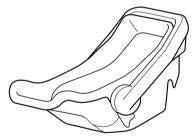

#### Child seat

Equal to Group 1 of the UN-R 44 and UN-R 129 regulation.

#### (Europe)

Recommended child-restraint system: Britax Römer Duo Plus



#### Junior seat

Equal to Group 2 and 3 of the UN-R 44 and UN-R 129 regulation.

#### (Europe)

Recommended child-restraint system: Britax Römer KidFix XP OEM




\*1 When using a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed.

#### (Other countries)

Please comply with the legal regulations concerning the use of child-restraint systems in your country.

### ▼ Baby Seat Installation Position

A baby seat is used in the rear-facing position only.

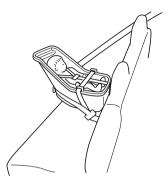

Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for baby seat installation position (page 2-50).

### 

# Always install a baby seat in the correct seat position:

Installing a baby seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A baby seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

### Never use a rear-facing child-restraint system on the front passenger seat protected by an air bag:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. The child-restraint system can be hit by the deploying air bag and knocked out of position. A child in the child-restraint system could be seriously injured or killed.



### ▼ Child Seat Installation Position

A child seat is used in front-facing and rear-facing positions depending on the age and size of the child. When installing, follow the manufacturer's instructions in accordance with the appropriate age and size of the child as well as the directions for installing the child-restraint system. Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for child seat installation position (page 2-50).

### **Rear-facing type**

### 

# Always install a rear-facing child seat in the correct seat position:

Installing a rear-facing child seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A rear-facing child seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

# Never use a rear-facing child-restraint system on the front passenger seat protected by an air bag:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

The child-restraint system can be hit by the deploying air bag and knocked out of position. A child in the child-restraint system could be seriously injured or killed.



### Front-facing type



# Never install a front-facing child seat in the wrong seat position:

Installing a front-facing child seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A front-facing child seat installed in the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

# Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable:

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.



### ▼ Junior Seat Installation Position

A junior seat is used in the front-facing position only.



Refer to the table, "Child-Restraint System Suitability for Various Seat Positions" for junior seat installation position (page 2-50).

### 

# Always install a junior seat in the correct seat position:

Installing a junior seat without first consulting the table "Child-Restraint System Suitability for Various Seat Positions" is dangerous. A junior seat installed on the wrong seat position cannot be properly secured. In a collision, the child could hit something or someone in the vehicle and be seriously injured or even killed.

#### Do not install a front-facing child-restraint system on the front passenger seat unless it is unavoidable:

In a collision, the force of a deploying air bag could cause serious injury or death to the child. If installing a front-facing child-restraint system on the front passenger seat is unavoidable, move the front passenger seat as far back as possible and adjust the seat bottom (height adjustable seat bottom) to the highest position at which the seat belt fastening the child-restraint system is securely tightened.



### Child-Restraint System Suitability for Various Seat Positions Table

#### (Europe and countries conforming to the UN-R 16 regulation)

Provided information in the table shows your child-restraint system suitability for various seating position. For installation suitability of other manufacturer child-restraint system, carefully consult the manufacturer's instructions which accompany the child-restraint system.

When installing a child-restraint system, the following points must be observed:

### · (Front passenger seat/Second-row seat)

Always remove the head restraint before installing a child-restraint system. However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed. In addition, always use a tether strap and attach it securely. Refer to Head Restraints on page 2-27.

- When installing a child-restraint system to the front passenger seat, adjust the seat slide position as far back as possible. Adjust the seat bottom (height adjustable seat bottom) to the highest position so that the seat belt can securely fasten the child-restraint system. Refer to Adjusting the Front Passenger's Seat on page 2-13.
- When it is difficult to install a child-restraint system to the front passenger seat/ second-row seat, or the seat belt cannot be secured to the child-restraint system, perform the following operations to adjust the seat holding the child-restraint system so that the seat belt can be secured completely to it.
  - $\cdot$  Move the seat forward or back.
  - $\cdot$  Move the seatback forward or back.
  - $\cdot$  Move the seat upward or downward. (Vehicles with height adjustment function)

### (Second-row seat)

- A child-restraint system with a support leg cannot be installed on the rear centre seat position.
- When installing a child-restraint system came equipped with a tether, remove the head restraint.

Refer to Head Restraints on page 2-27.

• When installing a child-restraint system using the ISOFIX anchors, if the connectors of the child-restraint system do not reach the lower anchorage and the child-restraint system cannot be installed, slightly tilt the seatback of the seat holding the child-restraint system rearward. If the seatback of a second-row seat cannot be reclined due to interference with luggage on the rear seat or passengers, slide the seat forward once and then recline the seatback.

#### (Second-row seat/Third-row seat)

- If the tether strap does not reach the anchor bracket, use an extension strap.
- When installing a child-restraint system to the second-row seat or third-row seat, adjust the seat position of the front seat so that the child-restraint system does not contact the front seat.

Refer to Adjusting the Driver's Seat on page 2-5.

Refer to Adjusting the Front Passenger's Seat on page 2-13.

Refer to Seat Operation on page 2-14.

- When installing a child-restraint system to the rear seat, refer to the child-restraint system manufacturer's instructions and the Using ISOFIX Anchor on page 2-57.
- An i-Size child-restraint system refers to a child-restraint system which has acquired i-Size category certification for the UN-R 129 regulation.

Seating posi- tion	Passenger	Second-row seat (Left)	Second-row seat (Centre)	Second-row seat (Right)	Third-row seat (Left)	Third-row seat (Right)
Seating posi- tion suitable for universal belted (Yes/No)	No	Yes (U)	Yes (U)	Yes (U)	Yes (U)	Yes (U)
i-Size seating position (Yes/No)	No	No	No	No	No	No
Largest suita- ble rearward facing fixture (R1)	No	Yes (IL)	No	Yes (IL)	No	No
Largest suita- ble rearward facing fixture (R2)	No	Yes (IL)	No	Yes (IL)	No	No
Largest suita- ble rearward facing fixture (R2X)	No	Yes (IL)	No	Yes (IL)	No	No
Largest suita- ble rearward facing fixture (R3)	No	Yes (IL)	No	Yes (IL)	No	No

### (Europe and other countries (Except Taiwan))

### Essential Safety Equipment Child Restraint

Seating posi- tion	Passenger	Second-row seat (Left)	Second-row seat (Centre)	Second-row seat (Right)	Third-row seat (Left)	Third-row seat (Right)
Largest suita- ble forward facing fixture (F2)	No	Yes (IUF)	No	Yes (IUF)	No	No
Largest suita- ble forward facing fixture (F2X)	No	Yes (IUF)	No	Yes (IUF)	No	No
Largest suita- ble forward facing fixture (F3)	No	Yes (IUF)	No	Yes (IUF)	No	No
Largest suita- ble lateral fac- ing fixture (L1)	No	No	No	No	No	No
Largest suita- ble lateral fac- ing fixture (L2)	No	No	No	No	No	No
Largest suita- ble booster fixture (B2)	No	Yes (IUF)	No	Yes (IUF)	No	No
Largest suita- ble booster fixture (B3)	No	Yes (IUF)	No	Yes (IUF)	No	No
Non i-size compatible with a support leg (Yes/No)	Yes*1	Yes	No	Yes	Yes	Yes
Lower ISO- FIX anchorag- es but without Top Tether (Yes/No)	No	No	No	No	No	No

U = Suitable for "universal" category restraints approved for use in this mass group.

UF = Suitable for forward-facing "universal" category restraints approved for use in this mass group.

IUF = Suitable for ISOFIX forward child restraints systems of universal category approved for use in the mass group.

L = Suitable for particular child restraints given on attached list. These restraints may be of the "specific vehicle", "restricted" or "semi-universal" categories.

IL = Suitable for particular ISOFIX child restraint systems (CRS) given in the attached list. These ISOFIX CRS are those of the "specific vehicle", "restricted" or "semi-universal" categories.

i-U = Suitable for i-Size "universal" Child Restraint Systems forward and rearward facing.

i-UF = Suitable for forward-facing i-Size "universal" Child Restraint Systems only.

Yes = Child-restraint system can be secured on the seat.

No = Child-restraint system cannot be secured on the seat, or there is no fixture.

X = Child-restraint system cannot be installed.

\*1 Child restraint system can only be installed in the forward-facing position.

A Mazda genuine child-restraint system can be installed. Regarding child-restraint systems which can be installed, refer to the accessories catalog.

The manufacturer will also recommend a suitable ISOFIX child restraint system.

For this, your vehicle and the seat must be listed on the child restraint system manufacturer's model list. For more information, contact the child restraint system manufacturer or visit the manufacturer's website.

#### (Taiwan Only)

#### Vehicle ISOFIX positions Size Class Fixture Mass group Second-row seat (Outboard) F ISO/L1 х Carrycot G ISO/L2 Х (1)Х ISO/R1 GROUP 0 E IL. Up to 10 kg (up to 22 lb) Х (1)E ISO/R1 IL D ISO/R2 IL GROUP 0+ Up to 13 kg (up to 29 lb) С ISO/R3 IL (1)Х IL D ISO/R2 С ISO/R3 IL. GROUP 1 в ISO/F2 IUF 9 kg — 18 kg (20 lb — 40 B1 ISO/F2X IUF lb)ISO/F3 IUF А Х (1)GROUP 2 х 15 kg — 25 kg (33 lb — 55 (1)lb) GROUP 3 22 kg — 36 kg (48 lb — 79 Х (1)1b)

#### **ISOFIX anchor-secured child-restraint systems**

(1) For the CRS which do not carry the ISO/XX size class identification (A to G), for the applicable mass group, the car manufacturer shall indicate the vehicle specific ISOFIX child-restraint system(s) recommended for each position.

Key of letters to be inserted in the above table:

IUF = suitable for ISOFIX forward child-restraints systems of universal category approved for use in this mass group.

IL = suitable for particular ISOFIX child-restraint systems (CRS).

These ISOFIX CRS are those of the "specific vehicle", "restricted" or "semi-universal" categories.

X = ISOFIX position not suitable for ISOFIX child-restraint systems in this mass group and/or this size class.

#### i-Size child-restraint systems

An i-Size child-restraint system can be installed to the specified seat as follows:

	Front passenger seat	Rear seat (outboard)	Rear seat (centre)
i-Size child-restraint sys- tems	Х	Х	Х

Key of letters to be inserted in the above table:

X = Seating position not suitable for i-Size "universal" child-restraint systems.

#### Seat belt-secured child-restraint systems

System group	Age group	Weight group	Child-r estraint system type	Front passenger seat	Second-row seat (outboard)	Second-row seat (centre)	Third-row seat (outboard)
GROU P 0	Up to about 9 months old	Up to 10 kg (up to 22 lb)	Baby seat	Х	U	U*1	U
GROU P 0 <b>+</b>	Up to about 2 years old	Up to 13 kg (up to 29 lb)	Baby seat	Х	U	U*1	U
GROU P 1	About 8 months to 4 years old	9 kg — 18 kg (20 lb — 40 lb)	Child seat	Х	U	U*1	U
GROU P 2	About 3 to 7 years old	15 kg - 25 kg (33 lb - 55 lb)	Junior seat	Х	U	U*1	U
GROU P 3	About 6 to 12 years old	22 kg — 36 kg (48 lb — 79 lb)	Junior seat	Х	U	U*1	U

Key of letters to be inserted in the above table:

U = Suitable for "universal" category restraints approved for use in this mass group.

X = Seat position not suitable for children in this mass group.

\*1 When a child-restraint system is installed to the rear centre seat, do not seat occupants in the rear left outboard seat position.

### (Other countries)

- Regarding child-restraint systems which can be installed to your Mazda, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- A child-restraint system with a support leg cannot be installed on the rear centre seat position.
- Please comply with the legal regulations concerning the use of child-restraint systems in your country.

### Installing Child-Restraint Systems


### ▼ Anchor Bracket

Anchor brackets for securing child-restraint systems are equipped in the vehicle. Locate each anchor position using the illustration.

To install a child-restraint system, remove the head restraint. Always follow the instruction manual accompanying the child-restraint system.

### Anchor bracket location

Use the indicated anchor bracket locations when installing a child-restraint system equipped with a tether.

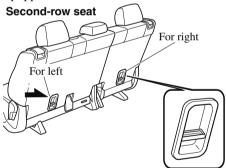


### 

# Always attach the tether strap to the correct tether anchor position:

Attaching the tether strap to the incorrect tether anchor position is dangerous. In a collision, the tether strap could come off and loosen the child-restraint system. If the child-restraint system moves it could result in death or injury to the child.

# Always remove the head restraint and install child-restraint system:

Installing a child-restraint system without removing the head restraint is dangerous. The child-restraint system cannot be installed correctly which may result in death or injury to the child in a collision.

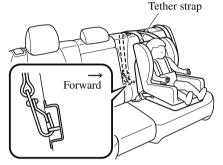

### Always install the head restraint and adjust it to the appropriate position after removing the child-restraint system:

Driving with the head restraint removed is dangerous as impact to the occupant's head cannot be prevented during emergency braking or in a collision, which could result in a serious accident, injury or death.

Refer to Head Restraints on page 2-27.

### ▼ Using the Seat Belt

When installing a child-restraint system, follow the installation instructions included with the product. In addition, remove the head restraint (except third-row seat). However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed. ▼ Using ISOFIX Anchor (Second-Row Seats)

### 

# Follow the manufacturer's instructions for the use of the child-restraint system:

An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure any child-restraint system is properly secured in place according to the manufacturer's instructions.

# Make sure the child-restraint system is properly secured:

A child-restraint system that is not secured is dangerous. In a sudden stop or collision, it can become a projectile and hit someone, causing serious injury. When not in use, remove it from the vehicle, put it in the luggage compartment or at least make sure it is securely fastened to the ISOFIX anchors.

### Make sure there are no seat belts or foreign objects near or around the ISOFIX anchor-secured child-restraint system:


Not following the child-restraint system manufacturer's instructions when installing the child-restraint system is dangerous. If seat belts or a foreign object prevent the child-restraint system from being securely attached to the ISOFIX anchors and the child-restraint system is installed improperly, the child-restraint system could move in a sudden stop or collision causing serious injury or death to the child or other occupants. When installing the child-restraint system, make sure there are no seat belts or foreign objects near or around the ISOFIX anchors. Always follow the child-restraint system manufacturer's instructions.

- First, adjust the front seat to allow clearance between the child-restraint system and the front seat. Refer to Adjusting the Driver's Seat on page 2-5. Refer to Adjusting the Front Passenger's Seat on page 2-13.
- Adjust the second-row seat position using the following procedure.
   ① Fold the second-row seatback forward.

<sup>(2)</sup> Raise the second-row seatback until a click sound is heard and it is locked in place.



- 3. Adjust the angle of the second-row seatback so that there is no gap between the child-restraint system and the second-row seatback.
- 4. Make sure the seatback is securely latched by pushing it back until it is fully locked.
- 5. Remove the cover of the child-restraint system's ISOFIX anchors to verify the locations of the ISOFIX anchor.

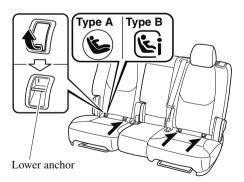

### NOTE

- The ISOFIX anchors marking on the cover indicates the position of the ISOFIX anchors for the attachment of a child-restraint system.
- Store the removed cover so that it does not get lost.

- 6. Remove the head restraint. However, when installing a booster seat, always install the vehicle head restraint to the seat where the booster seat is installed. Refer to Head Restraints on page 2-27.
- 7. Secure the child-restraint system using the ISOFIX anchor, following the child-restraint system manufacturer's instruction.
- 8. If your child-restraint system came equipped with a tether, that probably means it is very important to properly secure the tether for child safety. Please carefully follow the child-restraint system manufacturer's instructions when installing tethers (page 2-56).




# Always attach the tether strap to the correct tether anchor position:

Attaching the tether strap to the incorrect tether anchor position is dangerous. In a collision, the tether strap could come off and loosen the child-restraint system. If the child-restraint system moves it could result in death or injury to the child.

# Always remove the head restraint and install child-restraint system (except when installing a booster seat):

Installing a child-restraint system without removing the head restraint is dangerous. The child-restraint system cannot be installed correctly which may result in death or injury to the child in a collision.

Tether strap

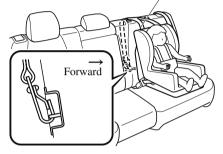

#### Always install the head restraint and adjust it to the appropriate position after removing the child-restraint system:

Driving with the head restraint removed is dangerous as impact to the occupant's head cannot be prevented during emergency braking or in a collision, which could result in a serious accident, injury or death.

Refer to Head Restraints on page 2-27.

## Supplementary Restraint System (SRS) Precautions

The front and side supplementary restraint systems (SRS) include different types of air bags. **Please verify the different types of air bags which are equipped on your vehicle by locating the "SRS AIRBAG" location indicators.** These indicators are visible in the area where the air bags are installed.

The air bags are installed in the following locations:

- The steering wheel hub (driver air bag)
- The front passenger instrument panel (front passenger air bag)
- The outboard sides of the front seatbacks (side air bags)
- The front and rear window pillars, and the roof edge along both sides (curtain air bags)

Vehicles for Europe have a sensor which detects an impending roll-over accident.

The air bag supplementary restraint systems are designed to provide supplementary protection in certain situations so seat belts are always important in the following ways:

Without seat belt usage, the air bags cannot provide adequate protection during an accident. Seat belt usage is necessary to:

- $\cdot$  Keep the occupant from being thrown into an inflating air bag.
- Reduce the possibility of injuries during an accident that is not designed for air bag inflation, such as rear impact.
- Reduce the possibility of injuries in frontal, near frontal or side collisions or roll-over accidents that are not severe enough to activate the air bags.
- Reduce the possibility of being thrown from your vehicle.
- Reduce the possibility of injuries to lower body and legs during an accident because the air bags provide no protection to these parts of the body.
- Hold the driver in a position which allows better control of the vehicle.

A child who is too small to use a seat belt must be properly secured using a child-restraint system (page 2-41).

Carefully consider which child-restraint system is necessary for your child and follow the installation directions in this Owner's Manual as well as the child-restraint system manufacturer's instructions.

## 

### Seat belts must be worn in air bag equipped vehicles:

Depending only on the air bags for protection during an accident is dangerous. Alone, air bags may not prevent serious injuries. The appropriate air bags can be expected to inflate only in the first accident, such as frontal, near frontal or side collisions or roll-over accidents that are at least moderate. Vehicle occupants should always wear seat belts.

### Children should not ride in the front passenger seat:

Placing a child, 12 years or under, in the front seat is dangerous. The child could be hit by a deploying air bag and be seriously injured or even killed. A sleeping child is more likely to lean against the door and be hit by the side air bag in moderate collision to the front-passenger side of the vehicle. Whenever possible, always secure a child 12 years and under on the rear seats with an appropriate child-restraint system for the child's age and size.

## Extreme Hazard! Never use a rear-facing child-restraint system on the front passenger seat with an air bag that could deploy:

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Even in a moderate collision, the child-restraint system can be hit by a deploying air bag and moved violently backward resulting in serious injury or death to the child.



## Do not sit too close to the driver and front passenger air bags:

Sitting too close to the driver and front passenger air bag modules or placing hands or feet on them is extremely dangerous. The driver and front passenger air bags inflate with great force and speed. Serious injuries could occur if someone is too close. The driver should always hold onto only the rim of the steering wheel. The front seat passenger should keep both feet on the floor. Front seat occupants should adjust their seats as far back as possible and always sit upright against the seatbacks with seat belts worn properly.

## Sit in the centre of the seat and wear seat belts properly:

Sitting too close to the side air bag modules or placing hands on them, or sleeping up against the door or hanging out the windows is extremely dangerous. The side and curtain air bags inflate with great force and speed directly expanding along the door on the side the car is hit. Serious injury could occur if someone is sitting too close to the door or leaning against a window, or if rear seat occupants grab the sides of the front seatbacks. Give the side and curtain air bags room to work by sitting in the centre of the seat while the vehicle is moving with seat belts worn properly.

## Do not attach objects on or around the area where air bags deploy:

Attaching objects to the air bags or placing something in the area where the air bags deploy is dangerous. In an accident, an object could interfere with air bag inflation and injure the occupants. Furthermore, the bag could be damaged causing gases to release. Always keep the deployment area of the air bag modules free of any obstructions. For example, you should not do any of the following as it may interfere with air bag deployment.

- Do not put a covering on or lean anything against areas such as the instrument panel and lower portion of the instrument panel that blocks the passenger front air bag and knee air bags.
- > Do not use seat covers on the front seats and rear seats equipped with in-seat side air bags.
- Do not hang any backpacks, bags or pouches that cover the sides of the seats that block the side air bags.
- > Do not place any objects on the assist grips. Only hang clothes directly on the coat hooks.

# Do not touch the components of the supplementary restraint system after the air bags have inflated:

Touching the components of the supplementary restraint system after the air bags have inflated is dangerous. Immediately after inflation, they are very hot. You could get burned.

## Never install any front-end equipment to your vehicle:

Installation of front-end equipment, such as frontal protection bar (kangaroo bar, bull bar, push bar, or other similar devices), snowplow, or winches, is dangerous. The air bag crash sensor system could be affected. This could cause air bags to inflate unexpectedly, or it could prevent the air bags from inflating during an accident. Front occupants could be seriously injured.

## Do not modify the suspension:

Modifying the vehicle suspension is dangerous. If the vehicle's height or the suspension is modified, the vehicle will be unable to accurately detect a collision or roll-over accident resulting in incorrect or unexpected air bag deployment and the possibility of serious injuries.

### To prevent false detection by the air bag sensor system, heed the following:

Do not use tyres or wheels other than those specified for your Mazda: Use of any tyre or wheel other than those specified for your Mazda (page 9-9) is dangerous. Use of such wheels will prevent the vehicle's accident detections system from accurately detecting a collision or roll-over accident resulting in incorrect or unexpected air bag deployment and the possibility of serious injuries.

Do not overload your vehicle:

Overloading your vehicle is dangerous as it could prevent the air bag crash sensor system from accurately detecting a collision or roll-over accident resulting in incorrect or unexpected air bag deployment and the possibility of serious injuries. The gross axle weight rating (GAWR) and the gross vehicle weight rating (GVWR) for your vehicle are on the Motor Vehicle Safety Standard Label on the driver's door frame. Do not exceed these ratings.

### Do not modify the supplementary restraint system:

Modifying the components or wiring of the supplementary restraint system is dangerous. You could accidentally activate it or make it inoperable. Do not make any modifications to the supplementary restraint system. This includes installing trim, badges, or anything else over the air bag modules. It also includes installing extra electrical equipment on or near system components or wiring. An expert repairer (we recommend an Authorised Mazda Repairer) can provide the special care needed in the removal and installation of front seats. It is important to protect the air bag wiring and connections to assure that the bags do not accidentally deploy and the seats retain an undamaged air bag connection.

## Do not place luggage or other objects under the front seats:

Placing luggage or other objects under the front seats is dangerous. The components essential to the supplementary restraint system could be damaged, and in the event of a side collision, the appropriate air bags may not deploy, which could result in death or serious injury. To prevent damage to the components essential to the supplementary restraint system, do not place luggage or other objects under the front seats.

#### Do not operate a vehicle with damaged air bag/seat belt pretensioner system components:

Expended or damaged air bag/seat belt pretensioner system components must be replaced after any collision which caused them to deploy or damage them. Only a trained expert repairer (we recommend an Authorised Mazda Repairer) can fully evaluate these systems to see that they will work in any subsequent accident. Driving with an expended or damaged air bag or pretensioner unit will not afford you the necessary protection in the event of any subsequent accident which could result in serious injury or death.

## Do not remove interior air bag parts:

Removing any components such as the front seats, front instrument panel, the steering wheel or parts on the front and rear window pillars and along the roof edge, containing air bag parts or sensors is dangerous. These parts contain essential air bag components. The air bag could accidentally activate and cause serious injuries. Always have an expert repairer (we recommend an Authorised Mazda Repairer) remove these parts.

## Properly dispose of the air bag system:


Improper disposal of an air bag or a vehicle with live air bags in it can be extremely dangerous. Unless all safety procedures are followed, injury could result. Have an expert repairer (we recommend an Authorised Mazda Repairer) safely dispose of the air bag system or scrap an air bag equipped vehicle.

## NOTE

- When an air bag deploys, a loud inflation noise can be heard and some smoke will be released. Neither is likely to cause injury, however, the texture of the air bags may cause light skin injuries on body parts not covered with clothing through friction.
- Should you sell your Mazda, we urge you to tell the new owner of its air bag systems and that familiarization with all instructions about them, from the Owner's Manual, is important.
- This highly-visible label warns against the use of a rear-facing child-restraint system on the front passenger seat.

## (Taiwan Only)


依規定前排座椅禁止乘載嬰兒、幼童及兒童。

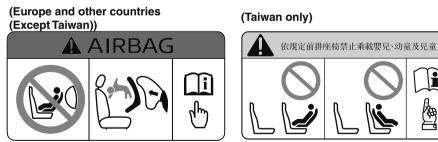

(Taiwan, except front passenger seat, if equipped with the following label) The highly-visible labels warn against the use of a rear-facing child-restraint system on the seat protected by an air bag.



## **Supplementary Restraint System Components**

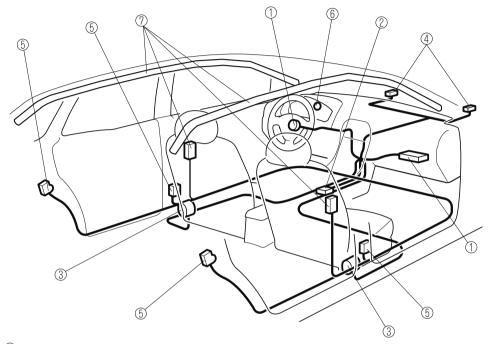

- ① Driver/Front passenger inflators and air bags
- (2) Roll-over sensor\*, crash sensors, and diagnostic module (SAS unit)
- ③ Front seat belt pretensioners (page 2-39)
- (4) Front air bag sensors
- <sup>(5)</sup> Side crash sensors
- <sup>(6)</sup> Air bag/front seat belt pretensioner system warning light (page 7-39)
- O Side and curtain inflators and air bags

## How the SRS Air Bags Work

Your Mazda is equipped with the following types of SRS air bags. SRS air bags are designed to work together with the seat belts to help to reduce injuries during an accident. The SRS air bags are designed to provide further protection for passengers in addition to the seat belt functions. Be sure to wear seat belts properly.

## ▼ Front Seat Belt Pretensioners

The front seat belt pretensioners are designed to deploy in moderate or severe frontal, near frontal collisions.


In addition, the pretensioners operate when a side collision or a roll-over accident is detected. The pretensioners operate differently depending on what types of air bags are equipped. For more details about seat belt pretensioner operation, refer to the SRS Air Bag Deployment Criteria (page 2-70).

## ▼ Driver Air Bag

The driver's air bag is mounted in the steering wheel.

When air bag crash sensors detect a frontal impact of greater than moderate force, the driver's air bag inflates quickly helping to reduce injury mainly to the driver's head or chest caused by directly hitting the steering wheel.

For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-70).

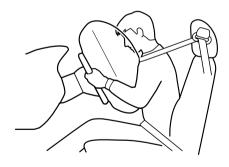

## ▼ Front Passenger Air Bag

The front passenger air bag is mounted in the front passenger instrument panel. The inflation mechanism for the front passenger air bag is the same as the driver's air bag. For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-70).




## ▼ Side Air Bags

The side air bags are mounted in the outboard sides of the front seatbacks.

When the air bag crash sensors detect a side impact of greater than moderate force, the system inflates the side air bag only on the side in which the vehicle was hit. The side air bag inflates quickly to reduce injury to the driver or front passenger's chest caused by directly hitting interior parts such as a door or window.

For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-70).

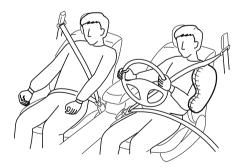

## ▼ Curtain Air Bags

The curtain air bags are mounted in the front and rear window pillars, and the roof edge along both sides.

When the air bag crash sensors detect a side impact of greater than moderate force, the curtain air bag inflates quickly and helps to reduce injury mainly to the rear outboard passenger's head caused by directly hitting interior parts such as a door or window. For more details about air bag deployment, refer to "SRS Air Bag Deployment Criteria" (page 2-70).

## In a side impact:


Greater than moderate impact to one side of the vehicle will cause the curtain air bag on that side only to inflate.



Only one side curtain air bag will deploy on the side of the vehicle that receives the force of an impact.

### (European models) In a roll-over:

In response to a vehicle roll-over, both curtain air bags inflate.

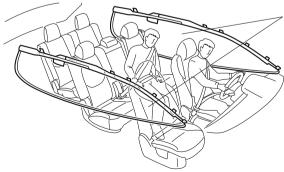

Both curtain air bags will deploy after the roll-over accident is detected.

## ▼ Warning Light/Beep

A system malfunction or operation conditions are indicated by a warning.

Refer to Contact an expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

Refer to Warning Sound is Activated on page 7-57.

## SRS Air Bag Deployment Criteria

This chart indicates the applicable SRS equipment that will deploy depending on the type of collision.

(The illustrations are the representative cases of collisions.)

SRS equip- ment	Types of collision				
	A severe frontal/near frontal colli- sion	A severe side colli- sion <sup>*1</sup>	A roll-over/near roll-over <sup>*2</sup>	A rear collision	
	EN DE MONTO				
	NOR OF				
Front seat belt preten- sioner	Х	Х	Х	No air bag and front seat belt pre- tensioner will be activated in a rear collision.	
Driver air bag	Х				
Front pas- senger air bag	Х				
Side air bag		X (impact side on- ly)			
Curtain air bag		X (impact side on- ly)	X (both sides)		

X: The SRS air bag equipment is designed to deploy in a collision.

\*1 In a side collision, the seat belt pretensioners and the side/curtain air bags deploy.

#### \*2 (European models)

In a roll-over accident, the seat belt pretensioners and the curtain air bags deploy.

#### NOTE

In a frontal offset collision, the equipped air bags and pretensioners may all deploy depending on the direction, angle, and rate of impact.


## Limitations to SRS Air Bag

In severe collisions such as those described previously in "SRS Air Bag Deployment Criteria", the applicable SRS air bag equipment will deploy. However, in some accidents, the equipment may not deploy depending on the type of collision and its severity.


### Limitations to front/near front collision detection:

The following illustrations are examples of front/near front collisions that may not be detected as severe enough to deploy the SRS air bag equipment.


Impacts involving trees or poles



Frontal offset impact to the vehicle



Rear-ending or running under a truck's tail gate



## Limitations to side collision detection:

The following illustrations are examples of side collisions that may not be detected as severe enough to deploy the SRS air bag equipment.

Side impacts involving trees or poles



Side impacts with two-wheeled vehicles




Roll-over (Except European models)



#### (European models) Limitations to roll-over detection:

The following illustration is an example of an accident that may not be detected as a roll-over accident. Therefore, the front seat belt pretensioners and curtain air bags may not deploy.

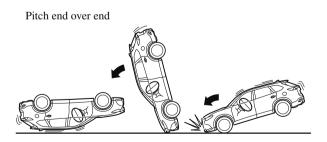

## **Constant Monitoring**

The following components of the air bag systems are monitored by a diagnostic system:

- · Front air bag sensors
- · Crash sensors, and diagnostic module (SAS unit)
- · Side crash sensors
- · Air bag modules
- Front seat belt pretensioners
- · Air bag/Front seat belt pretensioner system warning light
- · Related wiring

The diagnostic module continuously monitors the system's readiness. This begins when the ignition is switched ON and continues while the vehicle is being driven.



# **3** Before Driving

Use of various features, including keys, doors, mirrors and windows.

3-2
3-2
3-4
3-9
em*
3-9
3-10
3-11
3-11
3-17
3-26
3-26
3-30
3-32
3-32
3-36
3-36

Sunroof*
----------

Security System	3-42
Modification and Add-On	
Equipment	3-42
Immobilizer System	3-42
Theft-Deterrent System*	3-44
Driving Tips	3-49
Running-In Period	3-49
Saving Fuel and Protection of the	e
Environment	3-49
Hazardous Driving	3-50
Floor Mat	3-51
Rocking the Vehicle	3-52
Winter Driving	3-52
Driving In Flooded Area	3-55
Turbocharger Information	3-56
<b>Towing</b> Towing Caravans and Trailers	3-57
(Russia)	3-57

## Keys

## 

### Do not leave the key in your vehicle with children and keep them in a place where your children will not find or play with them:

Leaving children in a vehicle with the key is dangerous. This could result in someone being badly injured or even killed. Children may find these keys to be an interesting toy to play with and could cause the power windows or other controls to operate, or even make the vehicle move.


## 

- Because the key (transmitter) uses low-intensity radio waves, it may not function correctly under the following conditions:
  - The key is carried with communication devices such as cellular phones.
  - The key contacts or is covered by a metal object.
  - The key is near electronic devices such as personal computers.
  - Non-Mazda genuine electronic equipment is installed in the vehicle.
  - There is equipment which discharges radio waves near the vehicle.
- The key (transmitter) may consume battery power excessively if it receives high-intensity radio waves. Do not place the key near electronic devices such as televisions or personal computers.

- To avoid damage to the key (transmitter), DO NOT:
  - Drop the key.
  - Get the key wet.
  - Disassemble the key.
  - Expose the key to high temperatures on places such as the instrument panel or bonnet, under direct sunlight.
  - Expose the key to any kind of magnetic field.
  - ➢ Place heavy objects on the key.
  - ▶ Put the key in an ultrasonic cleaner.
  - Put any magnetized objects close to the key.

## NOTE

*The driver must carry the key to ensure the system functions properly.* 

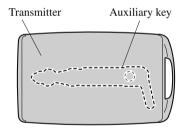

## Removing the auxiliary key

1. Remove the lower cover while sliding the knob in the direction of the arrow.




2. Remove the auxiliary key.




## Installing the auxiliary key

1. Install the auxiliary key as the illustration.



2. Insert the tabs of the lower cover into the slots of the transmitter and install the lower cover.



## Key code number plate

A code number is stamped on the plate attached to the key set; detach this plate and store it in a safe place (not in the vehicle) for use if you need to make a replacement key (auxiliary key). Also write down the code number and keep it in a separate safe and convenient place, but not in the vehicle.

If your key (auxiliary key) is lost, consult an expert repairer (we recommend an Authorised Mazda Repairer), and have your code number ready.



 Key code number plate

## **Keyless Entry System**

This system uses the key buttons to remotely lock and unlock the doors and the liftgate, and opens/closes the liftgate. The system can start the engine without having to take the key out of your purse or pocket.

Operating the theft-deterrent system is also possible on theft-deterrent system-equipped vehicles.

System malfunctions or warnings are indicated by the following warning lights or beeps.

For vehicles with the type A/type B instrument cluster, check the displayed message for more information and, if necessary, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer), according to the indication.

• KEY Warning Light (Red) Refer to Contact expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

Refer to Taking Action on page 7-47.

- Ignition Not Switched Off (STOP) Warning Beep Refer to Ignition Not Switched Off (STOP) Warning Beep on page 7-58.
- Key Removed from Vehicle Warning Beep

If you have a problem with the key, consult an expert repairer (we recommend an Authorised Mazda Repairer).

If your key is lost or stolen, consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible for a replacement and to make the lost or stolen key inoperative.

## 

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE

- The keyless entry system operation may vary due to local conditions.
- The keyless entry system is fully operational (door/liftgate lock/unlock) when the ignition is switched off. The system does not operate if the ignition is switched to any position other than off.
- If the key does not operate when pressing a button or the operational range becomes too small, the battery may be weak. To install a new battery, refer to Key Battery Replacement (page 6-33).

Refer to Key Removed from Vehicle Warning Beep on page 7-58.


- Battery life is about 1 year. Replace the battery with a new one if the KEY indicator light (green) flashes in the instrument cluster (for vehicles with a type A/type B instrument cluster (page 4-19, 4-37), messages are displayed in the instrument cluster). Replacing the battery about once a year is recommended because the KEY warning light/indicator light may not illuminate or flash depending on the rate of battery depletion.



• Additional keys can be obtained at an expert repairer (we recommend an Authorised Mazda Repairer). Up to 6 keys can be used with the keyless functions per vehicle. Bring all keys to the expert repairer (we recommend an Authorised Mazda Repairer) when additional keys are required.

## ▼ Transmitter

Operation indicator light



## NOTE

- The headlights turn on/off by operating the transmitter. Refer to Leaving Home Light on page 4-84.
- (With theft-deterrent system) The hazard warning lights flash when the theft-deterrent system is armed or turned off.

*Refer to Theft-Deterrent System on page 3-44.* 

• (With the advanced keyless function (European models))

The setting can be changed so that a beep sound is heard for confirmation when the doors and the liftgate are locked/unlocked using the key.

#### (With the advanced keyless function (Except European models))

A beep sound can be heard for confirmation when the doors and the liftgate are locked/unlocked using the key. If you prefer, the beep sound can be turned off.

*The volume of the beep sound can also be changed.* 

Refer to the Settings section in the Mazda Connect Owner's Manual.

*Use the following procedure to change the setting.* 

- 1. Switch the ignition off and close all of the doors and the liftgate.
- 2. Open the driver's door.
- 3. Within 30 seconds of opening the driver's door, press and hold the LOCK button on the key for 5 seconds or longer.

The beep sound activates at the currently set volume. The setting changes each time the LOCK button on the key is pressed and the beep sound activates at the set volume. (If the beep sound has been set to not activate, it will not activate.)

- 4. The setting change is completed by doing any one of the following:
  - Switching the ignition to ACC or ON.
  - · Closing the driver's door.
  - Opening the liftgate.
  - Not operating the key for ten seconds.
  - Pressing any button except the LOCK button on the key.
  - · Pressing a request switch.

The operation indicator light flashes when the buttons are pressed.

## Lock button

To lock the doors and the liftgate, press the lock button and the hazard warning lights will flash once.

# (With the advanced keyless function (Except European models))

A beep sound will be heard once.



## NOTE

## · (European models)

The doors and the liftgate cannot be locked by pressing the lock button while any other door is open. The hazard warning lights will also not flash.

## (Except European models)

The doors and the liftgate cannot be locked by pressing the lock button while any other door or the liftgate is open. The hazard warning lights will also not flash.

- Make sure all doors and the liftgate are locked after pressing the button.
- (With theft-deterrent system) When the doors are locked by pressing the lock button on the key while the theft-deterrent system is armed, the hazard warning lights will flash once to indicate that the system is armed.

## **Unlock button**

To unlock the doors and the liftgate, press the unlock button and the hazard warning lights will flash twice.

## (With the advanced keyless function (Except European models))

A beep sound will be heard twice.



## NOTE

## · (Auto re-lock function)

After unlocking with the key, all doors and the liftgate will automatically lock if any of the following operations are not performed within about 30 seconds. If your vehicle has a theft-deterrent system, the hazard warning lights will flash for confirmation. The time required for the doors to lock automatically can be changed. Refer to the Settings section in the

Mazda Connect Owner's Manual.

 $\cdot$  A door or the liftgate is opened.

• The ignition is switched to any position other than off.

• (With theft-deterrent system) When the doors are unlocked by pressing the unlock button on the key while the theft-deterrent system is turned off, the hazard warning lights will flash twice to indicate that the system is turned off.

## Power liftgate button\*

To open/close the liftgate, press the power liftgate button for one second or longer with the liftgate in the fully closed/open position.

The hazard warning lights flash twice and the liftgate opens/closes after the beep sounds.

Power liftgate button type A



## Intrusion sensor cancel button\*

To cancel the intrusion sensor (part of the theft-deterrent system), press the intrusion sensor cancel button within 20 seconds after pressing the lock button and the hazard warning lights will flash three times.

Refer to Theft-Deterrent System on page 3-44.



## **Power saving function**

By turning on the transmitter power saving function, the advanced keyless entry<sup>\*1</sup> and push button start system functions turn off and the battery power consumption of the transmitter is restricted.

The remote control function is operational by operating the transmitter switch even while the power saving function is turned on. However, the operation indicator light of the transmitter does not turn on/flash.

## Turning on the power saving function

After you have turned on the power saving function according to the following procedure, the hazard warning lights and sound operate<sup>\*1</sup> one time.

- Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light.
- 2. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5 seconds).
- 3. Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash.

## Turning off the power saving function

After you have turned off the power saving function according to the following procedure, the hazard warning lights and sound operate<sup>\*1</sup> one time.

- 1. Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash.
- 2. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light.

- 3. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5 seconds).
- \*1 With the advanced keyless function

## ▼ Operational Range

The system operates only when the driver is in the vehicle or within operational range while the key is being carried.

## **Starting the Engine**


## NOTE

• Starting the engine may be possible even if the key is outside of the vehicle and extremely close to a door and window, however, always start the engine from the driver's seat.

If the vehicle is started and the key is not in the vehicle, the vehicle will not restart after it is shut off and the ignition is switched to off.


• The luggage compartment is out of the assured operational range, however, if the key (transmitter) is operable the engine will start.

### With the advanced keyless function

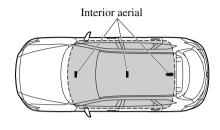

Operational range

## Without the advanced keyless function

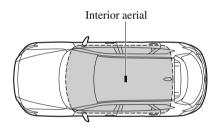

Operational range

## NOTE

The engine may not start if the key is placed in the following areas:

- · Around the instrument panel
- In the storage compartments such as the glove compartment or the centre console

## ▼ Key Suspend Function

If a key is left in the vehicle, the functions of the key left in the vehicle are temporarily suspended to prevent theft of the vehicle.

To restore the functions, press the unlock button on the functions-suspended key in the vehicle.

## Advanced Keyless Entry System\*

## 

# Radio waves from the key may affect medical devices such as pacemakers:

Before using the key near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the key will affect the device.

The advanced keyless function allows you to lock/unlock the door and the liftgate, or open the liftgate while carrying the key.

System malfunctions or warnings are indicated by the following warning beeps.

- Request switch Inoperable Warning Beep
  - Refer to Request Switch Inoperable Warning Beep (With the advanced keyless function) on page 7-58.
- Key Left-in-luggage Compartment Warning Beep Refer to Key Left-in-luggage Compartment Warning Beep (With the advanced keyless function) on page 7-58.
- Key Left-in-vehicle Warning Beep Refer to Key Left-in-vehicle Warning Beep (With the advanced keyless function) on page 7-59.

## NOTE

The advanced keyless entry system functions can be deactivated to prevent any possible adverse effect on a user wearing a pacemaker or other medical device. If the system is deactivated, you will be unable to start the engine by carrying the key. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details. If the advanced keyless entry system has been deactivated, you can start the engine by following the procedure indicated when the key battery goes dead. Refer to Engine Start Function When Key Battery is Dead on page 4-8.

## **Operational Range**


The system operates only when the driver is in the vehicle or within operational range while the key is being carried.

## NOTE


When the battery power is low, or in places where there are high-intensity radio waves or noise, the operational range may become narrower or the system may not operate. For determining battery replacement, Refer to Keyless Entry System on page 3-4.

# ▼ Locking, Unlocking the Doors and the Liftgate

### Lock

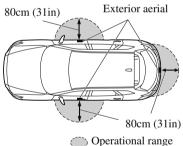


#### Unlock

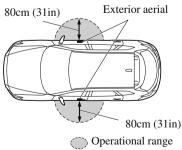

## NOTE

- The system may not operate if you are too close to the windows or door handles, or liftgate.
- If the key is left in the following areas and you leave the vehicle, the doors may be locked depending on the radio wave conditions even if the key is left in the vehicle.
  - · Around the instrument panel
  - In the storage compartments such as the glove compartment or the centre console
  - Next to a communication device such as a mobile phone

## ▼ Opening the Liftgate

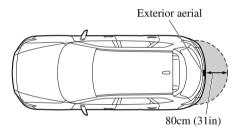

Operational range

## **Door Locks**

## 

# Always take all children and pets with you or leave a responsible person with them:

Leaving a child or a pet unattended in a parked vehicle is dangerous. In hot weather, temperatures inside a vehicle can become high enough to cause brain damage or even death.

### Do not leave the key in your vehicle with children and keep them in a place where your children will not find or play with them:

Leaving children in a vehicle with the key is dangerous. This could result in someone being badly injured or even killed.

#### Keep all doors locked when driving:

Unlocked doors in a moving vehicle are dangerous. Passengers can fall out if a door is accidentally opened and can more easily be thrown out in an accident.

#### Always close all the windows and sunroof, lock the doors and the liftgate and take the key with you when leaving your vehicle unattended:

Leaving your vehicle unlocked is dangerous as children could lock themselves in a hot vehicle, which could result in death. Also, a vehicle left unlocked becomes an easy target for thieves and intruders.

# After closing the doors and the liftgate, always verify that they are securely closed:

Doors and the liftgate not securely closed are dangerous, if the vehicle is driven with a door and the liftgate not securely closed, the door and the liftgate could open unexpectedly resulting in an accident.

# Always confirm the safety around the vehicle before opening a door and the liftgate:

Suddenly opening a door and the liftgate is dangerous. A passing vehicle or a pedestrian could be hit and cause an accident.

## 

Always confirm the conditions around the vehicle before opening/closing the doors and the liftgate and use caution during strong winds or when parked on an incline. Not being aware of the conditions around the vehicle is dangerous because fingers could get caught in the door and the liftgate or a passing pedestrian could be hit, resulting in an unexpected accident or injury.

## NOTE

- Always stop the engine and lock the doors. In addition, to prevent theft of valuables, do not leave them inside the cabin.
- If the key is left in the following areas and you leave the vehicle, the doors may be locked depending on the radio wave conditions even if the key is left in the vehicle.
  - · Around the instrument panel

- In the storage compartments such as the glove compartment or the centre console
- Next to a communication device such as a mobile phone
- The vehicle lock-out prevention feature prevents you from locking yourself out of the vehicle.

### (European models)

All doors and the liftgate will automatically unlock if they are locked using the power door locks with any door open.

If all the doors are closed even though the liftgate is open, all the doors will lock.

## (Except European models)

All doors and the liftgate will automatically unlock if they are locked using the power door locks with any door or the liftgate open.

## • (Door unlock (control) system with collision detection)\*

This system automatically unlocks the doors and the liftgate in the event the vehicle is involved in an accident to allow passengers to get out of the vehicle immediately and prevent being trapped inside. While the ignition is switched ON and in the event the vehicle receives an impact strong enough to inflate the air bags, all the doors and the liftgate are automatically unlocked after about 6 seconds have elapsed from the time of the accident.

The doors and the liftgate may not unlock depending on how an impact is applied, the force of the impact, and other conditions of the accident. If door-related systems or the battery is malfunctioning, the doors and the liftgate may not unlock depending on your vehicle type.

## ▼ Locking, Unlocking with Auxiliary Key

All doors and the liftgate lock automatically when the driver's door is locked using the auxiliary key. They all unlock when the driver's door is unlocked using the auxiliary key.


Turn the auxiliary key toward the front to lock, toward the back to unlock.



## ▼ Locking, Unlocking with Request Switch (With the advanced keyless function)

All doors and the liftgate can be locked/ unlocked by pressing the request switch on the front doors while the key is being carried.

The request switch on the liftgate can only be used to lock all doors and the liftgate.

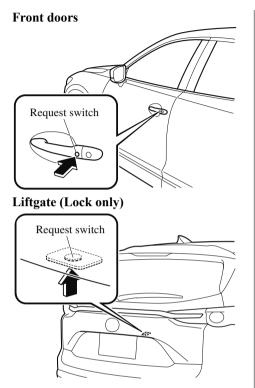

## To lock

To lock the doors and the liftgate, press the request switch and the hazard warning lights will flash once.

## (Except European models)

A beep sound will be heard once.

## <u>To unlock</u>

To unlock the doors and the liftgate, press the request switch on a front door and the hazard warning lights will flash twice.

## (Except European models)

A beep sound will be heard twice.

## NOTE

• Confirm that all doors and the liftgate are securely locked.

For the liftgate, move it without pressing the electric liftgate opener to verify that the liftgate has not been left ajar.

· (European models)

All doors and the liftgate cannot be locked when any door is open.

## (Except European models)

All doors and the liftgate cannot be locked when any door or the liftgate is open.

- It may require a few seconds for the doors to unlock after the request switch is pressed.
- · (European models)

The setting can be changed so that a beep sound is heard for confirmation when the doors and the liftgate are locked/unlocked using a request switch. (Except European models)

#### (Except European models) A beep sound is heard for confirmation

when the doors and the liftgate are locked/unlocked using the request switch. If you prefer, the beep sound can be turned off.

*The volume of the beep sound can also be changed.* 

Refer to the Settings section in the Mazda Connect Owner's Manual. Use the following procedure to change the setting.

- 1. Switch the ignition off and close all of the doors and the liftgate.
- 2. Open the driver's door.
- 3. Within 30 seconds of opening the driver's door, press and hold the LOCK button on the key for 5 seconds or longer.

The beep sound activates at the currently set volume. The setting changes each time the LOCK button on the key is pressed and the beep sound activates at the set volume. (If the beep sound has been set to not activate, it will not activate.)

- 4. The setting change is completed by doing any one of the following:
  - Switching the ignition to ACC or ON.
  - · Closing the driver's door.
  - · Opening the liftgate.
  - Not operating the key for ten seconds.
  - Pressing any button except the LOCK button on the key.
  - · Pressing a request switch.

## · (With theft-deterrent system)

The hazard warning lights flash when the theft-deterrent system is armed or turned off.

*Refer to Theft-Deterrent System on page 3-44.* 

• The setting can be changed so that the doors and the liftgate are locked automatically without pressing the request switch.

Refer to the Settings section in the Mazda Connect Owner's Manual.

## (Walk-away auto lock function)

A beep sound is heard when all doors and the liftgate are closed while the advanced key is being carried. All doors and the liftgate are locked automatically after about three seconds when the advanced key is out of the operational range. Also, the hazard warning lights flash once. (Even if the driver is in the operational range, all doors and the *liftgate are locked automatically after* about 30 seconds.) If you are out of the operational range before the doors and the liftgate are completely closed or another key is left in the vehicle, the walk-away auto lock function will not work. Always make sure that all doors and the liftgate are closed and locked before leaving the vehicle. The walk-away auto lock function does not close the power windows.

## · (Auto re-lock function)

After unlocking with the request switch, all doors and the liftgate will automatically lock if any of the following operations are not performed within about 30 seconds. If your vehicle has a theft-deterrent system, the hazard warning lights will flash for confirmation. The time required for the doors to lock

automatically can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.

- · Opening a door or the liftgate.
- Switching the ignition to any position other than off.


## ▼ Locking, Unlocking with Transmitter

All doors and the liftgate can be locked/ unlocked by operating the keyless entry system transmitter, refer to Keyless Entry System (page 3-4).

## ▼ Locking, Unlocking with Door-Lock Switch\*

All doors and the liftgate lock automatically when the lock side is pressed with all doors and the liftgate closed.

They all unlock when the unlock side is pressed.

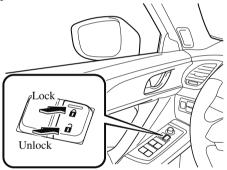

## NOTE

The doors and the liftgate cannot be locked while any other door or the liftgate is open.

## ▼ Auto Lock/Unlock Function\*

## 

# Do not pull the inner handle on a front door:

Pulling the inner handle on a front door while the vehicle is moving is dangerous. Passengers can fall out of the vehicle if the door opens accidentally, which could result in death or serious injury.

- When the vehicle speed exceeds 20 km/h (12 mph), all the doors and liftgate lock automatically.
- When the ignition is switched off, all the doors and liftgate unlock automatically.

The auto lock/unlock function settings can be changed.

Refer to the Settings section in the Mazda Connect Owner's Manual.

## ▼ Locking, Unlocking with Door-Lock Knob

## **Operation from inside**

## (With door-lock switch)


To lock any door from the inside, press the door-lock knob.

To unlock, pull it outward.

This does not operate the other door locks.

## (Without door-lock switch)


All doors and the liftgate lock automatically when the driver's door-lock knob is pressed. They all unlock when the driver's door-lock knob is pulled out.

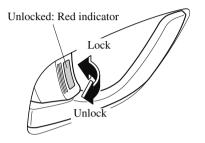

## **Operation from outside**

To lock the rear and front passenger doors with the door-lock knob from the outside, press the door-lock knob to the lock position and close the door (holding the door handle in the open position is not required).

This does not operate the other door locks.

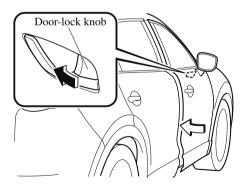

## NOTE


When locking the door this way:

- Be careful not to leave the key inside the vehicle.
- The driver's door lock knob cannot be used while the driver's door is open.

## ▼ Rear Door Child Safety Locks

These locks are intended to help prevent children from accidentally opening the rear doors. Use them on both rear doors whenever a child rides in the rear seat of the vehicle.

If you slide the child safety lock to the lock position before closing that door, the door cannot be opened from the inside. The door can only be opened by pulling the outside handle.

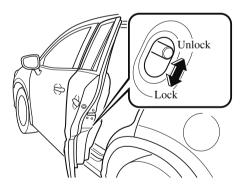

## Liftgate

## 

## Never allow a person to ride in the luggage compartment:

Allowing a person to ride in the luggage compartment is dangerous. The person in the luggage compartment could be seriously injured or killed during sudden braking or a collision.

## Do not drive with the liftgate open:

Exhaust gas in the cabin of a vehicle is dangerous. An open liftgate in a moving vehicle will cause exhaust gas to be drawn into the cabin. This gas contains CO (carbon monoxide), which is colourless, odourless, and highly poisonous, and it can cause loss of consciousness and death. Moreover, an open liftgate could cause occupants to fall out in an accident.


## Do not stack or leave loaded luggage unsecured in the luggage compartment:

Otherwise, the luggage may move or collapse, resulting in injury or an accident. In addition, do not load luggage higher than the seatbacks. It may affect the side or rear field of view.

## 

Before opening the liftgate, remove any snow and ice accumulation on it. Otherwise, the liftgate could close under the weight of the snow and ice resulting in injury.

- Be careful when opening/closing the liftgate during strong winds. If a strong gust blows against the liftgate, it could close suddenly resulting in injury.
- Fully open the liftgate and make sure that it stays open. If the liftgate is only opened partially, it could slam shut by vibration or wind gusts resulting in injury.
- When loading or unloading luggage in the luggage compartment, turn off the engine. Otherwise, you could get burned by the heat of the exhaust gas.
- Be careful not to apply excessive force to the damper stay on the liftgate such as by putting your hand on the stay. Otherwise, the damper stay may bend and affect the liftgate operation.

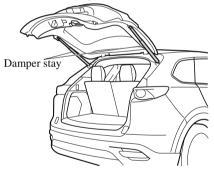


Do not modify or replace the liftgate damper stay. Consult an expert repairer (we recommend an Authorised Mazda Repairer) if a liftgate damper stay is deformed or damaged for reasons such as a collision or if there is some other problem.

## ▼ Opening and Closing the Liftgate

# Opening the liftgate with Electric liftgate opener

Unlock the doors and liftgate, then press the electric liftgate opener on the liftgate and raise the liftgate when the latch releases.

For the power liftgate operation, refer to Power Liftgate on page 3-19.

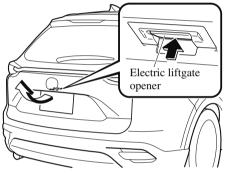

## NOTE (With the advanced keyless function)

- A locked liftgate can also be opened while the key is being carried.
- When opening the liftgate with the doors and the liftgate locked, it may require a few seconds for the liftgate latch to release after the electric liftgate opener is pressed.
- The liftgate can be closed when the doors are locked with the key left in the vehicle. However, to prevent locking the key in the vehicle, the liftgate can be opened by pressing the electric liftgate opener. If the liftgate cannot be opened despite doing this procedure, first push the liftgate completely closed, then press the electric liftgate opener to fully open the liftgate.

 When the liftgate latch is released by pressing the electric liftgate opener, the liftgate raises slightly. If the liftgate is not operated for a certain period of time, the liftgate cannot be raised.
 To open

## Press the electric liftgate opener again. To close

To close the liftgate from its slightly raised position, open it first by pressing the electric liftgate opener, then close it after waiting at least 1 second.

- If the liftgate is not fully closed, the driver is notified by a warning indicated in the instrument cluster.
- If the vehicle battery is dead or there is a malfunction in the electrical system and the liftgate cannot be unlocked, the liftgate can be opened by performing the emergency procedure. Refer to When Liftgate Cannot be

Opened on page 7-63.

## **Closing the liftgate**

Lower the liftgate slowly using the liftgate handle, then push the liftgate closed using both hands.

Do not slam it. Pull up on the liftgate to make sure it is secure.

For the power liftgate operation, refer to Power Liftgate on page 3-19.



## NOTE

Confirm that the liftgate is securely closed. The liftgate, move it without pressing the electric liftgate opener to verify that the liftgate has not been left ajar.

## ▼ Power Liftgate\*

The power liftgate opens/closes electrically by operating the switches in the vehicle or the buttons on the keyless entry system transmitter.

## 

## Be sure to watch the power liftgate as it opens or closes, and make sure that it closes completely:

Opening or closing the power liftgate while not watching it move is dangerous. Because of unseen obstacles and the jam-safe feature, a liftgate may not close completely and, if left unnoticed, could result in serious injury or death if an occupant were to fall out of the vehicle. Always be sure that the area around the liftgate is clear before activating it.

### Always confirm the safety of the area around the power liftgate before operating it electrically.

Not checking the area around the liftgate for people before operating it using the power liftgate switch or the button on the keyless entry system is dangerous. A person could become caught between the liftgate and an obstruction while it is opening electrically or between the liftgate and vehicle while it is closing electrically, resulting in an accident and serious injury.

# Never allow children to operate the power liftgate system:

Allowing children to operate the power liftgate switch and the keyless entry system is dangerous. Children are not aware of the dangers of people getting fingers and hands caught in a moving liftgate. If someone's neck, head or hands get caught in a closing door, it could result in death or serious injury.

## 

When closing the power liftgate, make sure there are no foreign objects around the striker. If foreign objects are obstructing the striker, the liftgate may not close properly.



- Do not install accessories to the power liftgate other than specified accessories. Otherwise, it cannot be opened/closed automatically and could result in a malfunction.
- Be careful when switching the power liftgate from electrical to manual operation. The power liftgate may open/ close unexpectedly depending on its position which could result in injury.

## NOTE

- Do not apply unnecessary force to the power liftgate when it is opening/closing electrically. Unnecessary force on the liftgate may cause it to reverse direction of movement automatically. Also, it could result in a malfunction.
- The power liftgate may not open/close electrically if the vehicle is parked on an incline, or there is strong wind, or the liftgate is laden with snow.

- If a power liftgate system fuse has blown, the liftgate cannot be opened using the power liftgate switch or the electric liftgate opener. Use the emergency lever to open the liftgate.
- Fully close the power liftgate before disconnecting the vehicle battery. If the battery is disconnected with the liftgate open, it cannot be opened or closed automatically after the battery is reconnected. If this happens, fully close the liftgate manually to restore the auto full open/close function.
- If the liftgate is snow-laden, remove the snow before operating the power liftgate. Operating the power liftgate with excessive force applied to the liftgate may damage the liftgate.

## **Operation using the transmitter**

Press the power liftgate button for one second or longer. The hazard warning lights flash twice and the liftgate opens/ closes after the beep sounds. Refer to Transmitter on page 3-5.

## NOTE

- When the ignition is switched ON, the transmitter does not operate.
- When opening the liftgate by pressing the power liftgate button on the transmitter, the liftgate can be opened even when it is locked.
- If the power liftgate button on the transmitter is pressed while the liftgate is opening/closing electrically, the beep is activated and the liftgate stops. When pressing the power liftgate button again, the liftgate moves in the reverse direction.

#### **Operation using each switch**

#### **Operation conditions**

#### **Opening the liftgate**

If the vehicle has satisfied all the following operation conditions, the power liftgate can be opened using the power function.

- All doors and the liftgate are unlocked.
- The ignition is switched OFF, or the selector lever is in P with the ignition switched ON.

#### **Closing the liftgate**

• The ignition is switched OFF, or the selector lever is in P with the ignition switched ON.

#### NOTE

• If the vehicle moves with the selector lever shifted to a position other than P while the liftgate is opening/closing electrically, the liftgate moves as follows:

#### While opening electrically


The buzzer is activated, and the liftgate moves in the reverse direction automatically and closes. When the selector lever is shifted to P, you can resume the power liftgate operation using the switches.

#### While closing electrically

*The buzzer is activated, but the liftgate continues closing.* 

# Operation from the driver's seat (To open/close)

Press the power liftgate switch for about one second or longer while the liftgate is in the fully closed/open position. The hazard warning lights flash twice and the liftgate opens/closes fully after the beep sound is heard.

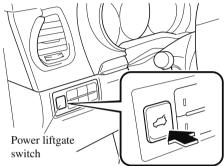


#### **Operation from outside (To open)**

Press the electric liftgate opener on the liftgate and raise the liftgate. The hazard warning lights flash twice and the liftgate opens automatically after the beep sound is heard.


#### (With the advanced keyless function)

A locked liftgate can also be opened while the key is being carried.

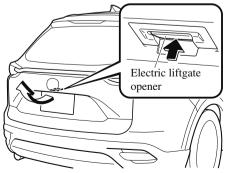

#### **Operation from outside (To close)**

Press the power liftgate close switch while the liftgate is fully opened. The hazard warning lights flash twice and the liftgate closes automatically after the beep sound is heard.

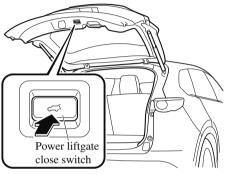

#### NOTE

If the power liftgate switch/power liftgate close switch is pressed or the electric liftgate opener is operated while the liftgate is opening/closing electrically, the beep sound is heard and the liftgate stops. Then, it reverses when any of the switches are pressed again.

#### Hands-free liftgate\*

When the hands-free liftgate sensor on the centre bottom of the rear bumper detects foot movement (kick-activated liftgate), the liftgate opens/closes automatically. The liftgate can be opened/closed even with both hands full, such as when carrying baggage.

#### **Operation conditions**

Do the kicking motion with your foot when all of the following conditions are met while the vehicle is stopped. (When ignition is switched OFF)


#### • You are carrying the transmitter.

• The hands-free liftgate is on.

#### (When ignition is switched ON)

- You are carrying the transmitter.
- The hands-free liftgate is on.
- $\cdot$  The selector lever is in the P position.

#### How to do the kicking motion

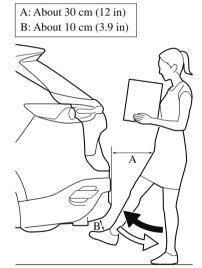

- Stand at the position about 30 cm (12 in) behind the centre of the rear bumper.
- 2. Move your foot to the position about 10 cm (3.9 in) from the centre bottom of the rear bumper.
- 3. Move your foot away from under the bumper within about 1 second after moving it under the bumper.

When the kicking motion is done correctly, the hazard warning lights flash 2 times, a beep sound is activated, and the liftgate opens/closes automatically. Be careful not to contact the liftgate.

If the kicking motion is done while the liftgate is opening/closing automatically, the liftgate will stop. If the kicking motion is done again, the liftgate moves in the direction opposite to the direction it was moving before it stopped.

## 


- Do not do the kicking motion while wearing footwear such as sandals, or with your bare foot. If your foot contacts the hot exhaust pipe, it could cause serious burns.
- Do not do the kicking motion while the area where you are standing is unstable such as a slope or icy road. Otherwise, you could fall down, resulting in injury.
- Do not paint the rear bumper or install any add-on equipment to it. Otherwise, the hands-free liftgate sensor may not operate normally.
- If you are carrying the transmitter around the liftgate or there is another person around the liftgate who is carrying a transmitter, do not allow the following to occur. Otherwise, the hands-free liftgate sensor will operate and the liftgate may open/close unexpectedly resulting in an accident.
  - A person not carrying a transmitter does the kicking motion.
  - While the liftgate is open, a person sitting on the edge of the luggage compartment swings his or her legs.

- Installing/removing the body cover or removing snow around the rear bumper.
- Picking up something which was dropped under the rear bumper.
- Spraying water on the rear bumper using a high water pressure car washer.
- Pushing a shopping cart close to the rear bumper.
- A moving object such as an animal or a ball approaches the rear bumper.

To prevent an unintended operation, place the transmitter outside of its operation range or turn off the hands-free liftgate using the Mazda Connect.

#### NOTE

• The hands-free liftgate sensor detects in a range of about 30 cm (12 in) on both the left and right sides from the centre of the rear bumper.



- The hands-free liftgate sensor may not operate normally under the following conditions.
  - Your foot remains placed within the detection area.
  - You move your foot left and right within the detection area.
  - The kicking motion is too fast or too slow.
  - Your foot contacts the rear bumper when doing the kicking motion.

- You are wearing shoes such as rubber boots which do not conduct electricity well.
- There is equipment emitting strong radio waves near the vehicle.
- The detection area of the hands-free liftgate sensor is dirty.
- When the detection area of the hands-free liftgate sensor is dirty, wipe it off with a clean cloth. Place the transmitter outside of its operation range or wipe off the area around the sensor with a clean cloth after turning off the hands-free liftgate using the Mazda Connect.
- If the operation using the hands-free liftgate sensor is not possible even though the operation conditions are met, consult an expert repairer (we recommend an Authorised Mazda Repairer).

#### Hands-free liftgate ON/OFF switching

The hands-free liftgate can be switched on/off.

To prevent an unintended operation, turn off the function.

Refer to the Settings section in the Mazda Connect Owner's Manual.

# Changing the power liftgate fully open position

The power liftgate fully-open position can be changed according to the height of a garage.

#### When changing the position

- 1. Stop the liftgate at the desired position.
- 2. Press the power liftgate close switch for about three seconds.

A beep sound is activated two times to indicate that the position change has been completed.

#### NOTE

Set the desired fully-open position of the liftgate at the position where it is open more than halfway. The position where it is less than halfway open cannot be set.

#### To reset

- 1. Open the liftgate.
- Press the power liftgate close switch for about seven seconds.
   A beep sound is activated three times to indicated that the reset has been completed.

#### NOTE

After about 3 seconds have elapsed since the switch was pressed, a beep sound is activated 2 times to indicate that the liftgate fully-open position has changed. Continuously press the switch for about 7 seconds to complete the reset.

#### Jam-safe equipment

While the power liftgate is opening/ closing electrically and the system detects a person or an object in the liftgate's path, the liftgate will move in the reverse direction automatically and stops.


## 

# Always check the area around the power liftgate before opening/closing it:

Not checking for occupants and objects around the power liftgate before opening/ closing it is dangerous. The jam-safe equipment is designed to prevent jamming in the event an obstruction is in the liftgate's path. The system may not detect certain objects obstructing the liftgate depending on the way they are positioned and their shape. However, if the jam-safe function detects an obstruction and moves the liftgate in the reverse direction, an occupant in the liftgate's path could be seriously injured.

# 

Sensors are installed on both ends of the power liftgate. Be careful not to allow the sensors to be scratched or damaged by sharp objects, otherwise the liftgate may no longer open/close automatically. In addition, if the sensor is damaged while the liftgate is closing automatically, the system will stop.

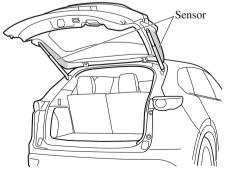

#### NOTE

The jam-safe equipment does not activate during easy closure operation when the power liftgate is between the near-shut position and fully closed position.

When the power liftgate is moving in the open/close direction and an obstruction is detected, the beep sound will be heard and the liftgate moves in the reverse direction and stops.

#### Liftgate easy closure

The Easy Closure system automatically closes the liftgate completely from the near-shut position.

This system also operates when the liftgate is closed manually.

## 

#### When closing a liftgate, always keep hands and fingers away from the liftgate:

Placing hands or fingers around a liftgate is dangerous because the liftgate closes automatically from the near-shut position, which could cause hands and fingers to be pinched and injured.

#### NOTE

- If the electric liftgate opener is pressed while the easy closure function is operating, the liftgate can be opened.
- If the liftgate is opened/closed repeatedly in a short period of time, the easy closure function may not operate. Wait for about 2 seconds and then try again.

### **Fuel and Engine Exhaust Precautions**

#### ▼ Fuel Requirements

Vehicles with catalytic converters or oxygen sensors must use ONLY UNLEADED FUEL, which will reduce exhaust emissions and keep spark plug fouling to a minimum.

 To achieve maximum engine performance, use the specified fuel.

 Fuel
 Research Octane Number
 Country

 Premium unleaded fuel
 Antigua, Armenia, Aruba, Azerbaijan, Bar

Premium unleaded fuel	95 or above	Antigua, Armenia, Aruba, Azerbaijan, Barbados, Belarus, Bolivia, Brunei, Georgia, Grenada, Guatemala, Honduras, Indonesia, Jamaica, Kazakhstan, Lebanon, Madagascar, Malaysia, Mauritius, Mongolia, New Caledonia, Nicara- gua, Russia, Singapore, St. Martin, ST. Vincent, Surinam, Tahiti, Taiwan, Tunisia, UAE, Ukraine, Uruguay, Vanuatu
	92 or above	Egypt, Myanmar
Regular unleaded fuel	90 or above	Angola, B. Virgin, Bahrain, Burundi, Cambodia, Came- roon, Chile, Colombia, Costa Rica, Curacao, Dominican Republic (LHD), Ecuador, El Salvador, Fiji, Gabon, Gha- na, Haiti, Iraq, Ivory Coast, Jordan, Kenya, Kuwait, Laos, Marshall Islands, Mozambique, Nepal, Nigeria, Oman, Panama, Papua New Guinea, Peru, Qatar, Saudi Arabia, Sri Lanka, The Philippines, Trinidad and Tobago, USTT <sup>*1</sup> , Vietnam, Zimbabwe

\*1 Republic of Palau & Federated States of Micronesia

Fuel with a lower rating will negatively affect the emission control system performance and could also cause engine knocking and serious engine damage.



- USE ONLY UNLEADED FUEL. Leaded fuel is harmful to the catalytic converter and oxygen sensors and will lead to deterioration of the emission control system and or failures.
- ➤ The use of E10 fuel with 10 % ethanol is safe for your vehicle. Damage to your vehicle may occur when ethanol exceeds this recommendation.
- Never add fuel system additives other than a Mazda genuine product, otherwise the emission control system could be damaged. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.

#### ▼ Deposit Cleaner

To get the best performance out of our newest-technology SKYACTIV petrol engines, cleaning of deposits adhering to the fuel related system, such as fuel injectors, may be required by using a Mazda genuine deposit cleaner in the specified countries. Refer to Maintenance Table on page 6-4.

## 

- According to the inspection result of scheduled maintenance, Mazda genuine deposit cleaner is to be used. Neglected deposits in the fuel system may cause malfunction indicator light coming on to indicate an engine malfunction, and if the vehicle continues to be driven under this condition, it could result in problems occurring such as idling failure and poor acceleration.
- The Mazda genuine deposit cleaner is not a guarantee of engine performance no matter the quality of the fuel used. When a problem occurs even though the specified fuel is used and the Mazda genuine deposit cleaner is used according to the instructions, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- If a deposit cleaner other than the Mazda genuine product is used, it could result in damage to the fuel system or the engine internally; therefore use only the Mazda genuine product. Mazda genuine deposit cleaner: K002 W0 001A
- If cleaning required according to the inspection result of scheduled maintenance is not done with the Mazda genuine deposit cleaner, repair cost for engine malfunctions caused by deposits are borne by the customer.

#### How to use the cleaner

With the fuel tank full, infuse 1 bottle of Mazda genuine deposit cleaner directly into the fuel tank.

#### NOTE

• Infusing the deposit cleaner when the fuel tank is full provides the concentration of cleaner within the range effective for removing the deposits and the best cleaning results can be obtained by the full tank of fuel with the infused deposit cleaner contacting the deposits for a long period of time until the full tank of fuel is nearly used up.

#### ▼ Emission Control System

This vehicle is equipped with an emission control system (the catalytic converter is part of this system) that enables the vehicle to comply with existing exhaust emissions requirements.

## 

#### Never park over or near anything flammable:

Parking over or near anything flammable, such as dry grass, is dangerous. Even with the engine turned off, the exhaust system remains very hot after normal use and could ignite anything flammable. A resulting fire could cause serious injury or death.

# 

Ignoring the following precautions could cause lead to accumulate on the catalyst inside the converter or cause the converter to get very hot. Either condition will damage the converter and cause poor performance.

- ➤ USE ONLY UNLEADED FUEL.
- > Do not drive your Mazda with any sign of engine malfunction.
- Do not coast with the ignition switched off.
- Do not descend steep grades in gear with the ignition switched off.
- Do not operate the engine at high idle for more than 2 minutes.
- Do not tamper with the emission control system. All inspections and adjustments must be made by a qualified technician.
- > Do not push-start or tow-start this vehicle.

▼ Engine Exhaust (Carbon monoxide)

## 

#### Do not drive your vehicle if you smell exhaust gas inside the vehicle:

Engine exhaust gas is dangerous. This gas contains carbon monoxide (CO), which is colourless, odourless, and poisonous. When inhaled, it can cause loss of consciousness and death. If you smell exhaust gas inside the vehicle, keep all windows fully open and contact an expert repairer (we recommend an Authorised Mazda Repairer) immediately.

#### Do not run the engine when inside an enclosed area:

Running the engine inside an enclosed area, such as a garage, is dangerous. Exhaust gas, which contains poisonous carbon monoxide, could easily enter the cabin. Loss of consciousness or even death could occur.

# Open the windows or adjust the heating or cooling system to draw fresh air when idling the engine:

Exhaust gas is dangerous. When the vehicle is stopped with the windows closed and the engine running for a long time even in an open area, exhaust gas, which contains poisonous carbon monoxide, could enter the cabin. Loss of consciousness or even death could occur.

# Clear snow from underneath and around your vehicle, particularly the tail pipe, before starting the engine:

Running the engine when a vehicle is stopped in deep snow is dangerous. The exhaust pipe could be blocked by the snow, allowing exhaust gas to enter the cabin. Because exhaust gas contains poisonous carbon monoxide, it could cause loss of consciousness or even death to occupants in the cabin.

### Fuel-Filler Flap and Cap

## 

#### When removing the fuel-filler cap, loosen the cap slightly and wait for any hissing to stop, then remove it:

Fuel spray is dangerous. Fuel can burn skin and eyes and cause illness if ingested. Fuel spray is released when there is pressure in the fuel tank and the fuel-filler cap is removed too quickly.

#### Before refuelling, stop the engine, and always keep sparks and flames away from the filler neck:

Fuel vapour is dangerous. It could be ignited by sparks or flames causing serious burns and injuries.

Additionally, use of the incorrect fuel-filler cap or not using a fuel-filler cap may result in a fuel leak, which could result in serious burns or death in an accident.

# Do not continue refuelling after the fuel pump nozzle shuts off automatically:

Continuing to add fuel after the fuel pump nozzle has shut off automatically is dangerous because overfilling the fuel tank may cause fuel overflow or leakage. Fuel overflow and leakage could damage the vehicle and if the fuel ignites it could cause a fire and explosion resulting in serious injury or death.




Always use only a designated Mazda fuel-filler cap or an approved equivalent, available at an expert repairer (we recommend an Authorised Mazda Repairer). The wrong cap can result in a serious malfunction of the fuel and emission control systems.

#### ▼ Refuelling


Before refuelling, close all the doors, windows, and the liftgate, and switch the ignition OFF.

1. To open the fuel-filler flap, pull the remote fuel-filler flap release.

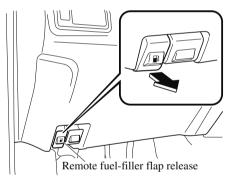


2. To remove the fuel-filler cap, turn it anticlockwise.

3. Attach the removed cap to the inner side of the fuel-filler flap.

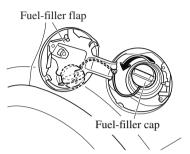

- 4. Insert the refuelling nozzle all the way and begin refuelling. Pull out the refuelling nozzle after the refuelling stops automatically.
- 5. To close the fuel-filler cap, turn it clockwise until a click is heard.
- 6. To close, press the fuel-filler flap until it locks securely.

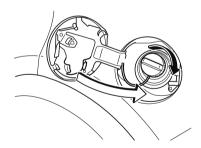

### Mirrors

Before driving, adjust the inside and outside mirrors.

#### ▼ Outside Mirrors


## 

# Be sure to look over your shoulder before changing lanes:

Changing lanes without taking into account the actual distance of the vehicle in the convex mirror is dangerous. You could have a serious accident. What you see in the convex mirror is closer than it appears.

#### NOTE (Driver's Side Wide Angle Mirror\*)

• The wide angle mirror has two curvatures on its surface separated by a region line into outer and inner regions. The inner region is a standard convex mirror whereas the outer region allows for a wider range of visibility within the same sweep. This combination allows for better assurance when making lane changes.

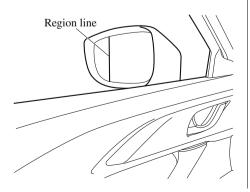


• The perceived distance of objects in the outer and inner regions of the wide angle mirror is different. Objects appearing in the outer region are actually further away than they are in the inner region.

#### Power mirror adjustment

The ignition must be switched to ACC or ON position.

To adjust:

- Rotate the mirror switch to the left L or right R to choose the left or right side mirror.
- 2. Press the mirror switch in the appropriate direction.

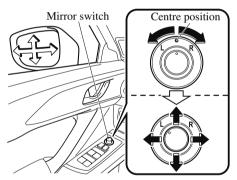

After adjusting the mirror, lock the control by rotating the switch to the centre position.

#### Folding outside mirror

## 

# Always return the outside mirrors to the driving position before you start driving:

Driving with the outside mirrors folded in is dangerous. Your rear view will be restricted, and you could have an accident.

# Do not touch a power folding outside mirror while it is moving:

Touching the power folding outside mirror when it is moving is dangerous. Your hand could be pinched and injured or the mirror could be damaged.

# Use the switch to set the mirror to the on-road position:

Setting the power folding outside mirror to the on-road position by hand is dangerous. The mirror will not lock in position and will prevent effective rearview visibility.


# Only operate the power folding outside mirror with the vehicle safely parked:

Operating the power folding outside mirror while the vehicle is moving is dangerous. Wind blast on the mirror will cause them to collapse and you will be unable to return it to the on-road position, preventing rearview visibility.

The ignition must be switched to ACC or ON position.


#### Type A

To fold, rotate the outside mirror switch. To return the mirror to the driving position, rotate the switch to the centre position.

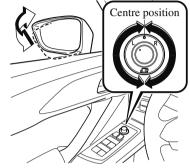

#### Туре В

To fold the mirrors, press the lower side  $\rho$  of the outside mirror folding switch. To return the mirrors to their on-road positions, press the upper side  $\rho$  of the outside mirror folding switch.

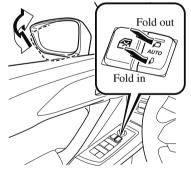

#### Automatic folding function\*

The automatic folding function operates when the ignition is switched to ACC or OFF.

When the outside mirror automatic folding switch is pressed to the AUTO position (neutral position), the outside mirrors automatically fold in and out when the doors are locked and unlocked. Also, when the ignition is switched ON or the engine is started, the outside mirrors fold out automatically.

#### NOTE

The outside mirrors may not fold in and out automatically under cold weather conditions.

If the outside mirrors do not fold in and out automatically, remove any ice or snow, and then press the upper or lower side of the outside mirror automatic folding switch to fold the outside mirrors in or out.

#### **Engine-off outside mirror operation**

The outside mirrors can be operated for about 40 seconds after the ignition is switched from ON to off.

▼ Rearview Mirror




# Do not stack cargo or objects higher than the seatbacks:

Cargo stacked higher than the seatbacks is dangerous. It can block your view in the rearview mirror, which might cause you to hit another car when changing lanes.

#### **Rearview mirror adjustment**

Before driving, adjust the rearview mirror to centre on the scene through the rear window.

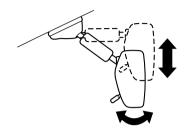


#### NOTE

For the manual antidazzle mirror, perform the adjustment with the antidazzle lever in the day position.

#### Reducing glare from headlights

#### Manual antidazzle mirror

Push the antidazzle lever forward for day driving. Pull it back to reduce glare of headlights from vehicles at the rear.




#### Auto-dimming mirror

The auto-dimming mirror automatically reduces the glare of headlights from vehicles at the rear when the ignition is switched ON.

Press the ON/OFF button & to cancel the auto-dimming function. The indicator light will turn off.


To reactivate the auto-dimming function, press the ON/OFF button  $\phi$ . The indicator light will illuminate.

Туре А

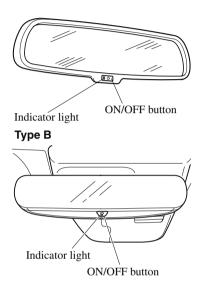

#### NOTE

Do not use glass cleaner or suspend objects on or around the light sensor. Otherwise, light sensor sensitivity will be affected and may not operate normally.

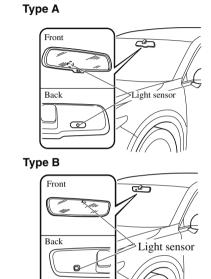

The auto-dimming function is cancelled when the ignition is switched ON and the selector lever is in reverse (R).

### **Power Windows**

The windows can be opened/closed by operating the power window switches.



#### Make sure the opening is clear before closing a window:

Closing a power window is dangerous. A person's hands, head, or even neck could be caught by the window and result in serious injury or even death. This warning applies especially to children.

#### Never allow children to play with power window switches:

Power window switches that are not locked with the power window lock switch would allow children to operate power windows unintentionally, which could result in serious injury if a child's hands, head or neck becomes caught by the window.

# Make sure nothing blocks the window just before it reaches the fully closed position or while fully holding up the power window switch:

Blocking the power window just before it reaches the fully closed position or while fully holding up the power window switch is dangerous.


In this case, the jam-safe function cannot prevent the window from closing all the way. If fingers are caught, serious injuries could occur.

#### NOTE

When driving with only 1 of the rear windows open, your ears might experience a resonating sound. However, this does not indicate a problem. The sound can be reduced by slightly opening a front window or by changing the size of the rear window opening.

#### ▼ Opening/Closing Windows

The window opens while the switch is pressed and it closes while the switch is pulled up with the ignition switched ON. Do not open or close 3 or more windows at the same time. The front passenger's side and rear windows can be opened/closed when the power window lock switch on the driver's door is in the unlock position. Keep this switch in the locked position while children are in the vehicle.

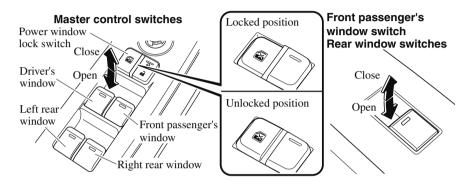

#### NOTE

- A power window may no longer open/close if you continue to press the switch after fully opening/closing the power window. If the power window does not open/close, wait a moment and then operate the switch again.
- The passenger windows may be opened or closed using the master control switches on the driver's door.
- The power window can be operated for about 40 seconds after the ignition is switched from ON to ACC or off with all doors closed. If any door is opened, the power window will stop operating.

For engine-off operation of the power window, the switch must be held up firmly throughout window closure because the auto-closing function will be inoperable.

• When the power window lock switch is in the locked position, the light on each power window switch, except for the driver's power window switch, turns off. The light may be difficult to see depending on the surrounding brightness.

#### ▼ Auto-opening/Closing

To fully open the window automatically, press the switch completely down, then release. The window will fully open automatically.

To fully close the window automatically, pull the switch completely up, then release. The window will fully close automatically.

To stop the window partway, pull or press the switch in the opposite direction and then release it.

#### NOTE

# Power window system initialization procedure

If the battery was disconnected during vehicle maintenance, or for other reasons (such as a switch continues to be operated after the window is fully open/closed), the window will not fully open and close automatically.

The power window auto function will only resume on a power window that has been reset.

- 1. Switch the ignition ON.
- Make sure that the power window lock switch located on the driver's door is not depressed.
- 3. Press the switch and fully open the window.
- 4. Pull up the switch to fully close the window and continue holding the switch for about 2 seconds after the window fully closed.
- 5. Make sure that the power windows operate correctly using the door switches.

#### ▼ Jam-safe Window

If foreign matter is detected between the window and the window frame while the window is closing automatically (refer to Auto-opening/Closing on page 3-38), the window stops closing and automatically opens partway.

#### NOTE

- The jam-safe function may operate under the following conditions:
  - A strong impact is detected while the window is closing automatically.
  - Window is closing automatically in very low temperatures.
- In the event the jam-safe function activates and the power window cannot be closed automatically, pull and hold the switch and the window will close.
- The jam-safe window function does not operate until the system has been reset.

### Sunroof\*

The sunroof can be opened or closed when operating the overhead tilt/slide switch at the front seats.

## 

#### Do not let passengers stand up or extend part of the body through the open sunroof while the vehicle is moving:

Extending the head, arms, or other parts of the body through the sunroof is dangerous. The head or arms could hit something while the vehicle is moving. This could cause serious injury or death.

#### Never allow children to play with the tilt/ slide switch:

The tilt/slide switch would allow children to operate the sunroof unintentionally, which could result in serious injury if a child's hands, head or neck becomes caught by the sunroof.

# Make sure the opening is clear before closing the sunroof:

A closing sunroof is dangerous. The hands, head, or even neck of a person, especially a child, could be caught in it as it closes, causing serious injury or even death.

# Make sure nothing blocks the sunroof just before it reaches the fully closed position:

Blocking the sunroof just before it reaches the closed position is dangerous. In this case, the jam-safe function cannot prevent the sunroof from closing. If fingers are caught, serious injuries could occur.


## 

- Do not sit on or put heavy items on the area where the sunroof opens and closes. Otherwise, the sunroof could be damaged.
- Do not open or close the sunroof forcefully during freezing temperatures or snowfall. Otherwise, the sunroof could be damaged.
- The sunshade does not tilt. To avoid damaging the sunshade, do not push it up.
- Do not close the sunshade while the sunroof is opening. Trying to force the sunshade closed could damage it.

#### ▼ Tilt/Slide Operation

The sunroof can be opened or closed electrically only when the ignition is switched ON.

- Before leaving the vehicle or washing your Mazda, make sure the sunroof is completely closed so that water does not get inside the cabin area.
- After washing your Mazda or after it rains, wipe the water off the sunroof before operating it to avoid water penetration which could cause rust and water damage to your headliner.

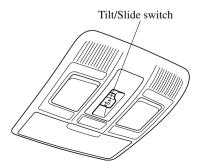

#### **Tilt Operation**


The rear of the sunroof can be tilted open to provide more ventilation.

To fully tilt automatically, momentarily press the tilt/slide switch.

To fully close automatically, momentarily press the tilt/slide switch in the forward direction.

To stop tilting partway, press the tilt/slide switch.

When the sunroof is already slid open and you want to tilt it open, first close the sunroof and then do a tilt operation.

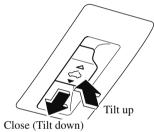


#### **Slide Operation**

To fully open automatically, momentarily press the tilt/slide switch in the backward direction.

To fully close automatically, momentarily press the tilt/slide switch in the forward direction.

To stop sliding partway, press the tilt/slide switch.

When the sunroof is already tilted open and you want to slide it open, first close the sunroof and then do a slide operation.

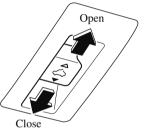

#### NOTE

*If the sunroof does not operate normally, do the following procedure:* 

- 1. Switch the ignition ON.
- 2. Press the tilt switch, to partially tilt open the rear of the sunroof.
- 3. Repeat Step 2. The rear of the sunroof tilts open to the fully open position, then closes a little.

If the reset procedure is performed while the sunroof is in the slide position (partially open) it will close before the rear tilt opens.

#### ▼ Jam-safe Sunroof

If a person's hands, head or an object blocks the sunroof while it is closing, the sunroof will stop and move in the open direction.


#### NOTE

- The jam-safe function may operate under the following conditions:
  - A strong impact is detected while the sunroof is closing automatically.
  - The sunroof is closing automatically during very low temperatures.
- In the event the jam-safe function activates and the sunroof cannot be closed automatically, press the tilt/slide switch and the sunroof will close.
- The jam-safe sunroof function does not operate until the system has been reset.

### ▼ Sunshade

The sunshade can be opened and closed by hand.

The sunshade opens at the same time as the sunroof slides open, but it must be closed by hand.

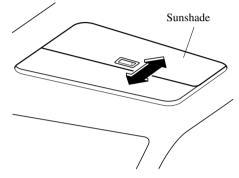

### Modification and Add-On Equipment

Mazda cannot guarantee the immobilizer and the theft-deterrent systems' operation if the system has been modified or if any add-on equipment has been installed.

# 

To avoid damage to the vehicle, do not modify the system or install any add-on equipment to the immobilizer and the theft-deterrent systems or the vehicle.

### **Immobilizer System**

The immobilizer system allows the engine to start only with a key the system recognises.

If someone attempts to start the engine with an unrecognised key, the engine will not start, thereby helping to prevent vehicle theft.

If you have a problem with the immobilizer system or the key, consult an expert repairer (we recommend an Authorised Mazda Repairer).

## 

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- To avoid damage to the key, do not:
  - Drop the key.
  - Get the key wet.
  - Expose the key to any kind of magnetic field.
  - Expose the key to high temperatures on places such as the instrument panel or bonnet, under direct sunlight.
- If the engine does not start with the correct key, and the security indicator light keeps illuminating or flashing, the system may have a malfunction. Consult an expert repairer (we recommend an Authorised Mazda Repairer).

#### NOTE

- The keys carry a unique electronic code. For this reason, and to assure your safety, obtaining a replacement key requires some waiting time. They are only available through an expert repairer (we recommend an Authorised Mazda Repairer).
- Always keep a spare key in case one is lost. If a key is lost, consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
- If you lose a key, an expert repairer (we recommend an Authorised Mazda Repairer), will reset the electronic codes of your remaining keys and immobilizer system. Bring all the remaining keys to the expert repairer (we recommend an Authorised Mazda Repairer) to reset. Starting the vehicle with a key that has not been reset is not possible.

#### ▼ Operation

#### NOTE

- The engine may not start and security indicator light may illuminate or flash if the key is placed in an area where it is difficult for the system to detect the signal, such as on the instrument panel or in the glove compartment. Move the key to a location within the signal range, switch the ignition off, and then restart the engine.
- Signals from a TV or radio station, or from a transceiver or mobile telephone could interfere with your immobilizer system. If you are using the proper key and the engine fails to start, check the security indicator light.

#### Arming

The system is armed when the ignition is switched from ON to off. The security indicator light in the instrument cluster flashes every 2 seconds until the system is disarmed.



#### Disarming

The system is disarmed when the ignition is switched ON with the correct programmed key. The security indicator light illuminates for about 3 seconds and then turns off. If the engine does not start with the correct key, and the security indicator light remains illuminated or flashing, try the following: Make sure the key is within the operational range for signal transmission. Switch the ignition off, and then restart the engine. If the engine does not start after 3 or more tries, contact an expert repairer (we recommend an Authorised Mazda Repairer).

#### NOTE

• If the security indicator light flashes continuously while you are driving, do not shut off the engine. Go to an expert repairer (we recommend an Authorised Mazda Repairer), and have it checked. If the engine is shut off while the indicator light is flashing, you will not be able to restart it.

#### Before Driving Security System

• Because the electronic codes are reset when the immobilizer system is repaired, the keys are needed. Make sure to bring all the keys to an expert repairer (we recommend an Authorised Mazda Repairer), so that they can be programmed.

### **Theft-Deterrent System**\*

If the theft-deterrent system detects an inappropriate entry into the vehicle or the intrusion sensor detects movement in the vehicle which could result in the vehicle (with the intrusion sensor) or its contents being stolen, the alarm alerts the surrounding area of an abnormality by sounding the siren/horn and flashing the hazard warning lights.

The system will not function unless it's properly armed. So when you leave the vehicle, follow the arming procedure correctly.

#### Intrusion sensor\*

The intrusion sensor uses ultrasonic waves to detect movement inside the vehicle and to raise an alert of an intrusion into the vehicle.


The intrusion sensor detects certain kinds of movement inside the vehicle, however, it may also respond to phenomenon outside the vehicle such as vibrations, loud noise, wind, and air currents.

## 

In order for the intrusion sensor to operate appropriately, be aware of the following:

- Do not hang clothing or objects from a head restraint or a coat hook.
- Return the extension sunvisors to their original positions.
- Do not blind the intrusion sensor by covering it or placing objects over it.
- Do not allow the intrusion sensor to get soiled or wipe it with a liquid.

- Do not shock or cause an impact to the intrusion sensor or the intrusion sensor bezel.
- Do not install seats that are not Mazda genuine products.
- To prevent obstruction of intrusion sensor, do not place objects or cargo near the intrusion sensor that are higher than the head restraints.

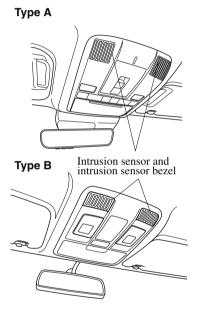

### ▼ Operation

#### Siren/Horn triggering conditions

The siren/horn sounds intermittently and the hazard warning lights flash for about 30 seconds when the system is triggered by any one of the following:

- Unlocking a door with the auxiliary key or an inside door-lock knob.
- Forcing open a door, the bonnet or the liftgate.

- Opening the bonnet by operating the bonnet release handle.
- Switching the ignition ON without using the push button start.
- (With the intrusion sensor) The intrusion sensor detects a movement in the vehicle.

The system will be triggered again (up to 10 times) if one of the above conditions remains.

 $\cdot$  (With the intrusion sensor)

Disconnecting the battery terminal (the hazard warning lights do not flash).

The system will be triggered about 10 times.

#### NOTE

- The liftgate does not open while the theft-deterrent system is operating.
- For vehicles equipped with the power liftgate, the liftgate can be opened even while the theft-deterrent system is operating by pressing the power liftgate button on the transmitter or the electric liftgate opener switch while carrying the key.
- If the battery goes dead while the theft-deterrent system is armed, the siren/horn will activate and the hazard warning lights will flash when the battery is charged or replaced.

#### ▼ How to Arm the System

1. Close the windows and the sunroof\* securely.

#### NOTE

#### (With the intrusion sensor)

Even with a window or the sunroof<sup>\*</sup> open, the system can be armed, however, leaving the windows or the sunroof<sup>\*</sup> even partially open can invite theft, and wind blowing into the vehicle could trigger the alarm. The intrusion sensor function can also be cancelled. Refer to Cancelling the Intrusion Sensor (With Intrusion Sensor) on page 3-47.

- 2. Switch the ignition OFF.
- 3. Make sure the bonnet, the doors, and the liftgate are closed.
- Press the lock button on the transmitter or lock the driver's door from the outside with the auxiliary key. The hazard warning lights will flash once.

(With the advanced keyless function) Press a request switch.

The security indicator light in the instrument cluster flashes twice per second for 20 seconds.



5. After 20 seconds, the system is fully armed.

#### NOTE

- The theft-deterrent system can also be armed by activating the auto relock function with all the doors, the liftgate and the bonnet closed. Refer to Transmitter on page 3-5.
- The system will disarm if one of the following operations takes place within 20 seconds after pressing the lock button:
  - Unlocking any door.
  - $\cdot$  Opening any door.
  - $\cdot$  Opening the bonnet.
  - Switching the ignition ON.

*To rearm the system, do the arming procedure again.* 

• When the doors are locked by pressing the lock button on the transmitter or using the auxiliary key while the theft-deterrent system is armed, the hazard warning lights will flash once to indicate that the system is armed.

#### ▼ Cancelling the Intrusion Sensor (With Intrusion Sensor)

If the theft deterrent system has been armed while any of the following conditions are present, cancel the intrusion sensor to prevent the alarm from triggering unnecessarily.

- Leaving the vehicle with a movable object, passengers or pets remaining inside.
- Leaving an object inside the vehicle that can roll around, such as when the vehicle is placed on a tilting, unstable surface when being shipped.
- Hanging small objects/accessories in the vehicle, hanging clothing on a coat hook, or placing other items which can move easily inside the vehicle.
- Parking in an area where there is strong vibration or loud noise.
- When using a high pressure or automatic car wash.
- Continuous shock and vibration from hail or thunder and lightning is transmitted to the vehicle.
- Doors are locked with a window or the sunroof\* left open.
- An accessory heater or device that produces moving air and vibration operates while the theft deterrent system is armed.

#### NOTE

If any door or the liftgate remains closed for 30 seconds, all the doors and the liftgate automatically re-lock and the theft deterrent system arms even if a window and the sunroof<sup>\*</sup> is left open. To cancel the intrusion sensor, press the intrusion sensor cancel button on the transmitter within 20 seconds after pressing the lock button.

The hazard warning lights will flash 3 times.

#### NOTE

- To reactivate the intrusion sensor, turn off the armed theft-deterrent system and then rearm it.
- The intrusion sensor is operational when the theft-deterrent system is armed. To cancel the intrusion sensor, press the intrusion sensor cancel button each time the theft-deterrent system is armed.

#### ▼ To Turn Off an Armed System

An armed system can be turned off using any one of the following methods:

- Pressing the unlock button on the transmitter.
- Starting the engine with the push button start.
- $\cdot$  (With the advanced keyless function)
  - Pressing a request switch on the doors.

The hazard warning lights will flash twice.

#### NOTE

When the doors are unlocked by pressing the unlock button on the transmitter while the theft-deterrent system is turned off, the hazard warning lights will flash twice to indicate that the system is turned off.

#### ▼ To Stop the Alarm

A triggered alarm can be turned off using any one of the following methods:

- Pressing the unlock button on the transmitter.
- Starting the engine with the push button start.
- $\cdot$  (With the advanced keyless function)
  - Pressing a request switch on the doors.
  - Pressing the electric liftgate opener while the key is being carried.
  - Pressing the power liftgate button on the transmitter.

The hazard warning lights will flash twice.

### **Running-In Period**

No special running-in is necessary, but a few precautions in the first 1,000 km (600 miles) may add to the performance, economy, and life of the vehicle.

- · Do not race the engine.
- Do not maintain one constant speed, either slow or fast, for a long period of time.
- Do not drive constantly at full-throttle or high engine rpm for extended periods of time.
- · Avoid unnecessary hard stops.
- · Avoid full-throttle starts.
- $\cdot$  Do not tow a trailer.

### Saving Fuel and Protection of the Environment

How you operate your Mazda determines how far it will travel on a tank of fuel. Use these suggestions to help save fuel and reduce CO<sub>2</sub>.

- Avoid long warm-ups. Once the engine runs smoothly, begin driving.
- · Avoid fast starts.
- · Drive at lower speeds.
- Anticipate when to apply the brakes (avoid sudden braking).
- Follow the maintenance schedule (page 6-3) and have an expert repairer (we recommend an Authorised Mazda Repairer) perform inspections and servicing.
- Use the air conditioner only when necessary.
- · Slow down on rough roads.
- Keep the tyres properly inflated.
- · Do not carry unnecessary weight.
- Do not rest your foot on the brake pedal while driving.
- · Keep the wheels in correct alignment.
- · Keep windows closed at high speeds.
- Slow down when driving in crosswinds and headwinds.

### 🕂 WARNING

# Never stop the engine when going down a hill:

Stopping the engine when going down a hill is dangerous. This causes the loss of power steering and power brake control, and may cause damage to the drivetrain. Any loss of steering or braking control could cause an accident.

### **Hazardous Driving**

## 

# Be extremely careful if it is necessary to downshift on slippery surfaces:

Downshifting into lower gear while driving on slippery surfaces is dangerous. The sudden change in tyre speed could cause the tyres to skid. This could lead to loss of vehicle control and an accident.

#### Avoid sharp turns, excessive speed and abrupt manoeuvres when driving this vehicle:

Sharp turns, excessive speed and abrupt manoeuvring of this vehicle are dangerous as it could result in the increased risk of loss of vehicle control, vehicle roll-over, personal injury or death.

This vehicle has a higher centre of gravity. Vehicles with a higher centre of gravity such as utility vehicles handle differently than vehicles with a lower centre of gravity. Utility vehicles are not designed for cornering at high speeds any more than low profile sports cars are designed to perform satisfactorily under off-road conditions.

In addition, utility vehicles have a significantly higher rollover rate than other types of vehicles.

In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt.

When driving on ice or in water, snow, mud, sand, or similar hazards:

- Be cautious and allow extra distance for braking.
- Avoid sudden braking and sudden manoeuvring.
- Do not pump the brakes. Continue to press down on the brake pedal. Refer to Antilock Brake System (ABS) on page 4-108.
- If you get stuck, select a lower gear and accelerate slowly. Do not spin the front wheels.
- For more traction in starting on slippery surfaces such as ice or packed snow, use sand, rock salt, chains, carpeting, or other nonslip material under the front wheels.

#### NOTE

Use snow chains only on the front wheels.

### **Floor Mat**

We recommend the use of Genuine Mazda floor mats.



#### Make sure the floor mats are secured with the grommets or the retainers to prevent them from bunching up under the foot pedals (Driver's side):

Using a floor mat that is not secured is dangerous as it will interfere with the accelerator and brake pedal operation (driver's side), which could result in an accident.

Only use a floor mat which conforms to the shape of the floor on the driver's side and make sure it is oriented correctly.


Secure the floor mat using the grommets or retainers.

There are various ways to secure floor mats depending on the type used, therefore secure the mat according to the type. After installing the floor mat, make sure that it does not slide from side to side or back and forth, and that there is sufficient clearance with the accelerator and brake pedals on the driver's side.

After removing the floor mat for cleaning or some other reason, always securely reinstall it while paying attention to the precautions just mentioned.

# Do not install two floor mats, one on top of the other, on the driver's side:

Installing two floor mats, one on top of the other, on the driver's side is dangerous as the retention pins can only keep one floor mat from sliding forward. Loose floor mat(s) will interfere with the foot pedals and could result in an accident. If using an all-weather mat for winter use always remove the original floor mat.

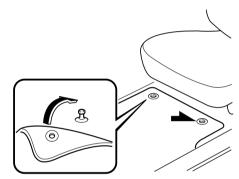

When setting a floor mat, position the floor mat so that its grommets or retainers are inserted over the pointed end of the retention posts.

### **Rocking the Vehicle**

## 

#### Do not spin the wheels at high speed, and do not allow anyone to stand behind a wheel when pushing the vehicle:

When the vehicle is stuck, spinning the wheels at high speed is dangerous. The spinning tyre could overheat and explode. This could cause serious injuries.



Too much rocking may cause engine overheating, transaxle failure, and tyre damage.

If you must rock the vehicle to free it from snow, sand or mud, depress the accelerator slightly and slowly move the selector lever from D to R position.

### Winter Driving

Carry emergency gear, including tyre chains, window scraper, flares, a small shovel, jumper leads, and a small bag of sand or salt.

Ask an expert repairer (we recommend an Authorised Mazda Repairer) to check the following:

- Have the proper ratio of antifreeze in the radiator.
- Refer to Engine Coolant on page 6-22.
- Inspect the battery and its leads. Cold reduces battery capacity.
- Use an engine oil appropriate for the lowest ambient temperatures that the vehicle will be driven in (page 6-19).
- Inspect the ignition system for damage and loose connections.
- Use washer fluid made with antifreeze—but do not use engine coolant antifreeze for washer fluid (page 6-24).

#### NOTE

- Remove snow before driving. Snow left on the windscreen is dangerous as it could obstruct vision.
- Do not apply excessive force to a window scraper when removing ice or frozen snow on the mirror glass and windscreen.
- Never use warm or hot water for removing snow or ice from windows and mirrors as it could result in the glass cracking.

• Drive slowly. Braking performance can be adversely affected if snow or ice adheres to the brake components. If this situation occurs, drive the vehicle slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal.

▼ Snow Tyres

## 

#### Use only the same size and type tyres (snow, radial, or non-radial) on all 4 wheels:

Using tyres different in size or type is dangerous. Your vehicle's handling could be greatly affected and result in an accident.

# 

Check local regulations before using studded tyres.

#### NOTE

If your vehicle is equipped with the tyre pressure monitoring system, the system may not function correctly when using tyres with steel wire reinforcement in the sidewalls (page 4-247).

#### Use snow tyres on all 4 wheels

Do not exceed the maximum permissible speed for your snow tyres or legal speed limits.

#### ▼ Tyre Chains

Check local regulations before using tyre chains.

## 

- > Chains may affect handling.
- Do not go faster than 50 km/h (30 mph) or the chain manufacturer's recommended limit, whichever is lower.
- Drive carefully and avoid bumps, holes, and sharp turns.
- ➤ Avoid locked-wheel braking.
- Do not use chains on a temporary spare tyre; it may result in damage to the vehicle and to the tyre.
- Do not use chains on roads that are free of snow or ice. The tyres and chains could be damaged.
- Chains may scratch or chip aluminium wheels.


#### NOTE

- If your vehicle is equipped with the tyre pressure monitoring system, the system may not function correctly when using tyre chains.
- Use of tyre chains on a vehicle equipped with P255/50R20 (Left-hand drive model)/255/50R20 (Right-hand drive model) specification tyres could cause interference with the vehicle body and scratching. If tyre chains are to be used, replace both front and rear tyres with P255/60R18 (Left-hand drive model)/ 255/60R18 (Right-hand drive model) tyres. Please consult an expert repairer (we recommend an Authorised Mazda Repairer).

Install the chains on the front tyres only. Do not use chains on the rear tyres.

#### Tyre chain selection (Europe)

Mazda recommends hexagon type steel ring chains. Select the proper type according to your tyre size.

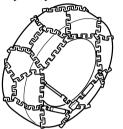

Tyre size	Tyre chain
255/60R18	Hexagon type
P255/60R18	Hexagon type

#### NOTE

Although Mazda recommends hexagon type steel ring chains, all chains within the installation specifications may be used.

#### Installation specification (Europe)

When installing tyre chains, the distance between the tyre tread and the chain must be within the prescribed limits in the following table.

Distance [Unit: mm (in)]			
Α	В		
MAX 13 (0.51)	MAX 13 (0.51)		
Side view	A B Tyre Cross section view		

#### Installing the chains

- 1. Secure the chains on the front tyres as tightly as possible. Always follow the chain manufacturer's instructions.
- 2. Retighten the chains after driving 1/2-1 km (1/4-1/2 mile).

### **Driving In Flooded Area**

## 

Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal:

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.



Do not drive the vehicle on flooded roads as it could cause short circuiting of electrical/electronic parts, or engine damage or stalling from water absorption. If the vehicle has been immersed in water, consult an expert repairer (we recommend an Authorised Mazda Repairer).

### **Turbocharger Information**

## 

- After driving at freeway speeds or up a long hill, trailer towing for a long time, idle the engine at least 30 seconds before stopping it. Otherwise, the turbocharger could be damaged.
- ➢ Racing or over-revving the engine, particularly after it's just been started, can damage the turbocharger.
- > To protect the engine from damage, the engine is designed so that it cannot be raced just after starting it in extremely cold weather.

The turbocharger greatly enhances engine power. Its advanced design provides improved operation and requires minimum maintenance.

To get the most from it, observe the following.

- 1. Change engine oil and filter according to Scheduled Maintenance (page 6-3).
- 2. Use only recommended engine oil (page 6-19). Extra additives are NOT recommended.

# **Towing Caravans and Trailers (Russia)**

Your Mazda was designed and built primarily to carry passengers and cargo.

If you tow a trailer, follow these instructions because driver and passenger safety depends on proper equipment and safe driving habits. Towing a trailer will affect handling, braking, durability, performance, and economy.

Never overload vehicle or trailer. Consult an expert repairer (we recommend an Authorised Mazda Repairer) if you need further details.

# 

Do not tow a trailer during the first 1,000 km (600 miles) of your new Mazda. If you do, you may damage the engine, transaxle, differential, wheel bearings, and other power train components.

### NOTE

Your vehicle is equipped with a Trailer Stability Control (TSC) mechanism, which enhances vehicle stability when towing a trailer. Refer to Trailer Stability Control (TSC) on page 4-112.

## ▼ Weight Limits

The total trailer weight, gross combination weight and trailer nose weight must be within the prescribed limits in the Trailer Towing-Load Table.

### TOTAL TRAILER WEIGHT:



Sum of weights of the trailer and its load.

### **GROSS COMBINATION WEIGHT:**



Sum of total trailer weight and towing vehicle weight; including trailer hitch, vehicle passengers, and vehicle load.

### TRAILER NOSE WEIGHT:



The weight exerted on the trailer tongue. It is varied by changing the weight distribution when loading the trailer.



Be aware of the towing load weight differences when towing at high altitudes. For altitudes exceeding 1,000 meter (3,280 ft 10 in), always reduce the towing load by 10% for every 1,000 meter (3,280 ft 10 in) increase in altitude from the load indicated under the gross combination weight heading in the maximum trailer towing-load table. If the determined maximum total towing load weight is exceeded, the engine and other power train parts may be damaged.

### Maximum trailer towing-load table

#### Gradient up to 12%

TOTAL TRAILER WEIGHT		GROSS COMBINATION WEIGHT
Trailer without brake	Trailer with brake	Trailer with brake
750 kg (1,653.4 lb)	2,500 kg (5,511.5 lb)	5,062 kg (1,1159.6 lb)

TRAILER NOSE WEIGHT: 100 kg (220.4 lb)

# 

**Always keep tow loads within specified limits as indicated in the Trailer Towing-Load Table:** Attempting to tow loads greater than those specified is dangerous as it may cause serious handling and performance problems that could result in personal injury or vehicle damage, or both.

# Always keep the trailer nose weight within the specified limits in the Trailer Towing-Load Table:

Loading the trailer with more weight in the rear than in the front is dangerous. This could cause loss of vehicle control and an accident.

### NOTE

- The total trailer weight and nose weight can be determined by weighing the trailer on platform scales at a highway weighing station or a trucking company.
- Appropriate total trailer weight and nose weight may prevent the danger of trailer sway from crosswinds, rough roads, or other causes.


## ▼ Trailer Hitch

When towing a trailer, use an appropriate trailer hitch. We recommend using a genuine Mazda trailer hitch. Use the original holes drilled by the vehicle manufacturer for securing

the trailer hitch. Contact your expert repairer (we recommend an Authorised Mazda Repairer), for more information.

Do not install a trailer hitch that is not easy to remove or reposition if there is the possibility that a part of the trailer hitch partially obscures the lighting system and/or rear number plate. If a trailer hitch that is easy to remove or reposition is installed, make sure to remove or reposition it when it is not in use.

Trailer hitch installation area

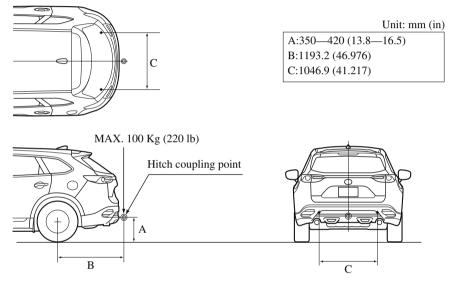

## ▼ Tyres

When towing a trailer, make sure that the tyre pressures of the rear tyres are at least 20 kPa (0.2 bar, 2.9 psi) higher than the recommended tyre pressures indicated on the tyre pressure chart on the driver's door frame.

Trailer tyre size, load rating, and inflation pressures should conform to tyre manufacturer specifications.

# 

### Never use the temporary spare tyre when towing:

Using the temporary spare tyre on your vehicle when towing a trailer is dangerous as it could result in tyre failure, loss of control, and injury to vehicle occupants.

### ▼ Safety Chains

Safety chains must be used as a precautionary measure should the trailer become unintentionally unhitched. They should cross under the trailer tongue and attach to the hitch. Leave enough slack to allow full turns. Consult literature published by your trailer or hitch manufacturer for more details.

# 

# Make sure the safety chain is securely attached to both the trailer and the vehicle prior to departure:

Towing a trailer without using a safety chain securely attached to both the trailer and the vehicle is dangerous. If damage occurs to the coupling unit or hitch ball, the trailer could wander into another lane and cause a collision.

# ▼ Trailer Lights

# 

Do not connect a trailer lighting system directly to the lighting system of your Mazda. This may damage your vehicle's electrical system and lighting systems. To connect the lighting system, consult an expert repairer (we recommend an Authorised Mazda Repairer).

## ▼ Trailer Brakes

Check the Maximum trailer towing-load table in Weight Limits (page 3-57), and if your trailer weight exceeds the value in the TOTAL TRAILER WEIGHT (Trailer without brake), trailer brakes are required.

If your trailer has brakes, make sure they meet regulations.

# 

### Do not connect a hydraulic trailer-brake system to your vehicle's brake system:

Connecting a hydraulic trailer-brake system directly to the vehicle brake system is dangerous and will result in inadequate braking and possible injury.

## ▼ Trailer Towing Tips

### Before driving

• Verify that your Mazda maintains a near-normal attitude when a loaded or unloaded trailer is connected. Do not drive if it has an abnormal front-up or front-down position. Inspect

for incorrect nose weight, worn suspension parts, and trailer overloading. Have the vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

- $\cdot$  Make sure the trailer cargo is secure to prevent it from shifting.
- $\boldsymbol{\cdot}$  Make sure the mirrors meet all government regulations. Inspect them.
- Before starting out, inspect the operation of all vehicle and trailer lights and all vehicle-to-trailer connections. Stop and re-inspect all lights and connections after driving a short distance.

### Driving

- Your Mazda will handle differently with a trailer in tow, so practice turning, backing, and stopping in a traffic-free area.
- $\cdot$  Take time to get accustomed to the extra weight and length.
- Do not exceed 100 km/h (62 mph) with a trailer in tow. If the local legal maximum speed with a trailer in tow is less than 100 km/h (62 mph), do not exceed the legal speed.

# 

If the vehicle exceeds 100 km/h (62 mph) with a trailer in tow, the vehicle could be damaged.

- When ascending a hill, shift into a lower gear to reduce the possibility of overloading or overheating the engine, or both.
- When descending a hill, shift into a lower gear and use engine compression as a braking effect. Pay constant attention to speed and use the brakes only as needed. Holding the brake pedal down for a prolonged period may cause the brakes to overheat and lose power.

## Parking

Avoid parking on an incline with a trailer. If this must be done, follow these instructions.

### Parking on an Incline

- 1. Set the parking brake and the brakes.
- 2. Have someone block the wheels of the vehicle and trailer while you apply the brakes.
- 3. After the wheels are blocked, release the parking brake and the brakes slowly, allowing the blocks to bear the load.
- 4. Set the parking brake firmly.
- 5. If the vehicle has an automatic transaxle, put the selector lever in P position. If it has a manual transaxle, place the gear shift in 1 or R position.

## Starting on an Incline

- 1. Start the engine (page 4-5).
- 2. Release the parking brake and slowly pull away a short distance from the wheel blocks.

3. Stop on the nearest level ground, set the parking brake, and pick up the wheel blocks.

# 4

# When Driving

Information concerning safer driving and stopping.

Start/Stop Engine	4-4
Ignition Switch	
Starting the Engine	4-5
Turning the Engine Off	
i-stop	

### Instrument Cluster and Display.....

Instrument Cluster and	
Display	4-18
Instrument Cluster (Type A)	4-19
Instrument Cluster (Type B)	4-37
Instrument Cluster (Type C)	4-54
Active Driving Display*	4-67

### Automatic Transaxle...... 4-69

Automatic Transaxle	
Controls	4-69
Shift-Lock System	4-70
Transaxle Ranges	4-71
Manual Shift Mode	4-73
Direct Mode	4-78
Driving Tips	4-79

## Switches and Controls......4-80

Headlight Washer*	4-93
Rear Window Defogger	
Horn	4-95
Hazard Warning Flasher	4-95

Brake	4-97
Brake System	4-97
AUTOHOLD	4-102
Emergency Stop Signal	
System	4-106
Hill Launch Assist (HLA)	

#### ABS/TCS/DSC/Trailer Stability Control (TSC)/Off-Road Traction

Assist	.4-108
Antilock Brake System	
(ABS)	.4-108
Traction Control System	
(TCS)	. 4-109
Dynamic Stability Control	
(DSC)	. 4-111
Trailer Stability Control (TSC)	*
	. 4-112
Off-Road Traction Assist*	. 4-113

### 

Power Steering	4-119
Power Steering	4-119

i-ACTIVSENSE4-120
i-ACTIVSENSE*4-120
Adaptive LED Headlights
(ALH)*4-123
Blind Spot Monitoring (BSM)*
Traffic Sign Recognition System
(TSR)* 4-131
Distance Recognition Support
System (DRSS)*4-137
Driver Attention Alert (DAA)*
Rear Cross Traffic Alert (RCTA)*
Mazda Radar Cruise Control
(MRCC)* 4-147
Mazda Radar Cruise Control with
Stop & Go function (MRCC with
Stop & Go function)*4-158
Lane-keep Assist System (LAS) &
Lane Departure Warning System
(LDWS)* 4-173
Advanced Smart City Brake Support
(Advanced SCBS)*4-189
Smart City Brake Support [Forward]
(SCBS F)*4-192
Smart City Brake Support [Reverse]
(SCBS R)*4-195

Smart Brake Support (SBS)*4-199
360° View Monitor*
Forward Sensing Camera (FSC)*
4-228
Radar Sensor (Front)*
Radar Sensor (Tont)
Ultrasonic Sensor (Rear)*4-238
Front Camera/Side Cameras/Rear
Camera*
Cruise Control 4-240
Cruise Control*4-240
Tyre Pressure Monitoring
System4-245
Tyre Pressure Monitoring
System*4-245

Rear View Monitor	4-249
Rear View Monitor*	.4-249

Parking Sensor	System	
Parking Sens	sor System*	




# **Ignition Switch**

## ▼ Push Button Start Positions

The system operates only when the key is within operational range.

Each time the push button start is pressed, the ignition switches in the order of off, ACC, and ON. Pressing the push button start again from ON switches the ignition off.

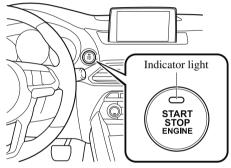

### NOTE

- The engine starts by pressing the push button start while depressing the brake pedal. To switch the ignition position, press the push button start without depressing the pedal.
- Do not leave the ignition switched ON while the engine is not running. Doing so could result in the battery going dead. If the selector lever is in the P position, and the ignition is in ACC, the ignition switches off automatically after about 25 minutes.

## Off

The power supply to electrical devices turns off and the push button start indicator light (amber) also turns off. In this position the steering wheel is locked.

# 

#### Before leaving the driver's seat, always switch the ignition off, set the parking brake, and make sure the selector lever is in P position:

Leaving the driver's seat without switching the ignition off, setting the parking brake, and shifting the selector lever to P position is dangerous. Unexpected vehicle movement could occur which could result in an accident.

In addition, if your intention is to leave the vehicle for even a short period, it is important to switch the ignition off, as leaving it in another position will disable some of the vehicle's security systems and run the battery down.

## NOTE

### (Locked steering wheel)

If the push button start indicator light (green) is flashing and the beep sound is heard, this indicates that the steering wheel is not unlocked. To unlock the steering wheel, press the push button start while moving the steering wheel left and right.

## ACC (Accessory)

Some electrical accessories will operate and the indicator light (amber) illuminates. In this position the steering wheel is unlocked.

## NOTE

The keyless entry system does not function while the push button start has been pressed to ACC, and the doors will not lock/unlock even if they have been locked manually.

### ON

This is the normal running position after the engine is started. The indicator light (amber) turns off. (The indicator light (amber) illuminates when the ignition is switched ON and the engine is not running.)

Some indicator lights/warning lights should be inspected before the engine is started (page 4-18).

### NOTE

When the push button start is pressed to ON, the sound of the fuel pump motor operating near the fuel tank can be heard. This does not indicate an abnormality.

# **Starting the Engine**

# 

Radio waves from the key may affect medical devices such as pacemakers:

Before using the key near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the key will affect the device.

### NOTE

- The key must be carried because the key carries an immobilizer chip that must communicate with the engine controls at short range.
- The engine can be started when the push button start is pressed from off, ACC, or ON.
- The push button start system functions (function which can start the engine by only carrying the key) can be deactivated to prevent any possible adverse effect on a user wearing a pacemaker or other medical device. If the system is deactivated, you will be unable to start the engine by carrying the key. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details. If the push button start system functions have been deactivated, you can start the engine by following the procedure indicated when the key battery goes dead. Refer to Engine Start Function When Key Battery is Dead on page 4-8. • After starting a cold engine, the engine speed increases and a whining sound from the engine compartment can be heard.

# When Driving Start/Stop Engine


This is for improved exhaust gas purification and does not indicate any parts defect.

- 1. Make sure you are carrying the key.
- 2. Occupants should fasten their seat belts.
- 3. Make sure the parking brake is on.
- 4. Continue to press the brake pedal firmly until the engine has completely started.
- 5. Put the vehicle in park (P). If you must restart the engine while the vehicle is moving, shift into neutral (N).

### NOTE

The starter will not operate if the selector lever is not in P or N position and the brake pedal is not depressed sufficiently.

6. Verify that the KEY indicator light (green) (if equipped) in the instrument cluster and the push button start indicator light (green) illuminate.

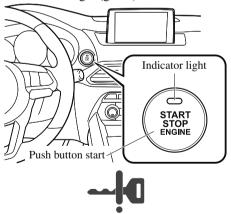

### NOTE

- If the push button start indicator light (green) flashes, make sure that the key is being carried (for vehicles with a type A/type B instrument cluster (page 7-36), messages are displayed in the instrument cluster).
- If the push button start indicator light (green) flashes with the key being carried, touch the key to the push button start and start the engine (for vehicles with a type A/ type B instrument cluster (page 7-36), messages are displayed in the instrument cluster). Refer to Engine Start Function When Key Battery is Dead on page 4-8.

# 

If the KEY warning light (red) illuminates, or the push button start indicator light (amber) flashes, this could indicate a problem with the engine starting system. This may prevent the engine from starting or from switching the ignition to ACC or ON (for vehicles with a type A/type B instrument cluster (page 7-36), messages are displayed in the instrument cluster). Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

### NOTE

- Under the following conditions, the KEY warning light (red) flashes after the push button start is pressed. This informs the driver that the push button start will not switch to ACC, even if it is pressed from off (for vehicles with a type A/type B instrument cluster (page 7-36), messages are displayed in the instrument cluster).
  - · The key battery is dead.
  - The key is out of operational range.
  - The key is placed in areas where it is difficult for the system to detect the signal (page 3-8).
  - A key from another manufacturer similar to the key is in the operational range.
- · (Forced engine starting method) If the KEY warning light (red) illuminates, or the push button start indicator light (amber) flashes, this could indicate that the engine may not start using the usual starting *method (for vehicles with a type A/* type B instrument cluster (page 7-36), messages are displayed in the instrument cluster). Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible. If this occurs, the engine can be force-started. Press and hold the push button start until the engine starts. Other procedures necessary for starting the engine, such as having the key in the cabin, and depressing the brake pedal are required.

- When the engine is force-started, the KEY warning light (red) (if equipped) remains illuminated and the push button start indicator light (amber) remains flashing.
- When the selector lever is in the neutral (N) position, the KEY indicator light (green) (if equipped) and the push button start indicator light (green) do not illuminate.
- 7. Press the push button start after both the KEY indicator light (green) (if equipped) in the instrument cluster and the push button start indicator light (green) illuminate.

### NOTE

- After starting the engine, the push button start indicator light (amber) turns off and the ignition switches to the ON position.
- After pressing the push button start and before the engine starts, the operation sound of the fuel pump motor from near the fuel tank can be heard, however, this does not indicate a malfunction.
- After starting the engine, let it idle for about 10 seconds (Prohibited in Germany).

### NOTE

- Do not use high engine speeds until reaching the operating temperature.
- (Germany) Drive immediately after start the engine.
- Whether the engine is cold or warm, it should be started without the use of the accelerator.

## When Driving Start/Stop Engine

- If the engine does not start the first time, refer to Starting a Flooded Engine under Emergency Starting. If the engine still does not start, have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) (page 7-29).
- ▼ Engine Start Function When Key Battery is Dead

# 

When starting the engine by holding the transmitter over the push button start due to a dead key battery or a malfunctioning key, be careful not to allow the following, otherwise the signal from the key will not be received correctly and the engine may not start.

Metal parts of other keys or metal objects touch the key.





Spare keys or keys for other vehicles equipped with an immobilizer system touch or come near the key.






Devices for electronic purchases, or security passage touch or come near the key.

If the engine cannot be started due to a dead key battery, the engine can be started using the following procedure:

- 1. Continue to depress the brake pedal firmly until the engine has completely started.
- 2. Make sure that the push button start indication light (green) flashes.

### 3. <u>Type A</u>

Touch the push button start using the backside of the key (as shown) while the push button start indicator light (green) flashes.

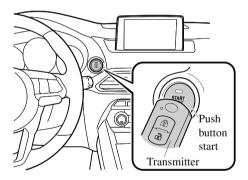


## NOTE

When touching the push button start using the backside of the key as shown in the illustration, touch the push button start with the lock switch side of the key facing up.

## Type B

Align the centre area of the emblem on the transmitter with the centre area of the push button start while the push button start indicator light (green) flashes.

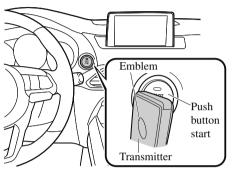

- 4. Make sure that the push button start indicator light (green) turns on.
- 5. Press the push button start to start the engine.

## NOTE

- The engine cannot be started unless the brake pedal is fully depressed.
- If there is a malfunction with the push button start function, the push button start indicator light (amber) flashes. In this case, the engine may start, however, have the vehicle checked at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
- If the push button start indicator light (green) does not illuminate, perform the operation from the beginning again. If it does not illuminate, have the vehicle checked at an expert repairer (we recommend an Authorised Mazda Repairer).

- To switch the ignition position without starting the engine, perform the following operations after the push button start indicator light (green) turns on.
  - *I. Release the brake pedal.*
  - 2. Press the push button start to switch the ignition position. The ignition switches in the order of ACC, ON, and off each time the push button start is pressed. To switch the ignition position again, perform the operation from the beginning.

# ▼ Emergency Operation for Starting the Engine

If the KEY warning light (red) illuminates, or the push button start indicator light (amber) flashes, this could indicate that the engine may not start using the usual starting method (for vehicles with a type A/type B instrument cluster (page 7-36), messages are displayed in the instrument cluster). Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible. If this occurs, the engine can be force-started. Press and hold the push button start until the engine starts. Other procedures necessary for starting the engine such as having the key in the cabin, and depressing the brake pedal are required.

# **Turning the Engine Off**

# 

# Do not stop the engine while the vehicle is moving:

Stopping the engine while the vehicle is moving for any reason other than in an emergency is dangerous. Stopping the engine while the vehicle is moving will result in reduced braking ability due to the loss of power braking, which could cause an accident and serious injury.

- 1. Stop the vehicle completely.
- 2. Shift the selector lever to the P position and set the parking brake.
- 3. Press the push button start to turn off the engine. The ignition position is off.

# 

When leaving the vehicle, make sure the push button start is off.

### NOTE

- The cooling fan in the engine compartment could turn on for a few minutes after the ignition is switched from ON to OFF, whether or not the A/C is on or off, to cool the engine compartment quickly.
- If the system detects that the remaining battery power of the key is low when the ignition is switched from ON to ACC or OFF, the following is indicated. Replace with a new battery before the key becomes unusable. Refer to Key Battery Replacement on page 6-33.

# (Vehicle equipped with Type A/B instrument cluster)

A message is indicated in the display of the instrument cluster.

(Vehicle equipped with Type C instrument cluster)

The KEY indicator light (green) flashes for approximately 30 seconds. Refer to Taking Action on page 7-47.

• If the engine is turned off while the selector lever is in a position other than *P*, the ignition switches to ACC.

## ▼ Emergency Engine Stop

Continuously pressing the push button start or quickly pressing it any number of times while the engine is running or the vehicle is being driven will turn the engine off immediately. The ignition switches to ACC.


# i-stop

The i-stop function automatically stops the engine when the vehicle is stopped at a traffic light or stuck in traffic, and then restarts the engine automatically to resume driving. The system provides improved fuel economy, reduced exhaust gas emissions, and eliminates idling noise while the engine is stopped.

### Engine idle stopping and restarting

### NOTE

- The i-stop indicator light (green) turns on under the following conditions:
  - · When engine idling is stopped.

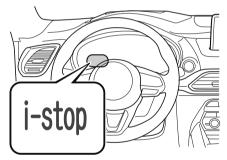

• The i-stop indicator light (green) turns off when the engine is restarted.

### (AUTOHOLD operation turned off and When not using Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function))

1. Engine idling stops when the brake pedal is depressed while the vehicle is driven (except for driving in the R or M position second gear fixed mode) and the vehicle is stopped.

- 2. The engine restarts automatically when the brake pedal is released with the selector lever in the D or M position (not in second gear fixed mode).
- 3. If the selector lever is in the N or P position, the engine does not restart when the brake pedal is released. The engine restarts when the brake pedal is depressed again or the selector lever is shifted to the D, M (not in second gear fixed mode) or the R position. (For the purposes of safety, always keep the brake pedal depressed when shifting the selector lever while engine idling is stopped.)

### (When the vehicle is stopped by the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) stop hold control)

- When the vehicle is stopped by the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function), engine idling stops and continues to be stopped without depressing the brake pedal.
- 2. When the accelerator pedal is depressed or the RES switch is operated while the vehicle is kept stopped by the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function), the engine automatically restarts. The engine restarts automatically when the accelerator pedal is depressed with the selector lever in the D/M position (not in second gear fixed mode).

# (When the vehicle is stopped by the AUTOHOLD function)

- 1. When the brake pedal is depressed while the vehicle is being driven (except for driving in the R or M position second gear fixed mode) and the vehicle is brought to a stop, the i-stop function will operate and it continues to operate even if the brake is released.
- 2. The engine restarts automatically when the accelerator pedal is depressed with the selector lever in the D/M position (not in second gear fixed mode).
- 3. If the selector lever is in the N or P position, the engine does not restart when the brake pedal is released. The engine restarts when the brake pedal is depressed again or the selector lever is shifted to the D, M (not in second gear fixed mode) or the R position. (For the purposes of safety, always keep the brake pedal depressed when shifting the selector lever while engine idling is stopped.)

### **Operation conditions**

### When the system is operable

Under the following conditions, the i-stop indicator light (green) turns on and engine idling stops.

- $\cdot$  The engine is warmed up.
- The engine has been started and the vehicle is driven for a certain period.
- The engine is started with the bonnet closed.
- $\cdot$  The battery is in good condition.
- All doors, liftgate, and bonnet are closed.
- $\cdot$  The driver's seat belt is fastened.

- The air conditioner is not operating with the airflow mode in the  $\widehat{W}$  position.
- The temperature setting dial for the air-conditioning is set to a position other than maximum heating or maximum cooling (A/C ON).
- The vehicle's interior temperature and the set temperature for the air conditioner are nearly the same.
- The i-stop warning light (amber) is not turned on/flashing.
- The keyless entry & push button start system functions are normal.
- The brake vacuum is sufficiently high.
- The steering wheel is not being operated.
- · The vehicle is stopped.
- The selector lever is in the D or M position (not in second gear fixed mode).
- The automatic transaxle fluid has warmed up sufficiently.
- The automatic transaxle fluid temperature is not abnormally high.
- The steering wheel is almost in the straight-ahead position (idling may not stop even with the steering wheel in the straight-ahead position if force is applied to the steering wheel. Release the force applied to the steering wheel to stop engine idling).
- The vehicle is stopped by depressing the brake pedal.
- Emergency braking is not applied.
- When the vehicle is stopped by the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) stop hold control (vehicles with Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function).

### When the system is not operable

Engine idling does not stop in the following conditions:

- The vehicle is stopped but the engine is kept idling.
- The air conditioner is operating with the airflow mode in the  $\widehat{W}$  position.
- The temperature setting dial for the air-conditioning is set to the maximum heating or maximum cooling (A/C ON) position.
- There is a large difference between the cabin temperature and the set temperature of the air conditioner.
- The ambient temperature is extremely high or low.
- The atmospheric pressure is low (when driving at high altitudes).
- The vehicle is stopped on a steep incline.
- The steering wheel is not in the straight-ahead position while the vehicle is stopped.

### NOTE

# Under the following conditions, a period of time is required to stop engine idling

- The battery power is depleted for some reasons such as the vehicle has not been driven for a long period.
- The ambient temperature is high or low.
- After the battery terminals are disconnected for some reasons such as for battery replacement.

# Engine-stop period is short or time until next engine idle stop is long

- The ambient temperature is high or low.
- The battery power is depleted.

• Power consumption by the vehicle's electrical parts is high.

# Engine restarts automatically while engine idling is stopped

Under the following conditions, the engine restarts automatically.

- The i-stop OFF switch is pressed until the beep sounds.
- The air conditioner is operated with the airflow mode in the  $\widehat{W}$  position.
- The temperature setting dial of the air conditioner is set to maximum heating or maximum cooling (A/C ON).
- The cabin temperature is largely different from the set temperature of the air conditioner.
- The brakes are released slightly on a slope and the vehicle begins to move.
- Two minutes have elapsed since the idling was stopped.
- The battery power is depleted.
- The accelerator pedal is depressed with the selector lever in the D or M (not in second gear fixed mode) position.
- The selector lever is shifted to the R position.
- The selector lever is shifted from N or P position to D or M (not in second gear fixed mode) position.
- The steering wheel is operated with the selector lever in the D or M (not in second gear fixed mode) position.
- The selector lever is in the M position and the second gear fixed mode is selected.

### · (Except European model)

#### · (Manual transaxle)

With the shift lever in the neutral position, the driver's seat belt is unfastened, the driver's door is opened, or the bonnet is opened.

• (Automatic transaxle) With the selector lever in the P or N position, or the D/M range, the driver's seat belt is unfastened, the driver's door is opened, or the bonnet is opened.


# Selector lever is operated while engine idling is stopped

If the selector lever is shifted from D or M (not in second gear fixed mode) position to N or P position while engine idling is stopped, the engine does not restart even when the brake pedal is released. The engine will restart if the brake pedal is depressed again or the selector lever is shifted to the D, M (not in second gear fixed mode), or R position. (For the purposes of safety, always keep the brake *pedal depressed when shifting the selector* lever while engine idling is stopped.) *If the selector lever is shifted from the D* or M (not in second gear fixed mode) to the N or P position, and the driver's seat belt is unfastened or the driver's door is opened, the engine restarts.

### Battery terminals are disconnected

Engine idling may not stop right after the battery terminals are disconnected. In addition, if the battery is replaced, the *i-stop* functions must be verified. Consult an expert repairer (we recommend an Authorised Mazda Repairer).

### ▼ i-stop OFF Switch

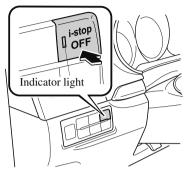

By pressing the switch until a beep sounds, the i-stop function is turned off and the i-stop warning light (amber) in the instrument cluster turns on. By pressing the switch again until the beep sounds, the i-stop function becomes operational and the i-stop warning light (amber) turns off.


### NOTE

If the engine is stopped with the i-stop function cancelled, the i-stop function becomes operational when the engine is started the next time.

### ▼ Vehicle Roll Prevention Function

Vehicles with the i-stop function are equipped with a vehicle roll prevention function. This function prevents the vehicle from rolling, such as when releasing the brake pedal while on a slope under the following conditions:

- While engine idling is stopped (prevents the vehicle from rolling back)
- When the engine restarts after releasing the brake pedal (prevents the vehicle's sudden movement due to vehicle creep), sudden movement of the vehicle is prevented by controlling the brakes.

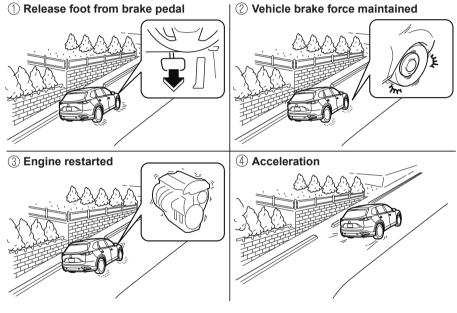

# 

### Do not rely completely on the vehicle roll prevention function.

The vehicle roll prevention function is a supplementary function which operates for a maximum of 2 seconds after releasing the brake pedal from an engine idling stop condition. Over reliance on the system may result in an unexpected accident if the vehicle were to suddenly accelerate. Before starting to drive the vehicle, always confirm the safety of the surroundings and operate the selector lever, brake pedal, and accelerator pedal appropriately. Note that the vehicle may move suddenly depending on the vehicle's load or if it is towing something.

- Note that the vehicle may move suddenly after the vehicle roll prevention function is released while the vehicle is under the following conditions:
  - > The selector lever is in the N position.
  - ➢ If the selector lever is shifted to the N position and the brake pedal is released while the i-stop function is operating, the brake force is gradually released. To accelerate the vehicle, release the brake pedal after the engine restarts and shift the selector lever to a position other than the N position.

### NOTE

- When the vehicle is stopped on a steep grade, the vehicle roll prevention function does not operate because engine idling is not stopped.
- The brake pedal response may change, sound may occur from the brakes, or the brake pedal could vibrate from the operation of the vehicle roll prevention function. However, this does not indicate a malfunction.

## ▼ i-stop Warning Light (Amber)/i-stop Indicator Light (Green)



To ensure safe and comfortable use of the vehicle, the i-stop system constantly monitors the driver's operations, the vehicle's interior and exterior environment, and the operational status of the vehicle, and uses the i-stop warning light (amber) and i-stop indicator light (green) to inform the driver of various cautions and warnings.

### NOTE

On vehicles equipped with the centre display, the i-stop operation status is displayed in the fuel monitor control status display.

Refer to the Applications section in the Mazda Connect Owner's Manual.

### i-stop warning light (amber)

### When the light is turned on

- The light turns on when the ignition is switched ON and turns off when the engine is started.
- The light turns on when the i-stop OFF switch is pressed and the system is turned off.
- The light turns on if the following operations are performed while engine idling is stopped. In such cases, the engine does not restart automatically to ensure safety. Start the engine using the normal method.
  - $\cdot$  The bonnet is opened.
  - With the selector lever in the D or M (not in second gear fixed mode) position, the driver's seat belt is unfastened and the driver's door is opened.

• If the i-stop warning light (amber) remains on while the engine is running, the battery performance may have decreased. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

### NOTE

A problem in the system may be indicated under the following conditions. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

- The light does not turn on when the ignition is switched ON.
- The light continues to remain on even though the i-stop OFF switch has been pressed while the engine is running.

### When the light is flashing


The light continues to flash if the system has a malfunction. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

#### i-stop indicator light (green)


#### When the light is turned on

• The light turns on while engine idling is stopped and turns off when the engine is restarted.

# Instrument Cluster and Display

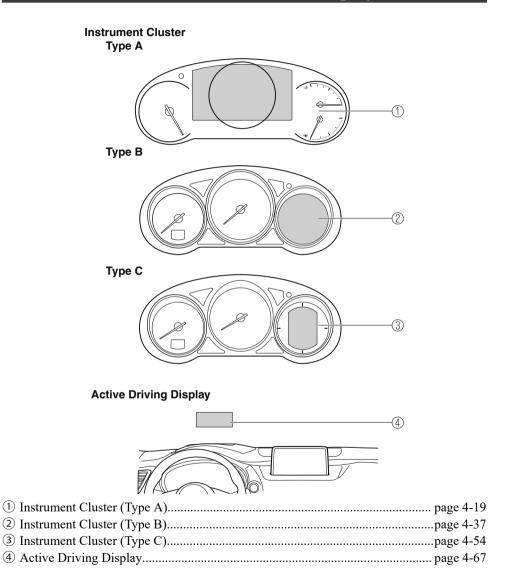

# Instrument Cluster (Type A)

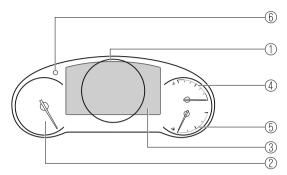

① Speedometer	page 4-19
2 Tachometer	
③ Multi-information Display (Type A)	
(4) Engine Coolant Temperature Gauge	page 4-23
5 Fuel Gauge	page 4-24
6 Instrument Panel Illumination	page 4-24

### ▼ Speedometer

The speedometer indicates the speed of the vehicle.


### ▼ Tachometer

The tachometer shows engine speed in thousands of revolutions per minute (rpm).

# 

Do not run the engine with the tachometer needle in the RED ZONE.


This may cause severe engine damage.

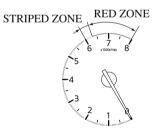

### NOTE


When the tachometer needle enters the STRIPED ZONE, this indicates to the driver that the gears should be shifted before entering the RED ZONE.

### ▼ Multi-information Display (Type A)

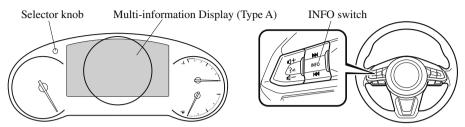

The multi-information display indicates the following information.

- · Speedometer
- $\cdot$  Odometer
- Trip meter
- $\cdot$  Outside temperature
- · Distance-to-empty
- $\cdot$  Average fuel economy
- · Current fuel economy
- Maintenance Monitor
- $\cdot$  Blind Spot Monitoring (BSM) Display
- Traffic Sign Recognition System (TSR) Display
- Distance Recognition Support System (DRSS) Display
- $\cdot$  Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System Display
- · Mazda Radar Cruise Control (MRCC) Display
- · Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Display
- · Cruise Control Display
- · Vehicle Speed Alarm
- · Door-Ajar/Liftgate-Ajar Warning Indication
- $\cdot$  Message Display

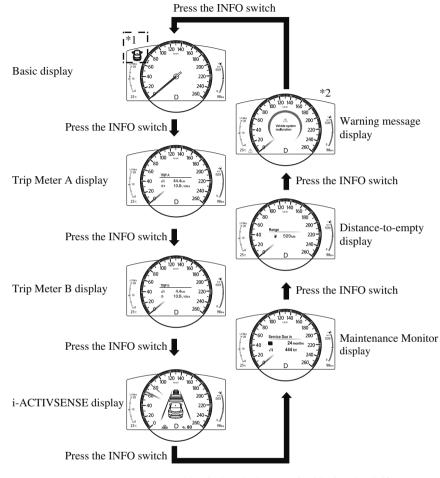


The screen content changes each time the INFO switch is pressed.

\*1: Displayed when opening/closing door/Liftgate.


\*2: Displayed only when a warning occurs.

The screen content changes each time the instrument panel illumination knob is pressed and held.

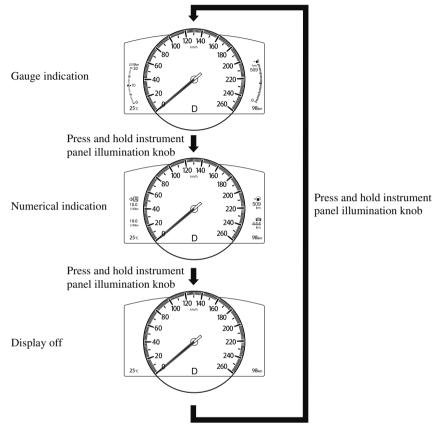

### ▼ Odometer, Trip Meter and Trip Meter Selector

The odometer is constantly displayed on the screen when the ignition is switched ON, and the TRIP A or TRIP B screen can be displayed by operating the INFO switch.

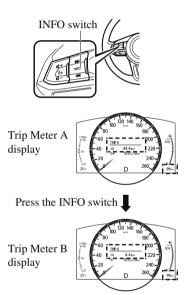

### Odometer

The odometer records the total distance the vehicle has been driven.

### Trip meter

The driving distance for a specified interval is indicated. Two types (TRIP A, TRIP B) of interval distance and the average fuel economy for each can be measured. For instance, trip meter A can record the distance from the point of origin, and trip meter B can record the distance from where the fuel tank is filled.

When trip meter A is selected, TRIP A will be displayed. When trip meter B is selected, TRIP B will be displayed.


The trip meter and average fuel economy can be reset by pressing the INFO switch for 1.5 seconds or more while in each mode.

### NOTE

- Only the trip meters record tenths of kilometres (miles).
- The trip record will be erased when:
  - The power supply is interrupted (blown fuse or the battery is disconnected).
  - The vehicle is driven over 9999.9 km (mile).

## ▼ Engine Coolant Temperature Gauge

Displays the engine coolant temperature. The blue range of the gauge indicates that the engine coolant temperature is low, and the red range of the gauge indicates that the engine coolant temperature is high and overheating.




# 

If the engine coolant temperature gauge needle is in the red range, there is the possibility of overheating. Drive slowly to reduce engine load until you can find a safe place to stop the vehicle and wait for the engine to cool down. Refer to Overheating on page 7-30.

## ▼ Fuel Gauge

The fuel gauge shows approximately how much fuel is remaining in the tank when the ignition is switched ON. We recommend keeping the tank over 1/4 full.

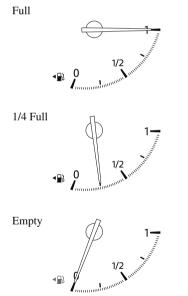

If the low fuel warning light illuminates or the fuel level is very low, refuel as soon as possible. If inconsistency in engine performance or stalling occurs due to low fuel level conditions, refuel the vehicle as soon as possible and add at least 10 L (2.7 US gal, 2.2 Imp gal) of fuel.

Refer to Taking Action on page 7-47.

### NOTE

- After refuelling, it may require some time for the indicator to stabilize. In addition, the indicator may deviate while driving on a slope or curve since the fuel moves in the tank.
- The direction of the arrow (•••) indicates that the fuel-filler flap is on the left side of the vehicle.

### ▼ Instrument Panel Illumination


When the lights are turned on with the ignition switched ON, the brightness of the instrument panel illumination is dimmed. However, when the light sensor detects that the surrounding area is bright such as when the lights are turned on in the daytime, the instrument panel illumination does not dim.

### NOTE

- When the ignition is switched ON in the early evening or at dusk, the instrument panel illumination is dimmed for several seconds until the light sensor detects the brightness of the surrounding area, however, the dimming may cancel after the brightness is detected.
- When the lights are turned on, the lights-on indicator light in the instrument cluster turns on. Refer to Headlights on page 4-80.

The brightness of the instrument cluster and instrument panel illuminations can be adjusted by rotating the knob.

- The brightness decreases by rotating the knob to the left. A beep sound will be heard when the knob has been rotated to the maximum dim position.
- The brightness increases by rotating the knob to the right.

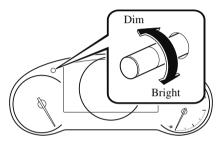

# Function for cancelling illumination dimmer

The illumination dimmer can be cancelled by rotating the instrument panel illumination knob to the right until a beep sound is heard while the instrument cluster is dimmed with the ignition switched ON. If the instrument cluster's visibility is reduced due to glare from surrounding brightness, cancel the illumination dimmer.

### NOTE

- The illumination dimmer can be cancelled by pressing the instrument panel illumination knob. (Without speed unit selector)
- When the illumination dimmer is cancelled, the instrument cluster cannot be dimmed even if the lights are turned on.
- When the illumination dimmer is cancelled, the screen in the centre display switches to constant display of the daytime screen.

# ▼ Outside Temperature Display

When the ignition is switched ON, the outside temperature is displayed.

**25**℃

## NOTE

- Under the following conditions, the outside temperature display may differ from the actual outside temperature depending on the surroundings and vehicle conditions:
  - · Significantly cold or hot temperatures.
  - Sudden changes in outside temperature.
  - The vehicle is parked.
  - The vehicle is driven at low speeds.

### Changing the Temperature Unit of the Outside Temperature Display

The outside temperature unit can be switched between Celsius and Fahrenheit. Settings can be changed by operating the centre display screen.

Refer to the Settings section in the Mazda Connect Owner's Manual.

### NOTE

When the temperature unit indicated in the outside temperature display is changed, the temperature unit indicated in the engine coolant gauge display changes in conjunction with it.

### **Outside Temperature Warning**\*

When the outside temperature is low, the indication flashes and a beep sound is heard to warn the driver of the possibility of icy roads.

If the outside temperature is lower than about 4 °C (39 °F), the outside

temperature display and the 3 mark flashes for about ten seconds and a beep sound is heard once.


### NOTE

If the outside temperature is lower than -20 °C (-4 °F), the beep sound does not operate. However, the  $\bigstar$  mark illuminates.

### ▼ Distance-to-empty

This displays the approximate distance you can travel on the remaining fuel based on the fuel economy.

The distance-to-empty will be calculated and displayed every second.

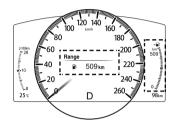


### NOTE

- Even though the distance-to-empty display may indicate a sufficient amount of remaining driving distance before refuelling is required, refuel as soon as possible if the fuel level is very low or the low fuel warning light illuminates.
- The display will not change unless you add more than approximately 9 L (2.3 US gal, 1.9 Imp gal) of fuel.
- The distance-to-empty is the approximate remaining distance the vehicle can be driven until all the graduation marks in the fuel gauge indicating the remaining fuel supply disappear.
- If there is no past fuel economy information such as after first purchasing your vehicle or the information is deleted when the battery leads are disconnected, the actual distance-to empty/range may differ from the amount indicated.

## ▼ Average Fuel Economy

The average fuel economy is calculated every minute from the total travelled distance on the trip meter and the total fuel consumption, and the average fuel economy for either TRIP A or TRIP B is displayed.



The average fuel economy and trip meters can be reset by pressing the INFO switch for 1.5 seconds or more while in each mode. After the data is cleared, the fuel consumption is recalculated and the - - L/100 km (- - - mpg) for the 1 minute prior to it being displayed is indicated.

## ▼ Current Fuel Economy

This displays the current fuel economy by calculating the amount of fuel consumption and the distance travelled.

## NOTE

- Indicates the 0 position when the vehicle speed is about 5 km/h (3 mph) or slower.
- The arrow on the scale indicates the average fuel economy.

## ▼ Maintenance Monitor

The following maintenance period notifications can be displayed by turning the Maintenance Monitor on.

- · Scheduled Maintenance
- Tyre Rotation
- · Oil Change

When the remaining days to the maintenance period is 15 days or less, or the remaining distance is 1,000 km (600 miles) or shorter, a message is indicated when the ignition is switched ON.

# Service Soon

# /: 500 km

For the setting method and indications for the maintenance monitor, refer to the Maintenance Monitor.

Refer to the Applications section in the Mazda Connect Owner's Manual.

## ▼ Vehicle Speed Alarm\*

In this mode, the current setting for the vehicle speed alarm is displayed. You can change the vehicle speed setting at which the warning is triggered.

### NOTE

The vehicle speed alarm display is activated at the same time the beep sound is heard.



### Speed Warning 100 km/h

The vehicle speed alarm can be set using the centre display.

### NOTE

Always set the vehicle speed according to the laws and regulations of the country/ city in which the vehicle is driven. In addition, always verify the speed of the vehicle using the speedometer.

### ▼ Blind Spot Monitoring (BSM) Display\*

Displays the system status.



Refer to Blind Spot Monitoring (BSM) on page 4-125.

## ▼ Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Display\*

Displays the system status.



Refer to Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) on page 4-173.

### ▼ Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Display\*

Displays the currently set system status.



Refer to Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) on page 4-158.

## ▼ Mazda Radar Cruise Control (MRCC) Display\*

Displays the currently set system status.



Refer to Mazda Radar Cruise Control (MRCC) on page 4-147.

## ▼ Distance Recognition Support System (DRSS) Display\*

Displays the distance between your vehicle and the vehicle ahead.





Refer to Distance Recognition Support System (DRSS) on page 4-137.

## ▼ Cruise Control Set Vehicle Speed Display\*

The vehicle speed preset using the cruise control is displayed.



Refer to Cruise Control on page 4-240.

## ▼ Message Display

A message such as the system operation status, a malfunction, or an abnormality is indicated.

### Warning/indicator light in instrument cluster turns on/flashes or symbol is indicated on display at same time as message

Check the information regarding the warning/indicator light or indicated symbol.

Refer to If a Warning Indication/Warning Lights on page 4-30.

Refer to If a Indication/Indicator Lights on page 4-32.


### Message only is indicated on display

Follow the instructions indicated on the display. For the display content, refer to the next page.


Refer to If a Message Indicated on Multi-information Display on page 7-55.

### ▼ Warning/Indicator Lights

Instrument Cluster varies depending on model and specifications. Instrument Cluster



#### Centre of Instrument panel



Warning lights will appear in any of the highlighted areas

### ▼ Warning Indication/Warning Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Warning	Page
	Brake System Warning Light <sup>*1</sup>	7-36
(ABS) ABS Warning Light*1	ABS Warning Light*1	Electronic Brake Force Distribu- tion System Warning 7-36
		ABS warning 7-39
- <del>-</del> -	Charging System Warning Indication/Warning Light*1	7-36
9 <u>-</u> 7.	Engine Oil Warning Light <sup>*1</sup>	7-36
	High Engine Coolant Temperature Warning Indication	7-36
<b>•</b> !	Power Steering Malfunction Indication	7-36
$\triangle$	Master Warning Indication	7-39

Signal	Warning	Page
	Electric Parking Brake (EPB) Warning Indication/Warning Light*1	7-39
КŢ)	*Check Engine Light*1	7-39
i-stop (Amber)	*i-stop Warning Light*1	7-39
AT	Automatic Transaxle Warning Indication	7-39
4WD	*AWD Warning Indication	7-39
**	Air Bag/Seat Belt Pretensioner System Warning Light*1	7-39
(!!)	*Tyre Pressure Monitoring System Warning Light*1	Flashing 7-39 Turns on 7-47
(Amber/White)	KEY Warning Indication	Amber 7-39 White 7-47
(Amber)	*Adaptive LED Headlights (ALH) Warning Indication/Warning Light*1	7-39
₿ <sub>″</sub> ฅ	*Blind Spot Monitoring (BSM) Warning Indication	7-39
(Amber)	*Driver Attention Alert (DAA) Warning Indication	7-39
2	*Mazda Radar Cruise Control (MRCC) Warning Indication	7-39
(Amber)	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Warning Indication	7-39
	*Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Warning Indication	7-39
-\0	LED Headlight Warning Light <sup>*1</sup>	7-39
	*Smart Brake Support/Smart City Brake Support (SBS/SCBS) Warning In- dication	7-47
	Low Fuel Warning Indication/Warning Light	7-47

Signal	Warning	Page
<b>B</b> u	*Check Fuel Cap Warning Indication/Warning Light*1	7-47
۲.	Engine Oil Level Warning Light <sup>*1</sup>	7-47
<b>120</b> km/h	*120 km/h Warning Light <sup>*1</sup>	7-47
	Seat Belt Warning Light (Front seat)	7-47
Row 茶茶茶 Row 茶茶 (Red)	Seat Belt Warning Light (Rear seat)	7-47
$\bigcirc$	*Low Washer Fluid Level Warning Indication	7-47
	Door-Ajar Warning Indication	7-47
	Liftgate-Ajar Warning Indication	7-47
	Door-Ajar Warning Light	7-47

\*1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains turned on, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

## ▼ Indication/Indicator Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Indicator	Page
2nd 杀 杀 杀 Row 杀 杀 Row 杀 杀 (Green)	Seat Belt Indicator Light (Rear seat)	2-38
i-stop (Green)	*i-stop Warning Light <sup>*1</sup>	4-16

Signal	Indicator	Page
	Security Indicator Light <sup>*1</sup>	3-43
	*Vehicle Speed Alarm Indication	4-28
<b>)</b>	Wrench Indication	4-35
P	Shift Position Indication	4-72
EDOE	Lights-On Indication/Indicator Light	4-80
≣D	Headlight High-Beam Indicator Light	Headlight High-Low Beam 4-84 Flashing the Headlights 4-84
Ð	*Front Fog Light Indicator Light	4-86
Qŧ	*Rear Fog Light Indicator Light	4-87
<b>* *</b>	Direction Indicator/Hazard Warning Indicator Lights	Turn and Lane-Change Signals 4-88 Hazard Warning Flasher
(P)	Electric Parking Brake (EPB) Indication/Indicator Light*1*2	4-95 7-39
	AUTOHOLD Active Indicator Light <sup>*1</sup>	4-104
HOLD	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) indicator Light	4-169
<b>H</b>	TCS/DSC Indicator Light <sup>*1</sup>	Traction Control System (TCS) 4-109 Dynamic Stabil- ity Control (DSC) 4-111
		Turns on 7-39

Signal	Indicator	Page
TCS OFF	*TCS OFF Indicator Light*1	4-110
$\sim$	*Off-Road Traction Assist Indicator Light*1	4-113
SPORT	Select Mode Indication	4-116
(Green)	*Adaptive LED Headlights (ALH) Indicator Light	4-124
OFF®	*Blind Spot Monitoring (BSM) OFF Indicator Light*1	Except malfunc- tion 4-129 Malfunction 7-39
(White)	*Driver Attention Alert (DAA) Indication	4-142
R	*Mazda Radar Cruise Control (MRCC) Main Indication	4-151
(White)	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Main Indication	4-163
2	*Mazda Radar Cruise Control (MRCC) Set Indication	4-151
(Green)	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Set Indication	4-163
	*Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Indication	4-176
*	*Smart City Brake Support (SCBS) Indication	Advanced Smart City Brake Sup- port (Advanced SCBS) 4-191
		Smart City Brake Support [Forward] (SCBS F) 4-194
		Smart City Brake Support [Reverse] (SCBS R) 4-198

Signal	Indicator	Page
		Advanced Smart City Brake Sup- port (Advanced SCBS) 4-191
	*Smart Brake Support/Smart City Brake Support (SBS/SCBS) OFF Indica- tor Light*1	Smart City Brake Support [Forward] (SCBS F) 4-194
OFF		Smart City Brake Support [Reverse] (SCBS R) 4-198
		Smart Brake Support (SBS) System 4-200
(White)	*Cruise Main Indication	4-241
(Green)	*Cruise Set Indication	4-241

- \*1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains turned on, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
- \*2 The light turns on continuously when the parking brake is applied.

#### ▼ Wrench Indication



The wrench indication is displayed under the following conditions.

• When the preset maintenance period has arrived.

Refer to the Applications section in the Mazda Connect Owner's Manual.


• When the engine oil replacement period has arrived.

#### NOTE

- The wrench indication may display earlier than the preset period depending on vehicle usage conditions.
- Whenever the engine oil is replaced, a reset of the vehicle engine control unit is necessary.

An expert repairer (we recommend an Authorised Mazda Repairer), will be able to reset the engine control unit or see page 6-20 for the Vehicle engine control unit reset procedure.

## **Instrument Cluster (Type B)**



① Speedometer	page 4-37
2 Tachometer	
<sup>3</sup> Multi-information Display (Type B)	· •
(4) Instrument Panel Illumination	

## ▼ Speedometer


The speedometer indicates the speed of the vehicle.

#### ▼ Tachometer

The tachometer shows engine speed in thousands of revolutions per minute (rpm).

## 


Do not run the engine with the tachometer needle in the RED ZONE. This may cause severe engine damage.

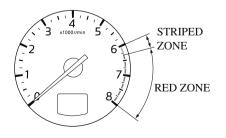

#### NOTE

When the tachometer needle enters the STRIPED ZONE, this indicates to the driver that the gears should be shifted before entering the RED ZONE.

## ▼ Multi-information Display (Type B)

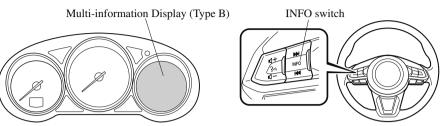

The multi-information display indicates the following information.

- · Odometer
- · Trip meter
- Engine coolant temperature gauge
- · Fuel gauge
- · Outside temperature
- $\cdot$  Distance-to-empty
- $\cdot$  Average fuel economy
- $\cdot$  Current fuel economy
- Maintenance Monitor
- $\cdot$  Blind Spot Monitoring (BSM) Display
- Distance Recognition Support System (DRSS) Display
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System Display
- $\cdot$  Mazda Radar Cruise Control (MRCC) Display
- · Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Display
- · Cruise Control Display
- $\cdot$  Vehicle Speed Alarm
- Message Display


The screen content changes each time the INFO switch is pressed. Press the INFO switch \*1 Ĩι, 10 Current Fuel Economy. ⚠ L/100km Vehicle system Trip Meter A, Average Warning message, TRIP A malfunction //1 8 km Outside Temperature, Fuel Economy, Outside ıφ 10.5 L/100km Odometer, Fuel Gauge Temperature, Hold INFO to RESET Odometer, Fuel Gauge 24 °c 88 km A 24 °c 88 km 0, 0 1 <B) 1 T. · · -. . Press the INFO switch Press the INFO switch Current Fuel Economy, Engine Coolant L/100km 20 Temperature Gauge, Trip Meter B, Average TRIP B Range //1 10 km Distance-to-empty, Fuel Economy, Outside 6 100 km ıφ 10.5 L/100km Outside Temperature, Temperature, Hold NFO to RESET Odometer, Fuel Gauge Odometer, Fuel Gauge 24 °c 88 km 24 °c 88 km ٥, ٥, **4**₽) < 🗈 1 , **, ,** , -, **x** Press the INFO switch Press the INFO switch 90 130 Engine Coolant Ŀ i-ACTIVSENSE display, Temperature Gauge, Service Due in 24 months Outside Temperature, Maintenance Monitor, 4444 km 形 80 /il Odometer, Fuel Gauge Outside Temperature, 24 °c 88 km 🛋 24 °c 88 km Odometer, Fuel Gauge 0 1 ٥, **a**Bk 1 ١ ١

Press the INFO switch

\*1: Displayed only when a warning occurs.

#### ▼ Odometer, Trip Meter and Trip Meter Selector

The odometer is constantly displayed on the screen when the ignition is switched ON, and the TRIP A or TRIP B screen can be displayed by operating the INFO switch.

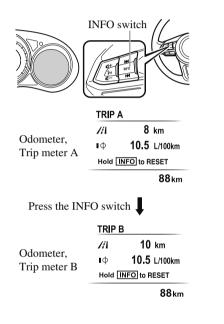

## Odometer

The odometer records the total distance the vehicle has been driven.

## Trip meter

The driving distance for a specified interval is indicated. Two types (TRIP A, TRIP B) of interval distance and the average fuel economy for each can be measured.

For instance, trip meter A can record the distance from the point of origin, and trip meter B can record the distance from where the fuel tank is filled.

When trip meter A is selected, TRIP A will be displayed. When trip meter B is selected, TRIP B will be displayed.

The trip meter and average fuel economy can be reset by pressing the INFO switch for 1.5 seconds or more while in each mode.

## NOTE

- Only the trip meters record tenths of kilometres (miles).
- The trip record will be erased when:
  - The power supply is interrupted (blown fuse or the battery is disconnected).
  - The vehicle is driven over 9999.9 km (mile).

#### ▼ Engine Coolant Temperature Gauge

Displays the engine coolant temperature. The blue range of the gauge indicates that the engine coolant temperature is low, and the red range of the gauge indicates that the engine coolant temperature is high and overheating.






If the high engine coolant temperature warning light (red) flashes, there is a possibility of overheating. Drive slowly to reduce engine load until you can find a safe place to stop the vehicle and wait for the engine to cool down. Refer to Overheating on page 7-30.

#### NOTE

• The temperature unit (Centigrade/ Fahrenheit) of the engine coolant gauge display changes in conjunction with the temperature unit of the outside temperature display. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Fuel Gauge

The fuel gauge shows approximately how much fuel is remaining in the tank when the ignition is switched ON. We recommend keeping the tank over 1/4 full.

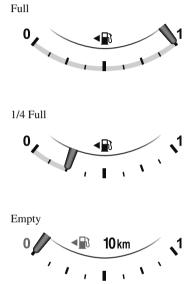

If the fuel level is low, (**•**) and (**0**) turn an amber colour. Refuel as soon as possible. If inconsistency in engine performance or stalling occurs due to low fuel level conditions, refuel the vehicle as soon as possible and add at least 10 L (2.7 US gal, 2.2 Imp gal) of fuel.

Refer to Taking Action on page 7-47.

#### NOTE

• After refuelling, it may require some time for the indicator to stabilize. In addition, the indicator may deviate while driving on a slope or curve since the fuel moves in the tank. • The direction of the arrow (•••) indicates that the fuel-filler flap is on the left side of the vehicle.

#### ▼ Instrument Panel Illumination

When the lights are turned on with the ignition switched ON, the brightness of the instrument panel illumination is dimmed. However, when the light sensor detects that the surrounding area is bright such as when the lights are turned on in the daytime, the instrument panel illumination does not dim.


#### NOTE

- When the ignition is switched ON in the early evening or at dusk, the instrument panel illumination is dimmed for several seconds until the light sensor detects the brightness of the surrounding area, however, the dimming may cancel after the brightness is detected.
- When the lights are turned on, the lights-on indicator light in the instrument cluster turns on. Refer to Headlights on page 4-80.

The brightness of the instrument cluster and instrument panel illuminations can be adjusted by rotating the knob.

• The brightness decreases by rotating the knob to the left. A beep sound will be heard when the knob has been rotated to the maximum dim position.

• The brightness increases by rotating the knob to the right.

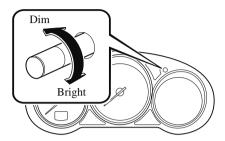

# Function for cancelling illumination dimmer

The illumination dimmer can be cancelled by rotating the instrument panel illumination knob to the right until a beep sound is heard while the instrument cluster is dimmed with the ignition switched ON. If the instrument cluster's visibility is reduced due to glare from surrounding brightness, cancel the illumination dimmer.

#### NOTE

- The illumination dimmer can be cancelled by pressing the instrument panel illumination knob.
- When the illumination dimmer is cancelled, the instrument cluster cannot be dimmed even if the lights are turned on.
- When the illumination dimmer is cancelled, the screen in the centre display switches to constant display of the daytime screen.

## ▼ Outside Temperature Display

When the ignition is switched ON, the outside temperature is displayed.

## 4 ℃ \*

#### NOTE

- Under the following conditions, the outside temperature display may differ from the actual outside temperature depending on the surroundings and vehicle conditions:
  - · Significantly cold or hot temperatures.
  - Sudden changes in outside temperature.
  - $\cdot$  The vehicle is parked.
  - The vehicle is driven at low speeds.

#### Changing the Temperature Unit of the Outside Temperature Display

The outside temperature unit can be switched between Celsius and Fahrenheit. Settings can be changed by operating the centre display screen.

Refer to the Settings section in the Mazda Connect Owner's Manual.

## NOTE

When the temperature unit indicated in the outside temperature display is changed, the temperature unit indicated in the engine coolant gauge display changes in conjunction with it.

## **Outside Temperature Warning\***

When the outside temperature is low, the indication flashes and a beep sound is heard to warn the driver of the possibility of icy roads.

If the outside temperature is lower than about 4 °C (39 °F), the outside temperature display and the **\*** mark flashes for about ten seconds and a beep sound is heard once.

#### NOTE

If the outside temperature is lower than -20 °C (-4 °F), the beep sound does not operate. However, the mark illuminates.

## ▼ Distance-to-empty

This displays the approximate distance you can travel on the remaining fuel based on the fuel economy.

The distance-to-empty will be calculated and displayed every second.

## Range



# 100 km


## NOTE

- Even though the distance-to-empty display may indicate a sufficient amount of remaining driving distance before refuelling is required, refuel as soon as possible if the fuel level is very low or the low fuel warning light illuminates.
- The display will not change unless you add more than approximately 9 L (2.3 US gal, 1.9 Imp gal) of fuel.
- The distance-to-empty is the approximate remaining distance the vehicle can be driven until all the graduation marks in the fuel gauge indicating the remaining fuel supply disappear.

• If there is no past fuel economy information such as after first purchasing your vehicle or the information is deleted when the battery leads are disconnected, the actual distance-to empty/range may differ from the amount indicated.

#### ▼ Average Fuel Economy

The average fuel economy is calculated every minute from the total travelled distance on the trip meter and the total fuel consumption, and the average fuel economy for either TRIP A or TRIP B is displayed.




**88** km

The average fuel economy and trip meters can be reset by pressing the INFO switch for 1.5 seconds or more while in each mode. After the data is cleared, the fuel consumption is recalculated and the - - -L/100 km (- - - mpg) for the 1 minute prior to it being displayed is indicated.

## ▼ Current Fuel Economy

This displays the current fuel economy by calculating the amount of fuel consumption and the distance travelled.



#### NOTE

Indicates the 0 position when the vehicle speed is about 5 km/h (3 mph) or slower.

## ▼ Maintenance Monitor

The following maintenance period notifications can be displayed by turning the Maintenance Monitor on.

- · Scheduled Maintenance
- · Tyre Rotation
- · Oil Change

When the remaining days to the maintenance period is 15 days or less, or the remaining distance is 1,000 km (600 miles) or shorter, a message is indicated when the ignition is switched ON.

## Service Soon

## // 500 km

For the setting method and indications for the maintenance monitor, refer to the Maintenance Monitor.

Refer to the Applications section in the Mazda Connect Owner's Manual.

## ▼ Vehicle Speed Alarm\*

In this mode, the current setting for the vehicle speed alarm is displayed. You can change the vehicle speed setting at which the warning is triggered.

## NOTE

The vehicle speed alarm display is activated at the same time the beep sound is heard.

 $(\cdots))$ 

Speed Warning 100 km/h The vehicle speed alarm can be set using the centre display.

## NOTE

Always set the vehicle speed according to the laws and regulations of the country/ city in which the vehicle is driven. In addition, always verify the speed of the vehicle using the speedometer.

## ▼ Blind Spot Monitoring (BSM) Display\*

Displays the system status.



Refer to Blind Spot Monitoring (BSM) on page 4-125.

▼ Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Display\*


Displays the system status.



Refer to Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) on page 4-173.

## ▼ Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Display\*


Displays the currently set system status.



Refer to Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) on page 4-158.

## ▼ Mazda Radar Cruise Control (MRCC) Display\*

Displays the currently set system status.



Refer to Mazda Radar Cruise Control (MRCC) on page 4-147.

## ▼ Distance Recognition Support System (DRSS) Display\*

Displays the distance between your vehicle and the vehicle ahead.





Refer to Distance Recognition Support System (DRSS) on page 4-137.

#### ▼ Cruise Control Set Vehicle Speed Display

The vehicle speed preset using the cruise control is displayed.



Refer to Cruise Control on page 4-240.

## ▼ Message Display

A message such as the system operation status, a malfunction, or an abnormality is indicated.

#### Warning/indicator light in instrument cluster turns on/flashes or symbol is indicated on display at same time as message

Check the information regarding the warning/indicator light or indicated symbol.

Refer to If a Warning Indication/Warning Lights on page 4-47.

Refer to If a Indication/Indicator Lights on page 4-49.


## Message only is indicated on display

Follow the instructions indicated on the display. For the display content, refer to the next page.


Refer to If a Message Indicated on Multi-information Display on page 7-55.

#### ▼ Warning/Indicator Lights

Instrument Cluster varies depending on model and specifications.



#### Centre of Instrument panel



Warning lights will appear in any of the highlighted areas

#### ▼ Warning Indication/Warning Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Warning	Page
	Brake System Warning Light <sup>*1</sup>	7-36
(ABS)	ABS Warning Light <sup>*1</sup>	Electronic Brake Force Distribu- tion System Warning 7-36
		ABS warning 7-39
- +	Charging System Warning Indication/Warning Light*1	7-36
4 <u>7</u> ,	Engine Oil Warning Light <sup>*1</sup>	7-36
(Red)	High Engine Coolant Temperature Warning Light*1	7-36
<u>.</u> !	Power Steering Malfunction Indication	7-36

Signal	Warning	Page
	Master Warning Indication	7-39
(P)	Electric Parking Brake (EPB) Warning Indication/Warning Light*1	7-39
КŢ)	Check Engine Light <sup>*1</sup>	7-39
i-stop (Amber)	*i-stop Warning Light*1	7-39
AT	Automatic Transaxle Warning Indication	7-39
4WD	*AWD Warning Indication	7-39
<b>*</b>	Air Bag/Seat Belt Pretensioner System Warning Light*1	7-39
(!)	*Ture Pressure Monitoring System Worning Light*]	Flashing 7-39
	*Tyre Pressure Monitoring System Warning Light*1	Turns on 7-47
0	KEY Warning Indication	Amber 7-39
(Amber/White)	KET warning indication	White 7-47
(Amber)	*Adaptive LED Headlights (ALH) Warning Indication/Warning Light*1	7-39
₿ <sub>″</sub> ฅ	*Blind Spot Monitoring (BSM) Warning Indication	7-39
(Amber)	*Driver Attention Alert (DAA) Warning Indication	7-39
<b>*</b>	*Mazda Radar Cruise Control (MRCC) Warning Indication	7-39
(Amber)	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Warning Indication	7-39
	*Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Warning Indication	7-39
-\0\.	LED Headlight Warning Light <sup>*1</sup>	7-39
⇒ <b>*</b> ⊊	*Smart Brake Support/Smart City Brake Support (SBS/SCBS) Warning In- dication	7-47

Signal	Warning	Page
	Low Fuel Warning Indication	7-47
<b>S</b> u	*Check Fuel Cap Warning Indication/Warning Light	7-47
۲.	Engine Oil Level Warning Light <sup>*1</sup>	7-47
120 km/h	*120 km/h Warning Light <sup>*1</sup>	7-47
PASSENGER	Seat Belt Warning Light (Front seat)	7-47
2nd 茶茶茶 Row 茶茶茶 Row 茶茶	Seat Belt Warning Light (Rear seat)	7-47
$\langle \hat{\Box} \rangle$	*Low Washer Fluid Level Warning Indication	7-47
	Door-Ajar Warning Indication	7-47
	Liftgate-Ajar Warning Indication	7-47

\*1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains turned on, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

#### ▼ Indication/Indicator Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Indicator	Page
2nd 杀 杀 杀 Row 杀 杀 Row 杀 杀 (Green)	Seat Belt Indicator Light (Rear seat)	2-38
i-stop (Green)	*i-stop Indicator Light	4-16

Signal	Indicator	Page
	Security Indicator Light <sup>*1</sup>	3-43
	*Vehicle Speed Alarm Indication	4-44
3	Wrench Indication	4-53
(Blue)	Low Engine Coolant Temperature Indicator Light	4-53
	Shift Position Indication	4-72
EDDE	Lights-On Indication/Indicator Light	4-80
		Headlight High-Low Beam 4-84
=	Headlight High-Beam Indicator Light	Flashing the Headlights 4-84
扣	*Front Fog Light Indicator Light	4-86
Ę()	*Rear Fog Light Indicator Light	4-87
<b>* *</b>	Direction Indicator/Hazard Warning Indicator Lights	Turn and Lane-Change Signals 4-88 Hazard Warning Flasher 4-95
(P)	Electric Parking Brake (EPB) Indication/Indicator Light*1*2	7-39
	AUTOHOLD Active Indicator Light	4-104
HOLD	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) indicator Light	4-169

Signal	Indicator	Page
		Traction Control System (TCS) 4-109
22	TCS/DSC Indicator Light <sup>*1</sup>	Dynamic Stabil- ity Control (DSC) 4-111
		Turns on 7-39
TCS OFF	*TCS OFF Indicator Light*1	4-110
$\sim$	*Off-Road Traction Assist Indicator Light	4-113
SPORT	Select Mode Indication	4-116
(Green)	*Adaptive LED Headlights (ALH) Indicator Light	4-124
	*Blind Spot Monitoring (BSM) OFF Indicator Light*1	Except malfunc- tion 4-129
ULL		4-129 Malfunction 7-39
(White)	*Driver Attention Alert (DAA) Indication	4-142
	*Mazda Radar Cruise Control (MRCC) Main Indication	4-151
(White)	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Main Indication	4-163
R	*Mazda Radar Cruise Control (MRCC) Set Indication	4-151
(Green)	*Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Set Indication	4-163
	*Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Indication	4-176

Signal	Indicator	Page
-> <b>*_</b>		Advanced Smart City Brake Sup- port (Advanced SCBS) 4-191
	*Smart City Brake Support (SCBS) Indication	Smart City Brake Support [Forward] (SCBS F) 4-194
		Smart City Brake Support [Reverse] (SCBS R) 4-198
St Correction of the second s		Advanced Smart City Brake Sup- port (Advanced SCBS) 4-191
	*Smart Brake Support/Smart City Brake Support (SBS/SCBS) OFF Indica-	Smart City Brake Support [Forward] (SCBS F) 4-194
	tor Light*1	Smart City Brake Support [Reverse] (SCBS R) 4-198
		Smart Brake Support (SBS) System 4-200
(White)	Cruise Main Indication	4-241
(Green)	Cruise Set Indication	4-241

\*1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains

turned on, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

\*2 The light turns on continuously when the parking brake is applied.

#### ▼ Wrench Indication



The wrench indication is displayed under the following conditions.

• When the preset maintenance period has arrived.

Refer to the Applications section in the Mazda Connect Owner's Manual.

• When the engine oil replacement period has arrived.

#### NOTE

- The wrench indication may display earlier than the preset period depending on vehicle usage conditions.
- Whenever the engine oil is replaced, a reset of the vehicle engine control unit is necessary.


An expert repairer (we recommend an Authorised Mazda Repairer), will be able to reset the engine control unit or see page 6-20 for the Vehicle engine control unit reset procedure.

#### ▼ Low Engine Coolant Temperature Indicator Light (Blue)



The light illuminates continuously when the engine coolant temperature is low and turns off after the engine is warm.

## **Instrument Cluster (Type C)**

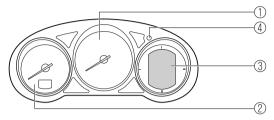

① Speedometer	page 4-54
2 Tachometer	
③ Multi-information Display (Type C)	page 4-55
(4) Instrument Panel Illumination	

## ▼ Speedometer


The speedometer indicates the speed of the vehicle.

#### ▼ Tachometer

The tachometer shows engine speed in thousands of revolutions per minute (rpm).

## 

Do not run the engine with the tachometer needle in the RED ZONE. This may cause severe engine damage.

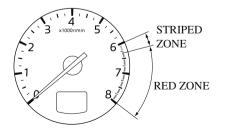


#### NOTE

When the tachometer needle enters the STRIPED ZONE, this indicates to the driver that the gears should be shifted before entering the RED ZONE.

#### ▼ Multi-information Display (Type C)

Multi-information Display (Type C)



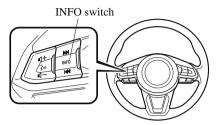


The multi-information display indicates the following information.

- $\cdot$  Odometer
- · Trip meter
- · Engine coolant temperature gauge
- · Fuel gauge
- · Outside temperature
- Trip Computer
- · Vehicle Speed Alarm
- · Cruise Control Display

#### ▼ Odometer, Trip Meter and Trip Meter Selector

The display mode can be changed from odometer to trip meter A to trip meter B and then back to odometer by pressing the selector while one of them is displayed. The selected mode will be displayed.

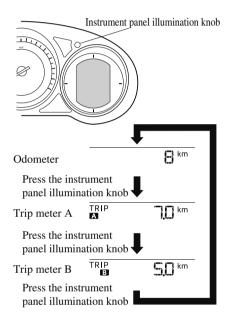

## Odometer

The odometer records the total distance the vehicle has been driven.

#### Trip meter

The trip meter can record the total distance of two trips. One is recorded in trip meter A, and the other is recorded in trip meter B.

For instance, trip meter A can record the distance from the point of origin, and trip

meter B can record the distance from where the fuel tank is filled.

When trip meter A is selected, pressing the selector again within 1 second will change to trip meter B mode.

When trip meter A is selected, TRIP A will be displayed. When trip meter B is selected, TRIP B will be displayed.

The trip meter records the total distance the vehicle is driven until the meter is again reset. Return it to "0.0" by depressing and holding the selector for 1 second or more. Use this meter to measure trip distances and to compute fuel consumption.

## NOTE


• If TRIP A is reset using the trip meter when the function which synchronizes (resets) the fuel economy monitor and the trip meter (TRIP A) is on, the fuel economy data resets in conjunction with TRIP A.

*Refer to the Applications section in the Mazda Connect Owner's Manual.* 

- Only the trip meters record tenths of *kilometres (miles)*.
- The trip record will be erased when:
  - The power supply is interrupted (blown fuse or the battery is disconnected).
  - The vehicle is driven over 9999.9 km (mile).

#### ▼ Engine Coolant Temperature Gauge

Displays the engine coolant temperature. The white range of the gauge indicates that the engine coolant temperature is low, and the red range of the gauge indicates that the engine coolant temperature is high and overheating.



If the engine coolant temperature gauge needle (white) flashes, there is a possibility of overheating. Drive slowly to reduce engine load until you can find a safe place to stop the vehicle and wait for the engine to cool down.


Refer to Overheating on page 7-30.

#### NOTE

• The temperature unit (Centigrade/ Fahrenheit) of the engine coolant gauge display changes in conjunction with the temperature unit of the outside temperature display. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Fuel Gauge

The fuel gauge shows approximately how much fuel is remaining in the tank when the ignition is switched ON. We recommend keeping the tank over 1/4 full.

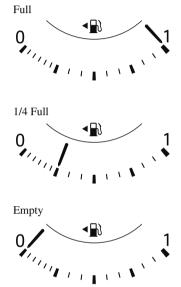

If the low fuel warning light illuminates or the fuel level is very low, refuel as soon as possible.

If inconsistency in engine performance or stalling occurs due to low fuel level conditions, refuel the vehicle as soon as possible and add at least 10 L (2.7 US gal, 2.2 Imp gal) of fuel.

Refer to Taking Action on page 7-47.

#### NOTE

• After refuelling, it may require some time for the indicator to stabilize. In addition, the indicator may deviate while driving on a slope or curve since the fuel moves in the tank.

- The display indicating a quarter or less remaining fuel has more segments to show the remaining fuel level in greater detail.
- The direction of the arrow (••••) indicates that the fuel-filler flap is on the left side of the vehicle.

#### ▼ Instrument Panel Illumination

#### (Without auto-light control)

When the lights are turned on with the ignition switched ON, the brightness of the instrument panel illumination is dimmed.

#### (With auto-light control)

When the lights are turned on with the ignition switched ON, the brightness of the instrument panel illumination is dimmed. However, when the light sensor detects that the surrounding area is bright such as when the lights are turned on in the daytime, the instrument panel illumination does not dim.

#### NOTE


#### · (With auto-light control)

When the ignition is switched ON in the early evening or at dusk, the instrument panel illumination is dimmed for several seconds until the light sensor detects the brightness of the surrounding area, however, the dimming may cancel after the brightness is detected.

• When the lights are turned on, the lights-on indicator light in the instrument cluster turns on. Refer to Headlights on page 4-80.

The brightness of the instrument cluster and instrument panel illuminations can be adjusted by rotating the knob.

- The brightness decreases by rotating the knob to the left. A beep sound will be heard when the knob has been rotated to the maximum dim position.
- The brightness increases by rotating the knob to the right.

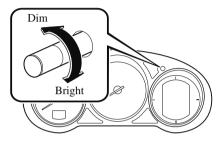

# Function for cancelling illumination dimmer

The illumination dimmer can be cancelled by rotating the instrument panel illumination knob to the right until a beep sound is heard while the instrument cluster is dimmed with the ignition switched ON. If the instrument cluster's visibility is reduced due to glare from surrounding brightness, cancel the illumination dimmer.

#### NOTE

- When the illumination dimmer is cancelled, the instrument cluster cannot be dimmed even if the lights are turned on.
- When the illumination dimmer is cancelled, the screen in the centre display switches to constant display of the daytime screen.

## ▼ Outside Temperature Display

When the ignition is switched ON, the outside temperature is displayed.



#### NOTE

- Under the following conditions, the outside temperature display may differ from the actual outside temperature depending on the surroundings and vehicle conditions:
  - · Significantly cold or hot temperatures.
  - Sudden changes in outside temperature.
  - · The vehicle is parked.
  - The vehicle is driven at low speeds.

#### Changing the Temperature Unit of the Outside Temperature Display

The outside temperature unit can be switched between Celsius and Fahrenheit. Settings can be changed by operating the centre display screen.

Refer to the Settings section in the Mazda Connect Owner's Manual.

#### NOTE

When the temperature unit indicated in the outside temperature display is changed, the temperature unit indicated in the engine coolant gauge display changes in conjunction with it.

#### **Outside Temperature Warning\***

When the outside temperature is low, the indication flashes and a beep sound is heard to warn the driver of the possibility of icy roads.

If the outside temperature is lower than about 4 °C (39 °F), the outside temperature display and the \* mark flashes for about ten seconds and a beep sound is heard once.

#### NOTE

If the outside temperature is lower than -20 °C (-4 °F), the beep sound does not operate. However, the mark illuminates.

## ▼ Trip Computer

The following information can be selected by pressing the INFO switch with the ignition switched ON.


- · Distance-to-empty mode
- · Average fuel economy mode
- · Current fuel economy mode

If you have any problems with your trip computer, consult an expert repairer (we recommend an Authorised Mazda Repairer).

#### Distance-to-empty mode

This mode displays the approximate distance you can travel on the remaining fuel based on the fuel economy.

The distance-to-empty will be calculated and displayed every second.

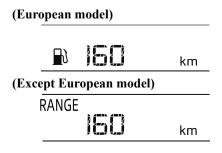


#### NOTE

- Even though the distance-to-empty display may indicate a sufficient amount of remaining driving distance before refuelling is required, refuel as soon as possible if the fuel level is very low or the low fuel warning light illuminates.
- The display may not change unless you add more than approximately 9 L (2.3 US gal, 1.9 Imp gal) of fuel.
- The distance-to-empty is the approximate remaining distance the vehicle can be driven until all the graduation marks in the fuel gauge (indicating the remaining fuel supply) disappear.
- If there is no past fuel economy information such as after first purchasing your vehicle or the information is deleted when the battery leads are disconnected, the actual distance-to empty/range may differ from the amount indicated.

#### Average fuel economy mode

This mode displays the average fuel economy by calculating the total travelled distance and the total fuel consumption since the vehicle was purchased or the past data was reset. The average fuel economy is calculated and displayed every minute.

## (European model)

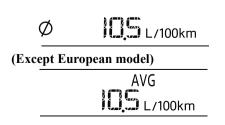

To reset the displayed past data, press the INFO switch for 1.5 seconds or longer.

#### NOTE

If TRIP A is reset using the trip meter when the function which synchronizes (resets) the fuel economy monitor and the trip meter (TRIP A) is on, the displayed past data is reset.


After resetting the data, - - - L/100 km (- - - mpg) or - - - km/L is displayed for one minute before the fuel economy is recalculated and displayed.

#### Current fuel economy mode

This mode displays the current fuel economy by calculating the amount of fuel consumption and the distance travelled.

Current fuel economy will be calculated and displayed every 2 seconds.

#### (European model)



(Except European model)

CURRENT

When you've slowed to about 5 km/h (3 mph), - - - L/100 km (- - - mpg) or - - - km/L will be displayed.

## ▼ Vehicle Speed Alarm

In this mode, the current setting for the vehicle speed alarm is displayed. You can change the vehicle speed setting at which the warning is triggered.

## NOTE

The vehicle speed alarm display is activated at the same time the beep sound is heard.



The vehicle speed alarm can be set using the centre display.

#### NOTE

Always set the vehicle speed according to the laws and regulations of the country/ city in which the vehicle is driven. In addition, always verify the speed of the vehicle using the speedometer.


#### ▼ Cruise Control Set Vehicle Speed Display

The vehicle speed preset using the cruise control is displayed.


Refer to Cruise Control on page 4-240.

## ▼ Warning/Indicator Lights

Instrument Cluster varies depending on model and specifications. Instrument Cluster



#### Centre of Instrument panel



Warning lights will appear in any of the highlighted areas

#### ▼ Warning Indication/Warning Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Warning	Page
	Brake System Warning Light <sup>*1</sup>	7-36
(ABS)	(ABS) ABS Warning Light*1	Electronic Brake Force Distribu- tion System Warning 7-36
		ABS warning 7-39
- +	Charging System Warning Light <sup>*1</sup>	7-36
4 <u>7</u> ,	Engine Oil Warning Light <sup>*1</sup>	7-36
<b>•</b> !	Power Steering Malfunction Indicator Light <sup>*1</sup>	7-36
$\triangle$	Master Warning Light <sup>*1</sup>	7-39
	Electric Parking Brake (EPB) Warning Light <sup>*1</sup>	7-39

Signal	Warning	Page
. 🗳	Proto Padal Operation Demand Warning Light*1	Flashing 4-102
(Red)	Brake Pedal Operation Demand Warning Light <sup>*1</sup>	Buzzer & Flash- ing 7-39
КŢ)	Check Engine Light*1	7-39
i-stop (Amber)	*i-stop Warning Light*1	7-39
AT	Automatic Transaxle Warning Light*1	7-39
4WD	*AWD Warning Light	7-39
**	Air Bag/Seat Belt Pretensioner System Warning Light*1	7-39
(!)	*Tyre Pressure Monitoring System Warning Light*1	Flashing 7-39
\	Tyte ressure womening system warning Light	Turns on 7-47
<b>!0</b>	KEY Warning Light*1	Turns on 7-39
(Red)	KET warning Light	Flashing 7-47
-\\$\	LED Headlight Warning Light <sup>*1</sup>	7-39
	*Smart City Brake Support (SCBS) Warning Light	7-47
	Low Fuel Warning Warning Light	7-47
<b>R</b> M	*Check Fuel Cap Warning Light*1	7-47
Ĩ.	Engine Oil Level Warning Light <sup>*1</sup>	7-47
120 km/h	*120 km/h Warning Light*1	7-47
PASSENGER	Seat Belt Warning Light (Front seat)	7-47
2nd 杀杀杀 Row 杀杀杀 Row 杀杀	Seat Belt Warning Light (Rear seat)	7-47
$\bigcirc$	*Low Washer Fluid Level Warning Light	7-47

Signal	Warning	Page
	Door-Ajar Warning Light	7-47

\*1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains turned on, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

#### ▼ Indication/Indicator Lights

These lights turn on or flash to notify the user of the system operation status or a system malfunction.

Signal	Indicator	Page
2nd 茶茶茶 Row 茶茶 Row 茶茶 (Green)	Seat Belt Indicator Light (Rear seat)	2-38
i-stop (Green)	*i-stop Indicator Light	4-16
	Security Indicator Light <sup>*1</sup>	3-43
	*Vehicle Speed Alarm Indication	4-60
<b>)</b> —	Wrench Indicator Light <sup>*1</sup>	4-66
	Shift Position Indication	4-72
EDOE	Lights-On Indicator Light	4-80
E Hea	Headlight High-Beam Indicator Light	2-38 4-16 3-43 4-60 4-66 4-72
Ð	*Front Fog Light Indicator Light	4-86
_()≢	*Rear Fog Light Indicator Light	4-87

Signal	Indicator	Page
<b>* *</b>	Direction Indicator/Hazard Warning Indicator Lights	Turn and Lane-Change Signals 4-88 Hazard Warning Flasher 4-95
(P)	Electric Parking Brake (EPB) Indicator Light*1*2	7-39
HOLD	AUTOHOLD Active Indicator Light*1	4-104
(Green)	Brake Pedal Operation demand Indicator Light	4-98
<b>A</b>	TCS/DSC Indicator Light <sup>*1</sup>	Traction Control System (TCS) 4-109 Dynamic Stabil- ity Control (DSC) 4-111
TCS OFF	*TCS OFF Indicator Light*1	Turns on 7-39 4-110
	*Off-Road Traction Assist Indicator Light*1	4-113
SPORT	Select Mode Indication	4-116
®″∩ OFF <sup>®</sup>	*Blind Spot Monitoring (BSM) OFF Indicator Light*1	Except malfunc- tion 4-129 Malfunction
		7-39
(Red)	*Smart City Brake Support (SCBS) Indicator Light	Advanced Smart City Brake Sup- port (Advanced SCBS) 4-191 Smart City Brake Support [Forward] (SCBS F) 4-194

Signal	Indicator	Page
S≭⊂ OFF	*Swort City Droke Symmet (SCDS) OEE Indicator Light*1	Advanced Smart City Brake Sup- port (Advanced SCBS) 4-191 Smart City Brake Support [Forward] (SCBS F) 4-194 4-241
	*Smart City Brake Support (SCBS) OFF Indicator Light*1	
(White)	Cruise Main Indication	4-241
(Green)	Cruise Set Indication	4-241

- \*1 The light turns on when the ignition is switched on for an operation check, and turns off a few seconds later or when the engine is started. If the light does not turn on or remains turned on, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
- \*2 The light turns on continuously when the parking brake is applied.

#### ▼ Wrench Indicator Light



When the ignition is switched ON, the wrench indicator light turns on and then turns off after a few seconds.

The wrench indicator light turns on under the following conditions:

- When the preset maintenance period has arrived.
- $\cdot$  When it's time to replace the engine oil.


Refer to the Applications section in the Mazda Connect Owner's Manual.

#### NOTE

- The wrench indicator light turns on earlier than the preset period depending on vehicle usage conditions.
- Whenever the engine oil is replaced, a reset of the vehicle engine control unit is necessary.

An expert repairer (we recommend an Authorised Mazda Repairer), will be able to reset the engine control unit or see page 6-20 for the Vehicle engine control unit reset procedure.

### Active Driving Display\*

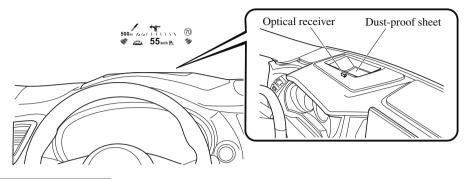



#### Always adjust the display brightness and position with the vehicle stopped:

Adjusting the display brightness and position while driving the vehicle is dangerous as doing so could distract your attention from the road ahead and lead to an accident.

### 

- Do not place beverages near the active driving display. If water or other liquids are splashed on the active driving display, it could cause damage.
- Do not place objects above the active driving display or apply stickers to the dust-proof sheet/optical receiver as they will cause interference.
- ➤ A sensor is integrated to control the display's luminosity. If the optical receiver is covered, the display's luminosity will lower making the display difficult to view.
- > Do not allow intense light to hit the optical receiver. Otherwise, it could cause damage.

- Wearing polarized sunglasses will reduce the visibility of the active driving display due to the characteristics of the display.
- If the battery has been removed and re-installed or the battery voltage is low, the adjusted position may deviate.
- The display may be difficult to view or temporarily affected by weather conditions such as rain, snow, light, and temperature.
- · If the audio system is removed, the active driving display cannot be operated.

#### When Driving Instrument Cluster and Display

The active driving display indicates the following information:


- Blind Spot Monitoring (BSM) Operation Conditions and Warnings Refer to Blind Spot Monitoring (BSM) on page 4-125.
- Distance Recognition Support System (DRSS) Warnings Refer to Distance Recognition Support System (DRSS) on page 4-137.
- Traffic Sign Recognition System (TSR) traffic signs and Warnings Refer to Traffic Sign Recognition System (TSR) on page 4-131.
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Operation Conditions and Warnings Refer to Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) on page 4-158.
- Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Operation Conditions and Warnings
   Refer to Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) on page 4-173.
- Advanced Smart City Brake Support (Advanced SCBS) Warnings Refer to Advanced Smart City Brake Support (Advanced SCBS) on page 4-189.
- Smart City Brake Support [Forward] (SCBS F) Warnings Refer to Smart City Brake Support [Forward] (SCBS F) on page 4-192.
- Smart City Brake Support [Reverse] (SCBS R) Operation Conditions Refer to Smart City Brake Support [Reverse] (SCBS R) on page 4-195.
- Smart Brake Support (SBS) Warnings Refer to Smart Brake Support (SBS) on page 4-199.
- Cruise Control Operation Conditions Refer to Cruise Control on page 4-240.
- $\cdot$  Navigation Guidance (vehicles with navigation system)
- · Speed limit indicator (vehicles with navigation system)
- $\cdot$  Vehicle Speed

The active driving display settings can be changed or adjusted. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### NOTE

• The desired driving position (display position, brightness level, display information) can be called up after programming the position. Refer to Driving Position Memory on page 2-10.

#### **Automatic Transaxle Controls**

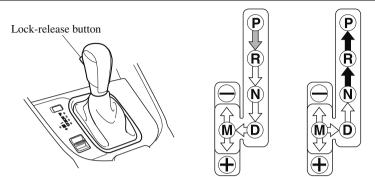

#### Various Lockouts:



Indicates that you must depress the brake pedal and hold in the lock-release button to shift (The ignition must be switched ON).



Indicates the selector lever can be shifted freely into any position.



Indicates that you must hold in the lock-release button to shift.

#### NOTE

The Sport AT has an option that is not included in the traditional automatic transaxle that gives the driver the option of selecting each gear instead of leaving it to the transaxle to shift gears. Even if you intend to use the automatic transaxle functions as a traditional automatic, you should also be aware that you can inadvertently shift into manual shift mode and an inappropriate gear may be retained as the vehicle speed increases. If you notice the engine speed going higher or hear the engine racing, confirm you have not accidentally slipped into manual shift mode (page 4-73).

### **Shift-Lock System**

The shift-lock system prevents shifting out of P unless the brake pedal is depressed.

To shift from P:

- 1. Depress and hold the brake pedal.
- 2. Start the engine.
- 3. Press and hold the lock-release button.
- 4. Move the selector lever.

#### NOTE


- When the ignition is switched to ACC or the ignition is switched off, the selector lever cannot be shifted from P position.
- The ignition cannot be switched to OFF if the selector lever is not in P position.

#### ▼ Shift-Lock Override

If the selector lever will not move from P position using the proper shift procedure, continue to hold down the brake pedal.

#### Туре А

- 1. Remove the shift-lock override cover using a cloth-wrapped flat head screwdriver.
- 2. Insert a screwdriver and push it down.

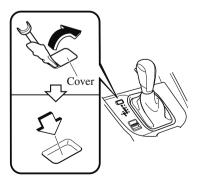

3. Press and hold the lock-release button.

4. Move the selector lever.

Take the vehicle to an expert repairer (we recommend an Authorised Mazda Repairer) to have the system checked. **Type B** 

1. Press the lock-release button with the button pressed.



2. Move the selector lever.

Take the vehicle to an expert repairer (we recommend an Authorised Mazda Repairer) to have the system checked.

#### **Transaxle Ranges**

- The shift position indication in the instrument cluster illuminates. Refer to Indication/Indicator Lights on page 4-32, 4-49, 4-64.
- The selector lever must be in P or N position to operate the starter.

#### P (Park)

P locks the transaxle and prevents the front wheels from rotating.

### 

# Always set the selector lever to P position and set the parking brake:

Only setting the selector lever to the P position without using the parking brake to hold the vehicle is dangerous. If P fails to hold, the vehicle could move and cause an accident.

### 

- Shifting into P, N or R while the vehicle is moving can damage your transaxle.
- Shifting into a driving gear or reverse when the engine is running faster than idle can damage the transaxle.

#### R (Reverse)

In position R, the vehicle moves only backward. You must be at a complete stop before shifting to or from R, except under rare circumstances as explained in Rocking the Vehicle (page 3-52).

#### NOTE

#### (With parking sensor system)

When the selector lever is shifted to the R position with the ignition switched ON, the parking sensor system is activated and a beep sound is heard.

*Refer to Parking Sensor System on page* 4-261.

#### N (Neutral)

In N, the wheels and transaxle are not locked. The vehicle will roll freely even on the slightest incline unless the parking brake or brakes are on.



#### If the engine is running faster than idle, do not shift from N or P into a driving gear:

It's dangerous to shift from N or P into a driving gear when the engine is running faster than idle. If this is done, the vehicle could move suddenly, causing an accident or serious injury.

# Do not shift into N when driving the vehicle:

Shifting into N while driving is dangerous. Engine braking cannot be applied when decelerating which could lead to an accident or serious injury.



Do not shift into N when driving the vehicle. Doing so can cause transaxle damage.

#### NOTE

Apply the parking brake or depress the brake pedal before moving the selector lever from N position to prevent the vehicle from moving unexpectedly.

#### D (Drive)

D is the normal driving position. From a stop, the transaxle will automatically shift through a 6-gear sequence.

#### M (Manual)

M is the manual shift mode position. Gears can be shifted up or down by operating the selector lever. Refer to Manual Shift Mode on page 4-73.

#### $\blacksquare$ Shift Position Indication

#### Instrument Cluster (Type A)



Instrument Cluster (Type B/C)

The selector position is indicated when the ignition is switched ON.

#### Gear position indication

In manual shift mode, the "M" of the shift position indication illuminates and the numeral for the selected gear is displayed.

#### ▼ Active Adaptive Shift (AAS)

Active Adaptive Shift (AAS) automatically controls the transaxle shift points to best suit the road conditions and driver input. This improves driving feel. The transaxle may switch to AAS mode when driving up and down slopes, cornering, driving at high elevations, or depressing the accelerator pedal quickly while the selector lever is in the D position. Depending on the road and driving conditions/vehicle operations, gear shifting could be delayed or not occur, however, this does not indicate a problem because the AAS mode will maintain the optimum gear position.

### **Manual Shift Mode**

The manual shift mode gives you the feel of driving a manual transaxle vehicle by allowing you to operate the selector lever manually. This allows you to control engine rpm and torque to the drive wheels much like a manual transaxle when more control is desired.

To change to manual shift mode, shift the lever from D to M.



#### NOTE

Changing to manual shift mode while driving will not damage the transaxle.

To return to automatic shift mode, shift the lever from M to D.

#### NOTE

- If you change to manual shift mode when the vehicle is stopped, the gear will shift to M1.
- If you change to manual shift mode without depressing the accelerator pedal when driving in D range, 5th gear/6th gear, the gear will shift to M4/M5.


#### ▼ Indicators

#### Manual shift mode indication

In manual shift mode, the "M" of the shift position indication in the instrument panel illuminates.

#### Gear position indication

The numeral for the selected gear illuminates.

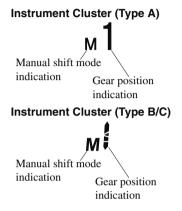

- If the gears cannot be shifted down when driving at higher speeds, the gear position indication will flash twice to signal that the gears cannot be shifted down (to protect the transaxle).
- If the automatic transaxle fluid (ATF) temperature becomes too high, there is the possibility that the transaxle will switch to automatic shift mode, cancelling manual shift mode and turning off the gear position indication illumination. This is a normal function to protect the AT. After the ATF temperature has decreased, the gear position indication illumination turns back on and driving in manual shift mode is restored.

#### ▼ Manually Shifting Up

You can shift gears up by operating the selector lever or the steering shift switches<sup>\*</sup>. M1  $\rightarrow$  M2  $\rightarrow$  M3  $\rightarrow$  M4  $\rightarrow$  M5  $\rightarrow$  M6


#### Using selector lever

To shift up to a higher gear, tap the selector lever back + once.



#### Using steering shift switch\*

To shift up to a higher gear with the steering shift switches, pull the UP switch (+/OFF) toward you once with your fingers.

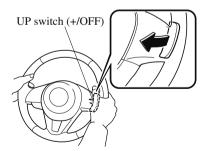

### 

# Keep your hands on the steering wheel rim when using fingers on the steering shift switches:

Putting your hands inside the rim of the steering wheel when using the steering shift switches is dangerous. If the driver's air bag were to deploy in a collision, your hands could be impacted causing injury.

#### NOTE

- When driving slowly, the gears may not shift up.
- Do not drive the vehicle with the tachometer needle in the RED ZONE while in manual shift mode. In addition, manual shift mode switches to automatic shift mode while the accelerator pedal is completely depressed.

This function is cancelled while the TCS is turned off. However, if the vehicle is continuously driven at a high rpm, the gears may automatically shift up to protect the engine.

• The steering shift switch can be used temporarily even if the selector lever is in the D position while driving. In addition, it returns to automatic shift mode when the UP switch (+/OFF) is pulled rearward for a sufficient amount of time.

#### ▼ Manually Shifting Down

You can shift gears down by operating the selector lever or the steering shift switches<sup>\*</sup>. M6  $\rightarrow$  M5  $\rightarrow$  M4  $\rightarrow$  M3  $\rightarrow$  M2 $\rightarrow$  M1


#### Using selector lever

To shift down to a lower gear, tap the selector lever forward - once.



#### Using steering shift switch\*

To shift down to a lower gear with the steering shift switches, pull the DOWN switch – toward you once with your fingers.

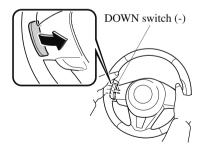

### 

# Do not use engine braking on slippery road surfaces or at high speeds:

Shifting down while driving on wet, snowy, or frozen roads, or while driving at high speeds causes sudden engine braking, which is dangerous. The sudden change in tyre speed could cause the tyres to skid. This could lead to loss of vehicle control and an accident.

# Keep your hands on the steering wheel rim when using fingers on the steering shift switches:

Putting your hands inside the rim of the steering wheel when using the steering shift switches is dangerous. If the driver's air bag were to deploy in a collision, your hands could be impacted causing injury.

- When driving at high speeds, the gear may not shift down.
- During deceleration, the gear may automatically shift down depending on vehicle speed.
- When depressing the accelerator fully, the transaxle will shift to a lower gear, depending on vehicle speed. However, the gears do not kickdown while the TCS is turned off or the Off-Road Traction Assist is operating.


#### ▼ Second Gear Fixed Mode

When the selector lever is moved back + while the vehicle speed is about 10 km/h (6.2 mph) or less, the transaxle is set in the second gear fixed mode. The gear is fixed in second while in this mode for easier acceleration from a stop and driving on slippery roads such as snow-covered roads.

If the selector lever is moved back + or forward - while in the second gear fixed mode, the mode will be cancelled.

#### ▼ Shift Gear (Shifting) Speed Limit

For each gear position while in the manual mode, the speed limit is set as follows: When the selector lever is operated within the range of the speed limit, the gear is shifted.

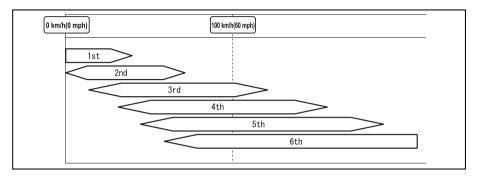

#### Shift up

The gear does not shift up while the vehicle speed is lower than the speed limit.

#### Shift down

The gear does not shift down while the vehicle speed exceeds the speed limit. If the vehicle speed exceeds the speed limit and the gear does not shift down, the gear position indication flashes 2 times to notify the driver that the gear cannot be shifted.

#### Kickdown

When the accelerator pedal is depressed fully while driving, the gear shifts down. However, the gears do not kickdown while the TCS is turned off or the Off-Road Traction Assist is operating.

#### NOTE

The gear also shifts down using kickdown while in the second gear fixed mode.

#### Auto-shift down

The gear shifts down automatically depending on the vehicle speed during deceleration.

#### NOTE

If the vehicle comes to a stop while in the second gear fixed mode, the gear remains in second.


### **Direct Mode**

Direct mode can be used for temporarily switching gears by operating the steering shift switch while the vehicle is being driven with the selector lever in the D position.

While in direct mode, the D and M indication illuminate and the gear position in use is illuminated.

Direct mode is cancelled (released) under the following conditions.

- The UP switch (**+/OFF**) is pulled rearward for a certain amount of time or longer.
- The vehicle is driven for a certain amount of time or longer (time differs depending on the driving conditions while operating).
- The vehicle is stopped or moving at a slow speed.

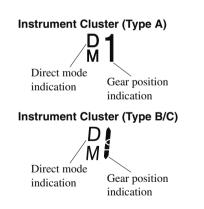

#### NOTE

Shifting up and down while in direct mode may not be possible depending on the vehicle speed. In addition, because direct mode is cancelled (released) depending on the rate of acceleration or if the accelerator is fully depressed, use of the manual shift mode is recommended if you need to drive the vehicle in a particular gear for long periods.

### **Driving Tips**

### 

#### Do not let the vehicle move in a direction opposite to the direction selected by the selector lever:

Do not let the vehicle move backward with the selector lever in a forward position, or do not let the vehicle move forward with the selector lever in the reverse position. Otherwise, the engine may stop, causing the loss of the power brake and power steering functions, and make it difficult to control the vehicle which could result in an accident.

#### Passing

For extra power when passing another vehicle or climbing steep grades, depress the accelerator fully. The transaxle will shift to a lower gear, depending on vehicle speed.

#### NOTE

- The accelerator pedal may initially feel heavy as it is being depressed, then feel lighter as it is depressed further. This change in pedal force aids the engine control system in determining how much the accelerator pedal has been depressed for performing kickdown, and functions to control whether or not kickdown should be performed.
- While the selector lever is in the M position and the TCS is turned off, manual shift mode does not switch to automatic shift mode even if the accelerator pedal is completely depressed. Operate the selector lever.

#### Climbing steep grades from a stop

To climb a steep grade from a stopped position:

- 1. Depress the brake pedal.
- 2. Shift to D or M1, depending on the load weight and grade steepness.
- 3. Release the brake pedal while gradually accelerating.

#### **Descending steep grades**

When descending a steep grade, shift to lower gears, depending on load weight and grade steepness. Descend slowly, using the brakes only occasionally to prevent them from overheating.

### **Lighting Control**

#### ▼ Headlights


Turn the headlight switch to turn the headlights and other exterior lights on or off. When the tail lights, position lights, and the number plate lights are turned on, the lights-on indicator light in the instrument cluster turns on.



#### NOTE

- To prevent discharging the battery, do not leave the lights on while the engine is off unless safety requires them.
- Headlights do not blind drivers approaching in the opposite direction no matter what side of the road you must drive your vehicle (left-hand or right-hand traffic). Therefore, it is not necessary to adjust the optical axis of the headlights when switching temporarily to driving on the opposite side of the road (left-hand or right-hand traffic).

#### Without auto-light control

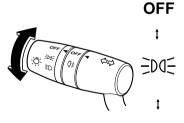

≡D


Switch Position	OFF		ED OE		ΞD	
Ignition Position	ON	ACC or OFF	ON	ACC or OFF	ON	ACC or OFF
Headlights	Off	Off	Off	Off	On	Off
Running lights	On*1	Off	Off	Off	Off	Off
Tail lights Position lights Number plate lights	Off	Off	On	On	On	On*2

\*1 The lights are turned on while the vehicle is driven.

\*2 The lights are turned on continuously if the ignition is switched from ON to any other position with the lights turned on. The lights are turned off when the driver's door is opened or 30 seconds have elapsed since the lights turned on.

#### With auto-light control

#### (Except Taiwan)

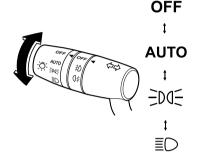


Switch Position	OFF		AUTO		ED OE		≣D	
Ignition Position	ON	ACC or OFF	ON	ACC or OFF	ON	ACC or OFF	ON	ACC or OFF
Headlights	Off	Off	Auto*2	Off	Off	Off	On	Off
Running lights	On*1	Off	On*3	Off	Off	Off	Off	Off
Tail lights Position lights Number plate lights	Off	Off	Auto*2	On*4	On	On	On	On*4

\*1 The lights are turned on while the vehicle is driven.

- \*2 The lights are turned on by the auto light function.
- \*3 The lights are turned on while the vehicle is driven, and turned off when the headlights are turned on by the auto light function.
- \*4 The lights are turned on continuously if the ignition is switched from ON to any other position with the lights turned on. The lights are turned off when the driver's door is opened or 30 seconds have elapsed since the lights turned on.

#### (Taiwan)

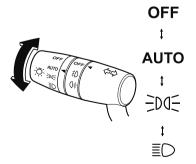

Ignition Position	ACC or OFF				ON			
Switch Position	OFF*1	AUTO	ED OE	≣D	OFF*1	AUTO	EDIDE	≣D
Headlights	Off	Off	Off	Off				On
Running lights	Off	Off	Off	Off	Auto <sup>*2*4</sup> Auto			Off
Tail lights Position lights Number plate lights	Off	On*5	On	On*5			Auto*3*4	On

\*1 The light switch returns to the AUTO position automatically.

\*2 During the daytime, the running lights turn on automatically. During the nighttime, the headlights, position lights, tail lights, and the number plate lights turn on automatically.

- \*3 During the daytime, the running lights, position lights, tail lights, and the number plate lights turn on automatically. During the nighttime, the headlights, position lights, tail lights, and the number plate lights turn on automatically.
- \*4 When the light switch is switched to the OFF position while the vehicle is stopped, all of the lights that are turned on turn off. When the light switch is switched from a position other than 5005 to the 5005 position while the vehicle is stopped, the running lights or the headlights turn off. When starting to drive the vehicle, the lights that are turned off turn on again.
- \*5 The lights are turned on continuously if the ignition is switched from ON to any other position with the lights turned on. The lights are turned off when the driver's door is opened or 30 seconds have elapsed since the lights turned on.

#### Auto-light control\*

#### (Except Taiwan)


When the headlight switch is in the AUTO position and the ignition is switched ON, the light sensor senses the surrounding lightness or darkness and automatically turns the headlights and other exterior lights on or off.

#### (Taiwan)

When the headlight switch is in a position other than  $\equiv \bigcirc$  and the ignition is switched ON, the light sensor senses the surrounding lightness or darkness and automatically turns the headlights and other exterior lights on or off.

### 

Do not shade the light sensor by adhering a sticker or a label on the windscreen. Otherwise the light sensor will not operate correctly.

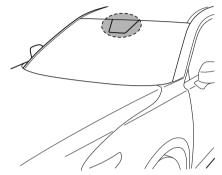


The light sensor also works as a rain sensor for the auto-wiper control. Keep hands and scrapers clear of the windscreen when the wiper lever is in the AUTO position and the ignition is switched ON as fingers could be pinched or the wipers and wiper blades damaged when the wipers activate automatically. If you are going to clean the windscreen, be sure the wipers are turned off completely — this is particularly important when clearing ice and snow — when it is particularly tempting to leave the engine running.

- The headlights and other exterior lights may not turn off immediately even if the surrounding area becomes well-lit because the light sensor determines that it is night time if the surrounding area is continuously dark for several minutes such as inside long tunnels, traffic jams inside tunnels, or in indoor parking lots. In this case, the lights turn off if the light switch is turned to the OFF position.
- The sensitivity of the auto-light control may be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Headlight High-Low Beam

The headlights switch between high and low beams by moving the lever forward or backward.




When the headlight high-beams are on, the headlight high-beam indicator light is turned on.



#### ▼ Flashing the Headlights

Can be used when the ignition is switched ON.

To flash the headlights, pull the lever fully towards you (the headlight switch does not need to be on).

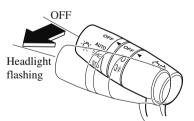

The headlight high-beam indicator light in the instrument cluster illuminates simultaneously. The lever will return to the normal position when released.




#### ▼ Coming Home Light

The coming home light turns on the headlights (low beams) when the lever is operated.

#### To turn on the lights

When the lever is pulled with the ignition switched to ACC or OFF, the low beam headlights turn on.

The headlights turn off after a certain period of time has elapsed after all of the doors are closed.



#### NOTE

• The time until the headlights turn off after all of the doors are closed can be changed.

Refer to the Settings section in the Mazda Connect Owner's Manual.

- If no operations are done for 3 minutes after the lever is pulled, the headlights turn off.
- The headlights turn off if the lever is pulled again while the headlights are illuminated.


#### ▼ Leaving Home Light

The leaving home light turns on the lights when the transmitter unlock button is pressed while away from the vehicle. The following lights turn on when the leaving home light is operated. Low beams, Position lights, Tail lights, Number plate lights.

#### To turn on the lights

When the ignition switch and the headlight switch are in the following conditions, the headlights will illuminate when the transmitter unlock button is pressed and the vehicle receives the transmitter signal. The headlights turn off after a certain period of time has elapsed (30 seconds).

- · Ignition switch: off
- Headlight switch: AUTO,  $\exists 0 0 \xi$ , or  $\exists D$

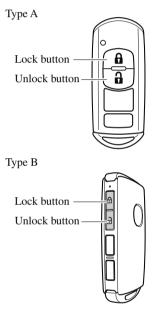

#### NOTE

- Operation of the leaving home light can be turned on or off. Refer to the Settings section in the Mazda Connect Owner's Manual.
- When the transmitter lock button is pressed and the vehicle receives the transmitter signal, the headlights turn off.

• When the headlight switch is turned to the OFF position, the headlights turn off.

#### ▼ Headlight Levelling

The number of passengers and weight of cargo in the luggage compartment change the angle of the headlights.

The angle of the headlights will be automatically adjusted when turning on the headlights.

#### ▼ Running Lights

Some countries require moving vehicles to have their lights on (running lights) during the daytime.

The running lights turn on or off automatically.

#### (Except Taiwan)

The running lights turn on or off automatically.

They turn off when the parking brake is operated or the selector lever is shifted to the P position.

#### NOTE

(Except countries prohibited by law) The running lights can be deactivated. Refer to Settings section in the Mazda Connect Owner's Manual.


### Front Fog Lights\*

The front fog lights can be used when the ignition is switched ON.

Use this switch to turn on the front fog lights. The front fog lights will improve visibility at night and during foggy conditions.

#### (Without rear fog light)


To turn the front fog lights on, rotate the fog light switch to the  $\mathfrak{P}$  position.



Fog light switch

#### (With rear fog light)

To turn the front fog lights on, rotate the fog light switch to the D or D position (the fog light switch returns to the D position automatically).

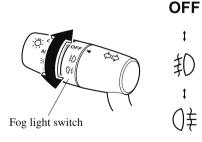

The headlight switch must be in the  $\exists 0 0 \exists 0$  position when turning on the front fog lights.

The front fog light indicator light in the instrument cluster illuminates while the front fog light are on.



To turn the front fog lights off, do any of the following:

- Rotate the fog light switch to the OFF position.
- (Except Taiwan) Turn the headlight switch to the OFF position.

- If the fog light switch is in the <sup>‡</sup>D position and the headlight switch is in the AUTO position, the fog lights will turn on when the headlights, the exterior lights turn on.
- When the fog light switch is rotated to the  $0^{\ddagger}$  position while the headlights or the front fog lights are turned on (the fog light switch returns to the  $10^{\ddagger}$  position automatically), the rear fog light turns on and the rear fog light indicator light turns on in the instrument cluster.

### **Rear Fog Light\***

The rear fog light can be used when the ignition is switched ON.

The rear fog light helps your vehicle to be seen.

When the lights are turned on, the rear fog lights indicator light in the instrument cluster turns on.




#### ▼ With Front Fog Lights

The headlight switch must be in the  $\exists 0 0 \exists 0$  position before turning on the rear fog light.

To turn the rear fog light on, rotate the fog light switch to the 0 position (the fog light switch returns to the 10 position automatically).

The rear fog light indicator light in the instrument cluster illuminates while the rear fog light is on.

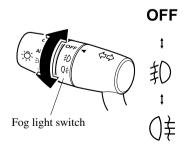

To turn the rear fog light off, do any of the following:

- Rotate the fog light switch to the 0position again (the fog light switch returns to the 10 position automatically).
- Rotate the fog light switch to the OFF position.

#### (Except Taiwan)

• Turn the headlight switch to the OFF position.

- The front fog lights turns on when the rear fog light is turned on.
- If the fog light switch is rotated to the Q<sup>‡</sup> position (the fog light switch returns to the <sup>‡</sup>D position automatically), the front fog light indicator light in the instrument cluster will also illuminate.
- When the headlight switch is in the AUTO position, and the headlights and exterior lights are illuminated, the rear fog light turns on when the rear fog light switch is turned on.

#### ▼ Without Front Fog Lights

The headlights must be turned on to turn on the rear fog light.

To turn the rear fog light on, rotate the fog light switch to the 0 \$ position (the fog light switch returns to its original position automatically).

The rear fog light indicator light in the instrument cluster illuminates while the rear fog light is on.



Fog light switch

To turn the rear fog light off, do any of the following:

• Rotate the fog light switch to the  $0^{\ddagger}$  position again (the fog light switch returns to its original position automatically).

#### (Except Taiwan)

• Turn the headlight switch to the OFF position.

The rear fog light indicator light in the instrument cluster goes off when the rear fog light is turned off.

#### NOTE

#### (With auto-light control)

When the headlight switch is in the AUTO position, and the headlights and exterior lights are illuminated, the rear fog light turns on when the rear fog light switch is turned on.


### Turn and Lane-Change Signals

The ignition must be switched ON to use the turn and lane-change signals.

#### ▼ Direction Indicators

Move the signal lever down (for a left turn) or up (for a right turn) to the stop position. The signal will self-cancel after the turn is completed.

If the indicator light continues to flash after a turn, manually return the lever to its original position.

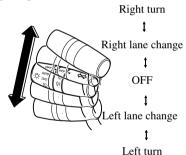

The direction indicators in the instrument cluster flash according to the operation of the direction indicator lever to show which signal is working.



#### NOTE

- If an indicator light stays on without flashing or if it flashes abnormally, one of the direction indicator bulbs may be burned out.
- A personalised function is available to change the turn indicator sound volume. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Lane-Change Signals

Move the lever halfway toward the direction of the lane change—until the indicator flashes— and hold it there. It will return to the off position when released.

#### ▼ Three-Flash Turn Signal

After releasing the direction indicator lever, the direction indicator flashes 3 times. The operation can be cancelled by moving the lever in the direction opposite to which it was operated.

#### NOTE

The three-flash turn signal function can be switched to operable/inoperable using the personalisation function. Refer to the Settings section in the Mazda Connect Owner's Manual.

### Windscreen Wipers and Washer

The ignition must be switched ON to use the wipers.



# Use only windscreen washer fluid or plain water in the reservoir:

Using radiator antifreeze as washer fluid is dangerous. If sprayed on the windscreen, it will dirty the windscreen, affect your visibility, and could result in an accident.

#### Only use windscreen washer fluid mixed with anti-freeze protection in freezing weather conditions:

Using windscreen washer fluid without anti-freeze protection in freezing weather conditions is dangerous as it could freeze on the windscreen and block your vision which could cause an accident. In addition, make sure the windscreen is sufficiently warmed using the defroster before spraying the washer fluid.

### 

- When the wipers are not used during freezing temperatures or for a long time, the wiper rubber may adhere to the glass. If the wipers are operated while adhered to the glass, it could damage the wiper rubber and motor.
- If the wipers are operated while the glass is dry, the glass could be scratched and the wiper rubber damaged. When the glass is dry, spray washer fluid before operating the wipers.


If the amount of washer fluid spray is insufficient, do not use the washer switch. If the washer switch continues to be operated with no washer fluid being sprayed, it could lead to pump damage.

#### NOTE

If the windscreen wipers are operated under cold weather conditions or during snowfall, they could stop due to accumulated snow on the windscreen. If the windscreen wipers stop due to accumulated snow on the windscreen, park the vehicle in a safe place, turn the wiper switch off, and then remove the accumulated snow. If the wiper switch is turned to another position other than OFF, the wipers will operate. If the wipers do not operate even though the wiper switch is turned to a position other than OFF, consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

#### ▼ Windscreen Wipers

Turn the wipers on by pressing the lever up or down.

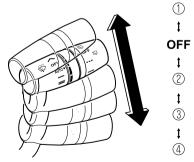


Swi	tch Pos	sition	
No.	Type A	Type B	Wiper operation
1		MIST	Operation while pulling up lever
	OFF		Stop
2	AU- TO	AU- TO	Auto control
3		LO	Low speed
4	—	HI	High speed

#### Auto-wiper control

When the wiper lever is in the AUTO position, the rain sensor senses the amount of rainfall on the windscreen and turns the wipers on or off automatically (off—intermittent—low speed—high speed).


The sensitivity of the rain sensor can be adjusted by turning the switch on the wiper lever.

From the centre position (normal), rotate the switch upward for higher sensitivity (faster response) or rotate it downward for less sensitivity (slower response).

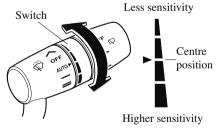

### 

Do not shade the rain sensor by adhering a sticker or a label on the windscreen. Otherwise the rain sensor will not operate correctly.

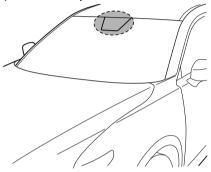

- When the ignition is switched ON and the wiper lever is in the AUTO position, the windscreen wipers may operate automatically in the following cases:
  - The area of the windscreen above the rain sensor is touched or wiped with a cloth.
  - The windscreen or the rain sensor area in the cabin is hit.

When the ignition is switched ON and the wiper lever is in the AUTO position, do not touch the windscreen or the windscreen wipers Otherwise, the windscreen wipers will operate automatically which could catch your fingers or damage the windscreen wipers.

When removing ice or snow, or cleaning the windscreen, always make sure the wiper lever is in the OFF position.


- Switching the auto-wiper lever from the OFF to the AUTO position while driving activates the windscreen wipers once, after which they operate according to the rainfall amount.
- The auto-wiper control may not operate when the rain sensor temperature is about -10 °C (14 °F) or lower, or about 85 °C (185 °F) or higher.
- If the windscreen is coated with water repellent, the rain sensor may not be able to sense the amount of rainfall correctly and auto-wiper control may not operate properly.
- If dirt or foreign matter (Such as ice or matter containing salt water) adheres to the windscreen above the rain sensor or if the windscreen is iced, it could cause the wipers to move automatically. However, if the wipers cannot remove this ice, dirt or foreign matter, the auto-wiper control will stop operation. In this case, set the wiper lever to the low speed position or high speed position for manual operation, or remove the ice, dirt or foreign matter by hand to restore the auto-wiper operation.
- If the auto-wiper lever is left in the AUTO position, the wipers could operate automatically from the effect of strong light sources, electromagnetic waves, or infrared light because the rain sensor uses an optical sensor. It is recommended that the auto-wiper lever be switched to the OFF position other than when driving the vehicle under rainy conditions.

• The auto-wiper control functions can be turned off.

Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Windscreen Washer

Pull the lever toward you and hold it to spray washer fluid.

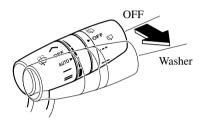

#### NOTE


If the windscreen washer is turned on when the windscreen wipers are not operating, the windscreen wipers operate a few times.

If the washer does not work, inspect the fluid level (page 6-24). If the fluid level is normal, consult an expert repairer (we recommend an Authorised Mazda Repairer).

### Rear Window Wiper and Washer

The ignition must be switched ON to use the wiper.

#### ▼ Rear Window Wiper

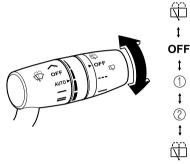

Turn the wiper on by turning the rear wiper/washer switch.

Switch Position		ition	
No.	Type A	Type B	Wiper operation
	OFF		Stop
1		INT	Intermittent
2		ON	Normal

#### ▼ Rear Window Washer


To spray washer fluid, turn the rear wiper/ washer switch to either of the ⊕ position. After the switch is released, the washer will stop.

If the washer does not work, inspect the fluid level (page 6-24). If the fluid level is normal and the washer still does not work, consult an expert repairer (we recommend an Authorised Mazda Repairer).

### Headlight Washer\*

The engine must be started and the headlights must be turned on.

If you want to operate headlight washers, double flick the wiper lever.



#### NOTE

- When the windscreen washer is operated for the first time after turning on the headlights, the headlight washers operate automatically.
- If air enters the headlight washer fluid pipe under conditions such as when the vehicle is brand-new or after an empty washer tank is replenished with washer fluid, washer fluid will not spray even when the wiper lever is operated. If this occurs, perform the following procedure:
  - 1. Start the engine.
  - 2. Turn on the headlights.
  - 3. Double flick the wiper lever several times until the washer fluid sprays.


#### **Rear Window Defogger**

The rear window defogger clears fog from the rear window.

The ignition must be switched ON to use the defogger.

Press the switch to turn on the rear window defogger. The rear window defogger operates for about 15 minutes and then turns off automatically. The indicator light illuminates when the defogger is operating.

To turn off the rear window defogger before the 15 minutes has elapsed, press the switch again.

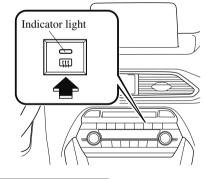

Do not use sharp instruments or window cleaners with abrasives to clean the inside of the rear window surface. They may damage the defogger grid inside the window.

#### NOTE

- This defogger is not designed for melting snow. If there is an accumulation of snow on the rear window, remove it before using the defogger.
- The rear window defogger setting can be changed. After changing the setting, the rear window defogger stops automatically after 15 minutes have elapsed and when the ambient temperature is high. When the ambient temperature is low, it continues to operate until the switch is pressed again.


Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Mirror Defogger\*

The mirror defoggers defrost the outside mirrors.

The mirror defoggers operate in conjunction with the rear window defogger.

To turn on the mirror defoggers, switch the ignition ON and press the rear window defogger switch (page 4-93).

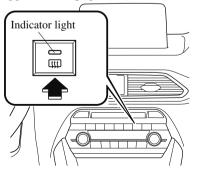


#### ▼ Windscreen Wiper De-icer\*

The windscreen wiper de-icer warms the lower part of the windscreen using thermal filaments which facilitates the removal of ice on the windscreen wipers and the accumulated snow on the lower part of the windscreen.

The windscreen wiper de-icer operates in conjunction with the rear window defogger.

To turn on the windscreen wiper de-icer, switch the ignition ON and press the rear window defogger switch (page 4-93).

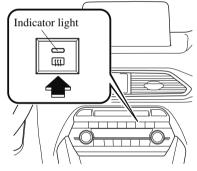

### Horn

To sound the horn, press the  $\triangleright$  mark on the steering wheel.

#### Hazard Warning Flasher

The hazard warning lights should always be used when you stop on or near a roadway in an emergency.



The hazard warning lights warn other drivers that your vehicle is a traffic hazard and that they must take extreme caution when near it.



Depress the hazard warning flasher and all the direction indicators will flash. The hazard warning indicator lights in the instrument cluster flash simultaneously.

- The direction indicators do not work when the hazard warning lights are on.
- Check local regulations about the use of hazard warning lights while the vehicle is being towed to verify that it is not in violation of the law.

- If the brake pedal is depressed while driving on slippery roads, the emergency stop signal system could operate causing all the turn and lane change signals to flash. Refer to Emergency Stop Signal System on page 4-106.
- While the emergency stop signal system is operating, all the direction indicators automatically flash rapidly to caution the driver of a vehicle following behind your vehicle of a sudden braking situation. Refer to Emergency Stop Signal System on page 4-106.

### **Brake System**

#### ▼ Foot Brake

This vehicle has power-assisted brakes that adjust automatically through normal use.

Should power-assist fail, you can stop by applying greater force than normal to the brake pedal. But the distance required to stop will be greater than usual.

### 

# Do not coast with the engine stalled or turned off, find a safe place to stop:

Coasting with the engine stalled or turned off is dangerous. Braking will require more effort, and the brake's power-assist could be depleted if you pump the brake. This will cause longer stopping distances or even an accident.

# Shift to a lower gear when going down steep hills:


Driving with your foot continuously on the brake pedal or steadily applying the brakes for long distances is dangerous. This causes overheated brakes, resulting in longer stopping distances or even total brake failure. This could cause loss of vehicle control and a serious accident. Avoid continuous application of the brakes.

#### Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal:

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.

### 

- Do not drive with your foot held on the brake pedal. Doing so could result in the following:
  - The brake parts will wear out more quickly.
  - The brakes can overheat and adversely affect brake performance.
- Always depress the brake pedal with the right foot. Applying the brakes with the unaccustomed left foot could slow your reaction time to an emergency situation resulting in insufficient braking operation.

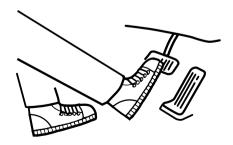


#### <sup>When Driving</sup> Brake

Wear shoes appropriate for driving in order to avoid your shoe contacting the brake pedal when depressing the accelerator pedal.

#### ▼ Electric Parking Brake (EPB)

The EPB equipment applies the parking brake using an electric motor. When the parking brake is applied, the EPB switch indicator light turns on.

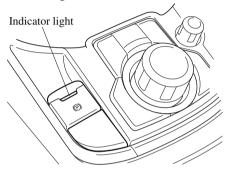

### 

# Do not drive the vehicle with the parking brake applied:

If the vehicle is driven with the parking brake applied, the brake parts may generate heat and the brake system may not operate, leading to an accident. Before driving, release the parking brake and verify that the EPB indicator light is turned off.


- The parking brake cannot be applied or released while the vehicle battery is dead.
- An operation sound occurs when applying or releasing the parking brake, however, this does not indicate a malfunction.
- If the EPB is not used for long periods, an automatic inspection of the system is performed while the vehicle is parked. An operation sound can be heard, however, this does not indicate a problem.
- When the parking brake is applied and the ignition is switched OFF, an operation sound can be heard, however, this does not indicate a problem.
- The brake pedal may move while the parking brake is being applied or released, however, this does not indicate a problem.
- If the EPB switch is continually pulled while driving the vehicle, the parking brake will be applied and the EPB warning beep will be activated. When the switch is released, the parking brake is released and the beep stops.
- If the parking brake is applied with the ignition switched off or in ACC, the EPB indicator light in the instrument cluster and the indicator light in the switch may turn on for 15 seconds.
- When running the vehicle through an automatic car wash, it may be necessary to switch the ignition off with the parking brake released depending on the type of automatic car wash.

#### When applying the parking brake

The parking brake can be applied regardless of the ignition switch position. Securely depress the brake pedal and pull up the EPB switch.

The parking brake is applied and the EPB indicator light and the EPB switch indicator light turn on.

Refer to If a Warning Light Turns On or Flashes on page 7-36.

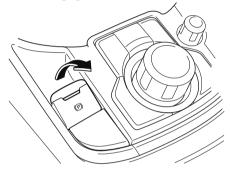


#### When releasing the parking brake

The parking brake can be released while the ignition is switched ON or the engine is running. When the parking brake is released, the EPB indicator light and the EPB switch indicator light turn off.

#### Parking brake manual release

Firmly depress the brake pedal and press the EPB switch.

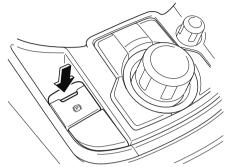

If the EPB switch is pressed without depressing the brake pedal, the display in the instrument cluster notifies the driver that the brake is not depressed.

#### (Type A/B instrument cluster)

A message is displayed on the multi-information display in the instrument cluster.

Refer to Message Indicated in Multi-information Display on page 7-55.

#### (Type C instrument cluster)

The brake pedal operation demand indicator light (green) in the instrument cluster turns on.



#### Parking brake automatic release

If the accelerator pedal is depressed with the parking brake applied and all of the following conditions met, the parking brake is released automatically.

- $\cdot$  The engine is running.
- The driver's door is closed.
- $\cdot$  The driver's seat belt is fastened.
- Selector lever is in the D, M, or R position

#### NOTE

If something such as the driver's foot contacts the accelerator pedal with the engine running and the parking brake applied, the parking brake may be released automatically. If you do not intend to drive immediately, shift the selector lever to the P or N position.


#### ▼ Warning Light

The warning light turns on when the system has a malfunction.

Contact an expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

#### ▼ Brake Pad Wear Indicator

When the disc brake pads become worn, the built-in wear indicators contact the disc plates. This causes a screeching noise to warn that the pads should be replaced.

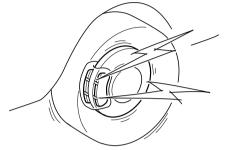

When you hear this noise, consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

### 

#### Do not drive with worn disc pads:

Driving with worn disc pads is dangerous. The brakes could fail and cause a serious accident. As soon as you hear a screeching noise consult an expert repairer (we recommend an Authorised Mazda Repairer).

#### NOTE

In high humidity weather conditions, brake noises, such as brake squeak or brake squeal can be heard. It does not indicate a malfunction.

#### ▼ Brake Assist

During emergency braking situations when it is necessary to depress the brake pedal with greater force, the brake assist system provides braking assistance, thus enhancing braking performance.

When the brake pedal is depressed hard or depressed more quickly, the brakes apply more firmly.

- When the brake pedal is depressed hard or depressed more quickly, the pedal will feel softer but the brakes will apply more firmly. This is a normal effect of the brake assist operation and does not indicate a malfunction.
- When the brake pedal is depressed hard or depressed more quickly, a motor/ pump operation noise may be heard. This is a normal effect of the brake assist and does not indicate a malfunction.
- The brake assist equipment does not supersede the functionality of the vehicle's main braking system.

### AUTOHOLD

The AUTOHOLD function automatically holds the vehicle stopped, even if you take your foot off the brake pedal. This function can be best used while stopped in traffic or at a traffic light. The brakes are released when you start driving the vehicle.

### 

#### Do not rely completely on the AUTOHOLD function:

The AUTOHOLD function is only designed to assist the brake operation while the vehicle is stopped. Neglecting to operate the brakes and relying only on the AUTOHOLD system is dangerous and could result in an unexpected accident if the vehicle were to suddenly move. Operate the brakes appropriately in accordance with the road and surrounding conditions. Note that the vehicle may move suddenly depending on the vehicle's load or if it is towing something.

#### Do not release your foot from the brake pedal while the vehicle is stopped on a steep grade:

Because there is a possibility of the vehicle not being held in the stopped position by the AUTOHOLD function, the vehicle may move unexpectedly and result in an accident.

# Do not use the AUTOHOLD function on slippery roads such as icy or snow-covered roads, or unpaved roads:

Even if the vehicle is held in the stopped position by the AUTOHOLD function, the vehicle may move unexpectedly and result in an accident. Operate the accelerator pedal, brakes, or steering wheel appropriately as necessary.

#### Immediately depress the brake pedal in the following cases:

Because the AUTOHOLD function is cancelled forcibly, the vehicle may move unexpectedly and result in an accident.

The brake pedal operation demand warning light (red) flashes and the warning sound is activated at the same time.



[Brake Hold Unavailable Depress Brake to Hold Position] is displayed in the multi-information display and the warning sound is activated at the same time.

#### Always apply the parking brake when parking the vehicle:

Not applying the parking brake when parking the vehicle is dangerous as the vehicle may move unexpectedly and result in an accident. When parking the vehicle, shift the selector lever to the P position and apply the parking brake.


## 

If you stop operating the accelerator pedal before the vehicle starts moving, the force holding the vehicle in the stopped position may weaken. Firmly depress the brake pedal or depress the accelerator pedal to accelerate the vehicle.

#### NOTE

- Under the following conditions, a problem with the AUTOHOLD is occurring. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
  - The brake pedal operation demand warning light (red) in the instrument cluster flashes and the warning sound is activated for about 5 seconds while the AUTOHOLD is operating or when you press the AUTOHOLD switch.
  - A message is indicated on the multi-information display and a warning sound is activated for about 5 seconds while the AUTOHOLD is operating or when your press the AUTOHOLD switch.
- If you switch the ignition OFF while the AUTOHOLD is operating, the parking brake is applied automatically to assist you with parking the vehicle.
- The AUTOHOLD is cancelled when the selector lever is shifted to R position while the vehicle is on level ground, or facing up a hill or grade (as shown below).


- : Driving in reverse (selector lever in R)

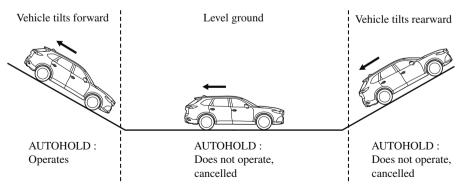

• The brake pedal response may change, sound may occur from the brakes, or the brake pedal could vibrate from the operation of the AUTOHOLD function. However, this does not indicate a malfunction.

#### ▼ To Turn On AUTOHOLD System

Press the AUTOHOLD switch and when the AUTOHOLD standby indicator light turns on, the AUTOHOLD function turns on.

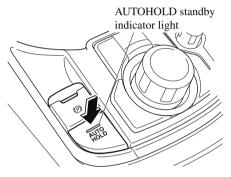

#### NOTE

When all of the following conditions are met, the AUTOHOLD standby indicator light turns on when the AUTOHOLD switch is pressed and the AUTOHOLD function turns on.

- The ignition is switched ON (engine is running or stopped by i-stop).
- The driver's seat belt is fastened.
- · The driver's door is closed.
- There is no problem with the *AUTOHOLD function*.

# To operate AUTOHOLD and hold the brakes

1. Depress the brake pedal and bring the vehicle to a complete stop.

2. The AUTOHOLD active indicator light in the instrument cluster turns on and the brakes are held.



3. The vehicle is held in its stopped position even with the brake pedal released.

#### NOTE

When all of the following conditions are met, the AUTOHOLD operates and the brakes are held.

- The ignition is switched ON (engine is running or stopped by i-stop).
- $\cdot$  The vehicle is stopped.
- · The brake pedal is being depressed.
- The AUTOHOLD active indicator light turns on.
- · The accelerator pedal is not depressed.
- The driver's seat belt is fastened.
- The driver's door is closed.
- There is no problem with the *AUTOHOLD function*.
- The parking brake is released.
- There is no problem with the Electric Parking Brake (EPB) function.
- The selector lever is in a position other than R position or the vehicle tilts forward with the selector lever in the R position.

#### To release AUTOHOLD and start driving the vehicle

If you try to resume driving the vehicle, the brakes release automatically and the AUTOHOLD active indicator light turns off.

#### NOTE


resumes.

- If the Electric Parking Brake (EPB) switch is pulled while the AUTOHOLD is operating, the parking brake is applied and the AUTOHOLD is released. In addition, if the parking brake is released under this condition, the AUTOHOLD operates to hold the brakes.
- Under the following conditions, the parking brake is automatically applied and the AUTOHOLD is released. The AUTOHOLD is re-enabled when the conditions before the AUTOHOLD is released are restored.
- The driver's seat belt is unfastened.
  The driver's door is opened.
  When about 10 minutes or longer have passed since the AUTOHOLD operation started, the parking brake is automatically applied. Because the AUTOHOLD is restored when releasing the parking brake, the hold on the brakes by AUTOHOLD function

## es to hold the

#### ▼ To Turn Off AUTOHOLD System

Depress the brake pedal and press the AUTOHOLD switch. The AUTOHOLD is turned off and the AUTOHOLD standby indicator light turns off.

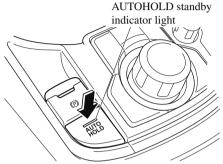

- When the brakes are not held such as while driving the vehicle, the AUTOHOLD can be turned off only by pressing the AUTOHOLD switch.
- (Type A/B instrument cluster) If the AUTOHOLD switch is pressed without depressing the brake pedal while AUTOHOLD is operating (AUTOHOLD active indicator light in instrument cluster is turned on), the message Brake Pedal Must Be Depressed to Deactivate Auto Hold System is indicated on the multi-information display to notify the driver to depress the brake pedal.

#### · (Type C instrument cluster)

If the AUTOHOLD switch is pressed without depressing the brake pedal while the AUTOHOLD is operating (AUTOHOLD active indicator light is turned on), the brake pedal operation demand indicator light (green) in the instrument cluster turns on to notify the driver that it is necessary to depress the brake pedal.



(Green)

- If any of the following conditions occurs while the AUTOHOLD function is operating (AUTOHOLD active indicator light is turned on), the parking brake is applied automatically and the AUTOHOLD function turns off. For the Electric Parking Brake (EPB) operation, refer to the Electric Parking Brake (EPB) on page 4-98.
  - The ignition is switched OFF.
  - There is a problem with the *AUTOHOLD function*.
- Turn off the AUTOHOLD before switching OFF the ignition so that the parking brake is not applied automatically.

### Emergency Stop Signal System

If you apply the brakes suddenly while driving at a speed of about 55 km/h (34 mph) or faster, the emergency stop signal system automatically and rapidly flashes all the direction indicator lights to caution drivers behind your vehicle of the sudden braking situation.

#### NOTE

#### · Flashing

When you bring your vehicle to a complete stop while all the direction indicator lights are flashing rapidly, the rapid flashing of all the direction indicator lights changes back to the normal flashing pattern. When the hazard warning light switch is pressed, all of the direction indicator lights turn off.

#### · Operation

- When the ABS operates, the emergency stop signal system is more likely to operate. Therefore, if the brake pedal is depressed on a slippery road, all of the direction indicator lights may flash.
- The emergency stop signal system does not operate when the hazard warning light switch is pressed.

### Hill Launch Assist (HLA)

HLA is a function which assists the driver in accelerating from a stop while on a slope. When the driver releases the brake pedal and depresses the accelerator pedal while on a slope, the function prevents the vehicle from rolling. The braking force is maintained automatically after the brake pedal is released on a steep grade. HLA operates on a downward slope when the selector lever is in the reverse (R) position, and on an upward slope when the selector lever is in a forward gear.

## 

#### Do not rely completely on HLA :

HLA is an auxiliary device for accelerating from a stop on a slope. The system only operates for about 2 seconds and therefore, relying only on the system, when accelerating from a stop is dangerous because the vehicle may move (roll) unexpectedly and cause an accident. The vehicle could roll depending on the vehicle's load or if it is towing something. Always confirm the safety around the vehicle before starting to drive the vehicle.

- HLA does not operate on a gentle slope. In addition, the gradient of the slope on which the system will operate changes depending on the vehicle's load.
- *HLA does not operate if the parking brake is applied, or if the vehicle has not stopped completely.*
- HLA is operating, the brake pedal may feel stiff and vibrate, however, this does not indicate a malfunction.

- HLA does not operate while the TCS/DSC indicator light is illuminated. Refer to Contact an expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.
- HLA does not turn off even if the TCS OFF switch is pressed to turn off the TCS.

### Antilock Brake System (ABS)

The ABS control unit continuously monitors the speed of each wheel. If one wheel is about to lock up, the ABS responds by automatically releasing and reapplying that wheel's brake.

The driver will feel a slight vibration in the brake pedal and may hear a chattering noise from the brake system. This is normal ABS system operation. Continue to depress the brake pedal without pumping the brakes.

The warning light turns on when the system has a malfunction. Contact an expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

## 

# Do not rely on ABS as a substitute for safe driving:

The ABS cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), driving on ice and snow, and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

#### NOTE

Braking distances may be longer on loose surfaces (snow or gravel, for example) which usually have a hard foundation. A vehicle with a normal braking system may require less distance to stop under these conditions because the tyres will build up a wedge of surface layer when the wheels skid.
The sound of the ABS operating may be heard when starting the engine or immediately after starting the vehicle, however, it does not indicate a malfunction.

### Traction Control System (TCS)

The Traction Control System (TCS) enhances traction and safety by controlling engine torque and braking. When the TCS detects driving wheel slippage, it lowers engine torque and operates the brakes to prevent loss of traction.

This means that on a slick surface, the engine adjusts automatically to provide optimum power to the drive wheels, limiting wheel spin and loss of traction.

The warning light turns on when the system has a malfunction. Contact an expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

## 

# Do not rely on the Traction Control System (TCS) as a substitute for safe driving:

The Traction Control System (TCS) cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

Use snow tyres or tyre chains and drive at reduced speeds when roads are covered with ice and/or snow:

Driving without proper traction devices on snow and/or ice-covered roads is dangerous. The Traction Control System (TCS) alone cannot provide adequate traction and you could still have an accident.

#### NOTE

To turn off the TCS, press the TCS OFF switch (page 4-110).

#### ▼ TCS/DSC Indicator Light



This indicator light stays on for a few seconds when the ignition is switched ON. If the TCS, DSC or the Trailer Stability Control (TSC)<sup>\*</sup> is operating, the indicator light flashes.

If the light stays on, the TCS, DSC or the brake assist system may have a malfunction and they may not operate correctly. Take your vehicle to an expert repairer (we recommend an Authorised Mazda Repairer).

- In addition to the indicator light flashing, a slight labouring sound will come from the engine. This indicates that the TCS/DSC is operating properly.
- On slippery surfaces, such as fresh snow, it will be impossible to achieve high rpm when the TCS is on.

#### ▼ TCS OFF Indicator Light<sup>\*</sup>


## TCS OFF

This indicator light stays on for a few seconds when the ignition is switched ON. It also illuminates when the TCS OFF switch is pressed and TCS is switched off. Refer to TCS OFF Switch on page 4-110.

If the light remains illuminated and the TCS is not switched off, take your vehicle to an expert repairer (we recommend an Authorised Mazda Repairer). The DSC may have a malfunction.

#### ▼ TCS OFF Switch\*

Press the TCS OFF switch to turn off the TCS. The TCS OFF indicator light in the instrument cluster and TCS OFF switch indicator light turn on.

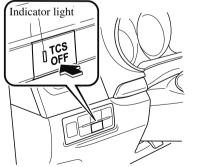

Press the switch again to turn the TCS back on. The TCS OFF indicator light and TCS OFF switch indicator light will turn off.

- When TCS is on and you attempt to free the vehicle when it is stuck, or drive it out of freshly fallen snow, the TCS (part of the DSC system) will activate. Depressing the accelerator will not increase engine power and freeing the vehicle may be difficult. When this happens, turn off the TCS.
- If the TCS is off when the engine is turned off, it automatically activates when the ignition is switched ON.
- Leaving the TCS on will provide the best traction.
- If the TCS OFF switch is pressed and held for 10 seconds or longer, the TCS can no longer be turned off even if the TCS OFF switch is pressed. In this case, the TCS OFF switch will operate normally when the ignition is switched ON again after being switched OFF.

### Dynamic Stability Control (DSC)

The Dynamic Stability Control (DSC) automatically controls braking and engine torque in conjunction with systems such as ABS and TCS to help control side slip when driving on slippery surfaces, or during sudden or evasive manoeuvring, enhancing vehicle safety.

Refer to ABS (page 4-108) and TCS (page 4-109).

DSC operation is possible at speeds greater than 20 km/h (12 mph).

The warning light turns on when the system has a malfunction.

Contact an expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

## 

#### Do not rely on the Dynamic Stability Control as a substitute for safe driving:

The Dynamic Stability Control (DSC) cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), and hydroplaning (reduced tyre friction and road contact because of water on the road surface). You can still have an accident.

## 

The DSC may not operate correctly unless the following are observed:

- Use tyres of the correct size specified for your Mazda on all 4 wheels.
- Use tyres of the same manufacturer, brand and tread pattern on all 4 wheels.
- > Do not mix worn tyres.
- The DSC may not operate correctly when tyre chains are used or a temporary spare tyre is installed because the tyre diameter changes.
- ▼ TCS/DSC Indicator Light



This indicator light stays on for a few seconds when the ignition is switched ON. If the TCS, DSC or the Trailer Stability Control (TSC)<sup>\*</sup> is operating, the indicator light flashes.

If the light stays on, the TCS, DSC or the brake assist system may have a malfunction and they may not operate correctly. Take your vehicle to an expert repairer (we recommend an Authorised Mazda Repairer).

### Trailer Stability Control (TSC)\*

If the vehicle sways while being driven and towing a trailer, the Trailer Stability Control (TSC) automatically controls braking and engine torque to suppress the swaying and enhance vehicle stability. The Trailer Stability Control (TSC) is operable at a vehicle speed of about 65 km/h (40 mph) or more.

When the Trailer Stability Control (TSC) operates while driving the vehicle, the TCS/DSC indicator light flashes. Refer to TCS/DSC Indicator Light on page 4-111.

#### Do not rely solely on the Trailer Stability Control (TSC)

Assured vehicle stability is limited even if the Trailer Stability Control (TSC) is operating. Drive carefully to prevent accidents.

In particular, if the TCS/DSC indicator light is flashing, drive the vehicle carefully as it is in a less stable condition and could sway more easily. Drive with caution and in accordance with the road, vehicle and trailer conditions.

## 

- The Trailer Stability Control (TSC) may not operate correctly unless the following are observed:
  - Use tyres of the correct size specified for your Mazda on all four wheels.
  - Use tyres of the same manufacturer, brand and tread pattern on all four wheels.
  - ➤ Do not mix worn tyres.
- The Trailer Stability Control (TSC) may not operate correctly when tyre chains are used or a temporary spare tyre is installed because the tyre diameter changes.

- The Trailer Stability Control (TSC) uses the TCS/DSC functions. The Trailer Stability Control (TSC) does not operate if there is a malfunction in the TCS/DSC (the TCS/DSC indicator light turns on).
- When the Trailer Stability Control (TSC) is operating, the brake lights may turn on.
- For information regarding trailer towing, refer to Towing Caravans and Trailers (Russia) on page 3-57.

### **Off-Road Traction Assist\***

When the vehicle tyres become embedded in mud, sand, or deep snow, the Off-Road Traction Assist functions to prevent drive-wheel spinning and to assist in freeing tyres that are stuck.

Do not drive over rough rocky roads and river beds.

## 

#### Do not rely completely on the Off-Road Traction Assist.

The Off-Road Traction Assist has limitations. Always drive the vehicle safely according to the road conditions. Do not drive the vehicle recklessly, otherwise it may result in an accident. In addition, do not drive the vehicle under the following conditions while the Off-Road Traction Assist is operating. Otherwise, it could negatively affect the drivetrain parts which could result in an accident.

- > Vehicle is driven on paved roads.
- Temporary spare tyre or tyres of a different specified size are used.
- Tyre chains are used.



The Off-Road Traction Assist is a function to assist in freeing tyres that are stuck. When it is not necessary to use this function, avoid driving the vehicle continuously with the Off-Road Traction Assist on.

# (Vehicle equipped with Type A/B instrument cluster)

If the vehicle is driven continuously with the Off-Road Traction Assist on, the AWD warning indication may be displayed. Wehicle equipmed with Type C instrument

# (Vehicle equipped with Type C instrument cluster)

If the vehicle is driven continuously with the Off-Road Traction Assist on, the AWD warning light may flash. Refer to If a Warning Light Turns On or Flashes on page 7-36.

#### NOTE

The vehicle may vibrate or you might hear an operation sound while the Off-Road Traction Assist is operating or is operational, however, this does not indicate a problem.

#### ▼ Off-Road Traction Assist Indicator Light




- When the ignition is switched ON, the indicator light turns on and then turns off after a few seconds.
- When pressing the Off-Road Traction Assist switch to operate the Off-Road Traction Assist, the indicator light turns on.
- A problem in the system might be indicated under the following conditions. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

- The indicator light does not turn on when the ignition is switched ON or it remains on.
- The indicator light turns on even though the Off-Road Traction Assist was not operated.

#### ▼ Off-Road Traction Assist Switch

When the switch is pressed after stopping the vehicle, the Off-Road Traction Assist becomes operational.

The Off-Road Traction Assist indicator light in the instrument cluster and the Off-Road Traction Assist switch indicator light turn on.

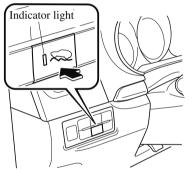

If the switch is pressed again, the Off-Road Traction Assist is stopped and the Off-Road Traction Assist indicator light and the Off-Road Traction Assist switch indicator light turn off.

#### NOTE

If the engine is stopped with the Off-Road Traction Assist operational, the Off-Road Traction Assist is stopped when the engine is started the next time.

### **Drive Selection**

Drive selection is a system to switch the vehicle's drive mode. When the sport mode is selected, the vehicle's response against accelerator operation is enhanced. This provides additional quick acceleration which may be needed to safely make manoeuvres such as lane changes, merging onto freeways, or passing other vehicles.

## 


Do not use the sport mode when driving on slippery roads such as wet or snow-covered roads. It may cause tyre slipping.

#### NOTE

- When sport mode is selected, driving at higher engine speeds may increase fuel consumption. Mazda recommends that you cancel sport mode for normal driving.
- · Drive mode cannot be switched in the following conditions:
  - ABS/TCS/DSC is operating
  - The Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System/Mazda Radar Cruise Control (MRCC) system/cruise control is operating.
  - · Steering wheel is being operated abruptly

#### ▼ Drive Selection Switch

Press the drive selection switch forward ("SPORT") to select the sport mode. Pull the drive selection switch back ("——") to cancel the sport mode.

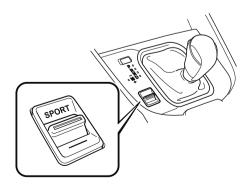

- In the following cases, the drive selection is cancelled.
  - The ignition is switched OFF.
  - Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System/Mazda Radar Cruise Control (MRCC) system/cruise control is set.
- Depending on the driving conditions when sport mode is selected, the vehicle may perform shift-down or slightly accelerate.

#### ▼ Select Mode Indication

When the sport mode is selected, the select mode indication turns on in the instrument cluster.

## **SPORT**

#### NOTE

If the drive selection cannot be switched to sport mode, the select mode indication flashes to notify the driver.

## i-ACTIV AWD Operation\*

AWD provides excellent drivability on snow-covered and ice-packed roads, sand and mud, as well as on steep slopes and other slippery surfaces.

A system malfunction or operation conditions are indicated by a warning. Contact an expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

## 

#### Never spin a wheel that is off the ground:

Spinning a wheel that is off the ground as a result of the vehicle being stuck or in a ditch is dangerous. The drive assembly could be seriously damaged which could lead to an accident or could even lead to overheating, oil leakage, and a fire.

#### ▼ AWD Driving

## 

#### Avoid sharp turns, excessive speed and abrupt manoeuvres when driving this vehicle:

Sharp turns, excessive speed and abrupt manoeuvring of this vehicle is dangerous as it could result in the increased risk of loss of vehicle control, vehicle roll-over, personal injury or death.

This vehicle has a higher centre of gravity. Vehicles with a higher centre of gravity such as utility and AWD vehicles handle differently than vehicles with a lower centre of gravity. Utility and AWD vehicles are not designed for cornering at high speeds any more than low profile sports cars are designed to perform satisfactorily under off-road conditions. In addition, utility vehicles have a significantly higher rollover rate than other types of vehicles.

#### Drive carefully when the vehicle is loaded by lowering vehicle speed and applying the brakes earlier:

Abrupt manoeuvring and sudden braking when driving a loaded vehicle is dangerous as the driving behaviour of a vehicle with a high centre of gravity is different when it is loaded compared to when it is not, and could result in the loss of vehicle control and an accident.

#### ▼ Tyres and Tyre Chains

The condition of the tyres plays a large role in the performance of the vehicle. Moreover, to prevent adverse effects to the drive assembly, please note the following:

#### Tyres

- When replacing tyres, always replace all front and rear tyres at the same time.
- All tyres must be of the same size, manufacture, brand and tread pattern. Pay particular attention when equipping snow or other types of winter tyres.
- Do not mix tread-worn tyres with normal tyres.
- Inspect tyre inflation pressures at the specified periods adjust to the specified pressures.

#### NOTE

Check the tyre inflation pressure label attached to driver's door frame for the correct tyre inflation pressure.

• Make sure to equip the vehicle with genuine tyres of the specified size, on all wheels. With AWD, the system is calibrated for all 4 wheels being of the same dimensions.

#### Tyre chains

- Install tyre chains to the front tyres.
- Do not use tyre chains on the rear wheels.
- Do not drive the vehicle faster than 30 km/h (19 mph) with the tyre chains installed.
- Do not drive the vehicle with tyre chains on road conditions other than snow or ice.

#### ▼ Towing

If the vehicle requires towing, have it towed with all 4 wheels completely off the ground.

Refer to Towing Description on page 7-32.

### **Power Steering**

- Power steering is only operable when the engine is running. If the engine is off or if the power steering system is inoperable, you can still steer, but it requires more physical effort. If the steering feels stiffer than usual during normal driving or the steering vibrates, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The warning indication/warning light notifies the driver of system abnormalities and operation conditions. In addition, the buzzer may also activate depending on the system abnormality or operation condition. Refer to Stop Vehicle in Safe Place Immediately on page 7-36.

Refer to Power Steering Warning Buzzer on page 7-60.

## 

Never hold the steering wheel to the extreme left or right for more than 5 seconds with the engine running. This could damage the power steering system.

### i-ACTIVSENSE\*

i-ACTIVSENSE is a collective term covering a series of advanced safety and driver support systems which make use of a Forward Sensing Camera (FSC) and radar sensors. These systems consist of active safety and pre-crash safety systems.

These systems are designed to assist the driver in safer driving by reducing the load on the driver and helping to avert collisions or reduce their severity. However, because each system has its limitations, always drive carefully and do not rely solely on the systems.

#### ▼ Active Safety Technology

Active Safety Technology supports safer driving by helping the driver to recognise potential hazards and avert accidents.

#### Driver awareness support systems

Adaptive LED Headlights (ALH)page 4-123
Left/right side and rear side detection
Lane Departure Warning System (LDWS)page 4-173 Blind Spot Monitoring (BSM)page 4-125
Road sign recognition
Traffic Sign Recognition System (TSR)page 4-131
Inter-vehicle distance recognition
Distance Recognition Support System (DRSS)page 4-137
Driver fatigue detection
Driver Attention Alert (DAA) page 4-141
Rear obstruction detection when leaving a parking space
Rear Cross Traffic Alert (RCTA)page 4-143
Full-surround recognition
360°View Monitor page 4-201
Driver support systems
Inter-vehicle distance
Mazda Radar Cruise Control (MRCC) page 4-147 Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) page 4-158

#### Lane departure

Lane-keep Assist System (LAS	b)page 4-173
------------------------------	--------------

#### ▼ Pre-Crash Safety Technology

Pre-crash safety technology is designed to assist the driver in averting collisions or reduce their severity in situations where they cannot be avoided.

#### Collision damage reduction in low vehicle speed range

#### **Forward driving**

Smart City Brake Support [Forward] (SCBS F)	page 4-192
Advanced Smart City Brake Support (Advanced SCBS)	page 4-189

#### **Reverse driving**

Smart City Brake Support [Reverse] (SCBS R).....page 4-195

#### Collision damage reduction in medium/high speed range

Smart Brake Support (SBS).....page 4-199

#### ▼ Camera and Sensors

#### Forward Sensing Camera (FSC)

The Forward Sensing Camera (FSC) detects lane indications and recognises headlights, tail lights and city lights during nighttime driving. In addition, it also detects the vehicle ahead, pedestrians, or obstructions. The following systems also use the Forward Sensing Camera (FSC).

- Adaptive LED Headlights (ALH)
- · Driver Attention Alert (DAA)
- · Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS)
- Traffic Sign Recognition System (TSR)
- · Advanced Smart City Brake Support (Advanced SCBS)
- · Smart City Brake Support [Forward] (SCBS F)
- Smart Brake Support (SBS)
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)

The Forward Sensing Camera (FSC) is installed at the top of the windscreen near the rearview mirror.

Refer to Forward Sensing Camera (FSC) on page 4-228.

#### Radar sensor (front)

The radar sensor (front) functions by detecting the radio waves reflected off a vehicle ahead sent from the radar sensor. The following systems also use the radar sensor (front).

- · Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
- · Mazda Radar Cruise Control (MRCC)
- Distance Recognition Support System (DRSS)
- Smart Brake Support (SBS)

The radar sensor (front) is mounted behind the radiator grille. Refer to Radar Sensor (Front) on page 4-233.

#### Radar sensors (rear)

The radar sensors (rear) function by detecting the radio waves reflected off a vehicle approaching from the rear or an obstruction sent from the radar sensors. The following systems also use the radar sensors (rear).

- · Blind Spot Monitoring (BSM)
- Rear Cross Traffic Alert (RCTA)

The radar sensors (rear) are installed inside the rear bumper, one each on the left and right sides.

Refer to Radar Sensors (Rear) on page 4-236.

#### Ultrasonic sensors (rear)

The ultrasonic sensors (rear) function by detecting the ultrasonic waves reflected off obstructions at the rear sent from the ultrasonic sensors. The following systems also use the ultrasonic sensors (rear).

• Smart City Brake Support [Reverse] (SCBS R)

The ultrasonic sensors (rear) are mounted in the rear bumper. Refer to Ultrasonic Sensors (Rear) on page 4-238.

#### Front camera/side cameras/rear view camera

The front camera, side cameras, and rear camera shoot images of the area surrounding the vehicle. The 360° View Monitor uses each camera.

Cameras are installed to the front bumper, door mirrors, and liftgate.

Refer to Front Camera/Side Cameras/Rear Camera on page 4-239.

### Adaptive LED Headlights (ALH)\*


The ALH are a system which uses the Forward Sensing Camera (FSC) to determine the situation of a vehicle ahead or a vehicle approaching in the opposite direction while driving at night to automatically switch the illumination range of the headlights, the illuminated area, or the illumination brightness. Refer to Forward Sensing Camera (FSC) on page 4-228.

The ALH are controlled between high and low beams as follows to assure the driver's visibility without dazzling a vehicle ahead or a vehicle approaching in the opposite direction.

#### **Glare-Free High Beam**

This feature dims only the high-beam light shone on the vehicle ahead.

The high beams will dim while driving at a speed of about 40 km/h (25 mph) or faster. When the vehicle speed is less than about 30 km/h (19 mph), the beams switch to the low beams.

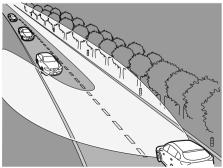


#### NOTE

The headlight high-beam indicator light turns on while the high beams are on.

#### Wide-Range Low Beam

This feature extends the illumination range of the light cast by the low beams while driving at a speed less than about 40 km/h (25 mph).

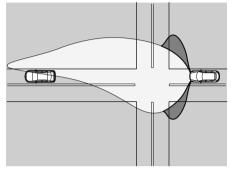

#### **Highway Mode**

This feature shifts the illumination angle of the light cast by the headlights upward while driving on highways.



The distance in which the ALH can detect objects varies depending on the surrounding conditions.

## 

- Do not modify the suspensions or headlight units, or remove the camera. Otherwise, the ALH may not operate normally.
- Do not rely excessively on the ALH and drive the vehicle while paying sufficient attention to safety. Switch the headlights between the high beams and low beams manually if necessary.

#### NOTE

Under the following conditions, the ALH may not operate normally. Manually switch between the high and low beams according to the visibility, and the road and traffic conditions.

- When there are other sources of light in the area such as street lamps, illuminated signboards, and traffic signals.
- When there are reflective objects in the surrounding area such as reflective plates and signs.
- When visibility is reduced under rain, snow and foggy conditions.
- When driving on roads with sharp curves or undulations.
- When the headlights/rear lamps of vehicles ahead or in the opposite lane are dim or not illuminated.
- When there is insufficient darkness such as at dawn or dusk.
- When the luggage compartment is loaded with heavy objects or the rear passenger seats are occupied.
- When visibility is reduced due to a vehicle ahead spraying water from its tyres onto your windscreen.

#### ▼ To Operate the System

The system switches the headlights to the high beams after the ignition is switched ON and the headlight switch is in the **AUTO** position. The ALH indicator light (green) in the instrument cluster turns on simultaneously.



The ALH determine that it is nighttime based on the brightness of the surrounding area.

The system cancels operation when the headlight switch is turned to a position other than **AUTO**, the headlights are manually switched to low beams, or the high beams are flashed on and off.

#### NOTE

The system can be changed so that the ALH do not operate. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Manual Switching

#### Switching to low beams

Shift the lever to the low beam position. The ALH indicator light (green) turns off.

#### Switching to high beams

Turn the headlight switch to the ≣⊃ position. The ALH indicator light (green) turns off

and the  $\equiv \mathbb{O}$  is illuminated.


### Blind Spot Monitoring (BSM)\*

The BSM is designed to assist the driver in checking the area to the rear of the vehicle on both sides during lane changes by notifying the driver of the presence of vehicles approaching from the rear in an adjacent lane.

The BSM detects vehicles approaching from the rear while travelling in the forward direction at a speed of 30 km/h (19 mph) or faster and notifies the driver by turning on the BSM warning indicator light and displaying the vehicle detection screen (vehicles with multi-information display and active driving display).

If the direction indicator lever is operated to signal a turn in the direction in which the BSM warning indicator light is illuminated while the approaching vehicle is detected, the BSM notifies the driver of possible danger by turning on the BSM warning indicator light, and by activating the warning sound and the warning screen indicator display (vehicles with multi-information display and active driving display).

The detection area on this system covers the driving lanes on both sides of the vehicle and from the rear part of the front doors to about 50 m (164 ft) behind the vehicle.

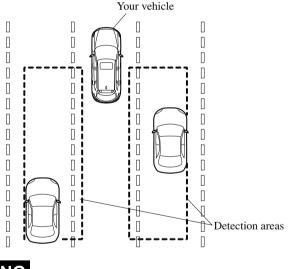

## 

#### Always check the surrounding area visually before making an actual lane change:

The system is only designed to assist you in checking for vehicles at your rear when making a lane change. Due to certain limitations with the operation of this system, the BSM warning indicator light, the warning sound and the warning screen indicator display may not activate or they might be delayed even though a vehicle is in an adjacent driving lane. Always make it your responsibility as a driver to check the rear.

#### NOTE

• The BSM will operate when all of the following conditions are met:

- The ignition is switched ON.
- The BSM OFF indicator light in the instrument cluster is turned off.
- The vehicle speed is about 30 km/h (19 mph) or faster.
- $\cdot$  The BSM will not operate under the following circumstances.
  - The vehicle speed falls below about 25 km/h (15 mph) even though the BSM OFF switch indicator light is turned off.
  - The selector lever is shifted to R position and the vehicle is reversing.
  - The turning radius is small (making a sharp turn, turning at intersections).
- In the following cases, the BSM OFF indicator light turns on and operation of the system is stopped. If the BSM OFF indicator light remains illuminated, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
  - · Some problem with the system including the BSM warning indicator lights is detected.
  - A large deviation in the installation position of a radar sensor (rear) on the vehicle has occurred.
  - There is a large accumulation of snow or ice on the rear bumper near a radar sensor (rear). Remove any snow, ice or mud on the rear bumper.
  - · Driving on snow-covered roads for long periods.
  - The temperature near the radar sensors (rear) becomes extremely hot due to driving for long periods on slopes during the summer.
  - The battery voltage has decreased.
- Under the following conditions, the radar sensors (rear) cannot detect target objects or it may be difficult to detect them.
  - A vehicle is in the detection area at the rear in an adjacent driving lane but it does not approach. The BSM determines the condition based on radar detection data.
  - A vehicle is travelling alongside your vehicle at nearly the same speed for an extended period of time.
  - · Vehicles approaching in the opposite direction.
  - A vehicle in an adjacent driving lane is attempting to pass your vehicle.
  - A vehicle is in an adjacent lane on a road with extremely wide driving lanes. The detection area of the radar sensors (rear) is set at the road width of expressways.
- In the following case, the flashing of the BSM warning indicator light, and the activation of the warning sound and the warning screen indicator display may not occur or they may be delayed.
  - A vehicle makes a lane change from a driving lane 2 lanes over to an adjacent lane.
  - · Driving on steep slopes.
  - $\cdot$  Crossing the summit of a hill or mountain pass.

• When there is a difference in the height between your driving lane and the adjacent lane.


• Directly after the BSM system becomes operable by changing the setting.

• If the road width is extremely narrow, vehicles 2 lanes over may be detected. The detection area of the radar sensors (rear) is set according to the road width of expressways.

• The BSM warning indicator light may turn on and the vehicle detection screen may be displayed in the display in reaction to stationary objects (guardrails, tunnels, sidewalls, and parked vehicles) on the road or the roadside.


Objects such as guardrails and concrete walls running alongside the vehicle.

Places where the width between guardrails or walls on each side of the vehicle narrows.



The walls at the entrance and exits of tunnels, turnouts.





- A BSM warning indicator light may flash or the warning beep and the warning screen indicator display may be activated several times when making a turn at a city intersection.
- Turn off the BSM while pulling a trailer or while an accessory such as a bicycle carrier is installed to the rear of the vehicle. Otherwise, the radar's radio waves will be blocked causing the system to not operate normally.
- In the following cases, it may be difficult to view the illumination/flashing of the BSM warning indicator lights equipped on the door mirrors.

· Snow or ice is adhering to the door mirrors.

• The front door glass is fogged or covered in snow, frost or dirt.

• The system switches to the Rear Cross Traffic Alert function when the selector lever is shifted to the reverse (R) position.


Refer to Rear Cross Traffic Alert (RCTA) on page 4-143.

#### ▼ Blind Spot Monitoring (BSM) Warning Indicator Light/Display Indicator/Blind Spot Monitoring (BSM) Warning Beep

The BSM or Rear Cross Traffic Alert (RCTA) system notifies the driver of the presence of vehicles in adjacent lanes or at the rear of the vehicle using the BSM warning indicator light, the warning sound and the display indicator (vehicles with multi-information display and active driving display) (BSM) while the systems are operational.

#### **BSM** warning indicator lights

The BSM warning indicator lights are equipped on the left and right door mirrors. The warning indicator lights turn on when a vehicle approaching from the rear in an adjacent lane is detected.

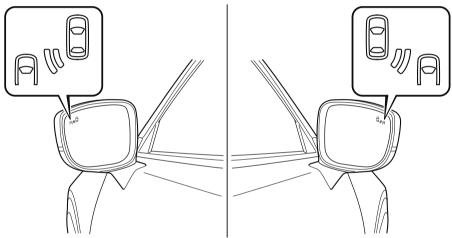

When the ignition is switched ON, the warning indicator light turns on momentarily and then turns off after a few seconds.

#### Forward driving (BSM operation)

The BSM detects vehicles approaching from the rear and turns on the BSM warning indicator lights equipped on the door mirrors according to the conditions. Additionally, while a BSM warning indicator light is illuminated, if the direction indicator lever is operated to signal a turn in the direction in which the BSM warning indicator light is illuminated, the BSM warning indicator light flashes.

#### Reverse driving (Rear Cross Traffic Alert (RCTA) system operation)

The Rear Cross Traffic Alert (RCTA) system detects vehicles approaching from the left and right of your vehicle and flashes the BSM warning indicator lights.

#### Function for cancelling illumination dimmer


If the BSM warning indicator lights turn on when the position lights are turned on, the brightness of the BSM warning indicator lights is dimmed.

If the BSM warning indicator lights are difficult to see due to glare from surrounding brightness when travelling on snow-covered roads or under foggy conditions, press the dimmer cancellation button to cancel the dimmer and increase the brightness of BSM warning indicator lights when they turn on.

Refer to Instrument Panel Illumination on page 4-24, 4-42, 4-58.


#### Display indicator (Vehicles with multi-information display and active driving display)


The detected approaching vehicle and warning are displayed in the multi-information display and active driving display when the vehicle is moving forward (BSM operational).



Detection and warning indicator







The detected direction is displayed with a detection indicator (white) when an approaching vehicle is detected. In addition, if the direction indicator lever is operated to signal a lane change while the vehicle is detected, the display changes the colour (amber) of the warning indicator.

#### BSM warning beep

The BSM warning beep is activated simultaneously with the flashing of a BSM warning indicator light.

#### ▼ Cancelling Operation of Blind Spot Monitoring (BSM)

The BSM system can be set to inoperable. Refer to the Settings section in the Mazda Connect Owner's Manual. When the BSM is set to inoperable, the BSM and Rear Cross Traffic Alert (RCTA) systems are turned off and the BSM OFF indicator light in the instrument cluster turns on.



#### NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF while the BSM and Rear Cross Traffic Alert (RCTA) systems are operational, the BSM and Rear Cross Traffic Alert (RCTA) systems remain operational the next time the ignition is switched ON.


### **Traffic Sign Recognition System (TSR)**\*

The TSR helps prevent the driver from overlooking traffic signs, and provides support for safer driving by displaying traffic signs on the active driving display which are recognised by the Forward Sensing Camera (FSC) or recorded in the navigation system while the vehicle is driven.

The TSR displays the speed limit (including auxiliary signs), do not enter, and passing prohibited signs.

If the vehicle speed exceeds the speed limit sign indicated in the active driving display while the vehicle is driven, the system notifies the driver using the indication in the active driving display and a warning sound.

- The TSR is not supported in some countries or regions. For information concerning the supported countries or regions, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The TSR operates only if the navigation system SD card (Mazda genuine) is inserted in the SD card slot. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.

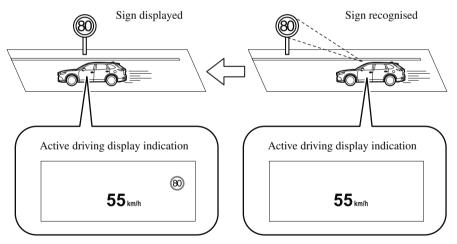

## 

#### Always check the traffic signs visually while driving.

The TSR helps prevent the driver from overlooking traffic signs and provides support for safer driving. Depending on the weather conditions or problems with traffic signs, a traffic sign may not be recognised or a traffic sign different from the actual traffic sign may be displayed. Always make it your responsibility as a driver to check the actual traffic signs. Otherwise, it could result in an accident.

- The TSR does not operate if there is a malfunction in the Forward Sensing Camera (FSC).
- · Under the following conditions, the TSR may not operate normally.
  - An object placed on the instrument panel is reflected in the windscreen and picked up by the camera.
  - Heavy luggage is loaded in the luggage compartment or on the rear seat and the vehicle is tilted.
  - The tyre pressures are not adjusted to the specified pressure.
  - Tyres other than standard tyres are equipped.
  - The vehicle is driven on the ramp and surrounding area to or from a rest area or a tollgate on a highway.
  - When surrounding brightness suddenly changes such as when entering or exiting a tunnel.
  - The illumination of the headlights is weakened because of dirt or the optical axis is deviated.
  - The windscreen is dirty or foggy.
  - The windscreen and camera are fogged (water droplets).
  - Strong light is directed at the front of the vehicle (such as backlight or high-beam headlights of on-coming vehicles).
  - The vehicle is making a sharp turn.
  - · Strong light reflects off the road.
  - A traffic sign is in a position which makes it difficult to reflect the light from the vehicle's headlights, such as when the vehicle is driven at night or in a tunnel.
  - The vehicle is driven under weather conditions such as rain, fog, or snow.
  - The stored map data for the navigation system is not current.
  - A traffic sign is obscured by mud or snow.
  - $\cdot$  A traffic sign is concealed by trees or a vehicle.
  - $\cdot$  A traffic sign is partially shaded.
  - $\cdot$  A traffic sign is bent or warped.
  - $\cdot$  A traffic sign is too low or too high.

- A traffic sign is too bright or too dark (including electronic traffic signs).
- A traffic sign is too big or too small.
- There is an object similar to the traffic sign being read (such as another traffic sign or other signs resembling it).
- The TSR does not operate if the active driving display is set to non-display.
- The TSR can be set to inoperable. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Traffic Sign Display Indication

The following traffic signs are displayed on the active driving display/instrument cluster.

# Speed limit signs (including auxiliary signs)

Speed limit signs



Auxiliary sign (example)

If the Forward Sensing Camera (FSC) cannot classify an auxiliary sign (such as time restrictions, turning restrictions, end of section) correctly, the following screen is displayed.



#### Inclement weather speed limit sign



#### Do not enter signs



Passing prohibited sign

The TSR can display a passing prohibited sign and a speed limit sign at the same time.



If the Forward Sensing Camera (FSC) cannot correctly recognise a traffic sign while the vehicle is driven, the following screen is displayed.



#### NOTE

# Speed limit signs (including auxiliary signs)

- When the vehicle speed is about 1 km/h (0.6 mph) or faster, the speed limit sign is displayed when any one of the following conditions are met.
  - The Forward Sensing Camera (FSC) recognises a speed limit sign as a sign targeted for your vehicle and the vehicle passes it.
  - The speed limit sign stored in the navigation system is read (if the Forward Sensing Camera (FSC) does not recognise a speed limit sign).
- Inclement weather speed limit signs are displayed when all of the following conditions are met.

- The vehicle speed is about 1 km/h (0.6 mph) or more.
- The Forward Sensing Camera (FSC) recognises an inclement weather speed limit sign as a sign targeted for your vehicle and the vehicle passes it.
- The inclement weather speed limit sign is lower than the currently displayed speed limit sign.
- The windscreen wipers are operated.
- In the following cases, display of the speed limit sign stops.
  - The Forward Sensing Camera (FSC) recognises the speed limit sign and the vehicle is driven for a certain distance after passing the sign.
  - Each sensor determines that the vehicle has changed direction of travel. (The display of a speed limit sign does not stop even if the vehicle changes lanes while a "ZONE" auxiliary sign is displayed.)
  - The Forward Sensing Camera (FSC) recognises a new speed limit sign which differs from the previous one (displays the new speed limit sign).
  - The speed limit sign stored in the navigation system is not read within a certain period of time (if the Forward Sensing Camera (FSC) does not recognise a speed limit sign, the speed limit sign stored in the navigation system is displayed).
  - The vehicle speed exceeds the displayed speed limit sign by 30 km/h (19 mph) or more after a certain period of time has elapsed since the speed limit sign was displayed. (Except when there is information for the speed limit sign in the navigation system)

#### Do not enter signs


- A do not enter sign is displayed when all of the following conditions are met.
  - The vehicle speed is about 80 km/h (50 mph) or slower.
  - The Forward Sensing Camera (FSC) recognises a do not enter sign as a sign targeted for your vehicle and the vehicle passes it.
  - A speed limit sign with an auxiliary sign is not recognised.
- When the Forward Sensing Camera (FSC) recognises the do not enter sign and a certain period of time has elapsed since the vehicle passed the sign, display of the do not enter sign stops.

#### Passing prohibited sign

- A passing prohibited sign is displayed when all of the following conditions are met.
  - The vehicle speed is about 1 km/h (0.6 mph) or more.
  - The Forward Sensing Camera (FSC) recognises a passing prohibited sign as a sign targeted for your vehicle and the vehicle passes it.
  - A speed limit sign with an auxiliary sign is not recognised.
- In the following cases, the display of the passing prohibited sign stops.
  - The Forward Sensing Camera (FSC) recognises a passing prohibited sign and you drive a certain distance after passing the sign.
  - You have changed vehicle lanes.

#### ▼ Excessive Speed Warning

If the vehicle speed exceeds the speed limit sign displayed in the active driving display, the area around the speed limit sign flashes 3 times in amber and the warning sound is activated 3 times at the same time. If the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on. Check the surrounding conditions and adjust the vehicle speed to the legal speed using the appropriate operation such as depressing the brake pedal.

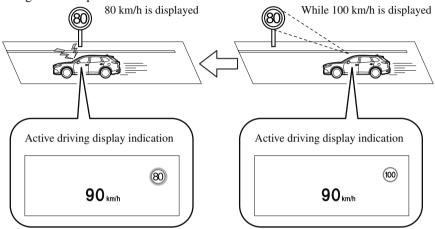

The excessive speed warning is initially set to inoperable. If you want to activate the excessive speed warning, change the setting in the personalisation features. In addition, the warning pattern and the warning activation timing differ depending on the setting contents. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### Warning pattern

- $\cdot$  Off: The excessive speed warning is not activated.
- Visual: The area around the speed limit sign displayed in the display flashes 3 times in amber, and if the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on.
- Audio & Visual: The area around the speed limit sign displayed in the display flashes 3 times in amber and the warning sound is activated 3 times at the same time. If the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on.

#### Warning activation timing

- $\cdot$  + 0: If the vehicle speed exceeds the speed limit sign displayed in the display, the excessive speed warning is activated.
- $\cdot$  + 5: If the vehicle speed exceeds the speed limit sign displayed in the display by 5 km/h (3 mph), the excessive speed warning is activated.

• + 10: If the vehicle speed exceeds the speed limit sign displayed in the display by 10 km/h (5 mph), the excessive speed warning is activated.

#### NOTE

 $\cdot$  In the following cases, the excessive speed warning stops operating.

- The vehicle speed is less than the speed of the displayed speed limit sign. (If the activation timing for the excessive speed warning is changed in the personalisation features, the excessive speed warning stops operating when the vehicle speed is less than the changed vehicle speed.
- A speed limit sign indication has been updated and the vehicle speed is lower than the updated indication.
- · Display of the speed limit sign stops.
- The warning indication is displayed at the same time the excessive speed warning sound is activated if the vehicle speed exceeds the speed indicated on the speed limit sign. Refer to Warning Sound is Activated on page 7-57.
- The TSR can recognise a speed limit sign with an auxiliary sign and display it, but it cannot determine the indication on the auxiliary sign (such as time restrictions, turning restrictions, end of section). Therefore, the excessive speed warning is activated when the vehicle speed exceeds the displayed speed limit sign even if the conditions indicated on the auxiliary sign do not apply to the vehicle.
- If the Forward Sensing Camera (FSC) incorrectly recognises the actual speed limit sign at a lower speed, the excessive speed alarm is activated even if the vehicle is driven at the legal speed.

### **Distance Recognition Support System (DRSS)**\*

The DRSS measures the distance between your vehicle and a vehicle ahead using a radar sensor (front) while the vehicle speed is about 30 km/h (19 mph) or faster, and if your vehicle approaches a vehicle ahead more closely than what is appropriate for maintaining distance between the vehicles according to the vehicle speed, a notification in the multi-information display is indicated to advise you to keep a safe distance from the vehicle ahead.

## 

#### Do not rely completely on the DRSS and always drive carefully:

The ability to detect a vehicle ahead is limited depending on the type of vehicle ahead, the weather conditions, and the traffic conditions. Therefore, if the accelerator and brake pedals are not operated correctly it could lead to an accident. Always verify the safety of the surrounding area and depress the brake pedal or accelerator pedal while keeping a safer distance from vehicles ahead or on-coming vehicles.


- The DRSS operates when all of the following conditions are met:
  - The ignition is switched ON.
  - The DRSS is on.
  - The selector lever is in a position other than reverse (R).
  - The vehicle speed is 30 km/h or faster (19 mph or faster).
- · The objects which activate the system are 4-wheeled vehicles.
- The DRSS may also operate in the presence of motorcycles and bicycles.
- The DRSS may not operate normally under the following conditions:
  - The Dynamic Stability Control (DSC) has a malfunction.
  - The vehicle ahead is travelling at an extremely slow speed.
- The system does not operate with the following objects:
  - · Vehicles approaching in the opposite direction.
  - · Stationary objects (stopped vehicles, obstructions)

#### ▼ Indication on Display

The DRSS operation status is indicated in the multi-information display. Regarding malfunctions, check the vehicle conditions or have it inspected by an expert repairer (we recommend an Authorised Mazda Repairer) according to the content of the displayed message.

#### NOTE

- When the ignition is switched off, the operation status before the system was turned off is maintained. For example, if the ignition is switched off with the DRSS operable, the system will be operable when the ignition is switched ON the next time.
- The DRSS can be turned on/off and the system's sensitivity can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.

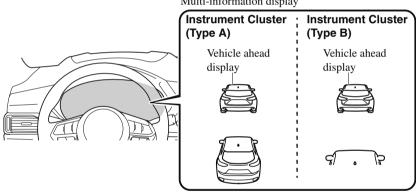

Multi-information display

#### Distance-between-vehicles guidelines\*1

Indication on display		Distance be- tween vehicles	Distance be- tween vehicles
Multi-inform Instrument cluster (Type A)	ation display Instrument cluster (Type B)	guidelines	tween vehicles guidelines (During travel at about 80 km/h (50 mph)
	ST . R	About 25 m (82 ft)	About 50 m (164 ft)
	A . P	About 20 m (66 ft)	About 40 m (131 ft)
		About 15 m (49 ft)	About 30 m (98 ft)

Indication on display		Distance be-	Distance be-
Multi-information display		tween vehicles guidelines	tween vehicles guidelines
Instrument cluster (Type A)	Instrument cluster (Type B)		(During travel at about 80 km/h (50 mph)
		About 10 m (33 ft)	About 20 m (66 ft)
Illuminated in amber*2	Illuminated in amber*2	About 10 m (32 ft) or less	About 20 m (65 ft) or less

- \*1 The distance between vehicles differs depending on vehicle speed.
- \*2 Indication when the distance setting for notifying the driver that the vehicle approaches a vehicle ahead is Near.


### **Driver Attention Alert (DAA)**\*

The DAA is a system which detects driver fatigue and decreased attentiveness, and encourages the driver to take a rest.

When the vehicle is driven inside traffic lane lines at about 65 to 140 km/h (40 to 87 mph), the DAA estimates the amount of accumulated fatigue and decreased attentiveness of the driver based on the information from the Forward Sensing Camera (FSC) and other vehicle information, and encourages the driver to take a rest using an indication on the multi-information display and a warning sound.

Use the DAA on expressways or highways.

Refer to Forward Sensing Camera (FSC) on page 4-228.

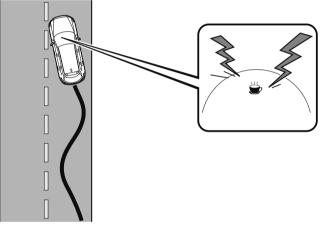

### 

#### Do not rely completely on DAA and always drive carefully:

The DAA detects driver fatigue and decreased attentiveness and encourages the driver to take a rest, however, it is not designed to prevent the vehicle from straying. If you rely too much on the DAA it could lead to an accident. Drive carefully and operate the steering wheel appropriately.

In addition, the system may not be able to detect driver fatigue and decreased attentiveness correctly depending on the traffic and driving conditions. The driver must take sufficient rest in consideration of safer driving.

#### NOTE

• The DAA operates when all of the following conditions are met.

• The vehicle speed is about 65 to 140 km/h (40 to 87 mph).

• The system detects white (yellow) lane lines.

• The system has completed learning of the driver's driving data.

• The DAA does not operate under the following conditions.

• The vehicle speed is less than about 65 km/h (40 mph).

• The vehicle speed exceeds about 140 km/h (87 mph)

 $\cdot$  The vehicle is making a sharp turn.

• The vehicle is changing lanes.

· The system cannot detect white (yellow) lane lines.

• The DAA may not operate normally under the following conditions.

• White (yellow) lane lines are less visible because of dirt or fading/patchiness.

• The vehicle is jolted or swayed continuously by strong winds or rough roads.

· The vehicle is driven aggressively.

• When making frequent lane changes.

• The DAA detects driver fatigue and decreased attentiveness based on the driving data when the vehicle is driven at about 65 to 140 km/h (40 to 87 mph) for about 20 minutes. The driving data will be reset under the following conditions.

• The vehicle is stopped for 15 minutes or longer.

• The vehicle is driven at less than about 65 km/h (40 mph) for about 30 minutes.

• The ignition is switched off.

• After the DAA has displayed the first message encouraging rest, it does not display the next one until 45 minutes have passed.

#### ▼ Driver Attention Alert (DAA) Display (White)

When the system detects driver fatigue or decreased attentiveness, it activates the warning sound and displays an alert in the multi-information display.




#### ▼ Cancelling Driver Attention Alert (DAA)

The DAA can be set to not activate. Refer to the Settings section in the Mazda Connect Owner's Manual.

### **Rear Cross Traffic Alert (RCTA)\***

The RCTA system is designed to assist the driver in checking the area to the rear of the vehicle on both sides while the vehicle is reversing by alerting the driver to the presence of vehicles approaching the rear of the vehicle.

The RCTA system detects vehicles approaching from the rear left and right sides of the vehicle, and the rear of the vehicle while the vehicle is being reversed out of a parking space, and notifies the driver of possible danger using the Blind Spot Monitoring (BSM) warning indicator lights and the warning buzzer.

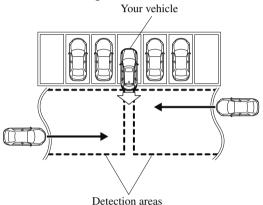

#### **RCTA operation**


- 1. The RCTA system operates when the selector lever is shifted to the reverse (R) position.
- 2. If there is the possibility of a collision with an approaching vehicle, the Blind Spot Monitoring (BSM) warning indicator lights flashes and the warning beep is activated simultaneously.

#### (With rear view monitor)

The RCTA warning indication in the rearview monitor also synchronizes with the Blind Spot Monitoring (BSM) warning indicator light on the door mirrors.

#### (With 360° view monitor)

The RCTA warning indication in the 360° view monitor also synchronizes with the Blind Spot Monitoring (BSM) warning indicator light on the door mirrors.

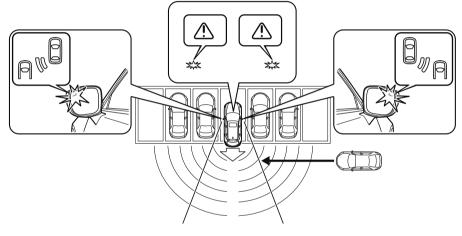




#### Always check the surrounding area visually before actually putting the vehicle in reverse:

The system is only designed to assist you in checking for vehicles at the rear when putting the vehicle in reverse. Due to certain limitations with the operation of this system, the Blind Spot Monitoring (BSM) warning indicator lights may not flash or it might be delayed even though a vehicle is behind your vehicle. Always make it your responsibility as a driver to check the rear.


#### NOTE

• In the following cases, the Blind Spot Monitoring (BSM) OFF Indicator Light turns on and operation of the system is stopped. If the Blind Spot Monitoring (BSM) OFF Indicator Light remains illuminated, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.


- Some problem with the system including the Blind Spot Monitoring (BSM) warning indicator lights has occurred.
- A large deviation in the installation position of a radar sensor (rear) on the vehicle has occurred.
- There is a large accumulation of snow or ice on the rear bumper near a radar sensor (rear).
- · Driving on snow-covered roads for long periods.
- The temperature near the radar sensors becomes extremely hot due to driving for long periods on slopes during the summer.
- The battery voltage has decreased.
- Under the following conditions, the radar sensors (rear) cannot detect target objects or it may be difficult to detect them.
  - The vehicle speed when reversing is about 10 km/h (6.3 mph) or faster.
  - The radar sensor (rear) detection area is obstructed by a nearby wall or parked vehicle. (Reverse the vehicle to a position where the radar sensor detection area is no longer obstructed.)



• A vehicle is approaching directly from the rear of your vehicle.

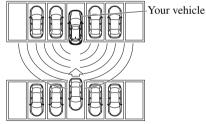

• The vehicle is parked at an angle.



- Directly after the Blind Spot Monitoring (BSM) system becomes operable using the personalisation feature.
- · Radio wave interference from a radar sensor equipped on a nearby parked vehicle.

- In the following cases, it may be difficult to view the illumination/flashing of the Blind Spot Monitoring (BSM) warning indicator lights equipped on the door mirrors.
  - Snow or ice adheres to the door mirrors.
  - The front door glass is fogged or covered in snow, frost or dirt.
- Turn off the RCTA system while pulling a trailer or while an accessory such as a bicycle carrier is installed to the rear of the vehicle. Otherwise, the radio waves emitted by the radar will be blocked causing the system to not operate normally.

### Mazda Radar Cruise Control (MRCC)\*

The MRCC system is designed to maintain headway control<sup>\*1</sup> with a vehicle ahead according to your vehicle's speed using a radar sensor (front) to detect the distance to the vehicle ahead and a preset vehicle speed without you having to use the accelerator or brake pedals.

\*1 Headway Control: Control of the distance between your vehicle and the vehicle ahead detected by the MRCC system.

Additionally, if your vehicle starts closing in on the vehicle ahead such as if the vehicle ahead brakes suddenly, a warning sound and a warning indication in the display are activated simultaneously to alert you to maintain a sufficient distance between the vehicles. Also refer to the following before using the MRCC.

· Radar sensor (front) (page 4-233)

### 

#### Do not rely completely on the MRCC:

The MRCC system has detection limitations depending on the type of vehicle ahead and its conditions, the weather conditions, and the road conditions. Additionally, the system may be unable to decelerate sufficiently to avoid hitting the vehicle ahead if the vehicle ahead applies the brakes suddenly or another vehicle cuts into the driving lane, which could result in an accident.

Always drive carefully and verify the surrounding conditions and depress the brake pedal or accelerator pedal while keeping a safer distance from vehicles ahead or on-coming vehicles.

## Do not use the MRCC system in the following locations, using the MRCC system at the following locations may result in an unexpected accident:

- General roads other than highways (Driving under these conditions using the MRCC system is not possible.)
- Roads with sharp curves and where vehicle traffic is heavy and there is insufficient space between vehicles.
- ➢ Roads where frequent and repetitive acceleration and deceleration occur (Driving under these conditions using the MRCC system is not possible).
- When entering and exiting interchanges, service areas, and parking areas of highways (If you exit a highway while headway control is in use, the vehicle ahead will no longer be tracked and your vehicle may accelerate to the set speed).
- Slippery roads such as ice or snow-bound roads (Tyres could spin causing you to lose vehicle control, or the stop hold control may not operate.)
- ➤ Long, descending slopes (to maintain distance between vehicles, the system automatically and continuously applies the brakes which could result in the loss of brake power.)

Slopes with a steep gradient (The vehicle ahead may not be detected correctly, your vehicle may slide while stopped by the stop hold control, and it may accelerate suddenly after it starts moving.)

#### For safety purposes, switch the MRCC system off when it is not being used.

### 

If your vehicle is towed or you are towing something, switch the MRCC system off to prevent a miss-operation.

#### NOTE


• The MRCC system does not detect the following as physical objects.

- · Vehicles approaching in the opposite direction
- $\cdot$  Pedestrians
- · Stationary objects (stopped vehicles, obstructions)
- If a vehicle ahead is travelling at an extremely low speed, the system may not detect it correctly.
- During headway control travel, do not set the system for detection of two-wheeled vehicles such as motorcycles and bicycles.
- Do not use the MRCC system under conditions in which close proximity warnings are frequently activated.
- During headway control travel, the system accelerates and decelerates your vehicle in conjunction with the speed of the vehicle ahead. However, if it is necessary to accelerate for a lane change or if the vehicle ahead brakes suddenly causing you to close in on the vehicle rapidly, accelerate using the accelerator pedal or decelerate using the brake pedal depending on the conditions.
- While the MRCC system is in use, it does not cancel even if the selector lever is operated and any intended engine braking will not occur. If deceleration is required, lower the vehicle speed setting or depress the brake pedal.
- The sound of the automatic brakes operating may be heard, however, it does not indicate a problem.
- The brake lights turn on while the MRCC automatic braking is operating, however, they may not turn on while the vehicle is on a downslope at the set vehicle speed or travelling at a constant speed and following a vehicle ahead.

#### ▼ Mazda Radar Cruise Control (MRCC) Display Indication


The MRCC setting status and operation conditions are indicated on the multi-information display and the active driving display.

#### Instrument cluster (Type A)

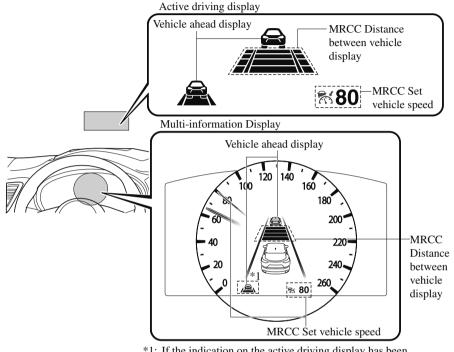

\*1: If the indication on the active driving display has been turned off using the personalisation features, the indication is displayed on the multi-information display.

#### Instrument cluster (Type B)

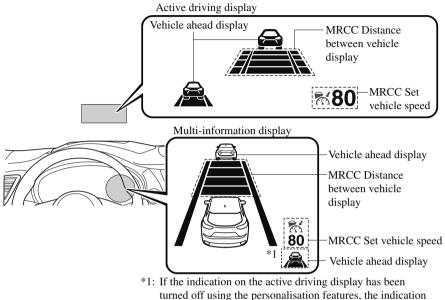

turned off using the personalisation features, the indication is displayed on the multi-information display.

If there is a problem with the MRCC system, a message is displayed on the multi-information display. Check the centre display to verify the problem and then have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Refer to Message Indicated on Display on page 7-53.

#### ▼ Close Proximity Warning

If your vehicle rapidly closes in on the vehicle ahead because the vehicle ahead applies the brakes suddenly while you are travelling in headway control, the warning sound activates and the brake warning is indicated in the display. Always verify the safety of the surrounding area and depress the brake pedal while keeping a safer distance from the vehicle ahead. Additionally, keep a safer distance from the vehicles behind you.

### **BRAKE!**

#### NOTE

In the following cases, the warnings and brakes may not operate even if your vehicle starts closing in on the vehicle ahead.

- You are driving your vehicle at the same speed as the vehicle ahead.
- · Directly after the MRCC system has been set.


- · Directly after the accelerator pedal is released.
- Another vehicle cuts into the driving lane.

#### ▼ Setting the System

The MRCC system operates when all of the following conditions are met.

- The vehicle speed is as follows:
  - $\cdot$  (European models)
    - About 30 km/h (19 mph) to 200 km/h (124 mph)
  - (Except European models) About 30 km/h (19 mph) to 145 km/h (90 mph)
- $\cdot$  The MRCC is turned on.
- $\cdot$  The brake pedal is not depressed.
- The electric parking brake (EPB) is released (electric parking brake (EPB) indicator light is turned off).
- $\cdot$  There is no problem with the DSC.
- $\cdot$  All the doors are closed.
- The driver's seat belt is fastened.
- The selector lever is in the drive (D) position or manual (M) position (manual mode).

#### Turning on the system

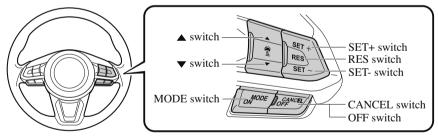

When the MODE switch is pressed once, the MRCC system turns on, and the MRCC main indication (white) turns on and the vehicle speed and the distance between the vehicles while in headway control can be set.



In addition, the MRCC system display indication is displayed on the multi-information display and the active driving display at the same time.

#### NOTE

- If the ignition is switched off while the MRCC system is operating, the system will be operable when the ignition is switched ON the next time.
- The MRCC can switch to the Cruise Control Function. Refer to Cruise Control Function on page 4-155.

#### How to set the speed

- 1. Adjust the vehicle speed to the desired setting using the accelerator pedal.
- Headway control begins when the SET+ or SET- switch is pressed. The set speed and the inter-vehicle distance display filled with white lines is displayed. The MRCC main indication (white) switches to the MRCC set indication (green) at the same time.



Travel status	Indication on multi-information display		Indication on active driving
Traver status	Туре А	Туре В	display
During travel at constant speed	$\begin{array}{c} & 120 & 140 \\ & 100 & 120 & 160 \\ & 180 & & & \\ & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & &$	<b>1</b> 80	<b>壳80</b>
During travel under head- way control	120 140 100 120 140 160 180 200 40 20 20 20 20 80 20 20 20 20 20 20 20 20 20 2		<b>童</b>

#### NOTE

- If a vehicle ahead is detected while travelling at a constant speed, the vehicle-ahead indication is displayed and headway control is performed. Additionally, when a vehicle ahead is no longer detected, the vehicle-ahead indication turns off and the system switches back to travel at constant speed.
- The lowest possible speed which can be set on the MRCC system is 30 km/h (19 mph).
- Headway control is not possible if the vehicle ahead is driving faster than your vehicle's set speed. Adjust the system to the desired vehicle speed using the accelerator pedal.

#### How to set the distance-between-vehicles during headway control

The distance-between-vehicles is set to a shorter distance by pressing the  $\checkmark$  switch. The distance-between-vehicles is set to a longer distance by pressing the  $\blacktriangle$  switch. The distance-between-vehicles can be set to 4 levels; Long, medium, short, and extremely short distance.

Distance-be-	Indication on multi-	information display	
tween-vehicles guideline (at 80 km/h (50 mph) vehicle speed)	Туре А	Туре В	Indication on active driv- ing display <sup>*1</sup>
Long (about 50 m (164 ft))			
Medium (about 40 m (131 ft))			
Short (about 30 m (98 ft))			

#### When Driving i-ACTIVSENSE

Distance-be-	Indication on multi-information display		
tween-vehicles guideline (at 80 km/h (50 mph) vehicle speed)	Туре А	Туре В	Indication on active driv- ing display <sup>*1</sup>
Extremely short (about 25 m (82 ft))			

\*1 Displays a pop-up image in the active driving display only when the driver operates the switch.

#### NOTE

- The distance-between-vehicles differs depending on the vehicle speed, and the slower the vehicle speed, the shorter the distance.
- When the ignition is switched to ACC or OFF and then the engine is started again, the system automatically sets the distance-between-vehicles to the previous setting.

#### How to change the set vehicle speed

## To accelerate/decelerate using the SET switch

When you press the SET+ switch, the vehicle accelerates and when you press the SET- switch, it decelerates.

	European models	Except Euro- pean models
Short press	1 km/h (1 mph)	5 km/h (5 mph)
Long press	10 km/h (5 mph)	

#### NOTE

For example, the set vehicle speed is changed by pressing the SET switch four times as follows:

#### (European models)

The vehicle speed accelerates or decelerates by 4 km/h (4 mph).

#### (Except European models)

The vehicle speed accelerates or decelerates by 20 km/h (20 mph).

## To increase speed using accelerator pedal

Depress the accelerator pedal and press and release the SET+ switch or SETswitch at the desired speed. If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

### 

The warnings and brake control do not operate while the accelerator pedal is depressed.

#### NOTE

- When accelerating using the SET+ switch while in headway control, the set vehicle speed can be adjusted but acceleration is not possible. If there is no longer a vehicle ahead, acceleration continues until reaching the set vehicle speed. For the set vehicle speed, check the set vehicle speed indication in the display.
- When depressing the accelerator pedal, the inter-vehicle distance indication in the display changes to the white-line indication.
- · (European models)

When switching to a passing lane and operating the direction indicator, the system provides more acceleration automatically if it determines that more acceleration is required. Drive while being careful of the road ahead because you could approach the vehicle ahead too closely.

#### Cancelling the system

When the following operations are performed, the MRCC system is cancelled, and the MRCC set indication (green) switches to the MRCC main indication (white) at the same time.

- The OFF/CANCEL switch is pressed.
- The brake pedal is depressed.
- The electric parking brake (EPB) is applied.
- The selector lever is in the P (Park), N (Neutral), or R (Reverse) position.

Under the following conditions, the MRCC cancel indication is displayed in

the multi-information display and a single beep sound is heard.

- · The DSC has operated.
- The Smart Brake Support (SBS) has operated.
- The Smart City Brake Support [Forward] (SCBS F) or Advanced Smart City Brake Support (Advanced SCBS) has operated.
- When travelling on a downslope for a long period of time.
- $\cdot$  There is a problem with the system.
- The radar sensor (front) cannot detect target objects (during rain, fog, snow or other inclement weather conditions, or when the radiator grille is dirty).
- The vehicle speed decreases to less than 25 km (16 mph).
- $\cdot$  Any of the doors is opened.
- $\cdot$  The driver's seat belt is unfastened.

#### **Resuming control**

If the MRCC system is cancelled, you can resume control at the previously set speed by pressing the RES switch and after all of the operation conditions have been met.

#### NOTE

If the set speed is not indicated in the display, the control does not resume even if the RES switch is pressed.

#### Turning off the system

Press the OFF/CANCEL switch two times while the MRCC system is operating to switch off the system.

#### ▼ Cruise Control Function

While this function is operating, the headway control operation is cancelled and only the cruise control function operates. The vehicle speed can be set more than about 25 km/h (16 mph). Use the cruise control function on expressways and other highways which do not require a lot of repeated acceleration and deceleration.

### 

## Do not use the cruise control function in the following locations:

Otherwise, it could lead to an accident.

- Roads with sharp curves and where vehicle traffic is heavy and there is insufficient space between vehicles.
   (Driving under these conditions using the cruise control function is not possible)
- Steep down slopes (Set speed may be exceeded because sufficient engine braking cannot be applied)
- Slippery roads such as ice or snow-bound roads (Tyres could spin causing you to lose vehicle control)

#### Always drive carefully:

The warnings and brake control will not operate after the headway control function is cancelled and the system is switched to only the cruise control function. Depress the brake pedal to decelerate according to the surrounding conditions while keeping a safer distance from the vehicle ahead and always driving carefully.

#### Switching to cruise control function

When the MODE switch is pressed until the system switches to the cruise main indication (white) while the MRCC system is turned on, the system switches to the cruise control function. When the system switches to the cruise control function, the indicator and multi-information display notify the driver as follows:

- The MRCC set indication (green) or the MRCC main indication (white) is turned off, and the cruise main indication (white) is turned on.
- A message is displayed in the multi-information display.

### 

## Always turn off the cruise control function when it is not in use:

Leaving the cruise control function turned on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.

#### How to set the speed

Adjust the system to the desired vehicle speed using the accelerator pedal. When the SET+ or SET- switch is pressed, the cruise set indication (green) is turned on and headway control begins.

#### NOTE

- The system may not be able to maintain the set speed constantly depending on driving conditions such as steep up or down slopes.
- The speed will continue increasing while the SET+ switch is pressed and held. The speed will continue decreasing while the SET- switch is pressed and held.

#### How to increase the set speed

The set speed can be increased using the following operations:

## To increase speed using the SET+ switch

Press and hold the SET+ switch and release the switch at the desired speed. The set speed can be adjusted incrementally (1 km/h (1 mph) increments) by pressing the switch and releasing it immediately. For example, if the switch is pressed 4 times, the set speed increases by about 4 km/h (4 mph).

## To increase speed using accelerator pedal

Depress the accelerator pedal and press the SET+ or SET- switch at the desired speed.

If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

#### How to Decrease the Set Speed

Press the SET- switch continuously and release the switch at the desired speed. The set speed can be adjusted incrementally (1 km/h (1 mph) increments) by pressing the switch and releasing it immediately. For example, if the switch is pressed 4 times, the set vehicle speed decreases by about 4 km/h (4 mph).

#### **Cancelling the function**

#### Cancelling using OFF/CANCEL switch

When the OFF/CANCEL switch is pressed once, the cruise control function is cancelled.

#### **Cancelling using MODE switch**

When the MODE switch is pressed, the cruise control function is cancelled and the

headway control function is made available for operation.

The cruise control function is cancelled automatically in the following cases. If the RES switch is pressed while the vehicle speed is 25 km/h (16 mph) or higher, the speed returns to the original set speed.

- The OFF/CANCEL switch is pressed once.
- $\cdot$  The brake pedal is depressed.
- $\cdot$  The parking brake is applied.
- The selector lever is shifted to P or N position.

- If the vehicle speed decreases by about 15 km/h (9.4 mph) or more than the set speed, the cruise control function may be cancelled.
- When the vehicle speed is less than 21 km/h (13 mph), the cruise control function is cancelled. In this case, the vehicle speed will not return to the original set speed even if the vehicle is accelerated to 25 km/h (16 mph) or higher and the RES switch is pressed. Reset the cruise control function.

### Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)\*

The MRCC with Stop & Go function system is designed to maintain headway control<sup>\*1</sup> with a vehicle ahead according to your vehicle's speed using a radar sensor (front) to detect the distance to the vehicle ahead and a preset vehicle speed without you having to use the accelerator or brake pedals.

\*1 Headway Control: Control of the distance between your vehicle and the vehicle ahead detected by the Mazda Radar Cruise Control (MRCC) system.

Additionally, if your vehicle starts closing in on the vehicle ahead such as if the vehicle ahead brakes suddenly, a warning sound and a warning indication in the display are activated simultaneously to alert you to maintain a sufficient distance between the vehicles. If the vehicle ahead stops while you are following behind it, your vehicle will stop and be held stopped automatically (stop hold control), and headway control will resume when you resume driving the vehicle such as by pressing the RES switch.

Also refer to the following before using the MRCC with Stop & Go function.

- · i-stop (page 4-11)
- · AUTOHOLD (page 4-102)
- · Forward Sensing Camera (FSC) (page 4-228)
- Radar sensor (front) (page 4-233)

### 

#### Do not rely completely on the MRCC with Stop & Go function:

The MRCC with Stop & Go function system has detection limitations depending on the type of vehicle ahead and its conditions, the weather conditions, and the road conditions. Additionally, the system may be unable to decelerate sufficiently to avoid hitting the vehicle ahead if the vehicle ahead applies the brakes suddenly or another vehicle cuts into the driving lane, which could result in an accident.

Always drive carefully and verify the surrounding conditions and depress the brake pedal or accelerator pedal while keeping a safer distance from vehicles ahead or on-coming vehicles.

# Do not use the MRCC with Stop & Go function system in the following locations, using the MRCC with Stop & Go function system at the following locations may result in an unexpected accident:

- ➢ General roads other than highways (Driving under these conditions using the MRCC with Stop & Go function system is not possible.)
- Roads with sharp curves and where vehicle traffic is heavy and there is insufficient space between vehicles.

- Roads where frequent and repetitive acceleration and deceleration occur (Driving under these conditions using the MRCC with Stop & Go function system is not possible).
- When entering and exiting interchanges, service areas, and parking areas of highways (If you exit a highway while headway control is in use, the vehicle ahead will no longer be tracked and your vehicle may accelerate to the set speed).
- Slippery roads such as ice or snow-bound roads (Tyres could spin causing you to lose vehicle control, or the stop hold control may not operate.)
- Long, descending slopes (to maintain distance between vehicles, the system automatically and continuously applies the brakes which could result in the loss of brake power.)
- Slopes with a steep gradient (The vehicle ahead may not be detected correctly, your vehicle may slide while stopped by the stop hold control, and it may accelerate suddenly after it starts moving.)

## For safety purposes, switch the MRCC with Stop & Go function system off when it is not being used.

#### Do not get out of the vehicle while the stop hold control is operating:

Getting out of the vehicle while the stop hold control is operating is dangerous as the vehicle may move unexpectedly and result in an accident. Before getting out of the vehicle, switch the MRCC with Stop & Go function system off, shift the selector lever to the P position, and apply the parking brake.

## 

If your vehicle is towed or you are towing something, switch the MRCC with Stop & Go function system off to prevent a mis-operation.


- The MRCC with Stop & Go function system does not detect the following as physical objects.
  - · Vehicles approaching in the opposite direction
  - Pedestrians
  - · Stationary objects (stopped vehicles, obstructions)
  - If a vehicle ahead is travelling at an extremely low speed, the system may not detect it correctly.
- During headway control travel, do not set the system for detection of two-wheeled vehicles such as motorcycles and bicycles.
- Do not use the MRCC with Stop & Go function system under conditions in which close proximity warnings are frequently activated.

- During headway control travel, the system accelerates and decelerates your vehicle in conjunction with the speed of the vehicle ahead. However, if it is necessary to accelerate for a lane change or if the vehicle ahead brakes suddenly causing you to close in on the vehicle rapidly, accelerate using the accelerator pedal or decelerate using the brake pedal depending on the conditions.
- While the MRCC with Stop & Go function system is in use, it does not cancel even if the selector lever is operated and any intended engine braking does not occur. If deceleration is required, lower the set speed or depress the brake pedal.
- The sound of the automatic brakes operating may be heard, however, it does not indicate a problem.
- The brake lights turn on while the MRCC with Stop & Go function automatic braking is operating, however, they may not turn on while the vehicle is on a downslope at the set vehicle speed or travelling at a constant speed and following a vehicle ahead.

## ▼ Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Display Indication


The MRCC with Stop & Go function setting status and operation conditions are indicated on the multi-information display and the active driving display.

#### Instrument cluster (Type A)

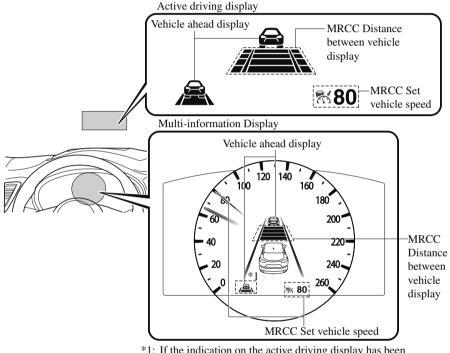

\*1: If the indication on the active driving display has been turned off using the personalisation features, the indication is displayed on the multi-information display.

#### Instrument cluster (Type B)

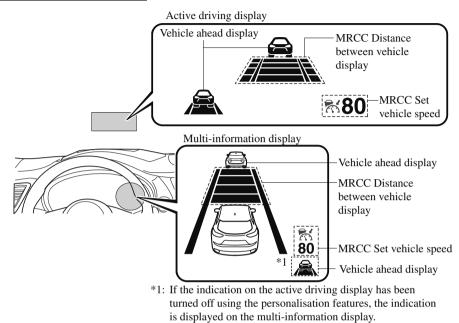

If there is a problem with the MRCC with Stop & Go function system, a message is displayed on the multi-information display. Check the centre display to verify the problem and then have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

Refer to Message Indicated on Display on page 7-53.

#### ▼ Close Proximity Warning

If your vehicle rapidly closes in on the vehicle ahead because the vehicle ahead applies the brakes suddenly while you are travelling in headway control, the warning sound activates and the brake warning is indicated in the display. Always verify the safety of the surrounding area and depress the brake pedal while keeping a safer distance from the vehicle ahead. Additionally, keep a safer distance from the vehicles behind you.

### **BRAKE!**

#### NOTE

In the following cases, the warnings and brakes may not operate even if your vehicle starts closing in on the vehicle ahead.

- You are driving your vehicle at the same speed as the vehicle ahead.
- · Directly after the MRCC with Stop & Go function system has been set.
- · Directly after the accelerator pedal is released.
- · Another vehicle cuts into the driving lane.

#### ▼ Setting the System

The MRCC with Stop & Go function system operates when all of the following conditions are met.

- $\cdot$  The vehicle speed is as follows:
  - · (European models)

About 0 km/h (0 mph) to 200 km/h (124 mph)

· (Except European models)


About 0 km/h (0 mph) to 145 km/h (90 mph)

- $\cdot$  The MRCC with Stop & Go function is turned on.
- The brake pedal is not depressed.
- The parking brake is released (Electric Parking Brake (EPB) indicator light is turned off).
- There is no problem with the DSC.
- · All the doors are closed.
- $\cdot$  The driver's seat belt is fastened.
- The selector lever is in the drive (D) position or manual (M) position (manual mode).

- In the following cases, the MRCC with Stop & Go function system is cancelled when the vehicle is travelling at 30 km/h (20 mph) or less and "Mazda Radar Cruise Control disabled under 30 km/h (20 mph)" is displayed in the multi-information display.
  - The Forward Sensing Camera (FSC) cannot detect target objects (There is problem with the Forward Sensing Camera (FSC) or windscreen is dirty).

- There is a problem with the stop hold control function.
- There is a problem with the Electric Parking Brake (EPB).
- It may not be possible to set the MRCC with Stop & Go function system directly after starting the engine, while the DSC operation is being checked.

#### Turning on the system

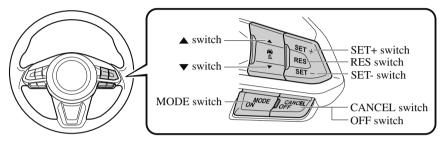

When the MODE switch is pressed once, the MRCC with Stop & Go function system turns on, and the MRCC with Stop & Go function main indication (white) turns on and the vehicle speed and the distance between the vehicles while in headway control can be set.



In addition, the MRCC with Stop & Go function system display indication is displayed on the multi-information display and the active driving display at the same time.

#### NOTE

- If the ignition is switched off while the MRCC with Stop & Go function system is operating, the system will be operable when the ignition is switched ON the next time.
- The MRCC with Stop & Go function can switch to the cruise control function. Refer to Cruise Control Function on page 4-170.

#### How to set the speed

- 1. Adjust the vehicle speed to the desired setting using the accelerator pedal.
- 2. Headway control begins when the SET+ or SET- switch is pressed.

The set speed and the inter-vehicle distance display filled with white lines is displayed. The MRCC with Stop & Go function main indication (white) switches to the MRCC with Stop & Go function set indication (green) at the same time.



Travel status	Indication on multi-information display		Indication on active driving
Traver status	Туре А	Туре В	display
During travel at constant speed	$\begin{array}{c} 120 \\ 100 \\ 120 \\ 100 \\$	<b>1</b> 80	<b>焘80</b>
During travel under head- way control	120 140 100 120 140 160 200 20 20 20 20 20 20 20 20		<b>童</b>

- If a vehicle ahead is detected while travelling at a constant speed, the vehicle-ahead indication is displayed and headway control is performed. Additionally, when a vehicle ahead is no longer detected, the vehicle-ahead indication turns off and the system switches back to travel at constant speed.
- The lowest possible speed which can be set on the MRCC with Stop & Go function system is 30 km/h (19 mph).
- Headway control is not possible if the vehicle ahead is driving faster than your vehicle's set speed. Adjust the system to the desired vehicle speed using the accelerator pedal.

#### How to set the distance-between-vehicles during headway control

The distance-between-vehicles is set to a shorter distance by pressing the  $\checkmark$  switch. The distance-between-vehicles is set to a longer distance by pressing the  $\blacktriangle$  switch. The distance-between-vehicles can be set to 4 levels; Long, medium, short, and extremely short distance.

Distance-between-vehi-	Indication on multi-information display		
cles guideline (at 80 km/h (50 mph) vehicle speed)	Туре А	Туре В	Indication on active driv- ing display*1
Long (about 50 m (164 ft))			
Medium (about 40 m (131 ft))			
Short (about 30 m (98 ft))			
Extremely short (about 25 m (82 ft))			

\*1 Displays a pop-up image in the active driving display only when the driver operates the switch.

- The distance-between-vehicles differs depending on the vehicle speed, and the slower the vehicle speed, the shorter the distance.
- When the ignition is switched to ACC or OFF and then the engine is started again, the system automatically sets the distance-between-vehicles to the previous setting.

#### How to change the set vehicle speed

## To accelerate/decelerate using the SET switch

When you press the SET+ switch, the vehicle accelerates and when you press the SET- switch, it decelerates.

	European models	Except Euro- pean models
Short press	1 km/h (1 mph)	5 km/h (5 mph)
Long press	10 km/h (5 mph)	

#### NOTE

For example, the set vehicle speed is changed by pressing the SET switch 4 times as follows:

#### (European models)

The vehicle speed accelerates or decelerates by 4 km/h (4 mph).

#### (Except European models)

The vehicle speed accelerates or decelerates by 20 km/h (20 mph).

## To increase speed using accelerator pedal

Depress the accelerator pedal and press and release the SET+ switch or SETswitch at the desired speed. If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

## 

The warnings and brake control do not operate while the accelerator pedal is depressed.

#### NOTE

- The setting speed can be changed by operating the SET+ switch or SET- switch during stop hold control.
- When accelerating using the SET+ switch while in headway control, the set vehicle speed can be adjusted but acceleration is not possible. If there is no longer a vehicle ahead, acceleration continues until reaching the set vehicle speed. For the set vehicle speed, check the set vehicle speed indication in the display.
- When depressing the accelerator pedal, the inter-vehicle distance indication in the display changes to the white-line indication.
- · (European models)

When switching to a passing lane and operating the direction indicator, the system provides more acceleration automatically if it determines that more acceleration is required. Drive while being careful of the road ahead because you could approach the vehicle ahead too closely.

#### Cancelling the system

When the following operations are performed, the MRCC with Stop & Go function system is cancelled, and the MRCC with Stop & Go function set indication (green) switches to the MRCC with Stop & Go function main indication (white) at the same time.

- The OFF/CANCEL switch is pressed.
- $\cdot$  The brake pedal is depressed.
- $\cdot$  The parking brake is applied.

• The selector lever is in the P (Park), N (Neutral), or R (Reverse) position.

Under the following conditions, the MRCC with Stop & Go function cancel indication is displayed in the multi-information display and a single beep sound is heard.

- · The DSC has operated.
- The Smart Brake Support (SBS) has operated.
- The Smart City Brake Support [Forward] (SCBS F) or Advanced Smart City Brake Support (Advanced SCBS) has operated.
- When travelling on a downslope for a long period of time.
- There is a problem with the system.
- · The engine has stalled.
- $\cdot$  Any of the doors is opened.
- $\cdot$  The driver's seat belt is unfastened.
- The parking brake is automatically applied during stop hold control.
- The radar sensor (front) cannot detect target objects (during rain, fog, snow or other inclement weather conditions, or when the radiator grille is dirty).

#### **Resuming control**

If the MRCC with Stop & Go function system is cancelled, you can resume control at the previously set speed by pressing the RES switch and after all of the operation conditions have been met.

#### NOTE

If the set speed is not indicated in the display, the control does not resume even if the RES switch is pressed.

#### Turning off the system

Press the OFF/CANCEL switch 2 times while the MRCC with Stop & Go function system is operating to switch off the system.

#### ▼ Stop Hold Control

While in headway control using the MRCC with Stop & Go function system, your vehicle will stop when a vehicle ahead stops. When the vehicle is stopped and the stop hold control operates, the MRCC with Stop & Go function indicator light turns on.

HOLD

#### NOTE

• If the MRCC with Stop & Go function system is cancelled during stop hold control, the vehicle is held in its stopped position. The stop hold control can be cancelled by performing one the following actions.

- · Press the accelerator pedal and resume driving the vehicle.
- While forcefully depressing the brake, switch the MRCC with Stop & Go function system off.
- The parking brake is automatically applied and the vehicle is held in its stopped position when 10 minutes have elapsed since the stop hold control operated. At this time, the MRCC with Stop & Go function system is cancelled.
- · The brake lights turn on during stop hold control.

#### To resume driving

After the vehicle ahead starts moving while your vehicle is stopped under stop hold control, press the RES switch or depress the accelerator pedal to cancel the stop hold control and resume driving.

- When you resume driving by pressing the RES switch, your vehicle does not start moving until the distance between your vehicle and the vehicle ahead lengthens to the specified distance or farther.
- If the MRCC with Stop & Go function is temporarily cancelled during stop hold control, you cannot resume driving by pressing the RES switch when there are no vehicles in front of your vehicle. Depress the accelerator pedal and resume driving the vehicle.
- If the vehicle ahead starts moving within 3 seconds after your vehicle is stopped by the stop hold control, headway control will resume even if you do not resume driving your vehicle, such as by depressing the accelerator pedal.

#### **Resume driving information**

If you do not resume driving within a few seconds after the vehicle ahead starts moving, the multi-information display vehicle-ahead indication flashes to urge the driver to resume driving.

#### ▼ Cruise Control Function

While this function is operating, the headway control operation is cancelled and only the cruise control function operates.

The vehicle speed can be set more than about 25 km/h (16 mph).

Use the cruise control function on expressways and other highways which do not require a lot of repeated acceleration and deceleration.

### 

## Do not use the cruise control function in the following locations:

Otherwise, it could lead to an accident.

- Roads with sharp curves and where vehicle traffic is heavy and there is insufficient space between vehicles. (Driving under these conditions using the cruise control function is not possible)
- Steep down slopes (Set speed may be exceeded because sufficient engine braking cannot be applied)
- Slippery roads such as ice or snow-bound roads (Tyres could spin causing you to lose vehicle control)

#### Always drive carefully:

The warnings and brake control will not operate after the headway control function is cancelled and the system is switched to only the cruise control function. Depress the brake pedal to decelerate according to the surrounding conditions while keeping a safer distance from the vehicle ahead and always driving carefully.

#### Switching to cruise control function

When the MODE switch is pressed until the system switches to the cruise main indication (white) while the MRCC with Stop & Go function system is turned on, the system switches to the cruise control function.

When the system switches to the cruise control function, the indicator and multi-information display notify the driver as follows:

- The MRCC with Stop & Go function set indication (green) or the MRCC with Stop & Go function main indication (white) is turned off, and the cruise main indication (white) is turned on.
- A message is displayed in the multi-information display.

### 

## Always turn off the cruise control function when it is not in use:

Leaving the cruise control function turned on when it is not in use is dangerous as it could operate unexpectedly, resulting in an accident.

#### How to set the speed

Adjust the system to the desired vehicle speed using the accelerator pedal. When the SET+ or SET- switch is pressed, the cruise set indication (green) is turned on and headway control begins.

#### NOTE

- The system may not be able to maintain the set speed constantly depending on driving conditions such as steep up or down slopes.
- The speed will continue increasing while the SET+ switch is pressed and held. The speed will continue decreasing while the SET- switch is pressed and held.

#### How to increase the set speed

The set speed can be increased using the following operations:

## To increase speed using the SET+ switch

Press and hold the SET+ switch and release the switch at the desired speed. The set speed can be adjusted incrementally (1 km/h (1 mph) increments) by pressing the switch and releasing it immediately. For example, if the switch is pressed 4 times, the set speed increases by about 4 km/h (4 mph).

## To increase speed using accelerator pedal

Depress the accelerator pedal and press the SET+ or SET- switch at the desired speed.

If the switch is not operated, the system returns to the set speed after you release your foot from the accelerator pedal.

#### How to Decrease the Set Speed

Press the SET- switch continuously and release the switch at the desired speed. The set speed can be adjusted incrementally (1 km/h (1 mph) increments) by pressing the switch and releasing it immediately. For example, if the switch is pressed 4 times, the set vehicle speed decreases by about 4 km/h (4 mph).

#### **Cancelling the function**

When the cruise control function is cancelled and the RES switch is pressed while the vehicle speed is 25 km/h (16 mph) or faster, the speed returns to the original set speed.

#### Cancelling using OFF/CANCEL switch

When the OFF/CANCEL switch is pressed once, the cruise control function is cancelled.

#### Automatically cancel

The cruise control function is cancelled automatically in the following cases.

- The brake pedal is depressed.
- The parking brake is applied.
- The selector lever is shifted to P or N position.

- If the vehicle speed decreases by about 15 km/h (9.4 mph) or more than the set speed, the cruise control function may be cancelled.
- When the vehicle speed is less than 21 km/h (13 mph), the cruise control function is cancelled. In this case, the vehicle speed will not return to the original set speed even if the vehicle is accelerated to 25 km/h (16 mph) or higher and the RES switch is pressed. Reset the cruise control function.

### Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS)\*

The LAS & LDWS alerts the driver that the vehicle may be deviating from its lane and it provides steering assistance to help the driver stay within the vehicle lanes.

The Forward Sensing Camera (FSC) detects the white lines (yellow lines) of the vehicle lane in which the vehicle is travelling and if the system determines that the vehicle may deviate from its lane, it operates the electric power steering to assist the driver's steering operation. The system also alerts the driver by activating a lane departure warning sound, vibrating the steering wheel, and indicating an alert in the display. Use the system when you drive the vehicle on roads with white (yellow) lines such as expressways and highways. Refer to Forward Sensing Camera (FSC) on page 4-228.

The steering wheel operation of the LAS & LDWS has "Late" and "Early" steering assist timing settings.

For the "Late" setting, the system assists the driver's steering operation if there is the possibility of the vehicle deviating from its lane.


For the "Early" setting, the system assists the driver's steering operation constantly so that the vehicle stays near the centre of the vehicle lane.


"Late" and "Early" timing can be changed (timing at which steering operation assist is provided) by changing the setting.

Refer to the Settings section in the Mazda Connect Owner's Manual.

"Late" setting

"Early" setting



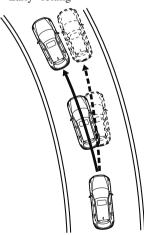

### 

#### Do not rely completely on the LAS & LDWS:

- The LAS & LDWS is not an automatic driving system. In addition, the system is not designed to compensate for a driver's lack of caution, and over-reliance on the system could lead to an accident.
- The detection ability of the LAS & LDWS is limited. Always stay on course using the steering wheel and drive with care.

#### Do not use the LAS & LDWS in the following cases:

The system may not operate adequately according to the actual driving conditions, resulting in an accident.

- > Driving on roads with tight curves.
- > Driving under bad weather conditions (rain, fog, and snow).
- Slippery roads such as ice or snow-bound roads.
- Roads with heavy traffic and insufficient distance between vehicles.
- Roads with no white (yellow) lane lines.
- ➤ Narrow roads resulting from road construction or lane closures.
- The vehicle is driven on a temporary lane or section with a closed lane resulting from road construction where there may be multiple white (yellow) lane lines or they are interrupted.
- $\succ$  Vehicle is driven on roads other than expressways and highways.
- > The tyre pressures are not adjusted to the specified pressure.
- The vehicle is being used to tow a camper or boat trailer.
- > Tyres of a different specified size are used, such as an emergency spare tyre.

### 

Heed the following cautions so that the LAS & LDWS can operate normally.

- Do not modify the suspensions.
- Always use wheels of the specified type and size for the front and rear wheels. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for tyre replacement.

#### NOTE


• When the direction indicator lever is operated for a lane change, the LAS & LDWS is automatically disabled. The LAS & LDWS becomes operational again when the direction indicator lever is returned and the system detects white (yellow) lane lines while the vehicle is being driven normally within its vehicle lane.

- If the steering wheel, accelerator pedal, or brake pedal is operated abruptly and the vehicle moves close to a white (yellow) line, the system determines that the driver is making a lane change and the LAS & LDWS operation is temporarily cancelled. The LAS & LDWS becomes operational again when the system detects white (yellow) lane lines while the vehicle is being driven normally within its vehicle lane.
- *If the vehicle deviates from its lane repeatedly within a short period of time, the LAS & LDWS may not operate.*
- · When white (yellow) lane lines are not detected, the LAS & LDWS does not operate.
- Under the following conditions, the LAS & LDWS may not be able to detect white (yellow) lane lines correctly and it may not operate normally.
  - If an object placed on the instrument panel is reflected in the windscreen and picked up by the camera.
  - *Heavy luggage is loaded in the luggage compartment or on the rear seat and the vehicle is tilted.*
  - The tyre pressures are not adjusted to the specified pressure.
  - · Tyres other than conventional tyres are equipped.
  - · Vehicle is driven on an intersection or junction, or on a forked road.
  - The white (yellow) lane lines are less visible because of dirt or fading/patchiness.
  - A vehicle in front of your vehicle is running near a white (yellow) lane line making it less visible.
  - A white (yellow) lane line is less visible because of bad weather (rain, fog, or snow).
  - The vehicle is driven on a temporary lane or section with a closed lane resulting from construction where there may be multiple white (yellow) lane lines or they are interrupted.
  - A misleading line is picked up on the road such as a temporary line for construction, or because of shade, lingering snow, or grooves filled with water.
  - The surrounding brightness suddenly changes such as when entering or exiting a tunnel.
  - The illumination of the headlights is weakened because of dirt or the optical axis is deviated.
  - · The windscreen is dirty or foggy.
  - The windscreen, camera is fogged (water droplets).
  - · Back-light is reflected off the road surface.
  - The road surface is wet and shiny after rain, or there are puddles on the road.
  - The shade of a guardrail parallel to a white (yellow) lane line is cast on the road.
  - The width of the driving lane is narrow or wide.
  - · Driving on roads with tight curves.
  - The road is excessively uneven.
  - The vehicle is shaken after hitting a road bump.
  - There are 2 or more adjacent white (yellow) lane lines.

• There are various road markings or lane markings of various shapes near an intersection.

## ▼ System Operation

Make sure that the LAS & LDWS OFF switch indicator light is turned off. When the LAS & LDWS OFF switch indicator light is turned on, press the switch and make sure that the switch indicator light turns off.

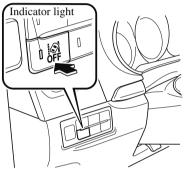

When the ignition is switched ON, the system goes on standby.

Drive the vehicle in the centre of the vehicle lane while the system is on standby. When all of the following conditions are met, and the system becomes operational.


- $\cdot$  The engine is running.
- $\cdot$  The vehicle speed is about 60 km/h (37 mph) or faster.
- $\cdot$  The system detects white (yellow) lane lines on both the right and left sides.
- The driver is operating the steering wheel.
- The driving lane is neither narrow nor wide.

When the system becomes operational, the LAS & LDWS indication (white) is displayed on the multi-information display and active driving display.


### Multi-information display (Basic display)

When the timing of the steering assist is set to "Late"

Instrument Cluster (Type A)

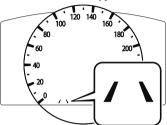

Instrument Cluster (Type B)




When the timing of the steering assist is set to "Early"

Instrument Cluster (Type A)



Instrument Cluster (Type B)



### Multi-information display (i-ACTIVSENSE display)

When the timing of the steering assist is set to "Late"



### Active driving display\*

When the timing of the steering assist is set to "Late"



When the timing of the steering assist is set to "Early"




When the timing of the steering assist is set to "Early"



### NOTE

When only a vehicle lane line (yellow) on either the left or right is detected, the LAS & LDWS indication on the active driving display turns off.

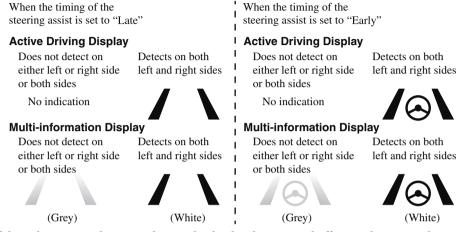

If the indication on the active driving display has been turned off using the personalisation features, the LAS & LDWS indication on the multi-information display is displayed in grey and the system goes on standby.

The LAS & LDWS goes on stand-by status in the following cases:

- $\cdot$  The system cannot detect white (yellow) lane lines.
- The vehicle speed is less than about 60 km/h (37 mph).
- The ABS/TCS is operating.
- $\cdot$  The TCS is turned off.

(If the TCS is turned off while the system is operational, a warning beep is heard and the system goes on standby.)

- The Off-Road Traction Assist is turned on. (If the Off-Road Traction Assist is turned on while the system is operational, a warning beep is heard and the system goes on standby.)
- $\cdot$  The vehicle is making a sharp curve.
- The brake pedal is depressed.
- · The steering wheel is operated abruptly.
- The width of a lane is excessively narrow or wide.

### NOTE

### · (When the timing of the steering assist is set to "Late")

• The LAS & LDWS does not operate until the system detects white (yellow) lane lines on either the left or right.

- When the system detects a white (yellow) lane line on one side only, the system will not operate the steering wheel operation assist and the warning for the lane line on the side that is not being detected. The steering wheel operation assist and the warning is only for a lane deviation on the side that is being detected.
- When the steering wheel operation assist is performed several times within a certain period of time, the warning sound is activated.
- · (When the timing of the steering assist is set to "Early")
  - When the steering assist timing is set to "Early", the LAS & LDWS does not operate until the system detects white (yellow) lane lines on the left and right.
  - The steering wheel operation assist is performed so that the vehicle remains near the centre of the driving lane, however, depending on conditions such as the road curvature, road slope and undulations, and vehicle speed, the system may not be able to keep the vehicle near the centre of the driving lane.
- If you take your hands off the steering wheel (not holding the steering wheel), the warning sound is activated and an alert is indicated on the multi-information display and the active driving display.

### **Multi-information Display**



Active Driving Display



If the condition in which your hands are off the steering wheel continues for a certain period of time after the warning sound is activated, the LAS operation stops automatically and a message is indicated on the multi-information display.

LAS Operation Canceled Drive Safely If the steering wheel is held lightly, or depending on the road conditions, the system may determine that you have released the steering wheel (not holding the steering wheel) even if you are holding it, and an alert may be indicated on the multi-information display and the active driving display.

- The timing at which the lane departure warning is activated and the steering wheel operation assist is performed varies.
- The following settings for the LAS & LDWS can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.
  - · Steering operation assist operational/non-operational
  - · Cancel sensitivity (likelihood of steering assist)

### Vehicle lane line display

When the LAS & LDWS becomes operational while on standby, the vehicle lane lines are displayed in the multi-information display and the active driving display. In the vehicle lane lines display indicating the operation status, the colour of the vehicle lane lines being detected changes to white.

### (Stand-by status)


### Multi-information display (Basic display)

When the timing of the steering assist is set to "Late"


Instrument Cluster (Type A)




Instrument Cluster (Type B)



When the timing of the steering assist is set to "Early"

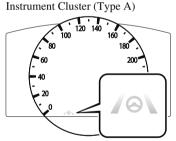


Instrument Cluster (Type B)



#### Multi-information display (i-ACTIVSENSE display)

When the timing of the steering assist is set to "Late"



### Active driving display\*


When the timing of the steering assist is set to "Late"




### (Operational status) Multi-information display (Basic display)

When the timing of the steering assist is set to "Late"


Instrument Cluster (Type A)

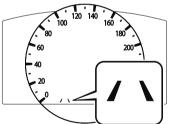

Instrument Cluster (Type B)



When the timing of the steering assist is set to "Early"




When the timing of the steering assist is set to "Early"




When the timing of the steering assist is set to "Early"

Instrument Cluster (Type A)

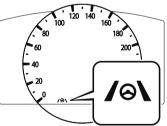

Instrument Cluster (Type B)



## Multi-information display (i-ACTIVSENSE display)



Active driving display\*

When the timing of the steering assist is set to "Late"



When the timing of the steering assist is set to "Early"



When the timing of the steering assist is set to "Early"



### Auto cancel

In the following cases, the LAS & LDWS is automatically cancelled, the LAS & LDWS warning indication (amber) turns on, and an alert is displayed. When the LAS & LDWS become operational, the system turns back on automatically.

- $\cdot$  The temperature inside the camera is high or low.
- The windscreen around the camera is foggy.
- The windscreen around the camera is blocked by an obstruction, causing poor forward visibility.

### Auto cancel of warning/steering assist

When the following operations are performed, the LAS & LDWS operation is cancelled automatically. The LAS & LDWS resumes automatically after the operation.

- The driver takes his or her hands off the steering wheel<sup>\*1</sup> (The LAS & LDWS is designed to assist the driver's steering operation and it will resume operation automatically when the driver holds the steering wheel.)
- · The steering wheel is operated abruptly.
- $\cdot$  The brake pedal is operated.
- The accelerator pedal is operated. (To cancel the automatic sensitivity cancel function, deselect "Cancel sensitivity" in the personalisation features setting.)
- $\cdot$  The direction indicator lever is operated.
- $\cdot$  The vehicle crosses a lane line.

\*1 Only when the timing of the steering operation assist is set to "Early".

### NOTE

- After the operation, the LAS & LDWS operation may not operate for a period of 5 seconds at the most until the lane lines are detected.
- Under the following conditions, the LAS & LDWS cancels the warning/steering assist automatically.
  - The TCS OFF switch is pressed to cancel the TCS.
  - The Off-Road Traction Assist switch is pressed to turn on the Off-Road Traction Assist.

### Steering operation assist OFF (non-operational)


The steering operation assist for the LAS & LDWS can be changed to non-operational (OFF).

Refer to the Settings section in the Mazda Connect Owner's Manual.

When the steering operation assist has been changed to inoperable (OFF), only the lane departure warning is operational.

### System operation

Make sure that the LAS & LDWS OFF switch indicator light is turned off. When the LAS & LDWS OFF switch indicator light turns on, press the switch and make sure that the switch indicator light turns off.

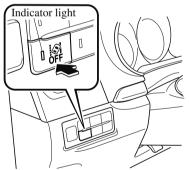

Drive the vehicle in the centre of the driving lane while the LAS & LDWS OFF switch indicator light is turned off.

The system becomes operational when all of the following conditions are met.

- The system detects white (yellow) lane lines on both the right and left sides or on either side.
- $\cdot$  The vehicle speed is about 60 km/h (37 mph) or faster.
- $\cdot$  The vehicle is driven on a straight road or road with gentle curves.
- $\cdot$  The engine is running.

The LAS & LDWS goes on stand-by status in the following cases:

- The system cannot detect white (yellow) lane lines.
- The vehicle speed is less than about 60 km/h (37 mph).
- The vehicle is making a sharp curve.
- The vehicle is making a curve at an inappropriate speed.


### NOTE

- The LAS & LDWS remains on stand-by until it detects white (yellow) lines on both the left and right sides, or on either side.
- When the system detects a white (yellow) lane line on one side only, the system will not activate warnings for the lane line on the side that is not being detected.
- The distance and warning sensitivity (likelihood of a warning) which the system uses to determine the possibility of a lane departure can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.

### Vehicle lane line display

When the LAS & LDWS becomes operational while on standby, the vehicle lane lines are displayed in the multi-information display. The system changes to operational status display when the system detects a white (yellow) line on either the left or right. (Stand by status)

(Stand-by status)



### (Operational status)



#### Auto cancel

In the following cases, the LAS & LDWS is automatically cancelled, the LAS & LDWS warning indication (amber) turns on, and an alert is displayed. When the LAS & LDWS become operational, the system turns back on automatically.

- $\cdot$  The temperature inside the camera is high or low.
- $\cdot$  The windscreen around the camera is foggy.

• The windscreen around the camera is blocked by an obstruction, causing poor forward visibility.

### (Auto cancel of warnings)


When the following operations are performed, the LAS & LDWS determines that the driver intends to make a lane change and the system operation is cancelled automatically. The LAS & LDWS resumes automatically after the operation.

- The steering wheel is operated abruptly.
- The brake pedal is depressed.
- The accelerator pedal is depressed. (To cancel the automatic sensitivity cancel function, deselect "Warning sensitivity" in the personalisation features setting.)
- The direction indicator lever is operated.
- $\cdot$  The vehicle crosses a lane line.

# ▼ Steering Wheel Operation Assist

When the system determines that the vehicle might be deviating from its lane, the steering wheel operation assist operates.

The system notifies the driver that it provided steering wheel operation assistance on the multi-information display and the active driving display.

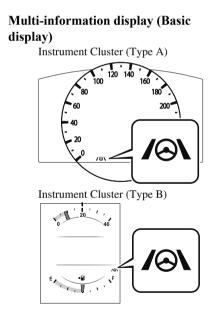

# When Driving i-ACTIVSENSE

### Multi-information display (i-ACTIVSENSE display)



Active driving display



### NOTE

• When the driver operates the steering wheel while the steering wheel operation assist is operating, the steering wheel operation assistance is cancelled.

## ▼ Lane Departure Warning

If the system determines that the vehicle may deviate from its lane, the lane departure warning is activated and the direction in which the system determines that the vehicle may deviate is indicated in the multi-information display or the active driving display. For vehicles equipped with the multi-information display, the direction which the system determined that the vehicle may be deviating from its lane is indicated in the multi-information display.

For vehicles equipped with the active driving display, the colour of the lane line in the direction which the system determined that the vehicle may be deviating from its lane changes from white to amber and the vehicle lane line flashes.

**Multi-information Display** 



Active Driving Display	


### NOTE

- If you have set the lane departure warning sound to the beep sound/rumble sound<sup>\*1</sup> setting, the warning sound may not be heard depending on the surrounding noise conditions.
- If you have set the lane departure warning system to the steering wheel vibrations setting, the vibration may not be felt depending on the road surface conditions.
- When the setting for the steering operation assist is changed to operational, the warnings can be set to activate/not activate. (If the setting for the steering operation assist is changed to non-operational, or the timing of the steering operation assist is set to "Early", the warnings cannot be set to non-operational.)

Refer to the Settings section in the Mazda Connect Owner's Manual.


- The LAS & LDWS can be changed to the following settings regardless of whether the steering operation assist has been set to operational/non-operational. Always check the setting status when driving the vehicle and make setting changes if necessary. Refer to the Settings section in the Mazda Connect Owner's Manual.
  - · Steering wheel vibration: Strong/weak
  - Warning sound volume
  - Types of warnings (steering wheel vibration/beep sound/rumble sound\*1)
- \*1 A rumble strip is a series of grooves in the road pavement surface positioned at specific intervals, and when the vehicle passes over it a vibration and rumble sound is produced which alerts the driver that the vehicle is departing from the lane.

The rumble sound is a reproduction of the sound which occurs when a vehicle passes over a rumble strip.

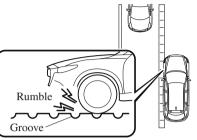

# ▼ System Cancelling

When the LAS & LDWS is turned off, press the LAS & LDWS OFF switch.

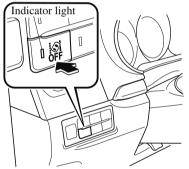

The LAS & LDWS OFF switch indicator light turns on.

## NOTE


- In the following cases, the LAS & LDWS is cancelled automatically and the LAS & LDWS OFF indication is displayed in the multi-information display. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
  - *There is a malfunction in the power steering.*
  - $\cdot$  There is a malfunction in the TCS.

- There is a malfunction in the Forward Sensing Camera (FSC).
- When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the lane-keep system operable, the system will be operable when the ignition is switched ON the next time.

When the LAS & LDWS is turned off, the vehicle lane line indication in the multi-information display and the active driving display turn off.

# Advanced Smart City Brake Support (Advanced SCBS)<sup>\*</sup>

The Advanced SCBS alerts the driver of a possible collision using the display and a warning sound when the Forward Sensing Camera (FSC) detects a vehicle ahead or pedestrian and determines that a collision with the object is unavoidable while the vehicle is driven at a vehicle speed of about 4 to 80 km/h (2 to 50 mph) if the object is a vehicle ahead and about 10 to 80 km/h (6.2 to 50 mph) if the object is a pedestrian. In addition, the system reduces damage in the event of a collision by operating the brake control (Advanced SCBS brake) when the system determines that a collision is unavoidable. In addition, when the driver depresses the brake pedal, the brakes are applied firmly and quickly to assist. (Brake Assist (Advanced SCBS brake assist))

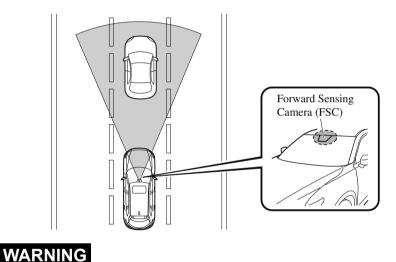

# \_\_\_\_\_

### Do not rely completely on the Advanced SCBS system:

- The Advanced SCBS system is only designed to reduce damage in the event of a collision. Over reliance on the system leading to the accelerator pedal or brake pedal being mistakenly operated could result in an accident.
- The Advanced SCBS system operates in response to a vehicle ahead or a pedestrian. The system does not operate in response to obstructions such as a wall, 2-wheeled vehicles, or animals.

# 

In the following cases, turn the system off to prevent a mis-operation:

- > The vehicle is being towed or when towing another vehicle.
- > The vehicle is on a chassis roller.
- > When driving on rough roads such as in areas of dense grass or off-road.

Refer to Stopping the Advanced Smart City Brake Support (Advanced SCBS) System Operation on page 4-191 on how to turn off the Advanced SCBS system.

### NOTE

• The Advanced SCBS system will operate under the following conditions.

- $\cdot$  The engine is running.
- The Smart City Brake Support (SCBS) warning indication (amber) does not illuminate.
- $\cdot$  (Object is vehicle ahead)
- The vehicle speed is between about 4 to 80 km/h (2 to 50 mph).
- (Object is a pedestrian) The vahials speed is between about 10 to 80 km/h
- The vehicle speed is between about 10 to 80 km/h (6.2 to 50 mph).
- The Advanced SCBS system is not turned off.
- Under the following conditions, the Advanced SCBS system may not operate normally:
  - The Advanced SCBS system will not operate if the driver is deliberately performing driving operations (accelerator pedal and steering wheel).
  - · If there is the possibility of partial contact with a vehicle ahead.
  - The vehicle is driven on a slippery road surface such as wet roads or icy or snow-bound roads.
  - The braking performance is adversely affected due to cold temperatures or wet brakes.
  - The vehicle is driven at the same speed as the vehicle ahead.
  - · The accelerator pedal is depressed.
  - · The brake pedal is depressed.
  - The steering wheel is being operated.
  - The selector lever is being operated.
- In the following cases, the Advanced SCBS may operate.
  - · Objects on the road at the entrance to a curve.
  - · Vehicles passing in the opposite lane while making a curve.
  - $\cdot$  When passing through a toll gate.
  - When passing through low gates, narrow gates, car washing machines, or tunnels.
  - · If you suddenly come close to a vehicle ahead.
  - · 2-wheeled vehicles, animals, or standing trees.

## ▼ Collision Warning

If there is the possibility of a collision with a vehicle ahead, the beep sounds continuously and a warning is indicated in the multi-information display or the active driving display.

# BRAKE!

### NOTE

The operation distance and volume of the collision warning can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.

## ▼ Automatic Brake Operation Display

The automatic brake operation display is indicated on the multi-information display after the Advanced SCBS is operated.

⇒\*⇔

SCBS Automatic Brake

### NOTE

- The collision warning beep sounds intermittently while the Advanced SCBS brake or brake assist (Advanced SCBS brake assist) is operating.
- If the vehicle is stopped by the Advanced SCBS operation and the brake pedal is not depressed, the warning beep sounds I time after about 2 seconds and the Advanced SCBS brake is automatically released.

### ▼ Stopping the Advanced Smart City Brake Support (Advanced SCBS) System Operation

The Advanced SCBS system can be temporarily deactivated. Refer to the Settings section in the Mazda Connect Owner's Manual. When the Advanced SCBS system is turned off, the Smart City Brake Support (SCBS) OFF indicator light turns on.




When the engine is restarted, the system becomes operational.

### NOTE

When the Advanced SCBS system is set to inoperable, the Smart City Brake Support [Reverse] (SCBS R) system and the Smart Brake Support (SBS) are also set to inoperable.

# Smart City Brake Support [Forward] (SCBS F)\*

The SCBS F system alerts the driver of a possible collision using an indication in the display and a warning sound when the Forward Sensing Camera (FSC) detects a vehicle ahead and determines that a collision with a vehicle ahead is unavoidable while the vehicle is being driven at a vehicle speed of about 4 to 80 km/h (2 to 50 mph). In addition, the system reduces damage in the event of a collision by operating the brake control (Smart City Brake Support (SCBS) brake) when the system determines that a collision is unavoidable while the vehicle is being driven at a vehicle speed of about 4 to 30 km/h (2 to 18 mph). It may also be possible to avoid a collision if the relative speed between your vehicle and the vehicle in front of you is less than about 20 km/h (12 mph). In addition, when the driver depresses the brake pedal while the system is in the operation range at about 4 to 30 km/h (2 to 18 mph), the brakes are applied firmly and quickly to assist. (Brake Assist (Smart City Brake Support (SCBS) brake assist))

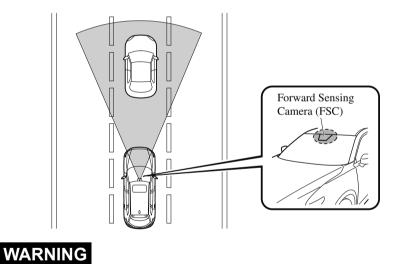

# Do not rely completely on the SCBS F system:

- ➤ The SCBS F system is only designed to reduce damage in the event of a collision. Over reliance on the system leading to the accelerator pedal or brake pedal being mistakenly operated could result in an accident.
- The SCBS F is a system which operates in response to a vehicle ahead. The system may not be able to detect or react to 2-wheeled vehicles or pedestrians.

# 

In the following cases, turn the system off to prevent a mis-operation:

- > The vehicle is being towed or when towing another vehicle.
- > The vehicle is on a chassis roller.
- ▶ When driving on rough roads such as in areas of dense grass or off-road.

Refer to Stopping the Smart City Brake Support [Forward] (SCBS F) system Operation on page 4-194 on how to turn off the SCBS F system.

### NOTE

• The SCBS F system will operate under the following conditions.

- $\cdot$  The engine is running.
- The Smart Brake Support/Smart City Brake Support (SBS/SCBS) system warning indication (amber) does not illuminate.
- (Rear-end collision warning) The vehicle speed is about 4 to 80 km/h (2 to 50 mph).
- (Brake control (Smart City Brake Support (SCBS) brake)) The vehicle speed is about 4 to 30 km/h (2 to 18 mph).
- The SCBS F system is not turned off.
- · Under the following conditions, the SCBS F system may not operate normally:
  - The SCBS F system will not operate if the driver is deliberately performing driving operations (accelerator pedal and steering wheel).
  - · If there is the possibility of partial contact with a vehicle ahead.
  - The vehicle is driven on a slippery road surface such as wet roads or icy or snow-bound roads.
  - The braking performance is adversely affected due to cold temperatures or wet brakes.
  - The vehicle is driven at the same speed as the vehicle ahead.
  - · The accelerator pedal is depressed.
  - · The brake pedal is depressed.
  - · The steering wheel is being operated.
  - The selector lever is being operated.
- In the following cases, the Forward Sensing Camera (FSC) determines that there is a vehicle ahead and the SCBS F may operate.
  - Objects on the road at the entrance to a curve.
  - Vehicles passing in the opposite lane while making a curve.
  - · Metal objects, bumps, or protruding objects on the road.
  - When passing through a toll gate.
  - · When passing through low gates, narrow gates, car washing machines, or tunnels.

- · If you suddenly come close to a vehicle ahead.
- · 2-wheeled vehicles, pedestrians, animals or standing trees.
- · Vehicle is driven with some of the tyres having significant wear.

## ▼ Collision Warning

If there is the possibility of a collision with a vehicle ahead, the beep sounds continuously and a warning is indicated in the multi-information display or the active driving display.

# BRAKE!

## NOTE

The operation distance and volume of the collision warning can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.

## ▼ Automatic Brake Operation Display

The automatic brake operation display is indicated on the multi-information display after the SCBS F is operated.



# SCBS Automatic Brake

### NOTE

- The collision warning beep sounds intermittently while the SCBS F brake or brake assist (SCBS F brake assist) is operating.
- If the vehicle is stopped by the SCBS F operation and the brake pedal is not depressed, the warning beep sounds 1 time after about 2 seconds and the SCBS F brake is automatically released.

### ▼ Stopping the Smart City Brake Support [Forward] (SCBS F) System Operation

The SCBS F system can be temporarily deactivated. Refer to the Settings section in the Mazda Connect Owner's Manual. When the SCBS F system is turned off, the Smart City Brake Support (SCBS) OFF indicator light turns on.




When the engine is restarted, the system becomes operational.

### NOTE

When the SCBS F system is set to inoperable, the Smart City Brake Support [Reverse] (SCBS R) system and the Smart Brake Support (SBS) are also set to inoperable.

# Smart City Brake Support [Reverse] (SCBS R)\*

The SCBS R is a system which is designed to reduce damage in the event of a collision by operating the brake control (SCBS brake) when the system's ultrasonic sensors detect an obstruction at the rear of the vehicle while driving at a speed of about 2 to 8 km/h (2 to 4 mph) and the system determines that a collision is unavoidable.

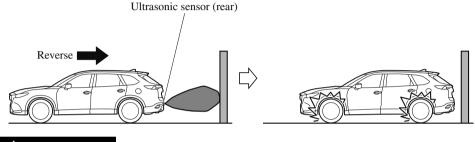

# 

#### Do not rely completely on the SCBS R system:

- The SCBS R system is only designed to reduce damage in the event of a collision. Over reliance on the system leading to the accelerator pedal or brake pedal being mistakenly operated could result in an accident.
- > To assure the correct operation of the SCBS R, heed the following cautions.
  - Do not apply a sticker to an ultrasonic sensor (rear) (including transparent stickers). Otherwise, the ultrasonic sensor (rear) may not be able to detect vehicles or obstructions which could result in an accident.
  - > Do not disassemble an ultrasonic sensor (rear).
  - If cracks or damage caused by flying gravel or debris is visible around an ultrasonic sensor (rear), stop using the SCBS R system immediately and have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer). If the vehicle continues to be driven with cracks or scratch marks left around an ultrasonic sensor, the system may operate unnecessarily and cause an unexpected accident. Refer to Stopping the Smart City Brake Support [Reverse] (SCBS R) System Operation on page 4-198.
  - Consult an expert repairer (we recommend an Authorised Mazda Repairer) for rear bumper replacement.

### Do not modify the suspension:

If the vehicle height or inclination is changed, the SCBS R system may not operate correctly because it cannot detect obstructions correctly.

### Do not apply a strong force to an ultrasonic sensor (rear):

When washing the vehicle, do not spray highly pressurised water against an ultrasonic sensor (rear), or rub it strongly. In addition, do not hit the rear bumper forcefully when loading and unloading cargo Otherwise, the sensors may not detect obstructions correctly which could cause the SCBS R system to not operate normally, or it could operate unnecessarily.

# 

- When driving off-road in areas where there is grass or foliage, it is recommended that the SCBS R system be turned off.
- Always use tyres of the specified size and the same manufacturer, brand, and tread pattern on all 4 wheels. In addition, do not use tyres with significantly different wear patterns on the same vehicle. Otherwise, the SCBS R system may not operate normally.
- If ice or snow is stuck on the ultrasonic sensors (rear) they may not be able to detect obstructions correctly depending on the conditions. In such cases, the system may not be able to perform controls correctly. Always drive carefully and pay attention to the rear of the vehicle.

### NOTE

- The vehicle posture changes depending on the accelerator pedal, brake pedal and steering wheel operations, which could make it difficult for the system to recognise an obstruction, or it could facilitate unnecessary detection. In such cases, the SCBS R may or may not operate.
- The SCBS R system will operate under the following conditions.
  - $\cdot$  The engine is running.
  - The selector lever is in the R (reverse) position.
  - "Reverse Smart City Brake Support Malfunction" is not displayed in the multi-information display.
  - $\cdot$  The vehicle speed is between about 2 to 8 km/h (2 to 4 mph).
  - $\cdot$  The SCBS R is not turned off.
  - $\cdot$  The DSC is not malfunctioning.
- The SCBS R operates using ultrasonic sensors (rear) which detect obstructions at the rear by emitting ultrasonic waves and then receiving the returning waves reflected off the obstructions.
- In the following cases, the ultrasonic sensors (rear) cannot detect obstructions and the SCBS R may not operate.
  - The height of the obstruction is low such as low walls or trucks with low loading platforms.
  - The height of the obstruction is high such as trucks with high loading platforms.

- $\cdot$  The obstruction is small.
- The obstruction is thin such as a signpost.
- The obstruction is positioned away from the centre of the vehicle.
- The surface of the obstruction is not pointed vertically relative to the vehicle.
- The obstruction is soft such as a hanging curtain or snow stuck to a vehicle.
- *The obstruction is shaped irregularly.*
- The obstruction is extremely close.
- In the following cases, the ultrasonic sensors (rear) cannot detect obstructions correctly and the SCBS R may not operate.
  - Something is stuck on the bumper near an ultrasonic sensor (rear).
  - The steering wheel is turned sharply, or the brake or accelerator pedal is operated.
  - There is another obstruction near one obstruction.
  - During inclement weather such as rain, fog and snow.
  - High or low humidity.
  - · High or low temperatures
  - · Strong winds.
  - The path of travel is not flat.
  - · Heavy luggage is loaded in the luggage compartment or on the rear seat.
  - Objects such as a wireless aerial, fog light, or illuminated number plate is installed near an ultrasonic sensor (rear).
  - The orientation of an ultrasonic sensor (rear) has deviated for reasons such as a collision.
  - The vehicle is affected by other sound waves such as the horn, engine noise, ultrasonic sensor of another vehicle.
- In the following cases, an ultrasonic sensor (rear) may detect something as a target obstruction which could cause the SCBS R system to operate.
  - $\cdot$  Driving on a steep slope.
  - Wheel blocks.
  - · Hanging curtains, gate poles such as at toll gates and railroad crossing.
  - When travelling near objects such as foliage, barriers, vehicles, walls, and fences along a road.
  - When driving off-road in areas where there is grass and forage.
  - · When passing through low gates, narrow gates, car washing machines, and tunnels.
  - $\cdot$  A towing bar is installed or a trailer is connected.
- When the system operates, the user is notified by the multi-information display.
- The Smart City Brake Support (SCBS) warning indication (amber) turns on when the system has a malfunction.

Refer to Taking Action on page 7-47.

## ▼ Automatic Brake Operation Display

"SCBS Automatic Brake" is indicated in the multi-information display after the Smart City Brake Support (SCBS) brakes is operated.



# SCBS Automatic Brake

### NOTE

- The collision warning beep sounds intermittently while the Smart City Brake Support (SCBS) brake is operating.
- If the vehicle is stopped by the Smart City Brake Support (SCBS) operation and the brake pedal is not depressed, the warning beep sounds one time after about 2 seconds and the Smart City Brake Support (SCBS) brake is automatically released.

### ▼ Stopping the Smart City Brake Support [Reverse] (SCBS R) System Operation

The SCBS R system can be temporarily deactivated.

Refer to the Settings section in the Mazda Connect Owner's Manual.

When the SCBS R system is turned off, the Smart City Brake Support (SCBS) OFF indicator light turns on.



When the engine is restarted, the system becomes operational.

### NOTE

When the SCBS R system is set to inoperable, Advanced Smart City Brake Support (Advanced SCBS) and the Smart Brake Support (SBS) are also set to inoperable.

# Smart Brake Support (SBS)\*

The SBS system alerts the driver of a possible collision using a display and warning sound if the radar sensor (front) and the Forward Sensing Camera (FSC) determine that there is the possibility of a collision with a vehicle ahead while the vehicle is being driven at about 15 km/h or faster (10 mph or faster). Furthermore, if the radar sensor (front) and the Forward Sensing Camera (FSC) determines that a collision is unavoidable, the automatic brake control is performed to reduce damage in the event of a collision. In addition, when the driver depresses the brake pedal, the brakes are applied firmly and quickly to assist. (Brake Assist (SBS brake assist))

# 

# Do not rely completely on the SBS system and always drive carefully:

The SBS is designed to reduce damage in the event of a collision, not avoid an accident. The ability to detect an obstruction is limited depending on the obstruction, weather conditions, or traffic conditions. Therefore, if the accelerator pedal or brake pedal is mistakenly operated it could result in an accident. Always verify the safety of the surrounding area and depress the brake pedal or accelerator pedal while keeping a safer distance from vehicles ahead or on-coming vehicles.

# 

In the following cases, turn the system off to prevent a mis-operation:

- The vehicle is being towed or when towing another vehicle.
- > The vehicle is on a chassis roller.
- When driving on rough roads such as in areas of dense grass or off-road.

## NOTE

- The SBS system operates when all of the following conditions are met:
  - The ignition is switched ON.
  - · The SBS system is on.
  - The vehicle speed is about 15 km/h or faster (10 mph or faster).
  - The relative speed between your vehicle and the vehicle ahead is about 15 km/h or faster (10 mph or faster).
  - The Dynamic Stability Control (DSC) is not operating.
- The SBS system may not operate under the following conditions:
  - If the vehicle is accelerated rapidly and it comes close to a vehicle ahead.
  - *The vehicle is driven at the same speed as the vehicle ahead.*
  - The accelerator pedal is depressed.
  - · The brake pedal is depressed.
  - The steering wheel is being operated.
  - The selector lever is being operated.
  - The direction indicator is being used.
  - When the vehicle ahead is not equipped with tail lights or the tail lights are turned off.

- When warnings and messages, such as a dirty windscreen, related to the Forward Sensing Camera (FSC) are being displayed in the multi-information display.
- Although the objects which activate the system are four-wheeled vehicles, the radar sensor (front) could detect the following objects, determine them to be an obstruction, and operate the SBS system.
  - Objects on the road at the entrance to a curve (including guardrails and snow banks).
  - A vehicle appears in the opposite lane while cornering or rounding a curve.
  - When crossing a narrow bridge.
  - When passing under a low gate or through a tunnel or narrow gate.
  - When entering an underground parking area.
  - Metal objects, bumps, or protruding objects on the road.
  - If you suddenly come close to a vehicle ahead.
  - When driving in areas where there is high grass or forage.
  - Two-wheeled vehicles such as motorbikes or bicycles.
  - Pedestrians or non-metallic objects such as standing trees.
- When the system operates, the user is notified by the multi-information display.
- The SBS warning indication (amber) turns on when the system has a malfunction. Refer to Taking Action on page 7-47.

## ▼ Collision Warning

If there is the possibility of a collision with a vehicle ahead, the beep sounds continuously and a warning is indicated in the multi-information display or the active driving display.

# BRAKE!

## ▼ Stopping The Smart Brake Support (SBS) System Operation

The SBS system can be temporarily deactivated.

Refer to the Settings section in the Mazda Connect Owner's Manual.

When the SBS system is turned off, the SBS OFF indicator light turns on.



When the engine is restarted, the system becomes operational.

## NOTE

If the SBS system operation is turned off, the Smart City Brake Support (SCBS) system operation is turned off simultaneously.

# 360° View Monitor\*

The 360° View Monitor consists of the following functions which assist the driver in checking the area surrounding the vehicle using various indications in the centre display and a warning sound while the vehicle is being driven at low speeds or while parking.

### · Top view

The top view displays an image of the vehicle from directly above on the centre display by combining the images taken from the 4 cameras set on all sides of the vehicle. The top view displays on the right side (left-hand drive)/left side (right-hand drive) of the screen when the front view or rear view screen is being displayed. The top view assists the driver in checking the area surrounding the vehicle when the vehicle is moving forward or in reverse.

### · Front view/front wide view

The image from the front of the vehicle is displayed on the centre display. The view from the front assists the driver in checking the front of the vehicle by displaying guide lines on the displayed image taken from the front of the vehicle.

### · Side view

The images taken from the front left and right sides of the vehicle are displayed on the centre display.

The side view assists the driver in checking the front sides of the vehicle by displaying guide lines on the displayed image taken from the front left and right sides of the vehicle.

### · Rear view/rear wide view

The image from the rear of the vehicle is displayed on the centre display.

The image from the rear assists the driver in checking the rear of the vehicle by displaying guide lines on the displayed image taken from the rear of the vehicle.

### · Parking sensor

If there are any obstructions near the vehicle while the top view/side view is displayed, an obstruction detection indication on the centre display turns on.

The parking sensors use ultrasonic sensors to detect obstructions around the vehicle when the vehicle is driven at low speeds, such as during garage or parallel parking, and notifies the driver of the approximate distance from the vehicle to the surrounding obstruction using sound and an obstruction detection indication.

Refer to Parking Sensor System on page 4-261.

### · Rear Cross Traffic Alert (RCTA)


If there is the possibility of a collision with an approaching vehicle while the rear view/ rear wide view is displayed, a warning is displayed on the centre display.

The Rear Cross Traffic Alert (RCTA) uses radar sensors (rear) to detect vehicles approaching from the rear left and right sides of the vehicle, and it assists the driver in checking the rear of the vehicle while reversing by flashing the Blind Spot Monitoring (BSM) warning lights and activating the warning sound.

Refer to Rear Cross Traffic Alert (RCTA) on page 4-143.

## When Driving i-ACTIVSENSE

### **360°View Monitor Range**

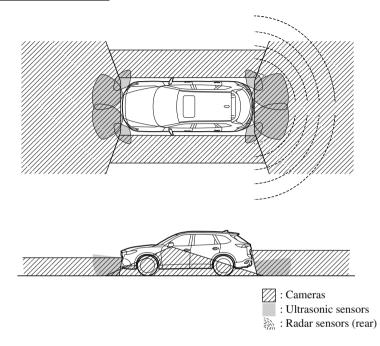



# Always confirm the safety of the area around the vehicle with the mirrors and directly with your eyes when driving.

The 360°View Monitor is an auxiliary device which assists the driver in checking the safety of the area around the vehicle.

The shooting range of the cameras and detection range of the sensors are limited. For example, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots where an obstruction may not be visible. In addition, the extended vehicle width lines and projected vehicle path lines are only to be used as references, and the images on the screen may differ from the actual conditions.

# 

> Do not use the 360°View Monitor under any of the following conditions.

➢ Icy or snow-covered roads.

> Tyre chains or a temporary spare tyre is installed.

- > The front doors or the liftgate is not fully closed.
- > The vehicle is on a road incline.
- > The door mirrors are retracted.
- > Do not hit the front/rear camera, front bumper, and door mirrors forcefully. The camera position or installation angle may shift.
- The cameras are of a waterproof structure. Do not disassemble, modify, or remove a camera.
- The camera cover is made of hard plastic, therefore do not apply oil film remover, organic solvents, wax, or coating agents. If any such agent gets on the camera cover, wipe it off using a soft cloth immediately.
- > Do not rub the camera lens forcefully, or clean it with an abrasive or hard brush. Otherwise, it could scratch the camera lens and negatively affect the images.
- Consult an expert repairer (we recommend an Authorised Mazda Repairer) for repair, painting, or replacement of the front/rear camera, front bumper and door mirrors.
- $\succ$  Heed the following cautions to assure that the 360°View Monitor operates normally.
  - > Do not modify the vehicle suspensions or lower/raise the vehicle body, or both.
  - ➤ Always use wheels of the specified type and size for the front and rear wheels. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for tyre replacement.
- When the display is cold, images may leave trails or the screen might be darker than usual, making it difficult to check the vehicle surroundings. Always confirm the safety at the front and around the vehicle visually when driving.
- The method for parking/stopping the vehicle using the 360°View Monitor differs depending on the road circumstances/conditions and the vehicle conditions. When and how much you turn the steering wheel will differ depending on the situation, therefore always check the vehicle surroundings directly with your eyes while using the system.

Also, before using the system, always make sure that the vehicle can be parked/stopped in the parking/stopping space.

## NOTE

- If there are water droplets, snow, or mud on the camera lens, wipe it off using a soft cloth. If the camera lens is especially dirty, wash it off with mild detergent.
- If the area where the camera is installed, such as the liftgate or door mirrors, has been damaged in a vehicle accident, the camera (position, installation angle) may have shifted. Always consult an expert repairer (we recommend an Authorised Mazda Repairer) to have the vehicle inspected.
- If the camera is subjected to excessive changes in temperature such as by pouring hot water on the camera during cold weather, the 360°View Monitor may not operate normally.
- If the battery voltage is low, the screen might be temporarily difficult to view, however, this does not indicate a problem.


# When Driving i-ACTIVSENSE

- The 360°View Monitor has limitations. Objects under the bumper or near both ends of the bumper cannot be displayed.
- Obstructions above the upper image range of the camera are not displayed.
- Under the following conditions, the screen might be difficult to view, however this does not indicate a problem.
  - The temperature near the lens is high/low.
  - · Rainy conditions, water droplets on the camera, or high humidity.
  - Mud or foreign matter near the camera.
  - Extremely bright light such as sunlight or headlights hitting the camera lens directly.
- Because the 360°View Monitor camera uses a special lens, the distance displayed on the screen differs from the actual distance.
- Obstructions displayed on the screen may appear differently than in actuality. (Obstructions may appear fallen, larger, or longer than they actually are.)
- Do not apply stickers to a camera or the area around it. In addition, do not install accessories or an illuminated number/character number plate to the area around a camera. Otherwise, the camera may not correctly display the surrounding conditions.

### ▼ Types of Images Displayed on the Screen


### Top view/Front view

Displays the image of the area around the vehicle and the vehicle front.

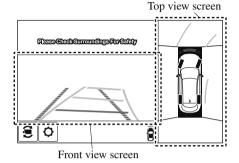


### Front wide view

Displays the image of the front of the vehicle (wide-area).

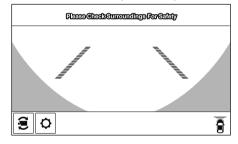


#### Side view

Displays the image of the left and right sides of the vehicle.

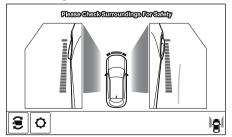


### Top view/Rear view

Displays the image of the area around the vehicle and the rear of the vehicle.

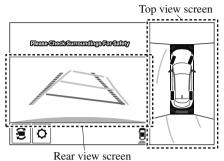

### Rear wide view

Displays the image of the rear of the vehicle (wide-area).

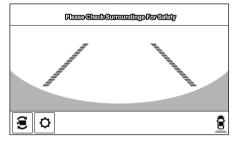


### ▼ How to Use the System

### Top view/Front view, Front wide view, Side view

#### Indication


Images are displayed on the screen when the 360°View Monitor switch is pressed with all of the following conditions met.

- $\cdot$  The ignition is switched ON.
- $\cdot$  The selector lever is in a position other than R.

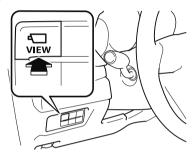

### **Display switching**

You can change the displayed screen by pressing the commander knob or by touching the switch camera icon on the screen while the top view/front view, front wide view, or the side view is displayed.

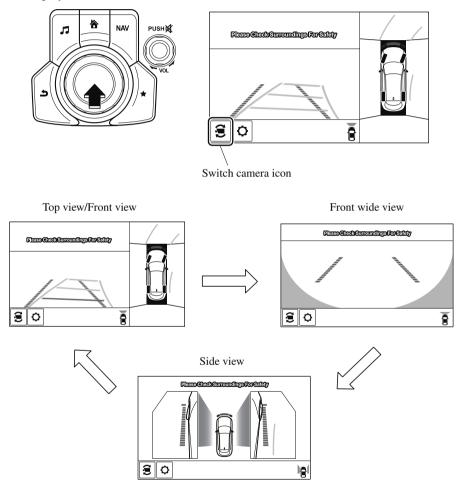

### NOTE

- When the selector lever is in R position, the displayed screen does not switch to the top view/front view, front wide view, or the side view.
- Display of the top view/front view, front wide view, or the side view stops even with the display conditions met if any of the following conditions occurs.

- When a switch around the commander knob is pressed.
- The selector lever is shifted to P position (displayed when the selector lever is in a position other than P).
- · (Displayed when vehicle speed is less than 15 km/h (9.3 mph))
  - 4 minutes and 30 seconds have passed.
  - The vehicle speed is about 15 km/h (9.3 mph) or faster.
- · (Displayed when the vehicle speed is about 15 km/h (9.3 mph) or faster)
  - The vehicle speed is about 15 km/h (9.3 mph) or faster after 8 seconds have passed since pressing the 360°View Monitor switch.
  - 4 minutes and 22 seconds have passed from the point when the vehicle speed was less than 15 km/h (9.3 mph) after 8 seconds have passed since pressing the 360° View Monitor switch.
- The 360°View Monitor displays the previously displayed screen.
- The 360° View Monitor settings can be changed as follows. Refer to the Settings section in the Mazda Connect Owner's Manual.
  - Automatic display of the 360°View Monitor when the ultrasonic sensor detects an obstruction.
  - Automatic display of the 360°View Monitor when the ignition is switched ON.


#### Top view/Rear view, Rear wide view

The top view/rear view, rear wide view displays when all of the following conditions are met.

- $\cdot$  The ignition is switched ON.
- · Selector lever is in R position.

### **Display switching**

The displayed screen can be switched by pressing the commander knob or by touching the switch camera icon on the screen while the top view/rear view, rear wide view is displayed.

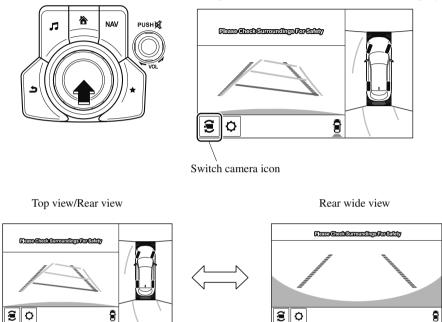

### NOTE

- The top view/rear view and rear wide view automatically display whether or not the 360° View Monitor switch is turned on or off when shifting the selector lever to R position.
- The setting can be changed to display the top view/front view when shifting from reverse to a forward gear without operating the 360°View Monitor switch to check the front of the vehicle while parallel parking.


Refer to the Settings section in the Mazda Connect Owner's Manual.

### Screen operation/icon



### Always stop the vehicle when adjusting the 360°View Monitor image quality.

Do not adjust the 360°View Monitor image quality while driving. If you adjust the 360° View Monitor image quality (such as brightness, contrast, tone, and colour density) while driving, it could lead to an unexpected accident.

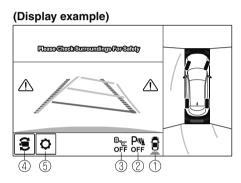



	Display/Icon	Content	
	View status icon	Indicates which image is displayed among the front view/front wide view/side view/rear view/rear wide view.	
2	Parking sensor status icon	Indicates that the parking sensor has a problem or it is switched off.	
3	Rear Cross Traffic Alert (RCTA) status icon	Indicates that the radar sensor (rear) has a problem or it is turned off.	
4	Switch camera icon	Each time the screen is touched, the display screen switche	
5	Setting icon	The image quality for the 360°View Monitor can be adjusted.	

## ▼ Top View/Front View


Use the top view/front view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

### **Display range**



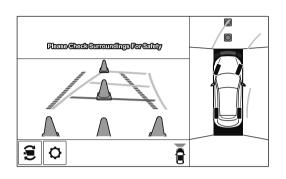


### (Actual condition)




- In the top view screen, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots.
- Because images displayed in the top view screen are processed from each camera, the top view screen may display in the following ways.
  - If an image containing an object with a conspicuous colour is picked up by any of the cameras, the whole screen may be affected and it may display in that colour.
  - · Obstructions displayed in the front view may not display on the top view screen.
  - If the position or angle of each camera changes due to tilting of the vehicle, the image may appear distorted.
  - Lines on the road may appear distorted at the seams where each of the camera images merge.
  - The entire screen may appear bright/dark depending on the illumination level around any of the cameras.

# Viewing the screen



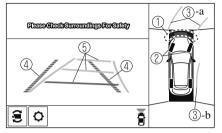

# (When the projected vehicle path line display is off)

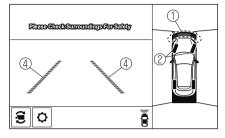

	Display/Icon	Content	
1	Parking sensor view	Displays the parking sensor detection condition when the parking sensor is activated. For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-261.	
2	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.	
3	Projected vehicle path lines (amber)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation. a) Indicates the path where the edge of the front bumper is ex- pected to travel. b) Indicates the path where the inner side of the vehicle is ex- pected to travel.	
(4)	Extended vehicle width lines and dis- tance guide lines (red/blue)	<ul> <li>Indicates the approximate width of the vehicle and the distance (from front end of bumper) in front of the vehicle.</li> <li>The red lines indicate the points up to about 0.5 m (19 in) from the front end of the bumper.</li> <li>The blue lines indicate the points from about 0.5 m (19 in and up to 2 m (78 in) from the front end of the bumper.</li> </ul>	
5	Projected vehicle path distance guide lines (red/amber)	<ul> <li>Indicates the distance (from front end of bumper) in front of the vehicle.</li> <li>The red line indicates the point about 0.5 m (19 in) from the front end of the bumper.</li> <li>The amber lines indicate the points about 1 m (39 in) and m (78 in) from the front end of the bumper.</li> </ul>	

# 


The parking sensor detection range has limitations. For example, obstructions closing in from the side and objects short in height may not be detected. Always confirm the safety around the vehicle visually when driving.

For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-261.

### NOTE

The setting can be changed so that the projected vehicle path lines are not displayed. Refer to the Settings section in the Mazda Connect Owner's Manual.

### How to use the projected vehicle path line function

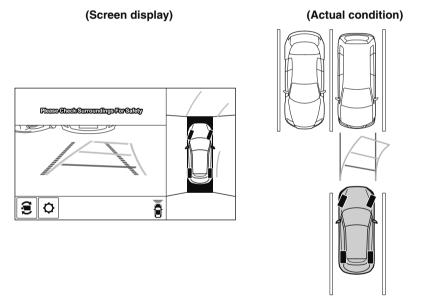


Make sure that there are no obstructions within the projected vehicle path lines. Drive the vehicle forward while turning the steering wheel so that no obstructions come within the projected vehicle path lines.


# ▼ Front Wide View

Use the front wide view to assist in checking the safety of the surrounding area when accelerating from a stop or entering a T-shaped intersection and intersection.

### **Display range**

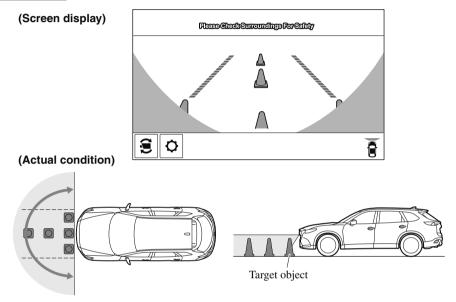

### Viewing the screen

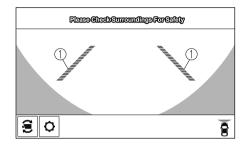

	Display/Icon	Content	
1	Extended vehicle width lines and dis- tance guide lines (red/blue)	<ul> <li>Indicates the approximate width of the vehicle and the distance (from front end of bumper) in front of the vehicle.</li> <li>The red lines indicate the points up to about 0.5 m (19 in) from the front end of the bumper.</li> <li>The blue lines indicate the points from about 0.5 m (19 in) and up to 2 m (78 in) from the front end of the bumper.</li> </ul>	


#### NOTE

- The parking sensor obstruction detection indication does not display. Switch the screen display to the top view/front view or side view display if the parking sensor warning sound is activated.
- The front wide view screen displays the image in front of the vehicle at a wide angle and corrects the image to help detect approaching obstructions from the side. Therefore, it differs from the actual view.

## ▼ Side View


Use the side view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

### **Display range**

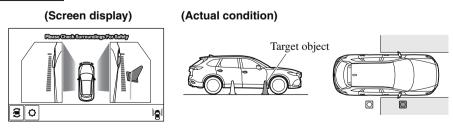


### Viewing the screen

(When the projected vehicle path line display is on)

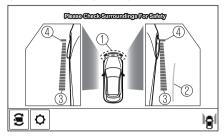

# (When the projected vehicle path line display is off)

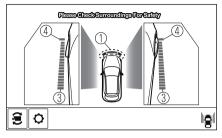


	Display/Icon	Content	
1	Parking sensor view	Displays the parking sensor detection condition when the parking sensor is activated. For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-261.	
2	Projected vehicle path lines (amber)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation. The projected vehicle path lines (amber) indicate the path the inner side of the vehicle is expected to travel.	
3	Vehicle parallel guide lines (blue)	Indicates the approximate vehicle width including the door mirrors.	
4	Vehicle front end guide lines (blue)	Indicates the point about 0.25 m (9.8 in) from the front edge of the vehicle (front edge of the bumper).	

## NOTE

*The setting can be changed so that the projected vehicle path lines are not displayed. Refer to the Settings section in the Mazda Connect Owner's Manual.* 

## How to use the projected vehicle path line function

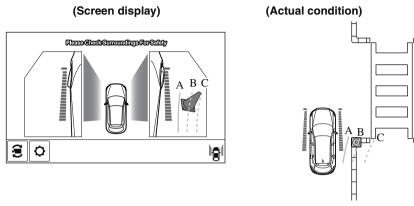

Make sure that there are no obstructions within the projected vehicle path lines. Turn the steering wheel so that the projected vehicle path lines travel inside of the obstruction (A), and drive the vehicle forward until it passes the obstruction. If the projected vehicle path lines are on an obstruction (B) or outside of the obstruction (C), the vehicle may contact the obstruction when turning the vehicle sharply.

# 

> The parking sensor detection range has limitations. For example, obstructions closing in from the side and objects short in height may not be detected. Always confirm the safety around the vehicle visually when driving.

For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-261.


Do not turn the steering wheel any more until the vehicle has passed the obstruction, even if the obstruction is not visible on the side view image. If the steering wheel is turned even more, the vehicle may contact the obstruction if it is turned sharply.


- Because there might be a difference between the image displayed on the screen and the actual conditions, always check the safety of the surrounding area using the mirrors and directly with your eyes when driving.
- Even though the object displayed on the screen, such as a road curb or a division line of a parking space, and the vehicle parallel guide lines appear parallel, they may not actually be parallel.

## ▼ Top View/Rear View


Use the top view/rear view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

### Range of displayed screen image



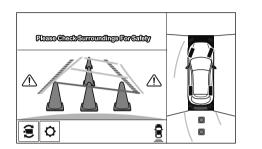


(Actual condition)




- In the top view screen, the areas in black at the front and rear of the vehicle image and the seams where each of the camera images merge are blind spots.
- Because images displayed in the top view screen are processed from each camera, the top view screen may display in the following ways.
  - If an image containing an object with a conspicuous colour is picked up by any of the cameras, the whole screen may be affected and it may display in that colour.
  - · Obstructions displayed in the rear view may not display on the top view screen.
  - If the position or angle of each camera changes due to tilting of the vehicle, the image may appear distorted.
  - Lines on the road may appear distorted at the seams where each of the camera images merge.
  - The entire screen may appear bright/dark depending on the illumination level around any of the cameras.

### Viewing the screen

(When the projected vehicle path line display is on)

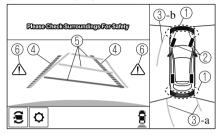

# (When the projected vehicle path line display is off)

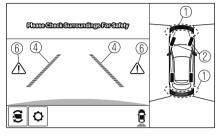

	Display/Icon	Content	
1	Parking sensor view	Displays the parking sensor detection condition when the parking sensor is activated. For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-261.	
2	Tyre icon	Indicates the tyre direction. Moves in conjunction with the steering wheel operation.	
3	Projected vehicle path lines (amber)	Indicates the approximate projected path of the vehicle. Moves in conjunction with the steering wheel operation. a) Indicates the path where the rear wheels are expected to travel. b) Indicates the path where the outer side of the vehicle is ex- pected to travel.	
4	Extended vehicle width lines and dis- tance guide lines (red/blue)	<ul> <li>These guide lines indicate the approximate width of the vehicle and distance to a point measured from the rear of the vehicle (from the end of the bumper).</li> <li>The red lines indicate the points up to about 0.5 m (19 in) from the rear end of the bumper.</li> <li>The blue lines indicate the points from about 0.5 m (19 in) and up to 2 m (78 in) from the rear end of the bumper.</li> </ul>	
5	Projected vehicle path distance guide lines (red/amber)	<ul> <li>These guide lines indicate the approximate distance to a point measured from the rear of the vehicle (from the end of the bumper).</li> <li>The red line indicates the point about 0.5 m (19 in) from the rear end of the bumper.</li> <li>The amber lines indicate the points about 1 m (39 in) and 2 m (78 in) from the rear end of the bumper.</li> </ul>	

Display/Icon Content		Content	
(6) Blind Spot Monitoring (BSM) warning Indicates when the Rear Cross Traffic Alert ( lights			
			For details, refer to Rear Cross Traffic Alert (RCTA). Refer to Rear Cross Traffic Alert (RCTA) on page 4-143.

### NOTE

*The setting can be changed so that the projected vehicle path lines are not displayed. Refer to the Settings section in the Mazda Connect Owner's Manual.* 

### How to use the projected vehicle path line function




- The front of the vehicle swings out wide when turning the steering wheel while reversing. Maintain sufficient distance between the vehicle and an obstruction.
- The parking sensor detection range has limitations. For example, obstructions closing in from the side and objects short in height may not be detected. Always confirm the safety around the vehicle visually when driving.

For details, refer to the parking sensor obstruction detection indication and warning sound. Refer to Parking Sensor System on page 4-261.


- Because there might be a difference between the image displayed on the screen, such as indicated in the following, and the actual conditions when parking, always check the safety at the rear of the vehicle and the surrounding area directly with your eyes.
  - Even though the back end of the parking space (or garage) displayed on the screen and distance guide lines appear parallel, they may not actually be parallel.
  - When parking in a space with a division line on only one side of the parking space, even though the division line and the vehicle width guide line appear parallel, they may not actually be parallel.
- The following shows an example of vehicle parking with the steering wheel turned to the left while backing up the vehicle. When backing into a parking space from the opposite direction, the steering operation is reversed.

1. Back the vehicle into the parking space by turning the steering wheel so that the vehicle enters the centre of the parking space.

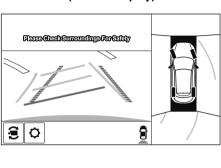


(Screen display)


(Actual condition)

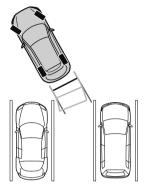

- 2. After the vehicle starts entering the parking space, stop and adjust the steering wheel so that the distance between the vehicle width lines and the sides of the parking space on the left and right are roughly equal, and then continue backing up slowly.
- 3. Once the vehicle width lines and the sides of the parking space on the left and right are parallel, straighten the wheels and back the vehicle slowly into the parking space. Continue checking the vehicle's surroundings and then stop the vehicle in the best possible position. (If the parking space has division lines, check whether the vehicle width guide lines are parallel to them.)

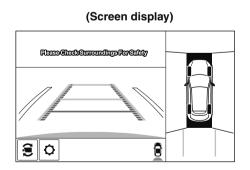


(Actual condition)

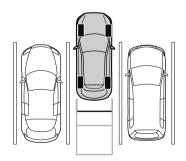


## ▼ Rear Wide View

Use the rear wide view to assist in checking the safety of the surrounding area when accelerating from a stop, parking, or stopping the vehicle.

## Range of displayed screen image

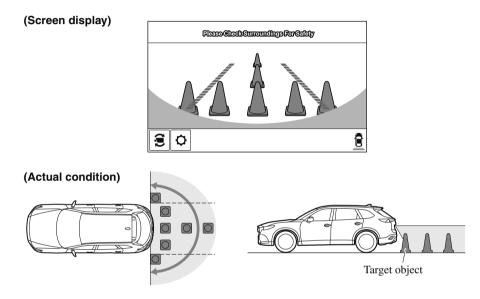

### Viewing the screen

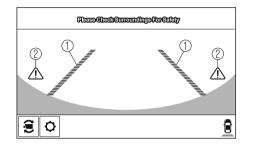

	Display/Icon	Content	
1	Extended vehicle width lines and dis- tance guide lines (red/blue)	These guide lines indicate the approximate width of the vehi- cle and distance to a point measured from the rear of the vehi- cle (from the end of the bumper).	
		<ul> <li>The red lines indicate the points up to about 0.5 m (19 in) from the rear end of the bumper.</li> <li>The blue lines indicate the points from about 0.5 m (19 in) and up to 2 m (78 in) from the rear end of the bumper.</li> </ul>	
2	Blind Spot Monitoring (BSM) warning lights	rning Indicates when the Rear Cross Traffic Alert (RCTA) has o ated. For details, refer to Rear Cross Traffic Alert (RCTA). Refer to Rear Cross Traffic Alert (RCTA) on page 4-143.	

### NOTE

- The parking sensor obstruction detection indication does not display. Switch the screen display to the top view/rear view display if the parking sensor warning sound is activated.
- The rear wide view screen displays the image at the rear of the vehicle at a wide angle and corrects the image to help detect approaching obstructions from the side. Therefore, it differs from the actual view.


# ▼ Margin of Error Between Road Surface on Screen and Actual Road Surface

There might be some margin of error between the road surface appearing on the screen and the actual road surface. A margin of error in the perceived distance could lead to an accident, therefore be aware of the following conditions which can more easily produce errors in the perceived distance.


## The vehicle tilts due to weight of passengers and cargo.

If the vehicle is tilted, obstructions picked up by a camera can appear farther or closer than the actual distance from the vehicle.


### Front camera

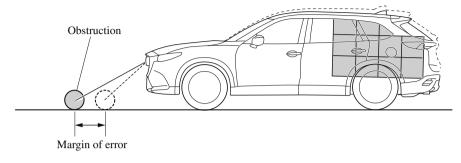

### Side camera

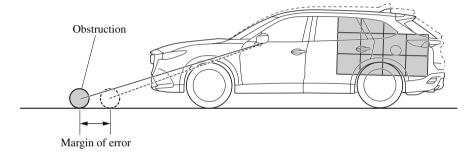

### Rear camera

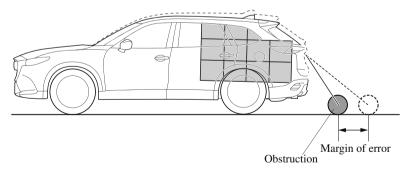


## There is a steep up or down grade in the road at the front or rear of the vehicle

If there is a steep up or down grade in the road at the front or rear of the vehicle, obstructions picked up by the camera can appear farther or closer than the actual distance from the vehicle.


# When Driving i-ACTIVSENSE

### Front camera

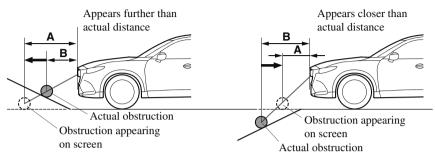


- A: Distance of obstruction being viewed on screen
- B: Actual distance of obstruction from vehicle

#### Side camera

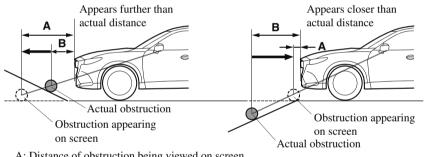

A: Distance of obstruction being viewed on screen B: Actual distance of obstruction from vehicle

#### Rear camera

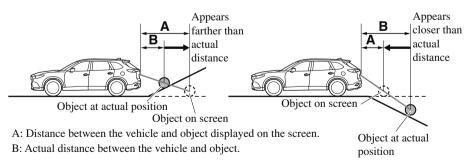


## NOTE

If the vehicle is on a slope, obstructions taken by the camera can appear farther or closer than the actual distance from the vehicle.


### Three-dimensional object at vehicle front or rear

Because the vehicle front end guide lines (side camera) or the distance guide lines (rear camera) are displayed based on a flat surface, the distance to the three-dimensional object displayed on the screen is different from the actual distance.

### Side camera

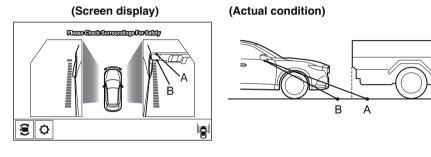


#### Rear camera

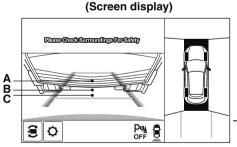

Sensed distance on screen A > B > C

(Actual condition)



Actual distance B > C = A


# ▼ System Problem Indication

Centre display indication	Cause	Action to be taken
"No image signal reception" is dis- played	The control unit might be damaged.	Have your vehicle inspected by an expert repairer (we rec-
Screen is pitch-black and blank	The second on the head of the second se	ommend an Authorised Maz- da Repairer).

# Forward Sensing Camera (FSC)\*

Your vehicle is equipped with a Forward Sensing Camera (FSC). The Forward Sensing Camera (FSC) is positioned near the rearview mirror and used by the following systems.

- · Adaptive LED Headlights (ALH)
- · Driver Attention Alert (DAA)
- · Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS)
- Traffic Sign Recognition System (TSR)
- · Advanced Smart City Brake Support (Advanced SCBS)
- Smart City Brake Support [Forward] (SCBS F)
- · Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
- Smart Brake Support (SBS)

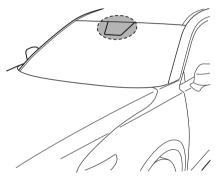

The Forward Sensing Camera (FSC) determines the conditions ahead of the vehicle while travelling at night and detects traffic lanes. The distance in which the Forward Sensing Camera (FSC) can detect objects varies depending on the surrounding conditions.

# 

#### Do not modify the suspension:

If the vehicle height or inclination is changed, the system will not be able to correctly detect vehicles ahead. This will result in the system not operating normally or mistakenly operating, which could cause a serious accident.

# 

Do not apply accessories, stickers or film to the windscreen near the Forward Sensing Camera (FSC).

If the area in front of the Forward Sensing Camera (FSC) lens is obstructed, it will cause the system to not operate correctly. Consequently, each system may not operate normally which could lead to an unexpected accident.

- Do not disassemble or modify the Forward Sensing Camera (FSC). Disassembly or modification of the Forward Sensing Camera (FSC) will cause a malfunction or mistaken operation. Consequently, each system may not operate normally which could lead to an unexpected accident.
- > Heed the following cautions to assure the correct operation of the Forward Sensing Camera (FSC).
  - ▶ Be careful not to scratch the Forward Sensing Camera (FSC) lens or allow it to get dirty.
  - > Do not remove the Forward Sensing Camera (FSC) cover.
  - > Do not place objects on the instrument panel which reflect light.
  - ➤ Always keep the windscreen glass around the camera clean by removing dirt or fogging. Use the windscreen defroster to remove fogging on the windscreen.
  - Consult an expert repairer (we recommend an Authorised Mazda Repairer) regarding cleaning the interior side of the windscreen around the Forward Sensing Camera (FSC).
  - Consult an expert repairer (we recommend an Authorised Mazda Repairer) before performing repairs around the Forward Sensing Camera (FSC).
  - The Forward Sensing Camera (FSC) is installed to the windscreen. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for windscreen repair and replacement.
  - When cleaning the windscreen, do not allow glass cleaners or similar cleaning fluids to get on the Forward Sensing Camera (FSC) lens. In addition, do not touch the Forward Sensing Camera (FSC) lens.
  - > When performing repairs around the rearview mirror, consult an expert repairer (we recommend an Authorised Mazda Repairer).
  - Consult an expert repairer (we recommend an Authorised Mazda Repairer) regarding cleaning of the camera lens.
  - Do not hit or apply strong force to the Forward Sensing Camera (FSC) or the area around it. If the Forward Sensing Camera (FSC) is severely hit or if there are cracks or damage caused by flying gravel or debris in the area around it, stop using the following systems and consult an expert repairer (we recommend an Authorised Mazda Repairer).
    - > Adaptive LED Headlights (ALH)
    - Driver Attention Alert (DAA)
    - ► Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS)
    - > Traffic Sign Recognition System (TSR)

- > Advanced Smart City Brake Support (Advanced SCBS)
- Smart City Brake Support [Forward] (SCBS F)
- Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
   Smart Brake Support (SBS)
- The direction in which the Forward Sensing Camera (FSC) is pointed has been finely adjusted. Do not change the installation position of the Forward Sensing Camera (FSC) or remove it. Otherwise, it could result in damage or malfunction.
- Always use tyres for all wheels that are of the specified size, and the same manufacturer, brand, and tread pattern. In addition, do not use tyres with significantly different wear patterns on the same vehicle as the system may not operate normally.
- The Forward Sensing Camera (FSC) includes a function for detecting a soiled windscreen and informing the driver, however, depending on the conditions, it may not detect plastic shopping bags, ice or snow on the windscreen. In such cases, the system cannot accurately determine a vehicle ahead and may not be able to operate normally. Always drive carefully and pay attention to the road ahead.

- In the following cases, the Forward Sensing Camera (FSC) cannot detect target objects correctly, and each system may be unable to operate normally.
  - The height of the vehicle ahead is low.
  - You drive your vehicle at the same speed as the vehicle ahead.
  - *Headlights are not turned on during the night or when going through a tunnel.*
- In the following cases, the Forward Sensing Camera (FSC) may not be able to detect target objects correctly.
  - · Under bad weather condition, such as rain, fog and snow.
  - The window washer is being used or the windscreen wipers are not used when it's raining.
  - · Ice, fog, snow, frost, rainfall, dirt, or foreign matter such as a plastic bag is stuck on the windscreen.
  - Trucks with low loading platforms and vehicles with an extremely low or high profile.
  - When driving next to walls with no patterning (including fences and longitudinally striped walls).
  - The tail lights of the vehicle ahead are turned off.
  - A vehicle is outside the illumination range of the headlights.
  - The vehicle is making a sharp turn, or ascending or descending a steep slope.
  - · Entering or exiting a tunnel.
  - · Heavy luggage is loaded causing the vehicle to tilt.
  - Strong light is shone at the front of the vehicle (back light or high-beam light from on-coming vehicles).
  - There are many light emitters on the vehicle ahead.

- When the vehicle ahead is not equipped with tail lights or the tail lights are turned off at nighttime.
- Elongated luggage or cargo is loaded onto installed roof rails and covers the Forward Sensing Camera (FSC).
- Exhaust gas from the vehicle in front, sand, snow, and water vapour rising from manholes and grating, and water splashed into the air.
- When towing a malfunctioning vehicle.
- The vehicle is driven with tyres having significantly different wear.
- The vehicle is driven on down slopes or bumpy roads.
- · There are water puddles on the road.
- The surroundings are dark such as during the night, early evening, or early morning, or in a tunnel or indoor parking lot.
- The illumination brightness of the headlights is reduced or the headlight illumination is weakened due to dirt or a deviated optical axis.
- The target object enters the blind spot of the Forward Sensing Camera (FSC).
- A person or object bursts onto the road from the shoulder or cuts right in front of you.
- You change lanes and approach a vehicle ahead.
- When driving extremely close to the target object.
- Tyre chains or a temporary spare tyre is installed.
- The vehicle ahead has a special shape. For example, a vehicle towing a trailer house or a boat, or a vehicle carrier carrying a vehicle with its front pointed rearward.
- If the Forward Sensing Camera (FSC) cannot operate normally due to backlight or fog, the system functions related to the Forward Sensing Camera (FSC) are temporarily stopped and the following warning lights turn on. However, this does not indicate a malfunction.
  - · Adaptive LED Headlights (ALH) warning light (amber)
  - Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) warning indication
  - Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) warning indication
  - Smart Brake Support/Smart City Brake Support (SBS/SCBS) warning indication (amber)
- If the Forward Sensing Camera (FSC) cannot operate normally due to high temperatures, the system functions related to the Forward Sensing Camera (FSC) are temporarily stopped and the following warning lights turn on. However, this does not indicate a malfunction. Cool down the area around the Forward Sensing Camera (FSC) such as by turning on the air conditioner.
  - · Adaptive LED Headlights (ALH) warning light (amber)

- · Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) warning indication
- *Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) warning indication*
- Smart Brake Support/Smart City Brake Support (SBS/SCBS) warning indication (amber)
- If the Forward Sensing Camera (FSC) detects that the windscreen is dirty or foggy, the system functions related to the Forward Sensing Camera (FSC) are temporarily stopped and the following warning lights turn on. However, this does not indicate a problem. Remove the dirt from the windscreen or press the defroster switch and defog the windscreen.
  - · Adaptive LED Headlights (ALH) warning light (amber)
  - · Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) warning indication
  - Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) warning indication
  - Smart Brake Support/Smart City Brake Support (SBS/SCBS) warning indication (amber)
- If there are recognizable cracks or damage caused by flying gravel or debris on the windscreen, always have the windscreen replaced. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for replacement.
- · (With Advanced Smart City Brake Support (Advanced SCBS))
  - The Forward Sensing Camera (FSC) recognises pedestrians when all of the following conditions are met:
    - The height of a pedestrian is about 1 to 2 meters.
    - $\cdot$  An outline such as the head, both shoulders, or the legs can be determined.
  - In the following cases, the Forward Sensing Camera (FSC) may not be able to detect target objects correctly:
    - Multiple pedestrians are walking, or there are groups of people.
    - A pedestrian is close to a separate object.
    - · A pedestrian is crouching, lying, or slouching.
    - A pedestrian suddenly jumps into the road right in front of the vehicle.
    - · A pedestrian opens an umbrella, or is carrying large baggage or articles.
    - A pedestrian is in a dark location such as during the night, or blends into the background by wearing clothes matching the background colour.


# **Radar Sensor (Front)**\*

Your vehicle is equipped with a radar sensor (front). The following systems also use the radar sensor (front).

- · Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function)
- · Distance Recognition Support System (DRSS)
- Smart Brake Support (SBS)

The radar sensor (front) functions by detecting the radio waves reflected off a vehicle ahead or an obstruction sent from the radar sensor.

The radar sensor (front) is mounted behind the front emblem.

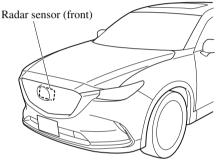

If "Front radar blocked" is displayed in the multi-information display of the instrument cluster, clean the area around the radar sensor (front).

# 

Heed the following precautions to assure correct operation of each system.

- > Do not adhere stickers (including transparent stickers) to the surface of the radiator grille and front emblem in and around the radar sensor (front), and do not replace the radiator grille and front emblem with any product that is not a genuine product designed for use with the radar sensor (front).
- The radar sensor (front) includes a function for detecting soiling of the radar sensor's front surface and informing the driver, however, depending on the conditions, it may require time to detect or it may not detect plastic shopping bags, ice or snow. If this occurs, the system may not operate correctly, therefore always keep the radar sensor (front) clean.
- Do not install a grille guard.
- If the front part of the vehicle has been damaged in a vehicle accident, the position of the radar sensor (front) may have moved. Stop the system immediately and always have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

- > Do not use the front bumper to push other vehicles or obstructions such as when pulling out of a parking space. Otherwise, the radar sensor (front) could be hit and its position deviated.
- > Do not remove, disassemble, or modify the radar sensor (front).
- ➢ For repairs, replacement or paint work around the radar sensor (front), consult an expert repairer (we recommend an Authorised Mazda Repairer).
- Do not modify the suspension. If the suspension are modified, the vehicle's posture could change and the radar sensor (front) may not be able to correctly detect a vehicle ahead or an obstruction.

- Under the following conditions, the radar sensor (front) may not be able to detect vehicles ahead or obstructions correctly and each system may not operate normally.
  - The rear surface of a vehicle ahead does not reflect radio waves effectively, such as an unloaded trailer or an automobile with a loading platform covered by a soft top, vehicles with a hard plastic tailgate, and round-shaped vehicles.
  - Vehicles ahead with low vehicle height and thus less area for reflecting radio waves.
  - Visibility is reduced due to a vehicle ahead casting off water, snow, or sand from its tyres and onto your windscreen.
  - The luggage compartment is loaded with heavy objects or the rear passenger seats are occupied.
  - Ice, snow, or soiling is on the front surface of the front emblem.
  - During inclement weather such as rain, snow, or sand storms.
  - When driving near facilities or objects emitting strong radio waves.

- Under the following conditions, the radar sensor (front) may not be able to detect vehicles ahead or obstructions.
  - The beginning and end of a curve.
  - · Roads with continuous curves.
  - Narrow lane roads due to road construction or lane closures.
  - The vehicle ahead enters the radar sensor's blind spot.
  - The vehicle ahead is running abnormally due to accident or vehicle damage.
  - Roads with repeated up and down slopes
  - Driving on poor roads or unpaved roads.
  - The distance between your vehicle and the vehicle ahead is extremely short.
  - A vehicle suddenly comes close such as by cutting into the lane.
- To prevent incorrect operation of the system, use tyres of the same specified size, manufacturer, brand, and tread pattern on all 4 wheels. In addition, do not use tyres with significantly different wear patterns or tyre pressures on the same vehicle (Including the temporary spare tyre).
- If the battery power is weak, the system may not operate correctly.


- When driving on roads with little traffic and few vehicles ahead or obstructions for the radar sensor (front) to detect, "Front radar blocked" may be temporarily displayed, however, this does not indicate a problem.
- The radar sensors are regulated by the relevant radio wave laws of the country in which the vehicle is driven. If the vehicle is driven abroad, authorization from the country in which the vehicle is driven may be required.

# Radar Sensors (Rear)\*

Your vehicle is equipped with radar sensors (rear). The following systems also use the radar sensors (rear).

- · Blind Spot Monitoring (BSM)
- Rear Cross Traffic Alert (RCTA)

The radar sensors (rear) function by detecting the radio waves reflected off a vehicle approaching from the rear or an obstruction sent from the radar sensor.

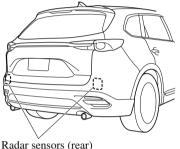

The radar sensors (rear) are installed inside the rear bumper, one each on the left and right sides.

Always keep the surface of the rear bumper near the radar sensors (rear) clean so that the radar sensors (rear) operate normally. Also, do not apply items such as stickers. Refer to Exterior Care on page 6-55.

# 


If the rear bumper receives a severe impact, the system may no longer operate normally. Stop the system immediately and have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

- The detection ability of the radar sensors (rear) has limitations. In the following cases, the detection ability may lower and the system may not operate normally.
  - The rear bumper near the radar sensors (rear) has become deformed.
  - · Snow, ice or mud adheres to the radar sensors (rear) on the rear bumper.
  - · Under bad weather conditions such as rain, snow and fog.
- Under the following conditions, the radar sensors (rear) cannot detect target objects or it may be difficult to detect them.

- Stationary objects on a road or a road side such as small, two-wheeled vehicles, bicycles, pedestrians, animals, and shopping carts.
- Vehicle shapes which do not reflect radar waves well such as empty trailers with a low vehicle height and sports cars.
- Vehicles are shipped with the direction of the radar sensors (rear) adjusted for each vehicle to a loaded vehicle condition so that the radar sensors (rear) detect approaching vehicles correctly. If the direction of the radar sensors (rear) has deviated for some reason, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
- For repairs or replacement of the radar sensors (rear), or bumper repairs, paintwork, and replacement near the radar sensors, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- Turn off the system while pulling a trailer or while an accessory such as a bicycle carrier is installed to the rear of the vehicle. Otherwise, the radio waves emitted by the radar will be blocked causing the system to not operate normally.
- The radar sensors are regulated by the relevant radio wave laws of the country in which the vehicle is driven. If the vehicle is driven abroad, authorization from the country in which the vehicle is driven may be required.

# Ultrasonic Sensor (Rear)\*

The ultrasonic sensors (rear) function by emitting ultrasonic waves which are reflected off obstructions at the rear and the returning ultrasonic waves are picked up by the ultrasonic sensors (rear).

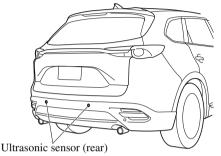


The ultrasonic sensors (rear) are mounted in the rear bumper.

# Front Camera/Side Cameras/Rear Camera\*

Your vehicle is equipped with a front camera, side cameras, and a rear camera. The 360° View Monitor uses each camera.

The front camera, side cameras, and rear camera shoot images of the area surrounding the vehicle.

Each camera is installed to the following positions.

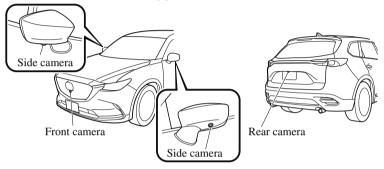

# **Cruise** Control\*

With cruise control, you can set and automatically maintain any speed of more than about 25 km/h (16 mph).




### Do not use the cruise control under the following conditions:

Using the cruise control under the following conditions is dangerous and could result in loss of vehicle control.


- ➤ Hilly terrain
- Steep inclines
- ➤ Heavy or unsteady traffic
- > Slippery or winding roads
- > Similar restrictions that require inconsistent speed


### ▼ Cruise Control Switch

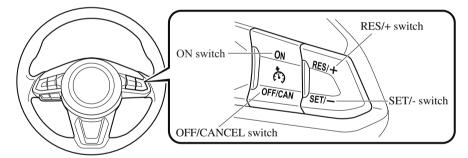

### NOTE

If your Mazda has the following steering switch, your Mazda is equipped the Mazda Radar Cruise Control (MRCC) system or the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) system. Refer to Mazda Radar Cruise Control (MRCC) on page 4-147. *Refer to Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) on page 4-158.* 

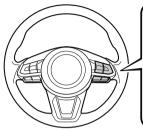

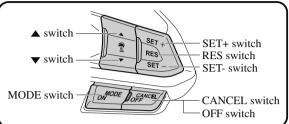

▼ Cruise Main Indication (White)/ Cruise Set Indication (Green)



The indication has 2 colours.

# Cruise Main Indication (White)

The indication turns on (white) when the cruise control system is activated.

# Cruise Set Indication (Green)

The indication turns on (green) when a cruising speed has been set.

# Activation/Deactivation

To activate the system, press the ON switch. The cruise main indication (white) is displayed.

To deactivate the system, press the OFF/ CANCEL switch.

The cruise main indication (white) turns off.

# 

# Always turn off the cruise control system when it is not in use:

Leaving the cruise control system in an activation-ready state while the cruise control is not in use is dangerous as the cruise control could unexpectedly activate if the activation button is accidentally pressed, and result in loss of vehicle control and an accident.

# NOTE

When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF with the cruise control system operable, the system will be operable when the ignition is switched ON the next time.

# ▼ To Set Speed


- 1. Activate the cruise control system by pressing the ON switch. The cruise main indication (white) is displayed.
- 2. Accelerate to the desired speed, which must be more than 25 km/h (16 mph).
- Set the cruise control by pressing the SET/- switch at the desired speed. The

cruise control is set at the moment the SET/— switch is pressed. Release the accelerator pedal simultaneously. The cruise set indication (green) is displayed.

### NOTE

- The cruise control speed setting cannot be performed under the following conditions:
  - The selector lever is in the P or N position.
  - $\cdot$  The parking brake is applied.
- Release the SET/- or RES/+ switch at the desired speed, otherwise the speed will continue increasing while the RES/ + switch is pressed and held, and continue decreasing while the SET/switch is pressed and held (except when the accelerator pedal is depressed).
- On a steep grade, the vehicle may momentarily slow down while ascending, or speed up while descending.
- The cruise control will cancel if the vehicle speed decreases below 21 km/h (13 mph) when climbing a steep grade.
- The cruise control may cancel at about 15 km/h (9 mph) below the preset speed such as when climbing a long, steep grade.

The vehicle speed preset using the cruise control is displayed in the instrument cluster.

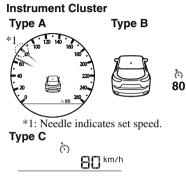

**Active Driving Display** 

## ര 80

# ▼ To Increase Cruising Speed

Follow either of these procedures.

# To increase speed using cruise control switch

Press the RES/+ switch and hold it. Your vehicle will accelerate. Release the switch at the desired speed.

Press the RES/+ switch and release it immediately to adjust the preset speed. Multiple operations will increase the preset speed according to the number of times it is operated.

# Increasing speed with a single RES/+ switch operation

Instrument cluster display for vehicle speed indicated in km/h: 1 km/h (0.6 mph) Instrument cluster display for vehicle speed indicated in mph: 1 mph (1.6 km/h)

# To increase speed using accelerator pedal

Depress the accelerator pedal to accelerate to the desired speed. Press the SET/— switch and release it immediately.

## NOTE

Accelerate if you want to speed up temporarily when the cruise control is on. Greater speed will not interfere with or change the set speed. Take your foot off the accelerator to return to the set speed.

# ▼ To Decrease Cruising Speed

Press the SET/— switch and hold it. The vehicle will gradually slow. Release the switch at the desired speed.

Press the SET/— switch and release it immediately to adjust the preset speed. Multiple operations will decrease the preset speed according to the number of times it is operated.

### Decreasing speed with a single SET/switch operation

Instrument cluster display for vehicle speed indicated in km/h: 1 km/h (0.6 mph) Instrument cluster display for vehicle speed indicated in mph: 1 mph (1.6 km/h)

# ▼ To Resume Cruising Speed at More Than 25 km/h (16 mph)

If the cruise control system temporarily cancelled (such as applying the brake pedal) and the system is still activated, the most recent set speed will automatically resume when the RES/+ switch is pressed. If vehicle speed is below 25 km/h (16 mph), increase the vehicle speed up to 25 km/h (16 mph) or more and press the RES/ + switch.

# ▼ To Temporarily Cancel

To temporarily cancel the system, use one of these methods:

- Slightly depress the brake pedal.
- $\cdot$  Press the OFF/CANCEL switch.

If the RES/+ switch is pressed when the vehicle speed is 25 km/h (16 mph) or higher, the system reverts to the previously set speed.

## NOTE

- If any of the following conditions occur, the cruise control system is temporarily cancelled.
  - The parking brake is applied.
  - The selector lever is in the P or N position.
- When the cruise control system is temporarily cancelled by even one of the applicable cancel conditions, the speed cannot be re-set.
- The cruise control cannot be cancelled while driving in manual mode (selector lever shifted from D to M position). Therefore, engine braking will not be applied even if the transaxle is shifted down to a lower gear. If deceleration is required, lower the set speed or depress the brake pedal.

# ▼ To Deactivate

## When a cruising speed has been set (cruise set indication (green) turns on)

Long-press the OFF/CANCEL switch or press the OFF/CANCEL switch 2 times.

## When a cruising speed has not been set (cruise main indication (white) turns on)

Press the OFF/CANCEL switch.

# Tyre Pressure Monitoring System\*


The Tyre Pressure Monitoring System (TPMS) monitors the pressure for each tyre. If tyre pressure is too low in one or more tyres, the system will inform the driver via the warning light in the instrument cluster and by the warning beep sound.

Refer to Contact expert repairer (we recommend an Authorised Mazda Repairer) and Have Vehicle Inspected on page 7-39.

Refer to Taking Action on page 7-47.

Refer to Tyre Inflation Pressure Warning Beep on page 7-60.

The tyre pressure sensors installed on each wheel send tyre pressure data by radio signal to the receiver unit in the vehicle.

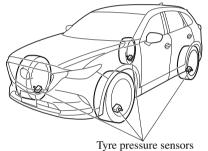

### NOTE

When the ambient temperature is low due to seasonal changes, tyre temperatures are also lower. When the tyre temperature decreases, the air pressure decreases as well. The TPMS warning light may illuminate more frequently. Visually inspect the tyres daily before driving, and check tyre pressures monthly with a tyre pressure gauge. When checking tyre pressures, use of a digital tyre pressure gauge is recommended.

TPMS does not alleviate your need to check the pressure and condition of all four tyres regularly.

# 

> Each tyre, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tyre inflation pressure label. (If your vehicle has tyres of a different size than the size indicated on the vehicle placard or tyre inflation pressure for those tyres.)

As an added safety feature, your vehicle has been equipped with a tyre pressure monitoring system (TPMS) that illuminates a low tyre pressure telltale when one or more of your tyres is significantly under-inflated. Accordingly, when the low tyre pressure telltale illuminates, you should stop and check your tyres as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tyre maintenance, and it is the driver's responsibility to maintain correct tyre pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tyre pressure telltale. Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tyre pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tyre pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tyres or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tyres or wheels on your vehicle to ensure that the replacement or alternate tyres and wheels allow the TPMS to continue to function properly.

> To avoid false readings, the system samples for a little while before indicating a problem. As a result it will not instantaneously register a rapid tyre deflation or blow out.

#### ▼ System Error Activation

When the warning light flashes, there may be a system malfunction. Consult an expert repairer (we recommend an Authorised Mazda Repairer). A system error activation may occur in the following cases:

- When there is equipment or a device near the vehicle using the same radio frequency as that of the tyre pressure sensors.
- When a metallic device such as a non-genuine navigation system is equipped near the centre of the instrument panel, which may block radio signals from the tyre pressure sensor to the receiver unit.
- When using the following devices in the vehicle that may cause radio interference with the receiver unit.
  - A digital device such as a personal computer.
  - A current converter device such as a DC-AC converter.
- When excess snow or ice adheres to the vehicle, especially around the wheels.
- When the tyre pressure sensor batteries are exhausted.
- When using a wheel with no tyre pressure sensor installed.
- When using tyres with steel wire reinforcement in the sidewalls.
- $\cdot$  When using tyre chains.

#### ▼ Tyres and Wheels

# 

When inspecting or adjusting the tyre air pressures, do not apply excessive force to the stem part of the wheel unit. The stem part could be damaged.

#### Changing tyres and wheels

The following procedure allows the TPMS to recognise a tyre pressure sensor's unique ID signal code whenever tyres or wheels are changed, such as changing to and from winter tyres.

#### NOTE

Each tyre pressure sensor has a unique ID signal code. The signal code must be registered with the TPMS before it can work. The easiest way to do it is to have an expert repairer (we recommend an Authorised Mazda Repairer), change your tyre and complete ID signal code registration.

#### When having tyres changed at an expert repairer (we recommend an Authorised Mazda Repairer)

When an expert repairer (we recommend an Authorised Mazda Repairer), changes your vehicle's tyres, they will complete the tyre pressure sensor ID signal code registration.

#### When changing tyres yourself

If you or someone else changes tyres, you or someone else can also undertake the steps for the TPMS to complete the ID signal code registration.

- 1. After tyres have been changed, switch the ignition ON, then back to ACC or OFF.
- 2. Wait for about 15 minutes.
- 3. After about 15 minutes, drive the vehicle at a speed of at least 25 km/h (16 mph) for 10 minutes and the tyre pressure sensor ID signal code will be registered automatically.

#### NOTE

If the vehicle is driven within about 15 minutes of changing tyres, the tyre pressure monitoring system warning light will flash because the sensor ID signal code would not have been registered. If this happens, park the vehicle for about 15 minutes, after which the sensor ID signal code will register upon driving the vehicle for 10 minutes.

#### **Replacing tyres and wheels**

# 

- When replacing/repairing the tyres or wheels or both, have the work done by an expert repairer (we recommend an Authorised Mazda Repairer), or the tyre pressure sensors may be damaged.
- The wheels equipped on your Mazda are specially designed for installation of the tyre pressure sensors. Do not use non-genuine wheels, otherwise it may not be possible to install the tyre pressure sensors.

Be sure to have the tyre pressure sensors installed whenever tyres or wheels are replaced.

When having a tyre or wheel or both replaced, the following types of tyre pressure sensor installations are possible.

- The tyre pressure sensor is removed from the old wheel and installed to the new one.
- The same tyre pressure sensor is used with the same wheel. Only the tyre is replaced.
- A new tyre pressure sensor is installed to a new wheel.

#### NOTE

- The tyre pressure sensor ID signal code must be registered when a new tyre pressure sensor is purchased. For purchase of a tyre pressure sensor and registration of the tyre pressure sensor ID signal code, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- When reinstalling a previously removed tyre pressure sensor to a wheel, replace the grommet (seal between valve body/ sensor and wheel) for the tyre pressure sensor.

## **Rear View Monitor\***

The rear view monitor provides visual images of the rear of the vehicle when reversing.

# 

# Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes:

Reversing the vehicle by only looking at the screen is dangerous as it may cause an accident or a collision with an object. The rear view monitor is only a visual assist device when reversing the vehicle. The images on the screen may be different from the actual conditions.

# 


- > Do not use the rear view monitor under the following conditions: Using the rear view monitor under the following conditions is dangerous and could result in injury or vehicle damage or both.
  - Icy or snow-covered roads.
  - Tyre chains or a temporary spare tyre is installed.
  - > The liftgate is not fully closed.
  - > The vehicle is on a road incline.
- > When the display is cold, images may course across the monitor or the screen and may be dimmer than usual, which could cause difficulty in confirming the surrounding conditions of the vehicle. Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes.
- > Do not apply excessive force to the camera. The camera position and angle may deviate.
- > Do not disassemble, modify, or remove it as it may no longer be waterproof.
- The camera cover is made of plastic. Do not apply degreasing agents, organic solvents, wax, or glass coating agents to the camera cover. If any are spilled on the cover, wipe off with a soft cloth immediately.
- Do not rub the camera cover forcefully with an abrasive or hard brush. The camera cover or lens may be scratched which might affect the images.

#### NOTE

- If water, snow, or mud is stuck on the camera lens, wipe it off using a soft cloth. If it cannot be wiped off, use a mild detergent.
- If the camera temperature changes rapidly (Hot to cold, cold to hot), the rear view monitor may not operate correctly.
- When replacing the tyres, consult an expert repairer (we recommend an Authorised Mazda Repairer). Replacing the tyres could result in deviation of the guide lines which appear on the display.
- If the vehicle's front, side, or rear has been involved in a collision, the alignment of the rear view parking camera (location, installation angle) may have deviated. Always consult an expert repairer (we recommend an Authorised Mazda Repairer) to have the vehicle inspected.
- If "No Video Signal Available" is indicated in the display, there could be a problem with the camera. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
- · (Predicted vehicle path assist lines display type)

If force is applied to the steering wheel, the guide lines may not display. Loosen your grip on the steering wheel to allow the guide lines to display.

#### ▼ Rear View Parking Camera Location

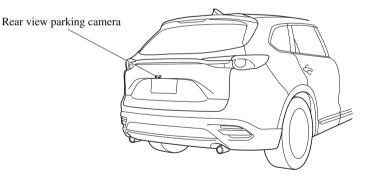

#### ▼ Switching to the Rear View Monitor Display


Shift the selector lever to reverse (R) position with the ignition switched ON to switch the display to the rear view monitor display.

#### NOTE

*When the selector lever is shifted from reverse (R) position to another selector lever position, the screen returns to the previous display.* 

#### ▼ Displayable Range on the Screen

The images on the screen may be different from the actual conditions.

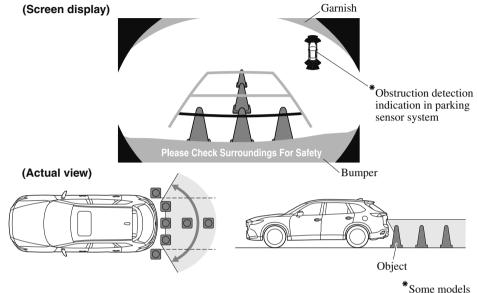

#### NOTE


- The displayable range varies depending on the vehicle and road conditions.
- The displayable range is limited. Objects under the bumper or around the bumper ends cannot be displayed.
- The distance appearing in the displayed image is different from the actual distance because the rear view parking camera is equipped with a specific lens.
- Images displayed on the monitor from the rear view parking camera are reversed images (mirror images).
- Some optionally installed vehicle accessories may be picked up by the camera. Do not install any optional parts that can interfere with the camera view, such as illuminating parts or parts made of reflective material.
- It may be difficult to see the display under the following conditions, however, it does not indicate a malfunction.
  - $\cdot$  In darkened areas.
  - When the temperature around the lens is high/low.
  - · When the camera is wet such as on a rainy day or during periods of high humidity.
  - When foreign material such as mud is stuck around the camera.
  - When the camera lens reflects sunlight or headlight beams.
- · Image display may be delayed if the temperature around the camera is low.

#### ▼ Viewing the Display

#### Predicted vehicle path assist lines display type

The projected path guidance mode displays the predicted path of the vehicle after you turn the steering wheel.

Use this mode for parking your vehicle in a parking space or garage.

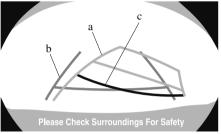

a) Projected vehicle path (yellow)

These lines are displayed as a reference for the projected path of the vehicle.

The lines displaying the projected vehicle path change after you turn the steering wheel.

b) Extended vehicle width lines (blue)

These lines indicate the vehicle's extended width.

These lines are not displayed when the vehicle's wheels are in the straight-ahead position. Distance guide lines

c) Distance guide lines

These lines indicate the approximate distance to a point measured from the vehicle's rear (from the end of the bumper).

The blue line indicates the point about 0.5 m (19 in) from the rear bumper.

The red and yellow lines, which change position after you turn the steering wheel, indicate the points about 0.5 m (19 in) for the red line and 1.0 m (39 in) for the yellow lines from the rear bumper (at the centre point of each of the lines).

A degree of error occurs when the wheels are not in the straight-ahead position.

In the above illustration, the right side of the vehicle is in a position closer to the actual distance displayed by the distance guide lines (red: about 0.5 m (19 in) point, yellow: about 1.0 m (39 in) point behind the rear bumper), whereas the left side is in a position farther away.

# 

The indicated position of the guide lines on the display changes depending on the vehicle conditions (such as the number of occupants/cargo load) and the road conditions (such as a steep gradient to the rear of the vehicle).

Always check the area to the vehicle's rear and the surrounding area directly with your eyes while backing up.

#### Fixed assist lines display type

Guide lines which indicate the width of the vehicle (yellow) are displayed on the screen as a reference to the approximate width of the vehicle in comparison to the width of the parking space you are about to back into.

Use this display view for parking your vehicle in a parking space or garage.



- a) Vehicle width guide lines (yellow)
- Guide lines serve as a reference to the approximate width of the vehicle.
- b) Distance guide lines

These guide lines indicate the approximate distance to a point measured from the vehicle's rear (from the end of the bumper).

The red and yellow lines indicate the points about 0.5 m (19 in) for the red line and 1.0 m (39 in) for the yellow lines from the rear bumper (at the centre point of each of the lines).



The guide lines on the screen are fixed lines. They are not synced to the driver's turning of the steering wheel. Always be careful and check the area to the vehicle's rear and the surrounding area directly with your eyes while backing up.

#### ▼ Rear View Monitor Operation

The operation of the rear view monitor when reversing the vehicle varies depending on the traffic, road, and vehicle conditions. The amount of steering and the timing also varies depending on conditions, so confirm the surrounding conditions directly with your eyes and steer the vehicle in accordance with the conditions.

Be well aware of the above cautions prior to using the rear view monitor.

#### Predicted vehicle path assist lines display type

#### NOTE

The following shows an example of vehicle parking in which the steering wheel is turned to the right when backing up the vehicle. The operation is reversed when backing up the vehicle from the opposite direction.

- 1. Shift the selector lever to reverse (R) position to switch the display to the rear view monitor display.
- 2. Before backing the vehicle into the parking space, turn the steering wheel while referring to the projected vehicle path display so that the vehicle enters the centre of the parking space.






(Display condition)


(Vehicle condition)

3. After your vehicle begins entering the parking space, continue backing up slowly so that the distance between the vehicle width lines and the sides of the parking space on the left and right are roughly equal.

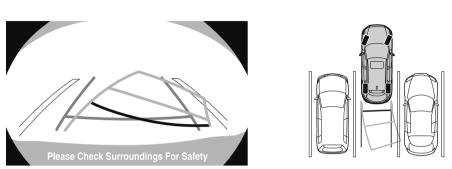

(Display condition)

- 4. Continue to adjust the steering wheel until the vehicle width guide lines are parallel to the left and right sides of the parking space.
- 5. Once they are parallel, straighten the wheels and back your vehicle slowly into the parking space. Continue checking the vehicle's surroundings and then stop the vehicle in the best possible position. (If the parking space has division lines, check whether the vehicle width guide lines are parallel to them.)

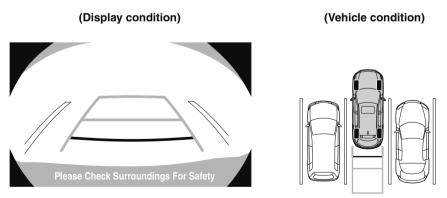

6. When the selector lever is shifted from reverse (R) position to another selector lever position, the screen returns to the previous display.

#### NOTE

Because there may be a difference between the displayed image, such as indicated below, and the actual conditions when parking, always verify the safety at the rear of the vehicle and the surrounding area directly with your eyes.

- In the image of the parking space (or garage) displayed on the screen, the back end and distance guide lines may appear aligned in the monitor, but they may not actually be aligned on the ground.
- When parking in a space with a division line on only one side of the parking space, the division line and the vehicle width guide line appear aligned in the monitor, but they may not actually be aligned on the ground.



#### Fixed assist lines display type

#### NOTE

*Images displayed on the monitor from the rear view parking camera are reversed images (mirror images).* 


- 1. Shift the selector lever to reverse (R) position to switch the display to the rear view monitor display.
- 2. Confirming the surrounding conditions, reverse the vehicle.
- 3. After your vehicle begins entering the parking space, continue backing up slowly so that the distance between the vehicle width lines and the sides of the parking space on the left and right are roughly equal.

#### (Display condition)



(Vehicle condition)

- 4. Continue to adjust the steering wheel until the vehicle width guide lines are parallel to the left and right sides of the parking space.
- 5. Once they are parallel, straighten the wheels and back your vehicle slowly into the parking space. Continue checking the vehicle's surroundings and then stop the vehicle in the best possible position. (If the parking space has division lines, check whether the vehicle width guide lines are parallel to them.)

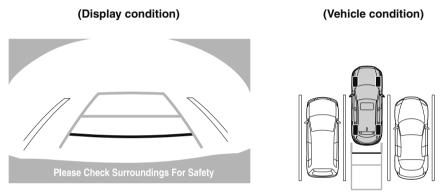

6. When the selector lever is shifted from reverse (R) position to another selector lever position, the screen returns to the previous display.

#### NOTE

Because there may be a difference between the displayed image, such as indicated below, and the actual conditions when parking, always verify the safety at the rear of the vehicle and the surrounding area directly with your eyes.

- In the image of the parking space (or garage) displayed on the screen, the back end and distance guide lines may appear aligned in the monitor, but they may not actually be aligned on the ground.
- When parking in a space with a division line on only one side of the parking space, the division line and the vehicle width guide line appear aligned in the monitor, but they may not actually be aligned on the ground.




#### ▼ Variance Between Actual Road Conditions and Displayed Image

Some variance occurs between the actual road and the displayed road. Such variance in distance perspective could lead to an accident. Note the following conditions that may cause a variance in distance perspective.


#### When the vehicle is tilted due to the weight of passengers and load

When the vehicle rear is lowered, the object displayed on the screen appears farther than the actual distance.




#### When there is a steep grade behind the vehicle

When there is a steep upgrade (downgrade) behind the vehicle, the object displayed on the screen appears farther (downgrade: closer) than the actual distance.

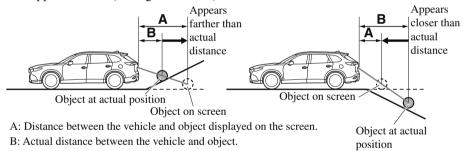

#### Three-dimensional object on vehicle rear

Because the distance guide lines are displayed based on a flat surface, the distance to the three-dimensional object displayed on the screen is different from the actual distance. (Screen display) (Actual condition)

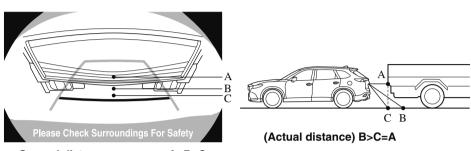

Sensed distance on screen A>B>C

#### (Predicted vehicle path assist lines display type)

#### When reversing near a three-dimensional object

When reversing near an overhanging object, the vehicle may hit the object even if the anticipated course line does not contact the object on the screen. The position of the object displayed on the screen is different from the actual position because the anticipated course lines on the screen are displayed based on a horizontal road surface. When backing up near an overhanging object, confirm the rear and surrounding conditions directly with your eyes. (Screen display) (Actual view)





#### ▼ Picture Quality Adjustment

## 

#### Always adjust the picture quality of the rear view monitor while the vehicle is stopped:


Do not adjust the picture quality of the rear view monitor while driving the vehicle. Adjusting the picture quality of the rear view monitor such as brightness, contrast, colour, and tint while driving the vehicle is dangerous as it could distract your attention from the vehicle operation which could lead to an accident.

Picture quality adjustment must be done while the selector lever is in reverse (R) position. There are 4 settings which can be adjusted including, brightness, contrast, tint, and colour. When adjusting, pay sufficient attention to the vehicle surroundings.

- 1. Select the  $\mathbf{\Phi}$  icon on the screen to display the tabs.
- 2. Select the desired tab item.
- 3. Adjust the brightness, contrast, tint, and colour using the slider. If you need to reset, press the reset button.
- 4. Select the  $\clubsuit$  icon on the screen to close the tab.

## **Parking Sensor System**\*

The parking sensors use ultrasonic sensors which detect obstructions around the vehicle when the vehicle is driven at low speeds, such as during garage or parallel parking, and a buzzer sound and detection indicator notify the driver of the approximate distance from the vehicle to the surrounding obstruction.

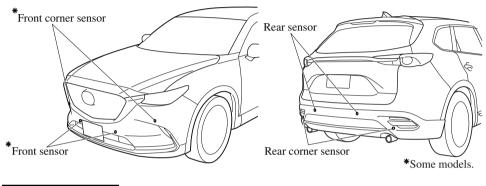

## 

# Do not rely completely on the parking sensor system and be sure to confirm the safety around your vehicle visually when driving:

This system can assist the driver in operating the vehicle in the forward and backward directions while parking. The detection ranges of the sensors are limited, therefore, driving the vehicle while relying only on the system may cause an accident. Always confirm the safety around your vehicle visually when driving.


#### NOTE

- Do not install any accessories within the detection ranges of the sensors. It may affect the system operation.
- Depending on the type of obstruction and the surrounding conditions, the detection range of a sensor may narrow, or the sensors may not be able to detect obstructions.
- The system may not operate normally under the following conditions:
  - $\cdot$  Mud, ice, or snow is adhering to the sensor area (Returns to normal operation when removed).
  - The sensor area is frozen (Returns to normal operation when the ice is thawed).
  - The sensor is covered by a hand.
  - The sensor is excessively shocked.
  - · The vehicle is excessively tilted.

- · Under extremely hot or cold weather conditions.
- The vehicle is driven on bumps, inclines, gravel, or grass covered roads.
- Anything which generates ultrasound is near the vehicle, such as another vehicle's horn, the engine sound of a motorcycle, the air brake sound of a large-sized vehicle, or another vehicle's sensors.
- The vehicle is driven in heavy rain or in road conditions causing water-splash.
- A commercially-available wing pole or an aerial for a radio transmitter is installed to the vehicle.
- The vehicle is moving towards a tall or square curbstone.
- An obstruction is too close to the sensor.
- Obstructions under the bumper may not be detected. Obstructions that are lower than the bumper or thin which may have been initially detected may no longer be detected as the vehicle approaches more closely to the obstruction.
- The following types of obstructions may not be detected:
  - · Thin objects such as wire or rope
  - $\cdot$  Things which absorb sonic waves easily such as cotton or snow
  - · Angular shaped objects
  - · Very tall objects, and those which are wide at the top
  - · Small, short objects
- Always have the system inspected at an expert repairer (we recommend an Authorised Mazda Repairer) if any shock is applied to the bumpers, even in a minor accident. If the sensors are deviated, they cannot detect obstructions.
- The system may have a malfunction if the beep does not operate or the indicator light does not illuminate when the parking sensor switch is turned on. Consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The system may have a malfunction if the beep sound which indicates a system malfunction is heard and the indicator light flashes. Consult an expert repairer (we recommend an Authorised Mazda Repairer).
- The beeper which indicates a system malfunction may not be heard if the ambient temperature is extremely cold, or mud, ice, or snow adheres to the sensor area. Remove any foreign material from the sensor area.
- When installing a trailer hitch, consult an expert repairer (we recommend an Authorised Mazda Repairer).

#### ▼ Sensor Detection Range

The sensors detect obstructions within the following range.

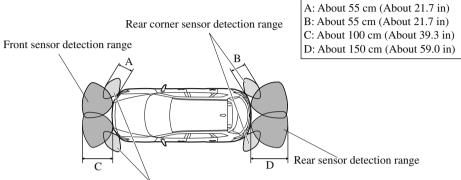

Front corner sensor detection range

Viewing distance display

Display		Distance between vehicle and obstruction		
Without 360° Without front ul- trasonic sensor and front corner ultra- sonic sensor	view monitor With front ultra- sonic sensor and front corner ultra- sonic sensor	With 360° view monitor	Front ultrasonic sen- sor*/Front corner ultrasonic sensor*	Rear ultrasonic sen- sor/Rear Corner ul- trasonic sensor
		Green	Front ultrasonic sen- sor: Approx. 100—60 cm (39.4—23.6 in)	Rear ultrasonic sen- sor: Approx. 150—60 cm (59.1—23.6 in)

#### When Driving Parking Sensor System

Display			Distance between ve	hicle and obstruction
Without 360° Without front ul- trasonic sensor and front corner ultra- sonic sensor	view monitor With front ultra- sonic sensor and front corner ultra- sonic sensor	With 360° view monitor	Front ultrasonic sen- sor*/Front corner ultrasonic sensor*	Rear ultrasonic sen- sor/Rear Corner ul- trasonic sensor
		Yellow	Front ultrasonic sen- sor: Approx. 60—45 cm (23.6—17.7 in) Front corner ultrason- ic sensor: Approx. 55—38 cm (21.7—14.9 in)	Rear ultrasonic sen- sor: Approx. 60—45 cm (23.6—17.7 in) Rear corner ultrasonic sensor: Approx. 55—38 cm (21.7—14.9 in)
		Amber	Front ultrasonic sen- sor: Approx. 45—35 cm (17.7—13.8 in) Front corner ultrason- ic sensor: Approx. 38—25 cm (15—9.8 in)	Rear ultrasonic sen- sor: Approx. 45—35 cm (17.7—13.8 in) Rear corner ultrasonic sensor: Approx. 38—25 cm (15—9.8 in)
		Red	Front ultrasonic sen- sor: Within approx. 35 cm (13.8 in) Front corner ultrason- ic sensor: Within approx. 25 cm (9.8 in)	(13.8 in) Rear corner ultrasonic sensor:

#### ▼ Park Assist Sensor System Operation

#### With front ultrasonic sensor and front corner ultrasonic sensor

The switch can be activated when the ignition is switched ON, the selector lever is in any position except reverse (R), and the vehicle speed is about 10 km/h (6 mph) or less. When the parking sensor switch is pressed, a beep sound is heard, the obstruction detection indication is displayed in the audio screen, and the indicator light in the switch illuminates.



#### NOTE

- If the system is cancelled, it will not restore automatically even when the vehicle speed is decreased to 10 km/h (6 mph) or less.
- When the ignition is switched OFF, the system status before it was turned off is maintained. For example, if the ignition is switched OFF while the parking sensor is activated, the system will be activated when the ignition is switched ON the next time.

#### Sensor detection condition

The system can be used when the ignition is switched ON and the parking sensor switch has been turned on.

The sensors detect obstructions under the following conditions:

Sensor	Condition
Front Ultrasonic Sensor	The selector lever is in any position except reverse (R), and the vehicle speed is about 10 km/h (6 mph) or less.
Front Corner Ultrasonic Sensor	The vehicle speed is about 10 km/h (6 mph) or less.
Rear Ultrasonic Sensor	The selector lever is in reverse (R).
Rear Corner Ultrasonic Sensor	The selector lever is in reverse (R), and the vehicle speed is about 10 km/h (6 mph) or less.

The system is cancelled under the following conditions:

- $\cdot$  The parking sensor switch is pressed while the parking sensor is in operation.
- The vehicle speed is 10 km/h (6 mph) or more. (Except rear sensor)

#### Without front ultrasonic sensor and front corner ultrasonic sensor

When the ignition is switched ON and the selector lever is shifted to the reverse (R), the beep sound activates and the system is enabled for use.


The sensors detect obstructions under the following conditions:

Sensor	Condition
Rear Ultrasonic Sensor	The selector lever is in reverse (R).
Rear Corner Ultrasonic Sensor	The selector lever is in reverse (R), and the vehicle speed is about 10 km/h (6 mph) or less.

#### ▼ Obstruction Detection Indication

The position of a sensor which has detected an obstruction is indicated. The gauge illuminates in different areas depending on the distance to an obstruction detected by the sensor.

As the vehicle approaches closer to an obstruction, the zone in the gauge closer to the vehicle illuminates.

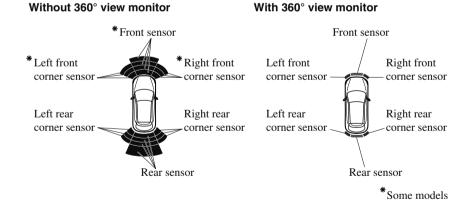

#### NOTE

The detection indicator can switch between display and non-display. Refer to the Settings section in the Mazda Connect Owner's Manual. (Vehicles with 360° View Monitor)

When the detection indicator is set to "Display", even with the 360° view monitor not displayed, if a front ultrasonic sensor or a front corner ultrasonic sensor detects an obstruction, the 360° view monitor switches automatically to display. When an obstruction is no longer detected, the display switches to the display before the obstruction was detected. However, while the 360° view monitor is displayed, it continues to display no matter if an obstruction is detected or not.

#### System problem notification

**Detection Indicator** Without 360° view monitor Without front ultra-Solution With 360° view moni-With front ultrasonic sonic sensor and front tor sensor and front corcorner ultrasonic senner ultrasonic sensor sor The system may have a malfunction. Have the vehicle inspected at an ex-Disconpert repairer (we recomnection mend an Authorised Mazda Repairer) as soon as possible. The system may have a malfunction. Have the ve-System hicle inspected at an exmalpert repairer (we recomfunction mend an Authorised Mazda Repairer) as soon as possible.

If a problem occurs, the driver is notified of the problem by the following indications.

#### When Driving Parking Sensor System

	Detection Indicator			
	Without 360°	Without 360° view monitor		
	Without front ultra- sonic sensor and front corner ultrasonic sen- sor	With front ultrasonic sensor and front cor- ner ultrasonic sensor	With 360° view moni- tor	Solution
Frost/ soiling				Foreign matter may be on the sensor area corre- sponding to the obstruc- tion detection indication shown. If the system does not recover, have the vehi- cle inspected at an expert repairer (we recommend an Authorised Mazda Re- pairer).

#### ▼ Parking Sensor Warning Beep

The beeper sounds as follows while the system is operating. Front Ultrasonic Sensor, Rear Ultrasonic Sensor

Distance detec-	Distance between vel	D	
tion area	Front ultrasonic sensor	Rear ultrasonic sensor	Beeper sound <sup>*1</sup>
Farthest distance	Approx. 100—60 cm (39.3—23.6 in)	Approx. 150–60 cm (59.0–23.6 in)	Slow intermittent sound
Far distance	Approx. 60—45 cm (23.6—17.7 in)	Approx. 60—45 cm (23.6—17.7 in)	Medium intermit- tent sound
Middle distance	Approx. 45–35 cm (17.7–13.7 in)	Approx. 45—35 cm (17.7—13.7 in)	Fast intermittent sound

Distance detec-	Distance between vel	D	
tion area	Front ultrasonic sensor	Rear ultrasonic sensor	Beeper sound*1
Close distance	Within approx. 35 cm (13.7 in)	Within approx. 35 cm (13.7 in)	Continuous sound

\*1 The rate at which the intermittent sound beeps increases as the vehicle approaches the obstruction.

#### Front Corner Ultrasonic Sensor, Rear Corner Ultrasonic Sensor

	Distance between vehicle and obstruction		
Distance detection area	Front corner ultrasonic/Rear corner ultrasonic sensor	Beeper sound <sup>*1</sup>	
Far distance	Approx. 55—38 cm (21.6—14.9 in)	Medium intermittent sound	
Middle distance	Approx. 38–25 cm (14.9–9.8 in)	Fast intermittent sound	
Close distance	Within approx. 25 cm (9.8 in)	Continuous sound	

\*1 The rate at which the intermittent sound beeps increases as the vehicle approaches the obstruction.

#### NOTE

If an obstruction is detected in a zone for 6 seconds or more, the beep sound is stopped (except for the close-distance zone). If the same obstruction is detected in another zone, the corresponding beep sound is heard.

#### ▼ When Warning Indicator/Beep is Activated

The system notifies the driver of an abnormality by activating the beep sound and the indicator light.

Indicator/Beep	How to check
The indicator light flashes when the parking sensor switch is pressed at a vehicle speed of 10 km/h (6 mph) or less.	The system may have a malfunction. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
The beep sound is not heard.	The system may have a malfunction. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
The intermittent sound of the buzzer is heard 5 times.	Remove any foreign material from the sensor area. If the system does not re- cover, have the vehicle inspected at an expert repairer (we recommend an Au- thorised Mazda Repairer).
A certain obstruction detection indicator is continuously dis- played.	Refer to Obstruction Detection Indication on page 4-266.

# 5

# **Interior Features**

Use of various features for ride comfort, including air-conditioning and audio system.

Air-Conditioning System	5-2
Operating Tips	5-2
Vent Operation (Front)	5-3
Front Air Conditioner	5-5
Vent Operation (Rear)	5-9
Rear Air Conditioner	5-11
Mazda Connect	5-14
What is Mazda Connect ?	5-14
Mazda Connect Basic	


Operations.....5-17

Interior Equipment	5-31
Sunvisors	5-31
Interior Lights	
Accessory Sockets	5-36
USB Power Outlet <sup>*</sup>	5-37
Wireless Charger (Qi)*	5-40
Cup Holder	5-44
Bottle Holder	5-45
Storage Compartments	5-46
Sunshade (Rear Door Windov	v)*
· · · · · · · · · · · · · · · · · · ·	5-50

## **Operating Tips**

- Operate the air-conditioning system with the engine running.
- To prevent the battery from being discharged, do not leave the fan control switch on for a long period of time with the ignition switched ON when the engine is not running.
- (With i-stop) The airflow amount may decrease slightly while the i-stop function is operating.
- Clear all obstructions such as leaves, snow and ice from the bonnet and the air inlet in the cowl grille to improve the system efficiency.
- Use the air-conditioning system to defog the windows and dehumidify the air.
- The recirculate mode should be used when driving through tunnels or while in a traffic jam, or when you would like to shut off outside air for quick cooling of the interior.
- Use the outside air position for ventilation or windscreen defrosting.
- If the vehicle has been parked in direct sunlight during hot weather, open the windows to let warm air escape, then run the air-conditioning system.
- Run the air conditioner about 10 minutes at least once a month to keep internal parts lubricated.
- Have the air conditioner checked before the weather gets hot. Lack of refrigerant may make the air conditioner less efficient.

The refrigerant specifications are indicated on a label attached to the inside of the engine compartment. If the wrong type of refrigerant is used, it could result in a serious malfunction of the air conditioner. Consult a professional, government certified repairer for the inspection or repair because a special device is required for the air conditioner maintenance. For details, consult an expert repairer (we recommend an Authorised Mazda Repairer).

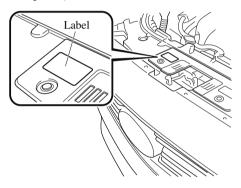

## **Vent Operation (Front)**

#### ▼ Adjusting the Vents


#### **Directing airflow**

To adjust the direction of airflow, move the adjustment knob.


#### NOTE

- When using the air conditioner under humid ambient temperature conditions, the system may blow fog from the vents. This is not a sign of trouble but a result of humid air being suddenly cooled.
- The air vents can be fully opened and closed by operating the dial. (Side vents only)

#### Side Vents

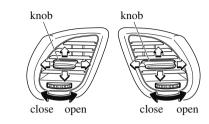


#### **Centre Vents**




#### ▼ Selecting the Airflow Mode


#### Instrument panel Vents

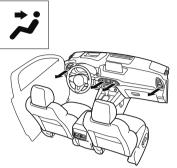

#### Instrument panel and Floor Vents

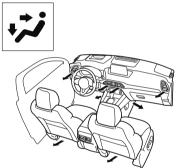

#### **Floor Vents**

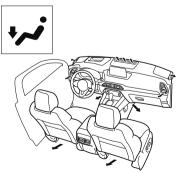


#### NOTE

The location airflow exits the air vents and the airflow amount may change depending on the open or close status of the air vents.


# Defroster and Floor Vents

#### **Defroster Vents**



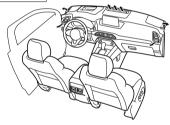

## **Front Air Conditioner**

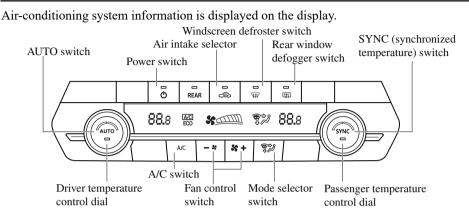

#### ▼ Control Switches

#### **AUTO** switch

By pressing the AUTO switch the following functions will be automatically controlled in accordance with the selected set temperature:

- · Airflow temperature
- · Amount of airflow
- $\cdot$  Selection of airflow mode
- · Outside/Recirculated air selection
- · Air conditioner operation
- · A/C or A/C ECO selection

#### NOTE

#### AUTO switch indicator light

- When on, it indicates auto operation, and the system will function automatically.
- If any of the following switches are operated while in auto control, the AUTO switch indicator turns off.
  - · Mode selector switch
  - $\cdot$  Fan control switch

• Windscreen defroster switch The functions for switches other than those operated continue to operate in auto control.

#### Power switch (Fan On/Off)

The air-conditioning system turns on or off by pressing the power switch.

#### **Temperature control dial**

This dial controls temperature. Turn it clockwise for hot and anticlockwise for cold.

#### (European models)

Turn the temperature control dial to adjust the temperature between 15 °C (60 °F) and 29 °C (84 °F).

#### (Except European models)

Turn the temperature control dial to adjust the temperature between 18 °C (64 °F) and 32 °C (90 °F).

• When the SYNC switch is on: Turn the driver temperature control dial to control the temperature throughout the entire cabin. • When the SYNC switch is off: Turn the driver or front passenger temperature control dial to independently control the temperature on each side of the cabin.

#### NOTE

- The air-conditioning system changes to the individual operation mode (SYNC switch indicator light turns off) by turning the front passenger temperature control dial even when the SYNC switch is on, which allows individual control of the set temperature for the driver and front passenger.
- When you set the temperature to the lower or upper limit, "Lo" or "Hi" is displayed.
- The temperature units for the temperature setting display can be changed in conjunction with the temperature units for the outside temperature display.
  (Instrument cluster Type A) Refer to Outside Temperature Display on page 4-25.
  (Instrument cluster Type B) Refer to Outside Temperature Display on page 4-43.
  (Instrument cluster Type C) Refer to Outside Temperature Display on page 4-59.

#### Fan control switch

The fan has 7 speeds. The selected speed will be displayed.

#### Mode selector switch

The desired airflow mode can be selected (page 5-4).

#### NOTE

- With the airflow mode set to the vi position and the temperature control dial set at a medium temperature, heated air is directed to the feet and air at a comparably lower temperature will flow through the central, left and right vents.
- To set the air vent to  $\widehat{W}$ , press the windscreen defroster switch.
- In the W position, the air conditioner is automatically turned on and the outside air position is automatically selected to defrost the windscreen.

#### A/C switch

Pressing the A/C switch while the AUTO switch is turned on will turn off the air conditioner (cooling/dehumidifying functions).

The on/off of the air conditioner switches each time the A/C switch is pressed. Changes as follows each time the A/C switch is pressed.

 $A/C \rightarrow A/C ECO \rightarrow Stop$ 

#### NOTE

- The air conditioner operates when the *A*/*C* switch is pressed while the air conditioner is turned off.
- The A/C ECO function is designed to economize use of the air-conditioning system. "A/C ECO" is displayed to indicate that the air-conditioning system is operating at optimum control.
- The air conditioner may not function when the outside temperature approaches 0 °C (32 °F).

#### Air intake selector

Outside or recirculated air positions can be selected. Press the switch to select outside/ recirculated air positions.

# Recirculated air position (indicator light turns on)

Outside air is shut off. Air within the vehicle is recirculated. Use this position when going through tunnels, driving in congested traffic (high engine exhaust areas), or when quick cooling is desired.

# Outside air position (indicator light turns off)

Outside air is allowed to enter the cabin. Use this position for ventilation or windscreen defrosting.

# 

# Do not recirculate the air in the cabin during cold or rainy weather:

Recirculating the air in the cabin during cold and rainy weather is dangerous as it will cause the windows to fog up. Your vision will be hampered, which could lead to a serious accident.

#### SYNC (Synchronized Temperature) switch

Use the SYNC switch to change the mode between the individual operation (driver and passenger) and interconnection (simultaneous) modes.

# Interconnection mode (indicator light turns on)

The set temperature for the driver and front passenger is controlled simultaneously.

# Individual operation mode (indicator light turns off)

The set temperature can be controlled individually for the driver and front passenger.

#### Windscreen defroster switch

Press the switch to defrost the windscreen and front door windows. Refer to Windscreen Defrosting and Defogging on page 5-8.

#### Rear window defogger switch

Press the rear window defogger switch to defrost the rear window. Refer to Rear Window Defogger on page

#### ▼ Operation of Automatic Air Conditioner

4-93.

- 1. Press the AUTO switch. Selection of the airflow mode, air intake selector and amount of airflow will be automatically controlled.
- Use the temperature control dial to select a desired temperature. If you want to set the temperature on the front passenger's side separately from the driver's side, turn the front passenger temperature control dial to switch the mode automatically to the individual operation mode and set the temperature for the front passenger's side.

To turn off the system, press the power switch.

#### NOTE

#### · (European models)

Set the control dial to the recommended temperature of 22 °C (72 °F), and then adjust it as desired.

- (Except European models) Set the control dial to the recommended temperature of 25 °C (77 °F), and then adjust it as desired.
- Setting the temperature to maximum hot or cold will not provide the desired temperature at a faster rate.
- When selecting heat, the system will restrict airflow until the engine has warmed to prevent cold air from blowing out of the vents.

#### ▼ Windscreen Defrosting and Defogging

Press the windscreen defroster switch. In this position, the outside air position is automatically selected, and the air conditioner automatically turns on. The air conditioner will directly dehumidify the air to the front windscreen and side windows on page 5-4. Airflow amount will be increased.

# 

## Set the temperature control to the hot or warm position when defogging (\\ position):

Using the  $\mathfrak{W}$  position with the temperature control set to the cold position is dangerous as it will cause the outside of the windscreen to fog up. Your vision will be hampered, which could lead to a serious accident.


#### NOTE

Use the temperature control dial to increase the air flow temperature and defog the windscreen more quickly.

#### ▼ Sunlight/Temperature Sensor


#### Sunlight sensor

Do not place objects on the sunlight sensor. Otherwise, the interior temperature may not adjust correctly.

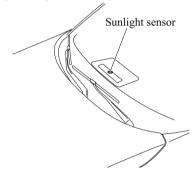

#### Interior temperature sensor

Do not cover the interior temperature sensor. Otherwise, the interior temperature may not adjust correctly.

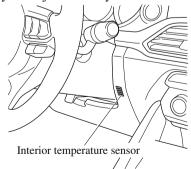

## Vent Operation (Rear)


#### ▼ Adjusting the Vents

#### **Directing airflow**

You can direct air flow by moving the adjustment knob.


#### NOTE

When using the air conditioner, mist may come out from the vents. This is not a sign of trouble but a result of humid air being suddenly cooled.

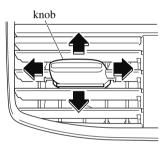



▼ Selecting the Airflow Mode

#### Instrument panel Vents

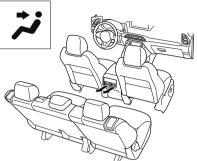


#### Instrument panel and Floor Vents

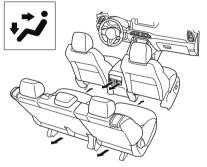

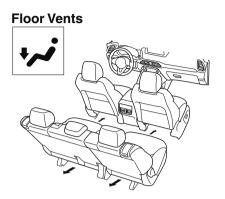

### **Rear Air Conditioner**

Air-conditioning system information is displayed on the display.

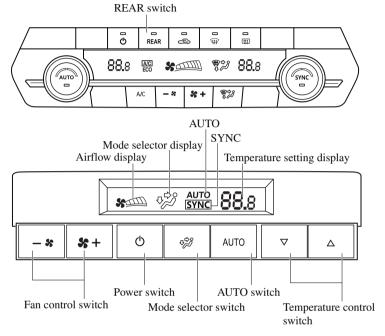

#### ▼ Control Switches

#### **Rear switch**

Press the rear switch to operate the rear air conditioner.

The indicator illuminates to indicate that the rear air conditioner is operating.

#### **AUTO switch**

By pressing the AUTO switch the following functions will be automatically controlled in accordance with the set temperature:

- · Airflow temperature
- · Amount of airflow
- · Selection of airflow mode

#### **Power switch**

The rear air-conditioning system turns on or off by pressing the power switch.

#### **Temperature control switch**

This switch controls temperature. Press  $\blacktriangle$  for hot and  $\blacktriangledown$  for cold.

## (European models)

Operate the temperature control switch to adjust the temperature between 15 °C (60 °F) and 29 °C (84 °F).

#### (Except European models)

Operate the temperature control switch to adjust the temperature between  $18 \text{ }^{\circ}\text{C}$  (64  $^{\circ}\text{F}$ ) and 32  $^{\circ}\text{C}$  (90  $^{\circ}\text{F}$ ).

#### NOTE

When the temperature control switch is set to the maximum or minimum, "Hi" or "Lo" is indicated on the display.

#### Fan control switch

The fan has five speeds. The selected speed will be displayed.

#### Mode selector switch

The desired airflow mode can be selected. Refer to Selecting the Airflow Mode on page 5-10.

#### ▼ Operation of Automatic Air Conditioner

#### **Operation from front seats**

- 1. Turn the front air conditioner on.
- 2. Press the rear switch. The rear air conditioner operates.
- 3. Selection of the airflow mode, airflow amount and temperature will be automatically controlled to the same temperature setting as the front air conditioner for the driver's side.

#### NOTE

- (European models) Set the control dial to the
  - recommended temperature of 22 °C (72 °F), and then adjust it as desired.
- (Except European models) Set the control dial to the recommended temperature of 25 °C (77 °F), and then adjust it as desired.
- If the AUTO switch is pressed while the front A/C switch is off, the rear air conditioner operates only to circulate air.

- Setting the temperature to the maximum high or low will not provide the desired temperature at a faster rate.
- When selecting heat, the system will restrict airflow until it has warmed to prevent cold air from blowing out of the vents.
- When the rear air conditioner is controlled to the same temperature setting as the front air conditioner for the driver's side, "SYNC" is displayed on the rear screen.
- When operating the fan switch of the front air conditioner while the rear air conditioner is operating automatically, the airflow amount of the rear air conditioner may change.

#### **Operation from rear seats**

- 1. Turn the front air conditioner on.
- 2. Press the AUTO switch. The selection of the airflow mode and airflow amount will be automatically controlled.
- 3. Use the temperature control switch to set the desired temperature.

#### NOTE

· (European models)

Set the control switch to the recommended temperature of 22 °C (72 °F), and then adjust it as desired.

• (Except European models) Set the control switch to the recommended temperature of 25 °C (77 °F), and then adjust it as desired.


- If the AUTO switch is pressed while the front A/C switch is off, the rear air conditioner operates only to circulate air.
- Setting the temperature to the maximum high or low will not provide the desired temperature at a faster rate.
- When selecting heat, the system will restrict airflow until it has warmed to prevent cold air from blowing out of the vents.
- When the rear air conditioner is operated automatically, "AUTO" is displayed on the rear screen.
- When the rear air conditioner is controlled to the same temperature setting as the front air conditioner for the driver's side, "SYNC" is displayed on the rear screen.

To turn off the system, press the Power switch.

# What is Mazda Connect ?


## ▼ What is Mazda Connect ?

This manual only indicates a part of the information for Mazda Connect. For details, check the Web owner's manual at the Mazda site for each country.

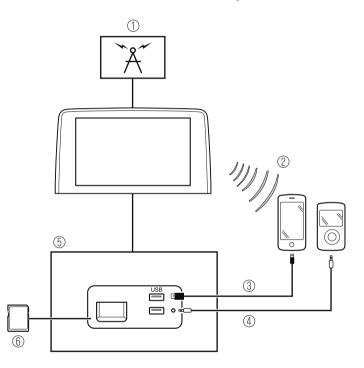

- 1. Radio
- 2. Bluetooth® Audio/Hands-Free Call/SMS (Short Message Service)/E-mail
- 3. USB Audio
- 4. AUX
- 5. USB port\*1/Auxiliary jack\*1/SD card slot\*2
- 6. SD card (Navigation system)\*
- \*1 The location of the USB slot/auxiliary jack differs depending on the specifications.

\*2 The SD card slot is for the navigation system only. For vehicles with the navigation system, the SD card (Mazda genuine) with stored map data is inserted into the SD card slot and used.

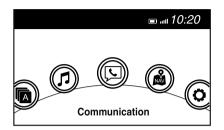

Icon	Function
	ApplicationsInformation such as average fuel economy, maintenance, and warnings can be verified. In addition, Apple CarPlay*, and Android™* can be selected.Depending on the grade and specification, the screen display may differ.
	<b>Entertainment</b> Operates audio such as the radio. The audio source most recently used is displayed. An audio source which cannot be used at that time is skipped and the previous audio source is displayed.
	To change the audio source, select the $\mathbf{r}$ icon displayed at the bottom of the screen.
(L)	<b>Communication</b> Bluetooth <sup>®</sup> related functions are available.
	Navigation           Navigation screen is displayed (vehicles with navigation system).           If the SD card for the navigation system is not inserted, the compass indicating the direction in which the vehicle is moving is displayed.           The compass may not indicate the correct bearing when the vehicle is stopped or travelling at a slow speed.
	Settings Overall setting menu (Such as display, sound, Bluetooth <sup>®</sup> and Language). Depending on the grade and specification, the screen display may differ.

# 

## Always adjust Mazda Connect while the vehicle is stopped:

Do not adjust Mazda Connect with the Commander switch while driving the vehicle. Adjusting Mazda Connect with the Commander switch while driving the vehicle is dangerous as it could distract your attention from the vehicle operation which could lead to a serious accident.

Even if the audio remote control switches are equipped on the steering wheel, learn to use the switches without looking down at them so that you can keep your maximum attention on the road while driving the vehicle.

### Do not allow the connection plug cord to get tangled with the selector lever:

Allowing the plug cord to become tangled with the selector lever is dangerous as it could interfere with driving, resulting in an accident.

#### Do not adjust a mobile device or a similar product while driving the vehicle:

Adjusting a mobile device or a similar product while driving the vehicle is dangerous as it could distract your attention from the vehicle operation which could lead to a serious accident. Always adjust a mobile device or a similar product while the vehicle is stopped.



For the purposes of safe driving, adjust the audio volume to a level that allows you to hear sounds outside of the vehicle including car horns and particularly emergency vehicle sirens.

### NOTE

- Do not use Mazda Connect for a long time with the engine stopped. Otherwise, the battery power could be depleted.
- If a mobile phone or CB radio is used in or near the vehicle, it could cause noise to occur from the audio system. However, this does not indicate a problem.

# **Mazda Connect Basic Operations**

# ▼ Mazda Connect Basic Operations

### NOTE

The explanation of functions described in this manual may differ from the actual operation, and the shapes of screens and buttons and the letters and characters displayed may also differ from the actual appearance.

Additionally, depending on future software updates, the content may successively change without notice.


# ▼ Touch Panel Operation



Do not press the screen strongly or press it with a sharp-pointed object. Otherwise, the screen could be damaged.


### NOTE

For safety reasons, operation of the centre display is disabled while the vehicle is being driven. However, items not displayed in grey can be operated using the commander switch while the vehicle is being driven.




# Touch & Tap

- 1. Touch or tap on the item indicated on the screen.
- 2. The operation is launched and the next item is displayed.

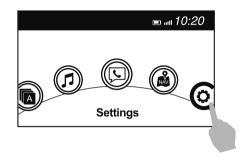

# Slide


- 1. Touch the setting item displaying a slider bar.
- 2. Touch the slider with your finger and move to the desired level.

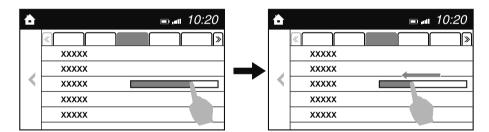

### Swipe

- 1. Touch the screen with your finger and move up or down.
- 2. Items which were not displayed can be displayed.

		<b>■ </b> ∎∎ 10:20
	FM	
	🔹 AM	
~	ххххх	
	ххххх	<b>†</b> •
	ххххх	
	ххххх	

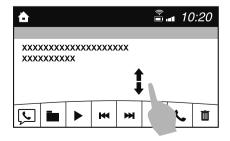

#### **Return to previous screen**

1. Touch the  $\checkmark$ .

Displaying the home screen


1. Touch the

# ▼ Commander Switch Operation

## NOTE

For safety reasons, some operations are disabled while the vehicle is being driven.


#### Volume dial operation

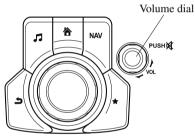

Press the volume dial to mute and pause. However, while an audio source which cannot be paused such as FM radio is playing, only mute is available. Press the volume dial again to resume the audio.

Turn the volume dial to adjust the volume. The volume increases by turning the dial clockwise, and decreases by turning it anticlockwise.

### Switches around commander knob

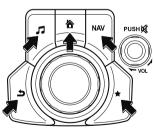

The following operations can be done by pressing the switches around the commander knob.


- **a** : Displays the home screen.
- **□**: Displays the Entertainment screen.

**NAV** : Displays the Navigation screen (Only navigation-equipped vehicles). For operation of the Navigation screen, refer to the navigation system manual. If the SD card for the navigation system is not inserted, the compass indicating the direction in which the vehicle is moving is displayed.

★ : Displays the Favourites screen. Long-press to store particular items in Favourites. (Radio, phonebook and destination of the navigation system can be programmed.)

**D** : Returns to previous screen.

# Commander knob operation

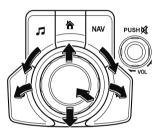


# (Selection of icons on screen)

- 1. Tilt or turn the commander knob and move the cursor to the desired icon.
- 2. Press the commander knob and select the icon.

# NOTE

Long-press operation of the commander knob is also possible for some functions.

# ▼ Audio Remote Control Switch Operation

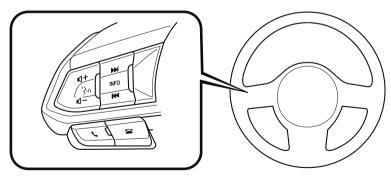

# Adjusting the Volume

To increase the volume, press up the volume switch (+).

To decrease the volume, press down the volume switch (-).



## Seek Switch

## AM/FM radio

Press the seek switch (||||, ||||). The radio switches to the next/previous stored station in the order that it was stored.

Radio stations which have been previously stored in favourites can be called up by pressing the seek switch ( $|\{4, \}\rangle$ ) while any radio station stored in the favourite radio is being received. Radio stations can be called up in the order they were stored with each press of the switch ( $|\{4, \}\rangle$ ).



# USB Audio/Bluetooth® Audio

Press the seek switch  $(\blacktriangleright)$  to skip forward to the beginning of the next track.

Press the seek switch (||||) within a few seconds after playback begins to track down to the beginning of the previous track.

Press the seek switch (||||) after a few seconds have elapsed to start playback from the beginning of the current track.

Press and hold the seek switch ( $|\langle \langle , \rangle \rangle$ ) to continuously switch the tracks up or down.

# Aha<sup>TM</sup>/Stitcher<sup>TM</sup> Radio

Press the seek switch (>>) to skip forward to the beginning of the next track. Press and hold the seek switch (>>) to evaluate the playback of the current song as "Like". Press and hold the seek switch (I<) to evaluate the playback of the current song as "Dislike".

# Pick up/hang up the Phone, or Activate Voice Control Using the Switch

#### Talk button

Activates the voice recognition. In addition, it skips the voice guidance.


#### **Pick-up button**

Answers incoming calls. In addition, after selecting a contact or dialing a number, it places the call when the button is pressed.

### Hang-up button

Ends the call or refuses an incoming call. In addition, it ends the voice recognition operation.

# ▼ Operation Using Voice Recognition Function

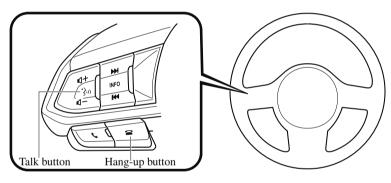

### Talk button

Activates the voice recognition. In addition, it skips the voice guidance.

# Hang-up button

Ends the voice recognition operation.

# **Basic Operation Method**

### **Activating Voice Recognition**

Press the talk button.

# **Ending Voice Recognition**

Use one of the following methods:

 $\cdot$  Press the hang-up button.

- · Say, "Cancel".
- Operate the commander switch or the centre display (only when vehicle is stopped).

# Skipping Voice Guidance (for faster operation)

Press and release the talk button.

### **Troubleshooting for Voice Recognition**

If you do not understand an operation method while in the voice recognition mode, say "Tutorial" or "Help".

### Commands useable anytime during voice recognition

"Go Back" and "Cancel" are commands which can be used at anytime during voice recognition.

#### **Returning to previous operation**

To return to the previous operation, say, "Go Back" while in voice recognition mode. **Cancel** 

To put the Bluetooth<sup>®</sup> Hands-Free system in standby mode, say, "Cancel" while in voice recognition mode.

# To prevent a deterioration in the voice recognition rate and voice quality, the following points should be observed:

- The voice recognition cannot be performed while voice guidance or the beep sound is operating. Wait until the voice guidance or the beep sound is finished before saying a command.
- Phone related commands are available only when a phone is connected via Bluetooth<sup>®</sup>. Make sure a phone is connected via Bluetooth<sup>®</sup> before you operate phone related voice commands.
- Music play commands, such as Play Artist and Play Album can be used only in USB audio mode.
- $\cdot$  Do not speak too slowly or loudly (no loud voice).
- Speak clearly, without pausing between words or numbers.
- Dialects or different wording other than hands-free prompts cannot be recognised by voice recognition. Speak in the wording specified by the voice commands.
- It is not necessary to face the microphone or be close to it. Speak the voice commands while maintaining a safe driving position.
- Close the windows and/or the sunroof to reduce loud noises from outside the vehicle, or turn down the airflow of the air-conditioning system while Bluetooth<sup>®</sup> Hands-Free is being used.

• Make sure the vents are not directing air up towards the microphone.

#### Voice Command List

#### Voice command

When the talk button is pressed and the following command is spoken, the audio or navigation can be operated. The commands in the () can be omitted. The specified name and number are put into the {}.

#### Standard command

Voice command	Function
Help	Usable commands can be verified.
Tutorial	Basic voice commands and methods of use can be verified.
(Navigate/Take me/Drive) Home	Set the destination to Home.

#### **Communication (phone) related command**

Voice command	Function
Call {name in phonebook} (mobile/ home/work/other) Example: "Call John Mobile"	Calls to the contact in the downloaded phonebook.
Redial	Calls to the last contact you called.
Callback	Calls to the last contact who called you.

#### Entertainment (audio) related command

Voice command	Function	Corresponding audio source
(Go to/Play) Bluetooth (Audio)	Switches the audio source to Bluetooth <sup>®</sup> audio. Can also switch to each audio source by similarly us- ing commands such as FM, AM, or USB.	All
Play Artist {Artist name}	Plays the selected artist.	USB

### Navigation related command\*

For the navigation screen voice commands, refer to the separate navigation system manual.

#### NOTE

- · Some commands cannot be used depending on the vehicle specifications.
- Some commands cannot be used depending on the device connection conditions and the use conditions.
- The commands indicated in this manual are some examples of usable voice commands. Some commands cannot be used depending on the vehicle specifications.

# ▼ Appendix

# Gracenote® Database

When a USB device or Bluetooth<sup>®</sup> device is connected to this unit and the audio is played, the album name, artist name, genre and title information are automatically displayed if there is a match in the vehicle's database compilation to the music being played. The information stored in this device uses database information in the Gracenote<sup>®</sup> music recognition service. This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN. You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES. © Gracenote, Inc. 2009

## Updating the database

The Gracenote® media database can be updated using USB device.

- 1. Connect a USB device containing the software for updating Gracenote®.
- 2. Select the O icon on the home screen to display the Settings screen.
- 3. Select the System tab and select Music Database Update.
- 4. Select Search. The list of the update package stored in the USB device and the version are displayed.
- 5. Select the package to use the update.
- 6. Select Install.

# NOTE

Gracenote<sup>®</sup> can be downloaded from the Mazda Hands-free Website.

# Apple CarPlay<sup>TM</sup>

Apple CarPlay<sup>™</sup> allows you to make calls, send or receive messages, and listen to music using your iPhone<sup>®</sup> with the vehicle's audio system, or search for destinations using the maps. In addition, voice recognition operation is possible using Siri<sup>®</sup>.

# 

> YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY™ ("THE APPLICATION") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. AND THAT THE APPLICATION AND INFORMATION ON THE APPLICATION IS PROVIDED "AS IS" AND "AS AVAILABLE". WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND. AND MAZDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATION AND INFORMATION ON THE APPLICATION, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO. THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY. SATISFACTORY OUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, OUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. AS EXAMPLES, AND WITHOUT LIMITATION, MAZDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATION, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME. SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE. ITS AFFILIATES. OR THIRD PARTY PROVIDERS: MAZDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA. WHICH MAY BE LOST AT ANY TIME: MAZDA DOES NOT GUARANTEE THAT THE APPLICATION OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION. YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS **OBSOLETE AND/OR UNUSABLE.** 

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL MAZDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATION OR YOUR USE OF OR INABILITY TO USE THE APPLICATION OR INFORMATION ON THE APPLICATION.

When using Apple CarPlay™, please avoid distraction and use Apple CarPlay™ responsibly. Stay fully aware of driving conditions and always obey applicable laws.

### NOTE

• Apple CarPlay<sup>™</sup> is provided by Apple<sup>®</sup> and its use is subject to your agreement to the Apple CarPlay<sup>™</sup> terms of use, which are included as part of the Apple iOS terms of use.

• When using Apple CarPlay<sup>™</sup>, location, speed, and other vehicle data is transferred to your iPhone<sup>®</sup>. For further details, refer to Apple<sup>®</sup>'s Privacy Policy.

# Android Auto<sup>TM</sup>

Android Auto<sup>TM</sup> is an application which allows the operation of an Android<sup>TM</sup> Smartphone using the vehicle's audio. Android Auto<sup>TM</sup> functions such as the phone, messages, music, and map can be used with the vehicle's audio system.

# 

> YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF ANDROID AUTO™ ("THE APPLICATION") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY OUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. AND THAT THE APPLICATION AND INFORMATION ON THE APPLICATION IS PROVIDED "AS IS" AND "AS AVAILABLE." WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND. AND MAZDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATION AND INFORMATION ON THE APPLICATION. EITHER EXPRESS. IMPLIED OR STATUTORY. INCLUDING. BUT NOT LIMITED TO. THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. AS EXAMPLES, AND WITHOUT LIMITATION. MAZDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATION, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY GOOGLE, ITS AFFILIATES, OR THIRD PARTY PROVIDERS: MAZDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA. WHICH MAY BE LOST AT ANY TIME: MAZDA DOES NOT GUARANTEE THAT THE APPLICATION OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION. YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS **OBSOLETE AND/OR UNUSABLE.** 

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL MAZDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATION OR YOUR USE OF OR INABILITY TO USE THE APPLICATION OR INFORMATION ON THE APPLICATION. When using Android Auto™, please avoid distraction and use Android Auto™ responsibly. Stay fully aware of driving conditions and always obey applicable laws.

# NOTE

- · Android Auto<sup>TM</sup> is provided by Google and its use is subject to your agreement to the Android Auto<sup>TM</sup> terms of use.
- When using Android Auto<sup>™</sup>, location, speed, and other vehicle data is transferred to your smart phone. For further details, refer to Google's Privacy Policy.

# Trademark

- Aha<sup>TM</sup>, the Aha<sup>TM</sup> logo, and the Aha<sup>TM</sup> trade dress are trademarks or registered trademarks of Harman International Industries, Inc., used with permission.
- Stitcher<sup>TM</sup>, the Stitcher<sup>TM</sup> logo, and the Stitcher<sup>TM</sup> trade dress are trademarks or registered trademarks of Stitcher, Inc., used with permission.
- iPhone, iPod touch, iPod nano, Siri and Apple Music are trademarks of Apple Inc., registered in the U.S. and other countries.
- · Apple CarPlay is trademarks of Apple Inc.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- "Made for iPhone" and "Made for iPod" mean that an accessory has been designed to connect specifically to iPhone or iPod, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPhone or iPod may affect wireless performance.

Made for iPhone 7 Plus iPhone 7 iPhone SE iPhone 6s Plus iPhone 6s iPhone 6 Plus iPhone 6 iPhone 5s iPhone 5c iPhone 5s iPhone 4s iPod touch (6th generation) iPod touch (5th generation)

# Interior Features Mazda Connect

iPod nano (7th generation)



- $\cdot$  Google, Android, Android Auto and other related marks are trademarks of Google LLC.
- · AudioPilot is a registered trademark of Bose Corporation.
- · Centerpoint is a registered trademark of Bose Corporation.
- Windows Media and Microsoft are registered trademarks of Microsoft Corporation U.S. in the United States and other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties.

Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorised Microsoft subsidiary and third parties.

• The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.



· SDHC Logo is a trademark of SD-3C, LLC.




 $\cdot$  Gracenote, the Gracenote logo and logotype are either a registered trademark or a trademark of Gracenote, Inc. in the United States and/or other countries.



# Sunvisors

When you need a sunvisor, lower it for use in front or swing it to the side.

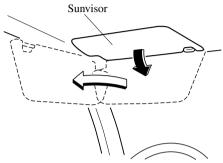


# ▼ Vanity Mirrors

To use the vanity mirror, lower the sunvisor.

The vanity mirror light will illuminate when you open the cover.

To prevent the battery from being discharged, the vanity mirror will only illuminate in the tilt range shown in the figure.

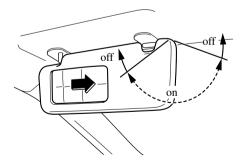

# **Interior Lights**

#### NOTE


• Do not leave the lights on for long periods while the engine is turned off. Otherwise the battery power could be depleted.

## **Overhead Lights**

### Type A

Switch Posi- tion	Overhead Lights
OFF	Light off
DOOR	<ul> <li>Light is on when any door is open</li> <li>Light is on or off when the illuminated entry system is on</li> </ul>
ON	Light on

#### Front

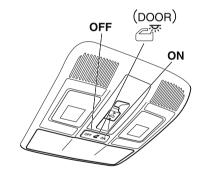


# Centre



# Interior Features Interior Equipment

## Rear




# NOTE

The rear overhead light and the centre map lights also turn on and off when the front overhead light switch is operated.

# Type B

Switch	<b>Overhead Lights</b>
OFF (DOOR OFF)	<ul> <li>The DOOR OFF switch can be switched between the DOOR position and DOOR OFF position.</li> <li>DOOR position <ul> <li>The lights turn on when any of the doors is opened.</li> <li>The lights turn on/off in conjunction with the illuminated entry system.</li> </ul> </li> <li>DOOR OFF position <ul> <li>The lights do not turn on even if any of the doors is opened.</li> <li>The lights do not turn on/off in conjunction with the illuminated entry system.</li> </ul> </li> </ul>
	entry system.
OFF)	Press the switch to turn it on. Press the switch again to turn off the lights.

Front

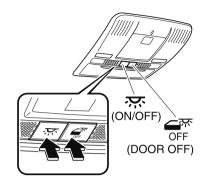

# Centre




# Rear



# Front Map Lights

# Туре А

When the overhead light switch is in the door or off position, press the lens to illuminate the front map lights, and then press the lens again to turn them off.

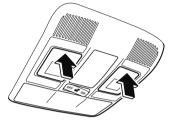

# NOTE

The front map lights will not turn off even if the lens is pressed in the following cases:

- The overhead light switch is in the ON position.
- The overhead light switch is in the door position with the door open.
- The illuminated entry system is on.

# Туре В

Press the switch to illuminate the front map lights, and then press the switch again to turn them off.



# NOTE

The front map lights will not turn off even if the switch is pressed in the following cases:

- The overhead lights turn on by operating the overhead ON/OFF switch
   (☆).
- The overhead lights turn on in conjunction with a door opening/ closing.
- The illuminated entry system is on.

# Centre Map Lights

# Туре А

When the overhead light switch is in the door or off position, press the lens to illuminate a centre map light, and then press the lens again to turn it off.



# NOTE

- Once the centre map lights have been turned off, they will turn on and off depending on the position to which the overhead light is switched.
- The centre map lights will not turn off even if the lens is pressed in the following cases:
  - The overhead light switch is ON.
  - The overhead light switch is in the door position with the door open.
  - $\cdot$  The illuminated entry system is on.

# Туре В

Press the switch to illuminate the centre map lights, and then press the switch again to turn them off.




# NOTE

- Once the centre map lights have been turned off, they will turn on and off in conjunction with the overhead light operation.
- The centre map lights will not turn off even if the switch is pressed in the following cases:
  - The overhead lights turn on by operating the overhead ON/OFF switch (?...).

- The overhead lights turn on in conjunction with a door opening/ closing.
- The illuminated entry system is on.


# Luggage Compartment Lights

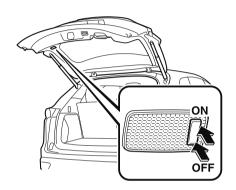

Switch Posi- tion	Luggage Compartment Light
OFF	Light off
ON	Light on when the liftgate is open

# Ambient Light\*

The ambient lights continuously turn on when the ignition is switched ON. The ambient lights dim when the position lights or headlights are turned on.

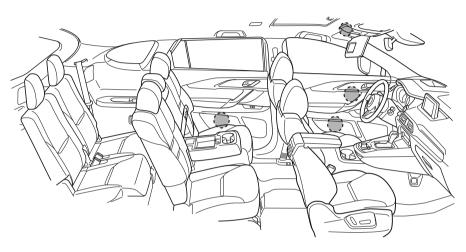

Ambient light

### NOTE

- The ambient lights turn on or off in conjunction with the illuminated entry system when the ignition is switched OFF.
- The ambient light illumination level can be changed while the position lights or headlights are turned on.

Refer to the Settings section in the Mazda Connect Owner's Manual.

# ▼ Illuminated Entry System

The overhead lights turn on when any of the following operations is done with the overhead light switch in the DOOR position.

The ambient lights turn on regardless of the overhead light switch position.

• The driver's door is unlocked with the ignition is switched OFF.

• The ignition is switched OFF with all doors closed.

### NOTE

- The illumination time differs depending on the operation.
- · Battery saver

# Interior Features Interior Equipment

If an interior light is left on with the ignition switched OFF, the light is turned off automatically after about 30 minutes to prevent battery depletion.

- The operation of the illuminated entry system can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.
- $\cdot$  (Type B)


The illumination entry system does not operate in conjunction with the overhead lights when the overhead lights are turned on using the overhead light ON/OFF switch.

# **Accessory Sockets**


Only use genuine Mazda accessories or the equivalent requiring no greater than 120 W (DC 12 V, 10 A).

The ignition must be switched to ACC or ON.

#### Front

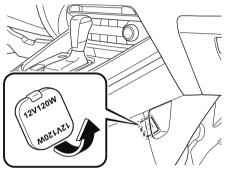

Rear

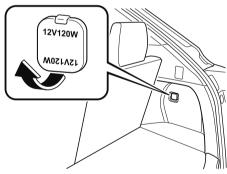

# 

- To prevent accessory socket damage or electrical failure, pay attention to the following:
  - Do not use accessories that require more than 120 W (DC 12 V, 10 A).
  - Do not use accessories that are not genuine Mazda accessories or the equivalent.
  - Close the cover when the accessory socket is not in use to prevent foreign objects and liquids from getting into the accessory socket.
  - Correctly insert the plug into the accessory socket.
  - Do not insert the cigarette lighter into the accessory socket.
- Noise may occur on the audio playback depending on the device connected to the accessory socket.
- Depending on the device connected to the accessory socket, the vehicle's electrical system may be affected, which could cause the warning light to illuminate. Disconnect the connected device and make sure that the problem is resolved. If the problem is resolved, disconnect the device from the socket and switch the ignition off. If the problem is not resolved, consult an expert repairer (we recommend an Authorised Mazda Repairer).

# NOTE


To prevent discharging of the battery, do not use the socket for long periods with the engine off or idling.

# **USB Power Outlet**\*


Second-row seat (6:4 split adjustable-type bench seat type, Captain seat and second-row seat console type)

The USB power outlets can be used regardless of whether the ignition is switched to ACC or ON. Only use USB devices that have a maximum power consumption of 10.5W (DC5V, 2.1A) or below.

# 6:4 split adjustable-type bench seat type

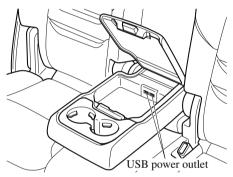

# Captain seat and second-row seat console type

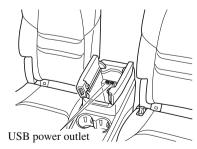

# 

To prevent USB power outlets damage or electrical failure, pay attention to the following:

- Do not use USB devices that require more than 10.5 W (DC 5 V, 2.1 A).
- Close the lid when the USB power outlets are not in use to prevent foreign objects and liquids from getting into the USB power outlets.
- Correctly connect the USB connector into the USB power outlets.

# NOTE


- The USB power outlets are designed only for charging and they cannot be used for connecting to the vehicle's audio system.
- To prevent discharging of the battery, do not use the USB power outlets for long periods with the engine off or idling.

# How to connect


The groove in the armrest box can be used to pass the cord of the device into the box to connect it to the USB power outlets.

- 1. Open the lid.
- 2. Route the cord through the groove in the armrest box and insert the USB connector into the USB power outlets.

# 6:4 split adjustable-type bench seat type

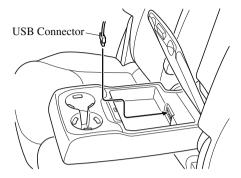

# Captain seat and second-row seat console type

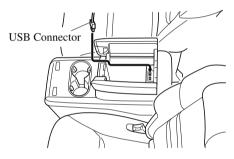

# Second-row seat (Captain seat and walk through type)

The USB power outlets can be used regardless of whether the ignition is switched to ACC or ON.

Only use USB devices that have a maximum power consumption of 12.5W (DC5V, 2.5A) or below.



To prevent USB power outlets damage or electrical failure, pay attention to the following:

- Do not use USB devices that require more than 12.5 W (DC 5 V, 2.5 A).
- Correctly connect the USB connector into the USB power outlets.


# NOTE

- The USB power outlets are designed only for charging and they cannot be used for connecting to the vehicle's audio system.
- To prevent discharging of the battery, do not use the USB power outlets for long periods with the engine off or idling.

# Third-row seat

The USB power outlets can be used regardless of whether the ignition is switched to ACC or ON.

Only use USB devices that have a maximum power consumption of 12.5W (DC5V, 2.5A) or below.

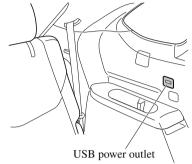

To prevent USB power outlets damage or electrical failure, pay attention to the following:


- Do not use USB devices that require more than 12.5 W (DC 5 V, 2.5 A).
- Correctly connect the USB connector into the USB power outlets.

# NOTE

- The USB power outlets are designed only for charging and they cannot be used for connecting to the vehicle's audio system.
- To prevent discharging of the battery, do not use the USB power outlets for long periods with the engine off or idling.

# Wireless Charger (Qi)\*

You can charge mobile devices such as Smartphones which comply with the Qi Wireless Charging standard. Only use mobile devices that have a maximum power consumption of 5 W, or 15 W or below. The maximum power consumption differs depending on the mobile device.

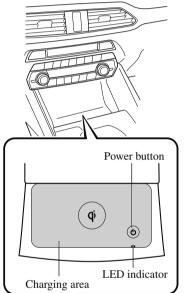

# 

Radio waves from the Wireless Charger (Qi) may affect the operation of medical devices such as implanted-type cardiac pacemakers or defibrillators.

- Before using the Wireless Charger (Qi) near people who use medical devices, ask the medical device manufacturer or your physician if radio waves from the Wireless Charger (Qi) will affect the device.
- The Wireless Charger (Qi) can be disabled to prevent it from affecting medical devices. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.

### Heed the following cautions. Otherwise, the Wireless Charger (Qi) may malfunction or be damaged, which could cause a fire, burns due to heat generation, or an accident such as electrical shock.

- Do not install, remove, disassemble, or change the wiring of the Wireless Charger (Qi). If the Wireless Charger (Qi) needs to be installed or removed, consult an expert repairer (we recommend an Authorised Mazda Repairer).
- Do not use the Wireless Charger (Qi) when it is malfunctioning. In addition, if smoke, abnormal noise, or abnormal smell is emitted from the Wireless Charger (Qi), stop the vehicle in a safe place, switch the ignition OFF, and consult an expert repairer (we recommend an Authorised Mazda Repairer).

- When using the Wireless Charger (Qi) to store items on, turn off the Wireless Charger (Qi).
- Do not place any metal object between the charging area and the mobile device. Also, do not apply items such as a metallic sticker to the Wireless Charger (Qi).
- When charging, do not place any item other than the mobile device to be charged on the Wireless Charger (Qi). In addition, do not place any metal object, IC card, coin, or magnetic item near the charging area.
- Remove dust or dirt from the charging area before use.
- Do not apply strong force or impact to the Wireless Charger (Qi) or get it wet.
- Use only mobile devices which support the Wireless Charger (Qi).

# How to use

- 1. Start the engine.
- The power for the Wireless Charger (Qi) turns on and the LED indicator turns on.
  - The power can be turned on/off by pressing the power button on the Wireless Charger (Qi) for about 3 seconds.
  - When the power is turned off, the LED indicator turns off.
- Place a device compliant with the Qi Wireless Charging standard in the centre of the charging area on the tray.
  - The LED indicator turns on in amber or green when charging starts.

- For details on the LED indicator, refer to the following LED indicator table.
- Charging starts when all the doors and liftgate are closed.
- The function to reduce noise on the radio operates if the power button is pressed for about 1 second during charging. Use it when noise occurs on the radio due to interference by the Wireless Charger (Qi). Press the power button again for about 1 second to cancel the function.

# **LED** indicator

The status of the Wireless Charger (Qi) can be checked using the LED indicator.

Status	Illumination/flash pattern
OFF	Does not turn on
Stand-by (charging is pos- sible)	Turns on in white
Normal charging	Turns on in amber
Fast charging*1	Turns on in green
Normal charging (charging efficiency is low)	Flashes in amber
Fast charging <sup>*1</sup> (charging efficiency is low)	Flashes in green
Stand-by (charging is not possible)	Flashes in white
Charging is stopped due to high temperature or foreign matter detected	Flashes in red
Charging is stopped due to internal problem or mal- function	Turns on in red

\*1 Some mobile devices can switch between normal charging and fast charging.

# 

- While a mobile device is placed on the charging area, keep the vehicle key away from the Wireless Charger (Qi). The vehicle key may not be detected due to radio wave interference by the Wireless Charger (Qi).
- Charging may not operate normally under the following conditions:
  - > The mobile device is fully charged.
  - There is foreign matter between the mobile device and the charging area.
  - The temperature of the mobile device is high.
  - The mobile device is placed with the charging side facing upward.
  - The mobile device is placed in a position extremely deviating from the centre of the charging area.
  - Your vehicle is in an area where strong radio waves or electrical noise occur such as near a television tower, power plant, or airport.
  - The Near Field Communication (NFC) function setting of the mobile device is on (depends on the model of the mobile device).
- Keep the following items away from the charging area. Otherwise the data stored on the mobile device could be erased or the device could malfunction.
  - Magnetic items such as magnets, magnetic cards, and magnetic recording media.
  - High precision devices such as wristwatches.

- Before using the Wireless Charger (Qi), make sure to back up the data stored on the mobile device. The data on the mobile device could be deleted.
- Do not wipe the Wireless Charger (Qi) using oil, alcohol, or thinner, or spray hairspray or insecticide onto it. Otherwise, it could cause damage or cracking.
- Do not leave mobile devices in the cabin. The temperature inside the cabin may become very hot, causing the devices to malfunction.

# NOTE

- A mobile device larger than the charging area cannot be charged. In addition, even if the mobile device is in the charging area, the charging efficiency may decrease or charging may not be possible depending on where the mobile device is placed.
- If the function to reduce noise on the radio is used, fast charging may be disabled depending on the mobile device being charged.
- If the LED indicator is flashing in amber or green, the charging efficiency is low. Check that there is no foreign matter between the mobile device and the charging area, and position the mobile device near the centre of the charging area.

- Depending on the mobile device case or accessories used, the mobile device may not charge, or the charging efficiency may be reduced resulting in a longer charging time. If charging does not start even when a mobile device is placed on the charging area, remove the mobile device case or any accessories.
- While the keyless entry is operating, charging may stop temporarily, however, this does not indicate a problem.
- During charging, the Wireless Charger (Qi) and the mobile device become warm, however, this does not indicate a problem.
- If the mobile device temperature rises during charging, charging may stop due to the protection function of the device.
   If that happens, wait until the mobile device cools down sufficiently and then recharge it.
- When using the Wireless Charger (Qi), applications using the Near Field Communication (NFC) function may activate, but this does not indicate a problem with the Wireless Charger (Qi).

• While i-stop is operating, charge amount may be temporarily restricted and charging may be temporarily cancelled, however, this does not indicate a problem.

## Trademarks

"Qi" and the Qi symbol are trademarks or registered trademarks of the Wireless Power Consortium (WPC).



# **Cup Holder**

# 


# Never use a cup holder to hold hot liquids while the vehicle is moving:

Using a cup holder to hold hot liquids while the vehicle is moving is dangerous. If the contents spill, you could be scalded.

# Do not put anything other than cups or drink cans in cup holders:

Putting objects other than cups or drink cans in a cup holder is dangerous. During sudden braking or manoeuvring, occupants could be hit and injured, or objects could be thrown around the vehicle, causing interference with the driver and the possibility of an accident. Only use a cup holder for cups or drink cans.

# ▼ Front

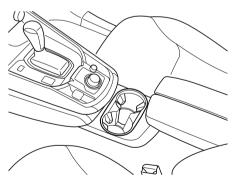


# **▼** Rear

# Second-row seat

Cup holders are located in the armrest/ second-row seat console.


### 6:4 split adjustable-type bench seat type

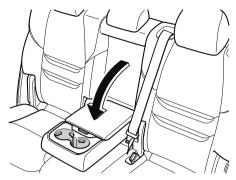

# Captain seat and second-row seat console type




### Captain seat and walk through type

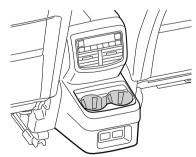


# Third-row seat

Cup holders are located in the third-row seat side trims.

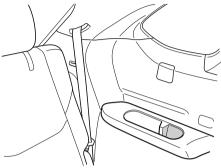

# **Bottle Holder**

Bottle holders are on the inside of the doors.

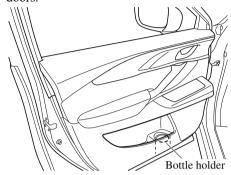



Do not use the bottle holders for containers without caps. The contents may spill when opening/closing the door or while driving the vehicle.

# **Storage Compartments**

# 

### Keep storage boxes closed when driving:

Driving with the storage boxes open is dangerous. To reduce the possibility of injury in an accident or a sudden stop, keep the storage boxes closed when driving.

# When loading cargo, make sure that it is completely secured:

If the cargo is not completely secured, it may move or collapse while driving or during sudden braking, resulting in injury or an accident.

# Do not put articles in storage spaces with no lid:

Putting articles in storage spaces with no lid is dangerous as they could be thrown around the cabin if the vehicle is suddenly accelerated and cause injury depending on how the article is stored.





Do not leave lighters or eyeglasses in the storage boxes while parked under the sun. A lighter could explode or the plastic material in eyeglasses could deform and crack from high temperature.

# ▼ Overhead Console

This console box is designed to store eyeglasses or other accessories.


Push and release to open.

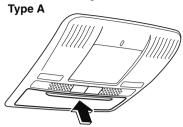

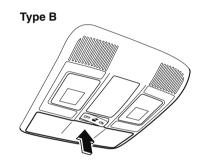

# ▼ Glove Compartment

To open the glove compartment, pull the latch toward you.

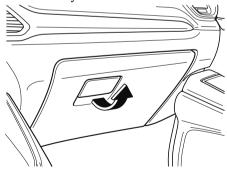


To close the glove compartment, firmly press in the centre of the glove compartment lid.


# ▼ Centre Console

To open, push the button.

### Front

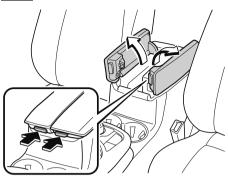

# Rear\*

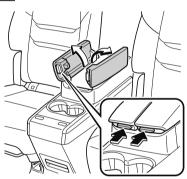

# ▼ (Second-row Seat Console Box with Armrest) Storage Box


# 

Store the armrests when the storage box is not in use. Otherwise, your foot might get caught when changing seats and fall down resulting in injury.



# ▼ Armrest Box\*


To open, push the button and pull up the lid.

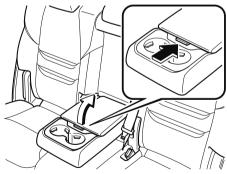

# ▼ Luggage Compartment


# Cargo Securing Loops

Use the loops in the luggage compartment to secure cargo with a rope or net. The tensile strength of the loops is 196 N (20 kgf, 44 lbf). Do not apply excessive force to the loops as it will damage them.

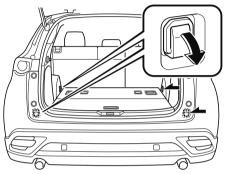

# Cargo Sub-Compartment

Open the cover to put small items in the cargo sub-compartment.

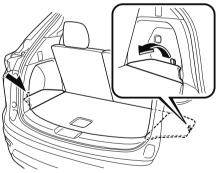


#### NOTE Loading golf bags

(Some golf bags may not fit using the following methods depending on their sizes.) Up to two golf bags can be carried in the luggage compartment.


Bottom: Place the first golf bag in the luggage compartment with the bottoms pointed to the left.

*Top: Place the second golf bag with its bottom pointed to the right in the luggage compartment.* 

### Bottom

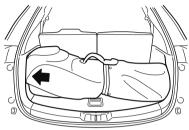

Тор

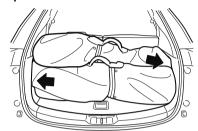


The arrows indicate the bottoms of the golf bags.

# ▼ Shopping Bag Hook

The shopping bag hook can be used for hanging shopping bags.



Do not hang excessive weight on the shopping bag hook as it could be damaged.

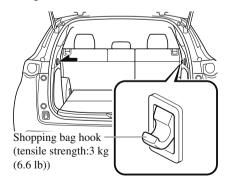

# ▼ Rear Coat Hooks



# Never hang heavy or sharp objects on the assist grips and coat hooks:

Hanging heavy or sharp-ended objects such as a coat hanger from the assist grips or coat hooks is dangerous as they can fly off and hit an occupant in the cabin if a curtain air bag was to deploy, which could result in serious injury or death.


Always hang clothes on the coat hooks and the assist grips without hangers.

Coat hook

# Sunshade (Rear Door Window)\*

The sunshades are equipped to the windows on both sides of the second-row seats.

Hold the tab and pull the sunshade upward and hook the slots.

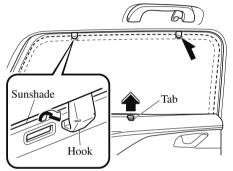

To return the sunshade to its original position, unhook the sunshade and retract it slowly.

# 

- Securely hook the sunshade. Otherwise, the sunshade may retract suddenly resulting in injury such as fingers get pinched.
- Use the sunshades only when the windows are fully closed. Using a sunshade while a window is open could cause is to unhook and flap around inside the cabin where it can hit someone sitting near the window, resulting in injury.

# 6

# Maintenance and Care

How to keep your Mazda in top condition.

Brake Fluid Window and Headlight Washer	. 6-23
Fluid	
Body Lubrication	.6-25
Wiper Blades	. 6-25
Battery	. 6-30
Key Battery Replacement	.6-33
Tyres	. 6-35
Light Bulbs	. 6-39
Fuses	. 6-49

Appearance Care	6-55
Exterior Care	6-55
Interior Care	6-61

# Introduction

Be careful not to hurt yourself when inspecting your vehicle, replacing a tyre, or doing some kind of maintenance such as car washing.

In particular, wear thick work gloves such as cotton gloves when touching areas that are difficult to see while inspecting or working on your vehicle. Doing inspections or procedures with your bare hands could cause injury.

If you are unsure about any procedure this manual describes, we strongly urge you to have a reliable and qualified technician perform the work, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Authorised Mazda technicians and genuine Mazda parts are dedicated to your vehicle. Without this expertise and the parts that have been designed and made especially for your Mazda, inadequate, incomplete, and insufficient servicing may result in problems. This could lead to vehicle damage or an accident and injuries.


For expert advice and quality service, consult an expert repairer (we recommend an Authorised Mazda Repairer).

The owner should retain evidence that proper maintenance has been performed as prescribed.

A claim against a warranty will not qualify if it results from lack of maintenance and not from defective material or authorised workmanship.

The malfunction diagnosis connector is designed exclusively for connecting the specially designed device to perform on-board diagnosis.

Do not connect any devices other than the specially designed malfunction diagnosis devices for servicing. If any device other than the malfunction diagnosis device is connected, it may affect the vehicle's electrical devices or lead to damage such as battery depletion.

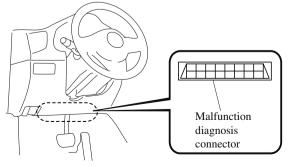

# **Scheduled Maintenance**

### NOTE

*After the prescribed period, continue to follow the described maintenance at the recommended intervals.* 

# Emission control and related systems

The ignition and fuel systems are highly important to the emission control system and to efficient engine operation. Do not tamper with them.

All inspections and adjustments must be made by an expert repairer, we recommend an Authorised Mazda Repairer.

# Maintenance Table

Each maintenance table is based on the environmental conditions for each country and region.

Perform the appropriate maintenance according to the maintenance table for your country or region.

For the maintenance table that applies to your country or region, refer to the following guide.

Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble
ALBANIA	1	ALGERIA	4	ANDORRA	1
ANGOLA	4	ANTIGUA	4	ARMENIA	2
ARUBA	4	AUSTRIA	1	AZERBAIJAN	2
B.VIRGIN	4	BAHRAIN	4	BARBADOS	4
BELARUS	2	BELGIUM	1	BERMUDA	4
BOLIVIA	4	BOSNIA AND HER- ZEGOVINA	1	BOTSWANA	4
BRUNEI	4	BULGARIA	1	BURUNDI	4
CAMBODIA	4	CAMEROON	4	CANARY ISLANDS	4
CHILE	4	COLOMBIA	4	COMMONWEALTH OF DOMINICA	4
COSTA RICA	4	CROATIA	1	CURACAO	4
CYPRUS	4	CZECH	1	DENMARK	1
DOMINICAN RE- PUBLIC (LHD)	4	ECUADOR	4	4	
EL SALVADOR	4	ESTONIA	1	ETHIOPIA	4
F.GUIANA	4	FAEROE	4	FIJI	4
FINLAND	1	FRANCE	1	GABON	4
GEORGIA	4	GERMANY	1	GHANA	4
GREECE	1	GRENADA	4	GUADELOUPE	4
GUATEMALA	4	HAITI	4	HONDURAS	4
HONG KONG	4	HUNGARY	1	ICELAND	1
INDONESIA	4	IRAN	4	IRAQ	4
IRELAND	1	ISRAEL	3	ITALY	1
IVORY COAST	4	JAMAICA	4	JORDAN	4
KAZAKHSTAN	2	KENYA	4	KUWAIT	4
LAOS	4	LATVIA	1	LEBANON	4

## ▼ Country/Region Maintenance Table Guide

Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble	Country/Region	Mainte- nance Ta- ble
LESOTHO	4	LIBYA	4	LIECHTENSTEIN	1
LITHUANIA	1	LUXEMBOURG	1	MACAU	4
MACEDONIA	1	MADAGASCAR	4	MALAYSIA	4
MALTA	4	MARSHALL IS- LANDS	4	MARTINIQUE	4
MAURITIUS	4	MOLDOVA	1	MONACO	1
MONGOLIA	4	MONTENEGRO	1	MOROCCO	4
MOZAMBIQUE	4	MYANMAR	4	NAMIBIA	4
NEPAL	4	NEW CALEDONIA	4	NICARAGUA	4
NIGERIA	4	NORWAY	1	OMAN	4
PANAMA	4	PAPUA NEW GUIN- EA	4	PARAGUAY	4
PERU	4	POLAND	1	PORTUGAL	1
QATAR	4	REUNION	4	ROMANIA	1
RUSSIA	2	SAN MARINO	1	SAUDI ARABIA	4
SERBIA	1	SEYCHELLES	4	SINGAPORE	4
SLOVAKIA	1	SLOVENIA	1	SOUTH AFRICA	4
SPAIN	1	SRI LANKA	4	ST.LUCIA	4
ST.MARTIN	4	ST.VINCENT	4	SURINAM	4
SWAZILAND	4	SWEDEN	1	SWITZERLAND	1
SYRIA	4	TAHITI	4	TAIWAN	4
TANZANIA	4	THAILAND	4	THE NETHER- LANDS	1
THE PHILIPPINES	4	TRINIDAD AND TO- BAGO	4	TUNISIA	4
TURKEY	4	UAE	4	UK	1
UKRAINE	1	URUGUAY	4	USTT	4
VANUATU	4	VATICAN	1	VIETNAM	4
ZIMBABWE	4	Country/Region, not listed in the chart	4		

# Maintenance and Care Scheduled Maintenance

## ▼ Table 1

Ukraine

My Mazda Service

My Mazda Service is the maintenance monitoring feature that alerts you of maintenance needs by turning on the wrench indicator light and/or displaying a specific message in the instrument panel. In any case, every maintenance must be done within 15,000 km or 12 months at the latest after the previous maintenance, whichever of the three events (15,000 km, 12 months or display/wrench indication) occurs first.

Maintenance item	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th
Engine oil & filter <sup>*1*2</sup>	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts <sup>*3</sup>			Ι			Ι			Ι			Ι
Cooling system		Ι		Ι		Ι		Ι		Ι		Ι
Engine coolant*4	Rep	place a	at first	195,0		m or 1 m or 3	2		er tha	t, eve	ry 90,	000
Air filter <sup>*5</sup>	Replace every 60,000 km or 3 years.											
Fuel lines and hoses	I I I I I I I									Ι		
Spark plugs	Ι	Ι	Ι	R	Ι	Ι	Ι	R	Ι	Ι	Ι	R
Evaporative system (if equipped)			Ι			Ι			Ι			Ι
Battery <sup>*6</sup>	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Brake lines, hoses and connections	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Brake fluid <sup>*7</sup>		R		R		R		R		R		R
Disc brakes	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Steering operation and linkages		Ι		Ι		Ι		Ι		Ι		Ι
Front and rear suspension, ball joints and wheel bearing axial play		Ι		Ι		Ι		Ι		Ι		Ι
Driveshaft dust boots		Ι		Ι		Ι		Ι		Ι		Ι
Exhaust system and heat shields					Ι					Ι		
Bolts and nuts on chassis and body		Т		Т		Т		Т		Т		Т
Body condition (for rust, corrosion and per- foration)			•		Ins	spect a	annua	lly.	•		•	
Cabin air filter (if equipped)		R		R		R		R		R		R
Tyres (including spare tyre) (with inflation pressure adjustment) <sup>*8</sup>	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Emergency flat tyre repair kit (if equip- ped) <sup>*9</sup>	Inspect annually.											
Self-test with Mazda Modular Diagnostic System (M-MDS) <sup>*10*11</sup> SKYACTIV-G	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι

#### Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

- R: Replace
- C: Clean
- T: Tighten
- L: Lubricate
- D: Drain

#### Remarks:

- \*1 If the vehicle is operated primarily under any of the following conditions, replace the engine oil and oil filter at every 7,500 km (4,650 miles) or shorter.
  - a) Purpose of vehicle use is police car, taxi or driving school car.
  - b) Driving in dusty conditions
  - c) Extended periods of idling or low speed operation
  - d) Driving for long period in cold temperatures or driving regularly at short distance only
  - e) Driving in extremely hot conditions
  - f) Driving in mountainous conditions continually
- \*2 The vehicle calculates the remaining oil life based on engine operating conditions and lets you know when an oil change is due by illuminating the wrench indicator light in the instrument cluster.

Replace the engine oil and filter when message/wrench indicator light is ON. And they must be changed at least once a year or within 15,000 km since last engine oil and filter change.

The system must be reset whenever replacing the engine oil regardless of the message/wrench indicator light display.

\*3 Also inspect the air conditioner drive belts, if equipped.

If the vehicle is operated primarily under any of the following conditions, inspect the drive belts at every 15,000 km or 12 months.

- a) Driving in dusty conditions
- b) Extended periods of idling or low speed operation
- c) Driving for long period in cold temperatures or driving regularly at short distance only
- d) Driving in extremely hot conditions
- e) Driving in mountainous conditions continually
- f) Driving for long period in extremely wet or heavy rain condition
- \*4 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- \*5 If the vehicle is operated in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- \*6 Inspect the battery electrolyte level, specific gravity and outer appearance. The sealed battery only requires an outer appearance inspection.
- <sup>\*7</sup> If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- \*8 Tyre rotation is recommended every 10,000 km.
- \*9 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- \*10 If DTC P1200 is stored, clean the fuel system by using Mazda genuine deposit cleaner. If the required tool (M-MDS) is not available, clean the fuel system by using Mazda genuine deposit cleaner without performing self-test.

Using non-genuine deposit cleaner could cause internal damage to the fuel system.

- \*11 If the vehicle is operated primarily under any of the following conditions, perform "Self-test with Mazda Modular Diagnostic System (M-MDS)" at every 7,500 km (4,650 miles).
  - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.

b) Driving under extremely high temperature conditions.

# ▼ Table 2

	oer of	f mon	ths o	or kilo	ometi	es, w	hiche	ever o	comes	s first	t <b>.</b>					
Maintenance Interval	Months	12	24	36	48	60	72	84	96	108	120	132	144			
	×1000 km	15	30	45	60	75	90	105	120	135	150	165	180			
Drive belts <sup>*1</sup>		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
Engine oil	Russia/ Belarus/ Kazakhstan <sup>*2</sup>	Re	place	whe	n indi			N. (M 0 km		terval	:12m	onths	or			
	Azerbaijan/ Armenia <sup>*3*4*5</sup>			Re	place	ever	y 5,00	00 km	n or 6	mont	hs.					
Engine oil filter	-			Replace when indicator is ON. (Max interval:12months or 15,000 km)												
	Azerbaijan/ Armenia <sup>*6</sup>		Replace every 10,000 km or 12 months.													
Cooling system		I I I I I I														
Engine coolant*7		R	eplac	e at f	irst 19	95,00 90,00					er that	t, eve	ry			
Air filter <sup>*8</sup>	Russia/ Belarus/ Kazakhstan	С	С	R	С	С	R	С	С	R	С	С	R			
	Azerbaijan/ Armenia	С	R	С	R	С	R	С	R	С	R	С	R			
Fuel filter	Russia/ Belarus/ Kazakhstan	Replace every 120,000 km.														
	Azerbaijan/ Armenia				Re	eplace	e ever	y 60,	000 k	m.						
Fuel lines and hoses			Ι		Ι		Ι		Ι		Ι		Ι			
Spark plugs		Ι	Ι	Ι	R	Ι	Ι	Ι	R	Ι	Ι	Ι	R			
Evaporative system (if equippe	d)				Ι				Ι				Ι			
Battery*9		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
Brake lines, hoses and connect	ions	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
Brake fluid <sup>*10</sup>			R		R		R		R		R		R			
Parking brake	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι				
Disc brakes	Disc brakes					Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
Steering operation and linkages	teering operation and linkages				Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
ront and rear suspension, ball joints and wheel earing axial play			Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			

	Numb	per of	f mon	ths o	r kilo	ometi	·es, w	hiche	ever c	comes	s first		
Maintenance Interval	Months	12	24	36	48	60	72	84	96	108	120	132	144
	×1000 km		30	45	60	75	90	105	120	135	150	165	180
Driveshaft dust boots	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	
Exhaust system and heat shields	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	
Bolts and nuts on chassis and bod	Т	Т	Т	Т	Т	Т	Т	Т	Т	Т	Т	Т	
Hinges and catches	L	L	L	L	L	L	L	L	L	L	L	L	
All electrical system		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Body condition (for rust, corrosic tion)	on and perfora-		•		•	Ins	pect a	annua	lly.				
Cabin air filter (if equipped)			R		R		R		R		R		R
Tyres (including spare tyre) (with inflation pressure adjustment)*11			Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Emergency flat tyre repair kit (if	Inspect annually.												

#### Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

- R: Replace
- L: Lubricate
- C: Clean
- T: Tighten
- D: Drain

#### Remarks:

1 Also inspect the air conditioner drive belts, if equipped.

If the vehicle is operated primarily under any of the following conditions, inspect the drive belts at every 7,500 km or 6 months.

- a) Driving in dusty conditions
- b) Extended periods of idling or low speed operation
- c) Driving for long period in cold temperatures or driving regularly at short distance only
- d) Driving in extremely hot conditions
- e) Driving in mountainous conditions continually
- f) Driving for long period in extremely wet or heavy rain condition
- \*2 The vehicle calculates the remaining oil life based on engine operating conditions and lets you know when an oil change is due by illuminating the wrench indicator light in the instrument cluster.

Replace the engine oil and filter when message/wrench indicator light is ON. And they must be changed at least once a year or within 15,000 km since last engine oil and filter change.

The system must be reset whenever replacing the engine oil regardless of the message/wrench indicator light display.

- \*3 If the vehicle is operated primarily under any of the following conditions, replace the engine oil at every 2,500 km or 3 months.
  - a) Purpose of vehicle use is police car, taxi or driving school car.
  - b) Driving in dusty conditions
  - c) Extended periods of idling or low speed operation
  - d) Driving for long period in cold temperatures or driving regularly at short distance only
  - e) Driving in extremely hot conditions
  - f) Driving in mountainous conditions continually

- \*4 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- \*5 Replace the engine oil when message/wrench indicator light is ON.
- \*6 If the vehicle is operated primarily under any of the following conditions, replace the engine oil filter at every 5,000 km or 6 months.
  - a) Purpose of vehicle use is police car, taxi or driving school car.
  - b) Driving in dusty conditions
  - c) Extended periods of idling or low speed operation
  - d) Driving for long period in cold temperatures or driving regularly at short distance only
  - e) Driving in extremely hot conditions
  - f) Driving in mountainous conditions continually
- \*7 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- \*8 If the vehicle is operated in very dusty or sandy areas, clean the air filter at every 7,500 km or 6 months.
- \*9 Inspect the battery electrolyte level, specific gravity and outer appearance. The sealed battery only requires an outer appearance inspection.
- \*10 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- \*11 Tyre rotation is recommended every 10,000 km.
- \*12 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.

	Nı	ımbe	er of	mon	ths o	r kil	omet	res (	mile	s), w	hich	ever	com	es fir	st.		
Maintenance Inter-	Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96
val	×1000 km	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160
	×1000 miles	6.25	12.5	18.75	25	31.25	37.5	43.75	50	56.25	62.5	68.75	75	81.25	87.5	93.75	100
Spark plugs <sup>*1</sup>					R	epla	ce ev	ery 6	50,00	0 km	(37,	500 1	niles	s).			
Fuel filter	Except Tai- wan				R	epla	ce ev	ery 6	50,00	0 km	(37,	500 1	niles	s).			
	Taiwan				R	epla	ce ev	ery 8	30,00	0 km	(50,	000 1	niles	s).			
Evaporative system (i	if equipped)		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
Ez lo tri	Except be- low coun- tries	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil*2*3*4	Georgia/ Cambodia/ Gabon/ Ghana/ Cameroon/ Burundi/ Mozambi- que/ Mongolia/ Tanzania/ Paraguay	Replace every 5,000 km (3,125 miles) or 6 months.															

## ▼ Table 4

	Nu	ımbe	er of	mon	ths o	r kil	ome	tres (	mile	s), w	hich	ever	com	es fir	·st.					
Maintenance Inter-	Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96			
val	×1000 km	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160			
	×1000 miles	6.25	12.5	18.75	25	31.25	37.5	43.75	50	56.25	62.5	68.75	75	81.25	87.5	93.75	100			
	Except be- low coun- tries	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R			
	Georgia/ Cambodia			I	Repla	ice ev	very	10,00	00 kn	n (6,2	250 n	niles)	) or 1	year	:					
Engine oil filter*2	Gabon/ Ghana/ Cameroon/ Burundi/ Mozambi- que/ Mongolia/ Tanzania/ Paraguay	Replace every 5,000 km (3,125 miles) or 6 months.         I																		
Drive belts <sup>*5</sup>		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
Cooling system			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι			
Engine coolant*6		Replace at first 200,000 km (125,000 miles) or 10 years; after that, every 100,000 km (62,500 miles) or 5 years.							ery											
Air filter <sup>*7</sup>	Except be- low coun- tries		С		с		R		с		С		R		С		с			
	Georgia		С		R		С		R		C		R		С		R			
Fuel lines and hoses			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι			
Battery <sup>*8</sup>			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι			
Brake lines, hoses an	d connections		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι			
Brake fluid <sup>*9</sup>		Ι	Ι	Ι	R	Ι	Ι	Ι	R	Ι	Ι	Ι	R	Ι	Ι	Ι	R			
Parking brake		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
Power brake unit (Br and hoses	ake booster)		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι			
Disc brakes		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι			
Steering operation an	d linkages		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι			
Front and rear susper joints and wheel bear			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι			
Driveshaft dust boots					Ι				Ι				Ι				Ι			
Exhaust system and h	neat shields		-		I	nspe	ct ev	ery 8	0,000	0 km	(50,	000 n	niles	).						
Bolts and nuts on chassis and body			Т		Т		Т		Т		Т		Т		Т		Т			
Body condition (for r and perforation)	ust, corrosion	ion Inspect annually.																		

	Nı	ımbe	er of	mon	ths o	r kil	omet	res (	mile	s), w	hich	ever	com	es fir	st.			
Maintenance Inter-	Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	
val	×1000 km	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	
	×1000 miles	6.25	12.5	18.75	25	31.25	37.5	43.75	50	56.25	62.5	68.75	75	81.25	87.5	93.75	100	
Cabin air filter (if equ	ipped)		R		R		R		R		R		R		R		R	
Tyres (including spar inflation pressure adj	• / <	Ι	Ι	I	Ι	Ι	Ι	I	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	
Tyre rotation		Rotate every 10,000 km (6,250 miles).																
Emergency flat tyre r equipped) <sup>*10</sup>	epair kit (if	,					Inspect annually.											
Self-test with Mazda Modular Diagnostic System (M-MDS)*11*12*13 SKYACTIV-G	Except Thai- land	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	I	Ι	Ι	Ι	Ι	Ι	
Fuel system clean. *14*15 SKYACTIV-G	Thailand	С	С	С	С	С	С	С	С	с	С	С	С	с	С	С	с	

#### Chart symbols:

I: Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

- R: Replace
- L: Lubricate
- C: Clean
- T: Tighten

D: Drain

#### Remarks:

\*1 In the countries below, inspect the spark plugs at every 10,000 km (6,250 miles) or 1 year before replacing them at the said interval.

Algeria, Angola, Bahrain, Bolivia, Burundi, B.Virgin, Cambodia, Cameroon, Chile, Costa Rica, Cote d'Ivoire, Curacao, El Salvador, Gabon, Ghana, Georgia, Guatemala, Haiti, Honduras, Hong Kong, Iran, Jordan, Kenya, Macau, Madagascar, Malaysia, Mongolia, Mozambique, Myanmar, Nigeria, Nicaragua, Oman, Panama, Papua New Guinea, Paraguay, Peru, Philippines, Senegal, Seychelles, Syria, Tanzania, United Arab Emirates, Vietnam, Zaire, Zimbabwe

- \*2 If the vehicle is operated primarily under any of the following conditions, replace the engine oil and oil filter more often than the recommended intervals.
  - a) Purpose of vehicle use is police car, taxi or driving school car.
  - b) Driving in dusty conditions
  - c) Extended periods of idling or low speed operation
  - d) Driving for long period in cold temperatures or driving regularly at short distance only
  - e) Driving in extremely hot conditions
  - f) Driving in mountainous conditions continually
- \*3 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- \*4 Replace the engine oil when message/wrench indicator light is ON.
- \*5 Also inspect the air conditioner drive belts, if equipped.

If the vehicle is operated primarily under any of the following conditions, inspect the drive belts more often than the recommended intervals.

- a) Driving in dusty conditions
- b) Extended periods of idling or low speed operation
- c) Driving for long period in cold temperatures or driving regularly at short distance only
- d) Driving in extremely hot conditions
- e) Driving in mountainous conditions continually
- f) Driving for long period in extremely wet or heavy rain condition
- \*6 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- \*7 If the vehicle is operated in very dusty or sandy areas, clean and if necessary, replace the air filter more often than the recommended intervals.
- \*8 Inspect the battery electrolyte level, specific gravity and outer appearance. If the vehicle is operated in extremely hot and cold areas, inspect the battery electrolyte level, specific gravity and appearance every 10,000 km (6,250 miles) or 6 months. The sealed battery only requires an outer appearance inspection.
- \*9 If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, replace the brake fluid annually.
- \*10 Check the tyre repair fluid expiration date every year when performing the periodic maintenance. Replace the tyre repair fluid bottle with new one before the expiration date.
- \*11 If DTC P1200 is stored, clean the fuel system by using Mazda genuine deposit cleaner. If the required tool (M-MDS) is not available, clean the fuel system by using Mazda genuine deposit cleaner without performing self-test.

Using non-genuine deposit cleaner could cause internal damage to the fuel system.

- \*12 If the vehicle is driven primarily under any of the following conditions, perform "Mazda Modular Diagnostic System (M-MDS)" at every 5,000 km.
  - a) The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
  - b) Driving under extremely high temperature conditions.
- \*13 Applicable countries are as follows:

SKYACTIV-G: Algeria, Angola, Antigua, Aruba, Bahrain, Barbados, Bermuda, Bolivia, Botswana, Brunei, Burundi, Cambodia, Cameroon, Colombia, Common Wealth of Dominica, Curacao, Ecuador, El Salvador, Gabon, Ghana, Grenada, Haiti, Honduras, Indonesia, Iraq, Ivory coast, Jordan, Kenya, Kuwait, Laos, Lesotho, Libya, Macau, Madagascar, Malaysia, Marshall islands, Mongolia, Morocco, Myanmar, Namibia, Nicaragua, Nigeria, Oman, Paraguay, Peru, Qatar, Seychelles, South Africa, Sri Lanka, St. Lucia, St. Martin, St. Vincent, Syria, Tanzania, Philippines, Trinidad and Tobago, Tunisia, USTT, Vanuatu, Vietnam, Zimbabwe

- \*14 Use Mazda genuine deposit cleaner. Using non-genuine deposit cleaner could cause an internal damage to the fuel system.
- \*15 If the vehicle is operated primarily under any of the following conditions, clean the fuel system at every 5,000 km (3,125 miles).
  - a) Purpose of vehicle use is police car, taxi or driving school car.
  - b) Extended periods of idling or low speed operation
  - c) Driving in extremely hot conditions

# **Owner Maintenance Precautions**

## **Routine Service**

We highly recommend that these items be inspected before driving.

- Engine Oil Level (page 6-21)
- Engine Coolant Level (page 6-22)
- Brake Fluid Level (page 6-23)
- Washer Fluid Level (page 6-24)
- Battery Maintenance (page 6-31)
- Tyre Inflation Pressure (page 6-35)

Improper or incomplete service may result in problems. This section gives instructions only for items that are easy to perform.

As explained in the Introduction (page 6-2), several procedures can be done only by a qualified service technician with special tools.

Improper do-it yourself maintenance during the warranty period may affect warranty coverage. For details, read the separate Mazda Warranty statement provided with the vehicle. If you are unsure about any servicing or maintenance procedure, have it done by an expert repairer (we recommend an Authorised Mazda Repairer).

There are strict environmental laws regarding the disposal of waste oil and fluids. Please dispose of your waste properly and with due regard to the environment.

Entrust the oil and fluid changes of your vehicle to an expert repairer (we recommend an Authorised Mazda Repairer).

# 

Do not perform maintenance work if you lack sufficient knowledge and experience or the proper tools and equipment to do the work. Have maintenance work done by a qualified technician:

Performing maintenance work on a vehicle is dangerous if not done properly. You can be seriously injured while performing some maintenance procedures.

## If you must run the engine while working under the bonnet, make certain that you remove all jewellery (especially rings, bracelets, watches, and necklaces) and all neckties, scarves, and similar loose clothing before getting near the engine or cooling fan which may turn on unexpectedly:

Working under the bonnet with the engine running is dangerous. It becomes even more dangerous when you wear jewellery, loose clothing or have long hair or a long beard. Either can become entangled in moving parts and result in injury.



# $\overset{\odot}{\sim}$ Pull over to a safe location, then switch the ignition off and make sure the fan is not running before attempting to work near the cooling fan:

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.

## Do not leave items in the engine compartment:

After you have finished checking or doing servicing in the engine compartment, do not forget and leave items such as tools or rags in the engine compartment. Tools or other items left in the engine compartment could cause engine damage or a fire

Tools or other items left in the engine compartment could cause engine damage or a fire leading to an unexpected accident.

# Bonnet


# 

# Always check that the bonnet is closed and securely locked:


A bonnet that is not closed and securely locked is dangerous as it could fly open while the vehicle is moving and block the driver's vision which could result in a serious accident.

# ▼ Opening the Bonnet


1. With the vehicle parked, pull the release handle to unlock the bonnet.

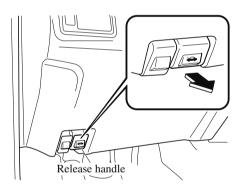

2. Insert your hand into the bonnet opening, slide the latch lever to the right, and lift up the bonnet.

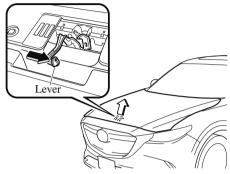


3. Grasp the support rod in the padded area and secure it in the support rod hole indicated by the arrow to hold the bonnet open.

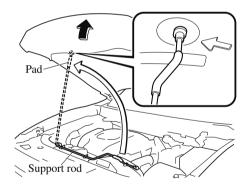

# ▼ Closing the Bonnet

- 1. Check under the bonnet area to make certain all filler caps are in place and all loose items (e.g. tools, oil containers, etc.) have been removed.
- 2. Lift the bonnet, grasp the padded area on the support rod, and secure the support rod in the clip. Verify that the support rod is secured in the clip before closing the bonnet.

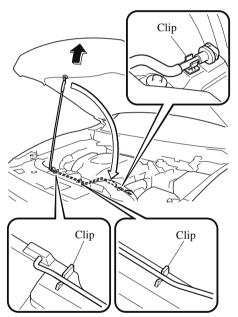


3. Lower the bonnet slowly to a height of about 20 cm (7.9 in) above its closed position and then let it drop.



When closing the bonnet, do not push it excessively such as by applying your weight. Otherwise, the bonnet could be deformed.

# Maintenance and Care Owner Maintenance

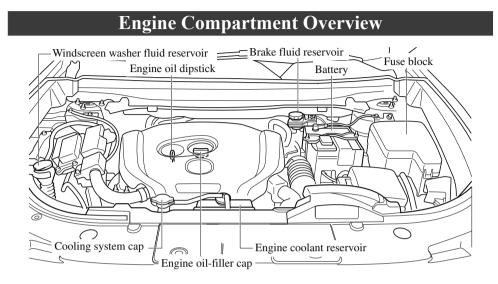

# **Engine Oil**

### NOTE

Changing the engine oil should be done by an expert repairer (we recommend an *Authorised Mazda Repairer*).

## ▼ Recommended Oil

In order to keep the maintenance interval (page 6-3) and to protect the engine from damage caused by poor lubrication, it is vitally important to make use of engine oil with the correct specification. Do not use oils which do not meet the following specifications or requirements. Use of unsuitable oil may lead to engine damage which is not covered by the Mazda Warranty.

### Europe and Taiwan

Temperatu	ire Range S	SAE Viscosity Numbers
Grade		$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Recomm	ended oils
Mazda Original Oil Ultra 5W-30		5W-30
	Alternative	Oil Quality
API SN or higher, or ACEA A5/B5	0W-30	0W-30
The rest of higher, of hearthouse	5W-30	5W-30
Except Europe and Taiwan		
Temperat	ure Range	SAE Viscosity Numbers
Grade		$^{\circ}C \xrightarrow{-40 -30 -20 -10 0 10 20 30 40} \\ \stackrel{\frown}{\frown} \xrightarrow{1 -1 -1 -1 -1 -1 -1 -1} \\ ^{\circ}F \xrightarrow{-40 -20 0 20 40 60 80 100}$
API <b>SM</b> or higher		10W-30           5W-30           0W-30

Engine oil viscosity, or thickness, has an effect on fuel economy and cold-weather operation (starting and oil flow).

Low-viscosity engine oils can provide improved fuel economy and cold-weather performance.

When choosing an oil, consider the temperature range your vehicle will operate in before the next oil change.

Then select the recommended viscosity from the chart.

# 

Using oils of viscosity besides those recommended for specific temperature ranges could result in engine damage.

## NOTE

• It is normal for all engines to consume engine oil under normal driving conditions. Engine oil consumption may be as high as 0.8 L/1,000 km (1 L/800 miles). This may be as a result of evaporation, internal ventilation or burning of the lubricating oil in the working engine. Oil consumption may be higher when the engine is new due to the running-in process. Oil consumption is also dependent on engine speed and engine load. Under extreme driving conditions, oil consumption may be higher.

## ▼ Vehicle Engine Control Unit Reset Procedure

After replacing the engine oil, it is recommended to have a repair shop such as an expert repairer (we recommend an Authorised Mazda Repairer) perform the initialization (engine oil data resetting) of the recorded value. If the value recorded by the computer is not initialized, the wrench indicator light may not turn off or it may turn on earlier than normal.

### NOTE

There are two methods for resetting the engine control unit.

- 1. The procedure described in the following.
- 2. The procedure described in the maintenance monitor item when the flexible maintenance setting is selected. Refer to the Applications section in the Mazda Connect Owner's Manual for the details.

If either one of the methods is performed, resetting of the engine control unit is completed.

## NOTE


The initialization (engine oil data resetting) of the recorded value can be performed using the following procedure:

1. Switch the ignition OFF.

2. Switch the ignition ON with the instrument panel illumination knob pressed and continue pressing the knob for about 7 seconds.


## Туре А

#### Instrument panel illumination knob



# ▼ Inspecting Engine Oil Level


- 1. Be sure the vehicle is on a level surface.
- 2. Warm up the engine to normal operating temperature.
- 3. Turn it off and wait at least 5 minutes for the oil to return to the sump.
- 4. Pull out the dipstick, wipe it clean, and reinsert it fully.

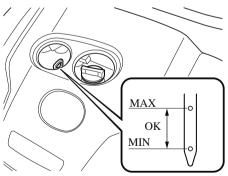

5. Pull it out again and examine the level. The level is normal if it is between the MIN and MAX marks.

If it is near or below MIN, add enough oil to bring the level to MAX.

## Туре В, Туре С

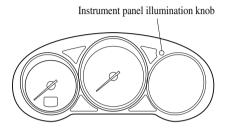



Do not overfill the engine oil. This may cause engine damage.

- 6. Make sure the O-ring on the dipstick is positioned properly before reinserting the dipstick.
- 7. Reinsert the dipstick fully.

# **Engine Coolant**

▼ Inspecting Coolant Level



## Do not use a match or live flame in the engine compartment. DO NOT ADD COOLANT WHEN THE ENGINE IS HOT:

A hot engine is dangerous. If the engine has been running, parts of the engine compartment can become very hot. You could be burned. Carefully inspect the engine coolant in the coolant reservoir, but do not open it.



## $\stackrel{\bigtriangledown}{\sim} \stackrel{\sim}{\sim}$ Pull over to a safe location, then switch the ignition off and make sure the fan is not running before attempting to work near the cooling fan:

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.



# system cap when the engine and radiator are hot:

When the engine and radiator are hot, scalding coolant and steam may shoot out under pressure and cause serious injury.


# NOTE

Changing the coolant should be done by an expert repairer (we recommend an Authorised Mazda Repairer).

Inspect the antifreeze protection and coolant level in the coolant reservoir at least once a year—at the beginning of the winter season—and before travelling where temperatures may drop below freezing.

Inspect the condition and connections of all cooling system and heater hoses. Replace any that are swollen or deteriorated.

The coolant should be at full in the radiator and between the F and L marks on the coolant reservoir when the engine is cool.

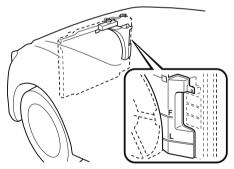

If it is at or near L, add enough coolant to the coolant reservoir to provide freezing and corrosion protection and to bring the level to F.

Securely tighten the coolant reservoir tank cap after adding coolant.

# 

- Radiator coolant will damage paint. Rinse it off quickly if spilled.
- If the "FL22" mark is shown on or near the cooling system cap, use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.



If the coolant reservoir is empty or new coolant is required frequently, consult an expert repairer (we recommend an Authorised Mazda Repairer).

# **Brake Fluid**

# ▼ Inspecting Brake Fluid Level


# 

# *If the brake fluid level is low, have the brakes inspected:*


A low brake fluid level is dangerous. A low level could indicate brake lining wear or a brake system leak which could cause the brakes to fail and lead to an accident.

Inspect the fluid level in the reservoir regularly. It should be kept between the MAX and MIN lines. The level normally drops with accumulated distance, a condition associated with wear of brake linings. If it is excessively low, have the brake system inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

# Left-hand drive model

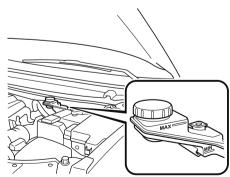

## **Right-hand drive model**

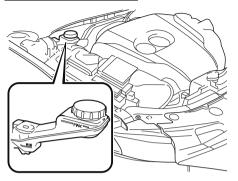

# Window and Headlight Washer Fluid


▼ Inspecting Washer Fluid Level

# 

# Use only windscreen washer fluid or plain water in the reservoir:

Using radiator antifreeze as washer fluid is dangerous. If sprayed on the windscreen, it will dirty the windscreen, affect your visibility, and could result in an accident.

Inspect fluid level in the washer fluid reservoir; add fluid if necessary.

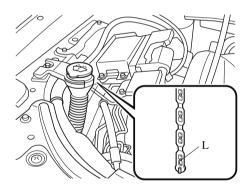

Use plain water if washer fluid is unavailable.

But use only washer fluid in cold weather to prevent it from freezing.

## NOTE

Front and rear washer fluid is supplied from the same reservoir.

# **Body Lubrication**

All moving points of the body, such as door and bonnet hinges and locks, should be lubricated each time the engine oil is changed. Use a nonfreezing lubricant on locks during cold weather.

Make sure the bonnet's secondary latch keeps the bonnet from opening when the primary latch is released.

# Wiper Blades

# 

- Hot waxes applied by automatic car washers have been known to affect the wiper's ability to clean windows.
- To prevent damage to the wiper blades, do not use petrol, paraffin, paint thinner, or other solvents on or near them.
- When the wiper lever is in the AUTO position and the ignition is switched ON, the wipers may move automatically in the following cases:
  - If the windscreen above the rain sensor is touched.
  - If the windscreen above the rain sensor is wiped with a cloth.
  - If the windscreen is struck with a hand or other object.
  - If the rain sensor is struck with a hand or other object from inside the vehicle.

Be careful not to pinch hands or fingers as it may cause injury, or damage the wipers. When washing or servicing the vehicle, make sure the wiper lever is in the OFF position.

Contamination of either the windscreen or the blades with foreign matter can reduce wiper effectiveness. Common sources are insects, tree sap, and hot wax treatments used by some commercial car washes.

If the blades are not wiping properly, clean the window and blades with a good cleaner or mild detergent; then rinse thoroughly with clean water. Repeat if necessary.

# ▼ Replacing Windscreen Wiper Blades

When the wipers no longer clean well, the blades are probably worn or cracked. Replace them.



- To prevent damage to the wiper arms and other components, do not try to sweep the wiper arm by hand.
- Do not bend the blade rubber unnecessarily when replacing it. Otherwise, the metal stiffener in the blade may deform and the windscreen wiper operation may be adversely affected.

## NOTE


When raising both windscreen wiper arms, raise the driver's side wiper arm first. When lowering the wiper arms, slowly lower the wiper arm from the passenger's side first while supporting it with your hand. Forcefully lowering the wiper arms could damage the wiper arm and blade, and may scratch or crack the windscreen.

Replace the wiper blades using the following procedure.


1. Raise the wiper arm.




To prevent damage to the windscreen let the wiper arm down easily, do not let it slap down on the windscreen. 2. Slide the blade component in the direction of the arrow while pressing the wiper arm tab to remove the blade component from the wiper arm.

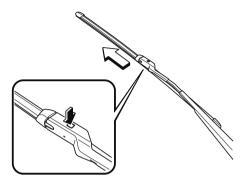


3. Pull the blade rubber in the direction of the arrow and slide it to a position where the blade holder groove can be checked.

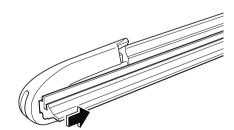


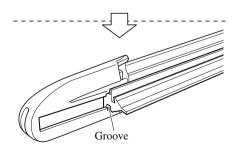


4. Pull the end of the blade rubber from the blade holder groove in the direction of the arrow and remove the blade rubber from the blade holder.

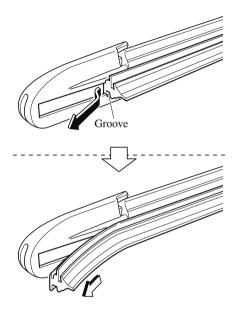


5. Insert the end of the new blade rubber into the groove of the blade holder until it contacts the end of the blade holder.

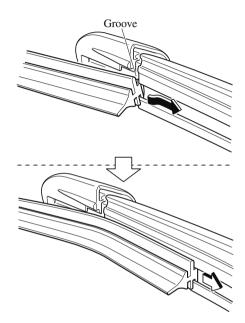


6. After pulling the blade rubber in the direction of the arrow and sliding the blade rubber to a position to check the blade holder groove, slide the blade rubber end in the opposite direction.

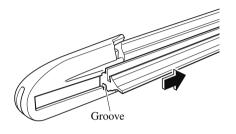


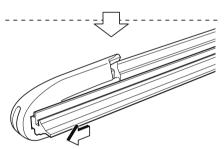


- 7. Make sure that the blade rubber is correctly installed to the blade holder.
- 8. Align the wiper arm tabs with the blade component grooves.

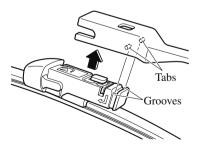

9. Align the blade component projection with the wiper arm notch.

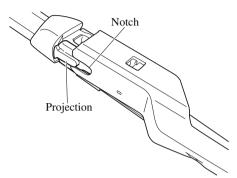

10. Slide the blade component and install it to the wiper arm.

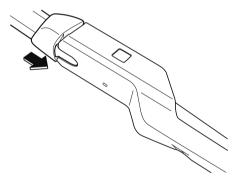

11. Slowly lower the wiper arm onto the windscreen.


# ▼ Replacing Rear Window Wiper Blade

When the wiper no longer cleans well, the blade is probably worn or cracked. Replace it.

# 


To prevent damage to the wiper arm and other components, do not move the wiper by hand.

1. Raise the wiper arm and rotate the wiper blade to the right until it unlocks, then remove the blade.

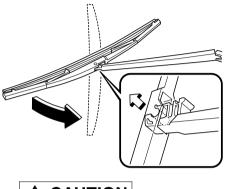


To prevent damage to the rear window, do not let the wiper arm fall on it.

2. Pull down the blade rubber and slide it out of the blade holder.

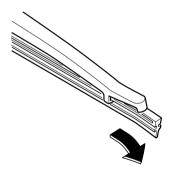


3. Remove the metal stiffeners from the blade rubber and install them in the new blade.

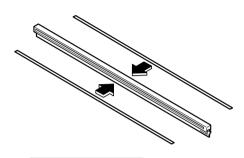

Do not bend or discard the stiffeners. You need to use them again.

4. Carefully insert the new blade rubber. Then install the blade assembly in the reverse order of removal.

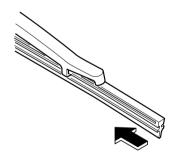

# **Battery**



Read the following precautions carefully before using the battery or inspecting to ensure safe and correct handling:



# Always wear eye protection when working near the battery:

Working without eye protection is dangerous. Battery fluid contains SULPHURIC ACID which could cause blindness if splashed into your eyes. Also, hydrogen gas produced during normal battery operation, could ignite and cause the battery to explode.



Battery fluid contains SULPHURIC ACID which could cause serious injuries if it gets in eyes, or on the skin or clothing. If this happens, immediately flush your eyes with water for 15 minutes or wash your skin thoroughly and get medical attention.



# Always keep batteries out of the reach of children:

Allowing children to play near batteries is dangerous. Battery fluid could cause serious injuries if it gets in the eyes or on the skin.



Keep flames and sparks away from open battery cells and do not allow metal tools to contact the positive (+) or negative (-) terminal of the battery when working near a battery. Do not allow the positive (+) terminal to contact the vehicle body:


Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.


*Keep all flames and sparks away from open battery cells because hydrogen gas is produced from open battery cells while charging the battery or adding battery fluid:* 

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.

## NOTE

Before performing battery maintenance, remove the battery cover.

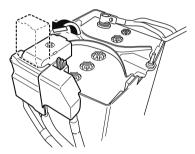

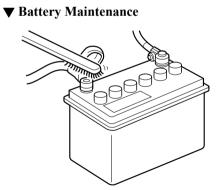


To get the best service from a battery:

- · Keep it securely mounted.
- Keep the top clean and dry.
- Keep terminals and connections clean, tight, and coated with petroleum jelly or terminal grease.

- Rinse off spilled electrolyte immediately with a solution of water and baking soda.
- If the vehicle will not be used for an extended time, disconnect the battery leads and charge the battery every 6 weeks.

# ▼ Inspecting Electrolyte Level

A low level of electrolyte fluid will cause the battery to discharge quickly.

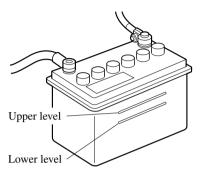

Inspect the electrolyte level at least once a week. If it is low, remove the caps and add enough distilled water to bring the level between the upper and lower level (illustration).

## Do not overfill.

Examine the specific gravity of the electrolyte with a hydrometer, especially during cold weather. If it is low, recharge the battery.

▼ Battery Recharging

## NOTE

- Before performing maintenance or recharging the battery, turn off all accessories and stop the engine.
- To disconnect the battery, remove the negative lead first. Install it last when connecting the battery.
- Be sure to remove the caps before recharging the battery.
- If the battery quickly discharges because, for example, the lights were left on too long with the engine off, slow-charge it as required by battery size and charger capacity.
- If the battery gradually discharges because of high electric load while the vehicle is being used, recharge it as required by battery size and charger capacity.

# ▼ Battery Replacement

Contact an expert repairer (we recommend an Authorised Mazda Repairer) for battery replacement.

# **Key Battery Replacement**

If the buttons on the transmitter are inoperable and the operation indicator light does not flash, the battery may be dead.

Replace with a new battery before the transmitter becomes unusable.

# 

- Make sure the battery is installed correctly. Battery leakage could occur if it is not installed correctly.
- When replacing the battery, be careful not to touch any of the internal circuitry and electrical terminals, bend the electrical terminals, or get dirt in the transmitter as the transmitter could be damaged.
- There is the danger of explosion if the battery is not correctly replaced.
- Dispose of used batteries according to the following instructions.
  - Insulate the plus and minus terminals of the battery using cellophane or equivalent tape.
  - Never disassemble.
  - Never throw the battery into fire or water.
  - ≻ Never deform or crush.
- ➢ Replace only with the same type battery (CR2032 or equivalent).

The following conditions indicate that the battery power is low:

- The KEY indicator light (green) flashes in the instrument cluster for about 30 seconds after the engine is switched OFF (for vehicles with a type A/type B instrument cluster (page 4-19, 4-37), messages are displayed in the instrument cluster).
- The system does not operate and the operation indicator light on the transmitter does not flash when the buttons are pressed.
- The system's operational range is reduced.


Replacing the battery at an expert repairer (we recommend an Authorised Mazda Repairer), is recommended to prevent damage to the key. If replacing the battery by yourself, follow the instruction.

# **Replacing the key battery**

1. Remove the lower cover while sliding the knob in the direction of the arrow.



2. Press in the tab to unlock the upper cover.

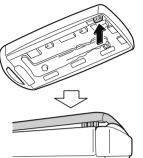


3. Insert a tape-wrapped flathead screwdriver into the gap and slide it in the direction of the arrow.



4. Twist the flathead screwdriver in the direction of the arrow and remove the upper cover.




5. Remove the cap using the tape-wrapped flathead screwdriver.

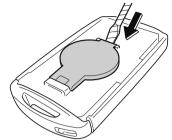


6. Remove the battery using tape-wrapped flathead screwdriver.




- 7. Insert a new battery into the transmitter so that the positive pole is facing up.
- 8. Install the cap.



9. Install the upper cover.

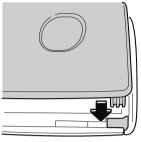

10. Insert the tabs of the lower cover into the slots of the transmitter and install the lower cover.



#### Tyres

For reasons of proper performance, safety, and better fuel economy, always maintain recommended tyre inflation pressures and stay within the recommended load limits and weight distribution.



#### Using Different Tyre Types:

Driving your vehicle with different types of tyres is dangerous. It could cause poor handling and poor braking; leading to loss of control.

Except for the limited use of the temporary spare tyre, use only the same type tyres (radial, bias-belted, bias-type) on all four wheels.

#### Using Wrong-Sized Tyres:

Using any other tyre size than what is specified for the vehicle (page 9-9) is dangerous. It could seriously affect ride, handling, ground clearance, tyre clearance, and speedometer calibration. This could cause you to have an accident. Use only tyres that are the correct size specified for the vehicle.

▼ Tyre Inflation Pressure



# Always inflate the tyres to the correct pressure:

Overinflation or underinflation of tyres is dangerous. Adverse handling or unexpected tyre failure could result in a serious accident. Refer to Tyres on page 9-9.

#### Use only a Mazda-genuine tyre valve cap:

Use of a non-genuine part is dangerous as the correct tyre air pressure cannot be maintained if the tyre valve becomes damaged. If the vehicle is driven under this condition, the tyre air pressure will decrease which could result in a serious accident. Do not use any part for the tyre valve cap that is not a Mazda-genuine part.

Inspect all tyre pressures monthly (including the spare) when the tyres are cold. Maintain recommended pressures for the best ride, handling, and minimum tyre wear.

Refer to the specification charts (page 9-9).

#### NOTE

- Always check tyre pressure when tyres are cold.
- Warm tyres normally exceed recommended pressures. Do not release air from warm tyres to adjust the pressure.
- Underinflation can cause reduced fuel economy, uneven and accelerated tyre wear, and poor sealing of the tyre bead, which will deform the wheel and cause separation of tyre from rim.
- Overinflation can produce a harsh ride, uneven and accelerated tyre wear, and a greater possibility of damage from road hazards.

Keep your tyre pressure at the correct levels. If one frequently needs inflating, have it inspected.

#### ▼ Tyre Rotation



#### Rotate tyres periodically:

Irregular tyre wear is dangerous. To equalize tread wear for maintaining good performance in handling and braking, rotate the tyres every 10,000 km (6,250 miles), or sooner if irregular wear develops.

During rotation, inspect them for correct balance.



Forward

Do not include (TEMPORARY USE ONLY) spare tyre in rotation.

Also, inspect them for uneven wear and damage. Abnormal wear is usually caused by one or a combination of the following:

- · Incorrect tyre pressure
- · Improper wheel alignment
- · Out-of-balance wheel
- · Severe braking

After rotation, inflate all tyre pressures to specification (page 9-9) and inspect the wheel nuts for tightness.

### 

Rotate unidirectional tyres and radial tyres that have an asymmetrical tread pattern or studs only from front to rear, not from side to side. Tyre performance will be reduced if rotated from side to side.

#### ▼ Replacing a Tyre



# Always use tyres that are in good condition:

Driving with worn tyres is dangerous. Reduced braking, steering, and traction could result in an accident.

#### Replace all four tyres at the same time:


Replacing just one tyre is dangerous. It could cause poor handling and poor braking resulting in loss of vehicle control. Mazda strongly recommends that you replace all four tyres at the same time.

If a tyre wears evenly, a wear indicator will appear as a solid band across the tread.

Replace the tyre when this happens.



New tread



Worn tread

You should replace the tyre before the band crosses the entire tread.

#### ▼ Temporary Spare Tyre

Inspect the temporary spare tyre at least monthly to make sure it is properly inflated and stored.

#### NOTE

The temporary spare tyre condition gradually deteriorates even if it has not been used.

The temporary spare tyre is easier to handle because of its construction which is lighter and smaller than a conventional tyre. This tyre should be used only for an emergency and only for a short distance.

Use the temporary spare tyre only until the conventional tyre is repaired, which should be as soon as possible.

Refer to Tyre on page 9-9.

### 

- Do not use your temporary spare tyre rim with a snow tyre or a conventional tyre. Neither will properly fit and could damage both tyre and rim.
- The temporary spare tyre has a tread life of less than 5,000 km (3,000 miles). The tread life may be shorter depending on driving conditions.
- The temporary spare tyre is for limited use, however, if the tread wear solid-band indicator appears, replace the tyre with the same type of temporary spare (page 6-37).

#### Maintenance and Care Owner Maintenance

#### ▼ Replacing a Wheel

### 

# Always use wheels of the correct size on your vehicle:

Using a wrong-sized wheel is dangerous. Braking and handling could be affected, leading to loss of control and an accident.

### 

A wrong-sized wheel may adversely affect:

- ≻ Tyre fit
- Wheel and bearing life
- Ground clearance
- Snow-chain clearance
- Speedometer calibration
- ➤ Headlight aim
- Bumper height
- > Tyre Pressure Monitoring System\*


#### NOTE

- When replacing a wheel, make sure the new one is the same as the original factory wheel in diameter, rim width, and offset (inset/outset).
- For details, contact an expert repairer (we recommend an Authorised Mazda Repairer).


Proper tyre balancing provides the best riding comfort and helps reduce tread wear. Out-of-balance tyres can cause vibration and uneven wear, such as cupping and flat spots.

#### **Light Bulbs**

Type A (With Adaptive LED Headlights (ALH))

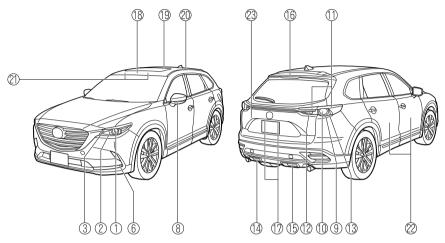

Type B (Without Adaptive LED Headlights (ALH))

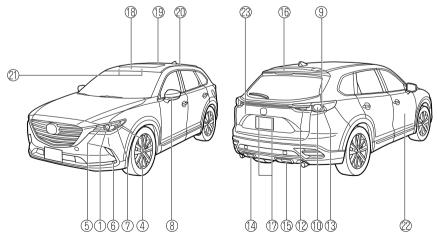

- ① Headlights (Low/High beam)
- <sup>(2)</sup> Headlights (High beam)
- ③ Running lights/Position lights/Front direction indicator lights

#### Maintenance and Care Owner Maintenance

- (4) Position lights
- **(5)** Running lights
- <sup>(6)</sup> Front fog lights<sup>\*</sup>
- O Front direction indicator lights
- 8 Side direction indicator lights
- <sup>(9)</sup> Brake lights/Tail lights
- 0 Rear direction indicator lights
- 1 Tail lights
- 1 Reverse lights
- <sup>(1)</sup> Brake lights
- $^{\textcircled{0}}$  Rear fog light (Left-hand drive model)\*
- <sup>(b)</sup> Rear fog light (Right-hand drive model)\*
- <sup>(6)</sup> High-mount brake light
- O Number plate lights
- (B) Overhead lights (Front)/Map lights (Front)
- <sup>(1)</sup> Map lights (Centre)
- Overhead light (Rear)
- **(2)** Vanity mirror lights
- 2 Ambient lights (Front/Rear door pocket)
- 23 Luggage compartment light



When removing the lens or lamp unit using a flathead screwdriver, make sure that the flathead screwdriver does not contact the interior terminal. If the flathead screwdriver contacts the terminal, a short circuit may occur.

#### NOTE

- To replace the bulb, contact an expert repairer (we recommend an Authorised Mazda Repairer).
- Use the protective cover and carton for the replacement bulb to dispose of the old bulb promptly and out of the reach of children.

#### ▼ Replacing Exterior Light Bulbs

The exterior lights have either LEDs or normal bulbs.

#### LED type

· Headlights

- Running lights/Position lights/Front direction indicator lights (type A)
- Front fog lights\*
- · Brake lights
- · Tail lights
- · High-mount brake light

6-40 \*Some models.

- · Side direction indicator lights
- · Number plate lights

The LED bulb cannot be replaced as a single unit because it is an integrated unit. The LED bulb has to be replaced with the unit. We recommend an expert repairer (we recommend an Authorised Mazda Repairer) when the replacement is necessary.

#### Bulb type

# Position lights (type B), Front direction indicator lights (type B)


#### NOTE

When replacing a bulb for the front direction indicator lights and position lights/front side-marker lights, turn the steering wheel and change the direction in which the tyres are pointed to the position where the bulb replacement can be done easily.


Turn the steering wheel after starting the engine and stop the engine after you finish turning the steering wheel.

- 1. If you are changing the right bulb, start the engine, turn the steering wheel all the way to the right, and turn off engine. If you are changing the left bulb, turn the steering wheel to the left, and turn off engine.
- 2. Make sure the ignition is switched off, and the headlight switch is off.


3. Turn the screw anticlockwise and remove it.

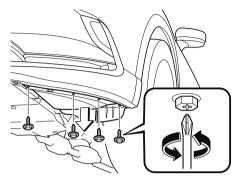

4. Pull the centre of each plastic retainer and remove the retainers, and then partially peel back the mudguard.

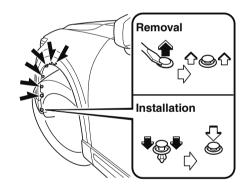


5. Disconnect the wiring harness by releasing the clamp.

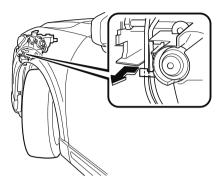


- 6. Turn the socket and bulb assembly anticlockwise and remove it.
- 7. Disconnect the bulb from the socket.

#### **Position lights**

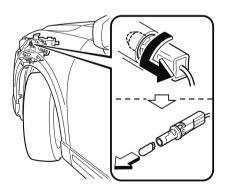

#### Front direction indicator lights

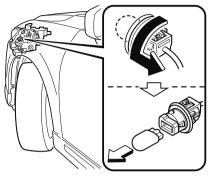

8. Install the new bulb in the reverse order of the removal procedure.


#### NOTE

There will be no problem with functionality with the wiring harness disconnected in Step 5 left disconnected. Therefore, there is no need to connect the wiring harness.

#### Running lights (type B)

- 1. Make sure the ignition is switched off, and the headlight switch is off.
- 2. Turn the screws anticlockwise and remove them.


3. Turn the socket and bulb assembly anticlockwise and remove it.

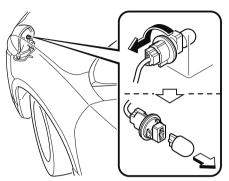


4. Install the new bulb in the reverse order of the removal procedure.

#### Rear direction indicator lights


- 1. Make sure the ignition is switched off, and the headlight switch is off.
- 2. Remove the cover.

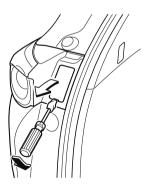


3. Turn the screws anticlockwise and remove them.

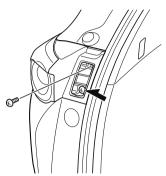


4. Pull the unit rearward to remove it.

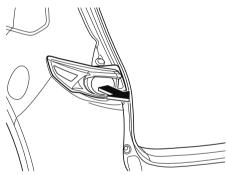


5. Disconnect the wiring harness by releasing the clamp.

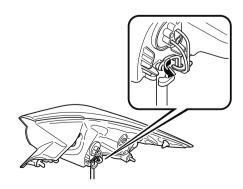

6. Turn the socket and bulb assembly anticlockwise and remove it.




7. Temporarily install the light unit with the socket pulled out of the top of the light unit.

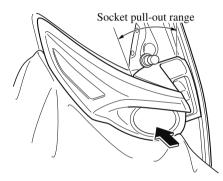



- The wiring harness may be damaged when temporarily installing the light unit. When performing the procedure, observe the following points.
  - Pull out the socket from within the socket pull-out range shown in the figure.
  - Do not push the light unit into the vehicle with force.
- When temporarily installing the light unit, cover the rear bumper light unit installation surface with a soft cloth. The rear bumper may be scratched or damaged if the light unit contacts it.


8. Disconnect the bulb from the socket.

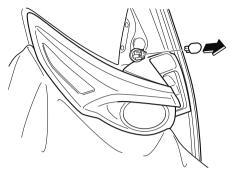


9. Install the new bulb in the reverse order of the removal procedure.

#### **Reverse lights**


- 1. Make sure the ignition is switched off, and the headlight switch is off.
- 2. Remove the cover.

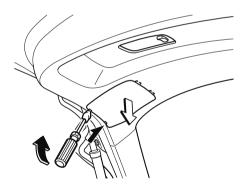

3. Disconnect the electrical connector from the bulb by pressing the tab on the connector with your finger and pulling the connector.

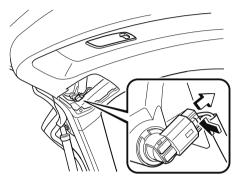

- 4. Turn the socket and bulb assembly anticlockwise and remove it.
- 5. Disconnect the bulb from the socket.

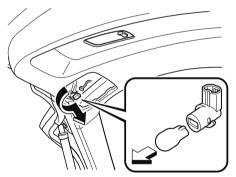

6. Install the new bulb in the reverse order of the removal procedure.


Rear fog light\*

### 

# Do not replace the rear fog light bulb just after turning off the engine:

Replacing the fog light bulb just after turning off the engine is dangerous because the exhaust pipe near the rear fog light would still be very hot and could cause a burn if you touch it. Replace the bulb after the exhaust pipe has cooled.

- 1. Make sure the ignition is switched off, and the headlight switch is off.
- 2. Turn the screws anticlockwise and remove them.
- 3. Turn the socket and bulb assembly anticlockwise and remove it.

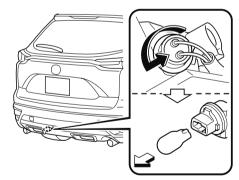

4. Install the new bulb in the reverse order of the removal procedure.

#### ▼ Replacing Interior Light Bulbs


Overhead lights (Front)/Map lights (Front) (LED type), Overhead lights (Centre)/Map lights (Centre) (LED type), Overhead lights (Rear) (LED type), Vanity mirror lights (LED type), Ambient lights


The LED bulb cannot be replaced as a single unit because it is an integrated unit. The LED bulb has to be replaced with the unit. If a replacement is necessary, consult an expert repairer (we recommend an Authorised Mazda Repairer).

Overhead lights (Front)/Map lights (Front) (bulb type), Overhead lights (Centre)/Map lights (Centre) (bulb type), Overhead light (Rear) (bulb type), Vanity mirror lights (bulb type)


- 1. Wrap a small flathead screwdriver with a soft cloth to prevent damage to the lens, and then remove the lens by carefully prying on the edge of the lens with the flathead screwdriver.
- 2. Disconnect the bulb by pulling it out.

# Overhead lights (Front)/Map lights (Front)

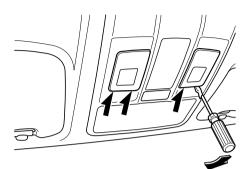


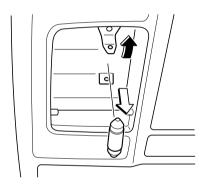

# Overhead lights (Centre)/Map lights (Centre)

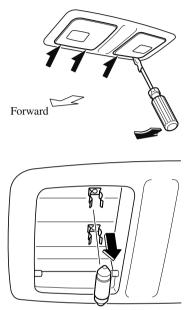


**Overhead light (Rear)** 

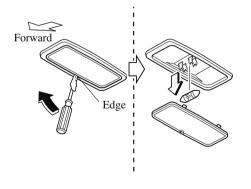


#### Vanity mirror lights

Driver's seat

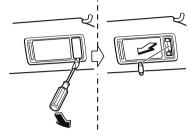

#### Passenger's seat



3. Install the new bulb in the reverse order of the removal procedure.


#### Luggage compartment light

#### (LED type)

The LED bulb cannot be replaced as a single unit because it is an integrated unit. The LED bulb has to be replaced with the unit. If a replacement is necessary, consult an expert repairer (we recommend an Authorised Mazda Repairer).

#### (Bulb type)

1. Wrap a small flathead screwdriver with a soft cloth to prevent damage to the lens and remove the lens unit by carefully prying on the edge of the lens unit with the flathead screwdriver.

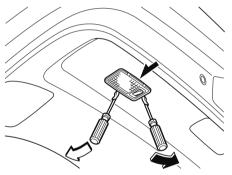


2. Disconnect the electrical connector from the bulb by pressing the tab on the connector with your finger and pulling the connector.




### 

When replacing the bulb always disconnect the connector first. Otherwise, electric and electronic devices could be shorted.

3. Insert the flathead screwdriver into the gap between the lens and the lens unit, and then slide the screwdriver to detach the lens.

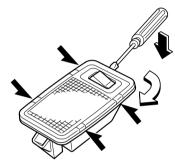

4. Disconnect the bulb by pulling it out.

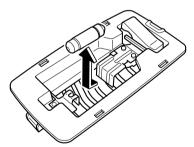

5. Install the new bulb in the reverse order of the removal procedure.

#### Fuses

Your vehicle's electrical system is protected by fuses.

If any lights, accessories, or controls do not work, inspect the appropriate circuit protector. If a fuse has blown, the inside element will be melted.


If the same fuse blows again, avoid using that system and consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

#### ▼ Fuse Replacement


# Replacing the fuses on the vehicle's left side

If the electrical system does not work, first inspect the fuses on the vehicle's left side.

- 1. Make sure the ignition is switched off, and other switches are off.
- 2. Open the fuse panel cover.

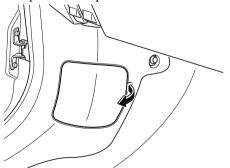

3. Pull the fuse straight out with the fuse puller provided on the fuse block located in the engine compartment.

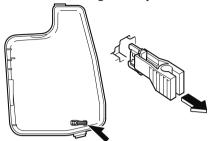

4. Inspect the fuse and replace it if it is blown.





Normal

Blown

5. Insert a new fuse of the same amperage rating, and make sure it fits tightly. If it does not fit tightly, have an expert install it. Consult an expert repairer (we recommend an Authorised Mazda Repairer).

If you have no spare fuses, borrow one of the same rating from a circuit not essential to vehicle operation, such as the AUDIO or OUTLET circuit.

### 

Always replace a fuse with a genuine Mazda fuse or equivalent of the same rating. Otherwise you may damage the electric system.


6. Reinstall the cover and make sure that it is securely installed.

#### Replacing the fuses under the bonnet

If the headlights or other electrical components do not work and the fuses in the cabin are normal, inspect the fuse block under the bonnet. If a fuse is blown, it must be replaced.

Follow these steps:

- 1. Make sure the ignition is switched off, and other switches are off.
- 2. Remove the fuse block cover.

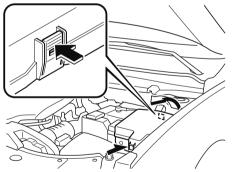

3. If any fuse but the MAIN fuse is blown, replace it with a new one of the same amperage rating.





Normal

Blown




Do not replace the main fuse by yourself. Have an expert repairer (we recommend an Authorised Mazda Repairer) perform the replacement: Replacing the fuse by yourself is dangerous because the MAIN fuse is a high current fuse. Incorrect replacement could cause an electrical shock or a short circuit resulting in a fire.

4. Reinstall the cover and make sure that it is securely installed.

#### ▼ Fuse Panel Description

#### Fuse block (Engine compartment)

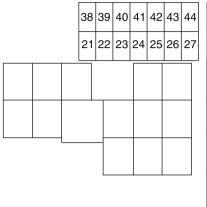

45	46	6 47	48	49	50	51	52	53	54
28	29	9 30	31	32	2 33	34	35	36	37
		16	17	7	18	19		20	
		11	12	2	13	14	-	15	
		6	7		8	9	-	0	
		1	2		3	4		5	


DESCRIPTION		FUSE RATING	PROTECTED COMPONENT	
1	WIPER.DEI	20 A	Windscreen wiper de-icer*	
2	IG2	30 A	For protection of various circuits	
3	INJECTOR	30 A	Engine control system	
4	—	—	—	
5	P.WINDOW1	30 A	—	
6	P.SEAT RL	30 A	Power seat*	
7	—	_	—	
8	EVVT	20 A	Engine control system	
9	DEFOG	40 A	Rear window defogger	
10	ST.HEATER2	20 A	Heated steering wheel*	
11	R.HEATER	40 A	Air conditioner	
12	EPB L	20 A	Electric Parking Brake (EPB) (LH)	
13	AUDIO	40 A	Audio system*	
14	EPB R	20 A	Electric Parking Brake (EPB) (RH)	
15	ENG.MAIN	40 A	Engine control system	
16	ABS/DSC M	50 A	ABS, Dynamic stability control system	
17	CABIN.+B	50 A	For protection of various circuits	
18	18 WIPER 20 A		Front window wiper and washer	

#### Maintenance and Care Owner Maintenance

DESCRIPTION FUSE RATING			PROTECTED COMPONENT	
19	HEATER	40 A	Air conditioner	
20	_	_	_	
21	ENGINE.IG1	7.5 A	Engine control system	
22	C/U IG1	15 A	For protection of various circuits	
23	H/L LOW L	15 A	Headlight low beam (LH)	
24	H/L LOW R1	15 A	Headlight low beam (RH)*	
25	ENGINE3	15 A	Engine control system	
26	ENGINE2	15 A	Engine control system	
27	ENGINE1	15 A	Engine control system	
28	AT	15 A	Transaxle control system, Ignition switch	
29	H/CLEAN	20 A	Headlight washer*	
30	A/C	7.5 A	Air conditioner	
31	AT PUMP	15 A	Transaxle control system*	
32	STOP	10 A	Brake lights	
33	R.WIPER	15 A	Rear window wiper, Theft-deterrent system*	
34	H/L HI	20 A	Headlight high beam	
35	H/L LOW R2	15 A	Headlight low beam (RH)*	
36	FOG	15 A	Fog lights*	
37	ENG.+B	7.5 A	Engine control system	
38	AUDIO2	7.5 A	Audio system	
39	INTERIOR	10 A	For protection of various circuits	
40	METER2	15 A	Instrument cluster*	
41	METER1	10 A	Instrument cluster	
42	SRS1	7.5 A	Air bag	
43	AUDIO4	10 A	Audio system*	
44	AUDIO1	25 A	Audio system	
45	ABS/DSC S	30 A	ABS, Dynamic stability control system	
46	VMC	15 A	—	
47	ST.HEATER	15 A	Audio system*	
48	TAIL	15 A	Position lights	
49	FUEL PUMP2	25 A	Fuel system	
50	HAZARD	25 A	Hazard warning flashers, Direction indicator lights, Tail lights	
51	DRL	15 A	Running lights	
52	R.OUTLET2	15 A	Accessory sockets	
53	HORN	15 A	Horn	

DESCRIPTION		FUSE RATING	PROTECTED COMPONENT
54 ROOM 25 A		25 A	For protection of various circuits

#### Fuse block (Left side)

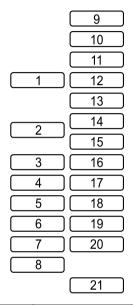

DESCRIPTION		FUSE RATING	PROTECTED COMPONENT	
1	P.SEAT D	30 A	Power seat*	
2	P.WINDOW3	30 A	Power windows	
3	R.OUTLET3	15 A	Trailer hitch*	
4	P.WINDOW2	25 A	Power windows	
5	PLG	20 A	Power liftgate*	
6	D.LOCK	25 A	Power door locks	
7	SEAT WARM	20 A	Seat warmer*	
8	SRS2/ESCL	15 A	Electronic steering lock	
9	SUNROOF	10 A	Sunroof*	
10	INTERIOR2	15 A	Audio system	
11	ENG+BB	7.5 A	Engine control system	
12	MIRROR	7.5 A	Power control mirror	
13	AT IND	7.5 A	AT shift indicator	

#### Maintenance and Care Owner Maintenance

DESCRIPTION		FUSE RATING	PROTECTED COMPONENT
14	F.OUTLET	15 A	Accessory sockets
15	R.OUTLET1	15 A	Accessory sockets
16	USB	15 A	USB power outlet*
17	M.DEF	7.5 A	Mirror defogger*
18	R.SEAT.WARM	20 A	Rear seat warmer*
19	AUDIO3	15 A	Audio system
20	P.SEAT RR	30 A	Power seat*
21	P.SEAT P	30 A	Power seat*

#### **Exterior Care**

The paintwork on your Mazda represents the latest technical developments in composition and methods of application.

Environmental hazards, however, can harm the paint's protective properties, if proper care is not taken.

Here are some examples of possible damage, with tips on how to prevent them.

#### Etching Caused by Acid Rain or Industrial Fallout

#### Occurrence

Industrial pollutants and vehicle emissions drift into the air and mix with rain or dew to form acids. These acids can settle on a vehicle's finish. As the water evaporates, the acid becomes concentrated and can damage the finish.

And the longer the acid remains on the surface, the greater the chance is for damage.

#### Prevention

It is necessary to wash and wax your vehicle to preserve its finish according to the instructions in this section. These steps should be taken immediately after you suspect that acid rain has settled on your vehicle's finish.

#### Damage Caused by Bird Dropping, Insects, or Tree Sap

#### Occurrence

Bird droppings contain acids. If these are not removed they can eat away the clear and colour base coat of the vehicle's paintwork.

When insects stick to the paint surface and decompose, corrosive compounds form. These can erode the clear and colour base coat of the vehicle's paintwork if they are not removed.

Tree sap will harden and adhere permanently to the paint finish. If you scratch the sap off while it is hard, some vehicle paint could come off with it.

#### Prevention

It is necessary to have your Mazda washed and waxed to preserve its finish according to the instructions in this section. This should be done as soon as possible.

Bird droppings can be removed with a soft sponge and water. If you are travelling and these are not available, a moistened tissue may also take care of the problem. The cleaned area should be waxed according to the instructions in this section. Insects and tree sap are best removed with a soft sponge and water or a commercially available chemical cleaner.

Another method is to cover the affected area with dampened newspaper for 1 to 2 hours. After removing the newspaper, rinse off the loosened debris with water.

#### Water Marks

#### Occurrence

Rain, fog, dew, and even tap water can contain harmful minerals such as salt and lime. If moisture containing these minerals settles on the vehicle and evaporates, the minerals will concentrate and harden to form white rings. The rings can damage your vehicle's finish.

#### Prevention

It is necessary to wash and wax your vehicle to preserve its finish according to the instructions in this section. These steps should be taken immediately after you find water marks on your vehicle's finish.

#### **Paint Chipping**

#### Occurrence

Paint chipping occurs when gravel thrown in the air by another vehicle's tyres hits your vehicle.

#### How to avoid paint chipping

Keeping a safe distance between you and the vehicle ahead reduces the chances of having your paint chipped by flying gravel.

#### NOTE

- The paint chipping zone varies with the speed of the vehicle. For example, when travelling at 90 km/h (56 mph), the paint chipping zone is 50 m (164 ft).
- In low temperatures a vehicle's finish hardens. This increases the chance of paint chipping.

• Chipped paint can lead to rust forming on your Mazda. Before this happens, repair the damage by using Mazda touch-up paint according to the instructions in this section. Failure to repair the affected area could lead to serious rusting and expensive repairs.

Follow **all** label and container directions when using a chemical cleaner or polish. Read all warnings and cautions.

#### ▼ Maintaining the Finish

#### Washing

### 

- When the ignition is switched ON and the wiper lever is in the AUTO position, the windscreen wipers may operate automatically in the following cases:
  - The area of the windscreen above the rain sensor is touched or wiped with a cloth.
  - The windscreen or the rain sensor area in the cabin is hit.

When the ignition is switched ON and the wiper lever is in the AUTO position, do not touch the windscreen or the windscreen wipers Otherwise, the windscreen wipers will operate automatically which could catch your fingers or damage the windscreen wipers.

When removing ice or snow, or cleaning the windscreen, always make sure the wiper lever is in the OFF position.

- Do not spray water in the engine compartment. Otherwise, it could result in engine-starting problems or damage to electrical parts.
- When washing and waxing the vehicle, be careful not to apply excessive force to any single area of the vehicle roof. Otherwise, you could dent the vehicle.
- (Vehicles with hands-free liftgate) When washing the vehicle, turn off the hands-free liftgate using the Mazda Connect or do not bring the transmitter into the area around the liftgate. Otherwise, the liftgate could open unexpectedly resulting in an accident. Refer to Power Liftgate on page 3-19.

To help protect the finish from rust and deterioration, wash your Mazda thoroughly and frequently, at least once a month, with lukewarm or cold water.

If the vehicle is washed improperly, the paint surface could be scratched. Here are some examples of how scratching could occur.

Scratches occur on the paint surface when:

- The vehicle is washed without first rinsing off dirt and other foreign matter.
- The vehicle is washed with a rough, dry, or dirty cloth.
- The vehicle is washed at a car wash that uses brushes that are dirty or too stiff.
- Cleansers or wax containing abrasives are used.

#### NOTE

- Mazda is not responsible for scratches caused by automatic car washes or improper washing.
- Scratches are more noticeable on vehicles with darker paint finishes.

To minimize scratches on the vehicle's paint finish:

- Rinse off any dirt or other foreign matter using lukewarm or cold water before washing.
- Use plenty of lukewarm or cold water and a soft cloth when washing the vehicle. Do not use a nylon cloth.
- Rub gently when washing or drying the vehicle.
- Take your vehicle only to a car wash that keeps its brushes well maintained.
- Do not use abrasive cleansers or wax that contain abrasives.

### 

Do not use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodised aluminium parts. This may damage the protective coating; also, cleaners and detergents may discolour or deteriorate the paint.

Pay special attention to removing salt, dirt, mud, and other foreign material from the underside of the wings, and make sure the drain holes in the lower edges of the doors and rocker panels are clean. Insects, tar, tree sap, bird droppings, industrial fallout, and similar deposits can damage the finish if not removed immediately. When prompt washing with plain water is ineffective, use a mild soap made for use on vehicles.

Thoroughly rinse off all soap with lukewarm or cold water. Do not allow soap to dry on the finish.

After washing the vehicle, dry it with a clean chamois to prevent water spots from forming.

### 

#### Dry off brakes that have become wet by driving slowly, releasing the accelerator pedal and lightly applying the brakes several times until the brake performance returns to normal:

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected.

#### When using an automatic car wash

- $\cdot$  Retract the door mirrors.
- The automatic car wash brushes could reduce the paint lustre or hasten paint deterioration.

# When using a high water pressure car wash

High water temperature and high water pressure car washers are available depending on the type of car wash machine. If the car washer nozzle is put too close to the vehicle, the force of the spray could damage or deform the molding, affect the sealability of parts, and allow water to penetrate the interior. Keep a sufficient space (30 cm (12 in) or more) between the nozzle and the vehicle. In addition, do not spend too much time spraying the same area of the vehicle, and be very careful when spraying between gaps in doors and around windows.

#### Waxing

Your vehicle needs to be waxed when water no longer beads on the finish. Always wash and dry the vehicle before waxing it. In addition to the vehicle body, wax the metal trim to maintain its lustre.

- 1. Use wax which contains no abrasives. Wax containing abrasives will remove paints and could damage bright metal parts.
- 2. Use a good grade of natural wax for metallic, mica, and solid colours.
- 3. When waxing, coat evenly with the sponge supplied or a soft cloth.
- 4. Wipe off the wax with a soft cloth.

### 

#### (Vehicles with hands-free liftgate)

When waxing the vehicle, turn off the hands-free liftgate using the Mazda Connect or do not bring the transmitter into the area around the liftgate. The liftgate could open unexpectedly resulting in an accident. Refer to Power Liftgate on page 3-19.

#### NOTE

A spot remover to remove oil, tar, and similar materials will usually also take off the wax. Rewax these areas even if the rest of the vehicle does not need it.

#### ▼ Paint Damage Touch-up

Repair damage to the finish caused by stone chipping, damage during parking etc., by using Mazda touch-up paint before rust begins to form. First, remove the dirt and grease with a clean soft cloth.

If rust has already begun to form:

- 1. Remove rust completely with sandpaper.
- 2. Wipe with a clean soft cloth.
- 3. Apply rust preventive primer to the area.
- After drying it completely, apply a suitable top coat material to the area.
   Of course there will be no problem if you

assign the work to an expert repairer (we recommend an Authorised Mazda Repairer).

#### ▼ Cavity Protection

Cavities are treated for protection at the factory, but additional protective treatment after the vehicle has been put into use will extend the life of the body. Consult an expert repairer (we recommend an Authorised Mazda Repairer)

concerning this additional precaution.

#### ▼ Bright-Metal Maintenance

- Use tar remover to remove road tar and insects. Never do this with a knife or similar tool.
- To prevent corrosion on bright-metal surfaces, apply wax or chrome preservative and rub it to a high lustre.
- During cold weather or in coastal areas, cover bright-metal parts with a coating of wax or preservative heavier than usual. It would also help to coat them with noncorrosive petroleum jelly or some other protective compound.

### 

Do not use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodised aluminium parts. This may result in damage to the protective coating and cause discolouration or paint deterioration.

#### ▼ Undercoating

This special coating is applied to the critical parts of the underside to protect vehicles from damage caused by chemicals or stones. This coating is liable to be damaged with time. Check this coating periodically.

Should repairs be necessary, consult an expert repairer (we recommend an Authorised Mazda Repairer). They are well informed on how repairs should be made.

#### ▼ Aluminium Wheel Maintenance

A protective coating is provided over the aluminium wheels. Special care is needed to protect this coating.



Do not use any detergent other than mild detergent. Before using any detergent, verify the ingredients. Otherwise, the product could discolour or stain the aluminium wheels.

#### NOTE

- Do not use a wire brush or any abrasive cleaner, polishing compound, or solvent on aluminium wheels. They may damage the coating.
- Always use a sponge or soft cloth to clean the wheels.

Rinse the wheels thoroughly with lukewarm or cold water. Also, be sure to clean the wheels after driving on dusty or salted roads to help prevent corrosion. • Avoid washing your vehicle in an automatic car wash that uses high-speed or hard brushes.

#### ▼ Plastic Part Maintenance

- When cleaning the plastic lenses of the lights, do not use petrol, paraffin, rectified spirit, paint, thinner, highly acidic detergents, or strongly alkaline detergents. Otherwise, these chemical agents can discolour or damage the surfaces resulting in a significant loss in functionality. If plastic parts become inadvertently exposed to any of these chemical agents, flush with water immediately.
- If plastic parts such as the bumpers become inadvertently exposed to chemical agents or fluids such as petrol, oil, engine coolant, or battery fluid, it could cause discolouration, staining, or paint peeling. Wipe off any such chemical agents or fluids using a soft cloth immediately.
- High water temperature and high water pressure car washers are available depending on the type of high pressure car washer device. If the car washer nozzle is put too close to the vehicle or aimed at one area for an extended period of time, it could deform plastic parts or damage the paint.
- Do not use wax containing compounds (polish). Otherwise, it could result in paint damage.
- In addition, do not use an electrical or air tool to apply wax. Otherwise, the frictional heat generated could result in deformation of plastic parts or paint damage.

#### **Interior Care**

### 

#### Do not spray water into the vehicle cabin:

Spraying water into the vehicle cabin is dangerous as electrical devices such as the audio and switches could get wet resulting in a malfunction or vehicle fire.

#### NOTE

- Do not wipe the interior using alcohol, chlorine bleach, or organic solvents such as thinner, benzene, and petrol. Otherwise, it may cause discolouration or stains.
- Rubbing hard with a stiff brush or cloth may cause damage.

If the vehicle interior becomes soiled by any of the following, wipe it off immediately using a soft cloth. Leaving it uncleaned could cause discolouration, stains, cracks, or peeling of the coating, and it will make it hard to wipe off later.

- · Beverage or fragrance
- · Grease or oil
- $\cdot$  Soiling

#### ▼ Seat Belt Maintenance

- Clean the soiled area by lightly dabbing it with a soft cloth soaked in a mild detergent (approx. 5%) diluted with water.
- 2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.
- 3. Before retracting seat belts which have been pulled out for cleaning, dry them off thoroughly and make sure there is no remaining moisture on them.

### 

#### If a seat belt appears frayed or has abrasions, have it replaced by an expert repairer (we recommend an Authorised Mazda Repairer):

If a seat belt is used under such a condition, it cannot function at its full capacity which could result in serious injury or death.

# Use a mild detergent to remove soiling from a seat belt:

If organic solvents are used for cleaning the seat belts or they become stained or bleached, there is the possibility of them becoming weakened and as a result, they may not function at their full capacity which could cause serious injury or death.

#### NOTE

Clean seat belts diligently if they get dirty. Leaving them uncleaned will make it difficult to clean them later, and it may affect the smooth retracting of the seat belt.

#### ▼ Vinyl Upholstery Maintenance

Remove dust and dirt from the vinyl upholstery using a brush or vacuum. Remove soiling from vinyl upholstery using a leather and vinyl upholstery cleaner.

#### ▼ Upholstery and Synthetic Leather Maintenance

#### Fabric

- Clean the soiled area by lightly dabbing it with a soft cloth soaked in a mild detergent (approx. 5%) diluted with water.
- 2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

#### Synthetic leather

- 1. Remove dust and sand using a vacuum cleaner.
- Wipe the soiled area with a soft cloth soaked in a mild detergent (approx. 5%) diluted with water.
- 3. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

#### ▼ Leather Upholstery Maintenance\*

- 1. Remove dust and sand using a vacuum cleaner.
- Wipe off the soiled area with a soft cloth and a suitable, special cleaner or a soft cloth soaked in a mild detergent (about 5%) diluted with water.
- 3. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

4. Remove moisture with a dry, soft cloth and allow the leather to further dry in a well-ventilated, shaded area. If the leather gets wet such as from rain, remove the moisture and dry it as soon as possible.

#### NOTE

- Because genuine leather is a natural material, its surface is not uniform and it may have natural scars, scratches, and wrinkles.
- To maintain the quality for as long as possible, periodical maintenance, about twice a year, is recommended.
- If the leather upholstery comes into contact with any of the following, clean it immediately.

Leaving it uncleaned could cause premature wear, mold, or stains.

- Sand or dirt
- · Grease or oil, such as hand cream
- Alcohol, such as in cosmetic or hair dressing items
- If the leather upholstery gets wet, promptly remove moisture with a dry cloth. Remaining moisture on the surface may cause deterioration such as hardening and shrinkage.
- Exposure to direct sunlight for long periods may cause deterioration and shrinkage. When parking the car under direct sunlight for long periods, shade the interior using sunshades.
- Do not leave vinyl products on the leather upholstery for long periods.
   They may affect the leather quality and colouring. If the cabin temperature becomes hot, the vinyl may deteriorate and adhere to the genuine leather.

#### ▼ Plastic Part Maintenance

### 

Do not use polishing agents. Depending on the product ingredients, they could cause discolouration, stains, cracks or peeling of the coating.

#### ▼ Instrument Panel Top Maintenance

- Wipe the soiled area with a soft cloth soaked in a mild detergent (approx. 5%) diluted with water.
- 2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

#### ▼ Active Driving Display Maintenance\*

The dust-proof sheet has a coating. When cleaning, do not use a hard or rough-surface cloth, or cleaning detergent. In addition, if a chemical solvent gets on the active driving display, wipe it off immediately. The dust-proof sheet could be damaged and the surface coating could be scratched. Use a fine, soft cloth such as those used for cleaning eyeglasses.

#### NOTE

Use of compressed air when cleaning the dust-proof sheet is recommended.

#### ▼ Panel Maintenance

If a panel becomes soiled, wipe it off with a soft cloth soaked in clean water and thoroughly wrung out.

If some areas require further cleaning, use the following procedure:

- Wipe the soiled area with a soft cloth soaked in a mild detergent (approx. 5 %) diluted with water.
- 2. Wipe off the remaining detergent using a cloth soaked in clean water and wrung out well.

#### NOTE

Be particularly careful when cleaning shiny surface panels and metallic parts such as plating as they can be scratched easily.

#### ▼ Cleaning the Window Interiors

If the windows become covered with an oily, greasy, or waxy film, clean them with glass cleaner. Follow the directions on the container.

### 

- Do not scrape or scratch the inside of the window glass. It could damage the thermal filaments and the aerial lines.
- When washing the inside of the window glass, use a soft cloth dampened in lukewarm water, gently wiping the thermal filaments and the aerial lines. Use of glass cleaning products could damage the thermal filaments and the aerial lines.



# 7 If Trouble Arises

Helpful information on what to do if a problem arises with the vehicle.

Mazda ERA-GLONASS7-2
Mazda ERA-GLONASS <sup>*</sup> 7-2
Parking in an Emergency
Parking in an Emergency7-13
Flat Tyre7-14
Spare Tyre and Tool Storage 7-14
Changing a Flat Tyre
Battery Runs Out 7-26
Jump-Starting7-26
Emergency Starting7-29
Starting a Flooded Engine
Push-Starting7-29
Overheating7-30
Overheating7-30
Emergency Towing7-32
Towing Description

Towing Hooks	7-34
--------------	------

Warning/Indicator Lights and Warning Sounds7-36
If a Warning Light Turns On or
Flashes7-36
Message Indicated on
Display7-53
Message Indicated in Multi-
information Display*7-55
Warning Sound is Activated7-57
When Liftgate Cannot be
Opened7-63 When Liftgate Cannot be Opened7-63


### Mazda ERA-GLONASS\*

When an emergency situation such as an accident or sudden illness occurs, the Mazda ERA-GLONASS dials the call centre automatically or the user can make a call to the call centre manually to enable a voice call.

The system operates automatically when the vehicle receives an impact of a certain level or more in a collision, or it can be operated manually using the Emergency call switch if an emergency situation arises such as sudden illness.


The call centre operator confirms the status via the voice call, confirms the vehicle's position information using the GPS/GLONASS<sup>\*1</sup>, and calls the police or emergency services.

\*1 GPS/GLONASS, short for "Global Positioning System/Global Navigation Satellite System", is a system that obtains the vehicle's current location by receiving radio waves emitted from the GPS/GLONASS (operated by the Russian Federation) satellites to the ground.

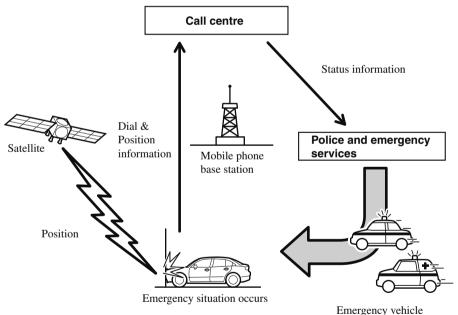

7-2 \*Some models.

#### ▼ Component Parts of Mazda ERA-GLONASS

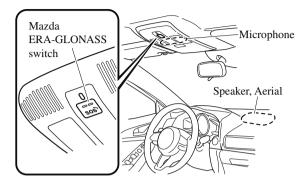



When using the Mazda ERA-GLONASS, keep medical devices such as an implanted heart pacemaker or defibrillator about 22 cm (8.7 in) or more away from the vehicle's aerial: Otherwise, the operation of the medical device may be affected by radio waves.

# If Trouble Arises Mazda ERA-GLONASS

#### ▼ Flow of Mazda ERA-GLONASS

User status	Mazda EF	Call centre/ Police/	
	Automatic call	Manual call	Emergency services
Emergency situation arises such as collision or sudden illness	Automatic call made due to vehicle receiving impact of certain level or more	Mazda ERA-GLONASS switch Manual call made by user	
		Vehicle information, position information, other	Status information
	Status confirmation	n/report by voice call	Police and emergency services
Rescue			Emergency vehicle

### 

- Do not disassemble the Mazda ERA-GLONASS. Otherwise, it could become damaged and may not function in an emergency.
- The Mazda ERA-GLONASS has a special built-in battery so that it can operate even if the power supply from the vehicle is cut such as in an accident. Heed the following cautions. If the Mazda ERA-GLONASS is not used correctly it may not operate.
  - ➤ The built-in battery is not a rechargeable type battery. Do not attempt to recharge the battery.
  - ➤ The built-in battery life is 3 years. Have the built-in battery replaced at an expert repairer (we recommend an Authorised Mazda Repairer) periodically.
  - If the built-in battery power is low due to natural discharge and the system determines that there is a problem, the Mazda ERA-GLONASS cannot be used. If the system determines that there is a problem, the indicator light (red) in the Emergency call switch turns on to notify the driver. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer). Refer to Indicator light/Beep sound on page 7-9.

#### NOTE

- The Mazda ERA-GLONASS can be used when the ignition is switched ON.
- There are two ways the Mazda ERA-GLONASS makes calls; automatically or manually.
- The Mazda ERA-GLONASS may not make a connection under the following conditions or depending on the use environment. If the Mazda ERA-GLONASS does not connect, make a call from another telephone such as the nearest available public telephone.
  - The vehicle is outside of a mobile phone network area
  - The vehicle is in a weak radio wave transmission environment (such as inside tunnels, underground parking areas, shadow of buildings, and mountain areas)
  - The vehicle does not receive an impact of a certain level or more even if an accident has occurred.
  - An extremely serious collision occurs resulting in damage to the Mazda ERA-GLONASS.
  - The position information cannot be obtained when signals cannot be received from the GNSS satellites, however, voice calls are possible.
- When a voice call is made by the Mazda ERA-GLONASS, the audio system is muted so that it does not interfere with the call.
- It may take some time for the call centre to respond after the Mazda ERA-GLONASS first starts operating.
- If you are unable to respond to an operator's questions after the voice call begins, the operator may proceed with emergency procedures at their own discretion.

- Even if it is difficult for you to hear the operator's voice, your voice may be heard by the call centre. Continue explaining your circumstances.
- If the Mazda ERA-GLONASS operates while you are making a call with your mobile phone using Bluetooth<sup>®</sup> Hands-Free, the call may be interrupted.
- $\cdot$  It may not be possible to receive a call using the Bluetooth<sup>®</sup> Hands-Free normally while the Mazda ERA-GLONASS is operating.
- A voice call with an operator may not be possible if the speaker or microphone is broken. If the speaker or microphone is broken, always have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
- The Mazda ERA-GLONASS may not operate normally outside of the following temperature range: If the Mazda ERA-GLONASS does not operate normally, make a call from another telephone such as the nearest available public telephone. Operation temperature range: -40 °C (-40 °F) to 85 °C (185 °F)
- There may be a difference between the position information sent to the call centre and the actual position of the vehicle where the call was made. Indicate landmarks around the position of the vehicle where the call is being made to the operator during the voice call.

#### Automatic emergency calls

If the vehicle receives an impact of a certain level or more in a collision, vehicle information is automatically sent to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.

### 


If an automatic call is made, the built-in battery power may be depleted and emergency calls may not be possible in the event that an emergency occurs again. After an automatic emergency call has been made, have the built-in battery replaced by an expert repairer (we recommend an Authorised Mazda Repairer).

#### NOTE


- Automatic emergency calls cannot be cancelled by the user.
- The call centre will end an emergency call. The user cannot end the emergency call.
- If the vehicle receives an impact of a certain level or more in a collision, an automatic call is made even if the air bags do not deploy.
- If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. Redialing cannot be cancelled.

- 1. If the vehicle receives an impact of a certain level or more in a collision, the Mazda ERA-GLONASS begins operating automatically.
- 2. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

Indicator light



- 3. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the beep sounds simultaneously, and the transmission of the vehicle information begins.
- 4. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.
- 5. If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals) and the beep sounds simultaneously. In this case, make a manual connection using the Emergency call switch because an automatic connection is not possible.



### Manual emergency calls

With the ignition switched ON, long-press the Emergency call switch and after releasing your finger from the switch, the vehicle information is automatically transmitted to the call centre.

When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the voice call with the call centre starts.

### NOTE


- Only make calls manually for conditions requiring urgent treatment such as illness or serious injury.
- When making emergency calls manually, stop the vehicle in a safe location before making the call.
- The call centre will end an emergency call. The user cannot end the emergency call.
- If a call is disconnected or a call cannot be made to the call centre correctly, an automatic call is made again to the call centre. To cancel the redialing, refer to Manual emergency call cancellation.
- 1. Make sure that the ignition is switched ON.
- 2. Long-press the Emergency call switch on the overhead console and then release your finger from the switch.



Mazda ERA-GLONASS switch


3. The indicator light (green) on the Emergency call switch flashes slowly (0.5 second intervals) and the call is made to the call centre.

Indicator light



- 4. When the connection is established with the call centre, the indicator light (green) flashes somewhat quickly (0.3 second intervals) and the beep sounds simultaneously, and the transmission of the vehicle information begins.
- 5. When the transmission of the vehicle information is completed or about 20 seconds have elapsed since the transmission began, the beep sounds and the voice call with the call centre starts.

If the connection fails, the indicator light (red) turns on and the indicator light (green) flashes quickly (0.15 second intervals), and the beep sounds simultaneously. Make a manual emergency call again.



### NOTE

If a call to the call centre does not connect even though the indicator light shows a call is possible, make a call to the police or other authority by means other than the Mazda ERA-GLONASS.

### Manual emergency call cancellation

A manual emergency call can be cancelled even after the Emergency call switch has been pressed by pressing the switch again, as long as the call with the call centre has not begun. If the call cannot be cancelled and the call with the call centre has begun, tell the operator that the call is mistaken.

### ▼ Indicator Light/Beep Sound

The indicator light turns on/flashes and beep sounds are activated to notify the driver of the system operation status or if there is a problem with the system.

Status	Indicator light			Beep sound	On/flashing conditions
Status	Green	Red	Flash interval	status	On/mashing conditions
Diagnosis	Turns on	Turns on	_	_	When the ignition is switched ON, it turns on and then turns off after a few seconds. <b>NOTE</b> A manual emergency call is not possible during diagnosis.
Normal	Turns off	Turns off	_	_	The system is operating normal- ly.

Status	Indicator light		Beep sound		
Status	Green	Red	Flash interval	status	On/flashing conditions
Malfunction	Turns off	Turns on		3 beeps (Slow intermit- tent sound)	<ul> <li>A system malfunction is detected.</li> <li>The remaining power of the built-in battery is low.</li> <li>CAUTION</li> <li>If the indicator light (red) remains on constantly, the system will not operate normally. Have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.</li> </ul>
Call being made with call centre	Flashes	Turns off	Slow (0.5 second in- tervals)	The beep does not sound, but the ringback tone can be heard.	An emergency call is being made by the Mazda ERA-GLO- NASS.
Vehicle infor- mation is being transmitted	Flashes	Turns off	Somewhat quick (0.3 second in- tervals)	Continuous in- termittent sound	Vehicle information is being transmitted to the call centre.
Start of voice call	Turns on	Turns off	_	1 beep	During a voice call with the call
During voice call	Turns on	Turns off	_	_	centre.
Connection fail- ure	Flashes	Turns on	Quick (0.15 second in- tervals)	3 beeps (Fast intermit- tent sound)	When an emergency call fails to connect.


### ▼ Test Mode

The test mode function makes sure that the Mazda ERA-GLONASS can operate normally. Have your vehicle tested at an expert repairer (we recommend an Authorised Mazda Repairer) when performing the test mode.

### Method to start test mode

Switch the ignition ON while the parking brake is applied, and wait 2 minutes with the vehicle stopped.

After that, perform the following procedure.

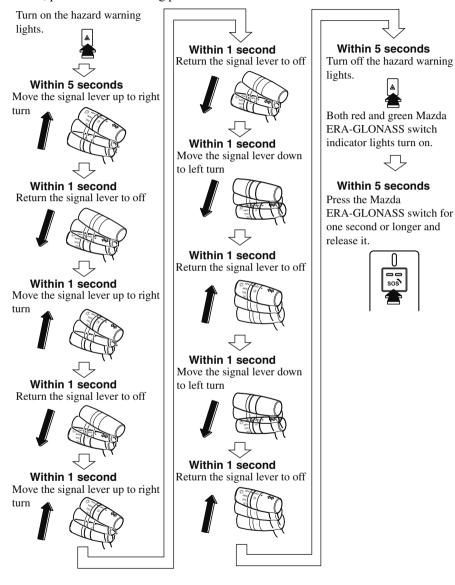

After the procedure is completed, the test mode is performed in the following order automatically.


#### NOTE

Communication with the call centre may fail if the reception is poor. Perform the test mode in a location with good reception.

The test mode finishes automatically.

### Parking in an Emergency

The hazard warning lights should always be used when you stop on or near a roadway in an emergency.

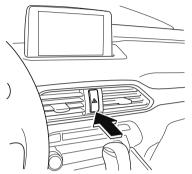

The hazard warning lights warn other drivers that your vehicle is a traffic hazard and that they must take extreme caution when near it.




Depress the hazard warning flasher and all the direction indicators will flash. The hazard warning indicator lights in the instrument cluster flash simultaneously.

### NOTE

- The direction indicators do not work when the hazard warning lights are on.
- Check local regulations about the use of hazard warning lights while the vehicle is being towed to verify that it is not in violation of the law.

### **Spare Tyre and Tool Storage**


Spare tyre and tools are stored in the locations illustrated in the diagram. With sub-woofer Spare tyre hold-down bolt

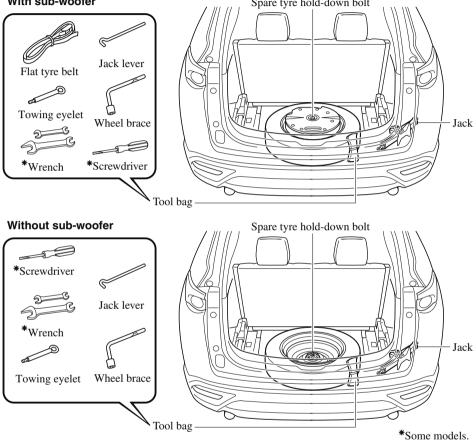


### ▼ Jack

### To remove the jack


- 1. Set the third-row seatbacks to their on-road positions.
- 2. Raise the luggage board.

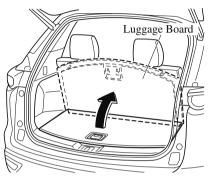


3. Raise the luggage board a little while pulling it towards you, and then insert the bottom edge into the holders.

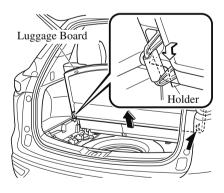


4. Remove the cover on the right side.

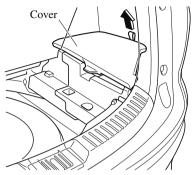

5. Remove the cargo sub compartment.

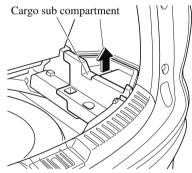


6. Turn the wing bolt and jack screw anticlockwise.

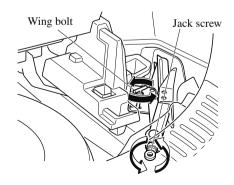

### To secure the jack

- 1. Insert the wing bolt into the jack with the jack screw pointing back and turn the wing bolt clockwise to temporarily tighten it.
- 2. Tighten the jack screw clockwise.

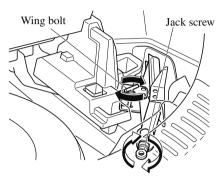

3. Turn the wing bolt completely to secure the jack.

### NOTE

If the jack is not completely secured, it could rattle while driving. Make sure the jack screw is sufficiently tightened.

### Maintenance

- Always keep the jack clean.
- Make sure the moving parts are kept free from dirt or rust.
- Make sure the screw thread is adequately lubricated.

### ▼ Spare Tyre

Your Mazda has a temporary spare tyre. The temporary spare tyre is lighter and smaller than a conventional tyre, and is designed only for emergency use and should be used only for VERY short periods. Temporary spare tyres should NEVER be used for long drives or extended periods.

### 

# Do not install the temporary spare tyre on the front wheels (driving wheels):

Driving with the temporary spare tyre on one of the front driving wheels is dangerous. Handling will be affected. You could lose control of the vehicle, especially on ice or snow bound roads, and have an accident. Move a regular tyre to the front wheel and install the temporary spare tyre to the rear.

### 

- When using the temporary spare tyre, driving stability may decrease compared to when using only the conventional tyre. Drive carefully.
- To avoid damage to the temporary spare tyre or to the vehicle, observe the following precautions:
  - ➢ Do not exceed 80 km/h (50 mph).
  - Avoid driving over obstacles. Also, do not drive through an automatic car wash. This tyre's diameter is smaller than a conventional tyre, so the ground clearance is reduced.
  - Do not use a tyre chain on this tyre because it will not fit properly.
  - Do not use your temporary spare tyre on any other vehicle, it has been designed only for your Mazda.
  - Use only one temporary spare tyre on your vehicle at the same time.


### To remove the spare tyre

### NOTE


#### (Vehicles with sub-woofer)

Because the sub-woofer is not operational when the sub-woofer connector is disconnected, no sound is output from the sub-woofer.

- 1. Set the third-row seatbacks to their on-road positions.
- 2. Raise the luggage board.

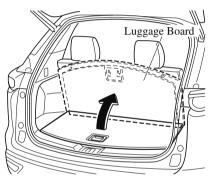


3. Raise the luggage board a little while pulling it towards you, and then insert the bottom edge into the holders.

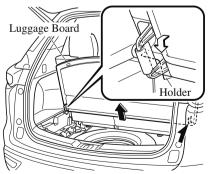


4. Remove the tool bag.

5. (Vehicles with sub-woofer) Disconnect the sub-woofer connector.

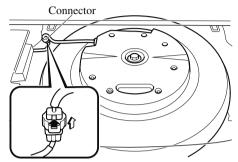


 (Vehicles with sub-woofer) Turn the hold-down bolt anticlockwise and remove the sub-woofer and the spare tyre.

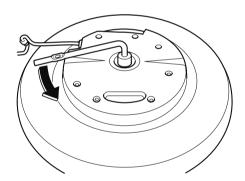

#### (Vehicles without sub-woofer)

Turn the hold-down bolt anticlockwise and remove the spare tyre.

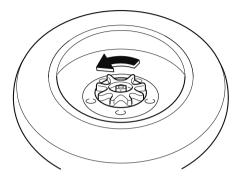

### To secure the spare tyre

Store the spare tyre in the reverse order of removal. After storing, verify that the spare tyre is stored securely.

### 

### (Vehicles with sub-woofer)

- Secure the sub-woofer in its correct position. If the sub-woofer is not installed to the correct position, it may move while the vehicle is driven which may damage the sub-woofer or the wiring harness.
- Store the tool bag on the right side of the vehicle. If the tool bag is stored on the left side of the vehicle, it may move while the vehicle is driven which may damage the wiring harness.

Refer to Spare Tyre and Tool Storage on page 7-14.

### **Changing a Flat Tyre**

### NOTE

*If the following occurs while driving, it could indicate a flat tyre.* 

- · Steering becomes difficult.
- The vehicle begins to vibrate excessively.
- The vehicle pulls in one direction.

If you have a flat tyre, drive slowly to a level spot that is well off the road and out of the way of traffic to change the tyre. Stopping in traffic or on the shoulder of a busy road is dangerous.

### 

# *Be sure to follow the directions for changing a tyre:*

Changing a tyre is dangerous if not done properly. The vehicle can slip off the jack and seriously injure someone. No person should place any portion of their body under a vehicle that is supported by a jack.


# Never allow anyone inside a vehicle supported by a jack:

Allowing someone to remain in a vehicle supported by a jack is dangerous. The occupant could cause the vehicle to fall resulting in serious injury.

### NOTE

Make sure the jack is well lubricated before using it.

- 1. Park on a hard, level surface off the right-of-way and firmly set the parking brake.
- 2. Shift into Park (P) and turn off the engine.
- 3. Turn on the hazard warning flasher.
- 4. Have passengers get out of the vehicle and away from the vehicle and traffic.
- 5. Remove any luggage, the jack, tools, and spare tyre (page 7-14).
- 6. Block the wheel diagonally opposite the flat tyre. When blocking a wheel, place a tyre block both in front and behind the tyre.

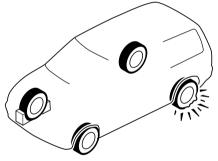

NOTE

When blocking a tyre, use rocks or wood blocks of sufficient size if possible to hold the tyre in place. ▼ Removing a Flat Tyre

### 

When jacking-up a vehicle, always shift the shift lever to 1st or R (manual transaxle vehicle) or shift the selector lever to P (automatic transaxle vehicle), apply the parking brake, and place wheel blocks in the position diagonally opposed to the jack:

Changing a flat tyre without using wheel blocks is dangerous because the vehicle may move and fall off the jack even with the shift lever in 1st or R, or the select lever is in P, which could result in an accident.


1. Loosen the wheel nuts by turning them anticlockwise one turn each, but do not remove any wheel nuts until the tyre has been raised off the ground.



2. Place the jack on the ground.

### If Trouble Arises Flat Tyre


3. Turn the jack screw in the direction shown in the figure and adjust the jack head so that it is close to the jack-up position.

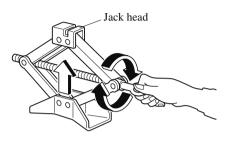

 Set the jack to the designated jack-up position closest to the tyre being removed.

#### (Jacking-up the vehicle front)

Set the groove on the top of the jack head at a right angle into the centre of the designated jack-up position guide projection closest to the vehicle front.

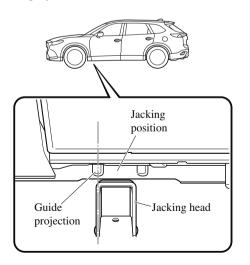


#### NOTE


Always set the jack into the designated jack-up position shown in the figure correctly.

#### (Jacking-up the vehicle rear)

Set the groove on the top of the jack head at a right angle between the designated jack-up position guide projections.

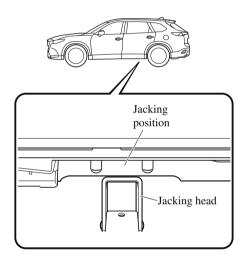

5. Continue raising the jack head gradually by rotating the screw with your hand until the jack head is inserted into the jack-up position.

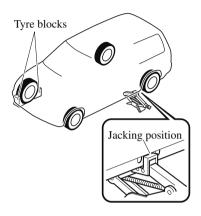



# Use only the front and rear jacking positions recommended in this manual:

Attempting to jack the vehicle in positions other than those recommended in this manual is dangerous. The vehicle could slip off the jack and seriously injure or even kill someone. Use only the front and rear jacking positions recommended in this manual.

#### Do not jack up the vehicle in a position other than the designated jack-up position or place any objects on or under the jack:

Jacking up the vehicle in a position other than the designated jack-up position or placing objects on or under the jack is dangerous as it could deform the vehicle body or the vehicle could fall off the jack resulting in an accident.

### Use only the jack provided with your Mazda:


Using a jack that is not designed for your Mazda is dangerous. The vehicle could slip off the jack and seriously injure someone.

### Never place objects under the jack:

Jacking the vehicle with an object under the jack is dangerous. The jack could slip and someone could be seriously injured by the jack or the falling vehicle.

### NOTE

When raising the jack head into the jacking position and aligning the groove in the jack head with the rail under the vehicle body, the top of the jack head contacts the vehicle's underbody without the rail contacting the bottom of the groove. 6. Insert the jack lever and attach the wheel brace to tyre jack.

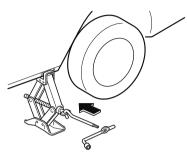

 Turn the jack handle clockwise and raise the vehicle high enough so that the spare tyre can be installed. Before removing the wheel nuts, make sure your Mazda is firmly in position and that it cannot slip or move.



# Do not jack up the vehicle higher than is necessary:

Jacking up the vehicle higher than is necessary is dangerous as it could destabilize the vehicle resulting in an accident.

# Do not start the engine or shake the vehicle while it is jacked up:

Starting the engine or shaking the vehicle while it is jacked up is dangerous as it could cause the vehicle to fall off the jack resulting in an accident.


# Never go under the vehicle while it is jacked up:

Going under the vehicle while it is jacked up is dangerous as it could result in death or serious injury if the vehicle were to fall off the jack.

8. Remove the wheel nuts by turning them anticlockwise; then remove the wheel and centre cap.

### ▼ Mounting the Spare Tyre

1. Remove dirt and grime from the mounting surfaces of the wheel and hub, including the hub bolts, with a cloth.

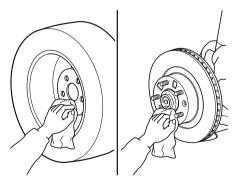


### 

Make sure the mounting surfaces of the wheel, hub and wheel nuts are clean before chanaina or replacina tyres:

When changing or replacing a tyre, not removing dirt and grime from the mounting surfaces of the wheel, hub and hub bolts is dangerous. The wheel nuts could loosen while driving and cause the tyre to come off, resulting in an accident.

- 2. Mount the spare tyre.
- 3. Install the wheel nuts with the bevelled edge inward; tighten them by hand.

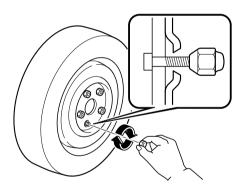


### 

Do not apply oil or grease to wheel nuts and bolts and do not tighten the wheel nuts beyond the recommended tightening torque:

Applying oil or grease to wheel nuts and bolts is dangerous. The wheel nuts could loosen while driving and cause the tyre to come off, resulting in an accident. In addition, wheel nuts and bolts could be damaged if tightened more than necessary.

- 4. Turn the wheel brace anticlockwise and lower the vehicle.
- 5. Use the wheel brace to tighten the nuts in the order shown.

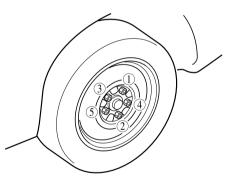

If you are unsure of how tight the nuts should be, have them inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

Nut tig	htening torque
N·m (kgf·m, ft·lbf)	108—147 (12—14, 80—108)

### 


# Always securely and correctly tighten the wheel nuts:

Improperly or loosely tightened wheel nuts are dangerous. The wheel could wobble or come off. This could result in loss of vehicle control and cause a serious accident.


#### Be sure to reinstall the same nuts you removed or replace them with metric nuts of the same configuration:

Because the wheel studs and wheel nuts on your Mazda have metric threads, using a non-metric nut is dangerous. On a metric stud, it would not secure the wheel and would damage the stud, which could cause the wheel to slip off and cause an accident.


- 6. (Vehicles with sub-woofer) Secure the sub-woofer to the flat tyre using the flat tyre belt.
  - 1. Pass the flat tyre belt through the wheel of the flat tyre.

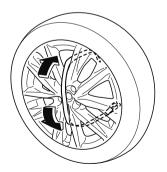


2. Install the sub-woofer to the flat tyre.

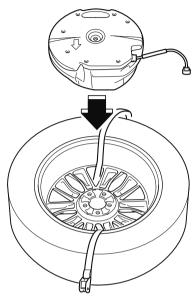


3. Pass the flat tyre belt through the buckle.

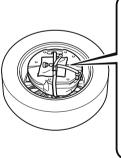




4. Pull the end of the flat tyre belt and secure the sub-woofer and the wiring harness to the flat tyre.

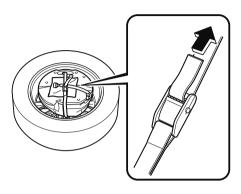

### 

When pulling the flat tyre belt, wrap the buckle with a cloth. If the buckle directly contacts the sub-woofer, the sub-woofer may be damaged.

 Place the flat tyre in the luggage compartment so that it leans against the luggage board.

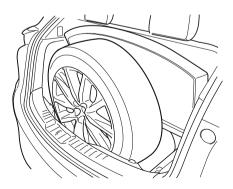

### 

Tuck a cloth between the flat tyre and the vehicle trim. If the flat tyre directly contacts the vehicle trim, the trim may be damaged.

 Slowly close the liftgate while making sure that the liftgate trim does not contact the flat tyre.

### NOTE

*If the liftgate trim contacts the flat tyre, adjust the position of the flat tyre.* 

- 9. Make sure that the liftgate closes securely.
- 10. Check the tyre inflation pressure. Refer to the specification charts on page 9-9.
- 11. Have the flat tyre repaired or replaced as soon as possible.

### 

# Do not drive with any tyres that have incorrect air pressure:

Driving on tyres with incorrect air pressure is dangerous. Tyres with incorrect pressure could affect handling and result in an accident. When you check the regular tyres' air pressure, check the spare tyre, too.


### NOTE

To prevent the jack and tool from rattling, store them properly.

### **Jump-Starting**

Jump-starting is dangerous if done incorrectly. So follow the procedure carefully. If you feel unsure about jump-starting, we strongly recommend that you have a competent service technician do the work.





To ensure safe and correct handling of the battery, read the following precautions carefully before using the battery or inspecting it.



# Keep flames and sparks away from open battery cells and do not allow metal tools to contact the positive (+) or negative (-) terminal of the battery when working near a battery. Do not allow the positive (+) terminal to contact the vehicle body:

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.

# Keep all flames and sparks away from open battery cells because hydrogen gas is produced from open battery cells while charging the battery or adding battery fluid:

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames including cigarettes and sparks away from open battery cells.

### Do not jump-start a frozen battery or one with a low fluid level:

Jump-starting a frozen battery or one with a low fluid level is dangerous. It may rupture or explode, causing serious injury.

### Connect the negative lead to a good ground point away from the battery:

Connecting the end of the second jumper lead to the negative (-) terminal of the discharged battery is dangerous.

A spark could cause the gas around the battery to explode and injure someone.


### Route the jumper leads away from parts that will be moving:

Connecting a jumper lead near or to moving parts (cooling fans, belts) is dangerous. The lead could get caught when the engine starts and cause serious injury.



Use only a 12 V booster system. You can damage a 12 V starter, ignition system, and other electrical parts beyond repair with a 24 V power supply (two 12 V batteries in series or a 24 V motor generator set).

- 1. Move the booster vehicle so that its battery is as close as possible to your vehicle's battery.
- 2. Make sure that the power such as for the headlights and air conditioner is turned off.
- 3. Remove the battery cover.

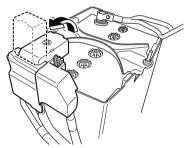

4. Turn off the booster vehicle's engine and connect the jumper leads in the following order.

Make sure that the jumper leads are securely connected so that they do not disconnect due to engine vibrations.

### 1st lead

<sup>(1)</sup>Positive (+) terminal on the discharged battery


<sup>(2)</sup>Positive (+) terminal on booster vehicle's battery

### 2nd lead

<sup>③</sup>Negative (-) terminal on booster vehicle's battery

(4) Location shown in the figure (do not connect to the negative (-) terminal of the battery)

Connect leads in numerical order and disconnect in reverse order.

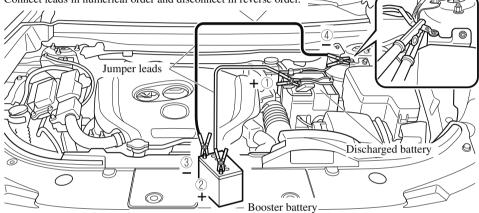

- 5. Start the booster vehicle's engine and rev the engine.
- 6. Start the engine of your vehicle. Run the engines for about 3 minutes to temporarily charge the battery of your vehicle.
- 7. Disconnect the jumper leads in the reverse order of their connection.
- 8. Install the battery cover.
- 9. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

### **Starting a Flooded Engine**

If the engine fails to start, it may be flooded (excessive fuel in the engine).

Follow this procedure:

- 1. If the engine does not start within 5 seconds on the first try, wait 10 seconds and try again.
- 2. Make sure the parking brake is on.
- 3. Depress the accelerator all the way and hold it there.
- 4. Depress the brake pedal, then press the push button start. If the engine starts, release the accelerator immediately because the engine will suddenly rev up.
- 5. If the engine fails to start, crank it without depressing the accelerator.

If the engine still does not start using the previous procedure, have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).

### **Push-Starting**

Do not push-start your Mazda.



### Never tow a vehicle to start it:

Towing a vehicle to start it is dangerous. The vehicle being towed could surge forward when its engine starts, causing the 2 vehicles to collide. The occupants could be injured.

### NOTE

You cannot start a vehicle with an automatic transaxle by pushing it.

### Overheating

If the temperature gauge indicates overheating or the high engine coolant temperature warning light turns on, the vehicle loses power, or you hear a loud knocking or pinging noise, the engine is probably too hot.





ିଠି Pull over to a safe location, then switch the ignition off and make sure the fan is not running before attempting to work near the cooling fan:

Working near the cooling fan when it is running is dangerous. The fan could continue running indefinitely even if the engine has stopped and the engine compartment temperature is high. You could be hit by the fan and seriously injured.



system cap when the engine and radiator are hot:

When the engine and radiator are hot, scalding coolant and steam may shoot out under pressure and cause serious injury.

# Open the bonnet ONLY after steam is no longer escaping from the engine:

Steam from an overheated engine is dangerous. The escaping steam could seriously burn you.

If the temperature gauge indicates overheating or the high engine coolant temperature warning light turns on:

- 1. Drive safely to the side of the road and park off the right-of-way.
- 2. Shift into park (P).
- 3. Apply the parking brake.
- 4. Turn off the air conditioner.
- Check whether coolant or steam is escaping from the engine compartment.

# If steam is coming from the engine compartment:

Do not go near the front of the vehicle. Stop the engine.

Wait until the steam dissipates, then open the bonnet and start the engine.

# If neither coolant nor steam is escaping:

Open the bonnet and idle the engine until it cools.




If the cooling fan does not operate while the engine is running, the engine temperature will increase. Stop the engine and call an expert repairer (we recommend an Authorised Mazda Repairer).

6. Make sure the cooling fan is operating, then turn off the engine after the temperature has decreased.

7. When cool, check the coolant level. If it is low, look for coolant leaks from the radiator and hoses.

# If you find a leak or other damage, or if coolant is still leaking:

Stop the engine and call an expert repairer (we recommend an Authorised Mazda Repairer).

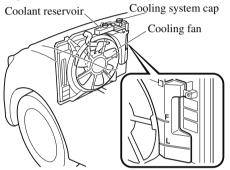

# If you find no problems, the engine is cool, and no leaks are obvious:

Carefully add coolant as required (page 6-22).



If the engine continues to overheat or frequently overheats, have the cooling system inspected. The engine could be seriously damaged unless repairs are made. Consult an expert repairer (we recommend an Authorised Mazda Repairer).


### **Towing Description**

We recommend that towing be done only by an expert repairer (we recommend an Authorised Mazda Repairer) or a commercial tow-truck service.

Proper lifting and towing are necessary to prevent damage to the vehicle. Particularly when towing a AWD vehicle, where all the wheels are connected to the drive train, proper transporting of the vehicle is absolutely essential to avoid damaging the drive system. Government and local laws must be followed.



Wheel dollies



A towed FWD vehicle should have its drive wheels (front wheels) off the ground. If excessive damage or other conditions prevent this, use wheel dollies.

When towing a FWD vehicle with the rear wheels on the ground, release the parking brake.

Refer to Electric Parking Brake (EPB) on page 4-98.

A towed AWD vehicle must have all its wheels off the ground.

### 

## Always tow a AWD vehicle with all four wheels off the ground:


Towing a AWD vehicle with either the front or rear wheels on the ground is dangerous as the drive train could be damaged, or the vehicle could trail away from the tow truck and cause an accident. If the drive train has been damaged, transport the vehicle on a flatbed truck.




Do not tow the vehicle pointed backward with driving wheels on the ground. This may cause internal damage to the transaxle.



Do not tow with sling-type equipment. This could damage your vehicle. Use wheel-lift or flatbed equipment.



If the parking brake cannot be released when towing the vehicle, transport the vehicle with all front and rear wheels raised off the ground as shown in the figure. If the vehicle is towed without raising the wheels off the ground, the brake system could be damaged.



If towing service is not available in an emergency, the vehicle may be towed with all four wheels on the ground using the towing hook at the front of the vehicle. Only tow the vehicle on paved surfaces for short distances at low speeds.

### 

Follow these instructions when towing the vehicle with all wheels on the ground.

- 1. Shift to the N position.
- 2. Switch the ignition to ON.
- Release the parking brake. Refer to Electric Parking Brake (EPB) on page 4-98.

Remember that power assist for the brakes and steering will not be available when the engine is not running.

### **Towing Hooks**

### 

- The towing eyelet should be used in an emergency (to get the vehicle out of a ditch or a snow bank, for example).
- When using the towing eyelets, always pull the lead or chain in a straight direction with respect to the eyelet. Never apply a sideways force.


### NOTE

When towing with chain or lead, wrap the chain or lead with a soft cloth near the bumper to prevent damage to the bumper.


### ▼ Towing Hook

- 1. Remove the towing eyelet and the wheel brace from the luggage compartment (page 7-14).
- 2. Wrap a flathead screwdriver or similar tool with a soft cloth to prevent damage to a painted bumper, and open the cap located on the front or rear bumper.

Front

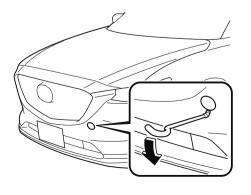

#### Rear

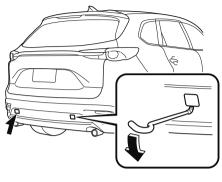




Do not use excessive force as it may damage the cap or scratch the painted bumper surface.

### NOTE


Remove the cap completely and store it so as not to lose it.

3. Securely install the towing eyelet using the wheel brace.

### Front

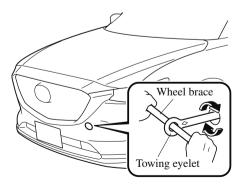

Rear

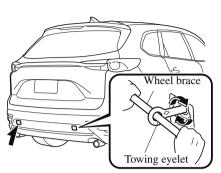

4. Hook the towing rope to the towing eyelet.

### 

- If the towing eyelet is not securely tightened, it may loosen or disengage from the bumper when towing the vehicle. Make sure that the towing eyelet is securely tightened to the bumper.
- Be careful not to damage the towing eyelet and towing hook, vehicle body, or transaxle system when towing under the following conditions:
  - Do not tow a vehicle heavier than yours.
  - Do not suddenly accelerate your vehicle as it will apply a severe shock to the towing eyelet and towing hook or rope.
  - Do not attach any rope other than to the towing eyelet and towing hook.

### If a Warning Light Turns On or Flashes

If any warning light turns on/flashes, take appropriate action for each light. There is no problem if the light turns off, however if the light does not turn off or turns on/flashes again, consult an expert repairer (we recommend an Authorised Mazda Repairer).

The details for some warnings can be viewed on the centre display or multi-information display (Type A/Type B) in the instrument cluster.

### Centre display

- 1. If the warning light is turned on, select the licon on the home screen to display the Applications screen.
- 2. Select "Vehicle Status Monitor".
- 3. Select "Warning Guidance" to display the current warnings.
- 4. Select the applicable warning to view the warning details.

### Multi-information display (Type A/Type B)

 Press the INFO switch on the steering switch to display the warning indication screen. Refer to Multi-information Display (Type A) on page 4-20. Refer to Multi-information Display (Type B) on page 4-38.

### ▼ Stop Vehicle in Safe Place Immediately

If any of the following warning lights turns on, the system may have a malfunction. Stop the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer).

<u>.</u>	w
Signal	Warning
	If the brake system warning light remains illuminated the brake fluid may be low or there could be a problem with the brake system. Park the vehicle in a safe place immediately and contact an expert repairer (we recommend an Authorised Mazda Repairer).
Brake System Warning Light	Do not drive with the brake system warning light illuminated. Contact an expert repair- er (we recommend an Authorised Mazda Repairer) to have the brakes inspected as soon as possible: Driving with the brake system warning light illuminated is dangerous. It indicates that your brakes may not work at all or that they could completely fail at any time. If this light remains illuminated, after checking that the parking brake is fully released, have the brakes inspected immediately.
	In addition, the effectiveness of the braking may diminish so you may need to depress the brake pedal more strongly than normal to stop the vehicle.
(1) (185) Electronic Brake Force Distribution System Warning	If the electronic brake force distribution control unit determines that some compo- nents are operating incorrectly, the control unit may illuminate the brake system warning light and the ABS warning light simultaneously. The problem is likely to be the electronic brake force distribution system.
	Do not drive with both the ABS warning light and brake warning light illuminated. Have the vehicle towed to an expert repairer (we recommend an Authorised Mazda Re- pairer) to have the brakes inspected as soon as possible: Driving when the brake system warning light and ABS warning light are illuminated simultaneously is dangerous. When both lights are illuminated, the rear wheels could lock more quickly in an emer- gency stop than under normal circumstances.
Charging System Warn- ing Indication/Warning	If the warning light illuminates while driving, it indicates a malfunction of the alter- nator or of the charging system. Drive to the side of the road and park off the right-of-way. Consult an expert repairer (we recommend an Authorised Mazda Repairer).
Light	Do not continue driving when the charging system warning light is illuminated be- cause the engine could stop unexpectedly.

Signal	Warning	
	This warning light indicates low engine oil pressure. <b>CAUTION</b>	
Engine Oil Warning Light	<ul> <li>Do not run the engine if the oil pressure is low. Otherwise, it could result in extensive engine damage.</li> <li>If the light illuminates or the warning indication is displayed while driving: <ol> <li>Drive to the side of the road and park off the right-of-way on level ground.</li> <li>Turn off the engine and wait 5 minutes for the oil to drain back into the sump.</li> <li>Inspect the engine oil level. (page 6-21) If it's low, add the appropriate amount of engine oil while being careful not to overfill.</li> </ol> </li> <li>Do not run the engine if the oil level is low. Otherwise, it could result in extensive engine damage.</li> <li>Start the engine and check the warning light.</li> <li>If the light remains illuminated even though the oil level is normal or after adding oil, stop the engine immediately and have your vehicle towed to an expert repairer (we recommend an Authorised Mazda Repairer).</li> </ul>	
(Red) High Engine Coolant Temperature Warning Indication/Warning Light	The light flashes when the engine coolant temperature is extremely high, and illumi- nates when the engine coolant temperature increases further. Handling Procedure Flashing light Drive slowly to reduce engine load until you can find a safe place to stop the vehicle and wait for the engine to cool down. Illuminated light This indicates the possibility of overheating. Park the vehicle in a safe place immedi- ately and stop the engine. Refer to Overheating on page 7-30. Do not drive the vehicle with the high engine coolant temperature warning light illumi- nated. Otherwise, it could result in damage to the engine.	

Signal	Warning
	The message is displayed if the electric power steering has a malfunction. If the message is displayed, stop the vehicle in a safe place and do not operate the steering wheel. There is no problem if the message in the display turns off after a while. Contact an expert repairer (we recommend an Authorised Mazda Repairer) if the message is displayed continuously.
	NOTE
Power Steering Mal- function Indication*	<ul> <li>If the message is displayed, the power steering will not operate normally. In this case, the steering wheel can still be operated, however, the operation may feel heavy compared to normal, or the steering wheel could vibrate when turning.</li> <li>Repeatedly jerking the steering wheel left and right while the vehicle is stopped or moving extremely slowly will cause the power steering system to go into protective mode which will make the steering feel heavy, but this does not indicate a problem. If this occurs, park the vehicle safely and wait several minutes for the system to return to normal.</li> </ul>
	The light illuminates/flashes if the electric power steering has a malfunction. If the light illuminates/flashes, stop the vehicle in a safe place and do not operate the steering wheel. There is no problem if the light turns off after a while. Contact an expert repairer (we recommend an Authorised Mazda Repairer) if the light illuminates/flashes continuously.
	NOTE
Power Steering Mal- function Indicator Light*	<ul> <li>If the indicator light illuminates/flashes, the power steering will not operate normally. If this happens, the steering wheel can still be operated, however, the operation may feel heavy compared to normal, or the steering wheel could vibrate when turning.</li> <li>Repeatedly jerking the steering wheel left and right while the vehicle is stopped or moving extremely slowly will cause the power steering system to go into protective mode which will make the steering feel heavy, but this does not indicate a problem. If this occurs, park the vehicle safely and wait several minutes for the system to return to normal.</li> </ul>

### ▼ Contact Expert Repairer (We Recommend Authorised Mazda Repairer) and Have Vehicle Inspected

If any of the following warning lights or the indicator light turns on/flashes, the system may have a malfunction. Contact an expert repairer (we recommend an Authorised Mazda Repairer) to have your vehicle inspected.

Signal	Warning			
(ABS) ABS Warning Light	If the ABS warning light stays on while you're driving, the ABS control unit has detected a system malfunction. If this occurs, your brakes will function normally as if the vehicle had no ABS. Should this happen, consult an expert repairer (we recommend an Authorised Mazda Re- pairer) as soon as possible. <b>NOTE</b>			
	With Multi-information Display (Type A/Ty	/pe B)		
	Multi-information Display			
	Туре А	Туре В		
	Master warning indication Veiide system matunction Master warning light	Master warning indication Vehicle system maffunction Master warning light		
	(Master warning indication)			
Master Warning In- dication/Warning Light	The master warning light displays when a warning message occurs. This indicates a malfunction with the vehicle system. Check the message indicated in the display and consult an expert repairer (we recommend an Authorised Mazda Repairer). For details, refer to the explanations for the warning/indicator lights, in the warning/indi- cator lights section, which match the symbol in the upper part of the display. If a message is not indicated in the display, operate the INFO switch to display the "Warn- ing" screen. Refer to Message Indicated in Multi-information Display (Type A) on page 4-20. Refer to Message Indicated in Multi-information Display (Type B) on page 4-38.			
	With Multi-information Display (Type C)			
	The light illuminates continuously if any one of the following occurs. Consult an expert repairer (we recommend an Authorised Mazda Repairer).			
	<ul><li>There is a malfunction in the battery management system.</li><li>There is a malfunction in the brake switch.</li></ul>			

If Trouble Arises

Signal	Warning
Electric Parking Brake (EPB) Warn- ing Indication/ Warning Light	The warning light illuminates when the system has a malfunction. Have your vehicle in- spected at an expert repairer (we recommend an Authorised Mazda Repairer).
Electric Parking Brake (EPB) Indica- tion/Indicator Light	This warning has the following functions: Parking brake warning/Indicator light inspection The light illuminates when the parking brake is applied with the ignition switched to START or ON. It turns off when the parking brake is released. When the light is turned on If the light remains turned on even if the parking brake is released, an expert repairer (we recommend an Authorised Mazda Repairer).
tion indicator Ergit	When the light is flashing The light flashes if the Electric Parking Brake (EPB) has a malfunction. If the light re- mains flashing even if the Electric Parking Brake (EPB) switch is operated, consult an ex- pert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
(Red) Brake Pedal Opera- tion Demand Warn- ing Light*	When only flashing           Flashes if there is the possibility of the vehicle not being held in the stopped position by the AUTOHOLD function, such as on steep slopes. Depress and hold your foot on the brake pedal.           When flashing and beep sound is activated at the same time
	The warning light flashes and the beep sound is activated for about 5 seconds if there is a problem with the system. If the warning light flashes and the warning sound is activated, immediately depress the brake pedal and stop using the AUTOHOLD function then contact an expert repairer (we recommend an Authorised Mazda Repairer).
	Immediately depress the brake pedal if the warning light flashes and the beep sound is acti- vated while using the AUTOHOLD function: Because the AUTOHOLD function is cancelled forcibly, the vehicle may move unexpectedly and result in an accident.

Signal	Warning
المحتى Check Engine Light	If this light illuminates while driving, the vehicle may have a problem. It is important to note the driving conditions when the light illuminated and consult an expert repairer (we recommend an Authorised Mazda Repairer). The check engine light may illuminate in the following cases:
	<ul> <li>The engine's electrical system has a problem.</li> <li>The emission control system has a problem.</li> <li>The fuel tank level being very low or approaching empty.</li> </ul>
	If the check engine light remains on, or it flashes continuously , do not drive at high speeds and consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
	WARNING If the check engine light turns on, do not disconnect the battery leads. If the battery leads are disconnected and then reconnected, the engine could be damaged
	and catch on fire.
	When the light is turned on
	A problem in the system may be indicated under the following conditions. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
<b>i-stop</b> (Amber) i-stop Warning Light*	<ul> <li>The light does not turn on when the ignition is switched ON.</li> <li>The light continues to remain on even though the i-stop OFF switch has been pressed while the engine is running.</li> <li>(Except European model)</li> </ul>
	If the i-stop warning light (amber) remains on while the engine is running, the battery performance may have decreased. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).
	When the light is flashing
	The light continues to flash if the system has a malfunction. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).
Automatic Trans- axle Warning Indi- cation/Warning Light	The indication/light illuminates when the transaxle has a problem.
	If the automatic transaxle warning indication/light illuminates, the transaxle has an electri- cal problem. Continuing to drive your Mazda in this condition could cause damage to your transaxle. Consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

If Trouble Arises

Signal	Warning	
	"4WD system malfunction" is displayed	
4WD	The indication is displayed under the following conditions. The system may have a mal- function. Have the vehicle checked at an expert repairer (we recommend an Authorised Mazda Repairer).	
	<ul><li>When there is a malfunction in the AWD system.</li><li>When there is a large difference between the tyre size of the front and rear wheels.</li></ul>	
AWD Warning Indi-	"4WD system high-load" is displayed	
cation*	The indication is displayed under the following conditions. Park the vehicle in a safe place and check that the warning indication light turns off, and then drive the vehicle. Contact an expert repairer (we recommend an Authorised Mazda Repairer) if the indica- tion is continuously displayed.	
	<ul> <li>When the differential oil temperature is excessively high.</li> <li>When there is a large difference between the front and rear wheel rotation, such as when trying to remove the vehicle from mud.</li> </ul>	
	When the light is turned on	
	The light turns on under the following conditions. The system may have a malfunction. Have the vehicle checked at an expert repairer (we recommend an Authorised Mazda Re- pairer).	
4WD	<ul> <li>When there is a malfunction in the AWD system.</li> <li>When there is a large difference between the tyre size of the front and rear wheels.</li> </ul>	
AWD Warning	When the light is flashing	
Light*	Park the vehicle in a safe place. After a few moments, if the warning light stops flashing, you can resume driving. If the light does not stop flashing, contact an expert repairer (we recommend an Authorised Mazda Repairer).	
	<ul> <li>When the differential oil temperature is excessively high.</li> <li>When there is a large difference between the front and rear wheel rotation, such as when trying to remove the vehicle from mud.</li> </ul>	
(Turns on) TCS/DSC Indicator Light	If the light stays on, the TCS, DSC or the brake assist system may have a malfunction and they may not operate correctly. Take your vehicle to an expert repairer (we recommend an Authorised Mazda Repairer).	

#### If Trouble Arises Warning/Indicator Lights and Warning Sounds

Signal	Warning
×	A system malfunction is indicated if the warning light constantly flashes, constantly illuminates or does not illuminate at all when the ignition is switched ON. If any of these occur, consult an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible. The system may not operate in an accident.
Air Bag/Seat Belt Pretensioner System Warning Light	<b>Never tamper with the air bag/pretensioner systems and always have an expert repairer</b> (we recommend an Authorised Mazda Repairer) perform all servicing and repairs: Self-servicing or tampering with the systems is dangerous. An air bag/pretensioner could accidentally activate or become disabled causing serious injury or death.
	If the tyre pressure monitoring system has a malfunction, the tyre pressure warning light flashes. Have your vehicle checked by an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.
(Flashing) Tyre Pressure Moni- toring System Warning Light*	If the tyre pressure monitoring system warning light illuminates or flashes, or the tyre pres- sure warning beep sound is heard, decrease vehicle speed immediately and avoid sudden manoeuvring and braking: If the tyre pressure monitoring system warning light illuminates or flashes, or the tyre pres- sure warning beep sound is heard, it is dangerous to drive the vehicle at high speeds, or perform sudden manoeuvring or braking. Vehicle drivability could worsen and result in an accident. To determine if you have a slow leak or a flat, pull over to a safe position where you can check the visual condition of the tyre and determine if you have enough air to proceed to a place where air may be added and the system monitored again by an expert repairer (we recommend an Authorised Mazda Repairer) or a tyre repair station. <b>Do not ignore the TPMS Warning Light:</b> Ignoring the TPMS warning light is dangerous, even if you know why it is illuminated. Have the problem taken care of as soon as possible before it develops into a more serious situa- tion that could lead to tyre failure and a dangerous accident.

Signal	Warning	
	"Keyless System malfunction" is displayed This message is displayed if the advanced keyless entry & push button start system has a problem. Contact an expert repairer (we recommend an Authorised Mazda Repairer).	
In	If the message is indicated, or the push button start indicator light (amber) flashes, the en- gine may not start. If the engine cannot be started, try starting it using the emergency oper- ation for starting the engine, and have the vehicle inspected at an expert repairer (we rec-	
(Amber) KEY Warning Indi-	ommend an Authorised Mazda Repairer) as soon as possible. Refer to Emergency Operation for Starting the Engine on page 4-9.	
cation*	<ul> <li>"Set Power to OFF" is displayed</li> <li>This message is displayed when the driver's door is opened without switching the ignition off.</li> <li>"Key not found" is displayed</li> <li>This message is displayed when any of the following operations is performed with the key</li> </ul>	
	out of the operational range or placed in areas inside the cabin where it is difficult for the key to be detected.	
	<ul> <li>The push button start is pressed with the ignition switched off</li> <li>The ignition is switched on</li> <li>All doors are closed without switching the ignition off</li> </ul>	
	If any malfunction occurs in the keyless entry system, it illuminates continuously.	
<b>!</b> 0		
(Red) (Turns on) KEY Warning Light*	If the key warning indicator light illuminates or the push button start indicator light (am- ber) flashes, the engine may not start. If the engine cannot be started, try starting it using the emergency operation for starting the engine, and have the vehicle inspected at an ex- pert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.	
	Refer to Emergency Operation for Starting the Engine on page 4-9.	
Security Indicator Light	If the engine does not start with the correct key, and the security indicator light remain illuminated or flashing, try the following: Make sure the key is within the operational range for signal transmission. Switch the tion off, and then restart the engine. If the engine does not start after 3 or more tries, c	
	tact an expert repairer (we recommend an Authorised Mazda Repairer).	
E ■	The light remains turned on if there is a problem with the system. Have your vehicle in- spected at an expert repairer (we recommend an Authorised Mazda Repairer).	
(Amber) Adaptive LED Headlights (ALH) Warning Indication/ Warning Light*	<b>NOTE</b> If the Forward Sensing Camera (FSC) field of view is impaired during bad weather condi- tions (such as rain, fog, and snow) and when the windscreen is dirty, the warning indica- tion/warning light for the Adaptive LED Headlights (ALH) may display/turn on. However, this does not indicate a problem.	

#### If Trouble Arises Warning/Indicator Lights and Warning Sounds

Signal	Warning	
Blind Spot Monitor-	The Warning indication turns on if there is any malfunction in the Blind Spot Monitor (BSM). Have your vehicle inspected by an expert repairer (we recommend an Authori Mazda Repairer).	
ing (BSM) Warning Indication*	<b>NOTE</b> If the vehicle is driven on a road with less traffic and few vehicles that the radar sensors can detect, the system may pause. However, it does not indicate a malfunction.	
	A problem in the system may be indicated under the following conditions. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).	
OFF Blind Spot Monitor- ing (BSM) OFF In-	<ul> <li>The light does not turn on when the ignition is switched ON.</li> <li>The light remains on even when the Blind Spot Monitoring (BSM) system can be operated.</li> <li>The light turns on while driving the vehicle.</li> </ul>	
dicator Light*	<b>NOTE</b> If the vehicle is driven on a road with less traffic and few vehicles that the radar sensors can detect, the system may pause (The Blind Spot Monitoring (BSM) OFF indicator light in the instrument cluster illuminates). However, it does not indicate a malfunction.	
(Amber) Driver Attention Alert (DAA) Warn- ing Indication*	The message is displayed when the system has a malfunction. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).	
(Amber) Mazda Radar Cruise Control (MRCC) Warning Indication*	The message is displayed when the system has a malfunction. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).	
(Amber) Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) Warning Indication*	The message is displayed when the system has a malfunction. Have your vehicle inspect- ed at an expert repairer (we recommend an Authorised Mazda Repairer).	

Signal	Warning	
Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) Warning Indication*	<ul> <li>The message is displayed when the system has a malfunction. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer). The system does not operate when the warning message is displayed.</li> <li>Always use tyres for all wheels that are of the specified size, and the same manufacture, brand, and tread pattern. In addition, do not use tyres with significantly different wear patterns on the same vehicle. If such improper tyres are used, the system may not operate normally.</li> <li>When an emergency spare tyre is used, the system may not operate normally.</li> </ul>	
-ÖÇ- LED Headlight Warning Light	This light illuminates if there is a malfunction in the LED headlight. Have your vehicle inspected by an expert repairer (we recommend an Authorised Mazda Repairer).	

#### ▼ Taking Action

Take the appropriate action and verify that the warning light turns off.

Signal	Warning	Action to be taken
(Amber) Smart Brake Support/ Smart City Brake Sup- port (SBS/SCBS) Warning Indication/ Warning Light*	The light turns on if the windscreen or the radar sensor are dirty, or there is a malfunc- tion in the system.	Verify the reason why the warning light is illuminated on the centre display. If the reason why the warning light is illu- minated is due to a dirty windscreen, clean the windscreen. If the warning light is illuminated because of a dirty radar sensor, clean the front em- blem. For any other reasons, have the vehicle in- spected at an expert repairer (we recom- mend an Authorised Mazda Repairer).
Low Fuel Warning In- dication/Warning Light	The light turns on when the remaining fuel is about 9.0 L (2.3 US gal, 1.9 Imp gal). <b>NOTE</b> The light illumination timing may vary be- cause fuel inside the fuel tank moves around according to the driving conditions and the vehicle posture.	Add fuel.
Check Fuel Cap Warn- ing Indication/Warning Light*	If the check fuel cap warning light illumi- nates while driving, the fuel-filler cap may not be installed properly.	Stop the engine and reinstall the fuel-filler cap. Refer to Refuelling on page 3-30.

#### If Trouble Arises Warning/Indicator Lights and Warning Sounds

Signal	Warning	Action to be taken
Engine Oil Level Warning Light	This warning light indicates that the engine oil level is around the MIN mark (page 6-21 ).	Add 1 L (0.3 US gal, 0.2 Imp gal) of en- gine oil (page 6-19).
<b>120</b> km/h 120km/h Warning Light*	The 120 km/h warning light illuminates when the vehicle speed exceeds 120 km/h.	Lower the vehicle speed.
	The seat belt warning light turns on if the driver or front passenger's seat is occupied and the seat belt is not fastened with the ignition switched ON. If the driver or front passenger's seat belt is unfastened (only when the front passenger's seat is occupied) and the vehicle is driven at a speed faster than about 20 km/h (12 mph), the warning light flashes. After a short time, the warning light stops flashing, but remains illuminated. If a seat belt remains unfastened, the warning light flashes again for a given period of time.	
PASSENGER Seat Belt Warning Light (Front seat)	<ul> <li>NOTE</li> <li>If the driver or front passenger's seat belt is unfastened after the warning light turns on, and the vehicle speed exceeds 20 km/h (12 mph), the warning light flashes again.</li> <li>Placing heavy items on the front pas- senger's seat may cause the front pas- senger's seat belt warning function to op- erate depending on the weight of the item.</li> <li>To allow the front passenger seat weight sensor to function properly, do not place and sit on an additional seat cushion on the front passenger's seat. The sensor may not function properly because the additional seat cushion could cause sen- sor interference.</li> <li>If a small child is seated on the front pas- senger's seat, the warning light may not operate.</li> </ul>	Fasten the seat belts.

If Trouble Arises

Signal	Warning	Action to be taken
2nd 茶 茶 茶 Row 茶 茶 (Red) Seat Belt Warning Light (Rear seat)	If the rear seat belts are not fastened while the ignition is switched ON, the driver and the passenger are alerted by the warning light. The warning light operates even if there is no passenger on the rear seat. <b>NOTE</b> If a rear seat belt is not fastened by a cer-	Fasten the seat belts.
	tain period of time after the engine has been started, the warning light turns off.	
Low Washer Fluid Level Warning Indica- tion/Warning Light*	This warning light indicates that little washer fluid remains.	Add washer fluid (page 6-24).
Door-Ajar/Lift- gate-Ajar Warning In- dication/Warning Light	The light turns on if any door/liftgate is not closed securely.	Close the door/liftgate securely.

#### Tyre Pressure Monitoring System Warning Light (Turns on)\*

# (!)

Take the appropriate action and verify that the warning light turns off.

#### Warning

When the warning light illuminates, and the warning beep sound is heard when tyre pressure is too low in one or more tyres.

## 

If the tyre pressure monitoring system warning light illuminates or flashes, or the tyre pressure warning beep sound is heard, decrease vehicle speed immediately and avoid sudden manoeuvring and braking:

If the tyre pressure monitoring system warning light illuminates or flashes, or the tyre pressure warning beep sound is heard, it is dangerous to drive the vehicle at high speeds, or perform sudden manoeuvring or braking. Vehicle drivability could worsen and result in an accident.

To determine if you have a slow leak or a flat, pull over to a safe position where you can check the visual condition of the tyre and determine if you have enough air to proceed to a place where air may be added and the system monitored again by an expert repairer (we recommend an Authorised Mazda Repairer) or a tyre repair station.

#### Do not ignore the TPMS Warning Light:

Ignoring the TPMS warning light is dangerous, even if you know why it is illuminated. Have the problem taken care of as soon as possible before it develops into a more serious situation that could lead to tyre failure and a dangerous accident.

#### Action to be taken

Inspect the tyres and adjust to the specified inflation pressure (page 6-35).

## 

When replacing/repairing the tyres or wheels or both, have the work done by an expert repairer (we recommend an Authorised Mazda Repairer), or the tyre pressure sensors may be damaged.

#### NOTE

• Perform tyre pressure adjustment when the tyres are cold. Tyre pressure will vary according to the tyre temperature, therefore let the vehicle stand for 1 hour or only drive it 1.6 km (1 mile) or less before adjusting the tyre pressures. When pressure is adjusted on hot tyres to the cold inflation pressure, the TPMS warning light/ beep may turn on after the tyres cool and pressure drops below specification. Also, an illuminated TPMS warning light, resulting from the tyre air pressure dropping due to cold ambient

Also, an illuminated IPMS warning light, resulting from the tyre air pressure dropping due to cold ambient temperature, may turn off if the ambient temperature rises. In this case, it will also be necessary to adjust the tyre air pressures. If the TPMS warning light illuminates due to a drop in tyre air pressure, make sure to check and adjust the tyre air pressures.

- After adjusting the tyre air pressures, it may require some time for the TPMS warning light to turn off. If the TPMS warning light remains illuminated, drive the vehicle at a speed of at least 25 km/h (16 mph) for 10 minutes, and then verify that it turns off.
- Tyres lose air naturally over time and the TPMS cannot tell if the tyres are getting too soft over time or you have a flat. However, when you find one low tyre in a set of four-that is an indication of trouble; you should have someone drive the vehicle slowly forward so you can inspect any low tyre for cuts and any metal objects sticking through tread or sidewall. Put a few drops of water in the valve stem to see if it bubbles indicating a bad valve. Leaks need to be addressed by more than simply refilling the trouble tyre as leaks are dangerous take it to an expert repairer (we recommend an Authorised Mazda Repairer) which has all the equipment to fix tyres, TPMS systems and order the best replacement tyre for your vehicle.

If the warning light illuminates again even after the tyre pressures are adjusted, there may be a tyre puncture.


#### KEY Warning Indication/Warning Light

Take the appropriate action and verify that the warning light turns off.

Signal	Cause	Action to be taken
(White) KEY Warning Indica- tion	The key battery is dead.	Replace the key battery (page 6-33).
	The key battery is dead.	Replace the key battery (page 6-33).
	The key is not within the operation range.	
<b>j</b> 0	The key is placed in areas inside the cabin where it is difficult for the key to be detect- ed.	Bring the key into the operation range (page 3-8).
(Flashing)       A key from another manufacturer similar to the key out of the key is in the operation range.       similar to the key out of range.         Without the ignition switched off, the key is       Similar to the key out of range.	Take the key from another manufacturer similar to the key out of the operation range.	
	taken out of the cabin, and then all the	Bring the key back into the cabin.


#### **Message Indicated on Display**

If a message is displayed in the centre display, take appropriate action (in a calm manner) according to the displayed message.

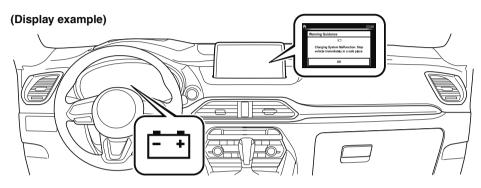

#### ▼ Stop Vehicle in Safe Place Immediately

If the following messages are displayed in the centre display, a vehicle system may be malfunctioning. Stop the vehicle in a safe place and contact an expert repairer (we recommend an Authorised Mazda Repairer).

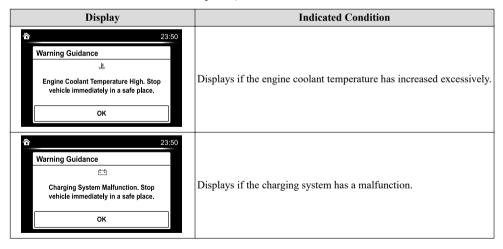


#### ▼ Verify Display Content

Displays in the following cases:

Display	Indicated Condition/Action to be taken
Display is too Hot. Screen performance	The following message is displayed when the temperature around the centre display is high.
may be decreased until it cools.	Lowering the temperature in the cabin or the temperature around the centre display by avoiding direct sunlight is recommended.

#### Message Indicated in Multi-information Display<sup>\*</sup>

If there is a notification from the vehicle, a message is displayed in the multi-information display. Check the information and take the necessary action.

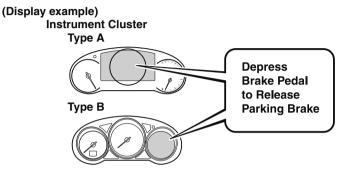

If the warning light turns on/flashes simultaneously or a symbol is indicated in the display, check the information regarding the warning light or symbol.

Refer to If a Warning Light Turns On or Flashes on page 7-36.

Display	Content	Action to be taken
Set Shift Lever to "P"	Indicated when the push button start is pressed while the selector lever is not in the P position.	Shift the selector lever to the P position.
Depress brake pedal to start engine	Indicated when the push button start is pressed without depressing the brake pedal.	Depress the brake pedal and press the push button start.
Steering locked	Indicated while the steering wheel is locked.	Release the steering lock.
Depress brake pedal to release parking brake	Indicates when the Electric Parking Brake (EPB) switch is operated without depressing the brake pedal.	Operate the Electric Parking Brake (EPB) switch while depressing the brake pedal.
Brake Hold Unavailable Depress Brake to Hold Position	Indicates when there is a problem with the brake related system while the vehi- cle is being held in a stop position by the AUTOHOLD function or during the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) stop hold control.	Depress the brake pedal. Cancel the AUTOHOLD function or the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function), and have your vehicle inspect- ed at an expert repairer (we recommend an Authorised Mazda Repairer).

#### If Trouble Arises Warning/Indicator Lights and Warning Sounds

Display	Content	Action to be taken
Incline Too Steep Vehicle May Not Be Able to Hold Stopped Position	Indicates the possibility of the vehicle not being held in the stopped position by the AUTOHOLD function or the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go func- tion) stop hold control, such as on steep slopes.	Depress and hold your foot on the brake pedal.
Brake Pedal Must Be Depressed to Deactivate Auto Hold System	1 0 1	Cancel the AUTOHOLD function stop hold control while depressing the brake pedal.

#### Warning Sound is Activated

#### ▼ Lights-On Reminder

If lights are on and the ignition is switched to ACC or off, a continuous beep sound will be heard when the driver's door is opened.

#### NOTE

- When the ignition is switched to ACC, the "Ignition Not Switched Off (STOP) Warning Beep" (page 7-58) overrides the lights-on reminder.
- A personalised function is available to change the sound volume for the lights-on reminder. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Air Bag/Front Seat Belt Pretensioner System Warning Beep

If there is a problem with the air bag/seat belt pretensioner systems and the warning light illumination, a warning beep sound will be heard for about 5 seconds every minute.

The air bag and seat belt pretensioner system warning beep sound will continue to be heard for approximately 35 minutes. Have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

## 

#### Do not drive the vehicle with the air bag/ seat belt pretensioner system warning beep sounding:

Driving the vehicle with the air bag/seat belt pretensioner system warning beep sounding is dangerous. In a collision, the air bags and the seat belt pretensioner system will not deploy and this could result in death or serious injury. Contact an expert repairer (we recommend an Authorised Mazda Repairer) to have the vehicle inspected as soon as possible.

#### ▼ Seat Belt Warning Beep

#### Front seat

If the vehicle speed exceeds about 20 km/h (12 mph) with the driver or front passenger's seat belt unfastened, a warning beep sounds continuously. If the seat belt remains unfastened, the beep sound stops once and then continues for a certain period. The beep stops after the driver or front passenger's seat belt is fastened.

#### NOTE

- Placing heavy items on the front passenger seat may cause the front passenger seat belt warning function to operate depending on the weight of the item.
- To allow the front passenger seat weight sensor to function properly, do not place and sit on an additional seat cushion on the front passenger seat. The sensor may not function properly because the additional seat cushion could cause sensor interference.

• When a small child sits on the front passenger seat, it is possible that the warning beep will not operate.

#### Rear seat

The warning beep only sounds if a seat belt is unfastened after being fastened.

#### ▼ Ignition Not Switched Off (STOP) Warning Beep

#### **European models**

If the driver's door is opened with the ignition switched to ACC, a beep will be heard 6 times in the cabin to notify the driver that the ignition has not been switched OFF (STOP). Under this condition, the keyless entry system will not operate, the vehicle cannot be locked, and the battery voltage will be depleted.

#### **Except European models**

If the driver's door is opened with the ignition switched to ACC, a beep will be heard continuously in the cabin to notify the driver that the ignition has not been switched OFF (STOP). Under this condition, the keyless entry system will not operate, the vehicle cannot be locked, and the battery voltage will be depleted.

#### ▼ Key Removed from Vehicle Warning Beep

#### Vehicles with advanced keyless function

If the key is taken out of the vehicle while the ignition is not switched OFF and all the doors are closed, the beep which sounds outside of the vehicle will be heard 6 times, the beep which sounds inside the vehicle will be heard 6 times.

## Vehicles without advanced keyless function

If the key is taken out of the vehicle while the ignition is not switched OFF and all the doors are closed, a beep will be heard in the cabin 6 times.

#### NOTE

Because the key utilizes low-intensity radio waves, the Key Removed From Vehicle Warning may activate if the key is carried together with a metal object or it is placed in a poor signal reception area.

#### ▼ Request Switch Inoperable Warning Beep (With the advanced keyless function)

If the request switch is pressed with the door open or ajar, or the ignition is not switched OFF with a key being carried, a beep will be heard outside for about 2 seconds to notify the driver that the door or liftgate cannot be locked.

#### ▼ Key Left-in-luggage Compartment Warning Beep (With the advanced keyless function)

If the key is left in the luggage compartment with all the doors locked and the liftgate closed, a beep will be heard outside for about 10 seconds to notify the driver that the key is in the luggage compartment. In this case, take out the key by pressing the electric liftgate opener and opening the liftgate. The key taken out of the luggage compartment may not operate because its functions have been temporarily stopped. To restore the key's functions, perform the applicable procedure (page 3-8).

#### ▼ Key Left-in-vehicle Warning Beep (With the advanced keyless function)

If all the doors and luggage compartment are locked using another key while the key is left in the cabin, the beep which sounds outside of the vehicle will be heard for about 10 seconds to notify the driver that the key is in the cabin. In this case, take out the key by opening the door. A key taken out of the vehicle using this method may not operate because its functions have been temporarily stopped. To restore the key's functions, perform the applicable procedure (page 3-8).

#### ▼ i-stop Warning Beep\*

• If the driver's door is opened while engine idling is stopped, the warning sound operates to notify the driver that engine idling is stopped. It stops when the driver's door is closed.

#### ▼ Electronic Steering Lock Warning Beep

The warning beep operates if the steering wheel is not unlocked after the push button start is pressed. (page 4-4)

#### ▼ Power Liftgate Warning Beep\*

If system operation precautions are necessary, the driver is notified by the warning sound.

Cautions	What to check
The been sounds 2 times	The conditions required for the power liftgate to operate have not been met, such as an object being stuck in the lift- gate.

Cautions	What to check
The beep sound contin- ues	The vehicle is being driven with the liftgate open. Stop the vehicle and close the liftgate.

#### ▼ Outside Temperature Warning Beep\*

Warns the driver of the possibility of icy roads when the outside temperature is low. If the outside temperature is lower than about 4 °C (39 °F), a beep sound is heard once and the outside temperature display flashes for about 10 seconds.

#### (Type A instrument cluster)

Refer to Outside Temperature Display on page 4-25.

#### (Type B instrument cluster)

Refer to Outside Temperature Display on page 4-43.

#### (Type C instrument cluster)

Refer to Outside Temperature Display on page 4-59.

#### ▼ Vehicle Speed Alarm\*

The vehicle speed alarm function is designed to alarm the driver via a single beep sound and a warning indication in the instrument cluster that the previously set vehicle speed has been exceeded. You can change the vehicle speed setting at which the warning is triggered.

#### ▼ 120 km/h Warning Beep\*

If the vehicle speed exceeds 120 km/h, a chime sounds for 5 seconds.

#### ▼ Electric Parking Brake (EPB) Warning Beep

The warning buzzer is activated under the following conditions:

- The vehicle is driven with the parking brake applied.
- The Electric Parking Brake (EPB) switch is pulled while the vehicle is driven.

#### ▼ AUTOHOLD Warning Beep

Warning light flashes/message is displayed and beep sound is activated simultaneously for about 5 seconds when using AUTOHOLD function or when AUTOHOLD switch is operated. Because a problem with AUTOHOLD function has occurred, AUTOHOLD function does not operate even if AUTOHOLD switch is operated.

If the warning light flashes/message is displayed and the beep sound is activated simultaneously, have your vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

#### ▼ Tyre Inflation Pressure Warning Beep\*

The warning beep sound will be heard for about 3 seconds if the tyre pressures decrease.

Refer to Tyre Pressure Monitoring System on page 4-245.

#### ▼ Power Steering Warning Buzzer

If the power steering system has a malfunction, the power steering malfunction indication/malfunction indicator light turns on or flashes and the buzzer operates at the same time. Refer to Stop Vehicle in Safe Place Immediately on page 7-36.

#### ▼ Blind Spot Monitoring (BSM) System Warning Beep\*

#### Driving forward

The warning beep operates when the direction indicator lever is operated to the side where the Blind Spot Monitoring (BSM) warning light is illuminated.

#### NOTE

A personalised function is available to change the Blind Spot Monitoring (BSM) warning beep sound volume. Refer to the Settings section in the Mazda Connect Owner's Manual.

#### Reversing

The Blind Spot Monitoring (BSM) warning sound is activated if there is a possibility of collision with a vehicle approaching from behind and from the rear on the left and right sides of the vehicle.

#### ▼ Excessive Speed Warning\*

If the vehicle speed exceeds the speed limit sign displayed on the active driving display, the warning sound is activated and the area around the speed limit sign displayed on the active driving display flashes 10 times in amber, and if the vehicle speed continues to exceed the displayed speed limit sign, the indication stops flashing and remains on.

#### ▼ Mazda Radar Cruise Control (MRCC) System Warnings\*

The Mazda Radar Cruise Control (MRCC) system warnings notify the driver of system malfunctions and cautions on use when required.

Check based on the beep sound.

Warning beep	What to check
The beep sounds 1 time while the Mazda Radar Cruise Control (MRCC) is operating	The vehicle speed is slower than 25 km/h (16 mph) and the Mazda Ra- dar Cruise Control (MRCC) system has been cancelled.
(European models) The beep sounds 5 times while driving (Except European models) The beep continues to sound while the vehicle is being driven.	The distance between your vehicle and the ve- hicle ahead is too close. Verify the safety of the surrounding area and re- duce vehicle speed.
When the Mazda Radar Cruise Control (MRCC) is operating, the beep sounds and the multi-in- formation display indi- cates a problem with the Mazda Radar Cruise Control (MRCC) sys- tem.	A malfunction in the system may be indicated. Have your vehicle in- spected at an expert re- pairer (we recommend an Authorised Mazda Repairer).

#### ▼ Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) System Warnings\*

The Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) system warnings notify the driver of system malfunctions and cautions on use when required. Check based on the beep sound.

Warning beep	What to check
The beep sounds 1 time while the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go func- tion) is operating	The Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go function) sys- tem has been cancelled.
The beep continues to sound while the vehicle is being driven.	The distance between your vehicle and the ve- hicle ahead is too close. Verify the safety of the surrounding area and re- duce vehicle speed.
When the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go func- tion) is operating, the beep sounds and the multi-information dis- play indicates a problem with the Mazda Radar Cruise Control with Stop & Go function (MRCC with Stop & Go func- tion) system.	A malfunction in the system may be indicated. Have your vehicle in- spected at an expert re- pairer (we recommend an Authorised Mazda Repairer).

#### ▼ Lane Departure Warning Sound\*

While the system is operating, if the system determines that the vehicle may depart from the lane, it sounds a warning sound.

#### NOTE

The volume of the Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) warning sound can be changed. Refer to the Settings section in the Mazda Connect Owner's Manual.
The type of the Lane-keep Assist System (LAS) & Lane Departure Warning System (LDWS) warning sound can be changed.

Refer to the Settings section in the Mazda Connect Owner's Manual.

#### ▼ Collision warning\*

If there is a possibility of a collision with a vehicle ahead or an obstruction at the rear of the vehicle, a warning sound is activated intermittently at the same time as the warning indications are displayed in the instrument cluster or active driving display.

#### When Liftgate Cannot be Opened


If the battery is dead, the liftgate cannot be unlocked and opened.

In this case, the liftgate can be unlocked by taking care of the dead battery situation.


Refer to Jump-Starting on page 7-26. If the liftgate cannot be unlocked even if the dead battery situation has been resolved, the electrical system may have a malfunction.

In this case, the liftgate can be opened using the following procedure as an emergency measure.

1. Wrap the end of a flathead screwdriver in a cloth and remove the cover on the interior surface of the liftgate using it.

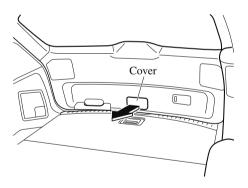


2. (Without power liftgate) Turn the lever to the right to unlock the liftgate.

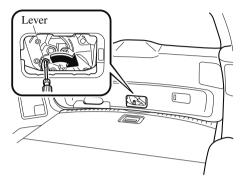

#### (With power liftgate) Push the liftgate while pro

Push the liftgate while pressing the lever down.

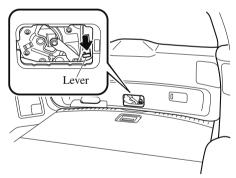

After performing this emergency measure, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer) as soon as possible.

### If the Active Driving Display Does Not Operate

If the active driving display does not operate, switch the ignition off and then restart the engine. If the active driving display does not operate even with the engine restarted, have the vehicle inspected at an expert repairer (we recommend an Authorised Mazda Repairer).

## 8

## **Customer Information**

Important consumer information including warranties and add-on equipment.

Warranty8-2	2
Registering Your Vehicle in A	
Foreign Country8-2	2
Add-On Non-Genuine Parts and	
Accessories8-	3
Cell Phones8-4	4
Cell Phones	
	4
Cell Phones Warning8-4	4 5

Electromagnetic Compatibility 8-47
Electromagnetic
Compatibility8-47

#### Collection/Disposal of Old Equipment/

#### **Registering Your Vehicle in A Foreign Country**

Registering your vehicle in a foreign country may be problematic depending on whether it meets the specific emission and safety standards of the country in which the vehicle will be driven. Consequently, your vehicle may require modifications at personal expense in order to meet the regulations.

In addition, you should be aware of the following issues:

Satisfactory vehicle servicing may be difficult or impossible in another country.

The fuel specified for your vehicle may be unavailable.

Parts, servicing techniques, and tools necessary to maintain and repair your vehicle may be unavailable.

There might not be an expert repairer (we recommend an Authorised Mazda Repairer) in the country you plan to take your vehicle.

The Mazda warranty is valid only in certain countries.

#### Add-On Non-Genuine Parts and Accessories

Please note that technical alterations to the original state of your Mazda vehicle can affect the safety of the vehicle. Such technical alterations include not only the use of unsuitable spare parts, but also accessories, fittings or attachments, including rims and tyres.

Genuine Mazda Parts and Genuine Mazda Accessories have been specifically designed for Mazda vehicles.

Other parts and accessories than those mentioned above have not been examined and approved by Mazda unless explicitly stated by Mazda. We cannot certify the suitability of such products. Mazda is not liable for any damage caused by the use of such products.

## 

## Be very careful in choosing and installing add-on electrical equipment, such as mobile telephones, two-way radios, stereo systems, and car alarm systems:

Incorrectly choosing or installing improper add-on equipment or choosing an improper installer is dangerous. Essential systems could be damaged, causing engine stalling, air-bag (SRS) activation, ABS/TCS/DSC inactivation, or a fire in the vehicle.

Mazda assumes no responsibility for death, injury, or expenses that may result from the installation of add-on non-genuine parts or accessories.

#### **Cell Phones Warning**

## 

## Please comply with the legal regulations concerning the use of communication equipment in vehicles in your country:

Use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous. Dialing a number on a cell phone while driving also ties-up the driver's hands. Use of these devices will cause the driver to be distracted and could lead to a serious accident. If a passenger is unable to use the device, pull off the right-of-way to a safe area before use. If use of a cell phone is necessary despite this warning, use a hands-free system to at least leave the hands free to drive the vehicle. Never use a cell phone or other electrical devices while the vehicle is moving and, instead, concentrate on the full-time job of driving.

#### **Declaration of Conformity**

#### ▼ Keyless Entry System/Immobilizer System

**Keyless System Radio approval Marking** 



#### FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been Type Approved by Jamaica: SMA -SKE13D-03/SKE135-01/SKE134-01/ SKE133-02.

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者均不得擅自變 更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時, 應立即停用,並改善至無干擾時方得繼續使用。 前項合法通信,指依電信法規定作業之無線電通信。 低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

#### Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

#### Moldova



MITSUBISHI ELECTRIC CORPORATION HIMEJI WORKS 840, Chiyoda-machi, Himeji, Hyogo 670-8677, Japan Phone +81-79-298-8994 Fax +81-79-298-8875

#### DECLARAȚIA DE CONFORMITATE

c
Keyless System Hand Unit
MITSUBISHI ELECTRIC
SKE13E-01

2. Denumirea producătorului (sau a reprezentantului sau autorizat):

Mitsubishi Electric Corporation, Himeji Works 840, Chiyoda-machi, Himeji, Hyogo 670-8677 Japan

3. Prezenta declarație de conformitate este emisă pe propria răspundere a producătorului.

4. Obiectul declarației:

Descriere:	Keyless System Hand Unit
Marca comercială:	MITSUBISHI ELECTRIC
Model:	SKE13E-01

5. Obiectul declarației descris mai sus este în conformitate cu :

Reglementarea Tehnică "Punerea la dispoziție pe piață a echipamentelor radio", aprobată prin HG nr. 34 din 30.01.2019.

6. Referințele standardelor naționale armonizate relevante folosite sau referințele la alte specificații tehnice, în legătură cu care se declară conformitatea. Referințele sunt enumerate împreună cu numerele de identificare şi cu versiunea acestora, precum si cu data emiterii după caz :

Safety:	SM EN 62368-1:2015
EMC:	SM EN 301 489-1 V1.9.2:2014
RF:	SM EN 300 220-2 V3.1.1:2017
	SM EN 300 330 V2.1.1:2017

 Versiunea Software, Versiunea Hardware, descrierea accesoriilor şi componentelor care permit echipamentului radio declarat să funcționeze conform destinației şi care sunt incluse în declarația de conformitate: N/A

8. Informații suplimentare: N/A

Semnat pentru și în numele:

Numele: Masashi Nojima Data: 3/15/2021 Funcția: Senior Manager, Vehicle Systems Control Module Design Section 1 Electronic Control Modules Dept. A

(ho hopen Semnătura:



MITSUBISHI ELECTRIC CORPORATION HIMEJI WORKS 840, Chiyoda-machi, Himeji, Hyogo 670-8677, Japan Phone +81-79-298-8994 Fax +81-79-298-8875

#### DECLARAȚIA DE CONFORMITATE

 1. Echipamentul radio:

 Descriere:
 Keyless System Hand Unit

 Marca comercială:
 MITSUBISHI ELECTRIC

 Model:
 SKE13E-02

2. Denumirea producătorului (sau a reprezentantului sau autorizat):

Mitsubishi Electric Corporation, Himeji Works 840, Chiyoda-machi, Himeji, Hyogo 670-8677 Japan

3. Prezenta declarație de conformitate este emisă pe propria răspundere a producătorului.

4. Obiectul declarației:

Descriere:	Keyless System Hand Unit
Marca comercială:	MITSUBISHI ELECTRIC
Model:	SKE13E-02

5. Obiectul declarației descris mai sus este în conformitate cu :

Reglementarea Tehnică "Punerea la dispoziție pe piață a echipamentelor radio", aprobată prin HG nr. 34 din 30.01.2019.

6. Referințele standardelor naționale armonizate relevante folosite sau referințele la alte specificații tehnice, în legătură cu care se declară conformitatea. Referințele sunt enumerate împreună cu numerele de identificare şi cu versiunea acestora, precum si cu data emiterii după caz :

Safety:	SM EN 62368-1:2015
EMC:	SM EN 301 489-1 V1.9.2:2014
RF:	SM EN 300 220-2 V3.1.1:2017
	SM EN 300 330 V2.1.1:2017

7. Versiunea Software, Versiunea Hardware, descrierea accesoriilor și componentelor care permit echipamentului radio declarat să funcționeze conform destinației și care sunt incluse în declarația de conformitate: \_N/A

8. Informații suplimentare: N/A

Semnat pentru și în numele:

Numele: Masashi Nojima Data: 3/15/2021 Funcția: Senior Manager, Vehicle Systems Control Module Design Section 1 Electronic Control Modules Dept. A

p. anjin Semnătura:



MITSUBISHI ELECTRIC CORPORATION HIMEJI WORKS

840, Chiyoda-machi, Himeji, Hyogo 670-8677, Japan Phone +81-79-298-8994 Fax +81-79-298-8875

#### DECLARAȚIA DE CONFORMITATE

1. Echipamentul radio: Descriere: Keyless System Hand Unit Marca comercială: Model:

MITSUBISHI ELECTRIC SKE13E-03

2. Denumirea producătorului (sau a reprezentantului sau autorizat):

Mitsubishi Electric Corporation, Himeii Works 840, Chiyoda-machi, Himeji, Hyogo 670-8677 Japan

3. Prezenta declarație de conformitate este emisă pe propria răspundere a producătorului.

4. Obiectul declarației:

Descriere:	Keyless System Hand Unit
Marca comercială:	MITSUBISHI ELECTRIC
Model:	SKE13E-03

5. Obiectul declarației descris mai sus este în conformitate cu :

Reglementarea Tehnică "Punerea la dispoziție pe piață a echipamentelor radio", aprobată prin HG nr. 34 din 30.01.2019.

6. Referintele standardelor nationale armonizate relevante folosite sau referintele la alte specificatii tehnice. în legătură cu care se declară conformitatea. Referințele sunt enumerate împreună cu numerele de identificare și cu versiunea acestora, precum si cu data emiterii după caz :

Safety:	SM EN 62368-1:2015
EMC:	SM EN 301 489-1 V1.9.2:2014
RF:	SM EN 300 220-2 V3.1.1:2017
	SM EN 300 330 V2.1.1:2017

7. Versiunea Software, Versiunea Hardware, descrierea accesoriilor și componentelor care permit echipamentului radio declarat să funcționeze conform destinației și care sunt incluse în declarația de conformitate: N/A

8. Informații suplimentare: N/A

Semnat pentru și în numele:

Numele: Masashi Nojima Data: 3/15/2021 Funcția: Senior Manager, Vehicle Systems Control Module Design Section 1 Electronic Control Modules Dept. A

Semnatura: h. Chajim



MITSUBISHI ELECTRIC CORPORATION HIMEJI WORKS

840, Chiyoda-machi, Himeji, Hyogo 670-8677, Japan Phone +81-79-298-8994 Fax +81-79-298-8875

#### **DECLARAȚIA DE CONFORMITATE**

1. Echipamentul radio: Descriere: Marca comercială: MITSUBISHI ELECTRIC Model: SKE136-01

Keyless System Receiver

2. Denumirea producătorului (sau a reprezentantului sau autorizat):

Mitsubishi Electric Corporation, Himeji Works 840, Chiyoda-machi, Himeji, Hyogo 670-8677 Japan

3. Prezenta declarație de conformitate este emisă pe propria răspundere a producătorului.

4. Obiectul declarației:

Descriere:	Keyless System Receiver	
Marca comercială:	MITSUBISHI ELECTRIC	
Model:	SKE136-01	

5. Obiectul declarației descris mai sus este în conformitate cu :

Reglementarea Tehnică "Punerea la dispoziție pe piață a echipamentelor radio", aprobată prin HG nr. 34 din 30.01.2019.

6. Referințele standardelor naționale armonizate relevante folosite sau referințele la alte specificații tehnice, în legătură cu care se declară conformitatea. Referințele sunt enumerate împreună cu numerele de identificare și cu versiunea acestora, precum si cu data emiterii după caz :

Safety: SM EN 62368-1:2015 EMC: SM EN 301 489-1 V1.9.2:2014 RF: SM EN 300 220-2 V3.1.1:2017

7. Versiunea Software, Versiunea Hardware, descrierea accesoriilor și componentelor care permit echipamentului radio declarat să funcționeze conform destinației și care sunt incluse în declarația de conformitate: N/A

8. Informații suplimentare: N/A

Semnat pentru și în numele:

Numele: Masashi Nojima Data: 3/15/2021 Functia: Senior Manager, Vehicle Systems Control Module Design Section 1 Electronic Control Modules Dept. A

(h. Chopin Semnătura:



MITSUBISHI ELECTRIC CORPORATION HIMEJI WORKS

840, Chiyoda-machi, Himeji, Hyogo 670-8677, Japan Phone +81-79-298-8994 Fax +81-79-298-8875

#### DECLARAȚIA DE CONFORMITATE

1. Echipamentul radio: Descriere: Ko Marca comercială: M Model: SH

Keyless System LFU MITSUBISHI ELECTRIC SKE134-01

2. Denumirea producătorului (sau a reprezentantului sau autorizat):

Mitsubishi Electric Corporation, Himeji Works 840, Chiyoda-machi, Himeji, Hyogo 670-8677 Japan

3. Prezenta declarație de conformitate este emisă pe propria răspundere a producătorului.

4. Obiectul declarației:

Descriere:	Keyless System LFU	
Marca comercială:	MITSUBISHI ELECTRIC	
Model:	SKE134-01	

5. Obiectul declarației descris mai sus este în conformitate cu :

#### Reglementarea Tehnică "Punerea la dispoziție pe piață a echipamentelor radio", aprobată prin HG nr. 34 din 30.01.2019.

6. Referințele standardelor naționale armonizate relevante folosite sau referințele la alte specificații tehnice, în legătură cu care se declară conformitatea. Referințele sunt enumerate împreună cu numerele de identificare și cu versiunea acestora, precum si cu data emiterii după caz :

 Safety:
 SM EN 62368-1:2015

 EMC:
 SM EN 301 489-1 V1.9.2:2014

 RF:
 SM EN 300 330 V2.1.1:2017

7. Versiunea Software, Versiunea Hardware, descrierea accesoriilor și componentelor care permit echipamentului radio declarat să funcționeze conform destinației și care sunt incluse în declarația de conformitate: N/A

8. Informații suplimentare: N/A

Semnat pentru și în numele:

Numele: Masashi Nojima Data: 3/15/2021 Funcția: Senior Manager, Vehicle Systems Control Module Design Section 1 Electronic Control Modules Dept. A

M. Chapin Semnătura:



MITSUBISHI ELECTRIC CORPORATION HIMEJI WORKS 840, Chiyoda-machi, Himeji, Hyogo 670-8677, Japan Phone +81-79-298-8994 Fax +81-79-298-8875

#### DECLARAȚIA DE CONFORMITATE

1. Echipamentul radio: Descriere: Keyless System SSU Marca comercială: MITSUBISHI ELECTRIC Model: SKE133-02

2. Denumirea producătorului (sau a reprezentantului sau autorizat):

Mitsubishi Electric Corporation, Himeji Works 840, Chiyoda-machi, Himeji, Hyogo 670-8677 Japan

3. Prezenta declarație de conformitate este emisă pe propria răspundere a producătorului.

4. Obiectul declarației:

Descriere:	Keyless System SSU	
Marca comercială:	MITSUBISHI ELECTRIC	
Model:	SKE133-02	

5. Obiectul declarației descris mai sus este în conformitate cu :

Reglementarea Tehnică "Punerea la dispoziție pe piață a echipamentelor radio", aprobată prin HG nr. 34 din 30.01.2019.

6. Referințele standardelor naționale armonizate relevante folosite sau referințele la alte specificații tehnice, în legătură cu care se declară conformitatea. Referințele sunt enumerate împreună cu numerele de identificare şi cu versiunea acestora, precum si cu data emiterii după caz :

 Safety:
 SM EN 62368-1:2015

 EMC:
 SM EN 301 489-1 V1.9.2:2014

 RF:
 SM EN 300 330 V2.1.1:2017

7. Versiunea Software, Versiunea Hardware, descrierea accesoriilor și componentelor care permit echipamentului radio declarat să funcționeze conform destinației și care sunt incluse în declarația de conformitate: N/A

8. Informații suplimentare: N/A

Semnat pentru și în numele:

Numele: Masashi Nojima Data: 3/15/2021 Funcția: Senior Manager, Vehicle Systems Control Module Design Section 1 Electronic Control Modules Dept. A

Ch. Chejn -Semnătura:

Mazda Austria Gesellschaft m. b. H. Ernst Diez Strasse 3, 9020 Klagenfurt, Österreich Telephone: 43 - 463 - 38880

#### ▼ Blind Spot Monitoring (BSM) System

Date: Page 1 (9)	23/03/2017	User Guide Reference	Continental 3
Di olu TRED UsenSuide Felerence, STR Sere V2 ut clo		SRR 3-A Short Range Radar	Advanced Driver Assistant Systems

#### Content of Document

Summary: This document covers the mandatory user information due to EU legislation of the Radio equipment directive Note: Only valid and to be used for model / type as listed in the "product related information" below.

A) Follwing Generic info to be provided in the user manual:

Manufacturer Postal Address

B) Following text information to be provided in the user manual in all EU official languages:

- 1) SIMPLIFIED EU DECLARATION OF CONFORMITY
- 2) Frequency band(s) in which the radio equipment operates
- 3) Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equip-
- ment operates

Note: The related information has to be provided to the user in printed format - accompanying the product.

#### Legal Baseline:

The texts provided are based on the following EU directive

"DIRECTIVE 2014/53/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 April 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of radio equipment and repealing Directive 1999/5/EC

#### Product related information:

#### Information identifying the product.

Note: The following table does not have to be added to the end user documentation.

Topic	Information	
Manufacturer Data		
Manufacturer	ADC Automotive Distance Control Systems GmbH	
Manufacturer Address	Peter-Dornier-Strasse 10. 88131 Lindau, Germany	
Product Identification		
Туре	SRR 3-A	
Technical Parameters		
Frequency range	24.05-24.25 GHz	
Maximum Power	100mW (20 dBm) Peak EIRP	
Links		
CE declaration Web page	http://continental.automotive-approvals.com/	

Note: THIS DOCUMENT IS NOT A CE DECLARATION: The simplified EU CE declaration is only valid in combination with the signed version of CE document, which can be downloaded on the related web page. At time of publishing this document the CE declaration of the related product stating compliance with the "DIRECTIVE 2014/53/EU" might not yet be in place.

#### Change history: V2.0:

Language Text (EFTA Countries) and Language Text (Custom Union Agreement between EU and Turkey) added Header is updated from Advanced Radar Sensor to Short Range Radar

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Domier-Straße 10, D-88131 Lindau, Germany Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: www.continental-corporation.com

Date: Page 2 (9)	23/03/2017	User Guide Reference	6 ntinental 5
DeelD: RED_LiserGuideR	Roference_SRR3 A_v2.0.de.a	SRR 3-A Short Range Radar	Advanced Driver Assistant Systems

### Table of Content:

	ent of Document	
Prod	uct related information:	1
Table	of Content:	2
A)	Generic information:	З
Ма	nfuacturer Postal Address	3
B)	Language Text:	3
01_	RED_BG_Bulgarian	3
02	RED ES Spanish	З
03	RED_CS_Czech	З
04	RED_DA_Dansih	З
05	RED DE German	4
- 06	RED ET Estonian	4
07	RED EL Greek	4
- 08	RED_EN_English	4
	RED FR French	
10	RED GA empty no text	5
11	RED HR Creation	5
12	RED_IT_Italian	5
13	RED LV Latvian	5
14	RED_LT_Lithunian	6
15	RED HU Hungarian	6
16	RED MT Maltese	6
17	RED NL Dutch	6
18	RED PL Polish	6
19	RED_PT_Portuguese	7
20	RED_RO_Romanian	7
	RED SK Slovak	
- 22	RED SL Slovenian	7
23	RED FI Finnish	7
24	RED SV Swedish	8
C) [	Language Text (EFTA Countries):	9
01	RED IS Icelandic	9
D) [	Language Text (Custom Union Agreement between EU and Turkey):	9
	RED_TR_Turkish	

Date:	23/03/2017	User Guide Reference	<b>C</b> (14
Page 3 (S	)		Continental 5
DidL:	leiterende sidt?-A v2 utdot-	SRR 3-A	Advanced Driver Assistant Systems
1 10 000 000		Short Range Radar	Havandad Billion Hasiatani Byatanis

#### A) Generic information:

#### Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany	
---	--

#### B) Language Text:

#### 01\_RED\_BG\_Bulgarian

	•
ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА	С настоящото ADC Automotive Distance Control Systems GmbH декларира, че
СЪОТВЕТСТВИЕ	този тип радиосьоръжение SRR 3-А е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на
	следния интернет адрес:
	http://continental.automotive-approvals.com/
	радиочестотнала лента или ленти, в която или които работи
	радиосъоръжението:
	24.05–24.25 GHz
	максималната радиочестотна мощност, излъчвана в радиочестотната лента
	или ленти, в която или които работи радиосъоръжението.:
	100mW (20 dBm) Peak EIRP

#### 02 RED ES Spanish

DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA	Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico SRR 3-A es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección
	Internet siguiente:
	http://continental.automotive-approvals.com/
	Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 24.05–24.25 GHz
	Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico; 100mW (20 dBm) Peak EIRP

#### 03\_RED\_CS\_Czech

ZJEDNODUŠENÉ	Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádio-
EU PROHLÁŠENÍ O	vého zařízení SRR 3-A je v souladu se směrnici 2014/53/EU. Úplné znění EU
SHODĚ	prohlášení o shodě je k dispozici na této internetové adrese:
	http://continental.automotive-approvals.com/
	Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje:
	24.05-24.25 GHz
	Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmitočtových
	pásmech), v němž (v nichž) je rádiové zařízení provozováno:
	100mW (20 dBm) Peak EIRP

#### 04\_RED\_DA\_Dansih

FORENKLET EU- OVERENSSTEMME LSESERKLÆRING	Hermed erklærer ADC Automotive Distance Control Systems GmbH, at ra- dioudstyrstypen SRR 3-A er i overensstemmelse med direktiv 2014/53/EU. EU- overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental.automotive-approvals.com/
---	---

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: <a href="https://www.continental-corporation.com">www.continental-corporation.com</a>

Date: Page 4 (9)	23/03/2017	User Guide Reference	©ntinental 3
Divo FU 17512) U serviu delicen	erence is kitzliki v2 0 kitzk	SRR 3-A Short Range Radar	Advanced Driver Assistant Systems
	Frekvenst 24.05–24.	pänd, som radioudstyret fungerer pä: 25 GHz	
	fungerer p	radiofrekvenseffekt, der udsendes i de frek xa: 20 dBm) Peak EIRP	vensbånd, som radioudstyret

#### 05\_RED\_DE\_German

VEREINFACHTE EU- KONFORMITÄTSER KLÄRUNG	Hiermit erklaft ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp SRR 3-A der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
	http://continental.automotive-approvals.com/
	Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage
	betrieben wird:
	24.05–24.25 GHz
	Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die
	Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung:
	100mW (20 dBm) Peak EIRP

#### 06\_RED\_ET\_Estonian

LIHTSUSTATUD ELI	Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käe-
VASTAVUSDEKLA RATSIOON	solev raadioseadme tüüp SRR 3-A vastab direktiivi 2014/53/EL nõuetele. ELi vasta-
NATSIOON	vusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
	http://continental.automotive-approvals.com/
	Sagedusriba(d), millel raadioseade töötab:
	24.05–24.25 GHz
	Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus:
	100mW (20 dBm) Peak EIRP

#### 07\_RED\_EL\_Greek

ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ	ו טואמטווג טעאאטאאטאין בב טעוואניע טווץ עגטאטאון טוטטנאטע טוט טעטגרוטט.
	http://continental.automotive-approvals.com/
	Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός::
	24.05–24.25 GHz
	η μένιστη ραδιαηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξαπλισμός: 100mW (20 dBm) Peak EIRP

#### 08 RED EN English

SIMPLIFIED EU DECLARATION OF CONFORMITY	Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type SRR 3-A is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/
Frequency band(s) in which the radio equipment operates: 24.05–24.26 GHz	
	Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates. 100mW (20 dBm) Peak EIRP

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Domier-Straße 10, D-68131 Lindau, Germany Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: <a href="https://www.continental-corporation.com">www.continental-corporation.com</a>

Date: Page 5 (9)	23/03/2017	User Guide Reference	Ontinental 🕉	
DoolD IRED Use OuiceReference: SBR8-A v2.0 docs		SRR 3-A Short Range Radar	Advanced Driver Assistant Systems	
09_RED_F	R_French			
DECLARATIC DE CONFORI SIMPLIFIEE	MITE l'équiper 2014/53 l'adresse	Le soussigné, ADC Automotive Distance Control Systems GmbH, déclare que l'équipement radioélectrique du type SRR 3-A est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://continental.automotive-approvals.com/		
		Bandes de fréquences utilisées par l'équipement radioélectrique: 24.05–24.25 GHz		
	sées par	Puissance de radiofréquence maximale transmise sur les bandes de fréquences utili- sées par l'équipement radioélectrique: 100mW (20 dBm) Peak EIRP		

#### 10\_RED\_GA\_empty\_no\_text

Related RED Directive not released.

#### 11\_RED\_HR\_Croation

POJEDNOSTAVLJE NA EU IZJAVA O SUKLADNOSTI	ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa SRR 3-A u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:: http://continental.automotive-approvals.com/	
	Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 24.05-24.25 GHz	
Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 100mW (20 dBm) Peak EIRP		

#### 12\_RED\_IT\_Italian

DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA	II fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio SRR 3-A è conforme alla direttiva 2014/53/UE. Il testo com- pleto della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://continental.automotive-approvals.com/	
	Bande di frequenza di funzionamento dell'apparecchiatura radio: 24.05–24.25 GHz	
	Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui op l'apparecchiatura radio: 100mW (20 dBm) Peak EIRP	

#### 13\_RED\_LV\_Latvian

VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA	Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta SRR 3-A atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pi- eejams šādā interneta vietnē: http://continental.automotive-approvals.com/	
	Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 24.05–24.25 GHz	
Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraidītā sig jaudu.: 100mW (20 dBm) Peak EIRP		

Date: 23/03/2017	User Guide Reference	Ontinental 3
Page 6 (9) Problem Public to the Control SPR ALV 1 does	000.04	Advanced Driver Assistant Systems

#### 14\_RED\_LT\_Lithunian

SUPAPRASTINTA Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo (ren		
ES ATITIKTIES tipas SRR 3-A atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos t DEKLARACIJA prieinamas šiuo interneto adresu:		
	Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai:	
	24.05–24.25 GHz	
	Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (-ose), kurioje	
	(-iose) veikia radijo įrenginiai:	
	100mW (20 dBm) Peak EIRP	

#### 15\_RED\_HU\_Hungarian

	3
EGYSZERÜSİTETT	ADC Automotive Distance Control Systems GmbH igazolja, hogy a SRR 3-A tipusú
EU-	rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilat-
MEGFELELŐSÉGI	kozat teljes szövege elérhető a következő internetes címen::
NYILATKOZAT	http://continental.automotive-approvals.com/
	Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik:
	24.05–24.25 GHz
	Az abban a frekvenciasávban vagy azokban a frekvenciasávokban továbbított max-
	imális jelerősség, amely(ek)ben a rádióberendezés üzemel:
	100mŴ (20 dBm) Peak EIRP

#### 16\_RED\_MT\_Maltese

DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL- UE	B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' taghmir tar-radju SRR 3-A huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad- dikjarazzjoni ta' konformità tal-UE huwa disponibbli fdan l-indirizz tal-Internet li gej; http://continental.automotive-approvals.com/
	II-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 24.05–24.25 GHz
	II-potenza massima tal-frekwenza tar-radju trazmessa fil-medda/meded tal- frekwenza li jahdem fihom il-taghmir tar-radju: 100mW (20 dBm) Peak EIRP

#### 17\_RED\_NL\_Dutch

VEREENVOUDIGDE EU- CONFORMITEITSV ERKLARING	Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur SRR 3-A conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/
	Frequentieband(en) waarin de radioapparatuur functioneert: 24.05–24.25 GHz
	Maximaal radiofrequent vermogen uitgezonden in de frequentleband(en) waarin de radioapperatuur functioneert. 100mW (20 dBm) Peak EIRP

#### 18\_RED\_PL\_Polish

UPROSZCZONA DEKLARACJA ZGODNOŚCI UE	ADC Automotive Distance Control Systems GmbH niniejszym oświadcza, że typ urządzenia radiowego SRR 3-4 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://continental.automotive-approvals.com/
	Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 24.05–24.25 GHz

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany Tel: +49.8283.9695-0, Fax: +49.8382.9699-57; Internet: <u>www.continental-compation.com</u>

Date: Page 7 (9)	23/03/2017	User Guide Reference	©ntinental 🄧	
Dorit. TPED UserCulde Reference StarRew v2.0.0000		SRR 3-A Short Range Radar	Advanced Driver Assistant Systems	
Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotli- wości, w którym (których) pracuje urządzenie radiowe: 100mW (20 dBm) Peak EIRP				

#### 19\_RED\_PT\_Portuguese

DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA	O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio SRR 3-A estã em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet http://continental.automotive-approvals.com/
	A(s) banda(s) de frequências em que o equipamento de rádio funciona: 24.05–24.25 GHz
	A potência máxima de radiofrequências transmitida na(s) banda(s) de frequências em que o equipamento de rádio funciona: 100mW (20 dBm) Peak EIRP

#### 20\_RED\_RO\_Romanian

DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ	Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio SRR 3-A este în conformitate cu Directiva 2014/53/UE. Textul in- tegral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://continental.automotive-approvals.com/
	Banda (benzile) de frecvențe în care funcționează echipamentul radio: 24.05–24.25 GHz
	Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 100mW (20 dBm) Peak EIRP

#### 21\_RED\_SK\_Slovak

ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE	ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rádiové zariadenie typu SRR 3-A je v súlade so smernicou 2014/53/EU. Uplné EU vyhlásenie o zhode je k dispozícii na tejto inter netovej adrese: http://continental.automotive-approvals.com/
	Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje: 24.05–24.25 GHz
	Maximálny vysokofrskvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 100mW (20 dBm) Peak EIRP

#### 22\_RED\_SL\_Slovenian

POENOSTAVLJENA IZJAVA EU O SKLADNOSTI	ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme SRR 3-A skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: htp://continental.automotive-approvals.com/
	Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 24.05–24.25 GHz
	Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali paso- vih, na katerih radijska oprema deluje. 100mV/ (20 dBm) Peak EIRP

#### 23\_RED\_FI\_Finnish

	_	-	
YKSINK TU EU-	ERTA	AISTET	ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi SRR 3-A on direktiivin 2014/53/EU mukainen. EU-
A.D.C. Aut	cmoti	ve Distan	ce Control Systems GmbH, Sales Dept., Peter-Dornier-Straße 10, D-88131 Lindau, Germany

A.D.C. Automotive Distance Control Systems GmbH, Sales Dept., Peter-Domier-Straise 10, D-88131 Lindau, German Tel: +49.8283.9699-0, Fax: +49.8382.9699-57; Internet: <u>www.continental-corporation.com</u>

Date: 23/03/2017 Page 8 (9) DedD RED UzeroluideTerkinence SR13-A v3 0.0000		/2017	User Guide Reference	<b>O</b> ntinental 3
		18-A. v2 0.co.cc	SRR 3-A Short Range Radar	Advanced Driver Assistant Systems
VAATIMUS AISUUSVAI		internetos	enmukaisuusvakuutuksen täysimittainen te :oitteessa: :inental.automotive-approvals.com/	eksti on saatavilla seuraavassa
		Radiotaaj 24.05–24	uudet, joilla radiolaite toimii: .25 GHz	
			ahdollinen lähetysteho radiotaajuuksilla, joi 20 dBm) Peak EIRP	lla radiolaite toimii:

## 24\_RED\_SV\_Swedish

FÖRENKLAD EU- FÖRSÄKRAN OM ÖVERENSSTÄMME LSE	Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning SRR 3-A överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://continental.automotive-approvals.com/
	Det eller de frekvensband där radioutrustningen arbetar: 24.05–24.25 GHz
	Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband dår radioutrustningen arbetar: 100mW (20 dBm) Peak EIRP

I	Date: 23/03/201	User Guide Reference	Cardlen and all d
	Page 9 (S)		Continental 🔨
	Leelo IRED - assi Shina Isalaha ka ARTSAS - 2	SRR 3-A Short Range Radar	Advanced Driver Assistant Systems

#### C) Language Text (EFTA Countries):

#### 01\_RED\_IS\_Icelandic

EINFÖLDUÐ ESB SAMRÆMISYFIRLÝ SING	I lér mað lýsir ADC Automotive Distance Contro Systems GmbH því yfir, að fjarskic- tabúnaðurinn að gerð SRR 3-A er í samræmri við tilskipun 2014/55/ ESE. Textinn í fullri engd um Samræmisyfir ýsingu ESB er aðgengilegur á eftirfarandi verfangi: http://continuntal.automotivo approvals.com/
	Banolusido(ir), som fjarskiptapúr aðurinn starfar (: 24.05–24.26 GHz
	l lámarks fjarskiptadöni sendistyrkleika í pandbreiddinn í/bendbreiddunum sem fjar- skiptabúnaðurinn starfar í 100mW (20 dBm) ⊐eak EIRP

#### D) Language Text (Custom Union Agreement between EU and Turkey):

#### 01\_RED\_TR\_Turkish

BASITLEŞTIRILMIŞ	Işbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi SRR 3-A tibi	
AB UYGUNLUK	radyo ekipmaninin 2014/63/AB sayili direkule uygun olduğunu beyan ecel. AB üy-	
BEYANI	gunluk beyanının tam metni aşağıdak. İnternet adresinde meyouttur:	
	http://continental.automotive-approvals.com/	
	Radyo binazinin çalışoği frekans bandı/bantlar	
	24.05–24.25 GHz	
	Radyo ekipmanının çalıştığı frekans bandır da/bantlarında iletilen maksimum radyo	
	frekansi gücü:	
	100mW (20 dBm) Peak FIRP	

#### GEORGIA

Manufacture Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Domier-Strasse 10, 88131 Lindau, Germany



2. DoC (Declaration of Conformity) in local languages

3. Link to the original DoC

http://continental.automotive-approvals.com/

เพื่อหลีกเลี่ยงจากการสัมผัสสนามแม่เหล็กไฟฟ้า ควรอยู่ห่างจาก เซ็นเซอร์ตรวจจับ ใน ระยะไม่ต่ำกว่า 20 เซนติเมตร

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามข้อกำหนด ของคณะกรรมการ กิจการกระจายเสียง กิจการโทรทัศน์ และ กิจการโทรคมนาคมแห่งชาติ(กสทช.)

เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้อง ตามมาตรฐาน ความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้ เครื่องวิทยุคมนาคมที่ คณะกรรมการ กิจการกระจายเสียง กิจการ โทรทัศน์ และกิจการโทรคมนาคมแห่งชาติ(กสทช.) กำหนด

\*มีเฉพาะบางรุ่น

FCC ID : OAYSRR3A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

UΔF

**INDONESIA** 



Importer No: FT-2222




From the Lebanese Telecommunications Ministry: Type Approval Number: 12421/O&M/2014

#### BAHRAIN

The Equipment Identified hereon is approved for use under the following rules

1- This equipment must not cause harmful interference to other services.

2- This equipment is subject to harmful interference, and the owner of this equipment must not claim for protection.

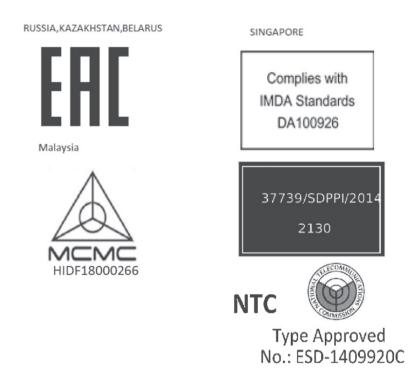

TAIWAN



第十二條 經型式認證合格之低功率射頻電機, 非經許可, 公司, 商號或使用者均不得擅自變更頻率, 加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用,並改善至無干擾時方得繼續使用。 前項合法通信,指依電信法規定作業之無線電通信。 低功率射頻電機須忍受合法通信或工業,科學及醫療用電波輻射性電機設備之干擾。

# Customer Information Declaration of Conformity

#### UKRAINE



справжнім (найменування виробника ADC Automotive Distance Control Systems GmbH) заявляє, що тип радіообладнання (позначення типу радіообладнання SRR3-A) відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою: http://continental.automotive-approvals.com/

#### sDoc Ukrainian

найменування та адресу	АДС Автомотів Дістанс Контрол Сістемс ГмбХ
виробника	Пітер-Дорніер-Штрассе 10, 88131, Ліндау, Німеччина
	(ADC Automotive Distance Control Systems GmbH
	Peter-Domier-Strasse 10, 88131, Lindau, Germany)
СПРОЩЕНА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ	Цим ADC Automotive Distance Control Systems GmbH заявляе, що радіообладнання типу SRR3-A відповідає вимогам Директиви 2014/53/EU. Повний текст декларації
	ЄС про відповідність доступний за наступною адресою в мережі Інтернет: http://continental.automotive-approvals.com/
	Частотний діапазон(-и), в якому працює радіообладнання:
	24.05-24.25 ГГц
	Максимальна потужність радіочастотного сигналу, що передається у частотному діапазоні(-ax), в якому працює радіообладнання:
	100 мВт (20 дБм) Пікова ефективна потужність випромінювання

SRR3-A has been registered with: UA RF:1CONT 0006

DOMINICAN REPUBLIC, EL SALVADOR,

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

 this device may not cause harmful interference, and
 this device must accept any interference received, including interference that may cause undesired operation.

#### CAUTION TO USERS

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# ▼ Tyre Pressure Monitoring System





[Taiwan]


#### CCAE18LP0780T6

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機.非經許可,公司、商號或使用者均不得擅自變更頻率、加大功率或 變更原設計之特性及功能。

第十四條 低功率转模電之使用不得影響飛战安全及干蛋合法通信:經發現有干极現象時、應立即停用、並改善 至無于至時方得繼續使用。即項合法通信、指放電信法規定作素之無線電通信。低功率射頻電機項忍受 合法通信成工業、科學及醫療用電波輻射性電機設備之干優。

[Jordan]



[UAE ]

[Indonesia]

TRA
REGISTERED No:
ER59583/17
DEALER No:
DA36975/14

55266/SDPPI/2018 2684

[EU(CE)]

http://continental-homologation.com/

[Russia]



Декларация соответствии ТР ТС 020/2011 ЕАЭС № RU Д-DE. 3М03.В.00148 от 05.03.2018, действительна по 04.03.2023, зарепистрирована органом по серинфикации продукции ФГУП Ордена Трудового Кранског Занамени научно-исследовательский институт радно «Исплатательный центр ««Мета»

[Israel]

- א. השימוש במכשיר הוא על בסיס "משני" ופטור מרישיון הפעלה אלחוטי.
  - כלומר לא מוגן מהפרעות, וללא הפר למערכות אחרות.
- ב. רק "בפעולות בזק" לשימוש עצמי של הלקוח בלבד, הציוד פטור מרישיון הפעלה אלחוטי. מתן "שרות בזק" לצד ג' מחייב רישיון מיוחד ממשרד התקשורת
  - ג. אסור להחליף את האנטנה המקורית של המכשיר, ולא לעשות בו כל שינוי טכני אחר.

[Ukraine]

http://continental-homologation.com/

▼ Radio System



Модель №.: CR-LM75F2JM / CR-LM75F3JM ласковый: Panasonic Страна происхождения: Малайзия



Модель №.: CQ-TM68U14М / CQ-TM68U24М ласковый: Panasonic Страна происхождения: Малайзия

# EHC

Модель №.: CQ-TM69U04М / CQ-TM69U14М ласковый: Panasonic Страна происхождения: Малайзия

# EHC

Модель №.: CQ-TM69U24M / CQ-TM69U34M ласковый: Panasonic Страна происхождения: Малайзия

# Customer Information Declaration of Conformity

No.355,2017(Ukraine)

#### Виробники:

назву компанії; Panasonic Corporation адресу; 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-city, Kanagawa-ken, 224-8520, Japan

#### Імпортер:

назву компанії; Auto Інтернатіональ адресу; 04073, 22-а Stepana Bandery Ave., Kiev, Ukraine

справжнім Panasonic Corporation заявляє, що тип радіообладнання [\*] відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за такою адресою. https://service.panasonic.ua/ (розділ «Технічне регулювання») [\*] CR-LM75F2JM、CR-LM75F3JM

# ▼ Audio System


# Type B (touchscreen)

български [Bulgarian]	С настоящото Visteon Corporation декларира, че този тип радиосъоръжение MAZDA_GEN_65_CMU е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери	
f=Serier i	на следния интернет адрес: https://www.visteon.com/car.eu.compliance.com	
Čeština	Timto Visteon Corporation prohlašuje, že typ radioveho zařízení MAZDA_GEN_65_CMU je v souladu se směrnici	
[Czech]	2014/53/EU. Uplne znění EU prohlašení o shodě je k dispozici na teto internetove adrese: https://www.visteon.com/car.eu.compliance.com	
Dansk	Hermed erklarer Visteon Corporation, at radioudstyrstypen MAZDA GEN 65 CMU er i overensstemmelse med direktiv	
[Danish]	2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.visteon.com/car.eu.compliance.com	
Deutsch	Hiermit erklart Visteon Corporation, dass der Funkanlagentyp MAZDA GEN 65 CMU der Richtlinie 2014/53/EU	
[German]	entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar https://www.visteon.com/careu.compliance.com	
Eesti	Kaesolevaga deklareerib Visteon Corporation, et kaesolev raadioseadme tuup MAZDA GEN 65 CMU vastab direktiiv	
[Estonian]	2014/53/EL nouetele. ELi vastavusdeklaratsiooni taielik tekst on kattesaadav jargmisel internetiaadressil: https://www.visteon.com/car.eu.compliance.com	
English	Hereby, Visteon Corporation declares that the radio equipment type MAZDA_GEN_65_CMU is in compliance with	
1.0	Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.visteon.com/car.eu.compliance.com	
Espanol	Por la presente, Visteon Corporation declara que el tipo de equipo radioeléctrico MAZDA_GEN_65_CMU es conforme	
[Spanish]	con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.visteon.com/car.eu.compliance.com	
Ελληνική	Με την παρούσα α/η Visteon Corporation, δηλώνει ότι ο ραδιοεξοπλισμός MAZDA GEN 65 CMU πληροί την οδηγία	
[Greek]	2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυα. https://www.visteon.com/car.eu.compliance.com	
Francais	Le soussigne, Visteon Corporation, declare que l'equipement radioelectrique du type MAZDA GEN 65 CMU est	
[French]	conforme à la directive 2014/53/UE. Le texte complet de la declaration UE de conformite est disponible à l'adresse internet suivante: https://www.visteon.com/car.eu.compliance.com	
Hrvatski (Croatian)	Visteon Corporation ovime izjavljuje da je radijska oprema tipa MAZDA GEN 65 CMU u skladu s Direktivom	
10. / 1000. / 11 • 11 • 11 · 12 / 12 / 12 / 12 / 12 / 12 / 12 /	2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedečoj internetskoj adresi: https://www.visteon.com/car.eu.compliance.com	
Italiano	Il fabbricante, Visteon Corporation, dichiara che il tipo di apparecchiatura radio MAZDA GEN 65 CMU e conforme alla	
[Italian]	direttiva 2014/53/JE. Il testo completo della dichiarazione di conformita UE e disponibile al seguente indirizzo Interne https://www.visteon.com/car.eu.compliance.com	
Latviešu valoda	Ar šo Visteon Corporation deklarē, ka radioiekārta MAZDA GEN 65 CMU atbilst Direktīvai 2014/53/ES. Pilns ES	
[Latvian]	atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.visteon.com/car.eu.compliance.com	
Lietuvių kalba [Lithuanian]	Aš, Visteon Corporation, patvirtinu, kad radijo įrenginių tipas MAZDA_GEN_65_CMU atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.visteon.com/car.eu.compliance.com	
Nederlands [Dutch]	Hierbij verklaar ik, Visteon Corporation, dat het type radioapparatuur MAZDA_GEN_65_CNU corform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.visteon.com/car.eu.compliance.com	
Malti	B'dan, Visteon Corporation, niddikiara li dan it-tip ta' taonmir tar-radiu MAZDA GEN 65 CMU huwa konformi	
[Maltese]	mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformita tal-UE huwa disponibbli f'dan l-indrizz tal-Internet l dej: https://www.visteon.com/car.eu.compliance.com	
Maqvar	Visteon Corporation igazolia, hogy a MAZDA GEN 65 CMU tipusu radioberendezes medfelel a 2014/53/EU	
[Hungarian]	iranyelvnek. Az EU-megfelelősegi nyilatkozat teljes szovege elerhető a kovetkező internetes cimen: https://www.visteon.com/car.eu.compliance.com	
Polski	Visteon Corporation niniejszym oświadcza, że typ urządzenia radiowego MAZDA GEN 65 CMU jest zgodny z	
[Polish]	dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www.visteon.com/car.eu.compliance.com	
Portugues	O(a) abaixo assinado(a) Visteon Corporation declara que o presente tipo de equipamento de radio	
[Portuguese]	MAZDA_GEN 65 CMU esta em conformidade com a Diretiva 2014/53/UE. O texto integral da declaracao de conformidade esta disponível no seguinte endereco de Internet: https://www.visteon.com/car.eu.compliance.com	
Romană	Prin prezenta, Visteon Corporation declară că tipul de echipamente radio MAZDA_GEN_65_CMU este in conformitate	
[Romanian]	cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet https://www.visteon.com/car.eu.compliance.com	
Slovenščina	Visteon Corporation potrjuje, da je tip radijske opreme MAZDA_GEN_65_CMU skladen z Direktivo 2014/53/EU.	
[Slovenian]	Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu https://www.visteon.com/car.eu.compliance.com	
Slovenčina	Visteon Corporation týmto vyhlasuje, že rádiové zariadenie typu MAZDA_GEN_65_CMU je v súlade so smernicou	
[Slovak]	2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícil na tejto internetovej adrese: https://www.visteon.com/car.eu.compliance.com	
Suomi	Visteon Corporation vakuuttaa, etta radiolaitetyyppi MAZDA_GEN_65_CMU on direktiivin 2014/53/EU mukainen.	
[Finnish]	EU-vaatimustenmukaisuusvakuutuksen täysimittäinen teksti on saatavilla seuraavassa internetosoitteessa: https://www.visteon.com/car.eu.compliance.com	
Svenska	Harmed forsakrar Visteon Corporation att denna typ av radioutrustning MAZDA GEN 65 CMU överensstämmer med	
[Swedish]	direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress https://www.visteon.com/car.eu.compliance.com	


# Customer Information Declaration of Conformity

Islenska	Hér með Visteon Corporation lýsir yfir að tegund þráðlausan búnað MAZDA_GEN_65_CMU er í samrærni við tilskipur	
[Icelandic]	2014/G3/ESB. The fullur texti af ESB-samræmisyfirlýsingu er í boði á eftirfarandi veffangi:	
	https://www.visteon.com/car.eu.compliance.com	
Norsk	Herved Visteon Corporation erklærer at radioutstyr type MAZDA GEN 65 CMU er i samsvar med direktiv 2014/53/EU.	
[Norwegian]	Den fullstendige teksten i EU-samsvarserklæringen er tilgjengelig på følgende internettadresse:	
	https://www.visteon.com/car.eu.compliance.com	
Türkçe	Burada, Visteon Corporation radyo ekipmani türünün MAZDA GEN 65 CMU 2014/53/EU direktiflerine uyumlu	
[Turkish]	oldugunu beyan eder. Uyumu beyanının tam metni belirtilen internet sitesinde mevcuttur:	
	https://www.visteon.com/car.eu.compliance.com	

Frequency Range	2400-2483.5MHz	
Output Dower	Bluetooth < 4dBm	
Output Power	WLAN < 30dBm	

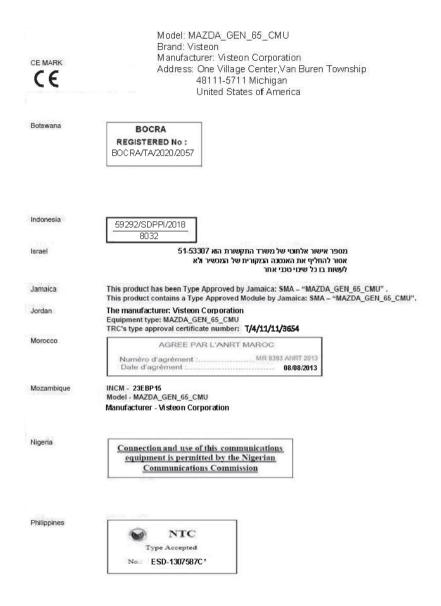

# Customer Information Declaration of Conformity

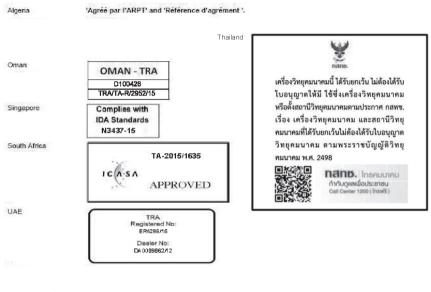

Ukraine

Модель: MAZDA\_GEN\_65\_CMU Діапазон частот: 2400 - 2483.5 МГц Максимальна потужність вихідної потужності (Bluetooth): 4 дБм Максимальна потужність вихідної потужності (WLAN): 30 дБм

Дана Visteon Corporation заявляє, що тип радіообладнання (позначення типу радіообладнання) відповідає Технічному регламенту радіообладнання; Повний текст декларації про відповідність можна знайти на сайті за адресою: https://www.visteondocs.com/. Taiwan



Product Name: Automotive Electronics Infotainment Head Unit

Certification Name: MAZDA\_GEN\_65\_CMU

Certificate Holder: Visteon Corporation

#### 警語

低功率電波輻性電機管理辦法

第十二條經型式認證合格之低功率射頻電機,非經許可,公司,商號或使用者均不得擅自變更頻率,加大功 率或變更原設計之特性及功能。 第十四條低功率射頻電機之使用不得影響飛航影響安全及干擾合法通信,經發現有干擾現象時.應立即停

第一回床は効率効果電機と使用で特別者派別が各女主及一後ロボ 回信,起気効用「変効素味,感」が存 用,並改善至無干擾時方得繼續 使用。 が商みたえ合 た。零合注想会体素さ無効素に信仰内支配感動機素 スペムナス合きて素 私見工殿夜田

前項合法通信,指一電信法規定作業之無線電通信低功率射頻電機需忍受合法通信或工業,科學及醫療用 電波輻射性電機設備之干擾。



ANATEL web link: http://www.anatel.gov.br/institucional/

"Este equipamento ope ra em character secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em character primário"

FCC ID: NT862932

#### <u>FCC</u>

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

#### Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Type C (touchscreen)

Model Name:	MAZDA_68_CMU
Type of product:	Automotive Electronics Infotainment Head Unit
Brand Name:	Visteon Corporation
	One Village center drive, Van Buren Township
	48111-5711 Michigan
	United States of America

CE MARK:

CE

Simplified EU DoC:

Hereby, Visteon Corporation declares that the radio equipment type MAZDA\_68\_CMU is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.visteondocs.com/

Български	С това фирмата Visteon Corporation декларира, че частта MAZDA_68_CMU е в съответствие	
[Bulgarian]	със съществените изисквания и други приложими разпоредби на директивата 2014/53/EC.	
Česky	Visteon Corporation tímto prohlašuje, že tento MAZDA_68_CMU je ve shodě se základními požadavky a	
[Czech]	dalšími příslušnými ustanoveními směrnice 2014/53/EU.	
Dansk	Undertegnede Visteon Corporation erklærer herved, at følgende udstyr MAZDA_68_CMU overholder de	
[Danish]	væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.	
Deutsch	Hiermit erklärt Visteon Corporation, dass sich das Gerät MAZDA_68_CMU in Übereinstimmung mit den	
[German]	grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet	
Eesti	Käesolevaga kinnitab Visteon Corporation seadme MAZDA_68_CMU vastavust direktiivi 2014/53/EL	
[Estonian]	põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.	
English	Hereby, Visteon Corporation, declares that this MAZDA_68_CMU is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.	
Español	Por medio de la presente Visteon Corporation declara que el MAZDA_68_CMU cumple con los requisito	
[Spanish]	esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/UE.	
Ελληνική	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Visteon Corporation ΔΗΛΩΝΕΙ ΟΤΙ ΜΑΖDΑ_68_CMU ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΕ	
[Greek]	ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/ΕΚ.	
Français	Par la présente Visteon Corporation déclare que l'appareil MAZDA_68_CMU est conforme aux exigences	
[French]	essentielles et aux autres dispositions pertinentes de la directive 2014/53/UE.	

Italiano	Con la presente Visteon Corporation dichiara che questo MAZDA_68_CMU è conforme ai requisiti	
[Italian]	essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/UE.	
Latviski	Ar šo Visteon Corporation deklarē, ka MAZDA_68_CMU atbilst Direktīvas 2014/53/EK būtiskajām	
[Latvian]	prasībām un citiem ar to saistītajiem noteikumiem.	
Lietuvių [Lithuanian]	Šiuo Visteon Corporation deklaruoja, kad šis MAZDA_68_CMU atitinka esminius reikalavimus ir kitas 2014/53/EB Direktyvos nuostatas.	
Nederlands	Hierbij verklaart Visteon Corporation dat het toestel MAZDA_68_CMU in overeenstemming is met de	
[Dutch]	essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EG.	
Malti	Hawnhekk, Visteon Corporation, jiddikjara li dan MAZDA_68_CMU jikkonforma mal-htigijiet essenzjali u	
[Maltese]	ma provvedimenti ofirajn relevanti li hemm fid-Dirrettiva 2014/53/UE.	
Magyar	Alultrott, Visteon Corporation nyilatkozom, hogy a MAZDA_68_CMU megfelel a vonatkozó alapvető	
[Hungarian]	követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.	
Polski	Niniejszym Visteon Corporation oświadcza, że MAZDA_68_CMU jest zgodny z zasadniczymi wymogami	
[Polish]	oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/UE.	
Português	Visteon Corporation declara que este MAZDA_68_CMU está conforme com os requisitos essenciais e outr	
[Portuguese]	disposições da Directiva 2014/53/UE.	
Slovensko	Visteon Corporation izjavlja, da je ta MAZDA_68_CMU v skladu z bistvenimi zahtevami in ostalimi	
[Slovenian]	relevantnimi določili direktive 2014/53/ES.	
Slovensky	Visteon Corporation týmto vyhlasuje, že MAZDA_68_CMU spĺňa základné požiadavky a všetky príslušné	
[Slovak]	ustanovenia Smernice 2014/53/EÚ.	
Suomi	Visteon Corporation vakuuttaa täten että MAZDA_68_CMU tyyppinen laite on direktiivin 2014/53/EU	
[Finnish]	oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.	
Svenska	Härmed intygar Visteon Corporation att denna MAZDA_68_CMU står I överensstämmelse med de	
[Swedish]	väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.	
Íslenska	Hér með lýsir Visteon Corporation yfir því að MAZDA_68_CMU er í samræmi við grunnkröfur og aðrar	
[Icelandic]	kröfur, sem gerðar eru í tilskipun 2014/53/EU.	
Norsk	Visteon Corporation erklærer herved at utstyret MAZDA_68_CMU er i samsvar med de grunnleggende krav	
[Norwegian]	og øvrige relevante krav i direktiv 2014/53/EF.	
Crnogorski jezik, Црногорски језик [Montenegrin]	Ovim, Visteon Corporation, izjavljuje da ovaj MAZDA_68_CMU je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 2014/53/UE.	

Frequency Range	2400-2483.5MHz	
Output Power	Bluetooth < 4dBm	
	WLA.N <33dBm	

#### <u>FCC</u>

#### FCC ID: NT8-MAZDA68CMU

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

#### Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Indonesia	68111/SDPPI/2020 8032 Dilarang melakukan perubahan spesifikasi yang dapat merimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkangan sekitarnya		
Israel	מספר אישור אלחוטי של משרד התקשורת הוא 51-73011 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר		
Jamaica	This product has been Type Approved by Jamaica: SMA - "MAZDA_68_CMU". This product contains a Type Approved Module by Jamaica: SMA "MAZDA_68_CMU".		
Jordan	The manufacturer: Visteon Comporation Equipment type: MAZDA_68_CMU TRC's type approval certificate number: T/4/11/11/3277		
Могоссо	AGREE PAR L'ANRT MAROC Numéro d'agrément		
Nigeria			

<u>Connection and use of this communications</u> <u>equipment is permitted by the Nigerian</u> <u>Communications Commission</u>

# Customer Information Declaration of Conformity



Діапазон частот: **2400 - 2483.5** МГц Максимальна потужність вихідної потужності (Bluetooth): 4 **дБм** Максимальна потужність вихідної потужності (WLAN): 33 **дБм** 

Дана Visteon Corporation заявляє, що тип радіообладнання (позначення типу радіообладнання) відповідає Технічному регламенту радіообладнання; Повний текст декларації про відповідн?ість можна знайти на сайті за адресою: https://www.visteondocs.com/. Taiwan



Product Name: Automotive Electronics Infotainment Head Unit

Certification Name: MAZDA\_68\_CMU

Certificate Holder: Visteon Corporation

警語

低功率電波輻性電機管理辦法

第十二條經型式認證合格之低功率射頻電機,非經許可,公司,商號或使用者均不得擅自變更頻率,加大功 率或變更原設計之特性及功能。

第十四條低功率射頻電機之使用不得影響飛航影響安全及干擾合法 通信,經發現有干擾現象時,應立即停 用,並改善至無干擾時方得繼續使用。

前項合法通信,指一電信法規定作業之無線電通信低功率射頻電機需 忍受合法通信或工業,科學及醫療用 電波輻射性電機設備之干擾。

Brazil



ANATEL web link: http://www.anatel.gov.br/institucional/


Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados

#### Simplified EU Declaration of Conformity :

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows: Hereby, [*Huizhou Desay SV Automotive Co., Ltd.*] declares that the radio equipment type [designation of type of radio equipment] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: http://www.desaysv.com/index.php?id=oumeng

Importer, address: Mazda Motor Logistics Europe NV Blaasveldstraat 162, 2830 Willebroek, België

Max power transmitter(Wireless Charging): 15W Operating Frequency: 127KHz NFC Operating Frequency:13.56Mhz Maximum RF Output Power(NFC): 6.48 dBuA/m at 3m distance



For more certification marks, please see the product label.

#### Taiwan

RoHS 含有物質標識表,請至下列網址查閱: <u>https://www.desaysv.com/index.php?id=twrohs</u>

台灣 NCC 警語:

低功率電波輻射性電機管理辦法

- 第十二條 經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者均不得擅自變更頻率、加大 功率或變更原設計之特性及功能。
- 第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用, 並改善至無干擾時方得繼續使用。 前項合法通信,指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、 科學及醫療用電波輻射性電機設備之干擾。

商標: Mazda

# ▼ Mazda Radar Cruise Control (MRCC)/Distance Recognition Support System (DRSS)/Smart Brake Support (SBS)

Transmitter
Manufacturer: Address:

tter Model: DNMWR008 Operation froquency: 76.5 GHz Maxmum output power. 6.31 W cr less DENSO CORPORATION 1-1.5 Nowar-chok. Karlyas-thi. Alokii-ken. 443-886 I Japan The latest: "DECLARA TON of CONFORMITY" (Doc) is saviable at the following address: Intras.//www.denso.co.jo/en/contactus/form/doc/index.html

English	Hersby, DENSO CORFORATION declares that the radio equipmenttype DNMWR006 is in compliance with Directive 2014/53/EU.The full text of the EU declaration of conformity is available at thefollowing internet address:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	DENSO CORPORATION vakuuttaa, että radiolaitetyyppi DNMWR006on direktiivin 2014/53/EU mukainen.EU-
innish	vaatimusten mukaisuusva kuutuksen täysimittainen tekstion saatavil a seuraavassa internetosoitteessa:
	https://www.denso.co.jp/en/contactus/fom/doc/index.html
	Hierbij verklaar ik, DENSO CORPORATION, dat het typeradioapparatuur DNMWR006 conform is met Richtlijn
lutch	2014/53/EU.De volledige tekst van de EU-conformiteitsve klaring kan wordengeraadpleegd op het volgende
	internetadres:
	Le soussigné, DENSO CORPORATION, déclare que l'équipementradioélecrique du type DNMWR006 est conforme à
rencl	la directive2014/53/UE. Le texte complet de la déclaration JE de conformité est disponibleà l'adresse internet suivante:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Harmed försakrar DENSO CORPORAT ON att denna typ avradioutrustning DNMWR006 överensstammer med direkti
iwedish	2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns päföljande webbadress:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Hermed erklærer DENSO CORPORATION, at radioudstyrstypenDNMWR006 er i overensstemmelse med direktiv
lanish	2014/53/EU. EU-overensstemmelseserkæringens fulde tekst kan findes påfølgende internetacresse:
aman	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Hiermit erklart DENSO CORPORATION, dass der FunkarlagentypDNMWR006 der Richtlinie 2014/53/EU
ierman	entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter derfolgenden Internetadresse verfügbar:
an nan	https://www.denso.co.ip/en/contactus/form/doc/index.html
	Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι οραδιοιξοπλισμός DNMWR006 πληροί την οδηγία
ireek	2014/53/ΕΕ.Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διοτίθεται στηνακόλουθη ιστοσελίδα στο διαδίκτυο:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Il faobricante, DENSO CORPORATION dichiara che il tipo diapparecchiatura radio DNMWR006 è conforme alla
talian	direttiva 2014/53/UE.II testo completo della dichiarazione di conformità UE è disponibileal seguente indirizzo Internet:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Por la presente, DENSO CORPORATION declara que el tipo de equiporadioeléctrico DNMM/R006 es conforme con la
ipanish	Directiva 2014/53/UE.El texto completo de la declaración JE de conformidad estádisconible en la dirección Internet
	siguiente:
	O(a) abaixo assinadoia) DENSO CORPORATION declara que opresente tipo de equipamento de rádic DNMWR006
ortuguese	está emconformidade com a Dretiva 2014/53/UE.O texto integral da declaração de conformidade está disponívelno
	seguinte endereço de Internet: https://www.denso.co.jp/en/contactus/form/doc/index.html
	B'dan, DENSO CORFORATION, niddikara li dar it-tip ta' taghmirtar-radju DNMWR006 huwa konformi mad-Direttiva
laltese	2014/53/UE, t-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwedisponibbli f'dan Lindirizz tal-Internet li jegi
alcass	https://www.denso.co.ip/en/cortactus/fom/doc/index.html
	Käesolevaga deklareerib DENSO CORPORATION, et käesolevraadioseadme tüüp ENMWR006 vastab direktiivi
stonian	2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kätesaadav järgmiselintemetiaadressil:
scoman	
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	DENSO CORPORATION igazolja, hogy a DNMWR006 tí pusúrádióberendezés megfelel a 2014/53/EU irányelvnek.Az
lungarian	EU-megfelelőségi nyilatkozat teljes szövege elérhető a következőirternetes címen:
	https://www.denso.co.jp/en/contactus/fom/doc/index.html
	DENSO CORPORATION týmto vyhlasuje, že ráciové zariadenietypu DNMWR006 je v súlade so smerricou 2014/53/E
Slovak	Ú. Úplně EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení DNMV/R006 je v souladu se směmicí
)zech	2014/53/EU. Jplné znění EU prohlášení o shodě je k dispozici na tětointernetové adrese:
	https://www.denso.co.jp/en/contactus/form/doc/index.html
	DENSO CORPORATION potrjuje, da je tip radijske opreme DNMWR006skladen z Direktivo 2014/53/EU.Celotno
lovene	besodilo izjave EU o skladnost je na vojo na naslednjomspletnom naslovu:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Aš, DENSO CORPORATION, patvirtinu, kad radijo jrengir ju tipasDNMWR036 atitinka Direktyva 2014/53/ES.Visas ES
tale	
ithuanian	atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Ar šo DENSO CORPORATION deklarē, ka radio ekārta DNMWR006atbilst Direktīvai 2014/53/ES.Pilns ES atbilstības
atvian.	dekarācijas teksts ir pieejams šādā interneta vietnē:
	https://www.denso.co.jp/en/contactus/form/doc/index.html
	DENSO CORPORATION niniejszym oświadcza, że typ urządzeniaradiowego DNMWR006 jest zgodny z dyrektywą
olish	2014/53/UE.⊇ełny tekst deklaracji zgodności UE jest dostępny pod następującymadresem internetowym:
	https://www.denso.co.jp/en/cortactus/form/doc/index.html
	Hér með lýsi DENSO CORPORATION víri því að DNMWR006er í samæmi við grunnkröfur og aðrar kröfur, sem gerð
celandic	areru í tilskipun 2014/53/EU.Samræmisvfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:

	DENSO CORPORATION erklærer at DNMWR006 er joverensstemmelse med direktiv 2014/53/EU.Samsvarserklæ		
Norwegian	ringen i fulltekst er tilgjengelig på følgendeinternettadresse:		
nior wegran	https://www.denso.co.ip/en/contactus/form/doc/index.html		
	переилизиство со составление и представление и прадиосъоръкение DNMWR006 е в съответствие с		
Bulgarian	Директива2014/53/ЕС.Цялостният текст на ЕС декларацията за съответствиеможе да се намери на следния инт		
Duiganan	ephert addect		
	Print active: Print prezenta, DENSO CORPORATION declará cá tipul de echipamenteradio DNMWR006 este în conformitate cu		
Rumanian	Directiva 2014/53/UE.Textul integral al declaratiei UE de conformitate este disponibil laurmătoarea adresă internet		
	https://www.denso.co.jp/en/contactus/form/doc/index.html		
Maltese	<ul> <li>Drim, DENSO CORPORATION, izjavljuje da ovaj DNMWR006 jeusklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive1999/6/EC.</li> </ul>		
Servian	Ovim, DENSO CORPORATION, deklariše da je DNMWR006 u skladusa osnovnim zahtevima i ostalim relevantnim odredbama Direktive1999/5/EC.		
Groatian	DENSO CORPORATION ovime izjavljuje da je radijska oprematipa DNMWR006 u skladu s Direktivom 2014/53/EU Cjeloviti tekst EU izjave o sukladnosti dostupen je na sijedečojinternetskoj adresi: https://www.denso.co.jpder/cortactus/form/doc/index.html		
Shqipe	Nepermijet kesaj, DENSO CORPORATION, deklaroj qe ky DNMWR006eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatesete Direktives 1999/5/EC.		

This equipment complies with European radio regulation. Doesn't comply with the radio regulation of other countries. UAE

NOTICE This equipment has been registered with the Telecommunications Regulatory Authority for use in the UAE. TRA REGISTERED No : ER0085986/12 DEALER No : 0019826/09 DENSO DNMWR006

Ukraine



UA RF: 3DENS FR06

модель:DNMWR006 смуга радіочастот: 76-77 ГГц максимальна вихідна потужність: 6.31 Вт або менше виробник: DENSO CORPORATION адреса: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan справжнім DENSO CORPORATION заявляє, що тип радіообладнання відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за такою адресою: https://www.denso.com/global/en/contact-us/doc/

Імпортер

виробник: AUTO International

Vietnam





DNMR13

DENSO



เพื่อหลีกเลี่ยงจากการสัมผัสสนามแม่เหล็กไฟฟ้า ควรอยู่ห่างจาก เซ็นเซอร์ตรวจจับ ใน ระยะไม่ด่ำกว่า 20 เชนติเมตร

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามข้อกำหนด ของคณะกรรมการ กิจการกระจายเสียง กิจการโทรทัศน์ และ กิจการโทรคมนาคมแห่งชาติ(กสทช.)

เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้อง ดามมาตรฐาน ความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้ เครื่องวิทยุคมนาคมที่ คณะกรรมการ กิจการกระจายเสียง กิจการ โทรทัศน์ และกิจการโทรคมนาคมแห่งชาติ(กสทช.) กำหนด

\*มีเฉพาะบางรุ่น

經歷式認證合格之低功率創頻電機,非經許可,公司,商號或使用書約不得擅自要更預率,加大功率或要更原設計之特性及功能。 低功率創頻電機之使用不得勞電発能安全及干擾合法通信,經發現有干擾現象時,應立即停用,並改善至無干優時方得編編使用。 前項合法通信,指依電信法规定作業之無線電通信。 低功率創頻電檢測8至会法面目或工業,科學及醫療用電液幅創性電機設備之干擾。

## ▼ Mazda ERA-GLONASS

Нотификация ФСБ№ RU0000023712 от 26.11.2015, действительна до 17.11.2020, зарегистрирована ФСБРФ. Декларация о соответствии средства связи№ Д-МДРТ-12140 от 25.05.2016, действительна до 19.04.2022, зарегистрирована Федеральным агентством связиРФ. Декларация о соответствии техническому регламенту Таможенного союза 020/2011№ ТС№ RU Д-JP.MЛ26.B.00387 от 23.03.2016 действительна по 22.03.2021, зарегистрирована органом по сертификации продукции АНО «СЦСвязьсертификат» (аттестат аккредитации RA.RU.11МЛ26, дата регистрации 10.02.2015).

Декларация о соответствии аккумуляторной батареи FT0098A № РОСС RU Д-JP.АД37.В.01289/18 от 24.10.2018, действительна до 23.10.2023, зарегистрирована органом по сертификации продукции «Красно Дар» ООО «ИД Контроль» (аттестат аккредитации RA.RU.11АД37, дата регистрации 03.11.2016).

# **Electromagnetic Compatibility**


Your Mazda has been tested and certified to the UN-R<sup>\*1</sup> 10 regulation as related to electromagnetic compatibility. Radio Frequency (RF) transmitter equipment (e.g. cellular telephones, amateur radio transmitters, etc.) may only be fitted to your Mazda if they comply with the parameters shown in the table below.

\*1 UN-R stands for United Nations Regulation.

It is your responsibility to ensure that any equipment you have fitted complies with applicable local legislations. Have any equipment fitted by properly trained technicians.



- Do not mount any transceiver, microphones, speakers, or any other item in the deployment path of the air bag system.
- Do not fasten aerial lead to original vehicle wiring, fuel pipes or brake pipes. Avoid running the aerial lead parallel with the wire harness to the best extent possible.
- ➤ Keep the aerial and power leads at least 100 mm (3.9 in) from any electronic modules and the air bags.
- > Avoid using the cigar lighter or accessory socket as a power source for the RF-transmitting equipment.

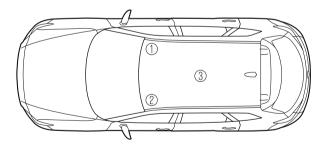

## Aerial positions:

- (1) : front right of roof
- (2) : front left of roof
- ③ : centre of roof

Frequency Band (MHz)	Maximum output power (Wattage)	Aerial Positions
50 — 54	50	123
68 — 87.5	50	123
142 — 176	50	123
380 — 470	50	123
806 — 940	10	123
1200 — 1300	10	123

Frequency Band (MHz)	Maximum output power (Wattage)	Aerial Positions
1710 — 1885	10	123
1885 — 2025	10	123
2400 — 2500	0.01*1	In a cabin <sup>*1</sup>

\*1 Only for Bluetooth®

## NOTE

After the installation of RF transmitters, check for disturbances from and to all electrical equipment in the vehicle, both in the standby and transmit modes. Check all electrical equipment:

 $\cdot$  with the ignition ON

 $\cdot$  with the engine running

• during a road test at various speeds.

# Information for Users on Collection and Disposal of Old Equipment and Used Batteries

When disposing your old battery, please refer to the information as follows.

# ▼ Information on Disposal in the European Union



These crossed-out wheeled bin symbols on the products, packaging, and/or accompanying documents mean that used electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sales where you purchased the items.

NOTE



The bottom two letters might be used in combination with the crossed-out wheeled bin symbol. In this case it complies with the requirement established by the Directive for the chemical involved.

"Pb" and "Cd" mean lead and cadmium respectively.

# ▼ Information on Disposal in Other Countries Outside the European Union

The above symbols are only valid in the European Union. If you wish to discard old products and used batteries, please contact your local authorities, your waste disposal service or the point of sales where you purchased the items, and ask for the correct method of disposal.



Technical information about your Mazda.


Identification Numbers	.9-2
Vehicle Information Labels	. 9-2

Specifications	9-5
Specifications	9-5

### Vehicle Information Labels


#### ▼ Vehicle Identification Number (Arab Gulf Cooperation Council, Iraq, Ghana)

The vehicle identification number legally identifies your vehicle. The number is on a plate attached to the cowl panel located on the left corner of the instrument panel. This plate can easily be seen through the windscreen.

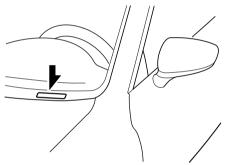


#### ▼ Model Plate

Vehicles assembled in any country other than the Russian Federation

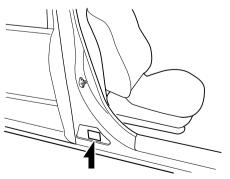


#### Vehicles assembled in Russian Federation

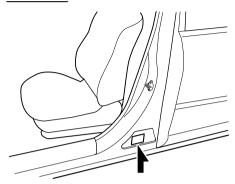

#### ▼ Chassis Number/Vehicle Identification Number


#### **Chassis Number**

Open the cover shown in the figure to check the chassis number.

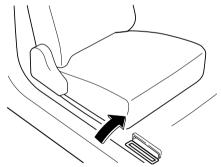


#### Vehicle Identification Number


Vehicles assembled in Russian Federation

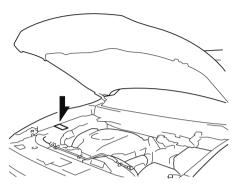


▼ Vehicle Emission Control Information Label (The Philippines)

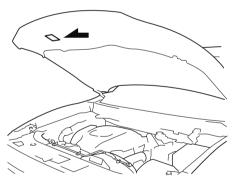


- ▼ Tyre Pressure Label
- Left-hand drive model

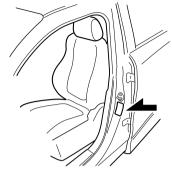

**Right-hand drive model** 

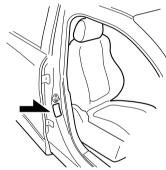


▼ Engine Number

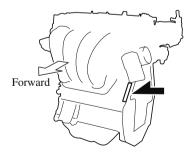

#### ▼ Conformity Plate (Arab Gulf Cooperation Council, Iraq)

Production year and month are shown on this plate.

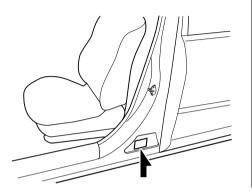

### **Specifications**

#### ▼ Engine

Item	Specification		
Туре	DOHC-16V in-line, 4-cylinder		
Bore × Stroke	89.0 × 100 mm (3.50 × 3.94 in)		
Displacement	2,488 ml (2,488 cc)		
Compression ratio	10.5		

#### Arab Gulf Cooperation Council

Item	Specification
Maximum engine power/revolution	170 kW/5,000 rpm
Maximum engine torque/revolution	420 N·m/2,000 rpm
Maximum speed	210 km/h (130 mph)

#### ▼ Electrical System

Item		Classification	
Dottom*1	With i-stop	Q-85*2	
Battery <sup>*1</sup>	Without i-stop	12V-60Ah/20HR or 12V-65Ah/20HR	
Spark-plug number		Mazda Genuine spark plug <sup>*3</sup>	PY8V-18-110

- \*1 Check the battery installed on the vehicle and use a battery with an equal or higher performance. However, the performance of the battery may vary even among the same battery types, consult an expert repairer (we recommend an Authorised Mazda Repairer) for replacement.
- \*2 Q-85 is designed for i-stop system (FOR STOP & START). Only Q-85 should be used to ensure correct operation of i-stop system (FOR STOP & START). Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.
- \*3 The spark plugs provide the SKYACTIV-G its optimum performance. Consult an expert repairer (we recommend an Authorised Mazda Repairer) for details.

## 

When cleaning the iridium plugs, do not use a wire brush. The fine particulate coating on the iridium alloy and platinum tips could be damaged.

#### ▼ Lubricant Quality

Lubricant	Europe and Taiwan		Except Europe and Tai- wan
	Recommended	Oils*2	Oil Quality
	Mazda Original Oil U	Ultra 5W-30	
Engine oil <sup>*1</sup>	Alternative Oil Quality*3		API SM or higher
	API SN or higher, or	0W-30	0W-30/5W-30/10W-30
	ACEA A5/B5	5W-30	

\*1 Refer to Recommended Oil on page 6-19.

\*2 Mazda Original Oils are specially designed/tested for the respective engine. For optimum performance we recommend to use Mazda Original Oils at all times.

\*3 If you are unable to find a Mazda Original Oil, alternative oils meeting the listed specification may also be used.

Do not use oils which do not meet the above specification or requirements. Use of unsuitable oil may lead to engine damage which is not covered by the Mazda Warranty.

Lubricant	Classification		
Coolant	FL-22 type		
Automatic transaxle fluid*1	Mazda Original Oil ATF-FZ		
Transfer case oil*2	Mazda Long Life Hypoid Gear Oil SG1		
Rear differential oil*2	Mazda Long Life Hypoid Gear Oil SG1		
Brake fluid	SAE J1703 or FMVSS116 DOT-3 or DOT-4		

\*1 Periodic replacement is unnecessary.

\*2 Replacement is necessary when the component is submerged in water.

#### ▼ Cleaner

Cleaner	Classification	
Deposit Cleaner <sup>*1</sup>	Mazda genuine deposit cleaner (K002 W0 001 A)	

\*1 Use Mazda genuine deposit cleaner. Using non-genuine deposit cleaner would cause internal failure of the fuel system. Refer to 3-27, 6-3 for the details.

#### ▼ Capacities

#### (Approximate Quantities)

Item		Capacity	
Engine oil	With oil filter replacement		4.8 L (5.1 US qt, 4.2 Imp qt)
	Without oil filte	r replacement	4.6 L (4.9 US qt, 4.0 Imp qt)
Coolant	Azerbaijan, Kazakhstan, Armenia, Geor- gia, Russia, Belarus, Ukraine, Mongolia, Taiwan		9.9 L (10.5 US qt, 8.7 Imp qt)
	Except above	Left-hand drive model	9.8 L (10.4 US qt, 8.6 Imp qt)
	Except above	Right-hand drive model	9.9 L (10.5 US qt, 8.7 Imp qt)
Automatic transaxle fluid		8.0 L (8.5 US qt, 7.0 Imp qt)	
Transfer case oil		0.45 L (0.48 US qt, 0.40 Imp qt)	
Rear differential oil		0.35 L (0.37 US qt, 0.31 Imp qt)	
Fuel tank	FWD		72.0 L (19.0 US gal, 15.8 Imp gal)
	AWD		74.0 L (19.5 US gal, 16.3 Imp gal)

Check oil and fluid levels with dipsticks or reservoir gauges.

#### ▼ Dimensions

Item	Vehicle specification		
Overall length	5,075 mm (199.8 in)		
Overall width	1,969 mm (77.5 in)		
Overall height	1,747 mm (68.8 in)		
Front tread	1,663 mm (65.5 in)		
Rear tread	1,663 mm (65.5 in)		
Wheelbase	2,930 mm (115.4 in)		

#### ▼ Light Bulbs

#### **Exterior light**

#### With Adaptive LED Headlights (ALH)

Light bulb		Category	
		Wattage	UN-R <sup>*1</sup> (SAE)
Haadlighta	High beam	LED	— (—)
Headlights	Low beam	LED	— (—)
Running lights/Position lights		LED	— (—)
Front direction indicator lights		LED	— (—)

# Specifications Specifications

T inké kulk	Category		
Light bulb	Wattage	UN-R <sup>*1</sup> (SAE)	
Front fog lights	LED	— (—)	
Side direction indicator lights	LED	— (—)	
High-mount brake light	LED	— (—)	
Rear direction indicator lights	21	WY21W (7443NA)	
Brake lights/Tail lights	LED	— (—)	
Brake lights	LED	— (—)	
Tail lights	LED	— (—)	
Reverse lights	16	W16W (921)	
Rear fog light*	21	W21W (7440)	
Number plate lights	LED	— (—)	

\*1 UN-R stands for United Nations Regulation.

#### Without Adaptive LED Headlights (ALH)

Light bulb		Category	
		Wattage	UN-R <sup>*1</sup> (SAE)
Handlights	High beam	LED	— (—)
Headlights	Low beam	LED	— (—)
Running lights		21/5	W21/5W (7444)*2
Position lights		5	W5W (—)
Front direction indicator	lights	21	WY21W (7443NA)
Front fog light*		LED	— (—)
Side direction indicator lights		LED	— (—)
High-mount brake light		LED	— (—)
Rear direction indicator lights		21	WY21W (7443NA)
Brake lights/Tail lights		LED	— (—)
Brake lights		LED	— (—)
Reverse lights		16	W16W (921)
Rear fog light*		21	W21W (7440)
Number plate lights		LED	— (—)

\*1 UN-R stands for United Nations Regulation.

\*2 Double-filament light bulb, however, only 21 W filament bulb is used in the running lights.


#### **Interior light**

Light bulb		Category	
		Wattage	UN-R*1
Overhead lights (Front)/Map lights	Bulb type	8	—
(Front)	LED type	LED	—
Overhead lights (Centre)/Map lights (Centre)	Bulb type	8	—
	LED type	LED	—
Overhead light (Rear)	Bulb type	10	—
Overhead light (Kear)	LED type	LED	—
Vanity mirror lights	Bulb type	2	—
	LED type	LED	—
Ambient lights		LED	—
Luggage compartment light	Bulb type	8	—
Luggage compartment light	LED type	LED	—

\*1 UN-R stands for United Nations Regulation.

#### ▼ Tyres

#### Sample tyre mark and its meaning



#### Tyre mark information

Choose the proper tyres for your vehicle using the following tyre mark information.

Speed symbol	Maximum permissible speed
Q	Up to 160 km/h (99 mph)
R	Up to 170 km/h (105 mph)
S	Up to 180 km/h (111 mph)
Т	Up to 190 km/h (118 mph)
U	Up to 200 km/h (124 mph)
Н	Up to 210 km/h (130 mph)
V	Up to 240 km/h (149 mph)

Speed symbol	Maximum permissible speed
W	Up to 270 km/h (167 mph)
Y	Up to 300 km/h (186 mph)
ZR	Over 240 km/h (149 mph)

#### Tyre and inflation pressure

#### NOTE

The tyres have been optimally matched with the chassis of your vehicle. When replacing tyres, Mazda recommends that you replace tyres of the same type originally

when replacing tyres, Mazaa recommenas that you replace tyres of the same type originally fitted to your vehicle. For details, contact an expert repairer (we recommend an Authorised Mazda Repairer).

Check the tyre pressure label for tyre size and inflation pressure (page 6-35).

#### Standard tyre

#### (Left-hand drive model)

Tyre size	Inflation pressure		
Tyre size	Front	Rear	
P255/60R18 107H	230 kPa (2.3 bar, 33 psi)	230 kPa (2.3 bar, 33 psi)	
P255/50R20 104V	230 kPa (2.3 bar, 33 psi)	230 kPa (2.3 bar, 33 psi)	

#### (Right-hand drive model)

Tyro sizo	Inflation pressure		
Tyre size	Front	Rear	
255/50R20 105V	230 kPa (2.3 bar, 33 psi)	230 kPa (2.3 bar, 33 psi)	

#### **Temporary spare tyre**

Tyre size	Inflation pressure
185/80R17 99M	320 kPa (3.2 bar, 46 psi)

#### Wheel nut tightening torque

When installing a tyre, tighten the wheel nut to the following torque.  $108-147 \text{ N} \cdot \text{m} (12-14 \text{ kgf} \cdot \text{m}, 80-108 \text{ ft} \cdot \text{lbf})$ 

#### ▼ Fuses

Refer to Fuses on page 6-49.

#### **▼** Brakes

If you require information regarding the wear limit specification for the brake disc plates and the measurement method, please contact an expert repairer (we recommend an Authorised Mazda Repairer). The information is made freely available.





# A

Accessory Socket
Active Driving Display4-67
Adaptive LED Headlights (ALH) 4-123
Add-On Non-Genuine Parts and
Accessories
Advanced Key
Advanced keyless entry system3-9
Operational range3-10
Advanced Smart City Brake Support
(Advanced SCBS)
Collision warning 4-191
Stopping the Advanced Smart City
Brake Support (Advanced SCBS)
system operation4-191
Air Bag Systems2-60
Air Bag/Front Seat Belt Pretensioner
System Warning Beep7-57
Air-Conditioning System 5-2
Dual-zone automatic air-
conditioning5-5
Front Air Conditioner5-5
Operating tips 5-2
Rear Air Conditioner5-11
Vent Operation (Front)5-3
Vent Operation (Rear) 5-9
Antilock Brake System (ABS)4-108
Armrest Box5-47
AUTOHOLD4-102
AUTOHOLD Warning Beep7-60
Automatic Transaxle 4-69
Active Adaptive Shift (AAS) 4-72
Automatic transaxle controls4-69
Direct mode4-78
Driving tips4-79
Manual shift mode4-73
Shift-lock system4-70
Transaxle ranges4-71

# B

Battery
Inspecting electrolyte level6-32
Maintenance6-31
Recharging6-32
Replacement
Specifications9-5
Battery Runs Out 7-26
Jump-starting7-26
Blind Spot Monitoring (BSM) 4-125
Cancelling operation of Blind Spot
Monitoring (BSM)4-129
Blind Spot Monitoring (BSM) System
Blind Spot Monitoring (BSM) System Warning Beep7-60
Warning Beep7-60
Warning Beep7-60 Body Lubrication
Warning Beep

### С

Capacities
Carbon Monoxide
Cell Phones
Centre Console5-46
Child Restraint
Categories of child-restraint
systems
Child-restraint precautions
Child-restraint system
installation
Child-restraint system suitability for
various seat positions table
Installing child-restraint
systems2-56
J

Child Safety Locks for Rear Doors 3-16
Collision warning7-62
Coming Home Light
Console Box
Cruise Control4-240
Cruise control switch4-240
Cruise main indication (white)/cruise
set indication (green)4-241
Cup Holder5-44

### D

Defogger	
Mirror	4-94
Rear window	4-93
Deposit Cleaner	3-27
Dimensions	
Direction Indicators	4-88
Display	4-18
Distance Recognition Support Sys	
(DRSS)	
Indication on display	
Door Locks	
Driver Attention Alert (DAA)	4-141
Drive Selection	
Driving In Flooded Area	3-55
Driving Tips	
Automatic transaxle	4-79
Driving in flooded area	3-55
Floor mat	
Hazardous driving	
Rocking the vehicle	
Running-in period	
Saving fuel and protection of t	
environment	
Turbocharged vehicles	
Winter driving	
Dynamic Stability Control (DSC).	
TCS/DSC indicator light	
e	

### E

Electric parking brake (EPB)4-98
Electric Parking Brake (EPB) Warning
Beep7-60
Electronic steering lock warning
beep
Emergency Starting
Push-starting7-29
Starting a flooded engine
Emergency Stop Signal System 4-106
Emergency Towing
Towing description7-32
Towing hooks7-34
Emission Control System3-27
Engine
Bonnet release
Coolant
Engine compartment overview6-18
Exhaust gas3-28
Oil6-19
Starting4-5
Essential Information
Excessive Speed Warning7-61
Exhaust Gas 3-28
Exterior Care
Aluminium wheel maintenance 6-60
Bright-metal maintenance 6-59
Cavity protection
Maintaining the finish
Paint damage touch-up6-59
Plastic part maintenance
Undercoating
e

### F

Flasher	
Hazard warning	4-95
Headlights	
Flat Tyre	7-14
Mounting the spare tyre.	

### Index

Removing a flat tyre	7-19
Floor Mat	. 3-51
Fluid	
Brake	6-23
Washer	6-24
Fluids	
Classification	9-6
Fog Lights	4-86
Front	
Rear	
Foot Brake	4-97
Forward Sensing Camera (FSC)	4-228
Front Seat	2-5
Fuel	
Filler flap and cap	. 3-30
Requirements	
Tank capacity	
Fuses	
Panel description	6-51
Replacement	
-	

# G

Gauges	.4-18
Glove Compartment	. 5-46

# H

Hazardous Driving	3-50
Hazard Warning Flasher	4-95
Headlights	
Coming home light	4-84
Control	
Headlight flashing	
High-low beam	
Leaving home light	
Levelling	
Running lights	4-85
Washer	4-93
Headlight Washer	
Head Restraint	2-27
Hill Launch Assist (HLA)	4-107

orn4-95
---------

### I

If a Warning Light Turns On or
Flashes7-36
If the Active Driving Display Does Not
Operate7-64
Ignition
Switch
Ignition Not Switched Off (STOP)
Warning Beep7-58
Illuminated Entry System 5-35
Immobilizer System
Inspecting Brake Fluid Level6-23
Inspecting Coolant Level
Inspecting Engine Oil Level 6-21
Inspecting Washer Fluid Level 6-24
Instrument Cluster4-18
Instrument Cluster (Type A)4-19
Instrument Cluster (Type B)4-37
Instrument Cluster (Type C)4-54
Instrument Cluster (Type A)4-19
Average Fuel Economy 4-27
Blind Spot Monitoring (BSM)
Display4-28
Cruise Control Set Vehicle Speed
Display4-29
Current Fuel Economy 4-27
Distance Recognition Support System
(DRSS) Display4-29
Distance-to-empty 4-26
Engine Coolant Temperature
Gauge4-23
Fuel Gauge 4-24
Indication/Indicator Lights
Instrument Panel Illumination 4-24
Lane-keep Assist System (LAS) &
Lane Departure Warning System
(LDWS) Display4-28
Maintenance Monitor 4-27

Mazda Radar Cruise Control with
Stop & Go function (MRCC with
Stop & Go function) Display4-28
Mazda Radar Cruise Control
(MRCC) Display 4-29
Multi-information Display (Type
A)
Odometer
Outside Temperature Display 4-25
Speedometer 4-19
Tachometer 4-19
Trip Meter4-23
Vehicle Speed Alarm4-28
Warning Indication/Warning
Lights4-30
Warning (Display Indication) 4-29
Instrument Cluster (Type B) 4-37
Average Fuel Economy 4-44
Blind Spot Monitoring (BSM)
Display4-45
Cruise Control Set Vehicle Speed
Display4-46
Current Fuel Economy 4-44
Distance Recognition Support System
(DRSS) Display4-46
Distance-to-empty 4-43
Engine Coolant Temperature
Gauge4-41
Fuel Gauge 4-41
Indication/Indicator Lights 4-49
Instrument Panel Illumination 4-42
Lane-keep Assist System (LAS) &
Lane Departure Warning System
(LDWS) Display4-45
Maintenance Monitor 4-44
Mazda Radar Cruise Control with
Stop & Go function (MRCC with
Stop & Go function) Display4-45
Mazda Radar Cruise Control
(MRCC) Display 4-45

I	Multi-information Display (Type	
]	В)	4-38
(	Odometer	4-40
(	Outside Temperature Display	4-43
5	Speedometer	4-37
-	Tachometer	4-37
-	Trip Meter	4-40
	Vehicle Speed Alarm	4-44
1	Warning Indication/Warning	
]	Lights	4-47
1	Warning (Display Indication)	4-46
Inst	rument Cluster (Type C)	4-54
	Cruise Control Set Vehicle Speed	
	Display	4-61
	Engine Coolant Temperature	
	Gauge	4-57
	Fuel Gauge	
	Indication/Indicator Lights	
	Instrument Panel Illumination	
I	Multi-information Display (Type	
	С)	4-55
	Odometer	
	Outside Temperature Display	
	Speedometer	
	Tachometer	
	Trip Computer	
	Trip Meter	
	Vehicle Speed Alarm	
	Warning Indication/Warning	
	Lights	4-62
	rior Care	
	Active driving display	
	maintenance	6-63
	Cleaning the window interiors	
	Instrument panel top	
	maintenance	6-63
	Leather upholstery	
	maintenance	6-62
	Panel maintenance	
	Plastic part maintenance	
	Seat belt maintenance	

Upholstery and synthetic leather
maintenance6-62
Vinyl upholstery maintenance 6-62
Interior Lights 5-31
Luggage compartment light5-31
Map lights5-31
Overhead lights5-31
i-ACTIVSENSE
Active safety technology4-120
Adaptive LED Headlights
(ALH) 4-123
Advanced Smart City Brake Support
(Advanced SCBS) 4-189
Blind Spot Monitoring (BSM)
Camera and sensors4-121
Distance Recognition Support System
(DRSS)
Driver Attention Alert (DAA) 4-141
Forward Sensing Camera
(FSC) 4-228
Lane-keep Assist System (LAS) &
Lane Departure Warning System
(LDWS) 4-173
Mazda Radar Cruise Control with
Stop & Go function (MRCC with
Stop & Go function)4-158
Mazda Radar Cruise Control
(MRCC)4-147
Pre-crash safety technology4-121
Radar sensors (rear)4-236
Radar sensor (front)4-233
Rear Cross Traffic Alert
(RCTA) 4-143
Smart Brake Support (SBS) 4-199
Smart City Brake Support [Forward]
(SCBS F) 4-192
Smart City Brake Support [Reverse]
(SCBS R)4-195
Traffic Sign Recognition System
(TSR) 4-131

Ultrasonic sensor (rear)	4-238
360°View Monitor	
i-ACTIV AWD Operation	4-117
i-stop	
Indicator light (Green)	4-16
i-stop OFF switch	4-14
Vehicle roll prevention	
function	4-15
Warning light (Amber)	4-16
i-stop warning beep	

### J

Jack	7-15
Jump-Starting	

### K

### L

Label Information9-	-2
Lane Departure Warning sound 7-6	1
Lane-change Signals 4-8	9
Lane-keep Assist System (LAS) & Lane	;
Departure Warning System	
(LDWS)4-17	3
Leaving Home Light4-8	4
Liftgate3-1	7
When Liftgate Cannot be	
Opened7-6	3

Lighting Control	4-80
Lights-on Reminder	7-57
Light Bulbs	
Replacement	6-39
Specifications	9-7
Lubricant Quality	9-6
Luggage Compartment	5-48
Cargo securing loops	5-48
Cargo sub-compartment	5-48
Luggage Compartment Light	5-31

### M

Maintenance
Information6-2
Scheduled6-3
Map Lights5-31
Mazda Connect 5-14
Appendix 5-25
Mazda Connect Basic
Operations5-17
Mazda ERA-GLONASS7-2
Mazda Radar Cruise Control with Stop &
Go function (MRCC with Stop & Go
function) 4-158
Close proximity warning4-163
Cruise control function4-170
Display indication4-161
Setting the system 4-163
Stop hold control4-169
Mazda Radar Cruise Control with Stop &
Go function (MRCC with Stop & Go
function) System Warnings7-61
Mazda Radar Cruise Control
(MRCC)4-147
Close proximity warning4-150
Cruise control function4-155
Display indication4-148
Setting the system 4-151
Mazda Radar Cruise Control (MRCC)
System Warnings7-61

Message Indicated in Multi-inform	ation
Display	7-55
Message Indicated on Display	7-53
Meters	4-18
Mirrors	
Outside mirrors	3-32
Rearview mirror	3-34
Mirror Defogger	4-94
Multi-information Display (Type	
A)	4-20
Multi-information Display (Type	
B)	4-38
Multi-information Display (Type	
C)	4-55

# 0

Off-Road Traction Assist
Off-Road Traction Assist indicator
light
Off-Road Traction Assist
switch4-114
Outside Mirrors3-32
Outside temperature warning beep7-59
Overhead Console5-46
Overhead Lights5-31
Overheating7-30
Owner Maintenance
Closing the bonnet6-17
Engine compartment overview6-18
Key battery replacement6-33
Opening the bonnet
Owner maintenance
precautions6-14

### P

Parking Sensor System	4-261
Park assist sensor system	
operation	4-265
Sensor detection range	4-263
Power Liftgate	3-19

### Index

Power Liftgate Warning Beep	
Power Steering	4-119
Power Steering Warning Buzzer	7-60
Power Windows	3-36

# R

Radar Sensors (Rear)	4-236
Radar Sensor (Front)	
Rearview Mirror	
Rear Coat Hooks	
Rear Cross Traffic Alert (RCTA)	4-143
Rear Door Child Safety Locks	
Rear Door Sunshade	
Rear Fog Light	
Rear View Monitor	
Displayable range on the	
screen	4-251
Picture quality adjustment	
Rear view monitor operation	4-254
Rear view parking camera	
location	4-250
Switching to the rear view monit	
display	4-250
Variance between actual road	
conditions and displayed	
image	4-258
Viewing the display	
Rear Window Defogger	. 4-93
Rear Window Washer	. 4-92
Rear Window Wiper	. 4-92
Recommended Oil	6-19
Registering Your Vehicle in A Forei	gn
Country	8-2
Replacement	
Fuse	6-49
Key battery	. 6-33
Light bulbs	6-39
Tyres	. 6-37
Wheel	6-38
Wiper	. 6-25

Request Switch Inoperable Warning	
Beep (With the advanced keyless	
function)	7-58
Rocking the Vehicle	3-52
Running-In Period	3-49

### S

Saving Fuel and Protection of the
Environment
Scheduled Maintenance
Seat
Driving position memory 2-10
Seats
Front seat2-5
Head restraint2-27
Seat ventilation2-32
Seat warmer2-30
Second-row Seats (6:4 Split
Adjustable-type Bench Seat
Type)
Second-Row Seat (Captain Seat
Type)2-21
Third-row seat2-25
Seat Belt System2-37
Emergency locking2-36
Pregnant women2-36
Seat belt precautions 2-34
3-point type 2-37
Seat Belt Warning Beep7-57
Second-row Seats (6:4 Split Adjustable-
type Bench Seat Type)2-14
Second-Row Seat (Captain Seat
Туре)2-21
Security System
Immobilizer system
Theft-deterrent system3-44
Shift Control System
Direct mode
Shopping Bag Hook5-49
Smart Brake Support (SBS)4-199

Collision warning 4-200
Stopping the Smart Brake Support
(SBS) system operation4-200
Smart City Brake Support [Forward]
(SCBS F)
Collision warning 4-194
Stopping the Smart City Brake
Support [Forward] (SCBS F) system
operation 4-194
Smart City Brake Support [Reverse]
(SCBS R) 4-195
Stopping the Smart City Brake
Support [Reverse] (SCBS R) system
operation
Spare Tyre7-16
Specifications
SRS Air Bags
How the SRS air bags work 2-66
Limitations to SRS air bag2-71
Monitoring2-73
SRS air bag deployment
criteria2-70
Supplementary restraint system
components2-65
Starting the Engine4-5
Steering Wheel
Heated steering wheel2-33
Horn
Storage Box5-47
Storage Compartments5-46
Armrest box5-47
Centre console5-46
Console box5-46
Glove compartment5-46
Luggage compartment5-48
Overhead console5-46
Rear coat hooks5-49
Shopping bag hook5-49
Storage Box 5-47
Sunroof
Sunshade3-41

Sunshade (Rear door window)	
Sunvisors	5-31

### Т

Theft-Deterrent System	3-44
Third-Row Seat	
Three-flash Turn Signal	
Towing	
Hook	7-34
Towing caravans and trailers	
(Russia)	3-57
Towing Description	
Traction Control System (TCS)	
TCS OFF Indicator Light	
TCS OFF Switch	
TCS/DSC indicator light	
Traffic Sign Recognition System	
(TSR)	.4-131
Trailer Stability Control (TSC)	
Transmitter	
Trouble	
Battery runs out	7-26
Emergency starting	
Emergency towing	
Flat tyre	
Overheating	
Parking in an emergency	
When Liftgate Cannot be	
Opened	7-63
Tyres	6-35
Flat tyre	7-14
Replacing a tyre	6-37
Replacing a wheel	
Snow tyres	
Specifications	
Temporary spare tyre	
Tyre chains	
Tyre inflation pressure	6-35
Tyre rotation	6-36

### Index

Tyre Inflation Pressure Warning
Beep7-60
Tyre Pressure Monitoring System4-245

# U

Ultrasonic Sensor (Rear)	4-238
USB Power Outlet	5-37

### V

Vanity Mirrors	. 5-31
Vehicle Information Labels	
Vehicle Speed Alarm	7-59

### W

Warning Sound is Activated7-57
Air bag/front seat belt pretensioner
system warning beep7-57
AUTOHOLD warning beep 7-60
Blind Spot Monitoring (BSM)
System warning beep7-60
Collision warning7-62
Electric Parking Brake (EPB)
Warning Beep7-60
Electronic steering lock warning
beep7-59
Excessive speed warning7-61
Ignition not switched off (STOP)
warning beep7-58
i-stop warning beep7-59
Key left-in-luggage compartment
warning beep (With the advanced
keyless function)7-58
Key left-in-vehicle warning beep
(With the advanced keyless
function)7-59
Key removed from vehicle warning
beep7-58
Lane Departure Warning sound7-61
Lights-on reminder7-57

Mazda Radar Cruise Control with
Stop & Go function (MRCC with
Stop & Go function) system
warnings7-61
Mazda Radar Cruise Control
(MRCC) system warnings7-61
Outside temperature warning
beep7-59
Power Liftgate Warning Beep 7-59
Power steering warning buzzer7-60
Request switch inoperable warning
beep (With the advanced keyless
function)7-58
Seat belt warning beep7-57
Tyre inflation pressure warning
beep7-60
Vehicle speed alarm7-59
120 km/h warning beep7-59
Warranty
Windows
Power windows 3-36
Windscreen Washer4-92
Windscreen Wipers 4-90
Windscreen Wiper De-icer4-94
Winter Driving 3-52
Wiper
Replacing Rear Window Wiper
Blade6-28
Replacing windscreen wiper
blades6-26
Wireless Charger (Qi) 5-40

# 0-9

120 km/h warning beep	7-59
360°View Monitor	4-201
Front wide view	4-215
How to use the system	4-207
Margin of error between road	surface
on screen and actual road	
surface	4-224

Rear wide view	4-223
Side view	.4-216
Top view/Front view	. 4-212

Top view/Rear view	4-219
Types of images displayed on the	e
screen	4-205